

DEFLECTA-SHIELD BED PROTECTION WRP302-04 / WRP302ST-04 WRP303-04 / WRP303ST-04 WRP307-04 291-04 / 995-04 976-04 / F986-04 BRIGHT & BLACK 2004 - CURRENT FORD F150 (NEW BODY STYLE)

Installation Instructions
Please read completely before starting
installations.

Note: <u>DO NOT REMOVE THE FACTORY</u>

<u>PLASTIC BED PROTECTION. THESE</u>

<u>PRODUCTS MUST MOUNT ON TOP OF THE</u>

<u>FACTORY PLASTIC BED AND TAILGATE CAPS</u>




Lund International
800-241-7219 • Visit us at lundinternational.com
© 2012 Lund International, Inc. All rights reserved.
Lund® and the Lund® logo are trademarks of Lund International, Inc.






BED RAIL INSTALLATION

- Do not remove the factory plastic bed protection. These caps must be installed over the factory caps.
- If stake pockets are going to be used, the factory plastic stake pocket cap must be removed before
- Apply the two-sided foam gasket strips to the areas of the plastic bedrail where there are no ribs. This will take up the empty space under the aluminum bed cap for a more solid fit.
- Position the aluminum bed cap over the factory plastic bed cap. Starting at the rear of the truck and using a 1/8" drill bit, drill a hole through the top of the factory plastic bed caps and the truck bed. (Use the pre-punched holes in the aluminum cap as a guide for drilling.)
- Fasten with (1) #10 x 1" stainless steel screw. (Be careful not to over tighten the screw.)
- Repeat the previous 2 steps in the opposite end first, and then in the center of the truck.
- See illustration 1.

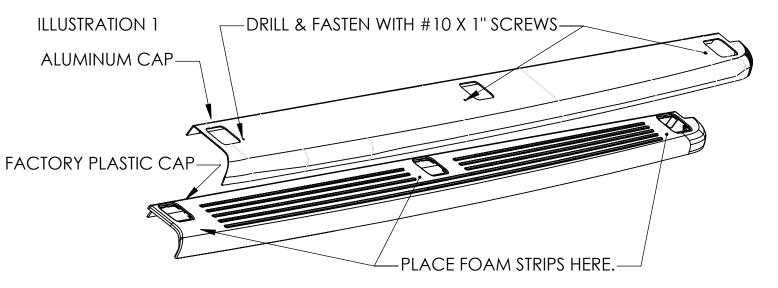

BOM FORD F150 SIDE BED CAPS											
PART#	DESCRIPTION	WRP302-04	WRP302-04B	WRP302ST-04	WRP302ST-04B	WRP303-04	WRP303-04B	WRP303ST-04	WRP303ST-04B	WRP307-04	WRP307-04B
M-0785	8' BED CAP DRIVERS	1	1								
M-0786	8' BED CAP PASSENGERS	1	1								
M-0781	6' BED CAP DRIVERS			1	1						
M-0782	6'BEDCAPPASSENGERS			1	1						
M-0787	8' BED CAP DRIVERS W/SH					1	1				
M-0788	8' BED CAPPASSENGERS W/SH					1	1				
M-0783	6' BED CAP DRIVERS W/SH							1	1		
M-0784	6' BED CAP PASSENGERS W/SH							1	1		
M-0847	5' 6" BED CAP DRIVER									1	1
M-0848	5' 6" BED CAP PASSENGER									1	1
P-0089	BOLT PACK	1		1		1		1		1	
P-0090	BOLT PACK		1		1		1		1		1
TP01	DOUBLE SIDED TAPE	12	12	8	8	12	12	8	8	6	6

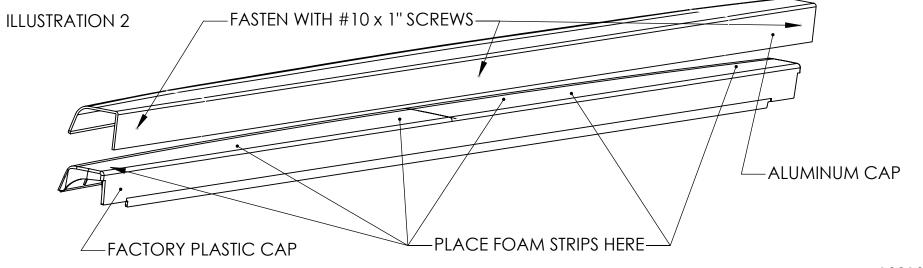


TAILGATE CAP INSTALLATION

- Apply the two-sided foam gasket strips to the plastic tailgate cap. This will shim the aluminum cap up so that it will be flush with the aluminum bed caps (if applicapable.)
- Place the aluminum tailgate cap over the factory plastic tailgate cap. Hold the corner of the aluminum bed cap down so that it is tight against the plastic bed cap and drill (1) 1/8 hole thru the plastic cap and the tailgate. (Use the pre punched holes in the aluminum cap as a guide for drilling.) Then fasten with (1) #10 x 1" stainless steel screw.
- Repeat the previous step on the other end first, then repeat for the center hole.
- See illustration 2.
- (NOTE: Use caution when installing #10 stainless steel screws.)

FULL TAILGATE PROTECTOR INSTALLATION

- The full tailgate protector is a two-piece application. See above part for tailgate cap installation.
- Place the full tailgate plate on the tailgate, and slide it up until it meets the aluminum tailgate cap.
- Drill (8) holes thru the full tailgate plate, and the tailgate with a 1/8" drill bit. (4 holes in the corners and 4 holes equally spaced from the center.) Make sure the holes are drilled into a surface that is flush with the underside of the full tailgate plate.
- Remove the full tailgate plate and redrill the holes in the plate with a 3/16" drill bit. This will provide clearance for the screw.
- Reinstall the plate and fasten with (8) #8 x $\frac{1}{2}$ " stainless steel screws.
- See illustration 3.
- (NOTE: Use caution when installing #8 stainless steel screws.)

BOM FORD F150 TAILGATE CAP AND FULL TAILGATE PROTECTOR								
PART#	DESCRIPTION	291-04	291-04B	995-04	995-04B			
M-0797	TAILGATE CAP	1	1	1	1			
M-0799	FULL TAILGATE PLATE			1	1			
T-BOLT	BOLT PACK			1	1			
P-0089	BOLT PACK	1		1				
P-0090	BOLT PACK		1		1			
TP01	DOUBLE SIDED TAPE	6	6	6	6			

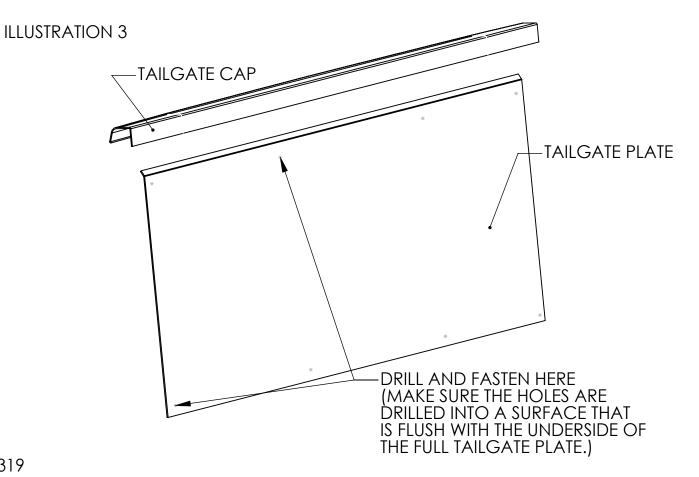

10319

FRONT CAP & FULL FRONT PROTECTOR INSTALLATION

- Place the aluminum front cap over the bed front. Drill (4) 1/8 holes through the front cap and the bed front (1 at each end and (2) equally spaced from the center.)
- Remove the aluminum front cap and enlarge the holes in the aluminum cap to 3/16". This will provide clearance for the screw.
- Fasten the aluminum front cap to the bed #8 x ½" stainless steel screws.
- See illustration 4.
- The installation of the full front protector will be identical to the front cap, except the full front protector will have pre punched holes in the protector that will need to be drilled and fastened thru.
- See illustration 5.
- (Note: Use caution when installing #8 stainless steel screws.)

BOM FORD F150 FRONT CAP AND FULL FRONT PROTECTOR						
PART#	DESCRIPTION	976-04/ 976-04B	F986-04/F986-04B			
M-0801	FRONT CAP	1				
M-0803	FULL FRONT PROTECTOR		1			
T-BOLT	BOLTPACK	1				
F-BOLT	BOLTPACK		1			

