Care and Cleaning

- 1. Wash only with mild soap & dry with a clean cloth.
- 2. Do not use automatic "brush style" car washes.
- 3. Do not use cleaning solvents of any kind.
- 4. Pressure car washes are okay as long as you hold the wand no closer than two feet from the cover.
- 5. We recommend the same quality products normally used for vinyl tops to keep your cover clean. When using a protectant, be sure that it is water based.
- 6. Periodically check clamps for shifting due to road vibrations.
- 7. Do not use any part of this tonneau as a tie down.



8. Do not drive with the cover partially attached. This may cause damage to your truck and your cover.

Congratulations!

You have purchased one of the many quality Lund® branded products offered by Lund International. Inc. We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.



Lund International, Lund Accessories Division 300 Horizon Drive Suwanee, GA 30024 800-328-5863 • Fax 800-782-5448 • Visit us at lundinternational.com



© 2006 Lund International, Inc. All rights reserved. Lund ® and the Lund ® logo are trademarks of Lund International, Inc.



Genesis™ Snap / Seal & Peel Tonneau

For proper installation and best possible fit, please read all instructions BEFORE you begin. For technical assistance or to obtain missing parts, please call Customer Relations at 1-800-328-5863. NOTE: If installing on truck with bedliner, see step 12 before installing.

Contents






Front rail with cover attached

Front rail with cover attached











with Bracket 4X





(J) Cardboard Helper



Corner Pads



Tools Required









Important Safety Information

WARNING

- •Do not drive with the cover partially attached. This may cause damage to your truck and your cover.
- •Do not use any part of this tonneau as a tie down.
- •Periodically check clamps for shifting due to road vibrations.
- •Pressure car washes are okay as long as you hold the wand no closer than two feet from the cover.
- •Do not use cleaning solvents of any kind.
- •Do Not use automatic "brush style" car washes.

Preparation Before Installation

- · Wash the upper rail surfaces of the truck bed.
- Be sure to completely dry the upper surfaces of your truck bed before installing your rails.


PAGE 8 of 8 PAGE 1 of 8 P/N 1703100 Rev.1


Installation Steps

1

2


3



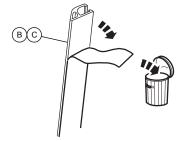

Install corner pads on all four corners.


Remove and discard the protective paper liner from the underside of the tonneau rails.

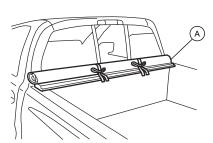



Place the front rail and cover assembly on the top of the truck bed next to the cab.

The cover has tie straps to keep it from being damaged when bulk hauling.

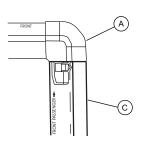



Connect the driver and passenger rails to the front rail. The arrow points to the front of the truck.

Slide the rail over molded leg of the front rail corner. You will hear a click sound when rail is in the correct position.

With tailgate closed, install the rear rail onto the side rails.


PAGE 2 of 8


Installation Steps

P/N 1703100 Rev.1

Seal & Peel Tonneau Only



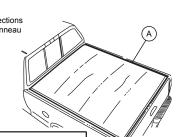



Place tan tip of the cover retainer under the upper lip of the tonneau rail.

Rotate the retainer downward. The tension of the cover will fully engage the cover retainer into the tonneau rail.

NOTE: It is recommended to complete this step on all three sides before proceeding to the next step.

Using palm pressure, glide hand down the length of each tonneau rail to lock the cover retainer into the tonneau rail.


To disengage cover, pull upward and out, starting at a corner end.

13

Inspection After Installation

 After installation is complete, confirm proper operation and that all clamps are tightened.



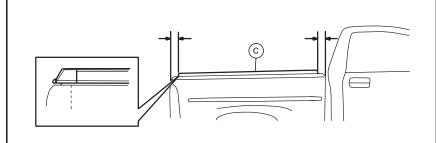


Center the frame on the truck. Next, center the side rail system from side to side.

Disassemble bracket & clamp assembly (Item I).

Installation Steps

4


5




Note: For 99+ GM SPORTSIDE

Place rubber tipped end of bracket (Item I) with nut through slot in cardboard helper (Item J) as shown.

Lower bracket and helper into each of the 4 stake pockets as shown. Position so that 3/8-16x 1 bolt can pass thru clamp bottom. Tighten bolt using 5/16" allen wrench. Tear off helper.





Note: For 99+ GM SPORTSIDE

PAGE 6 of 8

Start at corners and fasten cover to tonneau rails.

Installation Steps

Snap Tonneau Only


Unroll cover.

Snap Tonneau Only

11

12


6



P/N 1703100 Rev.1

Attach upper clamp as shown and tighten using 5/16" allen wrench provided (item K)

Installation Steps

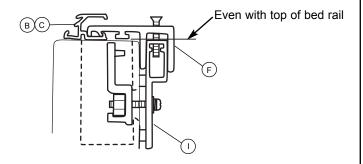


Note: For 99+ GM SPORTSIDE

Bow installation

7

8

Note: some bows attach on hanger marked on side rail with: BOW ^ HANGER

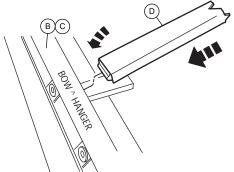

Note: For 99+ GM SPORTSIDE


Installation Steps

P/N 1703100 Rev.1

For ease of installation the side rails have been marked with the clamp locations.

Place a clamp centered at each of the locations marked on the side rails.

Insert the upper clamp all the way into the side rail and tighten with the allen wrench (G) provided.

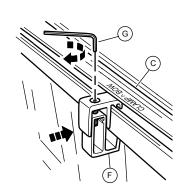


9

The bow rests upon the top of the clamp with each of its legs draped over the

Some truck boxes are not square and require bows of different lengths. On these trucks the bows will be marked as Bow 1, Bow 2, etc.

The location closest to the cab is bow 1.

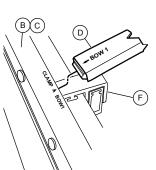

10