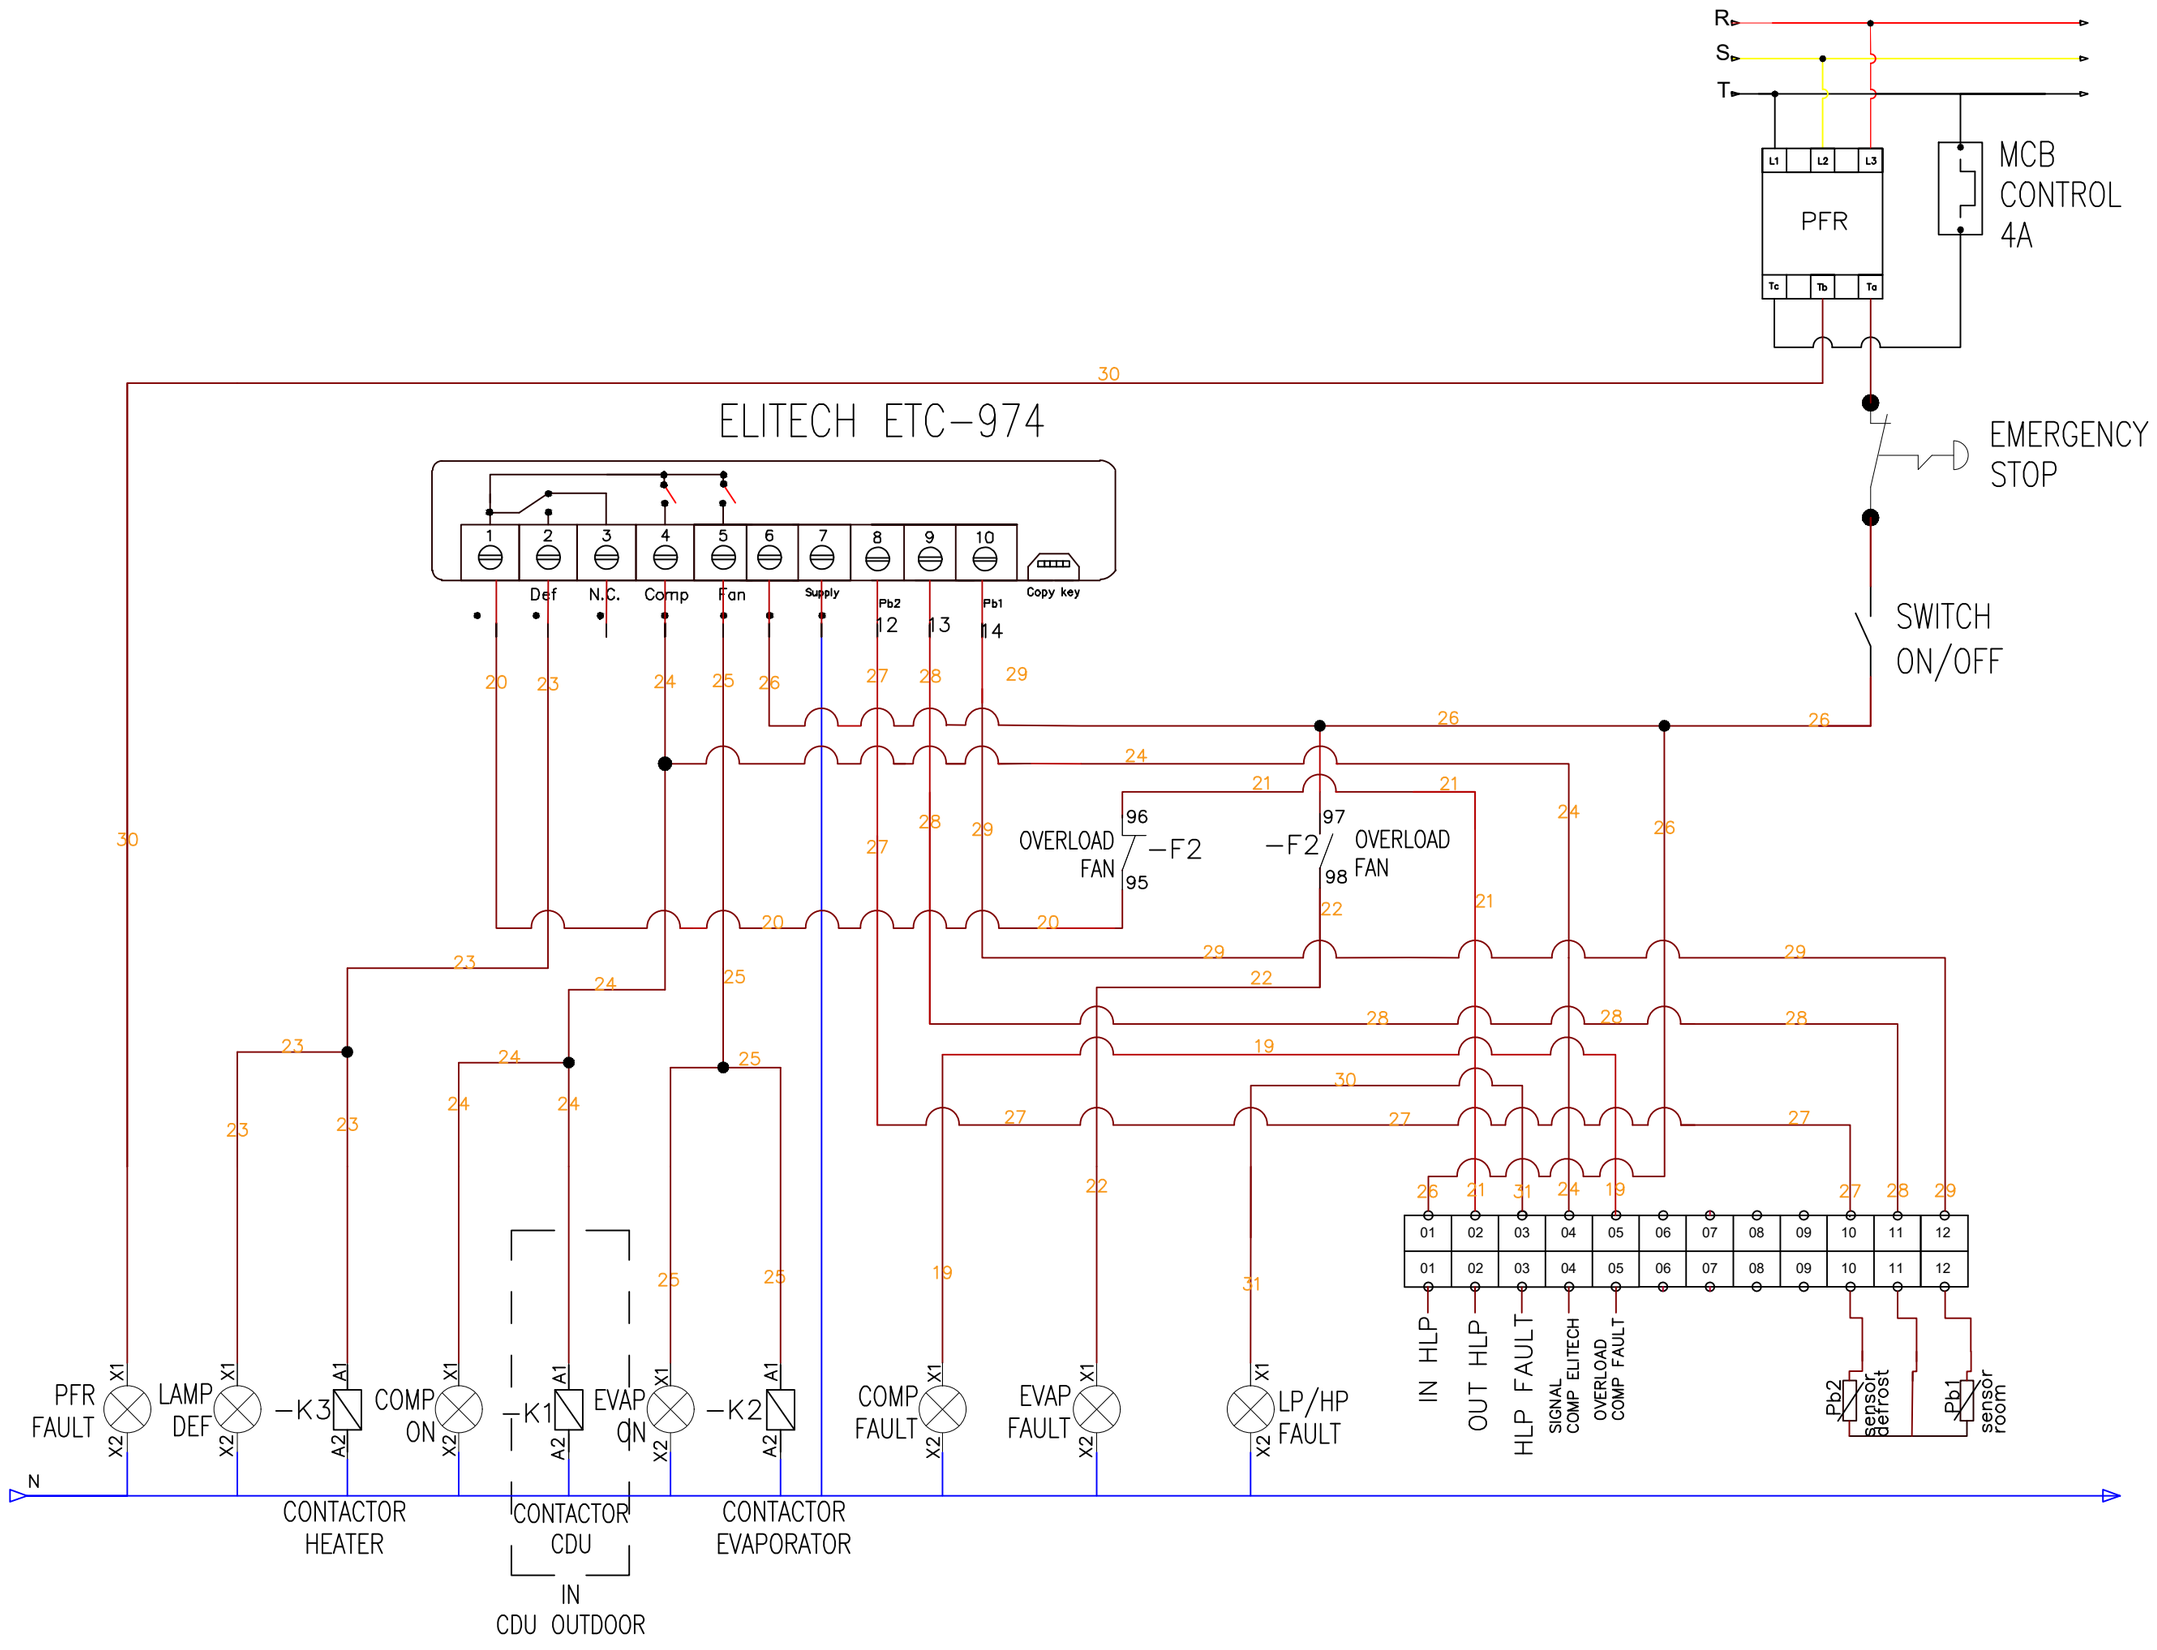

R
S
T
L1
L2
L3
PFR
Tc
Tb
Ta
MCB
CONTROL
4A
30
ELITECH ETC-974
1
2
3
4
5
6
7
8
9
10
Def
N.C.
Comp
Fan
Supply
Pb2
12
13
Pb1
14
Copy key
EMERGENCY
STOP
SWITCH
ON/OFF
20
23
24
25
26
27
28
29
OVERLOAD
FAN
96
95
-F2
97
98
22
21
19
31
PFR
FAULT
LAMP
DEF
-K3
COMP
ON
-K1
EVAP
ON
-K2
COMP
FAULT
EVAP
FAULT
LP/HP
FAULT
X1
X2
A1
A2
N
CONTACTOR
HEATER
CONTACTOR
CDU
IN
CDU OUTDOOR
CONTACTOR
EVAPORATOR
01
02
03
04
05
06
07
08
09
10
11
12
IN HLP
OUT HLP
HLP FAULT
SIGNAL
COMP ELITECH
OVERLOAD
COMP FAULT
Pb2
sensor
defrost
Pb1
sensor
room