Influence Lines

Lab S2 – Cantilever (Gerber) Bridge Model

SEAA 3012 Civil Engineering Laboratory II

Revised edition, 2026

© 2026 Ahmad Razin Zainal Abidin and co-authors, Faculty of Civil Engineering, Universiti Teknologi Malaysia.

Free to share and adapt for non-commercial teaching and learning.

Faculty of Civil Engineering, UTM

Today

1. Why influence lines? What they are, what they are not
2. The laboratory model and why it is determinate
3. Deriving the six influence lines from statics
4. The Müller–Breslau shortcut
5. Using an influence line: one load, a train of loads, a distributed load
6. The experiment: data reduction, errors, what to report



The bridge model in the Structures Laboratory.

© 2026 Ahmad Razin Zainal Abidin and co-authors

Why influence lines?

Loads that move

A floor load stays put. A lorry on a bridge, a crane on its rail, a train on a viaduct do not.

The designer needs to know where the load must stand to produce

- the largest reaction at a pier (bearing design, uplift),
- the largest shear at a section,
- the largest moment at midspan.

A shear-force or bending-moment diagram cannot answer this: it assumes the loads are fixed.

Definition

The **influence line** of a response R at a fixed point is the graph of R against the position x of a **unit** load moving over the structure: ordinate $\eta_R(x)$, units of R per unit load.

© 2026 Ahmad Razin Zainal Abidin and co-authors

Influence line versus bending-moment diagram


	SFD / BMD	Influence line
Fixed	the loads	the point where R is read
Varies along x	the section where V, M are read	the position of the unit load
Ordinate means	V or M at that section	R at the fixed point for a load at x

Because the structure is linear elastic, effects add: once $\eta_R(x)$ is known for a unit load, any load pattern is handled by multiplication and addition.

© 2026 Ahmad Razin Zainal Abidin and co-authors

The laboratory model

A Gerber (cantilever) bridge, 1130 mm long

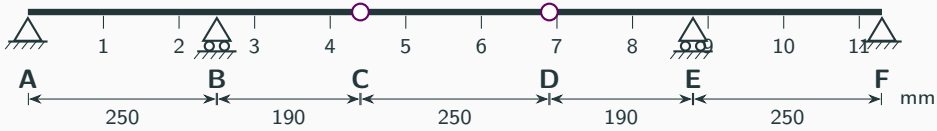

- Beam ABC: pin A, roller B, cantilever BC (190 mm)
- Suspended span CD (250 mm) rests on hinges at C and D
- Beam DEF: mirror image of ABC
- Gauges under A, B, E, F read the support reactions
- Gauges under C, D read the hinge forces (span pressing on the tips)
- Halts 1–11: where the mass is placed

© 2026 Ahmad Razin Zainal Abidin and co-authors

Why it is statically determinate

Unknowns: R_A, R_B, R_E, R_F (no horizontal load, so no horizontal reactions) – four.

Equations:

- $\sum F_y = 0$ and $\sum M = 0$ for the whole model – two
- $M = 0$ at hinge C and at hinge D – two more

Four equations, four unknowns.


Consequences

- Every reaction follows from equilibrium; EI never appears.
- Every influence line is made of straight segments, with kinks only at the hinges.
- Sign convention: reactions positive *up*; R_C, R_D positive when the span presses *down* on the tip.

© 2026 Ahmad Razin Zainal Abidin and co-authors

Deriving the influence lines

One idea, used three times: take moments about a support

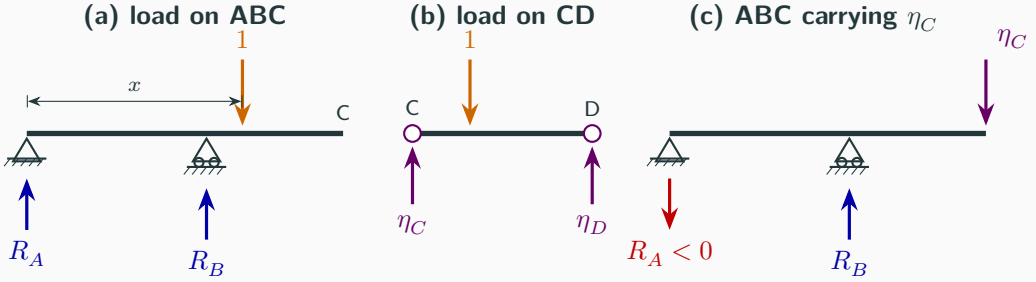

Order matters: the suspended span is analysed first, because it is the only member whose loads reach the others.

© 2026 Ahmad Razin Zainal Abidin and co-authors

Step 1 – load on beam ABC ($0 \le x \le 440$)

Moments about B for beam ABC (hinge C unloaded):

$$R_A \cdot 250 - 1 \cdot (250 - x) = 0 \quad \Longrightarrow \quad \eta_A(x) = \frac{250 - x}{250}, \qquad \eta_B(x) = 1 - \eta_A = \frac{x}{250}.$$

- Nothing stops at B: for $250 < x \le 440$ the lever arm $(250 - x)$ is negative
- So $\eta_A < 0$: support A must *hold the beam down*
- and $\eta_B > 1$: B carries the load *and* the pull-down at A

At the tip C

$\eta_A(440) = -190/250 = \mathbf{-0.76}$
$\eta_B(440) = 440/250 = \mathbf{1.76}$

© 2026 Ahmad Razin Zainal Abidin and co-authors

Steps 2 and 3 – load on the suspended span ($440 \le x \le 690$)

Step 2. CD is a simply supported beam on the hinges (lever rule):

$$\eta_C(x) = \frac{690 - x}{250}, \qquad \eta_D(x) = \frac{x - 440}{250}, \qquad \eta_C + \eta_D = 1.$$

Step 3. Beam ABC now carries only η_C at its tip, i.e. Step 1 with the load standing at $x = 440$:

$$\eta_A(x) = -0.76\,\eta_C(x), \qquad \eta_B(x) = 1.76\,\eta_C(x).$$

- At C both formulae give $\eta_A = -0.76$: the line is continuous
- At D, $\eta_C = 0$, hence $\eta_A = \eta_B = 0$: a load at D is carried entirely by DEF

© 2026 Ahmad Razin Zainal Abidin and co-authors

Step 4 – load on beam DEF, and the checks

DEF is the mirror image of ABC (E $\leftrightarrow$ B, F $\leftrightarrow$ A):

$$\eta_F(x) = \frac{x - 880}{250}, \quad \eta_E(x) = \frac{1130 - x}{250}$$

for $690 \le x \le 1130$; for a load on CD, $\eta_E = 1.76\,\eta_D$ and $\eta_F = -0.76\,\eta_D$.


A load on ABC never reaches DEF (and vice versa): the suspended span is unloaded and transmits nothing.

Three checks

1. $\eta_A + \eta_B + \eta_E + \eta_F = 1$ for every x
2. Continuity at the hinges C and D
3. Slopes: $-1/250$ per mm on ABC, $+0.76/250$ on CD; kinks only at hinges, *never* at B

© 2026 Ahmad Razin Zainal Abidin and co-authors


The influence lines (1): the support reactions R_A and R_B

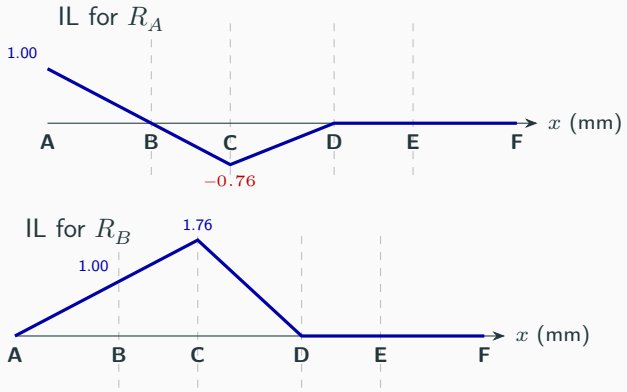

Halt	x	η_A	η_B
A	0	1.00	0.00
1	100	0.60	0.40
2	200	0.20	0.80
B	250	0.00	1.00
3	300	-0.20	1.20
4	400	-0.60	1.60
C	440	-0.76	1.76
5	500	-0.58	1.34
6	600	-0.27	0.63
D	690	0.00	0.00

© 2026 Ahmad Razin Zainal Abidin and co-authors

The influence lines (2): hinge force R_C, and the right-hand side

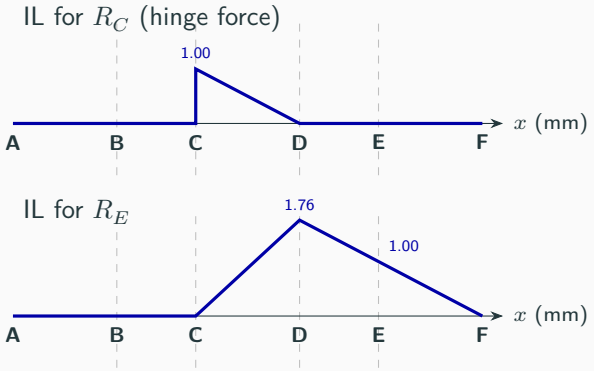

- R_C is non-zero only for a load on the suspended span: a triangle, 1 at C, 0 at D
- R_D is its mirror image (0 at C, 1 at D)
- R_E and R_F are the mirror images of R_B and R_A about $x = 565$ mm
- Reactions at B and E exceed the load (1.76) when it stands on the cantilever tips


© 2026 Ahmad Razin Zainal Abidin and co-authors

The Müller–Breslau principle

The shortcut practising engineers use

Müller–Breslau (1886)

Remove the restraint corresponding to R, impose a unit displacement in the direction of R: the **deflected shape** is the influence line of R.

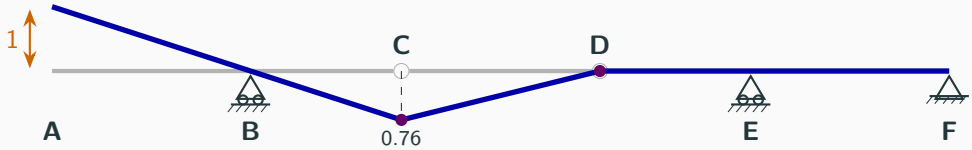

For R_A: release A, lift it by 1. ABC rotates about B as a rigid bar (C drops $190/250 = 0.76$); CD follows C and stays straight; DEF does not move. Same line, same signs, no algebra.

© 2026 Ahmad Razin Zainal Abidin and co-authors

What the principle tells you at a glance

- Kinks only at hinges and at the released support – a kink at B means an error
- Where the structure moves *against* the released reaction, the ordinate is negative: uplift at A for a load between B and D
- Exact ordinates for *determinate* structures (rigid links)
- Only the *shape* for indeterminate ones: the released beam bends, the line is curved

Try it (Exercise 5)

Sketch η_E and η_F by releasing E and F. Which supports can ever see uplift, and for which load positions?

© 2026 Ahmad Razin Zainal Abidin and co-authors

Using an influence line

Three rules

$R = P\,\eta_R(x_1)$ — single load P at x_1

$R = \sum_i P_i\,\eta_R(x_i)$ — series of loads

$R = w \times$ (area under the IL from a to b) — uniform load w on $[a, b]$

Critical position

All our ILs are piecewise linear, so $\sum_i P_i\,\eta_R(x_i)$ is piecewise linear in the position of the group: its extreme occurs with one load on a vertex (A, B, C or D). Only a few positions need to be tried.

Units

With masses in kg the reactions come out in kgf, which is what the gauges read (1 div $= 0.05$ kgf).

© 2026 Ahmad Razin Zainal Abidin and co-authors

Worked example 1 – the compound load of Test 2

$2.5\,\text{kg}$ mass $100\,\text{mm}$ to the right of the $5\,\text{kg}$ mass (in front, moving right):
$R_A(x) = 5\,\eta_A(x) + 2.5\,\eta_A(x+100)$.

- 5 kg mass at A:
  $5(1.0) + 2.5(0.6) = \mathbf{6.5}$ kgf
- 5 kg mass at C:
  $5(-0.76) + 2.5(-0.456) = \mathbf{-4.94}$ kgf
- 2.5 kg mass at C (5 kg at 340):
  $5(-0.36) + 2.5(-0.76) = -3.70$ kgf

The most severe pull-down occurs with the heavier load on the vertex.

5 kg at	x	R_A (kgf)	R_B (kgf)
A	0	6.50	1.00
1	100	3.50	4.00
2	200	0.50	7.00
B	250	−1.00	8.50
3	300	−2.50	10.00
4	400	−4.44	11.34
C	440	−4.94	**11.44**
5	500	−3.57	8.27
6	600	−1.37	3.17

© 2026 Ahmad Razin Zainal Abidin and co-authors

Worked example 2 – a uniformly distributed load

Areas under η_A: $+125$ mm (AB), -72.2 mm (BC), -95.0 mm (CD), 0 (DEF).

For $w = 0.01$ kg/mm:

- over AB only: $R_A = 0.01 \times 125 = 1.25$ kgf (half the load on a simple span)
- over BC and CD: $R_A = 0.01 \times (-167.2) = -1.67$ kgf
- over the whole model: $R_A = 0.01 \times (-42.2) = -0.42$ kgf – the deck *lifts* at A

Check by statics

ABC carries $w(250 + 190)$ directly plus $125w$ at C. Moments about B:
$R_A \cdot 250 = 250w(125) - 190w(95) - 125w(190) = -10\,550w$, so $R_A = -42.2w$.
The IL gave it without a new free-body diagram.

© 2026 Ahmad Razin Zainal Abidin and co-authors

The experiment

What you will do, and what the numbers mean

Test 1: $2.5\,\text{kg}$ mass at each of the 17 halts; read all six gauges.
Test 2: $5\,\text{kg} + 2.5\,\text{kg}$ pair, $100\,\text{mm}$ apart.

Data reduction

$$\eta_{\text{test}} = \frac{\text{reading (div)} \times 0.05}{m}, \qquad m = 2.5\ \text{kg}$$

Test 2: reading $\times\, 0.05$ is the reaction in kgf.

Before leaving the lab

- Equilibrium check at every halt: $(a + b + e + f) \times 0.05 \approx 2.5$ kgf
- Re-zero the gauges between halts
- Centre the mass on the halt mark (± 5 mm matters)

In the report: theoretical and experimental ILs on the same axes, per reaction; absolute differences at every halt.

© 2026 Ahmad Razin Zainal Abidin and co-authors

How good is “good agreement”?

Source	Estimate	on η_A
Mass ± 5 mm off the halt	slope $\times\, 5$ mm	± 0.020
Gauge ± 1 division	$0.05/2.5$	± 0.020
Zero drift	re-zero each halt	± 0.02–0.04
Friction in hinges, gauges	systematic	sum check

Combined: about ± 0.03 per unit load, the same at every halt.

Percentages mislead

± 0.03 is 3 % of the ordinate at A (1.0) but 15 % at halt 2 (0.2), and undefined where the ordinate is zero.

Compare by **absolute difference**; quote percentages only at A, 1, 4, C, 5.

© 2026 Ahmad Razin Zainal Abidin and co-authors

Activity and summary

Activity: Influence Line Explorer

Scan the code. *Before each task*, write your prediction, then check it.

1. Explorer, Part 1: the five tasks (read the reactions, open an explanation, set your own loads, find the critical position, use the areas).
2. Explorer, Part 2: the five concept questions.
3. After the laboratory: Exercises, worked by **hand calculation**; the Explorer only confirms.
4. In the lab: type your gauge readings into the Lab tab and compare with theory before writing the report.



Influence Line Explorer

© 2026 Ahmad Razin Zainal Abidin and co-authors

Summary

Model: six straight-line influence lines

$\eta_A = (250 - x)/250$ on ABC, $-0.76\,\eta_C$ on CD, 0 on DEF

$\eta_B = x/250$ on ABC, $1.76\,\eta_C$ on CD

$\eta_C = (690 - x)/250$,

$\eta_D = (x - 440)/250$ on CD

η_E, η_F: mirror images of η_B, η_A

Check: $\eta_A + \eta_B + \eta_E + \eta_F = 1$

Use

$R = \sum P_i\,\eta_R(x_i)$; UDL: $R = w \times$ area.

Extreme of a load train: one load on a vertex.

Müller–Breslau: release, displace by 1, read the shape.

Report

$\eta_{\text{test}} =$ reading $\times\, 0.05/m$; equilibrium check; absolute differences; percentages only at large ordinates.

Reading: Hibbeler, *Structural Analysis*, 10th ed., ch. 6; Kassimali, *Structural Analysis*, 6th ed., ch. 8; Laboratory Manual, experiment S2.

© 2026 Ahmad Razin Zainal Abidin and co-authors