Screen Max7219

By Ready Freddy
30/09/2025

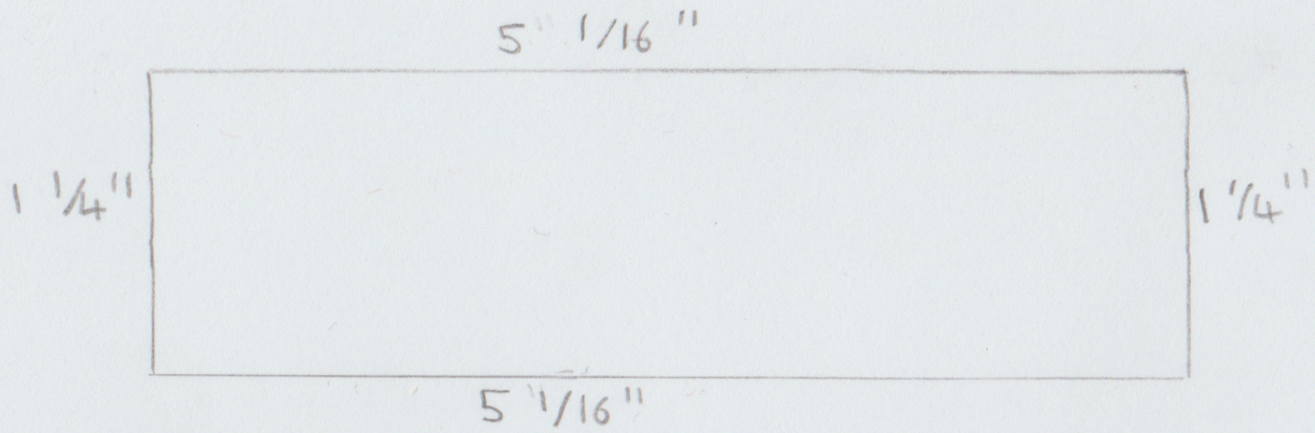

* leave at least 1/2" on the side for the wires.
* use Hot Glue to secure in place

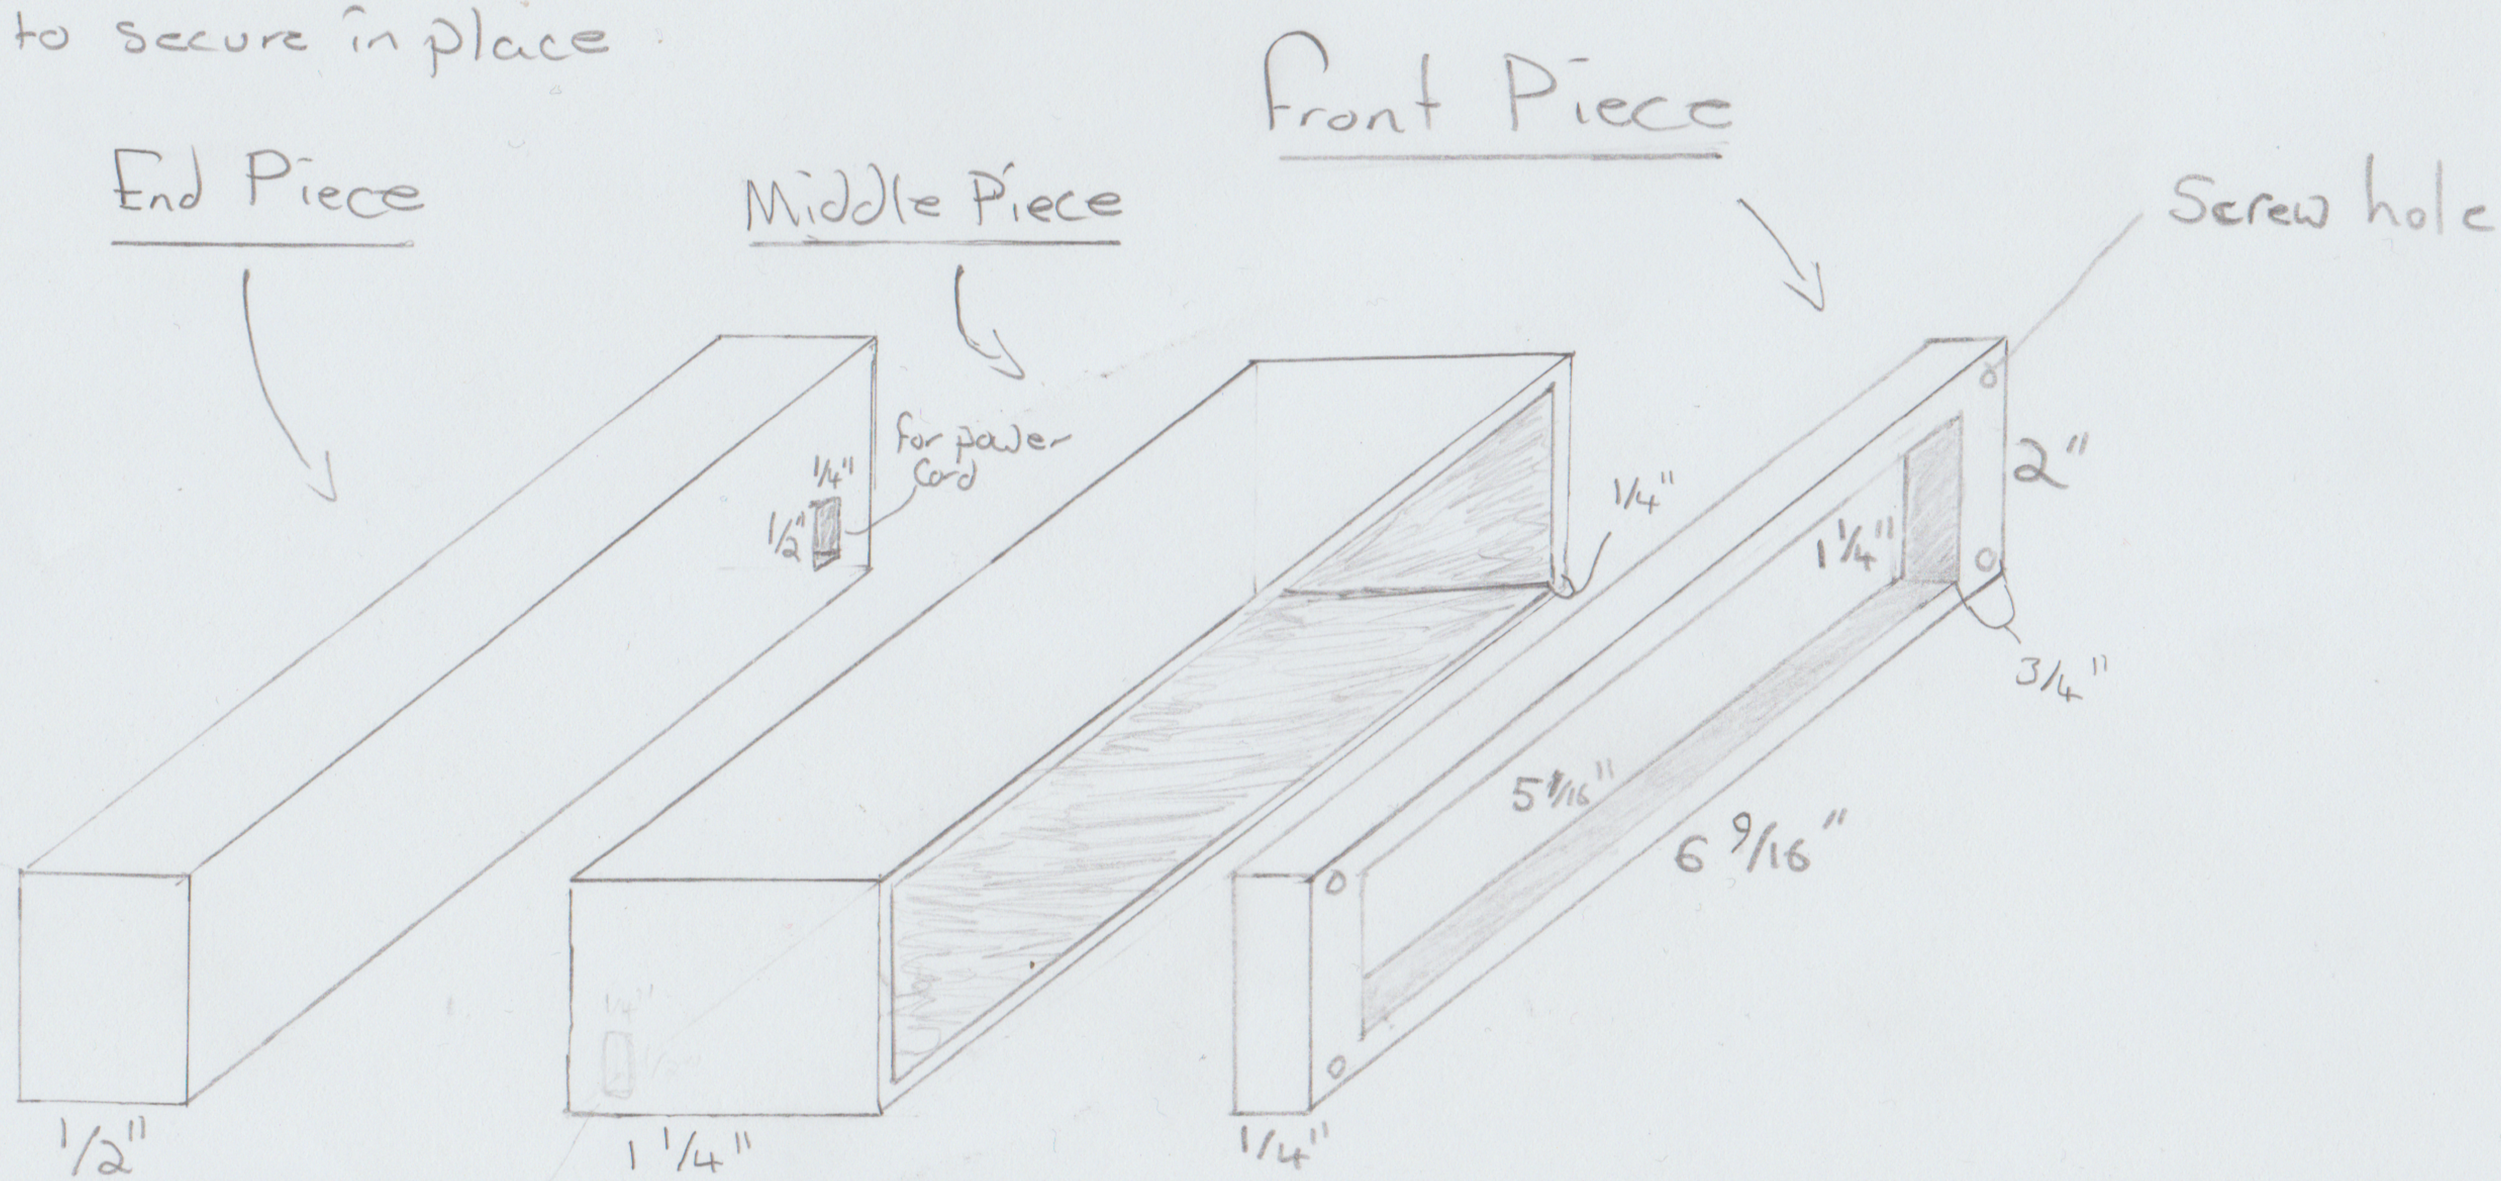

* Screen will slot into open slot
* Black Acrylic will screw onto front piece