

NOTES:
1. Depanelize using Hakko DP-25-N
2. program CBUS2 and CBUS3 to CBitBangI/O with FT_PROG or ftdi_eeprom before fitting R1/R2, and leave "pull down I/O pins in USB suspend" off.

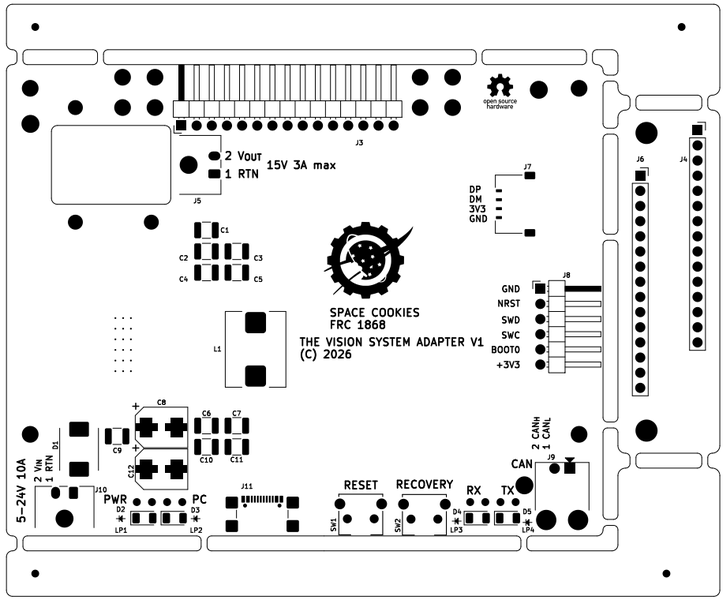

FRONT

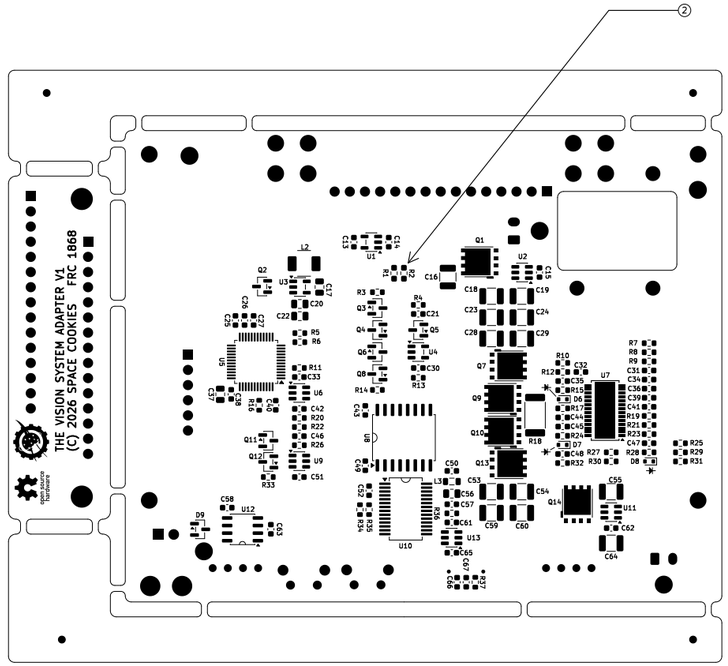

BACK

LEGAL NOTICE
Copyright (C) 2026 SPACE COOKIES FRC TEAM 1868
Licensed under the Solderpad Hardware License v2.1 (the "License"):
you may not use this work except in compliance with the License.
You may obtain a copy of the License at:
https://solderpad.org/licenses/SHL-2.1/
SPDX-License-Identifier: Apache-2.0 WITH SHL-2.1

1868 SPACE COOKIES

Sheet:
File: TVS-Adapter-v1.kicad_pcb

Title: THE VISION SYSTEM ADAPTER

Size: B	Date: 2026-11-01	**Rev: 1**
KiCad E.D.A. 10.0.8		Id: 1/1