


LAN 口测试指南

文档版本：V1.0

更新时间：2026 年 2 月 2 日

详细步骤

1. 使用适配器给开发板上电。使用网线接入 LAN 口，另一侧接入电脑端，这里以 LAN1 为例。
2. 在终端输入以下指令，查询 ip 地址：

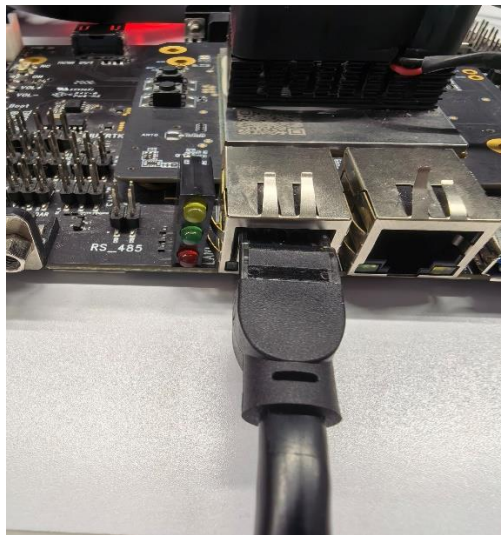

```
adb root
```

```
adb shell
```

```
ifconfig
```

结果如下图所示，eht1 出现 ip 地址，测试成功

```
TX errors 0 dropped 0 overruns 0 carrier 0 collisions 0

eth0: flags=4099<UP,BROADCAST,MULTICAST> mtu 1500
    ether ec:21:e5:33:22:06 txqueuelen 1000 (以太网)
    RX packets 0 bytes 0 (0.0 B)
    RX errors 0 dropped 0 overruns 0 frame 0
    TX packets 0 bytes 0 (0.0 B)
    TX errors 0 dropped 0 overruns 0 carrier 0 collisions 0
    device interrupt 129

eth1: flags=4163<UP,BROADCAST,RUNNING,MULTICAST> mtu 1500
    inet 169.254.187.196 netmask 255.255.0.0 broadcast 169.254.255.255
    inet6 fe80::f26d:5dbd:ed17:4eef prefixlen 64 scopeid 0x20<link>
    ether ec:21:e5:06:78:77 txqueuelen 1000 (以太网)
    RX packets 40 bytes 4780 (4.7 KB)
    RX errors 0 dropped 0 overruns 0 frame 0
    TX packets 23 bytes 3516 (3.5 KB)
    TX errors 0 dropped 0 overruns 0 carrier 0 collisions 0
    device interrupt 131

lo: flags=73<UP,LOOPBACK,RUNNING> mtu 65536
    inet 127.0.0.1 netmask 255.0.0.0
    inet6 ::1 prefixlen 128 scopeid 0x10<host>
    loop txqueuelen 1000 (本地环回)
    RX packets 536 bytes 39734 (39.7 KB)
    RX errors 0 dropped 0 overruns 0 frame 0
    TX packets 536 bytes 39734 (39.7 KB)
    TX errors 0 dropped 0 overruns 0 carrier 0 collisions 0

wlan0: flags=4099<UP,BROADCAST,MULTICAST> mtu 1500
    ether 00:df:41:eb:ca:a6 txqueuelen 3000 (以太网)
    RX packets 0 bytes 0 (0.0 B)
    RX errors 0 dropped 0 overruns 0 frame 0
    TX packets 0 bytes 0 (0.0 B)
    TX errors 0 dropped 0 overruns 0 carrier 0 collisions 0

sh-5.0#
```

测试成功