



PRINT PARTS



PRINT BODY FACE DOWN
PRINT REAR SIGHT FLAT SIDE DOWN
PRINT WINDAGE NUT SCREW DRIVE UP
NO SUPPORTS NEEDED

INSTALL WINDAGE SIGHT

1 INSTALL REAR SIGHT FROM THE TOP
THREAD M3 X 20 SCREW THROUGH REAR SIGHT
TIGHTEN WINDAGE NUT ONTO SCREW
THE SCREW SHOULD SPIN FREELY IN THE BODY
THE REAR SIGHT SHOULD MOVE LEFT AND RIGHT

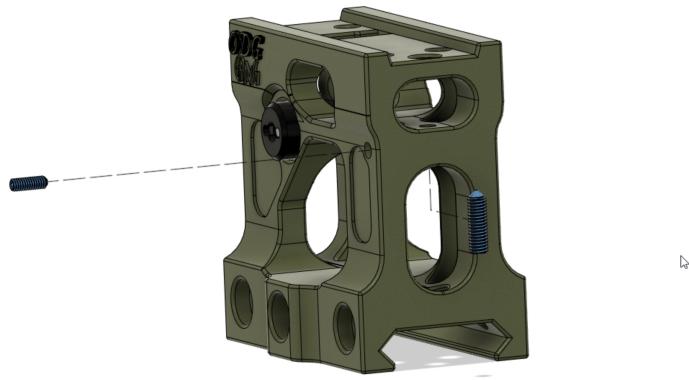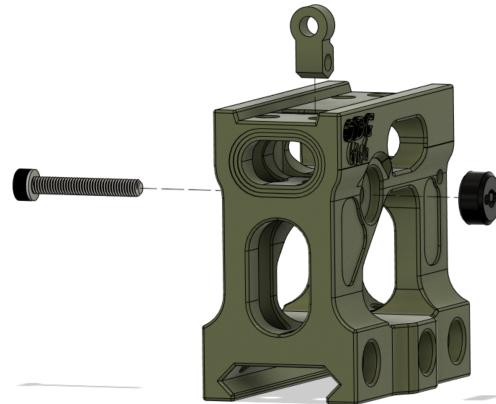

INSTALL FRONT SIGHT

1 INSTALL FRONT GRUB SCREW FROM BELOW
THE TIP SHOULD BE POINTING UPWARDS
LOCK IN PLACE WITH M3 GRUB SCREW

INSTALL OPTIC

USING 4 M3 X 6 FLAT HEAD SCREWS
SECURE OPTIC TO BODY

DRIP LYFT

BROUGHT TO YOU BY AWCY?
DEVELOPED BY EWW AND TDKIN3D

