

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scripter Modules, refer to the "[Guide to Using Scripter Modules](#)" document.

Device Specifications

Device Type: Switcher
Manufacturer: Extron
Firmware Version: 2.04
Model(s): DTP T USW 233, DTP T USW 333

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scripter Version
2.06.0000-b010	1.4.1

Version History

Module Version	Date	Notes
1_0_5_0	9/25/2017	Added Auto Switch Mode.
1_0_4_0	3/16/2016	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='DTP T USW 233')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='DTP T USW 233')</code>

Set Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command	Value	Value	
AudioMute	'On'	'Off'	
# AudioMute example InterfaceName.Set('AudioMute', 'On')			
Command	Value	Value	Value
AutoSwitchMode	'Off'	'Highest Active Input'	'Lowest Active Input'
# AutoSwitchMode example InterfaceName.Set('AutoSwitchMode', 'Off')			
Command	Value	Value	
ExecutiveMode	'On'	'Off'	
# ExecutiveMode example InterfaceName.Set('ExecutiveMode', 'On')			
Command	Value	Value	
HDCP	'On'	'Off'	
Qualifier Key	Qualifier Value		
'Input'	'2' – '3'		
# HDCP example InterfaceName.Set('HDCP', 'On', {'Input': '2'})			
Command	Value	Value	
HDMIOutputAudioMute	'Disable'	'Enable'	
# HDMIOutputAudioMute example InterfaceName.Set('HDMIOutputAudioMute', 'Disable')			
Command	Value		
Input ¹	'0' – '3'		
# Input example InterfaceName.Set('Input', '0')			
Command	Value	Value	
VideoMute	'On'	'Off'	
# VideoMute example InterfaceName.Set('VideoMute', 'On')			

¹ Input 0: No input for switching command, it will deselect all inputs.

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command	Value	Value	
AudioMute	'On'	'Off'	
# AudioMute examples InterfaceName.Update('AudioMute') Value = InterfaceName.ReadStatus('AudioMute') InterfaceName.SubscribeStatus('AudioMute', None, FeedbackHandler)			
Command	Value	Value	Value
AutoSwitchMode	'Off'	'Highest Active Input'	'Lowest Active Input'
# AutoSwitchMode examples InterfaceName.Update('AutoSwitchMode') Value = InterfaceName.ReadStatus('AutoSwitchMode') InterfaceName.SubscribeStatus('AutoSwitchMode', None, FeedbackHandler)			
Command	Value	Value	
ConnectionStatus	'Connected'	'Disconnected'	
# ConnectionStatus examples Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command	Value	Value	
ExecutiveMode	'On'	'Off'	
# ExecutiveMode examples InterfaceName.Update('ExecutiveMode') Value = InterfaceName.ReadStatus('ExecutiveMode') InterfaceName.SubscribeStatus('ExecutiveMode', None, FeedbackHandler)			
Command	Value	Value	
HDCP	'On'	'Off'	
Qualifier Key	Qualifier Value		
'Input'	'2' – '3'		
# HDCP examples InterfaceName.Update('HDCP', {'Input': '2'})			

Global Scripter Module Communication Sheet

<pre>Value = InterfaceName.ReadStatus('HDCP', {'Input': '2'}) InterfaceName.SubscribeStatus('HDCP', None, FeedbackHandler)</pre>		
Command HDMIOutputAudioMute	Value 'Disable'	Value 'Enable'
<pre># HDMIOutputAudioMute examples InterfaceName.Update('HDMIOutputAudioMute') Value = InterfaceName.ReadStatus('HDMIOutputAudioMute') InterfaceName.SubscribeStatus('HDMIOutputAudioMute', None, FeedbackHandler)</pre>		
Command Input	Value '0' – '3'	
<pre># Input examples InterfaceName.Update('Input') Value = InterfaceName.ReadStatus('Input') InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)</pre>		
Command SignalStatus	Value 'No Signal Present'	Value 'Signal Present'
Qualifier Key 'Input'	Qualifier Value '1' – '3'	
<pre># SignalStatus examples InterfaceName.Update('SignalStatus', None) Value = InterfaceName.ReadStatus('SignalStatus', {'Input': '1'}) InterfaceName.SubscribeStatus('SignalStatus', None, FeedbackHandler)</pre>		
Command VideoMute	Value 'On'	Value 'Off'
<pre># VideoMute examples InterfaceName.Update('VideoMute') Value = InterfaceName.ReadStatus('VideoMute') InterfaceName.SubscribeStatus('VideoMute', None, FeedbackHandler)</pre>		

Cable and Adapter Requirements

Captive Screw to Captive Screw RS-232 Serial Cable

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 9600


Data Bits: 8

Parity: None

Stop Bits: One

Flow Control: None

Pin Assignments Diagram

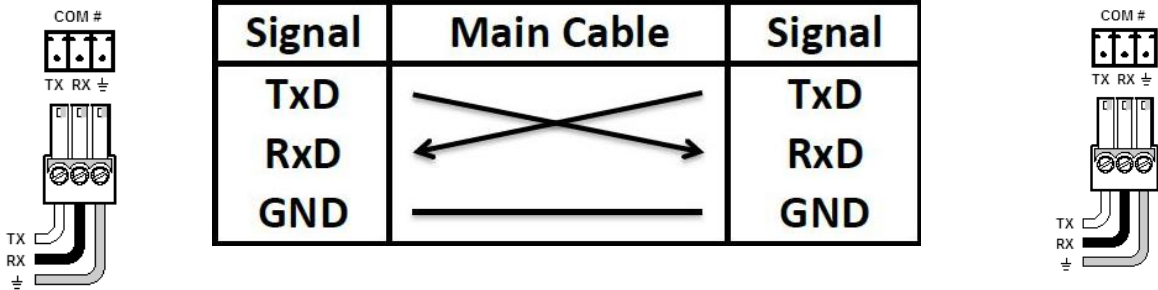

Appendix A. Set Commands

Audio Mute Off	0Z
Audio Mute On	1Z
Auto Switch Mode Highest Active Input	W1AUSW\x0D
Auto Switch Mode Lowest Active Input	W2AUSW\x0D
Auto Switch Mode Off	W0AUSW\x0D
Executive Mode Off	0X
Executive Mode On	1X
HDCP Off Input 2	\x1BE2*0HDCP\x0D
HDCP Off Input 3	\x1BE3*0HDCP\x0D
HDCP On Input 2	\x1BE2*1HDCP\x0D
HDCP On Input 3	\x1BE3*1HDCP\x0D
HDMI Output Audio Mute Disable	\x1B0AFMT\x0D
HDMI Output Audio Mute Enable	\x1B1AFMT\x0D
Input 0	0!
Input 3	3!
Video Mute Off	0B
Video Mute On	1B

Appendix B. Query Commands

Audio Mute	Z
Auto Switch Mode	WAUSW\x0D
Executive Mode	X
HDCP Input 2	\x1BEHDCP\x0D
HDCP Input 3	\x1BEHDCP\x0D
HDMI Output Audio Mute	\x1BAFMT\x0D
Input	!
Signal Status Input 1	\x1B0LS\x0D
Signal Status Input 3	\x1B0LS\x0D
Video Mute	B