

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Streaming Media
Manufacturer: Extron
Firmware Version: 2.16.0001
Model(s): SMP 351, SMP 351 3G-SDI, SMP 352, SMP 352 3G-SDI

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.16.0000-b013	2.18.0

Version History

Module Version	Date	Notes
1_19_15_0	12/16/2020	Fixed Layout Preset Status and added Active Layout Preset Confidence Dual status. Added command Dual Channel HDMI Output. Fixed Alarm and Alarm Severity statuses. Added 'Publish Failure' state to Alarm and Alarm Severity commands.
1_19_9_0	12/16/2020	Added 'Streaming Presets Name' status. Fixed Primary RTMP Status and Backup RTMP Status. Updated the Value name for Metadata. Updated communication sheet regarding Ethernet driver configuration. Fixed RSTP Stream URL status. Added Background Image Control and Background Image String commands. Changed Ethernet protocol to SSH.
1_19_1_0	9/11/2019	Updated Metadata status command. Added Stream parameter for the following commands: Record Resolution, Recording Video Frame Rate, and RTSP Stream URL. Updated Alarm and Alarm severity commands to use alarm names as the parameter. Added Clear Active Alarms command. Removed unsupported Audio Output Gain command. Fixed Remaining Recording Time status when using secondary

Global Scripter Module Communication Sheet

		recording.
1_17_0_0	3/12/2019	Fixed status commands RTMPBackupURLStatus and RTMPPrimaryURLStatus. Removed the following unsupported commands: DelayedRecordingDuration, HorizontalVideoMirroring, and RecordingCountdown. Added DelayedRecordingDuration, HorizontalVideoMirroring, RecordingStartCountdown, RemainingRear RCPUSBStorage, SMPRecordingFolderShare, USBStatus, and RecallRecordingProfile commands.
1_16_3_0	2/5/2019	- Removed unsupported preset numbers, - Added Audio Only Recording, - Updated maximum Active Layout preset numbers supported to 16. - Updated GOP length command to allow the type of stream to be selected. - Updated HDCP Input status value names. - Updated Metadata "Type" value Created to Presenter. - Updated Metadata Status "Type" value Created to Presenter. - Fixed RCP 101 Executive mode command syntax. - Added Remaining Front USB Storage functionality. Added Remaining Internal USB Storage functionality.
1_15_0_0	10/3/2018	Fixed AudioOutputGain status. Renamed AudioInputGain command parameter 'Audio Channel' to 'Analog Channel'. Renamed AudioMuteInput command parameter 'Audio' to 'Analog'.
1_14_0_0	8/7/2018	Removed Date and Identifier states from Metadata command (supports status only) and removed Location state from Metadata Status command (not supported per API). Added RTSP Stream URL status. Removed extra space after SMP 352 model names. Added commands based on the new firmware: Eject USB Storage, Backup RTMP Status, HDMI Audio Mute, HDMI Video Mute, Layout Preset Status, Primary RTMP Status, RCP 101 Executive Mode, Recall Layout Confidence Dual. Removed EDID command. Fixed Metadata Status.
1_8_4_0	10/9/2017	Updated module to Rev. B.
1_8_0_1	3/21/2017	Fixed Metadata Status.
1_8_0_0	2/27/2017	Added Unit qualifier to Remaining Free Disk Space. Added Active Layout Preset status.
1_7_3_0	1/26/2017	Fixed response feedback for File Destination when USB drive is not inserted. Fixed response feedback for Metadata Status. Fixed Record Destination.
1_7_0_0	10/31/2016	Added SMP 352 models. Removed parameter for Audio Bitrate. Renamed Input parameter for Video Bitrate, Bitrate Control, and Stream Control to Stream. Renamed Type parameter for Recall Encoder Preset to Stream. Added Record Dual Control, Encoder and Record Destination command. Fixed InputA and InputB Update command. Fixed Alarm status.

Global Scripter Module Communication Sheet

1_4_0_0	9/19/2016	Removed Audio Gain and added Audio Input Gain and Audio Output Gain. Added String qualifier to Metadata. Fixed HDCP Status.
1_3_0_0	3/24/2016	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- If login credentials are required, devicePassword and deviceUsername must be set accordingly.
deviceUsername default value is admin respectively.
Example: `InterfaceName.deviceUsername = 'extron'`
- The parameter Archive B on Stream Control command is only available for “Dual” Encoder Mode.
- Record Destination for the Internal + USB Front and Internal + USB Rear, are only available if the SMP is in “Dual” Record Composite Mode.
- Layout Presets are only available in “Composite” Encoder Mode.
- These commands will only work with SMP 351 models with a LinkLicense upgrade and SMP 352 models.
 - Archive B (Stream Control command)
 - Encoder Mode: Composite/Dual
 - Record Dual Channel Mode

Supported Classes and Examples

SerialClass

```
InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='SMP 351')
```

SerialOverEthernetClass

```
InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='SMP 351')
```

SSHClass

#Password Required


```
InterfaceName = ModuleName.SSHClass('192.168.254.254', 22023, Credentials=('admin', 'extron'),  
Model='SMP 351')
```

#No Password Required



```
InterfaceName = ModuleName.SSHClass('192.168.254.254', 22023, Credentials=('admin', ''),  
Model='SMP 351')
```

Audio Input Gain

- Audio Input gain levels can be found under Input /Output Settings under the Configuration tab.

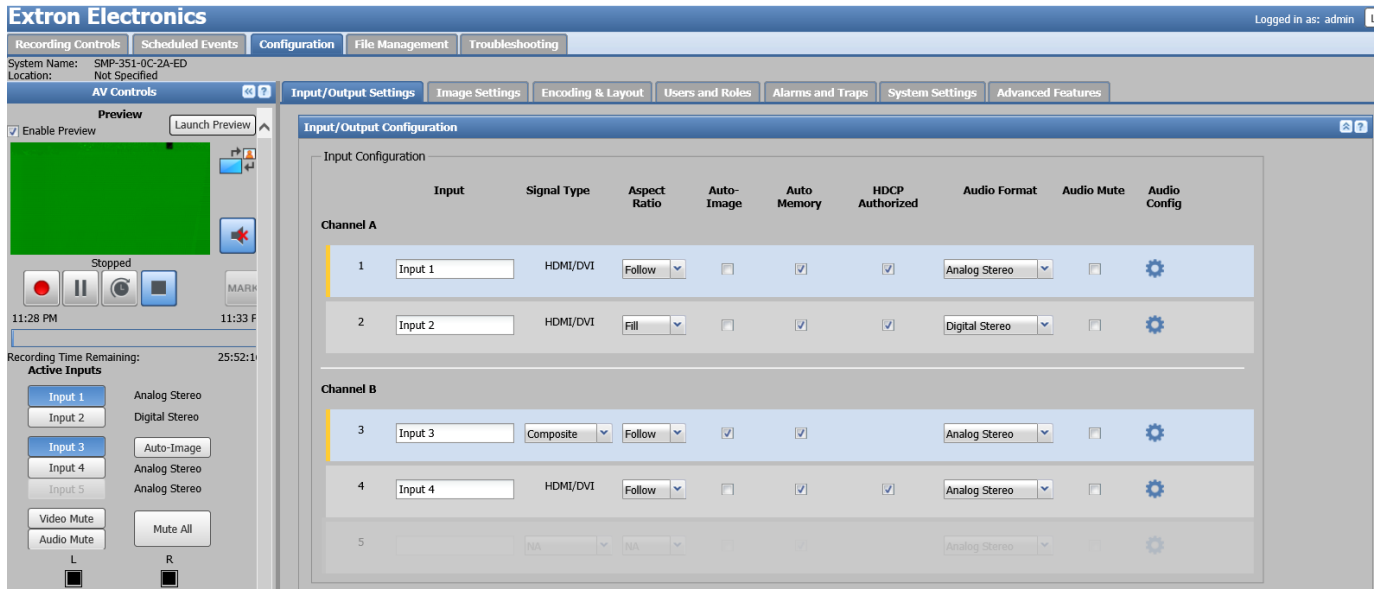

- You can choose Analog and Digital (Left and Right) for Channels A and B by clicking the  icon under the Audio Config title.

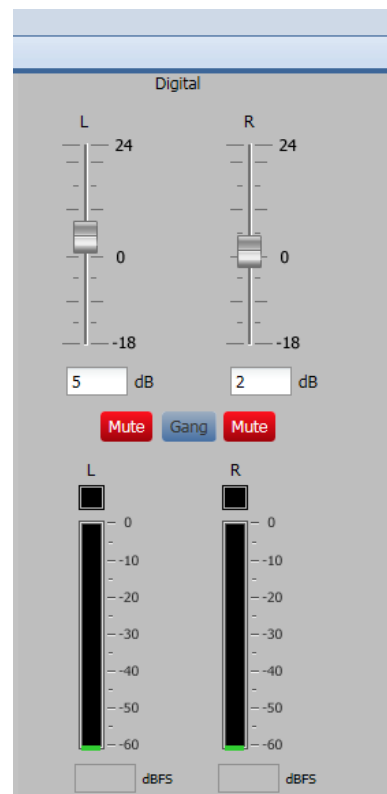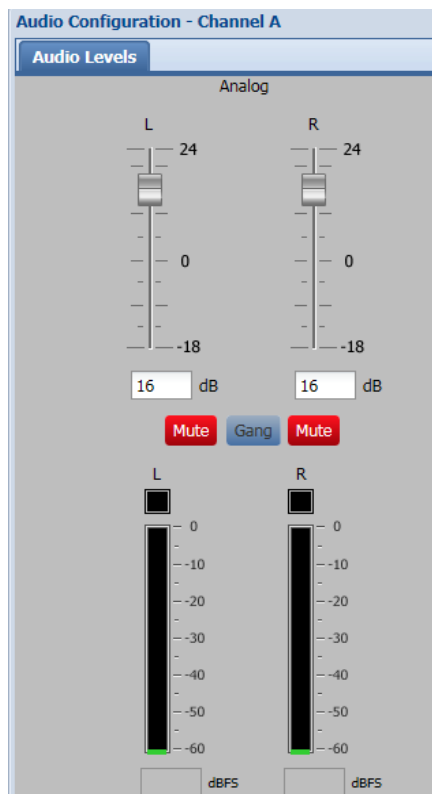

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command	Value		Value
AspectRatio	'Fill'	'Follow'	'Fit'
Qualifier Key	Qualifier Value		
'Input'	'1' – '5'		
# AspectRatio example InterfaceName.Set('AspectRatio', 'Fill', {'Input': '1'})			
Command	Value		
AudioBitrate	'80' – '320'		
# AudioBitrate example InterfaceName.Set('AudioBitrate', '8')			
Command	Value		
AudioInputGain	-18 to 24 in steps of 1 dB		
Qualifier Key	Qualifier Value	Qualifier Value	Qualifier Value
'Type'	'Analog Channel A (L)'	'Analog Channel A (R)'	'Digital Channel A (L)'
	'Digital Channel A (R)'	'Analog Channel B (L)'	'Analog Channel B (R)'
	'Digital Channel B (L)'	'Digital Channel B (R)'	
# AudioInputGain example InterfaceName.Set('AudioInputGain', 24, {'Type': 'Analog Channel A (L)'})			
Command	Value	Value	
AudioMuteInput	'On'	'Off'	
Qualifier Key	Qualifier Value	Qualifier Value	
'Type'	'Analog'	'Digital'	
Qualifier Key	Qualifier Value	Qualifier Value	
'Channel'	'A'	'B'	
Qualifier Key	Qualifier Value	Qualifier Value	
'L/R'	'Left'	'Right'	
# AudioMuteInput example InterfaceName.Set('AudioMuteInput', 'On', {'Type': 'Analog', 'Channel': 'A', 'L/R': 'Left'})			
Command	Value	Value	
AudioMuteOutput	'On'	'Off'	
Qualifier Key	Qualifier Value	Qualifier Value	
'L/R'	'Left'	'Right'	
# AudioMuteOutput example InterfaceName.Set('AudioMuteOutput', 'On', {'L/R': 'Left'})			
Command	Value	Value	
AudioOnlyRecording	'Enable'	'Disable'	
# AudioOnlyRecording example InterfaceName.Set('AudioOnlyRecording', 'Enable')			
Command	Value		
AutoImage	None		
Qualifier Key	Qualifier Value	Qualifier Value	
'Channel'	'A'	'B'	
# AutoImage example InterfaceName.Set('AutoImage', None, {'Channel': 'A'})			

Global Scripter Module Communication Sheet

Command BackgroundImageCommand ⁸	Value 'Enable'	Value 'Disable'	
Qualifier Key 'Image Name'	Qualifier Value 'String'		
# BackgroundImage Command example InterfaceName.Set('BackgroundImageCommand', 'Enable')			
Command BitrateControl	Value 'VBR'	Value 'CVBR'	Value 'CBR'
Qualifier Key 'Stream'	Qualifier Value 'Archive A'	Qualifier Value 'Archive B'	Qualifier Value 'Confidence A'
# BitrateControl example InterfaceName.Set('BitrateControl', 'VBR', {'Stream': 'Archive A'})			
Command ChapterMarker	Value None		
# ChapterMarker example InterfaceName.Set('ChapterMarker', None)			
Command ClearActiveAlarms	Value None		
# ClearActiveAlarms example InterfaceName.Set('ClearActiveAlarms', None)			
Command DelayedRecordingDuration ⁹	Value '5' – '60'		
# DelayedRecordingDuration example InterfaceName.Set('DelayedRecordingDuration', '5')			
Command DualChannelHDMIOutput	Value 'Channel A Fullscreen'	Value 'Channel B Fullscreen'	Value 'Confidence Layout'
# DualChannelHDMIOutput example InterfaceName.Set('DualChannelHDMIOutput', 'Channel A Fullscreen')			
Command EjectUSBStorage	Value 'All' 'USB RCP'	Value 'USB Front'	Value 'USB Rear'
# EjectUSBStorage example InterfaceName.Set('EjectUSBStorage', 'All')			
Command Encoder	Value 'Composite'	Value 'Dual'	
# Encoder example InterfaceName.Set('Encoder', 'Composite')			
Command ExecutiveMode	Value 'Off' 'Recording Control Only'	Value 'Complete Lock Out'	Value 'Menu Lock Out'
# ExecutiveMode example InterfaceName.Set('ExecutiveMode', 'Off')			
Command GOPLength	Value 1 – 300		
Qualifier Key 'Stream'	Qualifier Value 'Archive A'	Qualifier Value 'Archive B'	Qualifier Value 'Confidence A'
# GOPLength example InterfaceName.Set('GOPLength', 300, {'Stream': 'Archive A'})			
Command HDMIAudioMute	Value 'On'	Value 'Off'	
# HDMIAudioMute example InterfaceName.Set('HDMIAudioMute', 'On')			

Global Scripter Module
Communication Sheet

Command HDMIVideoMute	Value 'On'	Value 'Off'	
# HDMIVideoMute example InterfaceName.Set('HDMIVideoMute', 'On')			
Command HorizontalVideoMirroring 1,9	Value 'On'	Value 'Off'	
Qualifier Key 'Input'	Qualifier Value '1' – '5'		
# HorizontalVideoMirroring example InterfaceName.Set('HorizontalVideoMirroring', 'On', {'Input': '1'})			
Command Input3Format	Value 'YUVp/HDTV'	Value 'YUVi'	Value 'Composite'
# Input3Format example InterfaceName.Set('Input3Format', 'YUVp/HDTV')			
Command InputA	Value '1' – '2'		
# InputA example InterfaceName.Set('InputA', '1')			
Command InputB ¹	Value '3' – '5'		
# InputB example InterfaceName.Set('InputB', '3')			
Command Metadata	Value 'Contributor' 'Description' 'Publisher' 'Source' 'Type'	Value 'Coverage' 'Format' 'Relation' 'Subject' 'System Name'	Value 'Presenter' 'Language' 'Rights' 'Title' 'Course'
Qualifier Key 'Metadata String'	Qualifier Value 'String'		
# Metadata example InterfaceName.Set('Metadata', 'Contributor')			
Command RCP101ExecutiveMode ⁵	Value 'On'	Value 'Off'	
# RCP101ExecutiveMode example InterfaceName.Set('RCP101ExecutiveMode', 'On')			
Command RecallEncoderPreset	Value '1' – '32'		
Qualifier Key 'Stream'	Qualifier Value 'Archive A'	Qualifier Value 'Archive B' ⁴	Qualifier Value 'Confidence A'
# RecallEncoderPreset example InterfaceName.Set('RecallEncoderPreset', '1', {'Stream': 'Archive A'})			
Command RecallLayoutConfidenceDual	Value '1' – '10'		
# RecallLayoutConfidenceDual example InterfaceName.Set('RecallLayoutConfidenceDual', '1')			
Command RecallLayoutPreset	Value '1' – '16'		
Qualifier Key 'Inputs'	Qualifier Value 'With Inputs'	Qualifier Value 'Without Inputs'	
# RecallLayoutPreset example InterfaceName.Set('RecallLayoutPreset', '1', {'Inputs': 'With Inputs'})			

Global Scripter Module Communication Sheet

Command			
RecallRecordingProfile			
# RecallRecordingProfile example InterfaceName.Set('RecallRecordingProfile', '0')			
Command	Value		
RecallStreamingPreset	'1' – '32'		
Qualifier Key	Qualifier Value	Qualifier Value	Qualifier Value
'Stream'	'Archive A'	'Archive B' ⁴	'Confidence A'
# RecallStreamingPreset example InterfaceName.Set('RecallStreamingPreset', '1', {'Stream': 'Archive A'})			
Command	Value		
RecallUserPreset	'1' – '16'		
Qualifier Key	Qualifier Value	Qualifier Value	
'Channel'	'A'	'B'	
# RecallUserPreset example InterfaceName.Set('RecallUserPreset', '1', {'Channel': 'A'})			
Command	Value	Value	Value
Record	'Start'	'Stop'	'Pause'
# Record example InterfaceName.Set('Record', 'Start')			
Command	Value	Value	Value
RecordControl	'Enable'	'Disable'	'Enable Dual'
# RecordControl example InterfaceName.Set('RecordControl', 'Enable')			
Command	Value	Value	Value
RecordDestination	'Auto'	'Internal'	'USB (Front)'
	'USB (Rear)'	'Internal + USB Front'	'Internal + USB Rear'
	'Internal + USB RCP'	'Internal + Auto'	
# RecordDestination example InterfaceName.Set('RecordDestination', 'Auto')			
Command	Value	Value	
RecordDualControl ^{3,4}	'On'	'Off'	
# RecordDualControl example InterfaceName.Set('RecordDualControl', 'On')			
Command	Value		
RecordExtend ⁷	1 – 60		
# RecordExtend example InterfaceName.Set('RecordExtend', 60)			
Command	Value	Value	Value
RecordResolution	'480p'	'720p'	'1080p'
	'512x288'	'1024x768'	'1280x1024'
	'Custom'		
Qualifier Key	Qualifier Value	Qualifier Value	Qualifier Value
'Stream'	'Archive A'	'Archive B'	'Confidence A'
# RecordResolution example InterfaceName.Set('RecordResolution', '480p', {'Stream': 'Archive A'})			
Command	Value	Value	
RecordingMode	'Audio and Video'	'Video Only'	
# RecordingMode example InterfaceName.Set('RecordingMode', 'Audio and Video')			

Command RecordingVideoFrameRate	Value '30 fps'	Value '25 fps'	Value '24 fps'
	'15 fps'	'12.5 fps'	'10 fps'
	'5 fps'	'12 fps'	
Qualifier Key 'Stream'	Qualifier Value 'Archive A'	Qualifier Value 'Archive B' ⁴	Qualifier Value 'Confidence A'
# RecordingVideoFrameRate example InterfaceName.Set('RecordingVideoFrameRate', '30 fps', {'Stream': 'Archive A'})			
Command RTMPBackupURLCommand ²	Value None		
Qualifier Key 'Stream'	Qualifier Value 'Archive A'	Qualifier Value 'Archive B'	Qualifier Value 'Confidence A'
Qualifier Key 'RTMP Backup URL Key String'	Qualifier Value 'String'		
Qualifier Key 'RTMP Backup URL String'	Qualifier Value 'String'		
# RTMPBackupURLCommand example InterfaceName.Set('RTMPBackupURLCommand', None, {'Stream': 'Archive A', 'RTMP Backup URL Key String': 'Key', 'RTMP Backup URL String': 'URL'})			
Command RTMPPrimaryURLCommand ²	Value None		
Qualifier Key 'Stream'	Qualifier Value 'Archive A'	Qualifier Value 'Archive B'	Qualifier Value 'Confidence A'
Qualifier Key 'RTMP Backup URL Key String'	Qualifier Value 'String'		
Qualifier Key 'RTMP Backup URL String'	Qualifier Value 'String'		
# RTMPPrimaryURLCommand example InterfaceName.Set('RTMPPrimaryURLCommand', None, {'Stream': 'Archive A', 'RTMP Backup URL Key String': 'Key', 'RTMP Backup URL String': 'URL'})			
Command RTMPStream ²	Value 'Enable'	Value 'Disable'	
Qualifier Key 'Stream'	Qualifier Value 'Archive A'	Qualifier Value 'Archive B'	Qualifier Value 'Confidence A'
# RTMPStream example InterfaceName.Set('RTMPStream', 'Enable', {'Stream': 'Archive A'})			
Command SMPRecordingFolderShare ⁶	Value 'Enable'	Value 'Disable'	
# SMPRecordingFolderShare example InterfaceName.Set('SMPRecordingFolderShare', 'Enable')			

Command StreamControl	Value 'Enable'	Value 'Disable'	
Qualifier Key 'Stream'	Qualifier Value 'Archive A'	Qualifier Value 'Archive B' ⁴	Qualifier Value 'Confidence A'
# StreamControl example InterfaceName.Set('StreamControl', 'Enable', {'Stream': 'Archive A'})			
Command SwapWindows	Value None		
# SwapWindows example InterfaceName.Set('SwapWindows', None)			
Command ThumbnailSize	Value 'Default'	Value 'Archived Resolution'	
# ThumbnailSize example InterfaceName.Set('ThumbnailSize', 'Default')			
Command VideoBitrate	Value 200 – 10000		
Qualifier Key 'Stream'	Qualifier Value 'Archive A'	Qualifier Value 'Archive B'	Qualifier Value 'Confidence A'
# VideoBitrate example InterfaceName.Set('VideoBitrate', 10000, {'Stream': 'Archive A'})			
Command VideoMute	Value 'On'	Value 'Off'	
Qualifier Key 'Channel'	Qualifier Value 'A'	Qualifier Value 'B'	
# VideoMute example InterfaceName.Set('VideoMute', 'On', {'Channel': 'A'})			

¹ Input 5 is only available on the SMP 351 3G-SDI and SMP 352 3G-SDI.

² For this command to work, on the Encoding Layout section, the streaming must be enabled on Archive Encoder and Confidence Encoder section. Set the Streaming Protocol to RTMP Push.

³ Encoding Mode needs to be set to Dual Channel for this command to work.

⁴ Dual Recording Upgrade LinkLicense is required for this command to work.

⁵ This command only works if an RCP 101 panel is connected to the device.

⁶ This command is for SMP recording folder shared on the SMD.

⁷ Scheduled Recordings must be enabled for this command to work.

⁸ Only available in 'Composite' mode.

⁹ Horizontal Video Mirroring Upgrade LinkLicense is required for this command to work.

Status Available

For all commands except for `ActiveLayoutPreset`, `ActiveLayoutPresetConfidenceDual`, `Alarm`, `AlarmSeverity`, `AudioLevel`, `BackupRTMPStatus`, `CPUUsage`, `CurrentRecordingDuration`, `DelayedRecordingDuration`, `DualChannelHDMIOutput`, `Encoder`, `FileDestination`, `FTPUUploadDestination`, `HDCPInputStatus`, `HorizontalVideoMirroring`, `InputA`, `InputB`, `LayoutPresetStatus`, `MetadataStatus`, `PrimaryRTMPStatus`, `RecallRecordingProfile`, `RecordControl`, `RecordDestination`, `RecordDualControl`, `RecordingStartCountdown`, `RemainingFreeDiskSpace`, `RemainingFrontUSBStorage`, `RemainingInternalStorage`, `RemainingRearRCPUSBStorage`, `RemainingRearUSBStorage`, `RemainingRecordingTime`, `RTMPBackupURLStatus`, `RTMPPrimaryURLStatus`, `RTMPStream`, `RTSPStreamURL`, `SMPRecordingFolderShare`, `StreamControl`, `StreamingPresetsName`, and `ThumbnailSize`, `Update` should be called only once since the command's status will be updated automatically as the device's status changes. `ConnectionStatus`, `ActiveLayoutPreset`, `ActiveLayoutPresetConfidenceDual`, `InputA`, `InputB`, and `RecordingStartCountdown` do not support the `Update` function. `ConnectionStatus` is triggered by the device providing a successful response to other `Update` function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'},
```

FeedbackHandler)

`FeedbackHandler` will be called only when the specified qualifier gets a new status.

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command	Value		
ActiveLayoutPreset ⁵	'1' – '16'		
# ActiveLayoutPreset example Value = InterfaceName.ReadStatus('ActiveLayoutPreset') InterfaceName.SubscribeStatus('ActiveLayoutPreset', None, FeedbackHandler)			
Command	Value		
ActiveLayoutPresetConfidenceDual	'1' – '32'		
# ActiveLayoutPresetConfidenceDual example Value = InterfaceName.ReadStatus('ActiveLayoutPresetConfidenceDual') InterfaceName.SubscribeStatus('ActiveLayoutPresetConfidenceDual', None, FeedbackHandler)			
Command	Value	Value	
Alarm	'Active'	'Not Active'	
Qualifier Key	Qualifier Value	Qualifier Value	Qualifier Value
'Alarm'	'Audio Loss'	'Authentication Failures'	'CPU Usage'
	'Disk Error'	'Disk Space'	'Firmware Failure'
	'HDCP Video'	'NTP Sync'	'Publish Failure'
	'Record Halt'	'Schedule Server'	'Temperature Internal'
	'USB Front Overcurrent'	'USB Keyboard Overcurrent'	'USB Mouse Overcurrent'
	'USB Rear Overcurrent'	'Video Loss'	
# Alarm example InterfaceName.Update('Alarm', {'Alarm': 'Audio Loss'}) Value = InterfaceName.ReadStatus('Alarm', {'Alarm': 'Audio Loss'}) InterfaceName.SubscribeStatus('Alarm', None, FeedbackHandler)			

Global Scripter Module
Communication Sheet

Revision: 12/13/2022

Command AlarmSeverity	Value 'Warning' 'Info'	Value 'Critical' 'Emergency'	Value 'Cleared'
Qualifier Key 'Alarm'	Qualifier Value 'Audio Loss' 'Disk Error' 'HDCP Video' 'Record Halt' 'USB Front Overcurrent' 'USB Rear Overcurrent'	Qualifier Value 'Authentication Failures' 'Disk Space' 'NTP Sync' 'Schedule Server' 'USB Keyboard Overcurrent' 'Video Loss'	Qualifier Value 'CPU Usage' 'Firmware Failure' 'Publish Failure' 'Temperature Internal' 'USB Mouse Overcurrent'
# AlarmSeverity example InterfaceName.Update('AlarmSeverity', {'Alarm': 'Audio Loss'}) Value = InterfaceName.ReadStatus('AlarmSeverity', {'Alarm': 'Audio Loss'}) InterfaceName.SubscribeStatus('AlarmSeverity', None, FeedbackHandler)			
Command AspectRatio	Value 'Fill'	Value 'Follow'	Value 'Fit'
Qualifier Key 'Input'	Qualifier Value '1' – '5'		
# AspectRatio example InterfaceName.Update('AspectRatio', {'Input': '1'}) Value = InterfaceName.ReadStatus('AspectRatio', {'Input': '1'}) InterfaceName.SubscribeStatus('AspectRatio', None, FeedbackHandler)			
Command AudioBitrate	Value '80' – '320'		
# AudioBitrate example InterfaceName.Update('AudioBitrate') Value = InterfaceName.ReadStatus('AudioBitrate') InterfaceName.SubscribeStatus('AudioBitrate', None, FeedbackHandler)			
Command AudioInputGain	Value -18 to 24 in steps of 1		
Qualifier Key 'Type'	Qualifier Value 'Analog Channel A (L)' 'Digital Channel A (R)' 'Digital Channel B (L)'	Qualifier Value 'Analog Channel A (R)' 'Analog Channel B (L)' 'Digital Channel B (R)'	Qualifier Value 'Digital Channel A (L)' 'Analog Channel B (R)'
# AudioInputGain example InterfaceName.Update('AudioInputGain', {'Type': 'Analog Channel A (L)'}) Value = InterfaceName.ReadStatus('AudioInputGain', {'Type': 'Analog Channel A (L)'}) InterfaceName.SubscribeStatus('AudioInputGain', None, FeedbackHandler)			
Command AudioLevel	Value -150 – 0		
Qualifier Key 'L/R'	Qualifier Value 'Left'	Qualifier Value 'Right'	
# AudioLevel example InterfaceName.Update('AudioLevel', {'L/R': 'Left'}) Value = InterfaceName.ReadStatus('AudioLevel', {'L/R': 'Left'}) InterfaceName.SubscribeStatus('AudioLevel', None, FeedbackHandler)			
Command AudioMuteInput	Value 'On'	Value 'Off'	
Qualifier Key 'Type'	Qualifier Value 'Analog'	Qualifier Value 'Digital'	
Qualifier Key 'Channel'	Qualifier Value 'A'	Qualifier Value 'B'	
Qualifier Key	Qualifier Value	Qualifier Value	

Global Scriptor Module Communication Sheet

'L/R'	'Left'	'Right'	
# AudioMuteInput example InterfaceName.Update('AudioMuteInput', {'Type': 'Analog', 'Channel': 'A', 'L/R': 'Left'}) Value = InterfaceName.ReadStatus('AudioMuteInput', {'Type': 'Analog', 'Channel': 'A', 'L/R': 'Left'}) InterfaceName.SubscribeStatus('AudioMuteInput', None, FeedbackHandler)			
Command AudioMuteOutput	Value 'On'	Value 'Off'	
Qualifier Key 'L/R'	Qualifier Value 'Left'	Qualifier Value 'Right'	
# AudioMuteOutput example InterfaceName.Update('AudioMuteOutput', {'L/R': 'Left'}) Value = InterfaceName.ReadStatus('AudioMuteOutput', {'L/R': 'Left'}) InterfaceName.SubscribeStatus('AudioMuteOutput', None, FeedbackHandler)			
Command AudioOnlyRecording	Value 'Enable'	Value 'Disable'	
# AudioOnlyRecording example InterfaceName.Update('AudioOnlyRecording') Value = InterfaceName.ReadStatus('AudioOnlyRecording') InterfaceName.SubscribeStatus('AudioOnlyRecording', None, FeedbackHandler)			
Command BackupRTMPStatus	Value 'Live'	Value 'Offline'	
Qualifier Key 'Stream'	Qualifier Value 'Archive A'	Qualifier Value 'Archive B' ⁹	Qualifier Value 'Confidence A'
# BackupRTMPStatus example InterfaceName.Update('BackupRTMPStatus', {'Stream': 'Archive A'}) Value = InterfaceName.ReadStatus('BackupRTMPStatus', {'Stream': 'Archive A'}) InterfaceName.SubscribeStatus('BackupRTMPStatus', None, FeedbackHandler)			
Command BitrateControl	Value 'VBR'	Value 'CVBR'	Value 'CBR'
Qualifier Key 'Stream'	Qualifier Value 'Archive A'	Qualifier Value 'Archive B' ⁹	Qualifier Value 'Confidence A'
# BitrateControl example InterfaceName.Update('BitrateControl', {'Stream': 'Archive A'}) Value = InterfaceName.ReadStatus('BitrateControl', {'Stream': 'Archive A'}) InterfaceName.SubscribeStatus('BitrateControl', None, FeedbackHandler)			
Command ConnectionStatus	Value 'Connected'	Value 'Disconnected'	
# ConnectionStatus example Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command CPUUsage	Value Hours		
# CPUUsage example InterfaceName.Update('CPUUsage') Value = InterfaceName.ReadStatus('CPUUsage') InterfaceName.SubscribeStatus('CPUUsage', None, FeedbackHandler)			
Command CurrentRecordingDuration	Value 'String'		
# CurrentRecordingDuration example InterfaceName.Update('CurrentRecordingDuration') Value = InterfaceName.ReadStatus('CurrentRecordingDuration') InterfaceName.SubscribeStatus('CurrentRecordingDuration', None, FeedbackHandler)			

Global Scripter Module Communication Sheet

Command DelayedRecordingDuration ¹³	Value '5' – '60'		
# DelayedRecordingDuration example InterfaceName.Update('DelayedRecordingDuration') Value = InterfaceName.ReadStatus('DelayedRecordingDuration') InterfaceName.SubscribeStatus('DelayedRecordingDuration', None, FeedbackHandler)			
Command DualChannelHDMIOutput	Value 'Channel A Fullscreen'	Value 'Channel B Fullscreen'	Value 'Confidence Layout'
# DualChannelHDMIOutput example InterfaceName.Update('DualChannelHDMIOutput') Value = InterfaceName.ReadStatus('DualChannelHDMIOutput') InterfaceName.SubscribeStatus('DualChannelHDMIOutput', None, FeedbackHandler)			
Command Encoder	Value 'Composite'	Value 'Dual'	
# Encoder example InterfaceName.Update('Encoder') Value = InterfaceName.ReadStatus('Encoder') InterfaceName.SubscribeStatus('Encoder', None, FeedbackHandler)			
Command ExecutiveMode	Value 'Off' 'Recording Control Only'	Value 'Complete Lock Out'	Value 'Menu Lock Out'
# ExecutiveMode example InterfaceName.Update('ExecutiveMode') Value = InterfaceName.ReadStatus('ExecutiveMode') InterfaceName.SubscribeStatus('ExecutiveMode', None, FeedbackHandler)			
Command FileDestination ³	Value 'NA' 'Rear USB' 'RCP USB'	Value 'Internal' 'Auto'	Value 'Front USB' 'Drive not inserted while USB is set as Destination'
Qualifier Key 'Drive'	Qualifier Value 'Primary'	Qualifier Value 'Secondary'	
# FileDestination example InterfaceName.Update('FileDestination', {'Drive': 'Primary'}) Value = InterfaceName.ReadStatus('FileDestination', {'Drive': 'Primary'}) InterfaceName.SubscribeStatus('FileDestination', None, FeedbackHandler)			
Command FTPUploadDestination	Value 'String'		
# FTPUploadDestination example InterfaceName.Update('FTPUploadDestination') Value = InterfaceName.ReadStatus('FTPUploadDestination') InterfaceName.SubscribeStatus('FTPUploadDestination', None, FeedbackHandler)			
Command GOPLength	Value 1 – 300		
Qualifier Key 'Stream'	Qualifier Value 'Archive A'	Qualifier Value 'Archive B'	Qualifier Value 'Confidence A'
# GOPLength example InterfaceName.Update('GOPLength', {'Stream': 'Archive A'}) Value = InterfaceName.ReadStatus('GOPLength', {'Stream': 'Archive A'}) InterfaceName.SubscribeStatus('GOPLength', None, FeedbackHandler)			
Command HDCPInputStatus ⁴	Value 'No Source Connected'	Value 'HDCP Content'	Value 'No HDCP Content'
Qualifier Key 'Input'	Qualifier Value '1' – '4'		

Global Scripter Module Communication Sheet

<pre># HDCPInputStatus example InterfaceName.Update('HDCPInputStatus', {'Input': '1'}) Value = InterfaceName.ReadStatus('HDCPInputStatus', {'Input': '1'}) InterfaceName.SubscribeStatus('HDCPInputStatus', None, FeedbackHandler)</pre>			
Command	Value	Value	
HDMIAudioMute	'On'	'Off'	
<pre># HDMIAudioMute example InterfaceName.Update('HDMIAudioMute') Value = InterfaceName.ReadStatus('HDMIAudioMute') InterfaceName.SubscribeStatus('HDMIAudioMute', None, FeedbackHandler)</pre>			
Command	Value	Value	
HDMIVideoMute	'On'	'Off'	
<pre># HDMIVideoMute example InterfaceName.Update('HDMIVideoMute') Value = InterfaceName.ReadStatus('HDMIVideoMute') InterfaceName.SubscribeStatus('HDMIVideoMute', None, FeedbackHandler)</pre>			
Command	Value	Value	
HorizontalVideoMirroring	'On'	'Off'	
2, 13			
Qualifier Key	Qualifier Value		
'Input'	'1' – '5'		
<pre># HorizontalVideoMirroring example InterfaceName.Update('HorizontalVideoMirroring', {'Input': '1'}) Value = InterfaceName.ReadStatus('HorizontalVideoMirroring', {'Input': '1'}) InterfaceName.SubscribeStatus('HorizontalVideoMirroring', None, FeedbackHandler)</pre>			
Command	Value	Value	Value
Input3Format	'YUVp/HDTV'	'YUVi'	'Composite'
<pre># Input3Format example InterfaceName.Update('Input3Format') Value = InterfaceName.ReadStatus('Input3Format') InterfaceName.SubscribeStatus('Input3Format', None, FeedbackHandler)</pre>			
Command	Value		
InputA	'1' – '2'		
<pre># InputA example Value = InterfaceName.ReadStatus('InputA') InterfaceName.SubscribeStatus('InputA', None, FeedbackHandler)</pre>			
Command	Value		
InputB ²	'3' – '5'		
<pre># InputB example Value = InterfaceName.ReadStatus('InputB') InterfaceName.SubscribeStatus('InputB', None, FeedbackHandler)</pre>			
Command	Value		
LayoutPresetStatus	'1' – '16'		
<pre># LayoutPresetStatus example InterfaceName.Update('LayoutPresetStatus') Value = InterfaceName.ReadStatus('LayoutPresetStatus') InterfaceName.SubscribeStatus('LayoutPresetStatus', None, FeedbackHandler)</pre>			
Command	Value		
MetadataStatus	'String'		
Qualifier Key	Qualifier Value	Qualifier Value	Qualifier Value
'Type'	'Contributor'	'Coverage'	'Presenter'
	'Date'	'Description'	'Format'
	'Identifier'	'Language'	'Publisher'
	'Relation'	'Rights'	'Source'
	'Subject'	'Title'	'Type'
	'System Name'	'Course'	

Global Scripter Module Communication Sheet

<pre># MetadataStatus example InterfaceName.Update('MetadataStatus', {'Type': 'Contributor'}) Value = InterfaceName.ReadStatus('MetadataStatus', {'Type': 'Contributor'}) InterfaceName.SubscribeStatus('MetadataStatus', None, FeedbackHandler)</pre>			
Command	Value	Value	
PrimaryRTMPStatus	'Live'	'Offline'	
Qualifier Key	Qualifier Value	Qualifier Value	Qualifier Value
'Stream'	'Archive A'	'Archive B'	'Confidence A'
<pre># PrimaryRTMPStatus example InterfaceName.Update('PrimaryRTMPStatus', {'Stream': 'Archive A'}) Value = InterfaceName.ReadStatus('PrimaryRTMPStatus', {'Stream': 'Archive A'}) InterfaceName.SubscribeStatus('PrimaryRTMPStatus', None, FeedbackHandler)</pre>			
Command	Value	Value	
RCP101ExecutiveMode ⁷	'On'	'Off'	
<pre># RCP101ExecutiveMode example InterfaceName.Update('RCP101ExecutiveMode') Value = InterfaceName.ReadStatus('RCP101ExecutiveMode') InterfaceName.SubscribeStatus('RCP101ExecutiveMode', None, FeedbackHandler)</pre>			
Command	Value		
RecallRecordingProfile	'0' – '32'		
<pre># RecallRecordingProfile example InterfaceName.Update('RecallRecordingProfile') Value = InterfaceName.ReadStatus('RecallRecordingProfile') InterfaceName.SubscribeStatus('RecallRecordingProfile', None, FeedbackHandler)</pre>			
Command	Value	Value	Value
Record	'Start'	'Stop'	'Pause'
<pre># Record example InterfaceName.Update('Record') Value = InterfaceName.ReadStatus('Record') InterfaceName.SubscribeStatus('Record', None, FeedbackHandler)</pre>			
Command	Value	Value	Value
RecordControl	'Enable'	'Disable'	'Enable Dual'
<pre># RecordControl example InterfaceName.Update('RecordControl') Value = InterfaceName.ReadStatus('RecordControl') InterfaceName.SubscribeStatus('RecordControl', None, FeedbackHandler)</pre>			
Command	Value	Value	Value
RecordDestination	'Auto'	'Internal'	'USB (Front)'
	'USB (Rear)'	'Internal + USB Front'	'Internal + USB Rear'
	'Internal + USB RCP'	'Internal + Auto'	
<pre># RecordDestination example InterfaceName.Update('RecordDestination') Value = InterfaceName.ReadStatus('RecordDestination') InterfaceName.SubscribeStatus('RecordDestination', None, FeedbackHandler)</pre>			
Command	Value	Value	
RecordDualControl ^{8,9}	'On'	'Off'	
<pre># RecordDualControl example InterfaceName.Update('RecordDualControl') Value = InterfaceName.ReadStatus('RecordDualControl') InterfaceName.SubscribeStatus('RecordDualControl', None, FeedbackHandler)</pre>			
Command	Value	Value	Value
RecordResolution	'480p'	'720p'	'1080p'
	'512x288'	'1024x768'	'1280x1024'
	'Custom'		
Qualifier Key	Qualifier Value	Qualifier Value	Qualifier Value
'Stream'	'Archive A'	'Archive B'	'Confidence A'

Global Scripter Module Communication Sheet

# RecordResolution example InterfaceName.Update('RecordResolution', {'Stream': 'Archive A'}) Value = InterfaceName.ReadStatus('RecordResolution', {'Stream': 'Archive A'}) InterfaceName.SubscribeStatus('RecordResolution', None, FeedbackHandler)			
Command	Value	Value	
RecordingMode	'Audio and Video'	'Video Only'	
# RecordingMode example InterfaceName.Update('RecordingMode') Value = InterfaceName.ReadStatus('RecordingMode') InterfaceName.SubscribeStatus('RecordingMode', None, FeedbackHandler)			
Command	Value		
RecordingStartCountdown	'1' – '60'		
# RecordingStartCountdown example Value = InterfaceName.ReadStatus('RecordingStartCountdown') InterfaceName.SubscribeStatus('RecordingStartCountdown', None, FeedbackHandler)			
Command	Value	Value	Value
RecordingVideoFrameRate	'30 fps'	'25 fps'	'24 fps'
	'15 fps'	'12.5 fps'	'10 fps'
	'5 fps'	'12 fps'	
Qualifier Key	Qualifier Value	Qualifier Value	Qualifier Value
'Stream'	'Archive A'	'Archive B'	'Confidence A'
# RecordingVideoFrameRate example InterfaceName.Update('RecordingVideoFrameRate', {'Stream': 'Archive A'}) Value = InterfaceName.ReadStatus('RecordingVideoFrameRate', {'Stream': 'Archive A'}) InterfaceName.SubscribeStatus('RecordingVideoFrameRate', None, FeedbackHandler)			
Command	Value		
RemainingFreeDiskSpace ³	0 – 1000000		
Qualifier Key	Qualifier Value	Qualifier Value	
'Drive'	'Primary'	'Secondary'	
Qualifier Key	Qualifier Value	Qualifier Value	
'Unit'	'MB'	'GB'	
# RemainingFreeDiskSpace example InterfaceName.Update('RemainingFreeDiskSpace', {'Drive': 'Primary', 'Unit': 'MB'}) Value = InterfaceName.ReadStatus('RemainingFreeDiskSpace', {'Drive': 'Primary', 'Unit': 'MB'}) InterfaceName.SubscribeStatus('RemainingFreeDiskSpace', None, FeedbackHandler)			
Command	Value		
RemainingFrontUSBStorage	0 – 1000000 ¹¹		
Qualifier Key	Qualifier Value	Qualifier Value	
'Unit'	'MB'	'GB'	
# RemainingFrontUSBStorage example InterfaceName.Update('RemainingFrontUSBStorage', {'Unit': 'MB'}) Value = InterfaceName.ReadStatus('RemainingFrontUSBStorage', {'Unit': 'MB'}) InterfaceName.SubscribeStatus('RemainingFrontUSBStorage', None, FeedbackHandler)			
Command	Value		
RemainingInternalStorage	0 – 1000000		
Qualifier Key	Qualifier Value	Qualifier Value	
'Unit'	'MB'	'GB'	
# RemainingInternalStorage example InterfaceName.Update('RemainingInternalStorage', {'Unit': 'MB'}) Value = InterfaceName.ReadStatus('RemainingInternalStorage', {'Unit': 'MB'}) InterfaceName.SubscribeStatus('RemainingInternalStorage', None, FeedbackHandler)			

Global Scripter Module Communication Sheet

Revision: 12/13/2022

Command RemainingRearRCPUSBStorage	Value 0 – 1000000 ¹¹		
Qualifier Key 'Unit'	Qualifier Value 'MB'	Qualifier Value 'GB'	
# RemainingRearRCPUSBStorage example InterfaceName.Update('RemainingRearRCPUSBStorage', {'Unit': 'MB'}) Value = InterfaceName.ReadStatus('RemainingRearRCPUSBStorage', {'Unit': 'MB'}) InterfaceName.SubscribeStatus('RemainingRearRCPUSBStorage', None, FeedbackHandler)			
Command RemainingRearUSBStorage	Value 0 – 1000000 ¹¹		
Qualifier Key 'Unit'	Qualifier Value 'MB'	Qualifier Value 'GB'	
# RemainingRearUSBStorage example InterfaceName.Update('RemainingRearUSBStorage', {'Unit': 'MB'}) Value = InterfaceName.ReadStatus('RemainingRearUSBStorage', {'Unit': 'MB'}) InterfaceName.SubscribeStatus('RemainingRearUSBStorage', None, FeedbackHandler)			
Command RemainingRecordingTime _{1, 3}	Value 'String'		
Qualifier Key 'Drive'	Qualifier Value 'Primary'	Qualifier Value 'Secondary'	
# RemainingRecordingTime example InterfaceName.Update('RemainingRecordingTime', {'Drive': 'Primary'}) Value = InterfaceName.ReadStatus('RemainingRecordingTime', {'Drive': 'Primary'}) InterfaceName.SubscribeStatus('RemainingRecordingTime', None, FeedbackHandler)			
Command RTMPBackupURLStatus ⁶	Value 'String'		
Qualifier Key 'Stream'	Qualifier Value 'Archive A'	Qualifier Value 'Archive B'	Qualifier Value 'Confidence A'
# RTMPBackupURLStatus example InterfaceName.Update('RTMPBackupURLStatus', {'Stream': 'Archive A', 'RTMP Backup URL Key String': 'Key', 'RTMP Backup URL String': 'URL'}) Value = InterfaceName.ReadStatus('RTMPBackupURLStatus', {'Stream': 'Archive A', 'RTMP Backup URL Key String': 'Key', 'RTMP Backup URL String': 'URL'}) InterfaceName.SubscribeStatus('RTMPBackupURLStatus', None, FeedbackHandler)			
Command RTMPPrimaryURLStatus	Value 'String'		
Qualifier Key 'Stream'	Qualifier Value 'Archive A'	Qualifier Value 'Archive B'	Qualifier Value 'Confidence A'
# RTMPPrimaryURLStatus example InterfaceName.Update('RTMPPrimaryURLStatus', {'Stream': 'Archive A', 'RTMP Backup URL Key String': 'Key', 'RTMP Backup URL String': 'URL'}) Value = InterfaceName.ReadStatus('RTMPPrimaryURLStatus', {'Stream': 'Archive A', 'RTMP Backup URL Key String': 'Key', 'RTMP Backup URL String': 'URL'}) InterfaceName.SubscribeStatus('RTMPPrimaryURLStatus', None, FeedbackHandler)			
Command RTMPStream	Value 'Enable'	Value 'Disable'	
Qualifier Key 'Stream'	Qualifier Value 'Archive A'	Qualifier Value 'Archive B'	Qualifier Value 'Confidence A'
# RTMPStream example InterfaceName.Update('RTMPStream', {'Stream': 'Archive A'}) Value = InterfaceName.ReadStatus('RTMPStream', {'Stream': 'Archive A'}) InterfaceName.SubscribeStatus('RTMPStream', None, FeedbackHandler)			

Global Scripter Module Communication Sheet

Command	Value		
RTSPStreamURL	'String'		
Qualifier Key	Qualifier Value	Qualifier Value	Qualifier Value
'Stream'	'Archive A'	'Archive B'	'Confidence A'
# RTSPStreamURL example InterfaceName.Update('RTSPStreamURL', {'Stream': 'Archive A'}) Value = InterfaceName.ReadStatus('RTSPStreamURL', {'Stream': 'Archive A'}) InterfaceName.SubscribeStatus('RTSPStreamURL', None, FeedbackHandler)			
Command	Value		Value
SMPRecordingFolderShare ¹⁰	'Enable'	'Disable'	
# SMPRecordingFolderShare example InterfaceName.Update('SMPRecordingFolderShare') Value = InterfaceName.ReadStatus('SMPRecordingFolderShare') InterfaceName.SubscribeStatus('SMPRecordingFolderShare', None, FeedbackHandler)			
Command	Value		Value
StreamControl	'Enable'	'Disable'	
Qualifier Key	Qualifier Value	Qualifier Value	Qualifier Value
'Stream'	'Archive A'	'Archive B'	'Confidence A'
# StreamControl example InterfaceName.Update('StreamControl', {'Stream': 'Archive A'}) Value = InterfaceName.ReadStatus('StreamControl', {'Stream': 'Archive A'}) InterfaceName.SubscribeStatus('StreamControl', None, FeedbackHandler)			
Command	Value		
StreamingPresetsName	'String'		
Qualifier Key	Qualifier Value		
'Preset'	'1' – '32'		
# StreamingPresetsName example InterfaceName.Update('StreamingPresetsName', {'Preset': '1'}) Value = InterfaceName.ReadStatus('StreamingPresetsName', {'Preset': '1'}) InterfaceName.SubscribeStatus('StreamingPresetsName', None, FeedbackHandler)			
Command	Value		Value
ThumbnailSize	'Default'	'Archived Resolution'	
# ThumbnailSize example InterfaceName.Update('ThumbnailSize') Value = InterfaceName.ReadStatus('ThumbnailSize') InterfaceName.SubscribeStatus('ThumbnailSize', None, FeedbackHandler)			
Command	Value		Value
USBStatus	'Inserted'	'Removed'	
Qualifier Key	Qualifier Value	Qualifier Value	Qualifier Value
'USB Port'	'Front USB'	'Rear USB'	'Rear RCP'
# USBStatus example InterfaceName.Update('USBStatus', {'USB Port': 'Front USB'}) Value = InterfaceName.ReadStatus('USBStatus', {'USB Port': 'Front USB'}) InterfaceName.SubscribeStatus('USBStatus', None, FeedbackHandler)			
Command	Value		
VideoBitrate	200 – 10000		
Qualifier Key	Qualifier Value	Qualifier Value	Qualifier Value
'Stream'	'Archive A'	'Archive B'	'Confidence A'
# VideoBitrate example InterfaceName.Update('VideoBitrate', {'Stream': 'Archive A'}) Value = InterfaceName.ReadStatus('VideoBitrate', {'Stream': 'Archive A'}) InterfaceName.SubscribeStatus('VideoBitrate', None, FeedbackHandler)			

Global Scripter Module Communication Sheet

Command VideoMute	Value 'On'	Value 'Off'
Qualifier Key 'Channel'	Qualifier Value 'A'	Qualifier Value 'B'
<pre># VideoMute example InterfaceName.Update('VideoMute', {'Channel': 'A'}) Value = InterfaceName.ReadStatus('VideoMute', {'Channel': 'A'}) InterfaceName.SubscribeStatus('VideoMute', None, FeedbackHandler)</pre>		

¹ String format: HH:MM:SS

² Input 5 is only available on the SMP 351 3G-SDI and SMP 352 3G-SDI.

³ 'Secondary' only available while dual recording is active.

⁴ Command will only send query for currently active input.

⁵ Status available after a layout preset is recalled, either via the driver or the front panel.

⁶ For this command to work, on the Encoding Layout section, the streaming must be enabled on Archive Encoder and Confidence Encoder section. Set the Streaming Protocol to RTMP Push.

⁷ For this command to work, an RCP 101 device need to be plugged in on the SMP unit.

⁸ Encoding Mode needs to be set to Dual Channel for this command to work.

⁹ Dual Recording Upgrade LinkLicense is required for this command to work.

¹⁰ This command is for SMP recording folder shared on the SMD.

¹¹ A value of 0 represents that either no USB Storage device is found, or the USB Storage device space is full.

¹² Only available in 'Composite' mode.

¹³ Horizontal video Mirroring Upgrade LinkLicense is required for this command to work.

Cable and Adapter Requirements

Captive Screw to Captive Screw RS-232 Serial Cable

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 9600


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

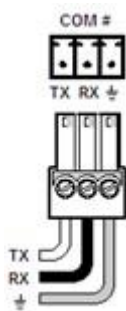

Signal	Main Cable	Signal
TxD		TxD
RxD		RxD
GND		GND

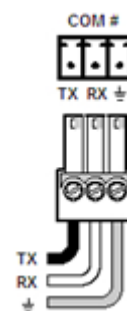

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scriptor ethernet interface.

Port Type: Ethernet (SSH)

Default Port: 22023

Logon Credentials Supported: Yes

Default Username: admin

Multi-Connection: Yes

Capabilities:

Port Changeability: Yes

Ethernet Module Configuration Description

- Please refer to user manual for settings and changes to the network communication parameters such as: Password and Port Number.
- Default Username is “admin” but can be changed to “user”
 - If User password is used for authentication, control of the device may be limited.

Notes for the Device

Appendix A. Set Commands

Aspect Ratio Fill Input 1	w1*1ASPR\x0D
Aspect Ratio Fill Input 4	w4*1ASPR\x0D
Aspect Ratio Fill Input 5	w5*1ASPR\x0D
Aspect Ratio Fit Input 1	w1*3ASPR\x0D
Aspect Ratio Fit Input 4	w4*3ASPR\x0D
Aspect Ratio Fit Input 5	w5*3ASPR\x0D
Aspect Ratio Follow Input 1	w1*2ASPR\x0D
Aspect Ratio Follow Input 4	w4*2ASPR\x0D
Aspect Ratio Follow Input 5	w5*2ASPR\x0D
Audio Bitrate 128	wA1*128BITR\x0D
Audio Bitrate 192	wA1*192BITR\x0D
Audio Bitrate 256	wA1*256BITR\x0D
Audio Bitrate 320	wA1*320BITR\x0D
Audio Bitrate 80	wA1*80BITR\x0D
Audio Bitrate 96	wA1*96BITR\x0D
Audio Input Gain -18 Type Analog Channel A (L)	wG40000*-180AU\x0D
Audio Input Gain -18 Type Analog Channel A (R)	wG40001*-180AU\x0D
Audio Input Gain -18 Type Analog Channel B (L)	wG40004*-180AU\x0D
Audio Input Gain -18 Type Analog Channel B (R)	wG40005*-180AU\x0D
Audio Input Gain -18 Type Digital Channel A (L)	wG40002*-180AU\x0D
Audio Input Gain -18 Type Digital Channel A (R)	wG40003*-180AU\x0D
Audio Input Gain -18 Type Digital Channel B (L)	wG40006*-180AU\x0D
Audio Input Gain -18 Type Digital Channel B (R)	wG40007*-180AU\x0D
Audio Input Gain 24 Type Analog Channel A (L)	wG40000*240AU\x0D
Audio Input Gain 24 Type Analog Channel A (R)	wG40001*240AU\x0D
Audio Input Gain 24 Type Analog Channel B (L)	wG40004*240AU\x0D
Audio Input Gain 24 Type Analog Channel B (R)	wG40005*240AU\x0D
Audio Input Gain 24 Type Digital Channel A (L)	wG40002*240AU\x0D
Audio Input Gain 24 Type Digital Channel A (R)	wG40003*240AU\x0D
Audio Input Gain 24 Type Digital Channel B (L)	wG40006*240AU\x0D
Audio Input Gain 24 Type Digital Channel B (R)	wG40007*240AU\x0D
Audio Mute Input Off L/R Left Type Analog Channel A	wM40000*0AU\x0D
Audio Mute Input Off L/R Left Type Analog Channel B	wM40004*0AU\x0D
Audio Mute Input Off L/R Left Type Digital Channel A	wM40002*0AU\x0D
Audio Mute Input Off L/R Left Type Digital Channel B	wM40006*0AU\x0D
Audio Mute Input Off L/R Right Type Analog Channel A	wM40001*0AU\x0D
Audio Mute Input Off L/R Right Type Analog Channel B	wM40005*0AU\x0D
Audio Mute Input Off L/R Right Type Digital Channel A	wM40003*0AU\x0D

Global Scripter Module Communication Sheet

Audio Mute Input Off L/R Right Type Digital Channel B	wM40007*0AU\x0D
Audio Mute Input On L/R Left Type Analog Channel A	wM40000*1AU\x0D
Audio Mute Input On L/R Left Type Analog Channel B	wM40004*1AU\x0D
Audio Mute Input On L/R Left Type Digital Channel A	wM40002*1AU\x0D
Audio Mute Input On L/R Left Type Digital Channel B	wM40006*1AU\x0D
Audio Mute Input On L/R Right Type Analog Channel A	wM40001*1AU\x0D
Audio Mute Input On L/R Right Type Analog Channel B	wM40005*1AU\x0D
Audio Mute Input On L/R Right Type Digital Channel A	wM40003*1AU\x0D
Audio Mute Input On L/R Right Type Digital Channel B	wM40007*1AU\x0D
Audio Mute Output Off L/R Left	wM60000*0AU\x0D
Audio Mute Output Off L/R Right	wM60001*0AU\x0D
Audio Mute Output On L/R Left	wM60000*1AU\x0D
Audio Mute Output On L/R Right	wM60001*1AU\x0D
Audio Only Recording Disable	wA1*0RCDR\x0D
Audio Only Recording Enable	wA1*1RCDR\x0D
Auto Image None Channel A	1A\x0D
Auto Image None Channel B	2A\x0D
Background Image Command Disable	w0RF\x0D
Background Image Command Enable	wFilenameRF\x0D
Bitrate Control CBR Stream Archive A	w1*2BRCT\x0D
Bitrate Control CBR Stream Archive B	w2*2BRCT\x0D
Bitrate Control CBR Stream Confidence A	w3*2BRCT\x0D
Bitrate Control CVBR Stream Archive A	w1*1BRCT\x0D
Bitrate Control CVBR Stream Archive B	w2*1BRCT\x0D
Bitrate Control CVBR Stream Confidence A	w3*1BRCT\x0D
Bitrate Control VBR Stream Archive A	w1*0BRCT\x0D
Bitrate Control VBR Stream Archive B	w2*0BRCT\x0D
Bitrate Control VBR Stream Confidence A	w3*0BRCT\x0D
Chapter Marker None	wBRCDR\x0D
Clear Active Alarms None	wCALRM\x0D
Delayed Recording Duration 5	wP5RCDR\x0D
Delayed Recording Duration 60	wP60RCDR\x0D
Eject USB Storage All	w0USBE\x0D
Eject USB Storage USB Front	w2USBE\x0D
Eject USB Storage USB RCP	w4USBE\x0D
Eject USB Storage USB Rear	w3USBE\x0D
Encoder Composite	w1*0ENCM\x0D
Encoder Dual	w1*1ENCM\x0D

Global Scripter Module Communication Sheet

Executive Mode Complete Lock Out	1X
Executive Mode Menu Lock Out	2X
Executive Mode Off	0X
Executive Mode Recording Control Only	3X
GOP Length 1 Stream Archive A	w1*1GOPL\x0D
GOP Length 1 Stream Archive B	w2*1GOPL\x0D
GOP Length 1 Stream Confidence A	w3*1GOPL\x0D
GOP Length 300 Stream Archive A	w1*300GOPL\x0D
GOP Length 300 Stream Archive B	w2*300GOPL\x0D
GOP Length 300 Stream Confidence A	w3*300GOPL\x0D
HDMI Audio Mute Off	99*0Z\x0D
HDMI Audio Mute On	99*1Z\x0D
HDMI Video Mute Off	99*0B\x0D
HDMI Video Mute On	99*1B\x0D
Horizontal Video Mirroring Off Input 1	wI1*0ROTA\x0D
Horizontal Video Mirroring Off Input 4	wI4*0ROTA\x0D
Horizontal Video Mirroring Off Input 5	wI5*0ROTA\x0D
Horizontal Video Mirroring On Input 1	wI1*4ROTA\x0D
Horizontal Video Mirroring On Input 4	wI4*4ROTA\x0D
Horizontal Video Mirroring On Input 5	wI5*4ROTA\x0D
Input 3 Format Composite	3*3\
Input 3 Format YUVi	3*2\
Input 3 Format YUVp/HDTV	3*1\
Input A 1	1*1!\x0D
Input A 2	2*1!\x0D
Input B 3	3*2!\x0D
Input B 4	4*2!\x0D
Input B 5	5*2!\x0D
Metadata Contributor	wM0*MetaStringRCDR\x0D
Metadata Course	wM16*MetaStringRCDR\x0D
Metadata Coverage	wM1*MetaStringRCDR\x0D
Metadata Description	wM4*MetaStringRCDR\x0D
Metadata Format	wM5*MetaStringRCDR\x0D
Metadata Language	wM7*MetaStringRCDR\x0D
Metadata Presenter	wM2*MetaStringRCDR\x0D
Metadata Publisher	wM8*MetaStringRCDR\x0D
Metadata Relation	wM9*MetaStringRCDR\x0D
Metadata Rights	wM10*MetaStringRCDR\x0D
Metadata Source	wM11*MetaStringRCDR\x0D
Metadata Subject	wM12*MetaStringRCDR\x0D
Metadata System Name	wM15*MetaStringRCDR\x0D
Metadata Title	wM13*MetaStringRCDR\x0D
Metadata Type	wM14*MetaStringRCDR\x0D
RCP 101 Executive Mode Off	99*0X\x0D

Global Scripter Module Communication Sheet

RCP 101 Executive Mode On	99*1X\x0D
Recall Encoder Preset 1 Stream Archive A	4*1*1.
Recall Encoder Preset 1 Stream Archive B	4*2*1.
Recall Encoder Preset 1 Stream Confidence A	4*3*1.
Recall Encoder Preset 32 Stream Archive A	4*1*32.
Recall Encoder Preset 32 Stream Archive B	4*2*32.
Recall Encoder Preset 32 Stream Confidence A	4*3*32.
Recall Layout Confidence Dual 1	9*3*1.
Recall Layout Confidence Dual 10	9*3*10.
Recall Layout Preset 1 Inputs With Inputs	7*1.
Recall Layout Preset 1 Inputs Without Inputs	8*1.
Recall Layout Preset 16 Inputs With Inputs	7*16.
Recall Layout Preset 16 Inputs Without Inputs	8*16.
Recall Recording Profile 1	wR5*1PRST\x0D
Recall Recording Profile 32	wR5*32PRST\x0D
Recall Streaming Preset 1 Stream Archive A	3*1*1.
Recall Streaming Preset 1 Stream Archive B	3*2*1.
Recall Streaming Preset 1 Stream Confidence A	3*3*1.
Recall Streaming Preset 32 Stream Archive A	3*1*32.
Recall Streaming Preset 32 Stream Archive B	3*2*32.
Recall Streaming Preset 32 Stream Confidence A	3*3*32.
Recall User Preset 1 Channel A	1*1*1.
Recall User Preset 1 Channel B	1*2*1.
Recall User Preset 16 Channel A	1*1*16.
Recall User Preset 16 Channel B	1*2*16.
Record Control Disable	wX1*0RCDR\x0D
Record Control Enable	wX1*1RCDR\x0D
Record Control Enable Dual	wX1*2RCDR\x0D
Record Destination Auto	wD0RCDR\x0D
Record Destination Internal	wD1RCDR\x0D
Record Destination Internal + Auto	wD11RCDR\x0D
Record Destination Internal + USB Front	wD12RCDR\x0D
Record Destination Internal + USB RCP	wD14RCDR\x0D
Record Destination Internal + USB Rear	wD13RCDR\x0D
Record Destination USB (Front)	wD2RCDR\x0D
Record Destination USB (Rear)	wD3RCDR\x0D
Record Dual Control Off	wX2*0RCDR\x0D
Record Dual Control On	wX2*1RCDR\x0D
Record Extend 1	wE1RCDR\x0D
Record Extend 60	wE60RCDR\x0D
Record Pause	wY2RCDR\x0D
Record Resolution 1024x768 Stream Archive A	w1*5VRES\x0D
Record Resolution 1024x768 Stream Archive B	w2*5VRES\x0D
Record Resolution 1024x768 Stream Confidence A	w3*5VRES\x0D

Global Scriptor Module Communication Sheet

Record Resolution 1080p Stream Archive A	w1*3VRES\x0D
Record Resolution 1080p Stream Archive B	w2*3VRES\x0D
Record Resolution 1080p Stream Confidence A	w3*3VRES\x0D
Record Resolution 1280x1024 Stream Archive A	w1*6VRES\x0D
Record Resolution 1280x1024 Stream Archive B	w2*6VRES\x0D
Record Resolution 1280x1024 Stream Confidence A	w3*6VRES\x0D
Record Resolution 480p Stream Archive A	w1*1VRES\x0D
Record Resolution 480p Stream Archive B	w2*1VRES\x0D
Record Resolution 480p Stream Confidence A	w3*1VRES\x0D
Record Resolution 512x288 Stream Archive A	w1*4VRES\x0D
Record Resolution 512x288 Stream Archive B	w2*4VRES\x0D
Record Resolution 512x288 Stream Confidence A	w3*4VRES\x0D
Record Resolution 720p Stream Archive A	w1*2VRES\x0D
Record Resolution 720p Stream Archive B	w2*2VRES\x0D
Record Resolution 720p Stream Confidence A	w3*2VRES\x0D
Record Resolution Custom Stream Archive A	w1*99VRES\x0D
Record Resolution Custom Stream Archive B	w2*99VRES\x0D
Record Resolution Custom Stream Confidence A	w3*99VRES\x0D
Record Start	wY1RCDR\x0D
Record Stop	wY0RCDR\x0D
Recording Mode Audio and Video	w1*1SMOD\x0D
Recording Mode Video Only	w1*2SMOD\x0D
Recording Video Frame Rate 10 fps Stream Archive A	w1*7VFRM\x0D
Recording Video Frame Rate 10 fps Stream Archive B	w2*7VFRM\x0D
Recording Video Frame Rate 10 fps Stream Confidence A	w3*7VFRM\x0D
Recording Video Frame Rate 12 fps Stream Archive A	w1*6VFRM\x0D
Recording Video Frame Rate 12 fps Stream Archive B	w2*6VFRM\x0D
Recording Video Frame Rate 12 fps Stream Confidence A	w3*6VFRM\x0D
Recording Video Frame Rate 12.5 fps Stream Archive A	w1*5VFRM\x0D
Recording Video Frame Rate 12.5 fps Stream Archive B	w2*5VFRM\x0D
Recording Video Frame Rate 12.5 fps Stream Confidence A	w3*5VFRM\x0D
Recording Video Frame Rate 15 fps Stream Archive A	w1*4VFRM\x0D
Recording Video Frame Rate 15 fps Stream Archive B	w2*4VFRM\x0D
Recording Video Frame Rate 15 fps Stream Confidence A	w3*4VFRM\x0D
Recording Video Frame Rate 24 fps Stream Archive A	w1*3VFRM\x0D
Recording Video Frame Rate 24 fps Stream Archive B	w2*3VFRM\x0D
Recording Video Frame Rate 24 fps Stream Confidence A	w3*3VFRM\x0D
Recording Video Frame Rate 25 fps Stream Archive A	w1*2VFRM\x0D

Global Scriptor Module Communication Sheet

Recording Video Frame Rate 25 fps Stream Archive B	w2*2VFRM\x0D
Recording Video Frame Rate 25 fps Stream Confidence A	w3*2VFRM\x0D
Recording Video Frame Rate 30 fps Stream Archive A	w1*1VFRM\x0D
Recording Video Frame Rate 30 fps Stream Archive B	w2*1VFRM\x0D
Recording Video Frame Rate 30 fps Stream Confidence A	w3*1VFRM\x0D
Recording Video Frame Rate 5 fps Stream Archive A	w1*8VFRM\x0D
Recording Video Frame Rate 5 fps Stream Archive B	w2*8VFRM\x0D
Recording Video Frame Rate 5 fps Stream Confidence A	w3*8VFRM\x0D
RTMP Backup URL Command None Stream Archive A	wU2*1*RTMPStringRTMPKeyRTMP\x0D
RTMP Backup URL Command None Stream Archive B	wU2*2*RTMPStringRTMPKeyRTMP\x0D
RTMP Backup URL Command None Stream Confidence A	wU2*3*RTMPStringRTMPKeyRTMP\x0D
RTMP Primary URL Command None Stream Archive A	wU1*1*RTMPStringRTMPKeyRTMP\x0D
RTMP Primary URL Command None Stream Archive B	wU1*2*RTMPStringRTMPKeyRTMP\x0D
RTMP Primary URL Command None Stream Confidence A	wU1*3*RTMPStringRTMPKeyRTMP\x0D
RTMP Stream Disable Stream Archive A	wE1*0RTMP\x0D
RTMP Stream Disable Stream Archive B	wE2*0RTMP\x0D
RTMP Stream Disable Stream Confidence A	wE3*0RTMP\x0D
RTMP Stream Enable Stream Archive A	wE1*1RTMP\x0D
RTMP Stream Enable Stream Archive B	wE2*1RTMP\x0D
RTMP Stream Enable Stream Confidence A	wE3*1RTMP\x0D
SMP Recording Folder Share Disable	wE1*0SHRF\x0D
SMP Recording Folder Share Enable	wE1*1SHRF\x0D
Stream Control Disable Stream Archive A	w1*0STRC\x0D
Stream Control Disable Stream Archive B	w2*0STRC\x0D
Stream Control Disable Stream Confidence A	w3*0STRC\x0D
Stream Control Enable Stream Archive A	w1*1STRC\x0D
Stream Control Enable Stream Archive B	w2*1STRC\x0D
Stream Control Enable Stream Confidence A	w3*1STRC\x0D
Swap Windows None	%
Thumbnail Size Archived Resolution	wT1RCDR\x0D
Thumbnail Size Default	wT0RCDR\x0D
Video Bitrate 10000 Stream Archive A	wV1*10000BITR\x0D
Video Bitrate 10000 Stream Archive B	wV2*10000BITR\x0D
Video Bitrate 10000 Stream Confidence A	wV3*10000BITR\x0D
Video Bitrate 200 Stream Archive A	wV1*200BITR\x0D
Video Bitrate 200 Stream Archive B	wV2*200BITR\x0D
Video Bitrate 200 Stream Confidence A	wV3*200BITR\x0D
Video Mute Off Channel A	1*0B

Global Scripter Module Communication Sheet

Video Mute Off Channel B	2*0B
Video Mute On Channel A	1*1B
Video Mute On Channel B	2*1B

Appendix B. Update Commands

Alarm Alarm Audio Loss	39i
Alarm Alarm Authentication Failures	39i
Alarm Alarm CPU Usage	39i
Alarm Alarm Disk Error	39i
Alarm Alarm Disk Space	39i
Alarm Alarm Firmware Failure	39i
Alarm Alarm HDCP Video	39i
Alarm Alarm NTP Sync	39i
Alarm Alarm Record Halt	39i
Alarm Alarm Schedule Server	39i
Alarm Alarm Temperature Internal	39i
Alarm Alarm USB Front Overcurrent	39i
Alarm Alarm USB Keyboard Overcurrent	39i
Alarm Alarm USB Mouse Overcurrent	39i
Alarm Alarm USB Rear Overcurrent	39i
Alarm Alarm Video Loss	39i
Alarm Severity Alarm Audio Loss	39i
Alarm Severity Alarm Authentication Failures	39i
Alarm Severity Alarm CPU Usage	39i
Alarm Severity Alarm Disk Error	39i
Alarm Severity Alarm Disk Space	39i
Alarm Severity Alarm Firmware Failure	39i
Alarm Severity Alarm HDCP Video	39i
Alarm Severity Alarm NTP Sync	39i
Alarm Severity Alarm Record Halt	39i
Alarm Severity Alarm Schedule Server	39i
Alarm Severity Alarm Temperature Internal	39i
Alarm Severity Alarm USB Front Overcurrent	39i
Alarm Severity Alarm USB Keyboard Overcurrent	39i
Alarm Severity Alarm USB Mouse Overcurrent	39i
Alarm Severity Alarm USB Rear Overcurrent	39i
Alarm Severity Alarm Video Loss	39i
Aspect Ratio Input 1	w1ASPR\x0D
Aspect Ratio Input 4	w4ASPR\x0D
Aspect Ratio Input 5	w5ASPR\x0D
Audio Bitrate	wA1BITR\x0D
Audio Input Gain Type Analog Channel A (L)	wG40000AU\x0D
Audio Input Gain Type Analog Channel A (R)	wG40001AU\x0D
Audio Input Gain Type Analog Channel B (L)	wG40004AU\x0D
Audio Input Gain Type Analog Channel B (R)	wG40005AU\x0D
Audio Input Gain Type Digital Channel A (L)	wG40002AU\x0D
Audio Input Gain Type Digital Channel A (R)	wG40003AU\x0D

Global Scriptor Module Communication Sheet

Audio Input Gain Type Digital Channel B (L)	wG40006AU\x0D
Audio Input Gain Type Digital Channel B (R)	wG40007AU\x0D
Audio Level L/R Left	34i
Audio Level L/R Right	34i
Audio Mute Input L/R Left Type Analog Channel A	wM40000AU\x0D
Audio Mute Input L/R Left Type Analog Channel B	wM40004AU\x0D
Audio Mute Input L/R Left Type Digital Channel A	wM40002AU\x0D
Audio Mute Input L/R Left Type Digital Channel B	wM40006AU\x0D
Audio Mute Input L/R Right Type Analog Channel A	wM40001AU\x0D
Audio Mute Input L/R Right Type Analog Channel B	wM40005AU\x0D
Audio Mute Input L/R Right Type Digital Channel A	wM40003AU\x0D
Audio Mute Input L/R Right Type Digital Channel B	wM40007AU\x0D
Audio Mute Output L/R Left	wM60000AU\x0D
Audio Mute Output L/R Right	wM60001AU\x0D
Audio Only Recording	wA1RCDR\x0D
Backup RTMP Status Stream Archive A	wS2*1RTMP\x0D
Backup RTMP Status Stream Archive B	wS2*2RTMP\x0D
Backup RTMP Status Stream Confidence A	wS2*3RTMP\x0D
Bitrate Control Stream Archive A	w1BRCT\x0D
Bitrate Control Stream Archive B	w2BRCT\x0D
Bitrate Control Stream Confidence A	w3BRCT\x0D
CPU Usage	11i
Current Recording Duration	35i
Delayed Recording Duration	wPRCDR\x0D
Encoder	w1ENCM\x0D
Executive Mode	X
File Destination Drive Primary	I
File Destination Drive Secondary	I
FTP Upload Destination	38i
GOP Length Stream Archive A	w1GOPL\x0D
GOP Length Stream Archive B	w2GOPL\x0D
GOP Length Stream Confidence A	w3GOPL\x0D
HDCP Input Status Input 1	wI1HDCP\x0D
HDCP Input Status Input 2	wI1HDCP\x0D
HDCP Input Status Input 4	wI1HDCP\x0D
HDMI Audio Mute	99Z
HDMI Video Mute	99B
Horizontal Video Mirroring Input 1	wI1ROTA\x0D
Horizontal Video Mirroring Input 4	wI4ROTA\x0D
Horizontal Video Mirroring Input 5	wI5ROTA\x0D
Input 3 Format	3\
Input Status	32I
Layout Preset Status	49I
Metadata Status Type Contributor	wM0RCDR\x0D

Global Scripter Module Communication Sheet

Metadata Status Type Course	wM16RCDR\x0D
Metadata Status Type Coverage	wM1RCDR\x0D
Metadata Status Type Date	wM3RCDR\x0D
Metadata Status Type Description	wM4RCDR\x0D
Metadata Status Type Format	wM5RCDR\x0D
Metadata Status Type Identifier	wM6RCDR\x0D
Metadata Status Type Language	wM7RCDR\x0D
Metadata Status Type Presenter	wM2RCDR\x0D
Metadata Status Type Publisher	wM8RCDR\x0D
Metadata Status Type Relation	wM9RCDR\x0D
Metadata Status Type Rights	wM10RCDR\x0D
Metadata Status Type Source	wM11RCDR\x0D
Metadata Status Type Subject	wM12RCDR\x0D
Metadata Status Type System Name	wM15RCDR\x0D
Metadata Status Type Title	wM13RCDR\x0D
Metadata Status Type Type	wM14RCDR\x0D
Primary RTMP Status Stream Archive A	wS1*1RTMP\x0D
Primary RTMP Status Stream Archive B	wS1*2RTMP\x0D
Primary RTMP Status Stream Confidence A	wS1*3RTMP\x0D
RCP 101 Executive Mode	99*X\x0D
Recall Recording Profile	wL5PRST\x0D
Record	wYRCDR\x0D
Record Control	wX1RCDR\x0D
Record Destination	wDRCDR\x0D
Record Dual Control	wX2RCDR\x0D
Record Resolution Stream Archive A	w1VRES\x0D
Record Resolution Stream Archive B	w2VRES\x0D
Record Resolution Stream Confidence A	w3VRES\x0D
Recording Mode	w1SMOD\x0D
Recording Video Frame Rate Stream Archive A	w1VFRM\x0D
Recording Video Frame Rate Stream Archive B	w2VFRM\x0D
Recording Video Frame Rate Stream Confidence A	w3VFRM\x0D
Remaining Free Disk Space Drive Primary Unit GB	I
Remaining Free Disk Space Drive Primary Unit MB	I
Remaining Free Disk Space Drive Secondary Unit GB	I
Remaining Free Disk Space Drive Secondary Unit MB	I
Remaining Front USB Storage Unit GB	56I
Remaining Front USB Storage Unit MB	56I
Remaining Internal Storage Unit GB	55I
Remaining Internal Storage Unit MB	55I
Remaining Rear RCP USB Storage Unit GB	58I
Remaining Rear RCP USB Storage Unit MB	58I
Remaining Rear USB Storage Unit GB	57I
Remaining Rear USB Storage Unit MB	57I

Global Scriptor Module Communication Sheet

Remaining Recording Time Drive Primary	36i
Remaining Recording Time Drive Secondary	36i
RTMP Backup URL Status Stream Archive A	wU2*1RTMP\x0D
RTMP Backup URL Status Stream Archive B	wU2*2RTMP\x0D
RTMP Backup URL Status Stream Confidence A	wU2*3RTMP\x0D
RTMP Primary URL Status Stream Archive A	wU1*1RTMP\x0D
RTMP Primary URL Status Stream Archive B	wU1*2RTMP\x0D
RTMP Primary URL Status Stream Confidence A	wU1*3RTMP\x0D
RTMP Stream Stream Archive A	wE1RTMP\x0D
RTMP Stream Stream Archive B	wE2RTMP\x0D
RTMP Stream Stream Confidence A	wE3RTMP\x0D
RTSP Stream URL Stream Archive A	wCi\x0DwN1STRC\x0D
RTSP Stream URL Stream Archive B	wCi\x0DwN2STRC\x0D
RTSP Stream URL Stream Confidence A	wCi\x0DwN3STRC\x0D
SMP Recording Folder Share	wE1SHRF\x0D
Stream Control Stream Archive A	w1STRC\x0D
Stream Control Stream Archive B	w2STRC\x0D
Stream Control Stream Confidence A	w3STRC\x0D
Streaming Presets Name Preset 1	w3*1PNAM\x0D
Streaming Presets Name Preset 32	w3*32PNAM\x0D
Thumbnail Size	wTRCDR\x0D
Video Bitrate Stream Archive A	wV1BITR\x0D
Video Bitrate Stream Archive B	wV2BITR\x0D
Video Bitrate Stream Confidence A	wV3BITR\x0D
Video Mute Channel A	1B
Video Mute Channel B	2B