

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Document Camera
Manufacturer: HoverCam
Firmware Version: V1.03.767
Model(s): Ultra 8

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.00.0000-b022	2.0.0.820

Version History

Module Version	Date	Notes
1_1_0_0	10/12/2018	Initial Version

Module Notes

- Status is not available.

Supported Classes and Examples

SerialClass
InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='Ultra 8')
SerialOverEthernetClass
InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='Ultra 8')

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command	Value	Value	Value
AutoFocus	'Lock'	'Enable'	
# AutoFocus example InterfaceName.Set('AutoFocus', 'Lock')			
Command	Value	Value	Value
HDMIOutput	'Original'	'1280x720'	'1920x1080'
# HDMIOutput example InterfaceName.Set('HDMIOutput', 'Original')			
Command	Value	Value	Value
ImageRotation	'Toggle'	'0'	'180'
# ImageRotation example InterfaceName.Set('ImageRotation', 'Toggle')			
Command	Value	Value	
Pan	'Up'	'Down'	
# Pan example InterfaceName.Set('Pan', 'Up')			
Command	Value		
PanPosition	-100 to 100 in steps of 1		
# PanPosition example InterfaceName.Set('PanPosition', 100)			
Command	Value	Value	
Power	'On'	'Off'	
# Power example InterfaceName.Set('Power', 'On')			
Command	Value	Value	
Tilt	'Up'	'Down'	
# Tilt example InterfaceName.Set('Tilt', 'Up')			
Command	Value		
TiltPosition	-100 to 100 in steps of 1		
# TiltPosition example InterfaceName.Set('TiltPosition', 100)			
Command	Value		
USBOutput	None		
# USBOutput example			

InterfaceName.Set('USBOutput', None)			
Command VGAOutput	Value 'Original' '1024x768'	Value '640x480'	Value '800x600'
# VGAOutput example InterfaceName.Set('VGAOutput', 'Original')			
Command Zoom	Value 'In'	Value 'Out'	
# Zoom example InterfaceName.Set('Zoom', 'In')			
Command ZoomPosition	Value 0 to 100 in steps of 1		
# ZoomPosition example InterfaceName.Set('ZoomPosition', 100)			

Cable and Adapter Requirements

Captive Screw to Male Mini 8-Pin Din RS232 cable

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 9600


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

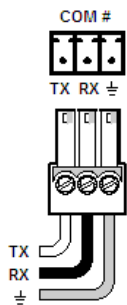

Signal	Main Cable	Pin	Signal
TxD	→	7	RxD
RxD	←	1	TxD
GND	→	4	GND

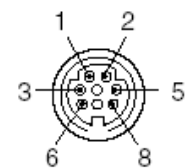

Mini 8 Pin DIN, Female
Camera

Appendix A. Set Commands

Auto Focus Enable	\x02AFLOCK\x03
Auto Focus Lock	\x02AFEN\x03
HDMI Output 1280x720	\x02HDMI1\x03
HDMI Output 1920x1080	\x02HDMI2\x03
HDMI Output Original	\x02HDMI\x03
Image Rotation 0	\x02ROT0\x03
Image Rotation 180	\x02ROT1\x03
Image Rotation Toggle	\x02ROT\x03
Pan Down	\x02PAN-\x03
Pan Position 100	\x02PAN100\x03
Pan Position -100	\x02PAN-100\x03
Pan Up	\x02PAN+\x03
Power Off	\x02POFF\x03
Power On	\x02PON\x03
Tilt Down	\x02TILT-\x03
Tilt Position 100	\x02TILT100\x03
Tilt Position -100	\x02TILT-100\x03
Tilt Up	\x02TILT+\x03
USB Output None	\x02USB\x03
VGA Output 1024x768	\x02VGA3\x03
VGA Output 640x480	\x02VGA1\x03
VGA Output 800x600	\x02VGA2\x03
VGA Output Original	\x02VGA\x03
Zoom In	\x02ZOOM+\x03
Zoom Out	\x02ZOOM-\x03
Zoom Position 0	\x02ZOOM0\x03
Zoom Position 100	\x02ZOOM100\x03