

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Video Projector
Manufacturer: Sony
Firmware Version: N/A
Model(s): VPL-FHZ700, VPL-FHZ700L

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
2.06.0000-b010	1.4.1

Version History

Module Version	Date	Notes
1_0_6_0	11/07/2017	Added Input E.
1_0_5_2	9/13/2017	Added model on Comm Sheet.
1_0_5_1	9/5/2017	Updated status example.
1_0_5_0	8/8/2017	Fixed status
1_0_4_0	4/27/2016	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='VPL-FHZ700L')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='VPL-FHZ700L')</code>
EthernetClass
<code>InterfaceName = ModuleName.EthernetClass('192.168.254.254', 53484, Model='VPL-FHZ700L')</code>

Set Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command AspectRatio	Value 'Full' 'Normal' 'Zoom'	Value 'Full 1' '4:3'	Value 'Full 2' '16:9'
# AspectRatio example InterfaceName.Set('AspectRatio', 'Full')			
Command AudioMute	Value 'On'	Value 'Off'	
# AudioMute example InterfaceName.Set('AudioMute', 'On')			
Command AutoImage	Value None		
# AutoImage example InterfaceName.Set('AutoImage', None)			
Command ClosedCaption	Value 'Off' 'CC3' 'Text2'	Value 'CC1' 'CC4' 'Text3'	Value 'CC2' 'Text1' 'Text4'
# ClosedCaption example InterfaceName.Set('ClosedCaption', 'Off')			
Command Freeze	Value None		
# Freeze example InterfaceName.Set('Freeze', None)			
Command Input	Value 'Video' 'Input B' 'Input E'	Value 'S-Video' 'Input C'	Value 'Input A' 'Input D'
# Input example InterfaceName.Set('Input', 'Video')			
Command LampLightMode	Value 'Auto'	Value 'Standard'	Value 'High'
# LampLightMode example InterfaceName.Set('LampLightMode', 'Auto')			

Global Scripter Module Communication Sheet

Command MenuNavigation	Value 'Left' 'Down'	Value 'Right' 'Menu'	Value 'Up' 'Enter'
# MenuNavigation example InterfaceName.Set('MenuNavigation', 'Left')			
Command PictureMode	Value 'Dynamic'	Value 'Standard'	Value 'Presentation'
# PictureMode example InterfaceName.Set('PictureMode', 'Dynamic')			
Command Power	Value 'On'	Value 'Off'	
# Power example InterfaceName.Set('Power', 'On')			
Command VideoMute	Value 'On'	Value 'Off'	
# VideoMute example InterfaceName.Set('VideoMute', 'On')			

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command AspectRatio	Value 'Full' 'Normal' 'Zoom'	Value 'Full 1' '4:3'	Value 'Full 2' '16:9'
# AspectRatio examples InterfaceName.Update('AspectRatio') Value = InterfaceName.ReadStatus('AspectRatio') InterfaceName.SubscribeStatus('AspectRatio', None, FeedbackHandler)			
Command AudioMute	Value 'On'	Value 'Off'	
# AudioMute examples InterfaceName.Update('AudioMute') Value = InterfaceName.ReadStatus('AudioMute') InterfaceName.SubscribeStatus('AudioMute', None, FeedbackHandler)			
Command ClosedCaption	Value 'Off' 'CC3' 'Text2'	Value 'CC1' 'CC4' 'Text3'	Value 'CC2' 'Text1' 'Text4'
# ClosedCaption examples InterfaceName.Update('ClosedCaption') Value = InterfaceName.ReadStatus('ClosedCaption') InterfaceName.SubscribeStatus('ClosedCaption', None, FeedbackHandler)			
Command ConnectionStatus	Value 'Connected'	Value 'Disconnected'	
# ConnectionStatus examples Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command	Value	Value	Value

Global Scripter Module Communication Sheet

DeviceStatus	'Normal'	'Lamp Error'	'Fan Error'
	'Cover Error'	'Temp Error'	'D5V Error'
	'Power Error'	'Warning Error'	'NVM Data Error'
# DeviceStatus examples InterfaceName.Update('DeviceStatus') Value = InterfaceName.ReadStatus('DeviceStatus') InterfaceName.SubscribeStatus('DeviceStatus', None, FeedbackHandler)			
Command Input	Value 'Video' 'Input B' 'Input E'	Value 'S-Video' 'Input C'	Value 'Input A' 'Input D'
# Input examples InterfaceName.Update('Input') Value = InterfaceName.ReadStatus('Input') InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)			
Command LampLightMode	Value 'Auto'	Value 'Standard'	Value 'High'
# LampLightMode examples InterfaceName.Update('LampLightMode') Value = InterfaceName.ReadStatus('LampLightMode') InterfaceName.SubscribeStatus('LampLightMode', None, FeedbackHandler)			
Command LampUsage	Value Hours		
# LampUsage examples InterfaceName.Update('LampUsage') Value = InterfaceName.ReadStatus('LampUsage') InterfaceName.SubscribeStatus('LampUsage', None, FeedbackHandler)			
Command PictureMode	Value 'Dynamic'	Value 'Standard'	Value 'Presentation'
# PictureMode examples InterfaceName.Update('PictureMode') Value = InterfaceName.ReadStatus('PictureMode') InterfaceName.SubscribeStatus('PictureMode', None, FeedbackHandler)			
Command Power	Value 'On' 'Cooling Down'	Value 'Off'	Value 'Warming Up'
# Power examples InterfaceName.Update('Power') Value = InterfaceName.ReadStatus('Power') InterfaceName.SubscribeStatus('Power', None, FeedbackHandler)			
Command VideoMute	Value 'On'	Value 'Off'	
# VideoMute examples InterfaceName.Update('VideoMute')			

```
Value = InterfaceName.ReadStatus('VideoMute')  
InterfaceName.SubscribeStatus('VideoMute', None, FeedbackHandler)
```

Cable and Adapter Requirements

Captive Screw to Male DB9 RS-232 Serial Cable

Notes for the Device

The Baud rate setting is able to be changed in the menu of service mode: Device → Other → 232C (38400 = 0, 19200 = 1 and for 9600 = 2.

Serial communication

Port Type: RS-232

Baud Rate: 38400


Data Bits: 8

Parity: Even


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

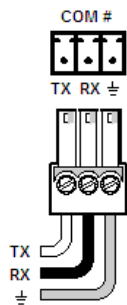

Signal	Main Cable	Pin	Signal
TxD	→	2	RxD
RxD	←	3	TxD
GND	→	5	GND

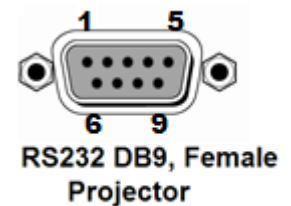

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scriptor ethernet interface

Port Type:	Ethernet
Default Port:	53484
Logon Credentials Supported:	No
Multi-Connection Capabilities:	Undetermined
Port Changeability:	Yes

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

Appendix A. Set Commands (Serial)

Aspect Ratio 16:9	\xA9\x00 \x00\x00\x0A*\xA9
Aspect Ratio 4:3	\xA9\x00 \x00\x00\x09)\xA9
Aspect Ratio Full	\xA9\x00 \x00\x00\x00 \xA9
Aspect Ratio Full 1	\xA9\x00 \x00\x00\x07'\xA9
Aspect Ratio Full 2	\xA9\x00 \x00\x00\x08(\xA9
Aspect Ratio Normal	\xA9\x00 \x00\x00\x01!\xA9
Aspect Ratio Zoom	\xA9\x00 \x00\x00\x03#\xA9
Audio Mute Off	\xA9\x001\x00\x00\x001\xA9
Audio Mute On	\xA9\x001\x00\x00\x011\xA9
Auto Image None	\xA9\x17{\x00\x00\x00\x7F\xA9
Closed Caption CC1	\xA9\x00>\x00\x00\x01?\xA9
Closed Caption CC2	\xA9\x00>\x00\x00\x02>\xA9
Closed Caption CC3	\xA9\x00>\x00\x00\x03?\xA9
Closed Caption CC4	\xA9\x00>\x00\x00\x04>\xA9
Closed Caption Off	\xA9\x00>\x00\x00\x00>\xA9
Closed Caption Text1	\xA9\x00>\x00\x00\x05?\xA9
Closed Caption Text2	\xA9\x00>\x00\x00\x06>\xA9
Closed Caption Text3	\xA9\x00>\x00\x00\x07?\xA9
Closed Caption Text4	\xA9\x00>\x00\x00\x08>\xA9
Freeze None	\xA9\x19g\x00\x00\x00\x7F\xA9
Input Input A	\xA9\x00\x01\x00\x00\x02\x03\xA9
Input Input B	\xA9\x00\x01\x00\x00\x03\x03\xA9
Input Input C	\xA9\x00\x01\x00\x00\x04\x05\xA9
Input Input D	\xA9\x00\x01\x00\x00\x05\x05\xA9
Input Input E	\xA9\x00\x01\x00\x00\x06\x07\xA9
Input S-Video	\xA9\x00\x01\x00\x00\x01\x01\xA9
Input Video	\xA9\x00\x01\x00\x00\x00\x01\xA9
Lamp Light Mode Auto	\xA9\x00@\x00\x00\x03C\xA9
Lamp Light Mode High	\xA9\x00@\x00\x00\x00@\xA9
Lamp Light Mode Standard	\xA9\x00@\x00\x00\x01A\xA9
Menu Navigation Down	\xA9\x176\x00\x00\x007\xA9
Menu Navigation Enter	\xA9\x17Z\x00\x00\x00?\xA9
Menu Navigation Left	\xA9\x174\x00\x00\x007\xA9
Menu Navigation Menu	\xA9\x17)\x00\x00\x00?\xA9
Menu Navigation Right	\xA9\x173\x00\x00\x007\xA9
Menu Navigation Up	\xA9\x175\x00\x00\x007\xA9
Picture Mode Dynamic	\xA9\x00\x02\x00\x00\x00\x02\xA9
Picture Mode Presentation	\xA9\x00\x02\x00\x00\x02\x02\xA9
Picture Mode Standard	\xA9\x00\x02\x00\x00\x01\x03\xA9
Power Off	\xA9\x17/\x00\x00\x00?\xA9
Power On	\xA9\x17.\x00\x00\x00?\xA9
Video Mute Off	\xA9\x000\x00\x00\x000\xA9

Video Mute On	\xA9\x00\x00\x00\x011\x9A
---------------	---------------------------

Appendix B. Query Commands (Serial)

Aspect Ratio	\xA9\x00 \x01\x00\x00!\x9A
Audio Mute	\xA9\x001\x01\x00\x001\x9A
Closed Caption	\xA9\x00>\x01\x00\x00?\x9A
Device Status	\xA9\x01\x01\x01\x00\x00\x01\x9A
Input	\xA9\x00\x01\x01\x00\x00\x01\x9A
Lamp Light Mode	\xA9\x00@\x01\x00\x00A\x9A
Lamp Usage	\xA9\x01\x13\x01\x00\x00\x13\x9A
Picture Mode	\xA9\x00\x02\x01\x00\x00\x03\x9A
Power	\xA9\x01\x02\x01\x00\x00\x03\x9A
Video Mute	\xA9\x000\x01\x00\x001\x9A

Appendix C. Set Commands (Ethernet)

Aspect Ratio 16:9	\x02\x0ASONY\x00\x00 \x02\x00\x0A
Aspect Ratio 4:3	\x02\x0ASONY\x00\x00 \x02\x00\x09
Aspect Ratio Full	\x02\x0ASONY\x00\x00 \x02\x00\x00
Aspect Ratio Full 1	\x02\x0ASONY\x00\x00 \x02\x00\x07
Aspect Ratio Full 2	\x02\x0ASONY\x00\x00 \x02\x00\x08
Aspect Ratio Normal	\x02\x0ASONY\x00\x00 \x02\x00\x01
Aspect Ratio Zoom	\x02\x0ASONY\x00\x00 \x02\x00\x03
Audio Mute Off	\x02\x0ASONY\x00\x001\x02\x00\x00
Audio Mute On	\x02\x0ASONY\x00\x001\x02\x00\x01
Auto Image None	\x02\x0ASONY\x00\x17{\x02\x00\x00
Closed Caption CC1	\x02\x0ASONY\x00\x00>\x02\x00\x01
Closed Caption CC2	\x02\x0ASONY\x00\x00>\x02\x00\x02
Closed Caption CC3	\x02\x0ASONY\x00\x00>\x02\x00\x03
Closed Caption CC4	\x02\x0ASONY\x00\x00>\x02\x00\x04
Closed Caption Off	\x02\x0ASONY\x00\x00>\x02\x00\x00
Closed Caption Text1	\x02\x0ASONY\x00\x00>\x02\x00\x05
Closed Caption Text2	\x02\x0ASONY\x00\x00>\x02\x00\x06
Closed Caption Text3	\x02\x0ASONY\x00\x00>\x02\x00\x07
Closed Caption Text4	\x02\x0ASONY\x00\x00>\x02\x00\x08
Freeze None	\x02\x0ASONY\x00\x19g\x02\x00\x00
Input Input A	\x02\x0ASONY\x00\x00\x01\x02\x00\x02
Input Input B	\x02\x0ASONY\x00\x00\x01\x02\x00\x03
Input Input C	\x02\x0ASONY\x00\x00\x01\x02\x00\x04
Input Input D	\x02\x0ASONY\x00\x00\x01\x02\x00\x05
Input Input E	\x02\x0ASONY\x00\x00\x01\x02\x00\x06
Input S-Video	\x02\x0ASONY\x00\x00\x01\x02\x00\x01

Input Video	\x02\x0ASONY\x00\x00\x01\x02\x00\x00
Lamp Light Mode Auto	\x02\x0ASONY\x00\x00@\x02\x00\x03
Lamp Light Mode High	\x02\x0ASONY\x00\x00@\x02\x00\x00
Lamp Light Mode Standard	\x02\x0ASONY\x00\x00@\x02\x00\x01
Menu Navigation Down	\x02\x0ASONY\x00\x176\x02\x00\x00
Menu Navigation Enter	\x02\x0ASONY\x00\x17Z\x02\x00\x00
Menu Navigation Left	\x02\x0ASONY\x00\x174\x02\x00\x00
Menu Navigation Menu	\x02\x0ASONY\x00\x17)\x02\x00\x00
Menu Navigation Right	\x02\x0ASONY\x00\x173\x02\x00\x00
Menu Navigation Up	\x02\x0ASONY\x00\x175\x02\x00\x00
Picture Mode Dynamic	\x02\x0ASONY\x00\x00\x02\x02\x00\x00
Picture Mode Presentation	\x02\x0ASONY\x00\x00\x02\x02\x00\x02
Picture Mode Standard	\x02\x0ASONY\x00\x00\x02\x02\x00\x01
Power Off	\x02\x0ASONY\x00\x17/\x02\x00\x00
Power On	\x02\x0ASONY\x00\x17.\x02\x00\x00
Video Mute Off	\x02\x0ASONY\x00\x000\x02\x00\x00
Video Mute On	\x02\x0ASONY\x00\x000\x02\x00\x01

Appendix D. Query Commands (Ethernet)

Aspect Ratio	\x02\x0ASONY\x01\x00 \x02\x00\x00
Audio Mute	\x02\x0ASONY\x01\x001\x02\x00\x00
Closed Caption	\x02\x0ASONY\x01\x00>\x02\x00\x00
Device Status	\x02\x0ASONY\x01\x01\x01\x02\x00\x00
Input	\x02\x0ASONY\x01\x00\x01\x02\x00\x00
Lamp Light Mode	\x02\x0ASONY\x01\x00@\x02\x00\x00
Lamp Usage	\x02\x0ASONY\x01\x01\x13\x02\x00\x00
Picture Mode	\x02\x0ASONY\x01\x00\x02\x02\x00\x00
Power	\x02\x0ASONY\x01\x01\x02\x02\x00\x00
Video Mute	\x02\x0ASONY\x01\x000\x02\x00\x00