

This document provides additional assistance with wiring your Extron IPL PRO enabled product to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instruction, refer to the user's manual for the specific Extron IPL PRO enabled product or the controlled device manufacturer supplied documentation.

Device Specifications:

Device Type: Touch Display
Manufacturer: Sharp
Firmware Version: N/A
Model(s): PN-C703B, PN-C603D

Tested on the Following Software and Firmware Versions:

IP Link Pro Control Processor Firmware	Touch Link Panel Firmware	GS Version
2.05.0000-b007	2.01.0002-b005	1.3.0

Version History

Module Version	Date	Notes
1_0_0_0	5/2/2017	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'. Example: InterfaceName.Unidirectional = 'True'
- connectionCounter variable must be set the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15. Example: InterfaceName.connectionCounter = 5
- For Serial Over Ethernet support, SerialOverEthernetClass must be used. Example: InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', PortNum, Model='ModelName')

Control Commands, States, and Qualifiers:

AspectRatio	'Normal' 'Underscan'	'Wide'	'Dot by Dot'
Input	'HDMI 1' 'Component'	'HDMI 2' 'Video'	'HDMI 3' 'PC'
Mute	'Off'	'On'	
PictureMode	'Standard' 'Dynamic (Fixed)'	'Movie' 'PC'	'Dynamic'
Power	'Off'	'On'	
Volume	0 to 100 in steps of 1		

Status Available:

AspectRatio	'Normal' 'Underscan'	'Wide'	'Dot by Dot'
ConnectionStatus	'Connected'	'Disconnected'	
Input	'HDMI 1' 'Component'	'HDMI 2' 'Video'	'HDMI 3' 'PC'
Mute	'Off'	'On'	
PictureMode	'Standard' 'Dynamic (Fixed)'	'Movie' 'PC'	'Dynamic'
Power	'Off'	'On'	
Volume	0 to 100 in steps of 1		

Cable and Adapter Requirements:

Captive Screw to Female DB9 RS-232 Serial Cable

Notes for the Device:

To ensure that the device operates correctly, please ensure that the following settings are enabled on the display.

- “Standby Mode” must be set to “Standard”
- “Off if no signal” and “Off if no operation” must both be set to “Disabled”

Serial communication:

Port Type: RS-232

Baud Rate: 9600


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

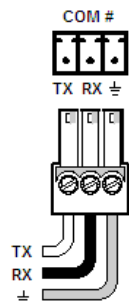

Signal	Main Cable	Pin	Signal
TxD	→	2	RxD
RxD	←	3	TxD
GND	→	5	GND

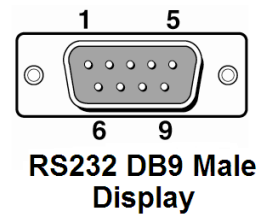

General Notes:

Appendix A. Set Commands

Aspect Ratio Dot by Dot	WIDE10 \x0D
Aspect Ratio Normal	WIDE7 \x0D
Aspect Ratio Underscan	WIDE11 \x0D
Aspect Ratio Wide	WIDE9 \x0D
Input Component	IAVD4 \x0D
Input HDMI 1	IAVD1 \x0D
Input HDMI 2	IAVD2 \x0D
Input HDMI 3	IAVD3 \x0D
Input PC	IAVD6 \x0D
Input Video	IAVD5 \x0D
Mute Off	MUTE2 \x0D
Mute On	MUTE1 \x0D
Picture Mode Dynamic	AVMD5 \x0D
Picture Mode Dynamic (Fixed)	AVMD6 \x0D
Picture Mode Movie	AVMD2 \x0D
Picture Mode PC	AVMD7 \x0D
Picture Mode Standard	AVMD1 \x0D
Power Off	POWR0 \x0D
Power On	POWR1 \x0D
Volume 0	VOLM000 \x0D
Volume 100	VOLM100 \x0D

Appendix B. Query Commands

Aspect Ratio	WIDE????\x0D
Input	IAVD????\x0D
Mute	MUTE????\x0D
Picture Mode	AVMD????\x0D
Power	POWR????\x0D
Volume	VOLM????\x0D