A OUTER PANEL

1 in
test
square

Print at 100 % / Actual size.
Check the square measures 1 in.

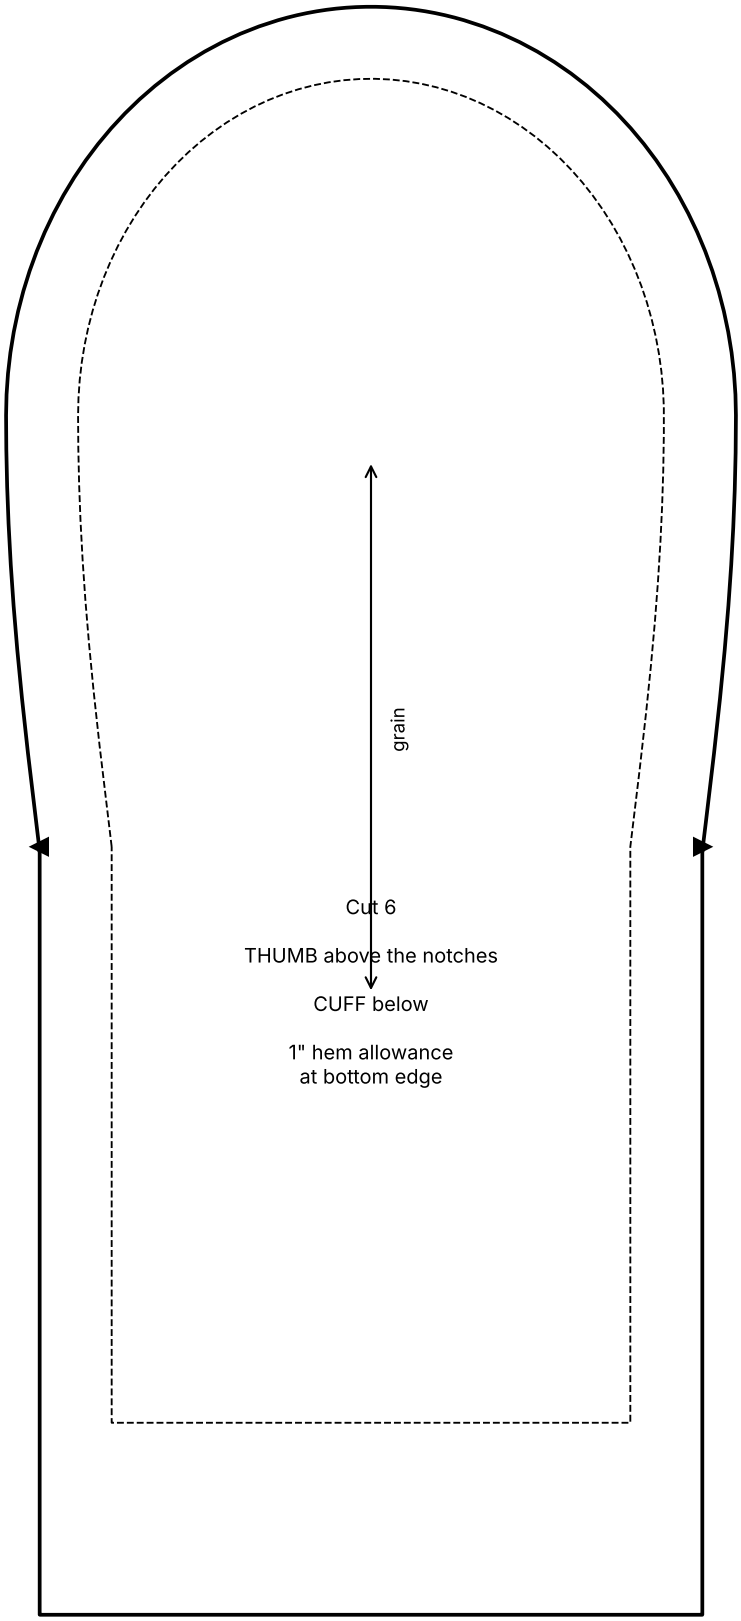

Solid line = cut. Dashed line = sew. Seam allowance 3/8" included. Cuff circumference 16.21" for a 5" tube (0.5" ease).

B INNER PANEL

1 in
test
square

Print at 100 % / Actual size.
Check the square measures 1 in.

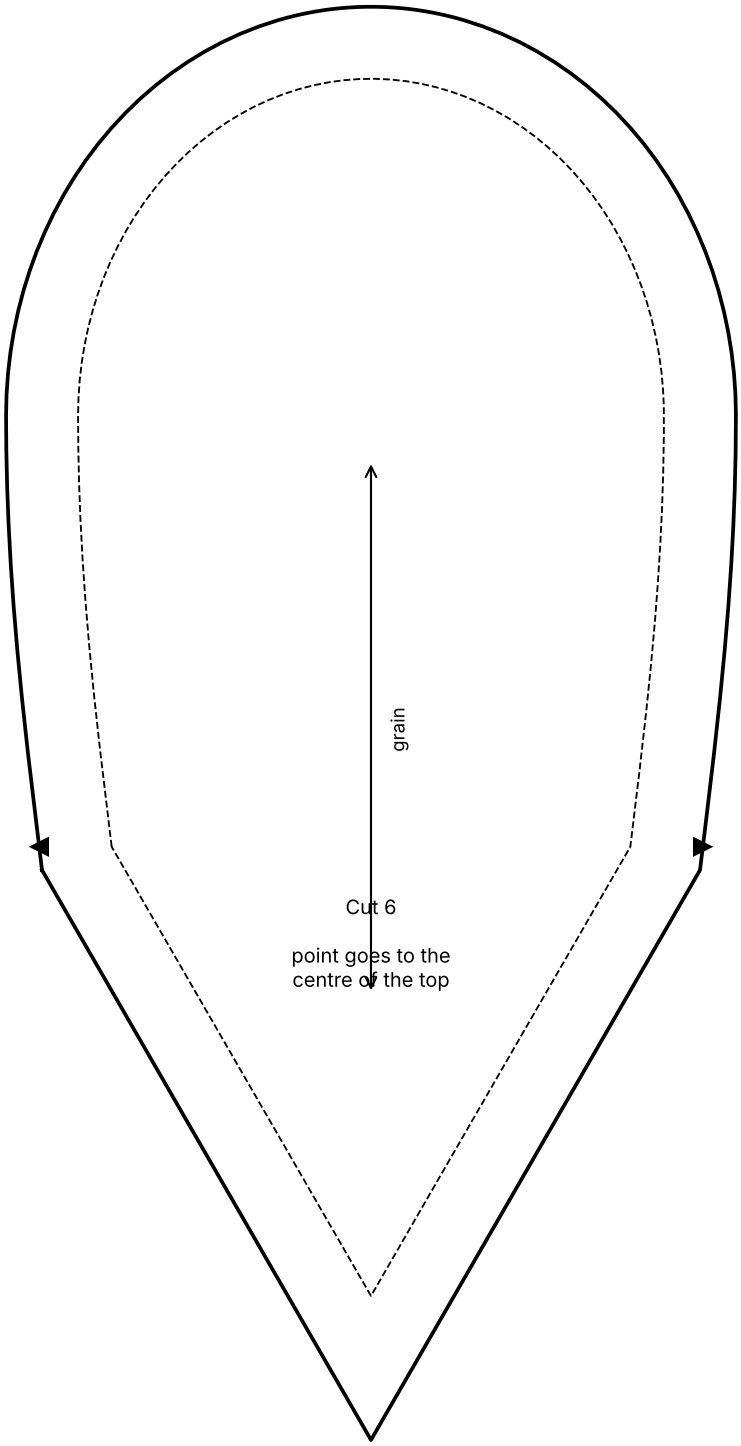

Solid line = cut. Dashed line = sew. Seam allowance 3/8" included. Cuff circumference 16.21" for a 5" tube (0.5" ease).