INTRODUCING MODIFIERS

Cooler. Louder. Sweeter.

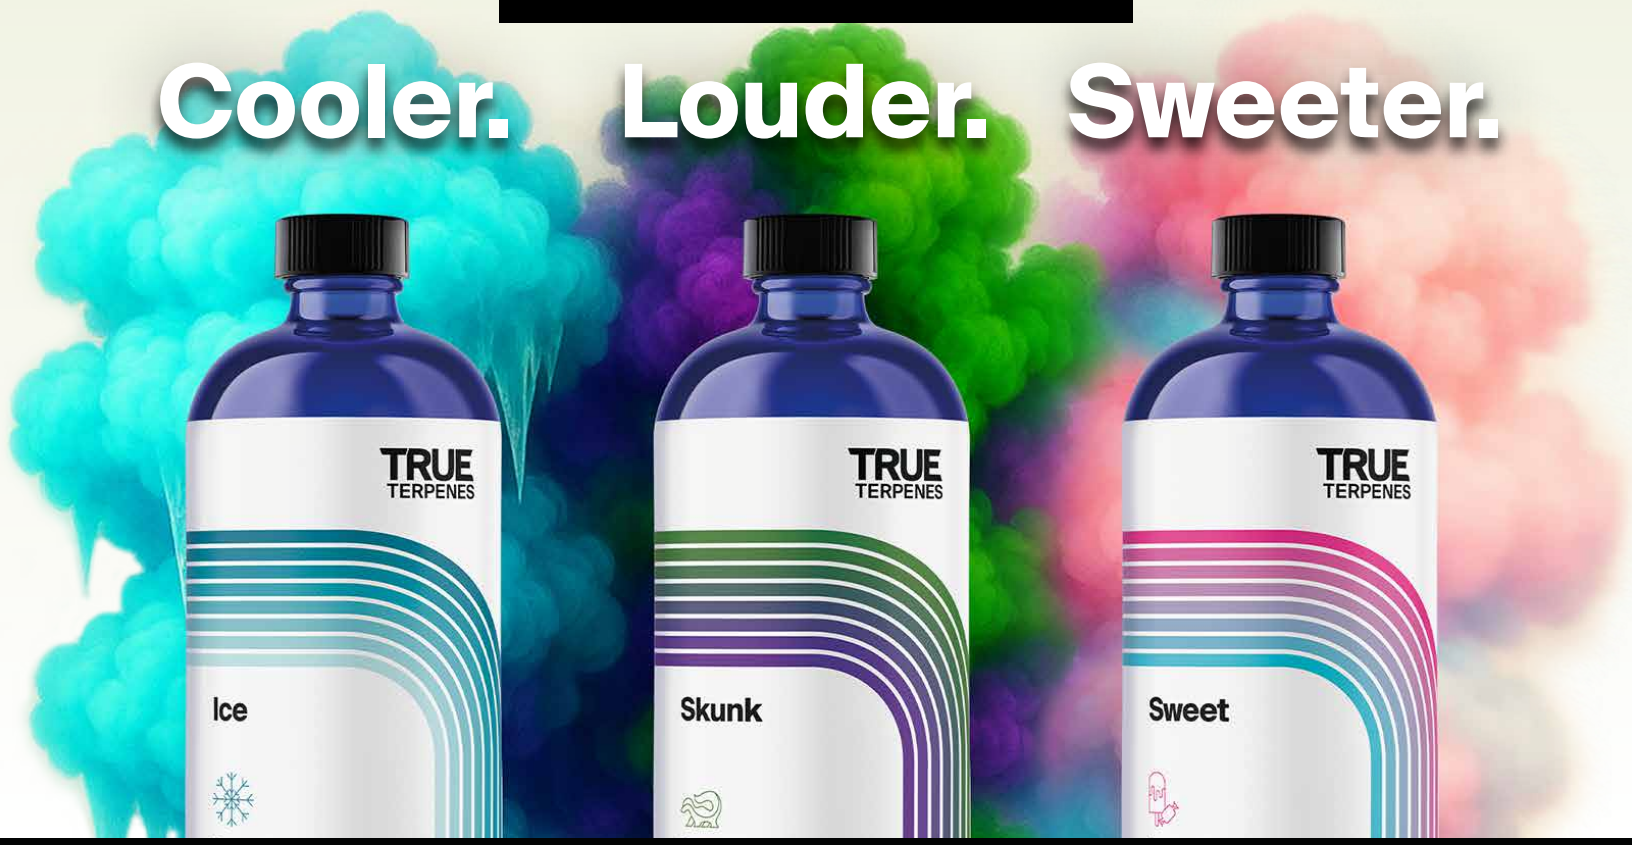

Take your flavor experience to the next level.
Add Modifiers to any Strain or Flavor to create an experience unlike any other, for any application.

Ice

Function: Cooling

ADD A COOLING EFFECT WITHOUT IMPACTING FLAVOR.

What's cooler than being cool? Bring a refreshing chill to any profile without changing the flavor. Just a clean, cooling sensation on the tongue.

Skunk

Function: Add or Amplify Pungent Skunk Notes

TAKE THE SKUNK TO 11.

Turn up the volume on pungent, funky, and loud. Skunk Modifier makes flavors feel more true-to-flower and amplifies dankness in canna-forward blends– without overpowering.

Sweet

Function: Sweeten

MAKE THE SWEET SWEETER.

Make sweet flavors even sweeter, or take fruity and fresh to full-on candy shop flavor. Sweet transforms flavors into their most decadent versions, from hard candy and chewy confections to cake and ice cream.

How to Use Modifiers

If you know how to formulate with terpenes, you know how to formulate with Modifiers. Always start small and test in format before going to scale. Find detailed information and recommended pairings in the SOP.

Pair a Modifier with True Terpenes blends.

Formulate as you would with terpenes.



Spray flower as you would with terpenes or fill carts and trial.

Contact **sales@trueterpenes.com** or your sales rep for more details. Visit us online at **trueterpenes.com**

Take flavor to full-on experience.

Add Modifiers to terpene blends at the formulation stage to enhance any application.

TRUE TERPENES

Cool & Refreshing Joints & Vape

Louder Than Loud Canna-forward Vape, Flower, & Pre-rolls

Fruity & Dessert Vape & Pre-rolls Made Sweeter

Recommended Pairings to Get You Started

TERPENE BLEND	MODIFIER	NEW PROFILE
Atomic Pop *Flavor*	Ice	Atomic Ice Pop. Delicious.
Sour Mango *Flavor*	Ice	Ice makes Sour Mango pop more and accentuates the fresh fruity notes.
Watermelon Z *Infused Strain*	Ice	Ice was made for this pairing.
Kush Mintz *Live Resin*	Ice	Cooling Ice gives Kush Mintz a kushy green freshness.
Thin Mint Cookies *Infused Strain*	Ice	Frozen Thin Mint Cookies. Ice intensifies mint and chocolate flavors.
Banana Zelato *Infused Strain*	Ice	Frozen Banana. Amazing in a pre-roll. Maintains the banana flavor while adding cooling.
Jack *Cultivar Series*	Ice	Jack Frost. Brightens Jack's signature lime zest. The cooling sensation lingers on the palate
Watermelon Mojito *Flavor*	Ice	Frozen Watermelon Mojito. Ice takes Watermelon Mojito from fruity cocktail to flavorful frozen drink.
Blue Widow *Infused Strain*	Ice	This one's extra cooling. Think blue slushie, with the cool mouthfeel of blue minty gum.
Root Beer *Infused Strain*	Ice	Root Beer Slushie. A cooling sensation at the beginning makes this sweet soda even smoother.
Berry Gelato *Infused Strain*	Ice	Frozen Berry Gelato. A classic pairing. Sweet, cooling, delicious berry flavor.
Peach *Flavor*	Skunk	Great match. Intensely fruity and skunky.
Pineapple Whip *Flavor*	Skunk	Skunk goes surprisingly well with tropical fruit and cream, which smooths out Skunk's intensity.

Contact **sales@trueterpenes.com** or your sales rep for more details. Visit us online at **trueterpenes.com**

TERPENE BLEND	MODIFIER	NEW PROFILE
Blue Dream *Infused Strain*	Skunk	If you ever wished we had a canna-forward Cultivar Series Blue Dream, this is it. Super skunky without overpowering. A crowd favorite.
Papaya Punch *Infused Strain*	Skunk	Incredible pairing. Fruity papaya and gassy skunk notes take turns at center stage.
Blue Widow *Infused Strain*	Skunk	Skunky with sweet berry notes. Skunk takes Blue Widow into canna-forward Cultivar Series territory.
Huckleberry Haze *Infused Strain*	Skunk	Dark berries plus skunk never miss for purp fans.
GSC *Cultivar Series*	Skunk	Coats GSC with sweet rubber.
NYC Diesel *Cultivar Series*	Skunk	Add a small amount of Skunk to brighten this citrusy strain.
OG Kush *Cultivar Series*	Skunk	Kushier, skunkier, gassier. We love this one.
GMO Cookies *Live Resin*	Skunk	Hot roadkill, but smooth.
Blood Orange *Flavor*	Sweet	Turns fresh blood orange to orange cream, verging on cheesecake.
Strawberry Jelly *Flavor*	Sweet	Strawberry cream hard candy.
Fresh Lemon *Flavor*	Sweet	Super fresh, true lemon flavor transforms to a lemon drop sucker. Dial Sweet up or down to preference.
Blue Widow *Infused Strain*	Sweet	Incredible. Remember the lickable powder treat that came in a pouch with its own edible dipping spoon? This is it.
Cherry Pie *Infused Strain*	Sweet	Cherry Pie à la mode. Sweet, creamy, and tasty.
Lychee Dream *Infused Strain*	Sweet	Lychee dreamier. Sweet makes this banger even more delicious.
Pink Rozay *Cultivar Series*	Sweet	Sweet moves this top seller closer to Infused Strain territory.
Blueberry Cookies *Cultivar Series*	Sweet	Sweet emphasizes the richness of the berry notes and adds creaminess, almost like vanilla frosting. The strain's earthy notes still come through.
Green Crack *Cultivar Series*	Sweet	Sweet brightens the entire profile, playing nicely with the pine and tropical notes. Like sipping on a fruity drink on the islands.
Pineapple Express *Cultivar Series*	Sweet	Sweet brightens the pineapple flavor, mellows out the tartness and brings forward a juicy sweetness.
Horchata *Live Resin*	Sweet	Authentic Horchata taste over a cannabis profile.
Wedding Cake *Live Resin*	Sweet	Sweet cake over a cannabis profile.

Contact **sales@trueterpenes.com** or your sales rep for more details. Visit us online at **trueterpenes.com**

STANDARD OPERATING PROCEDURE

Terpene Modifiers: Blending and Infusion for Vape, Flower, Pre-rolls, & More

TRUE TERPENES

IMPORTANT: WARNING, DISCLAIMER & RELEASE

Please read this Warning, Disclaimer & Release carefully. By accessing, referencing, or otherwise using this SOP: Spraying Terp Sauce, Terpenes, and Distillate on Ground Flower for Infused Pre-Rolls (this "Guide"), you are agreeing to each of the terms and conditions in this Warning, Disclaimer & Release:

1. **Educational Use Only.** The content provided in this Guide is intended solely for educational purposes. It should not be used as a substitute for professional advice, guidance, practices, or procedures.

2. **Assumption of Risk.** By referencing or using this Guide, you understand and agree that you are assuming all risks associated with its reference and use, and with any of the processes and procedures set forth herein. These risks include, but are not limited to, any and all health and safety risks, and risk of damage to real or personal property, whether known or unknown, and whether or not those risks are foreseeable or preventable.

3. **No Representations.** You acknowledge and understand that True Terpenes makes no representation or warranty with respect to this Guide of any kind, including without limitation any representation or warranty as to the accuracy, completeness, or safety of the contents of this Guide.

4. **RELEASE. YOU HEREBY AGREE TO RELEASE AND HOLD HARMLESS BULK NATURAL, LLC D/B/A TRUE TERPENES AND ITS AFFILIATES, INCLUDING TTIP HOLDINGS, INC., AND ITS AND THEIR OFFICERS, DIRECTORS, EMPLOYEES, AND REPRESENTATIVES, FROM ANY AND ALL CLAIMS, SUITS, THREATS, DEMANDS, LIABILITIES, LOSSES, ACTIONS, AND CAUSES OF ACTION ASSOCIATED WITH ANY FORM OF LEGAL THEORY AND/OR DAMAGES, FORESEEN OR UNFORESEEN, WHETHER NOW KNOWN AND AVAILABLE OR WHETHER LATER DEVELOPED, DISCOVERED, OR CREATED, THAT MAY BE ASSOCIATED WITH OR IS IN ANY WAY RELATED TO YOUR ACCESS TO AND USE OF THIS GUIDE. TRUE TERPENES AND ITS AFFILIATES HEREBY DISCLAIM ANY SUCH LIABILITY**.

5. **Acceptance of Terms.** If you do not agree with the above terms and conditions, please do not reference or use this Guide. By referencing or using this Guide, you acknowledge that you have read this Warning, Disclaimer & Release, understand it, and agree to be bound by its terms and conditions.

Table of Contents

→ 1. Introduction 4

Purpose → 4

Scope → 4

Responsibility → 4

Safety Considerations → 5

Materials → 5

Definitions → 6

→ 2. Procedure 6

Setup → 6

Modifier Blending for Testing → 6

Modifier Blending for Formulating → 7

Adding Modifiers to Extracts and Dabbables → 7

Adding Modifiers to Distillate and Cartridge Material → 8

Spraying Modifiers & Distillate onto Flower → 8

Spraying Modifiers on Flower → 11

Storage and Handling → 12

Terpene Modifiers: Blending and Infusion for Vape, Flower, Pre-rolls, & More

TRUE TERPENES

PURPOSE

This Standard Operating Procedure (SOP) describes the methods and procedures for: testing modifiers with terpene blends; mixing modifiers with terpene blends for formulating; adding modifiers to extracts & dabbables; adding modifiers to distillate and other cartridge material; spray infusion of distillate & modifiers onto flower; spray infusion of distillate & modifiers onto flower; spray infusion of modifiers onto milled flower for pre-rolls. It includes instructions for material preparation, equipment setup, and safe handling.

RESPONSIBILITY

It is the responsibility of the operator performing this process to understand all risks and hazards associated with handling terpenes, heated distillate, and any equipment used to mix, spray, or assist in the infusion of cannabis flower.

The operator is responsible for:

1. Accurately measuring and mixing terpene and distillate formulations according to the specified recipe.
2. Ensuring all equipment is clean, functional, and properly configured prior to use.
3. Accurately measuring and mixing terpene and distillate formulations according to the specified recipe.
4. Monitoring environmental conditions (e.g., temperature, airflow) to minimize terpene loss and ensure consistent application.
5. Ensuring all equipment is clean, functional, and properly configured prior to use.
6. Monitoring environmental conditions (e.g., temperature, airflow) to minimize terpene loss and ensure consistent application.
7. Applying the mixture evenly to the flower in accordance with process parameters and safety protocols.
8. Recording batch data and material usage with full traceability.
9. Reporting any deviations, equipment malfunctions, or safety concerns to the supervisor immediately.
10. The operator must be properly trained in this SOP and demonstrate competency prior to independently performing this task.

SCOPE

This SOP applies to the preparation of any True Terpenes Modifiers and Terpene Blends. Results may vary based on:

- → The condition and strain of the cannabis flower.
- → The quality and type of the extract used.
- → The exact equipment and settings used.
- → Local or state regulatory requirements.

SAFETY CONSIDERATIONS

True Terpenes isolates and terpene blends are concentrated and therefore extremely potent. Many terpenes and related components are flammable and/or a skin or eye irritant. Please read and ensure that you understand the SDS for the materials and wear all appropriate PPE to significantly reduce the risk of skin contact.

Spray guns used to infuse material with distillate or Terp Sauce include heated nozzles; wear heat-resistant gloves and avoid contact with hot surfaces. Exercise caution when working with air compressors (max. 85 PSI). Please check with your local and state regulatory agencies to ensure you're in compliance with regulations regarding adding terpenes to cannabis or hemp products.

All material handling should be performed while wearing appropriate eye, breathing protection, and skin protection.

IMPORTANT: PERSONAL PROTECTIVE EQUIPMENT AND VENTILATION

True Terpenes strongly recommends using the following safety equipment at all times

Eyewear: Safety glasses or a face shield should be worn at all times.

Outerwear: A lab coat (fire-resistant) and closed-toe shoes should be worn at all times.

Gloves: For brief handling and minor exposure risk, disposable nitrile gloves should be worn at all times and changed frequently.

Breathing: A respirator rated for N95 organic vapor (NIOSH black band around the outside of the cartridge) is highly recommended to protect against volatile organic compound vapor generated from heating up oils or terpene products for mixing and filling.

While use of the above-referenced personal equipment is strongly recommended by True Terpenes and can help mitigate certain personal and property-related safety risks, no combination of personal equipment can eliminate all such risks. By using this Guide and undertaking any of the procedures set forth herein, you acknowledge these risks and voluntarily assume these risks.

PPE

- Glasses
- Gloves
- Lab Coat
- Respirator
- Hair Net
- Beard Net

MATERIALS

- Flower
- Terpenes
- Distillate
- Terpene Modifier
- Flower grinder
- Lab spatula
- Scale
- Beakers
- Champ Distillate Spray Gun
- Air compressor
- Air compressor water/oil filter
- Flower tumbler
- Sealable airtight container for storing infused cannabis
- Temperature gun
- Stainless steel steam tray
- Sata Minijet 4400B
  - Sata Minijet 4400B stainless steel spray cup125mL
  - Sata spray gun stand

DEFINITIONS

- **Flower** - Cannabis Material
- **Terpenes** - Aromatic compounds found in cannabis and other plants that contribute to their scent, flavor, and potential effects.
- **Modifier** - A compound or additive used to adjust the aroma, flavor profile, sensation, or perceived intensity of a terpene blend without overpowering its core characteristics.
- **Batch** - A cannabis product batch refers to a uniquely defined quantity of cannabis product that is uniform in processing, manufacture, and packaging within a concurrent time frame.
- **True Terpenes Distillate Formulation SOP** - SOP for guidance on mixing terpenes with distillates.
- **Infusion** - The process of introducing additional compounds—such as terpenes or extracts—into or onto cannabis material to enhance or modify its aroma, flavor, and potentially its effects.

Procedure

SETUP

1. Ensure that all PPE is being worn properly, including gloves, safety glasses, lab coat, and respirator.
2. Select one of our recommended Modifier combinations or get creative and modify any blend in the True Terpenes Catalog including the Creator Series, or Innovator Series.
   a. If you are using a recommended blend, see our concentration and ratio recommendations below and adjust to your preference.
   b. If you are designing your own blend, you will need to experiment to find your preferred Modifier-to-Flavor ratio.
3. Whether you are creating one of our recommended Modifier Combinations or your own, do not exceed the following limits:
   a. Ice 0.59% by weight of final formulation
   b. Sweet 1.06% by weight of final formulation
   c. Skunk 5% by weight of final formulation

MODIFIER BLENDING FOR TESTING

Note: Not all Flavors and Strains have the same ideal Modifier-to-Terpene blend ratio. Therefore, each blend should be taste-tested individually in a small-scale R&D phase utilizing the steps below.

1. Set up your scale to accurately measure the weight of the terpenes.If you are using a recommended blend, see our concentration and ratio recommendations below and adjust to your preference.

2. Place a clean beaker or jar on the scale and 'Tare' the scale so that it indicates 0.00g.
3. Combine the terpenes in the beaker or jar in the recommended ratios listed above and mix them together for 5-10 minutes.
4. Cover or seal the blend and allow it to rest for 24 hours prior to performing an aroma test with a test strip.
5. Once the desired aroma has been achieved, mix with a small amount of distillate, in the same concentration as the final formulation, to perform small-scale taste testing.
6. Allow the distillate & terpene mix to rest for 24 hours in the vape carts before taste testing.
7. If the desired flavor has been achieved, the terpene blend can be utilized in the final product formulation.
   a. Make a note of the concentration of each part added to the mixture.
   b. Ex: 90% Jack Cultivar Series Terpenes, 10% Ice Modifier.

MODIFIER BLENDING FOR FORMULATING

1. Determine the desired quantity of total terpenes, including the modifier to be used in the final formulated product.
   a. Suggested starting inclusion rates are found in the table below.

MODIFIER	MODIFIER QUANTITY (%)	TERPENE QUANTITY (%)	TOTAL TO ADD IN FINAL PRODUCT (MODIFIER + TERPENES, %)
Ice	11.78%	88.22%	5.00%
Skunk	20.00%	80.00%	5.00%
Sweet	20.00%+	80.00%	5.00%

   b. Combine the Modifier and Terpene blend together and mix the solution for 10 minutes.
   c. Cover or seal the blend and allow it to rest for 24 hours prior to performing an aroma test with a test strip.

ADDING MODIFIERS TO EXTRACTS & DABBABLES

IMPORTANT: Whenever formulating with any True Terpenes products, we strongly recommend testing a small batch first before working at scale. Differences in extract types, storage, and handling practices at your facility can impact the end result, so it's always good practice to test in your own conditions. Mix a small amount of the terpenes with extract to check for reactions like color change, and then taste test in the final form factor before going to scale.

1. Pour the Modifier and Terpene Blend into the extract.
2. Stir the solution of terpenes and extract together for 5-10 minutes or until homogenous.
   a. This will depend on the batch size.

3. Alternatively, you can mix the Modifier and Terpene blend individually into the extract without blending them together beforehand.
   a. Note: Suggested starting inclusion rates are found in the table below.

MODIFIER	MODIFIER QUANTITY (%)	TERPENE QUANTITY (%)	TOTAL TO ADD IN FINAL PRODUCT (MODIFIER + TERPENES, %)
Ice	0.59%	4.41%	5.00%
Skunk	1.00%	4.00%	5.00%
Sweet	1.00%+	4.00%	5.00%

4. Seal the container and backfill it with nitrogen to preserve the terpenes within the extract.

ADDING MODIFIERS TO DISTILLATE AND CARTRIDGE MATERIAL

Please utilize the Formulation SOP: Distillate

SPRAYING MODIFIERS & DISTILLATE ONTO FLOWER

1. Note: If infusing flower with terpenes or modifiers only, skip to section 7.7.
2. Collect all the materials for the cannabis grinder, distillate spray gun, flower tumbler, Sata Minijet Spray gun, and cone-filling machine.
   a. Ensure that all the equipment is clean and free of contamination.
3. Establish the number of prerolls you would like to create, in either 1g or .5g form factors.
4. Use the scale to weigh out the flower needed to infuse the proper number of joints.
   b. Target between 5-15% moisture content before grinding the flower.
   c. Ensure that the material is free of large stems and leaves.
   d. Weigh out slightly more material than what is needed to account for any loss during the process.
5. Grind the flower to be infused and store it in an airtight container.
   a. Ground flower consistency will be dependent on the type of equipment used.
   b. The consistency should resemble what is achievable with a hand grinder.
6. Blend Distillate and Terpenes together utilizing the True Terpenes Distillate Formulation SOP.
7. Determine the amount of distillate & terpenes that will be used to infuse the flower. This can be based on the desired final potency of the product or by weight.
   a. Final Product Potency: (Flower THC Potency * Flower Infusion Percentage) + (Distillate and Terpene THC Potency * Distillate & Terpene Infusion Percentage).
   b. Example: (20% * 70%) + (30% * 30%) = 23%
   c. By weight: Flower Weight / Desired Ratio
   d. Example: (500g / (4:1)) = 125g

8. Connect the distillate spray gun base to a 110v outlet and a compressed air line of max 85 PSI.

9. Power on the distillate spray gun by pushing the power button near the handle of the spray gun.

10. Select the operating temperature of the spray gun by pressing the arrow up or arrow down buttons. Select the setpoint by pressing the power button after setting the operating temperature.
    - **a.** Select the temperature 160°F to begin.
    - **b.** The temperature regulator is not calibrated. Temperature setpoints will need to be verified using a temperature gun.
    - **c.** Once the spray gun heat setting is on, the nozzle of the gun will become very hot. Do not operate without protective gloves.

11. Ensure that the spray gun stand has the air hose connected to it so that the regulators can modulate the spray pattern and consistency.
    - **a.** Pressure controller left – Air for spraying 5-40 PSI
    - **b.** Pressure controller right – Air for dispensing 5-46 PSI
    - **c.** **Warning: Do not exceed 85 PSI of pressure ~ 6 BAR**

12. Collect the cartridge for the spray gun and make sure that the nozzle is free and clear of any clogs.
    - **d.** Do not utilize the same reservoir cartridge for multiple types of oil to avoid contamination.
    - **e.** Do not damage the screw nozzle.
    - **f.** Do not operate the spray gun without a nozzle.

13. Once the spray gun has warmed up, open the lid by turning the star grip to the left and insert the cartridge/magazine into the spray gun.

14. Pour a small amount of your terpene & distillate solution into the cartridge/magazine and close the lid by twisting the star grip right.

15. With the spray gun powered on and the temperature set at spraying temperature, preheat the cartridge for 1 min prior to spraying to ensure optimal functioning.
    - **g.** Do not lay the spray gun on its side.
    - **h.** Do not hold the nozzle top (tip of the gun) upwards.

16. **When the temperature setting is on, the sprayer's nozzle will become hot. Do not touch the nozzle without turning off the heat setting beforehand.**

17. **Do not start spraying without having affixed a nozzle.**

18. **Never direct spray towards people.**

19. **Do not spray overhead.**

20. **Wear a respirator.**

21. If needed, test the spray settings by spraying a test shot onto a cardboard sheet.
    - **a.** Hold down the trigger to spray.
    - **b.** The consistency of the spray should resemble cotton candy.
    - **c.** If a spray test is completed, the amount of terpenes and distillate used will need to be added back into the cartridge on the next fill.

22. The sprayer should audibly de-aerate after the trigger is released.
    a. If the sprayer is not de-aerating, disconnect the system from the air line and hold the trigger down until there is no longer a spray or air being expelled from the nozzle.
    b. Open the reservoir lid by turning the star grip to the left and clean the underside of the reservoir lid. The flat plate may need to be removed using an Allen wrench to clear the air passages.

23. If the spray pattern and consistency need to be adjusted, use the regulators on the stand to modulate the pressure.
    a. The regulator on the right adjusts the amount of solution being expelled.
    b. The regulator on the left adjusts the pressure at which the solution is expelled.

24. When the desired consistency of the spray is achieved, open the lid to the cartridge/magazine by turning the star grip to the left and pour the desired quantity of terpenes & distillate to spray on the flower into the cartridge.
    a. Do not exceed 250ml. If more than 250ml of terpenes & distillate is needed, a second cycle will be needed to spray the remaining distillate onto the flower.

25. Place the milled cannabis material into the flower tumbler and start the rotation.
    a. The speed of the tumbler will need to be adjusted for the amount of flower added.
    b. Do not overfill or underfill the tumbler, as that will affect the way the material is able to 'fold' onto itself.

26. Allow the rotation of the tumbler to loosen any large clumps that have formed in the material.
    a. The purpose of this step is to decrease the packed density of the material and optimize the contact when spraying.
    b. You may need to reach into the tumbler to grab any clumps of cannabis and break them apart manually.

27. With the tumbler on and rotating with the flower inside, aim the nozzle of the spray gun into the mouth of the tumbler, about 6-12 inches, and activate the spray.
    a. Aim at the area where the milled flower is 'folding' onto itself so that all the material receives an even coat.
    b. Do not coat the walls of the tumbler.

28. Hold the trigger down and spray in short, 30-second bursts to ensure that the terpene & distillate solution does not 'stack' onto itself and instead adheres to the flower.

29. Continue to spray the flower inside the tumbler until the desired amount of terpene & distillate solution has been used.
    a. Complete a second cycle if necessary to use all the distillate needed for the batch.

30. Allow the flower to spin inside the tumbler until the material is evenly coated in the terpene & distillate solution.
    a. This may take up to 30 minutes.

31. If switching terpene & distillate blends, be sure to properly clean the equipment to prevent cross-contamination before continuing to the next batch of material.
    a. Follow steps 24-30 for each batch of flower you're infusing with terpenes & distillate.

32. If the material is only being infused with terpenes & distillate, the flower is now ready to be removed from the tumbler and stored in an airtight container.

33. Clean all the equipment.

SPRAYING MODIFIERS ONTO FLOWER

1. Collect all the materials for the cannabis grinder, distillate spray gun, flower tumbler, Sata Minijet Spray gun, and cone-filling machine
   - **a.** i. Ensure that all the equipment is clean and free of contamination.

2. Establish the number of prerolls you would like to create, in either 1g or .5g form factors.

3. Use the scale to weigh out the flower needed to infuse the proper number of joints.
   - **a.** Target between 5-15% moisture content before grinding the flower.
   - **b.** Ensure that the material is free of large stems and leaves.
   - **c.** Weigh out slightly more material than what is needed to account for any loss during the process.

4. Grind the flower to be infused and store it in an airtight container.
   - **a.** Ground flower consistency will be dependent on the type of equipment used
   - **b.** The consistency should resemble what is achievable with a hand grinder.

5. Prepare the Sata sprayer by verifying that the unit is clean, all necessary parts are attached, all connections are tight, and the air compressor powering the gun has its oil and mist filter installed.
   - **a.** Adjust the control knobs on the rear of the spray gun to turn the liquid release and the spray pressure as low as possible.

6. Turn on the air compressor and verify that the spray gun has pressure.
   - **a.** Test the spray gun without any liquids in the reservoir to verify it will function. You will need to adjust the spray pressure knob.
   - **b.** 9% IPA or ethanol can be used to verify the spray pattern of the gun. Use a paper towel or porous surface to gauge the rate of spray and adjust the liquid release knob as needed.
   - **c.** iii. The spray pattern can be adjusted by twisting the dial on the side of the spray gun.

7. Determine the amount of terpenes to be infused into the flower.

8. In grams: Flower Weight in grams * (Desired Terpene Percentage / 100)
   - **a.** Example: 500g * (1% / 100) = 5g

9. Use the scale and beaker to weigh out the terpenes.

10. Remove the lid from the clean and empty stainless-steel reservoir on the spray gun. Using the beaker, pour the calculated amount of terpenes into the stainless-steel reservoir of the Sata sprayer and close the top.

11. **Put on your respirator.**

12. Place the milled cannabis material into the flower tumbler and turn on the rotation.
    a. The speed of the tumbler will need to be adjusted for the amount of flower added.
    b. Do not overfill or underfill the tumbler, as that will affect the way the material is able to 'fold' onto itself.

13. Allow the rotation of the tumbler to loosen any large clumps in the material that have formed.
    a. The purpose of this step is to decrease the packed density of the material and optimize terpene-to-flower contact when spraying.
    b. You may need to reach into the tumbler to grab any clumps of cannabis and break them apart manually.

14. Move the Sata spray gun to the material tumbler.

15. Test the spray pattern of the Sata spray gun and make any necessary adjustments.
    c. The upper control knob on the rear controls the liquid release.
    d. The lower control knob on the rear controls the air pressure of the gun.
    a. The dial on the side of the spray gun can be rotated to adjust the spray pattern to round or flat.

16. Once the spray pattern is correct, hold the Sata sprayer into the opening of the tumbler and begin spraying terpenes onto the homogenized flower.
    a. The sprayer will need to be throttled. A constant spray is not recommended.
    b. Allow the material to roll in the tumbler, absorbing all the terpenes.
    c. Material may need to be scraped from the walls of the tumbler.
    d. Ensure that the entire batch of flower has an even coating of terpenes.
    e. Repeat these steps until all the terpenes are used and only compressed air escapes the nozzle of the Sata Sprayer.

17. Seal the tumbler's opening and allow it to continue spinning the flower for approximately five minutes..

18. If switching terpene blends, remove the material, place it in a storage container, and clean the equipment to prevent cross-contamination before continuing to the next batch of material.
    a. Follow steps 12-17 for each batch being made.

19. If the material is only being infused with terpenes, the flower is now ready to be removed from the tumbler.

20. Clean all the equipment.

STORAGE & HANDLING

1. Store infused material, either extracts or flower, in a sealed container that is closed tightly, in a cool, dry place away from sunlight or heat sources.

2. **SPECIAL HANDLING:** Keep refrigerated for optimal freshness. Compounds are volatile. Avoid opening the bottle unnecessarily. Before opening, gently invert to incorporate compounds that may have volatilized back into the product.