
WINCH WINCH UNIT INSPECTION

PROCEDURE



■ 1.INSPECT WINCH WIRE

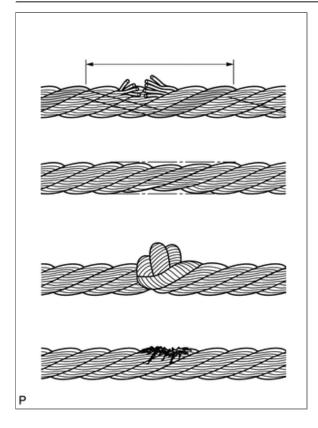

Inspect the wire for the following damage: 1) areas where several strands are severed; 2) areas where the diameter is less than 7.5 mm (0.295 in.); 3) kinks; 4) corrosion; and 5) fraying. If the wire is damaged, replace it with a new one.

© 2012 TOYOTA MOTOR CORPORATION. All Rights Reserved.