
CLUTCH CLUTCH PEDAL SWITCH(for 1VD-FTV) INSPECTION

PROCEDURE

■ 1.INSPECT CLUTCH SWITCH ASSEMBLY

88280A

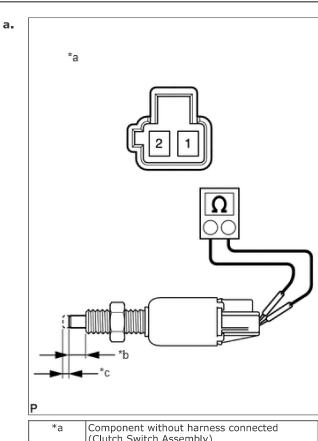

*a Component without harness connected (Clutch Switch Assembly)

*b ON:6.5 to 7.5 mm (0.2560 to 0.2952 in.)

*c OFF:1.5 to 2.5 mm (0.0591 to 0.0984 in.)

Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
1 - 2	ON (Pushed)	Below 1 Ω
1 - 2	OFF (Released)	$10~\mathrm{k}\Omega$ or higher

If the result is not as specified, replace the clutch switch assembly.

© 2012 TOYOTA MOTOR CORPORATION. All Rights Reserved.