



Walletül Release

The Kraken Edition

powered by the QuadCam™ Lift System

Ridge Runner Gear, LLC

Operator's Guide - because "ultra-light"
doesn't mean "under-prepared."



Product Name: Walletül Release **Brand:** Ridge Runner Gear (RRG)

Model Number: WUL-K4 (Walletül Ultra-Light – Kraken QuadCam Edition)

Weight: 1 oz (So light you'll check twice to make sure it's still there.)

Dimensions: 3.7" L x 2.7" W x .5" H (Smaller than your sense of responsibility on payday.)

Materials: ASA, TPU and Reflective Bungee (Built for back country abuse and front-pocket comfort.)

What Is This Magical Contraption?

Meet the **Walletül Release** — featuring a **self-resetting QuadCam Lift System** that snaps back into place the moment you slide your cards home. It's trail-tough, everyday-ready, and laughs at bulky billfolds. Part wallet, part multi-tool, part "how does it do that?" Built to carry your cash, cards, and a few clever secrets while cracking bottles, tightening screws, and locking onto your gear without complaint. Clip on a mini flashlight or lighter, load an optional tray with coins, tweezers, pen, or tools, and call it mission ready. Lightweight, expandable, and easy to spot in the dark, the **Walletül Release** doesn't just hold your money — **it earns it**. Whether you're running the ridge or running late, it's the wallet that works harder than you do.

NOTICE: Reading this manual first beats fumbling your license, folding your fortune, or field-testing your luck.

Why the Walletül is Smarter Than Your Average Wallet

Field Manual Spec	Civilian Translation
Multi-Role Functionality – Carries cards, wads of cash, tools, and secrets in one compact unit.	Pocket multi-tool – Holds your essentials, fixes your gear, and still fits in your shorts.
Auto-Reset Release Mechanism – Rapid-style deployment with a self-returning release knob that locks back into clamp position after card retrieval.	Hands-off reset – Twist the knob, grab your cards, and it snaps itself back like it's proud of the job it been trusted with.
Integrated Field Tools – Front bottle cap wrench, S2 bit slot, and gear loop built for on-trail repairs.	Trail handyman – Opens bottles and cans, tightens screws, and hangs gadgets—no toolbox required.
Expandable Load Out System – Bungee-laced frame adjusts to fit cards, trackers, and stacks.	Wallet with stretch goals – Expands to carry a payday, compresses for a minimalist flex.
Covert Reserve Compartment – Hidden slot for folded emergency bills and memory stick.	Rainy-day ready – Stash “don’t tell your spouse” money and top-secret map files.
Optional Utility Modules – Accepts RRG tool tray, coin tray, or junk drawer tray.	Pocket mod system – Choose between coins, tools, or mystery bits you can’t throw away.
Mission-Grade Construction – ASA and TPU polymer blend resists heat, sweat, UV, and pocket abuse.	Built trail-tough – Survives drops, drenches, and days you forget it in your jeans.
Reflective Retrieval System – Night-visible bungee cords assist in nocturnal recovery.	Easy to spot – So when it falls out by the fire, you’ll find it before the raccoons do.

About Ridge Runner Gear

At Ridge Runner Gear, we believe you shouldn’t have to choose between comfort and capability. Our gear is meticulously engineered for those who seek the serenity of the wilderness without sacrificing the sophistication of well-designed essentials. Whether you’re setting up a base camp beneath alpine stars or trekking toward your next breathtaking vista, our products deliver



premium performance with minimalist weight. Because luxury isn’t about excess—it’s about excellence, wherever the trail leads.


We are a faith-based company, guided by Christian values in everything we do—from the way we design our gear to how we serve our customers. We believe the outdoors is one of God’s greatest gifts, and we’re passionate about helping others enjoy it responsibly and respectfully. That’s why we practice Leave No Trace principles and strive to be good stewards of the wild places we love.

Proudly American Made, our gear is built with rugged durability and refined utility for the serious adventurer.


Thank you for supporting our dream and being part of the Ridge Runner journey. With your support, we get to build gear we love—

for adventures you’ll never forget.

Dimensions

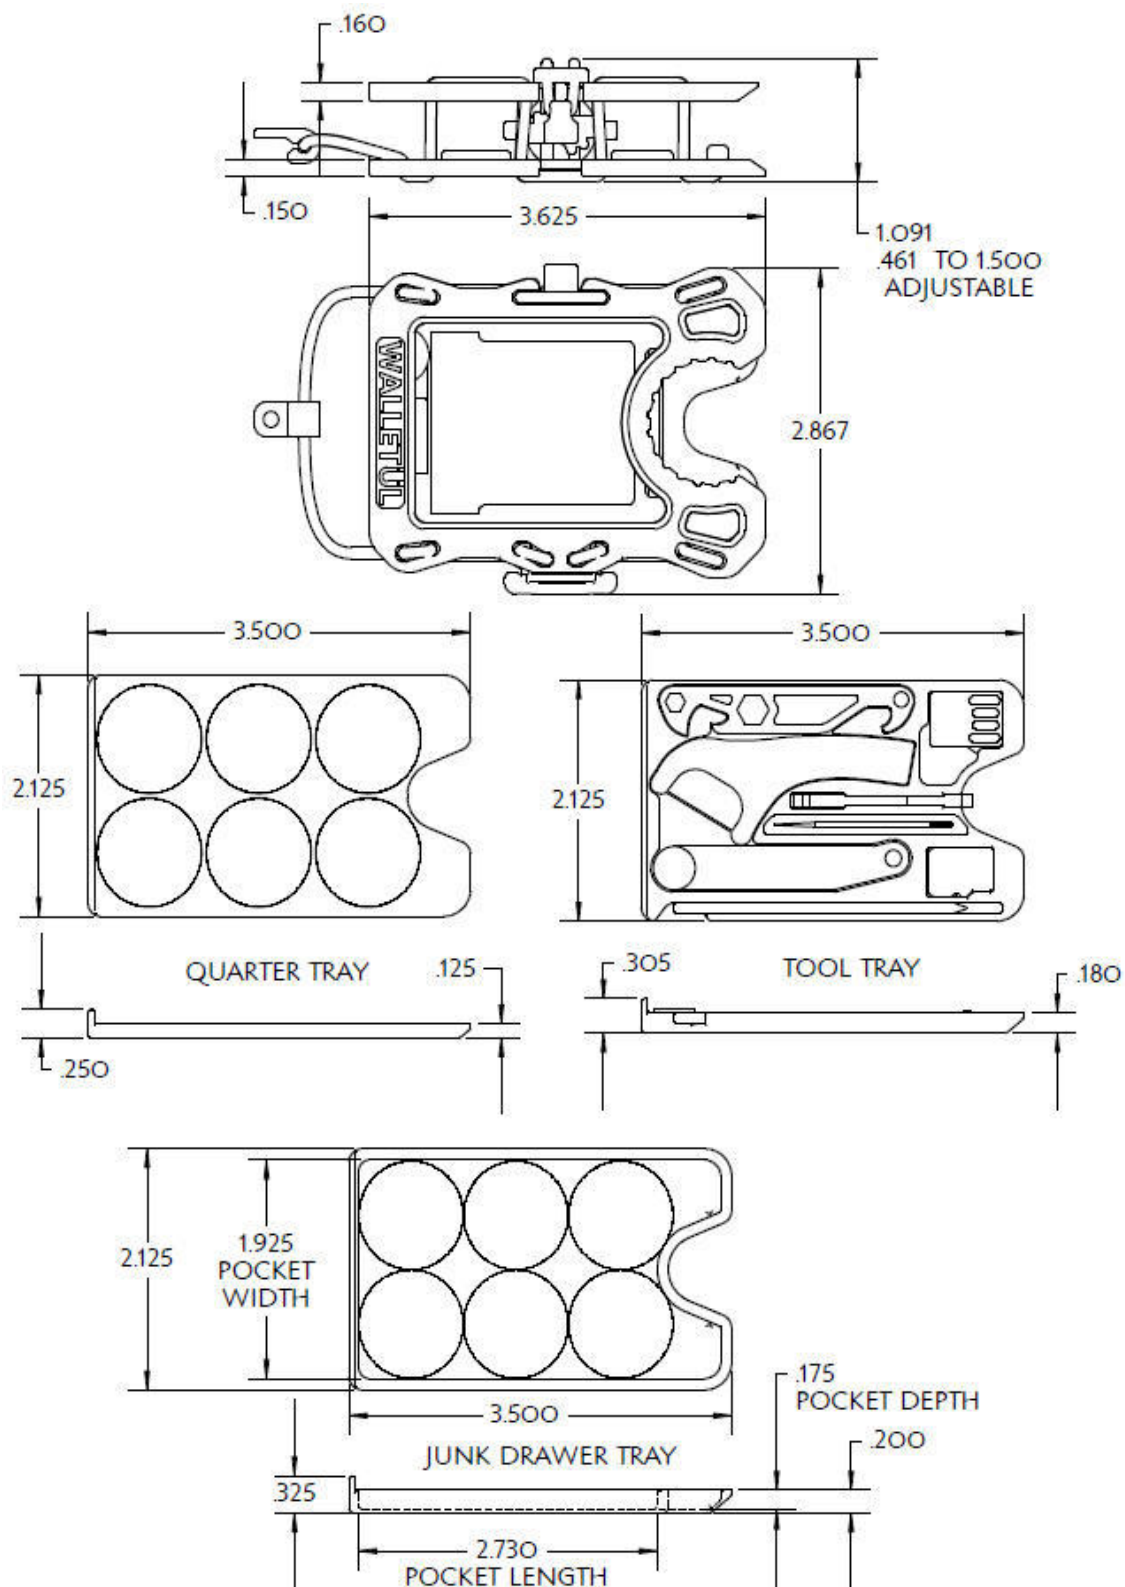

Identification

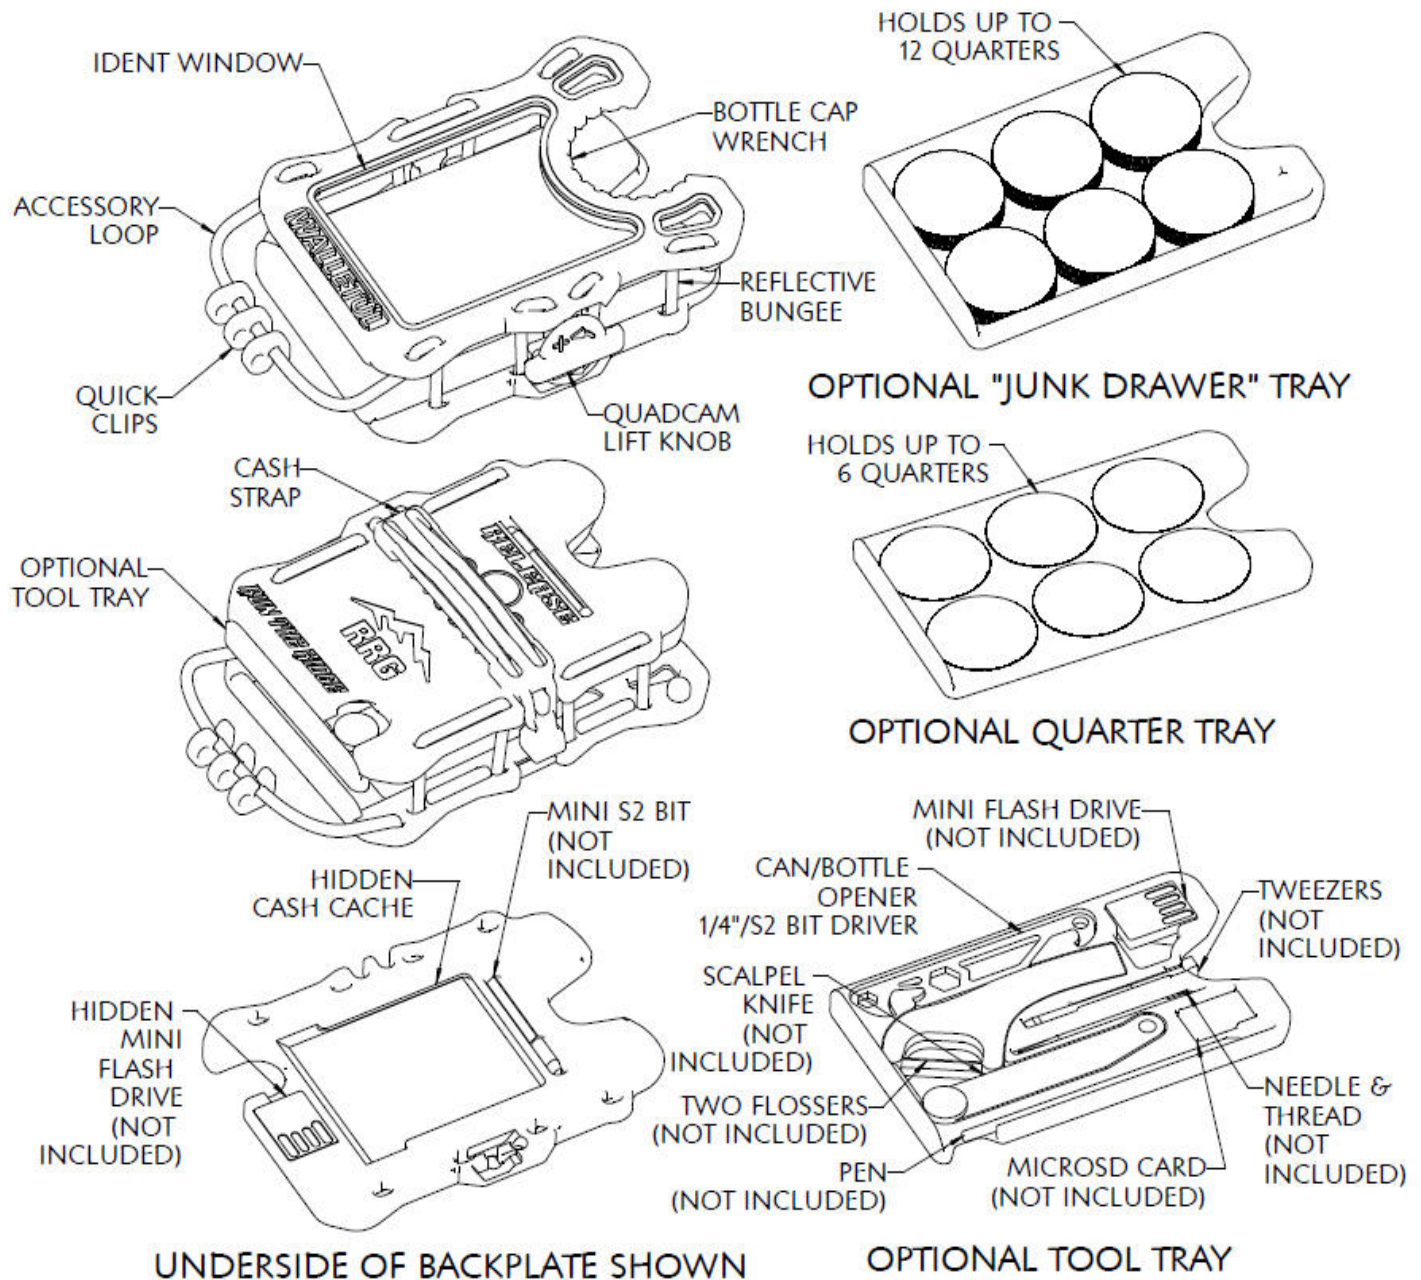

SECTION 1: QUICK START GUIDE

For the Walletül Release — The Kraken Edition

Powered by the QuadCam™ Lift System. Fueled by good sense and Appalachian stubbornness.

How to Use the Walletül in 30 Seconds

1. Grip the Walletül

Hold the wallet with the **cash/bottom plate facing up**.

(If you're already holding it upside-down, congratulations — you're human.)



2. Engage the QuadCam Lift Knob

Rotate the knob **toward the “+”** until you hear **two clicks**.

Two clicks = QuadCam engaged, plates separated, and card access unlocked.

That double click wasn't an accident. It was engineered.



3. Slide Your Cards Out

Use the finger slot on the top plate to pull cards out partway.

You're not shuffling cards at a poker table — think front porch etiquette, not casino drama.



4. Fan and Select

Fan your cards out.

Pick the card you need.

Pretend you're choosing wisely — even if it's just a debit card for gas station beef jerky.



5. Reinsert Cards to Reset the QuadCam

Slide cards back in until they bottom out and continue until you hear the click.

Push up on the top plate with your thumb and down on the bottom plate with your pointer finger until you hear the **QuadCam Tactical Click**. **That click = Clamp Mode**.

It means your cards are secured tighter than a gate latch on a windy ridge.



6. Load Your Cash (Optional but Always Smart)

Fold bills into quarters.

Lift the cash strap.

Slide your cash under.

Re-latch the strap.

Your money is now in a committed relationship.



Everything You Really Need to Know

- ◆ “Two clicks” = access
- ◆ “One click” = clamped
- ◆ The QuadCam only complains when you under or over-stuff it
- ◆ With these trays, you’re not just organized — you’re ready to fix a tractor and your cousin’s Wi-Fi.

Quick Specs (For Those Who Pretend They Don’t Read Manuals)

Feature	Specification
Weight	1 oz (so light you’ll check for it twice)
Dimensions	3.7" × 2.7" × 0.5"
Materials	ASA, TPU, Reflective Bungee
QuadCam Lift Range	0.250" – 0.647"
Card Capacity (No Drawer)	8–19 with QuadCam installed
Card Capacity (With Drawer)	2–14 with QuadCam installed
Card Capacity (No Drawer)	2-25 without QuadCam installed*
Cash Capacity	.750" thick (plenty for most missions)
Tracker Equivalent	Counts as 3 cards (because science is weird)
Tool Tray Compatible	Yes
Quarter Tray Compatible	Yes
Junk Drawer Tray Compatible	Absolutely

*Card capacity is only limited by the length of bungee.

Walletül Troubleshooting Table

Issue	Cause	Solution
No reset click after cycling the knob	Knob not fully seated against both stops/ QuadCam worn	Ensure the cam lobes are fully seated . Remove QuadCam and lube with Super Lube-21030 . Replace QuadCam.
Cards difficult to remove after QuadCam engages	Incomplete QuadCam rotation/ Cash bar button-side bungee over tensioning	Turn the release knob until two full clicks are felt/heard. Loosen the button-side accessory loop slightly.

Issue	Cause	Solution
Cards feel too loose even when tensioned	Worn or overstretched bungee/ Too few cards	Replace the card-tension bungee. Pull on accessory loop to tighten. Add cards or tray.
Cash not held securely	Cash bar bungee not fully tightened	Pull the cash-bar bungee toward the accessory loop to increase tension.
Cards too loose during clamp	Insufficient tension on QuadCam-side loop/ Too few Cards	Tighten the QuadCam-side accessory loop to increase clamping force. Add cards or tray or remove QuadCam.
No lift or no reset occurring	Too many cards loaded	Remove cards until normal lift and reset function returns.

What's Next

The following sections will dive into the guts of the **Walletül Release** — the **QuadCam**, the trays, the hidden compartments, the accessory quick clips, the bungee tensioning, and all the glorious mechanical wizardry built into it.

But for now...

Congratulations. You can officially operate the Walletül Release.

You're already smarter than half the people who ask, "Does it *really* make that clicking sound?"

SECTION 2 — CORE OPERATION

Everything you need to run the Walletül Release like you built it yourself.

2.1 — Meet the QuadCam Lift System

Field Manual Spec:

The QuadCam Lift System is a four-lobe mechanical cam that lifts the wallet's plate in precise, predictable steps based entirely on your card stack thickness.

Civilian Translation:

It's the tiny mechanical wizard that makes the wallet open smoothly every single time.

Twist → lift.

Reinsert → click.

It does the thinking so you don't have to.



2.2 — How the QuadCam Actually Works (The Simple Version)

Inside the QuadCam are **four cam lobes**, each a different height.

When you rotate the knob toward the “+”, the cam automatically finds the lobe that matches your card stack thickness.

- ◆ Thin stack → uses the lower lobes
- ◆ Thick stack → uses the taller lobes
- ◆ Too thick → uses its right to be offended

Here’s the best part:

You never need to choose a level or know what’s happening inside.

Just rotate the knob **until you hear or feel two clicks**.

Those clicks mean the QuadCam has selected the correct lift height for your current load out and opened the plate just enough for clean card access.

No mode switching.

No height adjustments.

No “is this Level 3 or Level 4?”

Just twist → click → access.

When you reinsert your cards:

Push them to the internal stop and apply light pressure on the top and bottom plates.

The QuadCam will automatically drop back into **Clamp Mode** with the signature **QuadCam Tactical Click**.

Automatic. Consistent. Mechanical confidence in your pocket.

2.3 — Card Retrieval (The Smooth Method)

1. Rotate the QuadCam toward “+” → *two clicks*
2. Pull your cards out using the top finger slots
3. Fan them out
4. Select your card like you mean it
5. Slide it out cleanly
6. Marvel at the fact that a wallet feels this cool

2.4 — Card Insertion (The Jedi Method)

Pro Tip: Use a card as a guide rail.

1. Partially slide out one card

2. Insert the new card along its edge
3. Push your stack to the internal stop
4. Push the top up and bottom plate down lightly
5. Listen for the **QuadCam Tactical Click**

That click means:

- ◆ cards seated
- ◆ clamp engaged
- ◆ nothing escaping
- ◆ wallet reset

Pocket-level excellence achieved.



2.5 — Cash Loading

1. Fold your bills into quarters
2. Lift the cash strap
3. Slide bills underneath
4. Re-latch the strap
5. Walk away knowing your cash isn't going anywhere

Civilian Translation:

Your cash is now locked in tighter than your neighbor's jaw when you mention politics.

2.6 — Optional Tray Operation

To Remove a Tray:

1. Engage the QuadCam
2. Grip the tray lip through the bottom slot
3. Pull straight out
4. Smooth, steady, no wrestling required

To Install a Tray:

1. Partially pull a card from the rear slot
2. Use it as a guide rail
3. Slide the tray in
4. Seat until flush
5. Reset QuadCam if used

The Tray System is modular, fast, and way more fun than it should be.



2.7 — Hidden Storage Pockets

Two hidden pockets live inside the Walletül Release bottom plate:

Rear Pocket:

- ◆ Stores a USB stick (link below in Load Out Like a Legend section)
- ◆ Perfect for backups, maps, documents, or your secret folder of kayak memes

Hidden Cash Pocket:

- ◆ Holds two individually folded bills folded in eights
- ◆ For emergencies... or harmless marital secrets


Finding money in this pocket months later has been scientifically shown to raise happiness by 37%.



2.8 — Accessory Loop Basics

The accessory loop is the flexible side-mount bungee built to hold:

- ◆ Flashlights
- ◆ Lighters
- ◆ Keys
- ◆ The Tooter Tick Taker
- ◆ Anything with a small ring

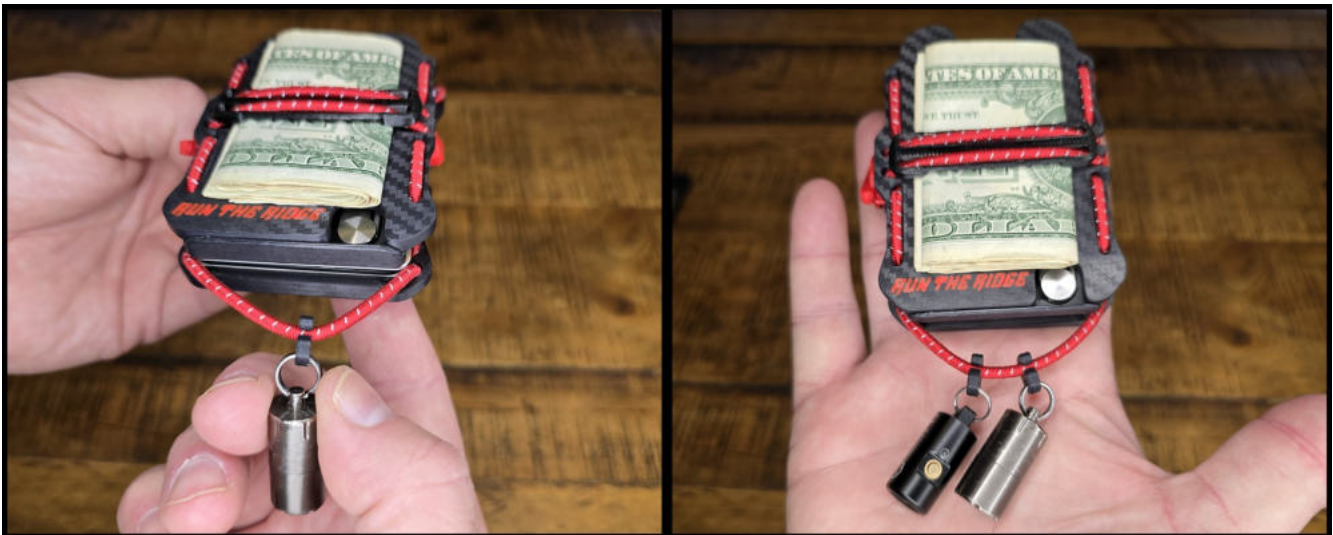

SECTION 3 — DEEP DIVE: QUADCAM, TENSION & CAPACITY

For the curious, the technical, and the “I want my wallet to run like a Swiss watch” crowd.

3.1 — Card Stack Capacity & Thickness (The Real Rules)

Your Walletül Release isn't just a wallet — it's a card-clamping machine with standards, boundaries, and self-respect.

The **QuadCam** only operates properly when your total card stack thickness sits inside its engineered sweet spot:

Minimum Compression:

0.250"

(Below this, the QuadCam looks around like, “What am I supposed to clamp?”)

Maximum Engagement:

0.638"

(Above this, the QuadCam feels like you've asked it to lift a refrigerator.)

Stay inside that **0.250"–0.638"** window, and the QuadCam performs like a proud, well-fed machine.

3.2 — With or Without Drawer (Capacity Rules)

When Using a Drawer

(For people who need tools, tweezers, pen, quarters, or miscellaneous “trail treasures.”)

- ◆ **Minimum:** 2 cards + drawer
- ◆ **Maximum functional:** 14 cards + drawer
- ◆ **Total thickness window:** 0.250"–0.638"

If you try fewer than 2 cards, the QuadCam gets confused.
Fewer than that and the cam starts asking existential questions.

More than 14 with a drawer?

The QuadCam starts tapping out like it's wrestling Bigfoot.

Without Drawer

(For minimalists who still carry 19 cards, but “don't carry much.”)

- ◆ **Minimum:** 8 cards

- ◆ **Maximum functional:** 19 cards
- ◆ **Maximum physical:** 20 cards (not recommended with QuadCam installed)

At 20 cards, the QuadCam files a formal complaint.

3.3 — Using a Tile®, Chipolo, or Tracker

Trackers are useful — but each one counts as:

+3 cards.

Because science. And plastic thickness. And probably spite.

Example:

- ◆ 10 cards + Tile = 13-card stack
- ◆ 12 cards + Tile + drawer = Too tall → QuadCam starts protesting

3.4 — Why Thickness Matters

Inside your Walletül, the top and bottom plates float on bungee tension.

The QuadCam rides between them and lifts the bottom plate.

If the plates are too far apart or too close:

- ◆ **Too thin:** QuadCam can't engage properly → floppy clamp
- ◆ **Too thick:** QuadCam rides too high → unreliable lift or no reset
- ◆ **Just right:** Smooth lift → perfect reset → pure wallet bliss

Think of it like a mechanical Goldilocks:

- ◆ Not too loose
- ◆ Not too tight
- ◆ Just right, with a tactical click

3.5 — Tensioning When the QuadCam *Is Installed*

(This is the default mode. If your QuadCam is still in the wallet, these are the instructions you want.)

When the QuadCam is installed, the bungee system controls **two different tension zones**:

A. Clamp Tension (QuadCam Side)

This controls how tight the wallet grips your cards in **Clamp Mode** — the state it returns to after the QuadCam Tactical Click.

To Adjust Clamp Tension:

- ◆ **Pull more bungee out (QuadCam side) → tighter clamp**
- ◆ **Let bungee retract → lighter clamp**

This affects:

- ◆ How secure your cards feel
- ◆ How firmly the plates hold the stack
- ◆ How resistant the wallet is to being shaken upside down
- ◆ How the wallet behaves when fully closed

This is the “don’t lose your cards while mountain biking” tension.



B. Lift Tension (Cash Strap Side)

This controls how smooth or grippy the wallet feels **during QuadCam lift** when you’re pulling cards out.

To Adjust Lift Tension:

- ◆ **Pull more bungee out (cash bar button side) → firmer, more grabby**
- ◆ **Let bungee retract → smoother, less grabby**

This affects:

- ◆ How cards slide during fanning
- ◆ Whether one-handed pulls feel crisp or soft

This is the “I want this wallet to feel like a precision machine” tension.



C. Finding the Goldilocks Tension (QuadCam Installed)

The Sweet Spot =

- ✓ Cards held securely in Clamp Mode
- ✓ Smooth card access during lift
- ✓ No QuadCam grumpiness

RRG Official Test:

1. Disengage QuadCam
2. Pull on the cards
3. Evaluate:
 - ◆ Cards hard to pull out → **Good tension**
 - ◆ Cards pull out easily → **Too loose**
4. Engage QuadCam
5. Pull cards out
 - ◆ Cards easy to pull out → Good tension
 - ◆ Cards hard to pull out → Too tight

3.6 — Tensioning When the QuadCam *Is Removed*


(This is for ultralight mode, max card mode, or people who like simplicity and elastic cord theology.)

When the QuadCam is removed a tensioned sweet spot must be found. There are no “two zones” anymore — it’s a single tension system.

The Goal:

A clean, even, balanced tension that:

- ✓ Holds your cards securely
- ✓ Slides smoothly
- ✓ Maintains consistent friction

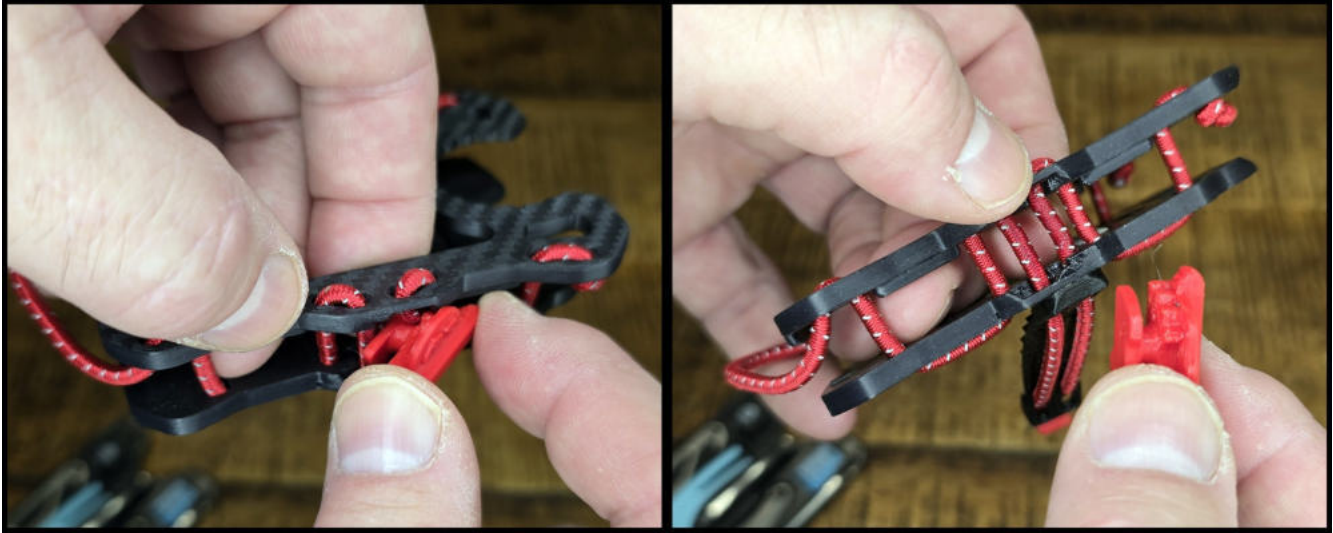

A. Adjusting Bungee Tension in QuadCam - Free Mode

To Tighten:

Pull the bungee outward **evenly on BOTH sides** of the accessory loop.

To Loosen:

Let the bungee relax back into the wallet body.

Why evenly?

Because uneven tension causes:

- ◆ Plate lean
- ◆ Lopsided clamp force
- ◆ Cards drifting to one side
- ◆ A wallet that feels “off”

Even tension = smooth operation.

B. Goldilocks Test (QuadCam Removed)

Same test — different purpose now:

1. Hold the wallet upside down
2. Shake gently
3. Observe:
 - ◆ Cards stay put → **Correct tension**
 - ◆ Cards fall out → **Too loose**
 - ◆ You need two fingers and a prayer to pull a card → **Too tight**

In QuadCam-free mode, this test determines *everything*, because the bungee now does the work alone.

C. When You Should Remove the QuadCam

- ◆ You want maximum card capacity
- ◆ You want ultralight minimalist mode
- ◆ You don't need plate lift — just card friction
- ◆ You want your wallet dirt-simple and bombproof

And when the QuadCam is removed:

- ◆ There are no lift levels
- ◆ No automatic reset
- ◆ No Tactical Click

Just pure bungee power holding your life together.

3.7 — Overloading the Wallet (QuadCam Mode Only)

This section ONLY applies when the QuadCam is installed.

If you exceed the 0.638" max thickness:

- ◆ It stops engaging correctly
- ◆ It may skip a lobe
- ◆ Reset reliability drops
- ◆ Lift height becomes inconsistent
- ◆ Tactical Click may disappear (the saddest possible outcome)

If you're determined to carry a skyscraper of cards?

Remove the QuadCam and go full bungee mode.
Your wallet won't judge — but physics will.

SECTION 4 — CASH BAR: SHOW ME THE MONEY (GRIP)

Field Manual Spec:

The **Walletül Release's cash bar** features a precision-printed **chevron-patterned, textured surface** engineered for maximum grip and minimal slip. Fabricated from flexible TPU, it grips tight whether you're carrying one folded bill or a full inch-thick payday. The angled tread pattern distributes pressure evenly, maintaining tension and alignment so your cash stays put through miles, meals, and misadventures.

Civilian Translation:

That grippy bar isn't just decoration—it's a **traction control system for your dough**. The chevron grooves bite down on your bills like off-road tires on a muddy trail, keeping them steady when your fingers are slick, your pack's swinging, or your buddy "just wants to borrow a twenty."



Chevron Cash Bar – TPU Grip Geometry
Optimized for Friction, Flexibility & Field Durability

4.1 — Cash Bar Tension Adjustment

To fine-tune how tightly the Walletül Release holds your money

Unlatch the cash strap.

- ◆ **Remove all cards and trays** from the wallet.
- ◆ **Squeeze the top and bottom plates together** to reduce slack.
- ◆ **Pull the bungee tighter** beginning at the top of the cash strap.
- ◆ Continue pulling until the **excess exits through the accessory loop**.
- ◆ **Reinsert your cards and trays** to test the fit.
- ◆ **Repeat adjustments** until the desired tension is achieved—snug enough to secure your stack, but not so tight it thinks your cash owes it money.

SECTION 5 — MODULES: TOOL TRAY, QUARTER TRAY & JUNK DRAWER TRAY

Because pockets deserve upgrades.

5.1 — Introduction to the Walletül Modular Tray System

Your Walletül Release is more than a wallet — it's a modular, field-ready carry platform.

The trays slide in and out using the rear access slot, giving you quick access, customizable load outs, and that warm feeling of knowing you're more prepared than everyone around you.

Each tray has a specific purpose:

- ◆ **Tool Tray** — your pocket workshop
- ◆ **Quarter Tray** — exact change on command
- ◆ **Junk Drawer Tray** — the “just in case” catch-all

Let's break them down.

5.2 — TOOL TRAY (The Pocket Survival Kit)

Field Manual Spec:

Precision-fit slots for tools you'll actually use, engineered to eliminate rattle and maintain balance under movement.

Civilian Translation:

Your mini survival kit. In your wallet. Without looking like a mall ninja.

The Tool Tray accepts the following items (all optional, all awesome. See Load Out Like a Legend section)

- ◆ Folding scalpel knife
- ◆ Two flossers
- ◆ Can/bottle opener/ $\frac{1}{4}$ " bit driver/S2 bit driver combo tool
- ◆ Tweezers
- ◆ Needle & thread
- ◆ Pen
- ◆ USB memory stick
- ◆ Micro SD card

Each slot is designed to grab the item firmly but release it cleanly using one of the two principles of all good EDC gear:

1. "Push down where the illustrations show."
2. "Pull where it makes sense."

5.2.1 — Tool Tray Operations

Removing the Can/Bottle Opener

Push down on the tool's front edge in the tray.

It'll pop free proudly — like it's happy to help you fix dinner.



Using the Bottle Opener


Hook the lip under the bottle rim.

Push down on the tool.

Cap pops off for hydration.

Using the Can Opener

Hook the lip under the can rim.
Press blade down.
Work the tool around the edge.

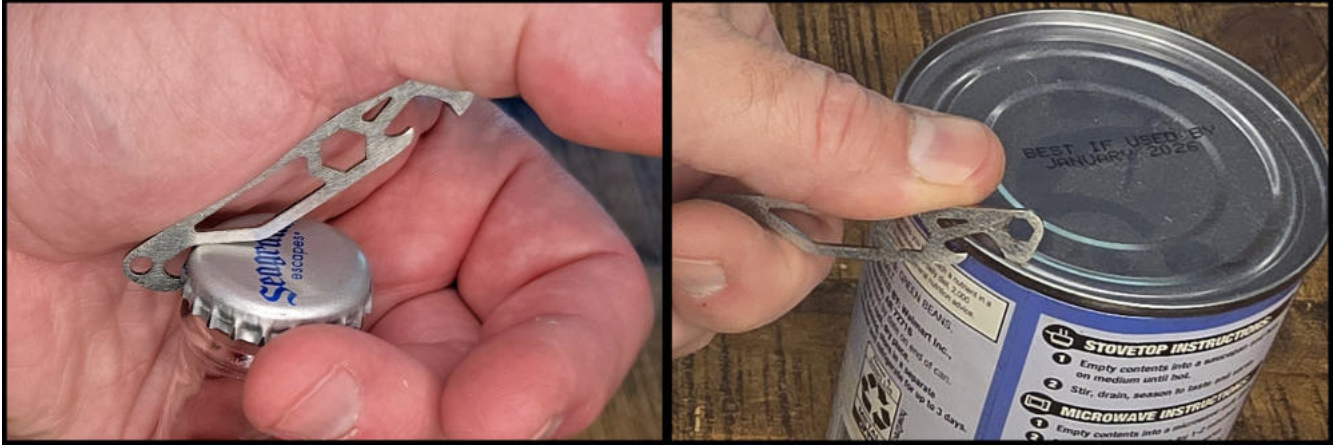

Removing the USB Memory Stick

Press down on the exposed corner.
It slides out smooth — like you meant to do it.

Removing the Micro SD Card

Press down until it releases.
Then guard it with your life. Those things disappear faster than an unguarded biscuit at a church potluck.



Using the ¼" or S2 Bit Driver

Slide the bit securely into the tool slot

Use the tool like a wrench to tighten or loosen screws.

Trail repairs, gear adjustments, and “I’ll fix it myself” moments just got wallet-sized.



Tweezers, Needle, Thread, and Bits

Each piece fits snugly and removes easily with a thumb press or nudge.

Whether you're adjusting gear screws, removing splinters, fixing a jacket, or pulling off an emergency sewing job... the Tool Tray turns your wallet into a tiny MacGyver kit.

5.3 — QUARTER TRAY (Exact Change Without the Jingle)

Field Manual Spec:

Slim, precision-fit tray with six individual press-fit pockets and rear clearance holes for effortless, profanity-free coin removal.

Civilian Translation:

Carry six quarters without sounding like a maraca.

The tray:

- ◆ Holds **6 quarters**
- ◆ Keeps them dead silent
- ◆ Releases each coin through the rear push-through holes
- ◆ Slides in and out like a dream

Why You Want This Tray

- ◆ Parking meters
- ◆ Vending machines

- ◆ Laundromat operations
- ◆ When the only snack machine for miles accepts coins only
- ◆ When you want to feel like a magician pulling quarters from thin air



Quarter Tray – Precision Coin Retention System

5.4 — JUNK DRAWER TRAY (Because Chaos Needs Organization, Too)

Field Manual Spec:

Adaptive storage platform for up to 12 quarters (or equivalent mission gear), ideal for miscellaneous essentials.

Civilian Translation:

Your tiny catch-all tray for all the stuff you swear you'll organize "later."

Use it for:

- ◆ Mosquito wipes
- ◆ Medication
- ◆ Moleskin
- ◆ Bandages
- ◆ Screw stash
- ◆ Zip ties
- ◆ Up to 12 quarters
- ◆ Energy tabs
- ◆ Mysterious items you can't seem to throw away

Why This Tray Exists

Because sometimes survival means snacks.

Other times, it means exact change.

And once in a while... it means blister repair on mile 4 of a 3-mile hike.



Junk Drawer Tray – Adaptive Storage Platform
Optimized for Quarters, Comfort, and Questionable Decisions

5.5 — Module Tips & Best Practices

1. Use a card as a guide rail

Trays slide in smoother and straighter when guided by a partially pulled card.

2. Engage the QuadCam during removal

It creates the perfect amount of clearance for tray extraction.

3. Install until fully flush

A properly seated tray will be flush with the plate and feel solid. If it's sticking out, push a bit further.

4. Don't overload the tray


If you need to force it in, the tray is politely telling you to rethink your choices.

5. Mix and match

Stack trays like a pro for the ultimate load out:

- ◆ Tool Tray + Quarter Tray
- ◆ Quarter Tray + Junk Drawer

- ◆ Tool Tray + Junk Drawer
- ◆ All three (if you enjoy thick wallets and good stories)

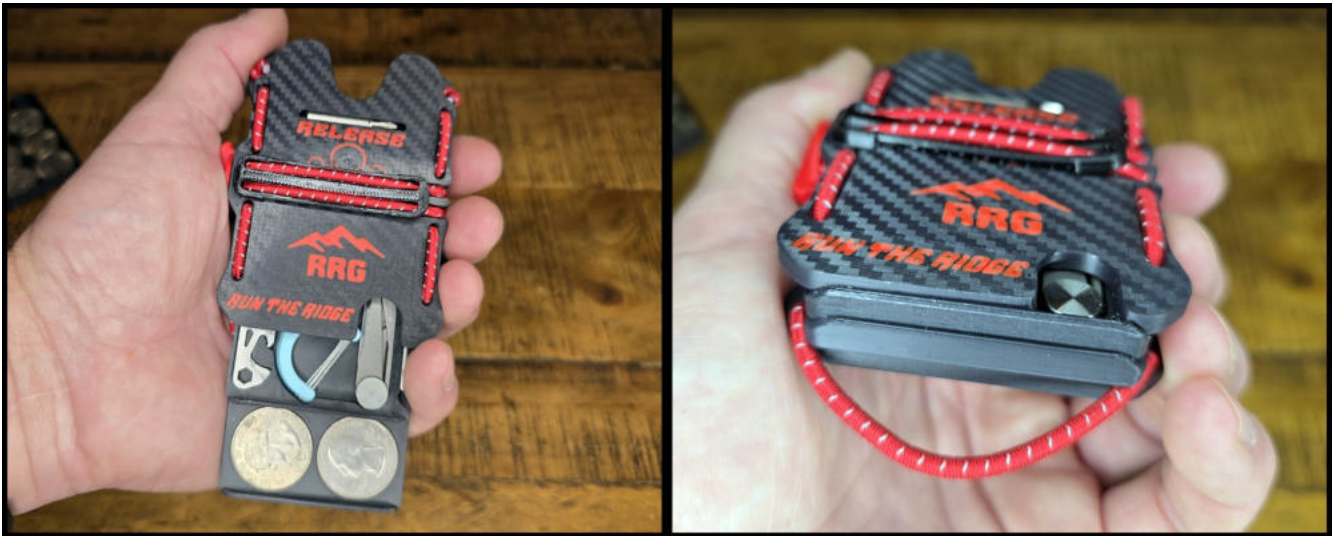

5.6 — Using the Front Plate Bottle Wrench

Slide the cards in the Walletül out of the back just enough to clear the wrench cutout on the front plate. Place the wrench over the twist-top bottle cap and grip the top plate firmly on both sides of the wrench slot. Squeeze and twist to remove the cap — hydration (or celebration) achieved.



Pro Tip:

For best results, maintain a firm grip and act like you've opened one before. The Walletül won't judge, but your trail buddies might.

SECTION 6 — ACCESSORY SYSTEM

For flashlights, lighters, keys, tooters, tick pullers, and whatever other nonsense you carry.

6.1 — The Accessory Loop (Your Pocket Hitching Post)

The Accessory Loop is the flexible bungee loop mounted on the back side of the Walletül Release.

Designed For:

- ◆ Mini flashlights
- ◆ Mini lighters
- ◆ Key rings
- ◆ Tooter Tick Taker
- ◆ Tiny tools
- ◆ Emergency gear
- ◆ Or that one mystery gadget you use once a year but swear is essential

Why the Accessory Loop Works So Well:

It acts as both:

- ◆ **A gear hanger**
- ◆ **A rapid pocket extraction point**
- ◆ **A modular attachment anchor**

Loop side up = quick retrieval.

Loop side down = accidental pocket wrestling.

Choose wisely.

6.2 — Accessory Quick Clips (Snap-On Gear Carriers)

Accessory Quick Clips allow you to attach small items to the Accessory Loop without threading anything through the bungee.

They're rugged, grippy, and secure — like a tiny gear carabiner with more personality.

Each clip has a slot that snaps over the Accessory Loop and keeps the add-on gadget where you put it.



6.2.1 — Attaching an Accessory Clip

1. Hold the clip so the open end faces the Accessory Loop
2. Set the loop right at the clip's opening
3. Pull firmly until the bungee **snaps** into place
4. Slide the clip along the loop to position it where you want

That little pop you hear is the sound of a good connection and even better decisions.

6.2.2 — Removing an Accessory Clip

1. Pull the clip toward the opening
2. Keep pressure so the loop is aligned with the exit
3. Slide the loop out through the opening
4. Celebrate your victory over small objects

If the clip resists removal, don't panic — it's *designed* to resist. Just line it up, stay patient, and gently persuade it to let go.

6.3 — What You Can Attach (RRG-Approved Mini Gear)

Depending on your load out, the Accessory Loop + Clip system can mount:

- ◆ **Mini Flashlight** – because darkness is real
- ◆ **Mini Lighter** – fire fixes everything
- ◆ **Keys** – the boring essential
- ◆ **Toter Tick Taker** – whistle plus tick removal is serious business

- ◆ **Small pry tools**
- ◆ **Tiny multi-tools**
- ◆ **AirTag/Tile fob**
- ◆ **Any micro-EDC thing that brings joy or survival**

If it has a keyring hole, split ring, or lanyard hole, it'll probably attach.

SECTION 7 — MAINTENANCE & BUNGEE REPLACEMENT

Because even great gear deserves a little TLC.

7.1 — Basic Care & Cleaning

Your Walletül Release is built tough, but like a good pocketknife or a favorite pack, it appreciates a bit of maintenance.

Keep It Clean:

Brush out dirt, sand, and pocket lint.

A clean Walletül carries cash — not last week's trail mix crumbs.

Soap, Not Solvents:

Wipe with mild soap and water.

Solvents belong on engine blocks, not your wallet.

Dry Before Reloading:

Don't seal damp money or tools inside.

Unless you're doing questionable laundry.

Avoid Extreme Heat:

ASA is rugged — but don't leave the wallet on a dashboard, camp stove, or inside a volcano.

Respect the Bungee:

It's the muscle behind your money.

If it starts looking like an old shoelace, it's time for a replacement.

7.2 — When to Replace the Bungee

Replace the bungee when you notice:

- ◆ Excessive looseness
- ◆ Fraying
- ◆ Inconsistent tension
- ◆ QuadCam behaving grumpily
- ◆ General “this doesn’t feel right” vibes

A fresh bungee restores:

- ◆ Grip
- ◆ Lift feel
- ◆ Stability
- ◆ Card confidence
- ◆ Wallet swagger

7.3 — Bungee Replacement (Full Procedure)

This is the complete, step-by-step RRG threading ritual. Take your time. Patience required. Profanity optional.

7.3.1 — Bungee Kit Checklist

Before starting, ensure you have:

- ◆ Replacement 1/8" reflective bungee
- ◆ Cash bar
- ◆ Cash bar handle
- ◆ QuadCam Lift Knob
- ◆ Scissors or snips
- ◆ Lighter (for sealing ends)

Missing any of these pieces = immediate regret.

7.3.2 — Step-By-Step Bungee Threading Guide

1. Start at the Top Plate

Thread the bungee **from the underside** of the top plate as shown below.

This is your anchor point.



2. Downward Pass

Thread the bungee down through the next aligned hole in the top and bottom plates.

You're forming the first leg of the tension loop.

3. Bottom Plate Pass & Orientation

Thread through the bottom plate hole as shown:

- ◆ **Front-facing** side: bungee should come out toward the front
- ◆ **Back-facing** side: bungee should come out toward the back

Think:

Front toward fame. Back toward shame.



4. Alignment Phase

Continue threading through the aligned holes while **keeping your card/tray stack loaded in the wallet.**


This ensures:

- ◆ Your tension spacing is perfect
- ◆ The plates stay parallel
- ◆ You don't end up with a sideways clamp that judges you later

5. Return Path

Thread the bungee back upward through the matching set of holes.

You are now forming the “quad-cross” pattern that the QuadCam will sit inside.

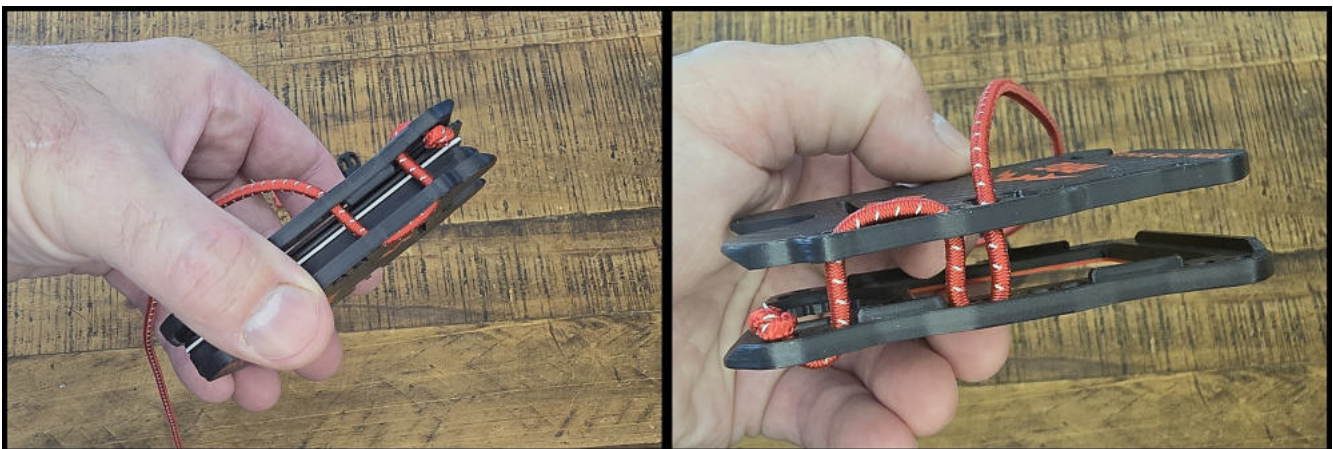

6. Install the Cash Bar

Slide the cash bar onto the bungee.

Take your time — this step is 90% skill, 10% prayer, and 100% necessary.

7. Add the Cash Bar Handle

Slide the handle on **flat side facing the wallet**.

If it's backwards, now is the time to fix it — NOT 15 steps later when frustration is at maximum PSI.



8. Final Threading Pass

Now that the QuadCam is properly seated:

- ◆ Continue threading the bungee through the remaining holes
- ◆ Pass the bungee back into the top plate
- ◆ Complete the symmetrical loop pattern

You're closing the system now — no turning back.

9. Add Optional Accessory Gear

If you want accessories hanging from the loop:

- ◆ Flashlight
- ◆ Lighter
- ◆ Key ring
- ◆ Tick tool
- ◆ Whatever small nonsense you rely on

NOW is the moment to slide it onto the bungee.
After tying off, it's too late.



10. Symmetry Check

Thread the bungee into the opposite top plate hole.

This ensures:

- ◆ Balanced plate tension
- ◆ No leaning
- ◆ Clean QuadCam pivot
- ◆ Happy wallet

If it looks crooked, pause and fix it.



11. Tie-Off

Tie a **single overhand knot** on the underside of the top plate.

Pull tight.

Trim excess.

Melt the ends with a lighter (gently) to prevent fraying.

Warning:

Do not melt:

- ◆ the wallet
- ◆ your cash
- ◆ your fingers
- ◆ your dignity



8. Install the QuadCam Lift Knob (CRITICAL STEP IF YOU CARE ABOUT LOOKING COOL)


The QuadCam must sit **between the four bungee strands** that create its pivot cradle.

How to Install the QuadCam into the Bungee Cross:

1. Identify the four bungee lines

These form a rectangle near the pivoting end of the cash bar.

2. **Rotate the QuadCam so its main body is parallel with the wallet plates**
(Flat, not angled.)
3. **Slide the QuadCam between the MIDDLE TWO bungee lines**
These are the two central strands that form the inside of the cradle.
*Make sure the cash strap is not latched.
4. **Push the QuadCam inward until the THIRD bungee line slips into the opposite groove**
The knob has two grooves—one on each side of the cam body.
You want:
 - ◆ First groove → between center bungees
 - ◆ Second groove → capturing the opposite bungee
5. **Ensure the QuadCam is centered between all four bungees**
When positioned correctly, the QuadCam should:
 - ◆ pivot freely
 - ◆ sit flat
 - ◆ be held evenly by four strands

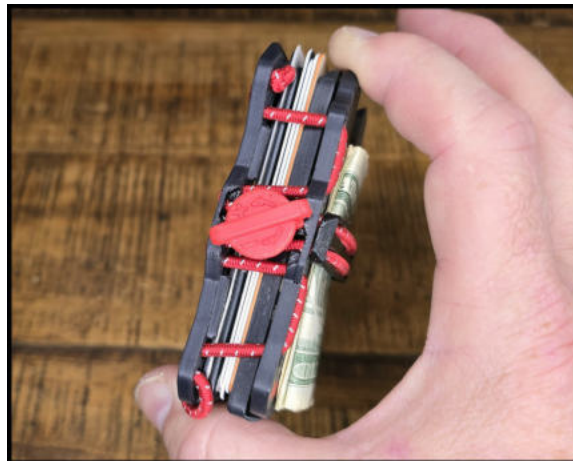

7.4 — Final Tension Check

Insert your cards and trays.
Test the wallet:

If using the QuadCam:

- ◆ Check Clamp Mode grip
- ◆ Check Lift tension
- ◆ Check QuadCam reset

- ◆ Do the card pull test
- ◆ Make small adjustments by pulling or loosening bungee on the correct side

(Refer back to Section 3 for QuadCam vs. non-QuadCam tuning rules.)

If *not* using the QuadCam:

- ◆ Pull evenly on both sides of the bungee
- ◆ Balance tension so plates stay straight
- ◆ Do the card pull test
- ◆ Adjust until perfect

SECTION 8 — Load Out Like a Legend (Because Pockets Deserve Purpose)

Build your ultimate load out — urban, trail, or full-on apocalypse mode.


Field Manual Spec:

The following equipment links provide compatible load out options for your **Walletül Release Tool Tray and Accessory System**. All components have been field-tested for fit, function, and general awesomeness.

Civilian Translation:


Here's the good stuff — the tools, gadgets, and gizmos that turn your Walletül Release from “neat wallet” to “trail survival command center.” Stock up, gear up, and show gravity who's boss.

Lighter

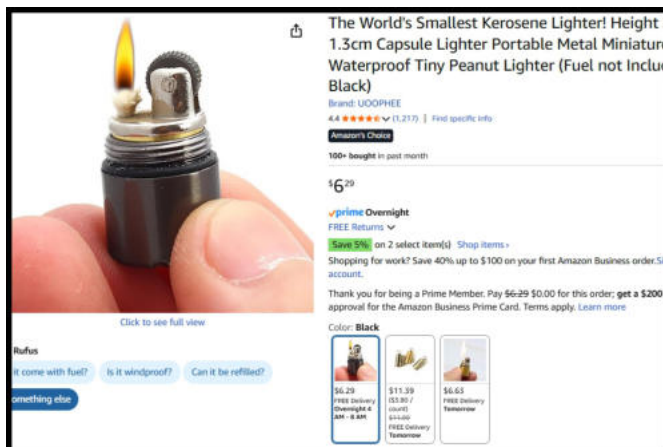


<https://ridgerunnergear.net/lighter>

Flashlight

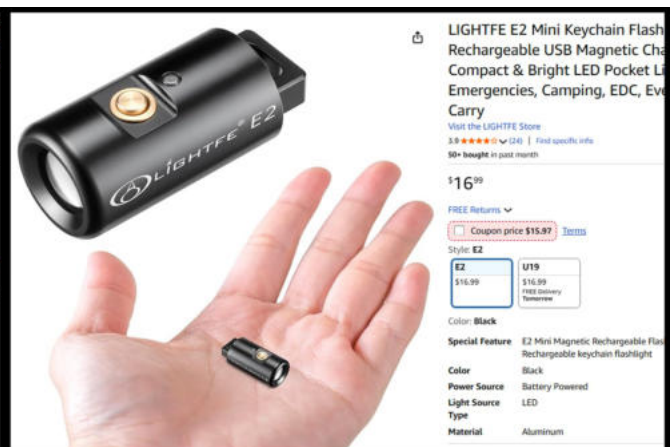


<https://ridgerunnergear.net/flashlight>

Folding Scalpel Knife

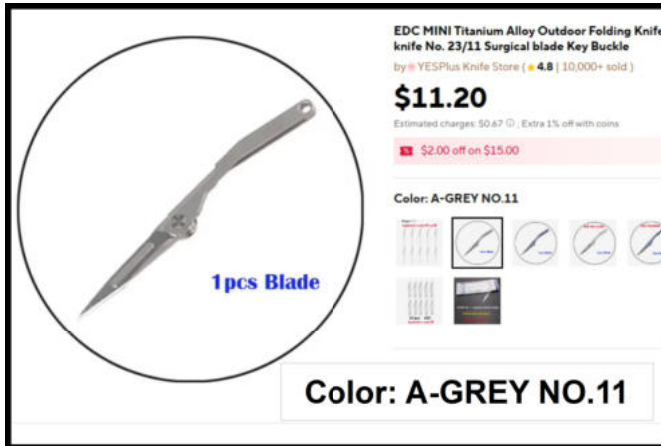

<https://ridgerunnergear.net/knife>

USB Memory Stick

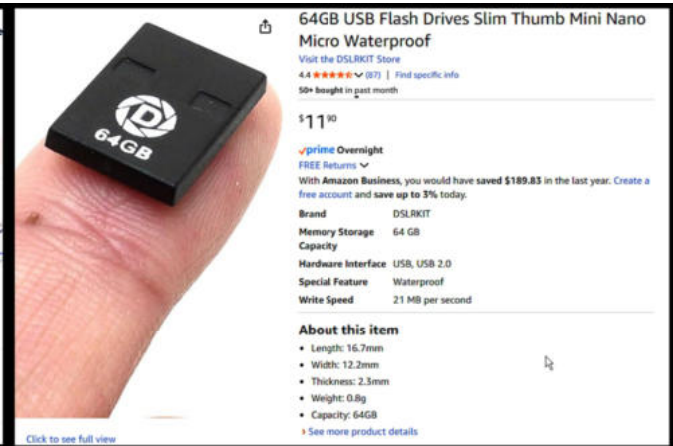

<https://ridgerunnergear.net/memorystick>

Flossers




<https://ridgerunnergear.net/flossers>

Micro SD Card



<https://ridgerunnergear.net/microsdcard>

Pen

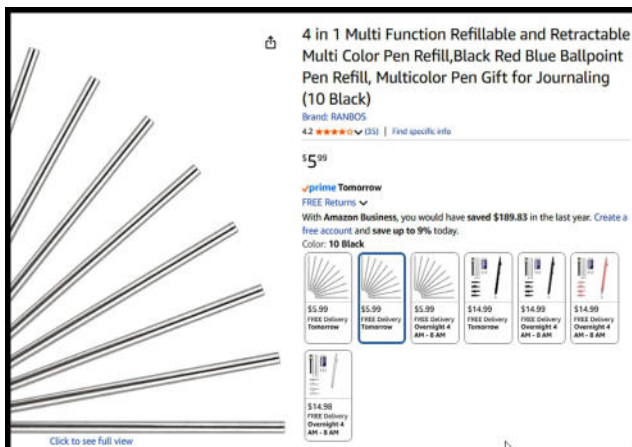


<https://ridgerunnergear.net/pen>

Battery




<https://ridgerunnergear.net/battery>

Tracker

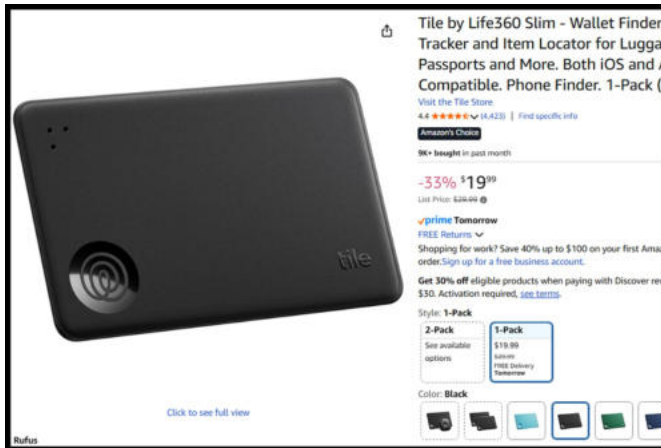

<https://ridgerunnergear.net/tracker>

RFID Blocker

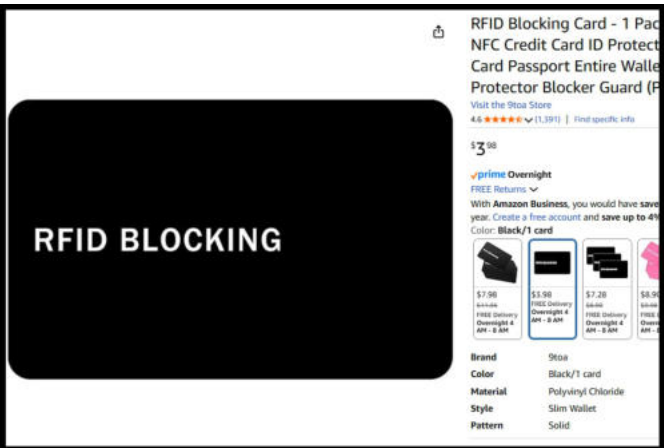

<https://ridgerunnergear.net/rfidblocker>

Magnifier




<https://ridgerunnergear.net/magnifier>

Comb




<https://ridgerunnergear.net/comb>

Tool Card (Tweezers)

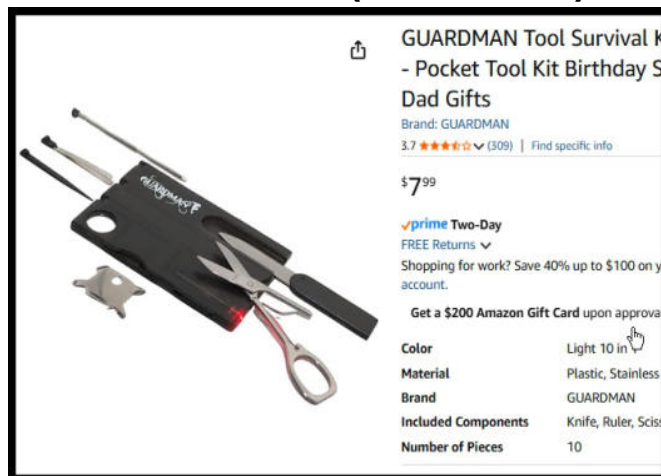

<https://ridgerunnergear.net/tweezers>

Pliers

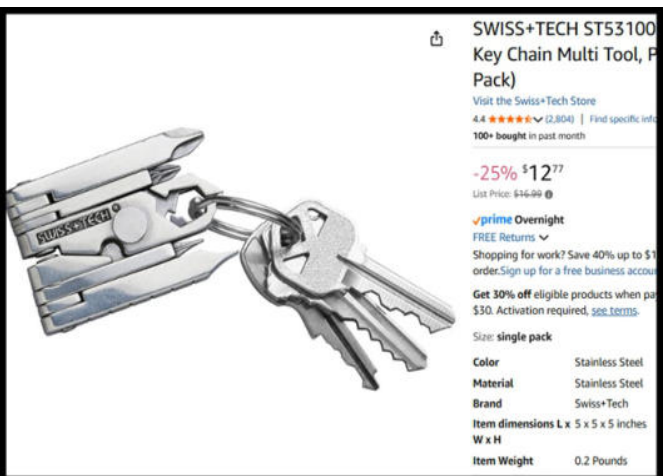

<https://ridgerunnergear.net/pliers>

SECTION 9 — Walletül Release Tips & Tricks

Field Manual Spec	Civilian Translation
Orientation Protocol – Utilize the open ID window for rapid license presentation and identification.	Showtime ready – Flash your ID without that pocket-digging interpretive dance routine.
Load Management – Adjust bungee tension to accommodate varying cash and card payloads.	Pack smart – Loosen for payday, tighten when your wallet's on a diet.
Covert Storage Access – Deploy hidden compartments for emergency funds or micro storage.	Secret stash mode – Hide your “rainy-day” money or that USB full of trail memes.
Tool Interface – Engage integrated wrench, bit slot, and gear loop for multi-role field service.	Pocket workshop – Tighten screws, crack bottles, or hang your mini light like a pro.
Tray Configuration – Insert optional utility, coin, or junk-drawer trays based on mission needs.	Choose your loadout – Coins, flossers, or mystery bits—no wrong answers, just heavier pockets.
Reflective Retrieval – Exploit night-visible bungee cords for low-light recovery operations.	Glow find – So when you drop it by the fire, you'll spot it before the raccoons do. .
Environmental Considerations – Avoid prolonged exposure to extreme heat or freezing temps.	Temperature check – Walletül Release likes adventure, not sauna sessions or snowbank naps.
Maintenance Directive – Clean periodically with mild soap and water to maintain function and dignity.	Basic hygiene – Because a dusty wallet says “hobo,” not “hiker.”
Mission Reminder – Designed for preparedness and practicality; misuse voids cool points.	Respect the gear – It's a wallet, not a pry bar, stress toy, or friendship tester.
Rapid Extraction Protocol : The accessory loop can be used to quickly retrieve your Walletül Release from your pocket when oriented with the loop facing the pocket opening.	Emergency Wallet Evacuation Plan : Loop side up = smooth grab. Loop side down = pocket wrestling. Choose wisely.


Need Parts? Want to Chat?

To purchase replacement parts contact us at:
www.rrgruntheridge.com




ITEM	QTY	PART #	DESCRIPTION
1	1	700162-06	PLATE, BOTTOM WALLET
2	1	700163-06	PLATE, TOP WALLET
3	1	700405-03	ASSY, RED BUNGEE CORD
4	1	700405-04	ASSY, BLACK BUNGEE CORD
5	1	700438-24	KNOB, QUADCAM
6	3	700439-04	CLIP, QUICK

REV NO	DATE	DESCRIPTION	ECN NO	BY
--------	------	-------------	--------	----

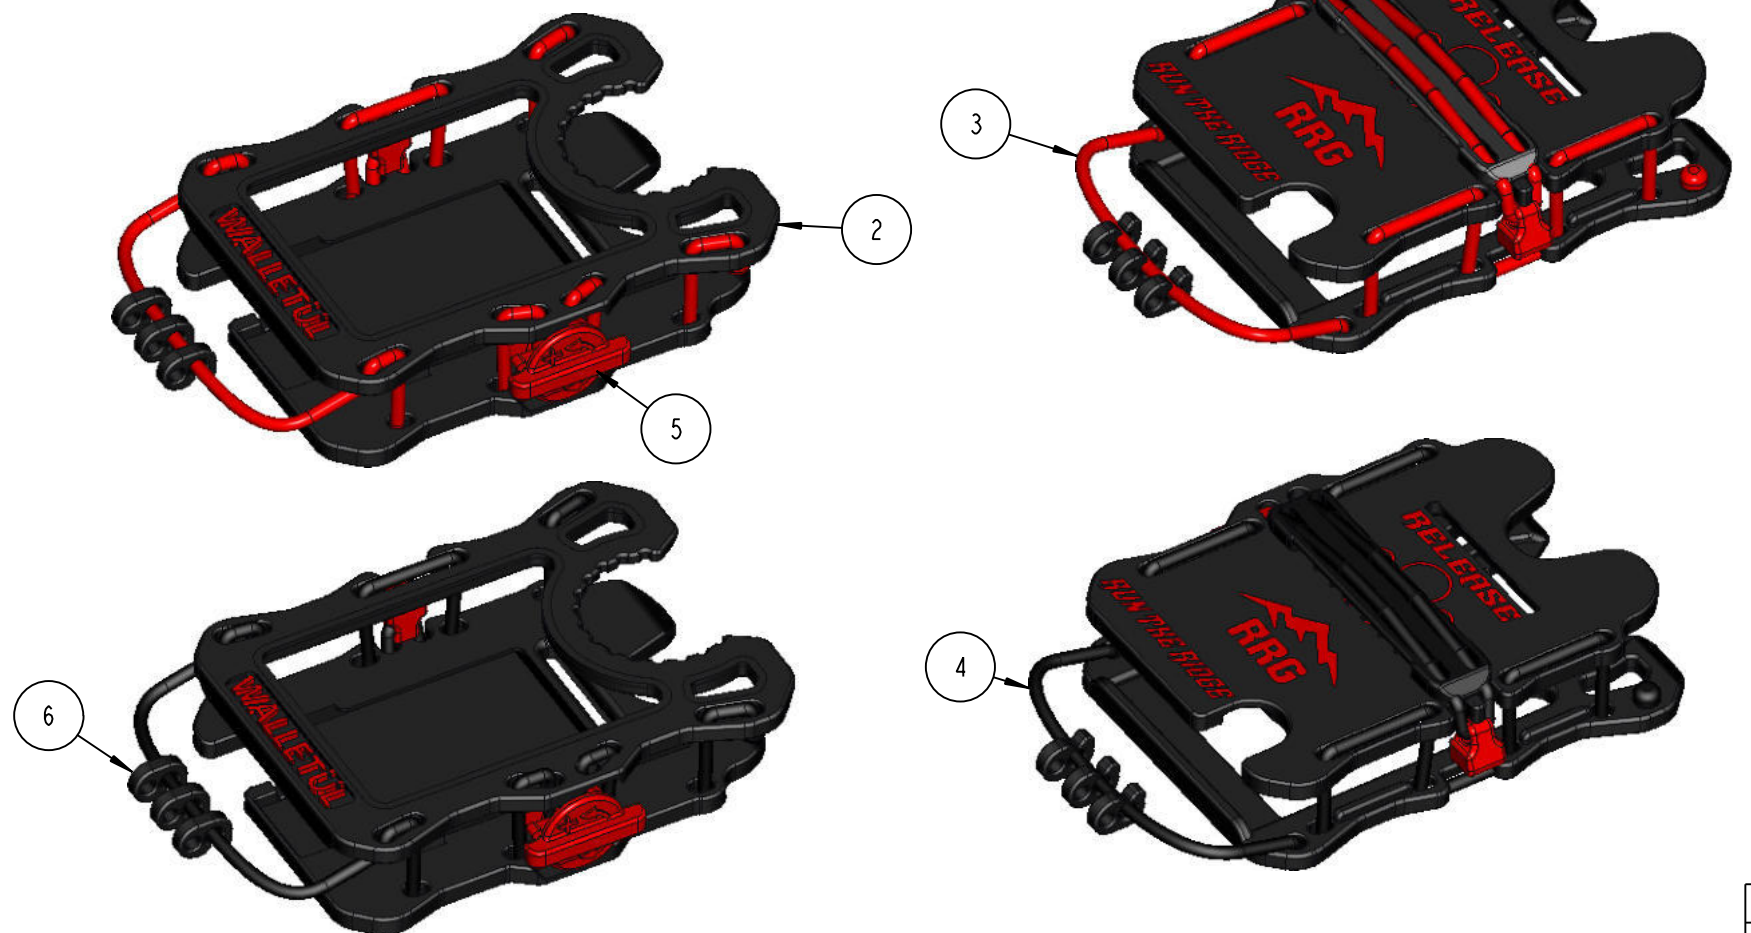


WEIGHT IN OZ.


1

DRAWN BY: A KEY	SCALE 0.750	DIMENSIONAL TOLERANCES UNLESS OTHERWISE NOTED	MATERIAL: N/A	THIRD ANGLE PROJECTION 	PROPRIETARY AND CONFIDENTIAL NO PORTION OF THIS DRAWING MAY BE QUOTED OR REPRODUCED IN ANY FORM WITHOUT THE EXPRESS WRITTEN PERMISSION OF RIDGE RUNNER GEAR, LLC. CANTON, GA 30114 USA	 RIDGE RUNNER
CHECKED BY:	DATE Feb-25-26	REMOVE ALL BURRS AND SHARP EDGES UNLESS OTHERWISE NOTED	HEAT TREAT: N/A	MODEL: WALLETUL	TITLE: ASSY, WALLETUL RELEASE	
TRACED BY:	MASTER	ALL DIMENSIONS ARE FINISHED DIMENSIONS DO NOT SCALE - WORK TO DIMENSIONS ONLY	FINISH: N/A	SHEET NO.: 1 OF 5		DRAWING # 700161-04


REV NO	DATE	DESCRIPTION	ECN NO	BY
-----------	------	-------------	-----------	----

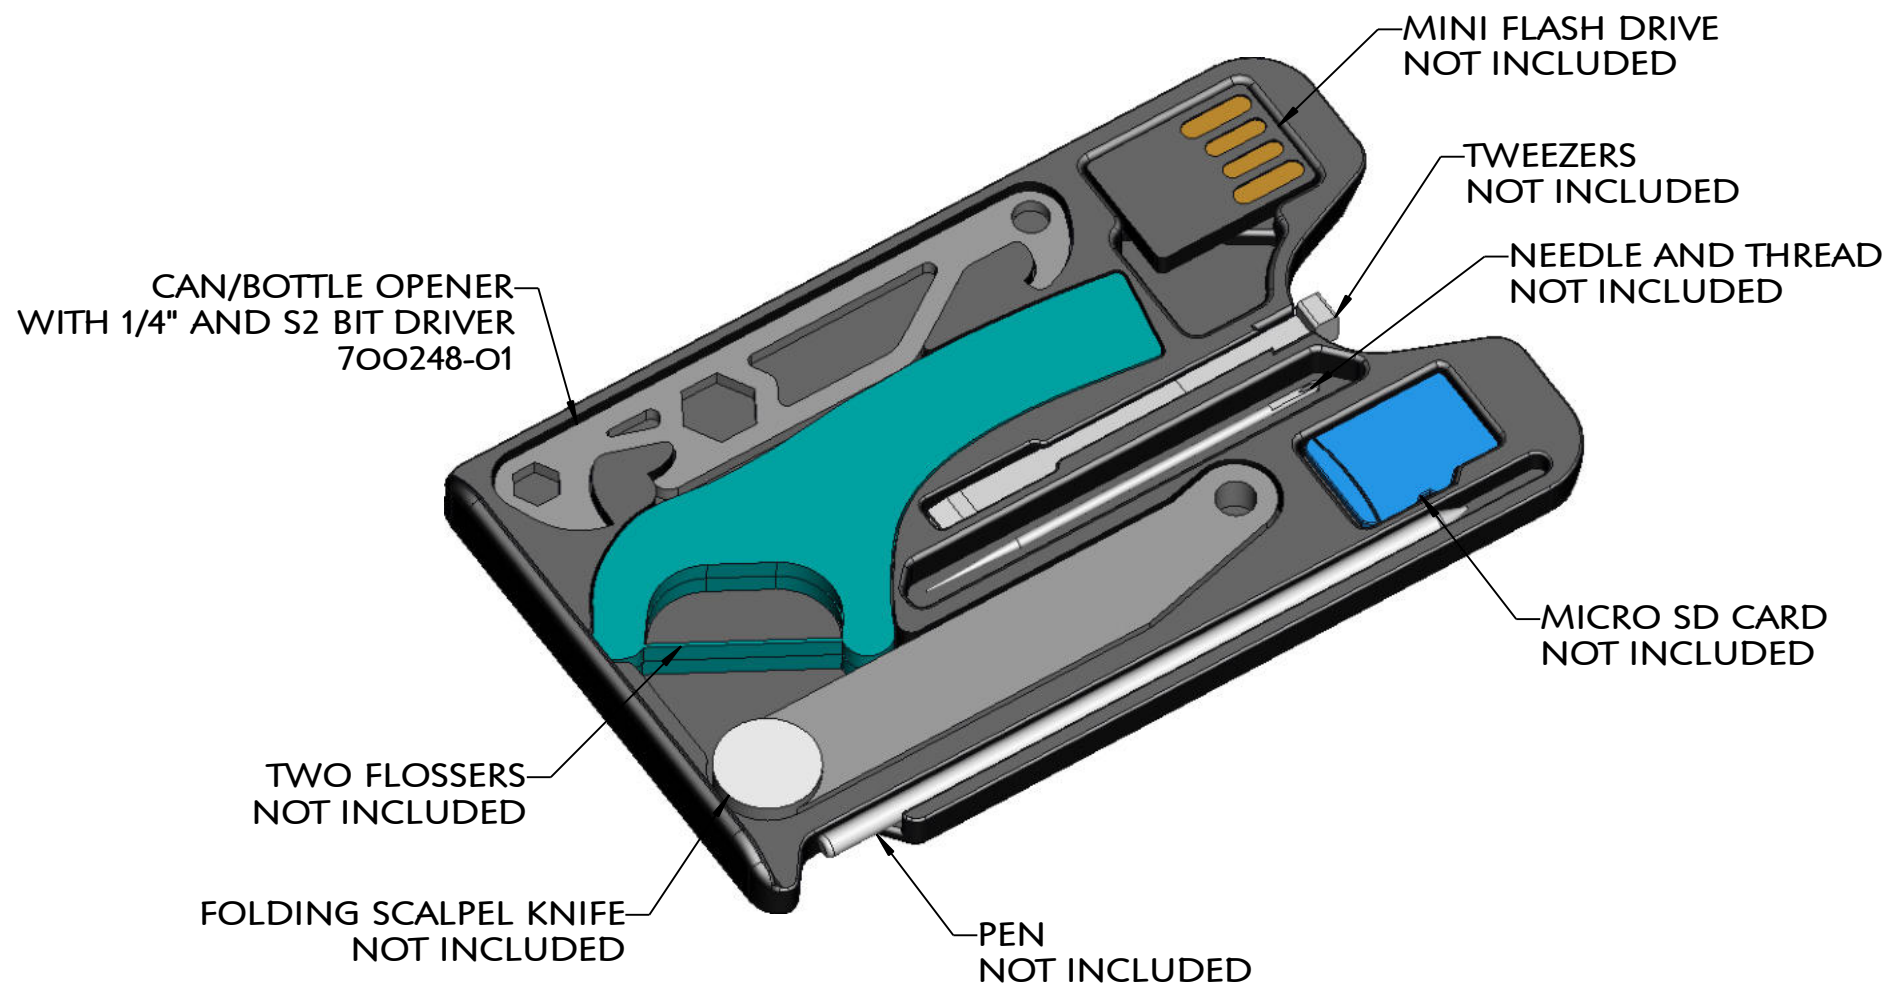

WEIGHT IN OZ.
N/A

DRAWN BY: A KEY	SCALE 1.500	DIMENSIONAL TOLERANCES UNLESS OTHERWISE NOTED <table><tr><td>.XX</td><td>.XXX</td><td>ANG.</td></tr><tr><td>.01</td><td>.005</td><td>.5</td></tr></table> REMOVE ALL BURRS AND SHARP EDGES UNLESS OTHERWISE NOTED ALL DIMENSIONS ARE FINISHED DIMENSIONS DO NOT SCALE - WORK TO DIMENSIONS ONLY	.XX	.XXX	ANG.	.01	.005	.5	MATERIAL: N/A		PROPRIETARY AND CONFIDENTIAL NO PORTION OF THIS DRAWING MAY BE QUOTED OR REPRODUCED IN ANY FORM WITHOUT THE EXPRESS WRITTEN PERMISSION OF RIDGE RUNNER GEAR, LLC. CANTON, GA 30114 USA	 RIDGE RUNNER
.XX	.XXX		ANG.									
.01	.005		.5									
CHECKED BY:	DATE Oct-11-25	HEAT TREAT: N/A	MODEL: WALLETUL	TITLE: ASSY, TOOL TRAY								
TRACED BY:	MASTER	FINISH: N/A	SHEET NO.: 1 OF 1		DRAWING # 700165-01							

REV NO	DATE	DESCRIPTION	ECN NO	BY
-----------	------	-------------	-----------	----

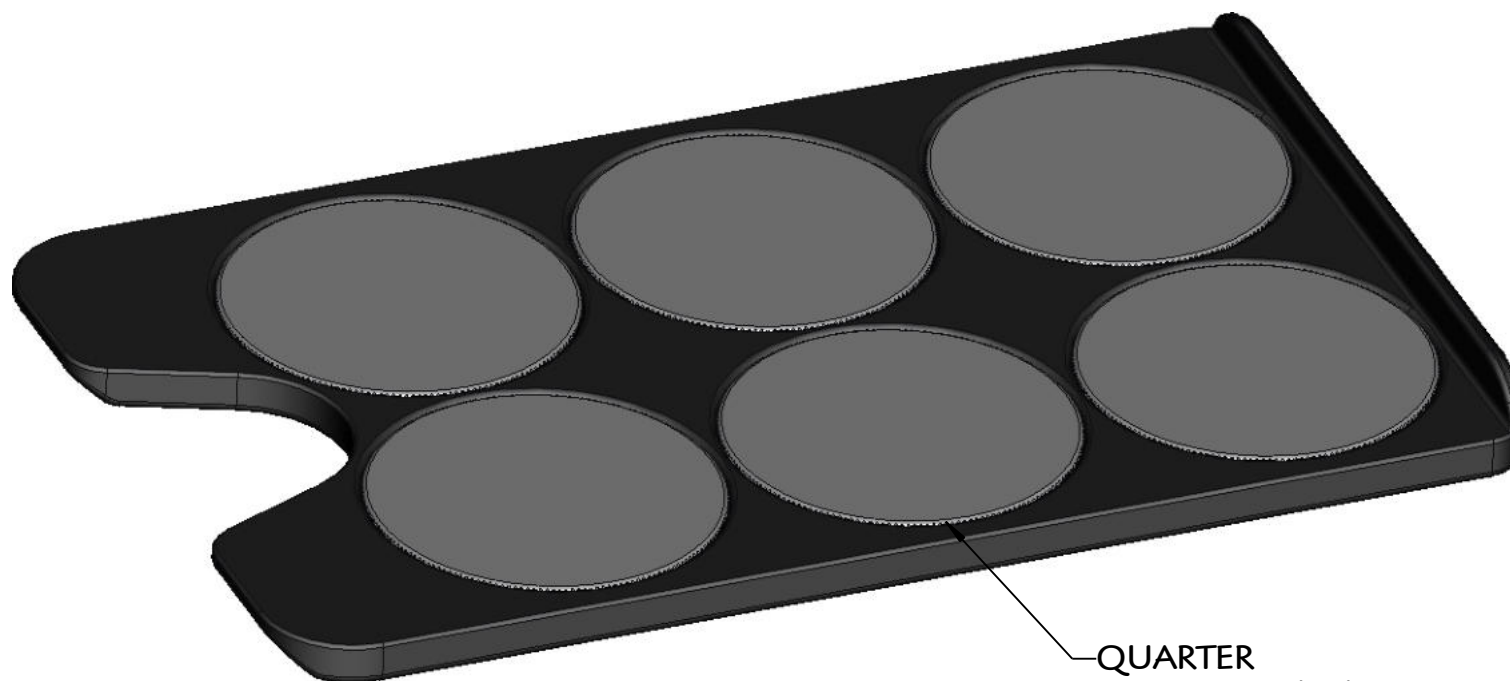

QUARTER
NOT INCLUDED


WEIGHT IN OZ.
.25

DRAWN BY: A KEY	SCALE 2.000	DIMENSIONAL TOLERANCES UNLESS OTHERWISE NOTED			MATERIAL: N/A	THIRD ANGLE PROJECTION 	PROPRIETARY AND CONFIDENTIAL NO PORTION OF THIS DRAWING MAY BE QUOTED OR REPRODUCED IN ANY FORM WITHOUT THE EXPRESS WRITTEN PERMISSION OF RIDGE RUNNER GEAR, LLC. CANTON, GA 30114 USA				
CHECKED BY:	DATE Oct-11-25	<table><tr><td>.XX</td><td>.XXX</td><td>ANG.</td></tr><tr><td>.01</td><td>.005</td><td>.5</td></tr></table>	.XX	.XXX	ANG.		.01		.005	.5	HEAT TREAT: N/A
.XX	.XXX	ANG.									
.01	.005	.5									
TRACED BY:	MASTER	REMOVE ALL BURRS AND SHARP EDGES UNLESS OTHERWISE NOTED ALL DIMENSIONS ARE FINISHED DIMENSIONS DO NOT SCALE - WORK TO DIMENSIONS ONLY			FINISH: N/A	SHEET NO.: 1 OF 1		DRAWING # 700406-01			


REV NO	DATE	DESCRIPTION	ECN NO	BY
-----------	------	-------------	-----------	----



WEIGHT IN OZ.
.21

DRAWN BY: A KEY	SCALE 2.000	DIMENSIONAL TOLERANCES UNLESS OTHERWISE NOTED .XX .XXX ANG. .01 .005 .5			MATERIAL: N/A		PROPRIETARY AND CONFIDENTIAL NO PORTION OF THIS DRAWING MAY BE QUOTED OR REPRODUCED IN ANY FORM WITHOUT THE EXPRESS WRITTEN PERMISSION OF RIDGE RUNNER GEAR, LLC. CANTON, GA 30114 USA	
CHECKED BY:	DATE Oct-11-25				HEAT TREAT: N/A			
TRACED BY:	MASTER	REMOVE ALL BURRS AND SHARP EDGES UNLESS OTHERWISE NOTED ALL DIMENSIONS ARE FINISHED DIMENSIONS DO NOT SCALE - WORK TO DIMENSIONS ONLY			FINISH: N/A	SHEET NO.: 1 OF 1		DRAWING # 700407-01

REV NO	DATE	DESCRIPTION	ECN NO	BY
-----------	------	-------------	-----------	----


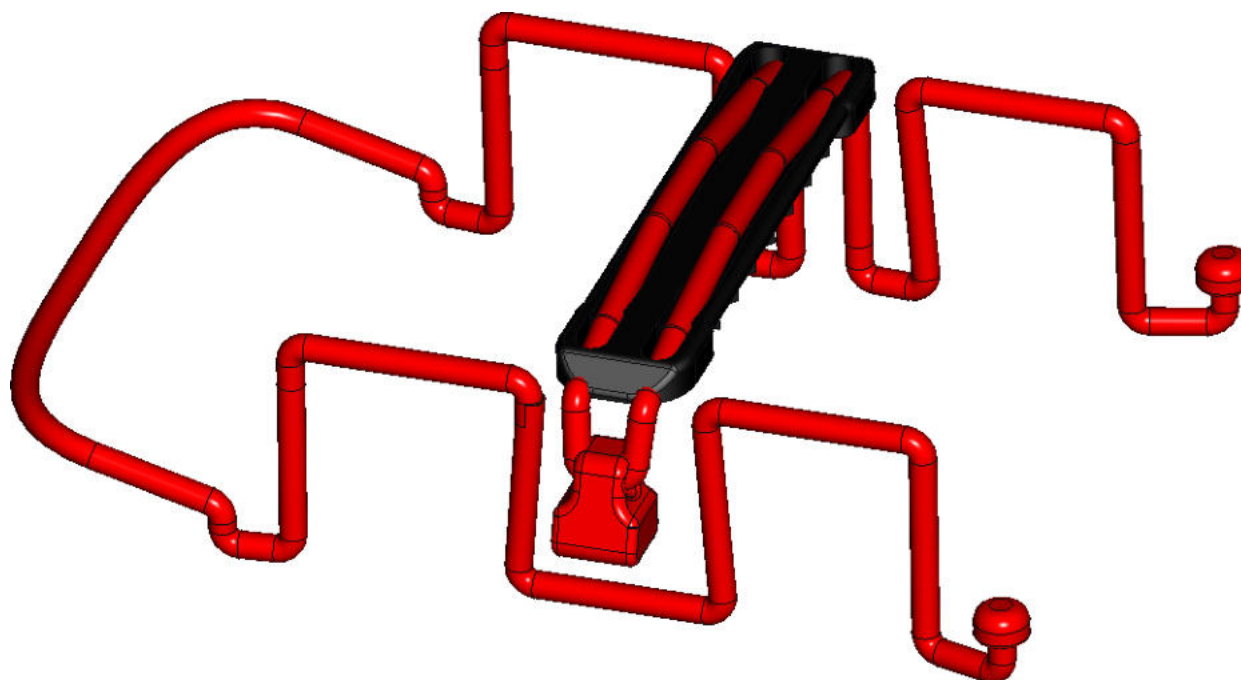


NOTES:


1- REFLECTIVE 1/8" RED BUNGEE IS 25" LONG TO BE CUT TO LENGTH NEEDED.

WEIGHT IN OZ.

N/A

DRAWN BY: A KEY	SCALE 1.500	DIMENSIONAL TOLERANCES UNLESS OTHERWISE NOTED	MATERIAL: N/A	THIRD ANGLE PROJECTION 	PROPRIETARY AND CONFIDENTIAL NO PORTION OF THIS DRAWING MAY BE QUOTED OR REPRODUCED IN ANY FORM WITHOUT THE EXPRESS WRITTEN PERMISSION OF RIDGE RUNNER GEAR, LLC. CANTON, GA 30114 USA						
CHECKED BY:	DATE Feb-28-26	<table><tr><td>.XX</td><td>.XXX</td><td>ANG.</td></tr><tr><td>.01</td><td>.005</td><td>.5</td></tr></table>	.XX	.XXX	ANG.		.01	.005	.5	HEAT TREAT: N/A	MODEL: WALLETUL
.XX	.XXX	ANG.									
.01	.005	.5									
TRACED BY:	MASTER	REMOVE ALL BURRS AND SHARP EDGES UNLESS OTHERWISE NOTED ALL DIMENSIONS ARE FINISHED DIMENSIONS DO NOT SCALE - WORK TO DIMENSIONS ONLY	FINISH: N/A	SHEET NO.: 1 OF 1		DRAWING # 700405-01					

REV NO	DATE	DESCRIPTION	ECN NO	BY
-----------	------	-------------	-----------	----

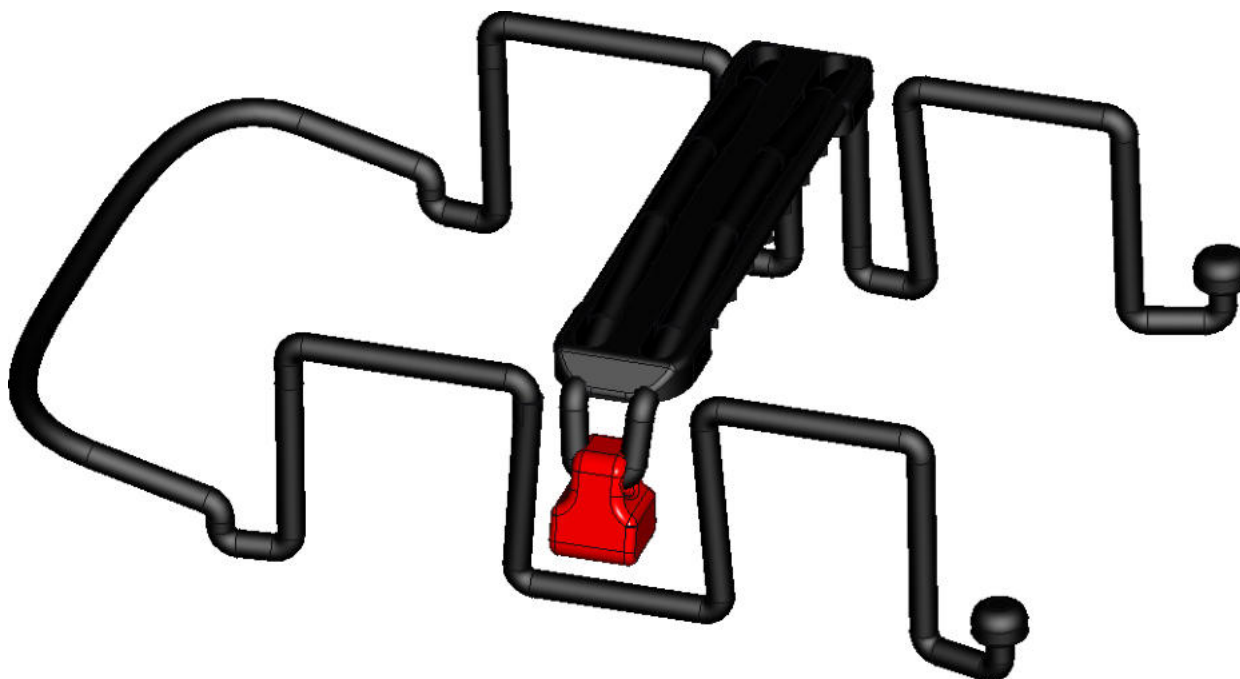

NOTES:

1- REFLECTIVE 1/8" BLACK BUNGEE IS 25" LONG TO BE CUT TO LENGTH NEEDED.

WEIGHT IN OZ.

N/A

DRAWN BY: A KEY	SCALE 1.500	DIMENSIONAL TOLERANCES UNLESS OTHERWISE NOTED	MATERIAL: N/A	THIRD ANGLE PROJECTION 	PROPRIETARY AND CONFIDENTIAL NO PORTION OF THIS DRAWING MAY BE QUOTED OR REPRODUCED IN ANY FORM WITHOUT THE EXPRESS WRITTEN PERMISSION OF RIDGE RUNNER GEAR, LLC. CANTON, GA 30114 USA	 RIDGE RUNNER					
CHECKED BY:	DATE Feb-28-26	<table><tr><td>.XX</td><td>.XXX</td><td>ANG.</td></tr><tr><td>.01</td><td>.005</td><td>.5</td></tr></table>	.XX	.XXX	ANG.		.01	.005	.5	HEAT TREAT: N/A	MODEL: WALLETUL
.XX	.XXX	ANG.									
.01	.005	.5									
TRACED BY:	MASTER	REMOVE ALL BURRS AND SHARP EDGES UNLESS OTHERWISE NOTED ALL DIMENSIONS ARE FINISHED DIMENSIONS DO NOT SCALE - WORK TO DIMENSIONS ONLY	FINISH: N/A	SHEET NO.: 1 OF 1		DRAWING # 700405-02					

Optional Gear for Overachievers

Yak Rack: Your Kayak's New MVP

The Yak Rack turns your kayak into a fully loaded fishing machine! It mounts your Rocket Reel and Tackle Toter tackle box right into standard T-slots—no drilling, no fuss. With the same trusty trigger mechanism as the Reel Rack, plus a quick-lock sliding arm to secure your tackle box, everything stays put even when the action heats up. The articulated mount adjusts to your setup and pops off quickly when it's time to pack up. Paddle, cast, conquer—yak-style.



Reel Rack: Hands-Free Fishing, Anywhere

Turn any camp chair or pole into your personal fishing throne with the Reel Rack! This ultralight mount securely holds your Rocket Reel in place while you kick back and relax. The positive trigger mechanism gives you lightning-fast release when it's time to fight that fish. Super lightweight, rock-solid, and ridiculously convenient—because your hands deserve a break too.



Rocket Reel: Your Cast-Anywhere Ticket to Dinner

Why pack two handles when one will do it all? Clip in the Rocket Reel kit and watch your Timber Tickler handle transform from a branch-busting saw grip into a fish-wrangling reel holder. One minute you're clearing campfire wood, the next you're pulling dinner out of the creek like a backwoods magician. It still fits the Ridge Runner belt clip system, so you can swap from "Paul Bunyan mode" to "Old Man and the Sea" in seconds flat — no toolbox, no hassle, just pure outdoorsy showmanship.



Tackle Toter: Your Belt-Mounted Bait Boss

Meet the Tackle Toter—the tactical-grade tackle box that does it all. Your Rocket Reel snaps apart and mounts right to the front, making you ready to cast at a moment's notice. It clips onto quick-release belt mounts, fits standard MOLLE webbing like a glove, and connects seamlessly to the Yak Rack or Tack Rack for kayak or camp chair fishing. Use it while strapped to your belt like a true backcountry commando. Available in five models with up to 12 individually covered compartments—because organized chaos is still chaos.



Timber Tickler: One Handle, Endless Possibilities

Meet the Timber Tickler—the ultralight backpacking saw that moonlights as your Rocket Reel handle. Designed for serious weight savers, it breaks down to blade-length size for compact carry. With five scabbard-style sheath options (6", 9", and 12" blades available), it attaches to the same quick-release belt clip as your other RRG gear. The handle snaps to the sheath and locks tight with a clever wedge system—no wiggle, all wow. One handle + multiple blade sheaths = one smart, versatile saw that saves pack space *and* cash.



Don't just hike it — run the ridge at
www.rrgruntheridge.com

Legal Notices & Policies

Copyright & Use Disclaimer

All content, images, instructions, and designs in this manual are the property of Ridge Runner Gear. Unauthorized reproduction, distribution, or commercial use of any part of this manual or product design is not permitted without written permission.
© 2025 Ridge Runner Gear. All rights reserved.

Liability Disclaimer

Ridge Runner Gear assumes no responsibility for any injury, damage, or financial misfortune resulting from the use or misuse of the **Walletül Release**. Users are responsible for reading and following all instructions in this manual. Outdoor activity, travel, and wallet management carry inherent risks — including but not limited to lost cash, spontaneous generosity, gear envy, misplaced IDs, and the occasional campfire barter gone wrong. The **Walletül Release** keeps your essentials secure — not your judgment. Always stash responsibly, tighten wisely, and remember: it won't explain to your partner why your "emergency fund" vanished at the gear shop. Use the **Walletül Release** at your own risk.

90-Day Limited Warranty

Ridge Runner Gear warrants the Walletül Release to be free from defects in materials and workmanship under normal use for a period of 90 days from the date of purchase. This warranty applies only to the original purchaser and does not cover damage caused by misuse, abuse, modifications, improper maintenance, or normal wear and tear.

If a defect arises during the warranty period, Ridge Runner Gear will, at its discretion, repair or replace the defective part with proof of purchase. To submit a warranty claim, contact us at:

www.ridgerunnergear.net

30-Day Return Policy

If you're not satisfied with your Walletül Release, you may return it within 30 days of purchase for a refund or exchange. The product may be lightly used for evaluation but must be returned in good condition with all included components. Normal signs of reasonable testing are acceptable, but damaged, abused, modified, or incomplete items may be subject to a reduced refund or may not qualify for a refund. Contact Ridge Runner Gear before returning the product to receive an RMA number and return instructions. Return shipping is the responsibility of the customer unless the item arrived damaged, defective, or incorrect. Original shipping charges are non-refundable unless the return is due to an RRG error or covered defect. To initiate a return or exchange, contact us at:

www.ridgerunnergear.net

A Word on 3D Printing

Our gear is proudly 3D printed, which means you may spot layer lines, tiny gaps, or slight weight differences. These are natural traits of the process and do not affect strength or performance. Color tones may also vary from batch to batch. While Ridge Runner Gear is a function over form company, we still care about aesthetics and hold every product to the highest standards possible. In short: it may not look like it came from a spaceship factory, but it'll perform like it belongs on your next adventure.