


μT-Kernel 3.0 Specification

December 2019

TRON Forum

www.tron.org

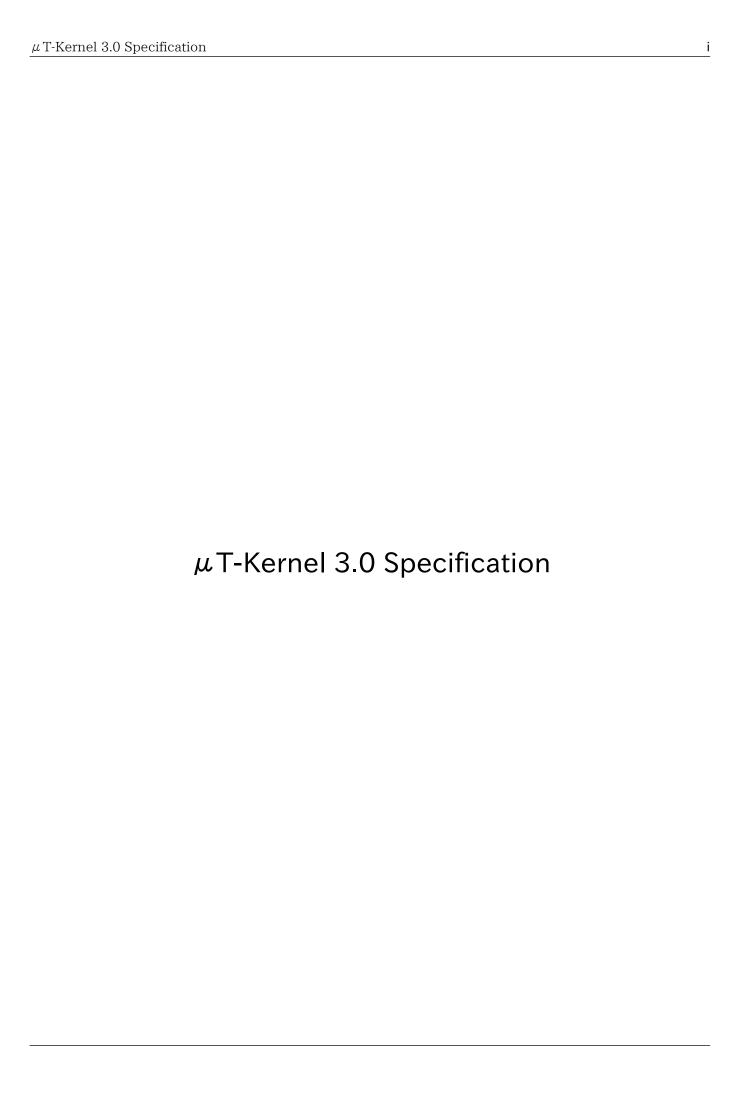

Copyright © 2019 TRON Forum

μ T-Kernel Specification Ver.3.00.00

Copyright © 2019 by TRON Forum

You should not transcribe the content, duplicate a part of this specification, etc. without the consent of TRON Forum.

For improvement, etc., information in this specification is subject to change without notice.

For information about this specification, please contact the following:

TRON Forum Secretariat
In YRP Ubiquitous Networking Laboratory
SEIJITSU BLD-1, 2-12-3, Nishi-Gotanda Shinagawa,
Tokyo Japan
141-0031
TEL: +81-(0)-3-5437-0572

TEL: +81-(0)-3-5437-0572 FAX: +81-(0)-3-5437-2399 E-mail: office@tron.org

REVISION HISTORY

NUMBER	DATE	DESCRIPTION	NAME
3.00.00	2019-12-11	Initial release.	TRON Forum

Contents

Αŀ	PI No	tation	1
In	dex c	of μ T-Kernel/OS APIs	3
In	dex c	of μ T-Kernel/SM APIs	7
In	dex c	of μ T-Kernel/DS APIs	10
1	Ove	rview of μ T-Kernel 3.0	12
	1.1	TRON Project and μ T-Kernel 3.0	13
	1.2	Design Policy of μ T-Kernel 3.0	14
	1.3	Structure of μ T-Kernel 3.0	15
	1.4	Reference Code	17
	1.5	Adaptability and Service Profile	18
	1.6	Implementation Specification Document	19
	1.7	Relation with Existing RTOS Specifications	20
		1.7.1 Relation with μ T-Kernel 2.0	20
		1.7.2 Relation with T-Kernel 2.0	20
		1.7.3 Relation with IEEE 2050-2018	21
2	μΤ-	Kernel Concepts	22
	2.1	Meaning of Basic Terminology	23
	2.2	Task States and Scheduling Rules	25
		2.2.1 Task States	25
		2.2.2 Task Scheduling Rules	28
	2.3	Interrupt Handling	31
	2.4	Task Exception Handling	32
	2.5	System States	33
		2.5.1 System States While Non-task Portion Is Executing	33
		2.5.2 Task-Independent Portion and Quasi-Task Portion	34
	2.6	Objects	36
	2.7	Protection Levels	37
	2.8	Service Profile	38

3	Con	amon Rules of μ T-Kernel 39					
3.1 Data Types				40			
		3.1.1	General Data Types	40			
		3.1.2	Other Defined Data Types	41			
	3.2	System	m Calls	43			
		3.2.1	System Call Format	43			
		3.2.2	APIs Possible from Task-Independent Portion	43			
		3.2.3	Restricting System Call Invocation	45			
		3.2.4	Modifying a Parameter Packet Format	45			
		3.2.5	Function Codes	46			
		3.2.6	Error Codes	46			
		3.2.7	Timeout	47			
		3.2.8	Relative Time and System Time	47			
	3.3	High-	Level Language Support Routines	49			
	3.4	Servic	ce Profile	51			
		3.4.1	Service Profile Items that Represent Function Availability	51			
			3.4.1.1 Device Driver Functions	51			
			3.4.1.2 Power Management Functions	51			
			3.4.1.3 Static/dynamic Memory Management Functions	51			
			3.4.1.4 Task Exception Handling Functions	51			
			3.4.1.5 Subsystem Management Functions	52			
			3.4.1.6 System Configuration Information Acquisition Functions	52			
			3.4.1.7 Supporting 64-bit and 16-bit CPUs	52			
			3.4.1.8 Functions that Depend on CPU, Hardware, System, and Compiler	52			
			3.4.1.8.1 Interrupt Management Functions	52			
			3.4.1.8.2 Memory Cache Control Functions	53			
			3.4.1.8.3 FPU(COP) Support Functions	53			
			3.4.1.8.4 Miscellaneous Functions	53			
			3.4.1.9 Debugger Support Functions	53			
			3.4.1.10 Check Method of Service Profile	53			
		3.4.2	Service Profile Items that Represent Values	54			
		3.4.3	Examples of Service Profile Items	54			
			3.4.3.1 Service Profile Items for a Very Small-scale System using 16-bit CPU	55			
			3.4.3.2 Service Profile Items for a Relatively Large-scale System	56			

4	$\mu\mathrm{T}$	-Kernel/OS Functions	58
	4.1	Task Management Functions	59
		4.1.1 tk_cre_tsk - Create Task	60
		4.1.2 tk_del_tsk - Delete Task	64
		4.1.3 tk_sta_tsk - Start Task	65
		4.1.4 tk_ext_tsk - Exit Task	66
		4.1.5 tk_exd_tsk - Exit and Delete Task	68
		4.1.6 tk_ter_tsk - Terminate Task	69
		4.1.7 tk_chg_pri - Change Task Priority	71
		4.1.8 tk_get_reg - Get Task Registers	73
		4.1.9 tk_set_reg - Set Task Registers	75
		4.1.10 tk_get_cpr - Get Task Coprocessor Registers	77
		4.1.11 tk_set_cpr - Set Task Coprocessor Registers	79
		4.1.12 tk_ref_tsk - Reference Task Status	81
	4.2	Task Synchronization Functions	84
		4.2.1 tk_slp_tsk - Sleep Task	85
		4.2.2 tk_slp_tsk_u - Sleep Task (Microseconds)	87
		4.2.3 tk_wup_tsk - Wakeup Task	88
		4.2.4 tk_can_wup - Cancel Wakeup Task	90
		4.2.5 tk_rel_wai - Release Wait	91
		4.2.6 tk_sus_tsk - Suspend Task	93
		4.2.7 tk_rsm_tsk - Resumes a task in a SUSPENDED state	95
		4.2.8 tk_frsm_tsk - Force Resume Task	97
		4.2.9 tk_dly_tsk - Delay Task	99
		4.2.10 tk_dly_tsk_u - Delay Task (Microseconds)	100
		4.2.11 tk_sig_tev - Signal Task Event	101
		4.2.12 tk_wai_tev - Wait Task Event	103
		4.2.13 tk_wai_tev_u - Wait Task Event (Microseconds)	105
		4.2.14 tk_dis_wai - Disable Task Wait	106
		4.2.15 tk_ena_wai - Enable Task Wait	109
	4.3	Task Exception Handling Functions	110
		4.3.1 tk_def_tex - Define Task Exception Handler	111
		4.3.2 tk_ena_tex - Enable Task Exception	113
		4.3.3 tk_dis_tex - Disable Task Exception	115
		4.3.4 tk_ras_tex - Raise Task Exception	117
		4.3.5 tk_end_tex - end task exception handler	119
		4.3.6 tk_ref_tex - Reference Task Exception Status	121
	4.4	Synchronization and Communication Functions	123
		4.4.1 Semaphore	124

			tk_cre_sem - Create Semaphore	
		4.4.1.2	tk_del_sem - Delete Semaphore	127
		4.4.1.3	tk_sig_sem - Signal Semaphore	128
		4.4.1.4	tk_wai_sem - Wait on Semaphore	129
		4.4.1.5	tk_wai_sem_u - Wait on Semaphore (Microseconds)	131
		4.4.1.6	tk_ref_sem - Reference Semaphore Status	132
	4.4.2	Event F	Nag	133
		4.4.2.1	tk_cre_flg - Create Event Flag	134
		4.4.2.2	tk_del_flg - Delete Event Flag	136
		4.4.2.3	tk_set_flg - Set Event Flag	137
		4.4.2.4	tk_clr_flg - Clear Event Flag	138
		4.4.2.5	tk_wai_flg - Wait Event Flag	139
		4.4.2.6	tk_wai_flg_u - Wait Event Flag (Microseconds)	142
		4.4.2.7	tk_ref_flg - Reference Event Flag Status	144
	4.4.3	Mailbox	K	145
		4.4.3.1	tk_cre_mbx - Create Mailbox	147
		4.4.3.2	tk_del_mbx - Delete Mailbox	149
		4.4.3.3	tk_snd_mbx - Send Message to Mailbox	150
		4.4.3.4	tk_rcv_mbx - Receive Message from Mailbox	152
		4.4.3.5	tk_rcv_mbx_u - Receive Message from Mailbox (Microseconds)	154
		4.4.3.6	tk_ref_mbx - Reference Mailbox Status	155
4.5	Exten	ded Syn	chronization and Communication Functions	157
	4.5.1	Mutex		158
		4.5.1.1	tk_cre_mtx - Create Mutex	160
		4.5.1.2	tk_del_mtx - Delete Mutex	162
		4.5.1.3	tk_loc_mtx - Lock Mutex	163
		4.5.1.4	tk_loc_mtx_u - Lock Mutex (Microseconds)	165
		4.5.1.5	tk_unl_mtx - Unlock Mutex	166
		4.5.1.6	tk_ref_mtx - Refer Mutex Status	
	4.5.2	Messag	e Buffer	169
		4.5.2.1	tk_cre_mbf - Create Message Buffer	171
		4.5.2.2	tk_del_mbf - Delete Message Buffer	174
		4.5.2.3	tk_snd_mbf - Send Message to Message Buffer	175
		4.5.2.4	tk_snd_mbf_u - Send Message to Message Buffer (Microseconds)	177
		4.5.2.5	tk_rcv_mbf - Receive Message from Message Buffer	179
		4.5.2.6	tk_rcv_mbf_u - Receive Message from Message Buffer (Microseconds)	181
		4.5.2.7	tk_ref_mbf - Reference Message Buffer Status	182
4.6	Memo		Management Functions	
	4.6.1	Fixed-si	ize Memory Pool	185

		4.6.1.1	tk_cre_mpf - Create Fixed-size Memory Pool	36
		4.6.1.2	tk_del_mpf - Delete Fixed-size Memory Pool	39
		4.6.1.3	tk_get_mpf - Get Fixed-size Memory Block	90
		4.6.1.4	tk_get_mpf_u - Get Fixed-size Memory Block (Microseconds)	92
		4.6.1.5	tk_rel_mpf - Release Fixed-size Memory Block	93
		4.6.1.6	tk_ref_mpf - Reference Fixed-size Memory Pool Status	94
	4.6.2	Variable	e-size Memory Pool	96
		4.6.2.1	tk_cre_mpl - Create Variable-size Memory Pool	97
		4.6.2.2	tk_del_mpl - Delete Variable-size Memory Pool	Э0
		4.6.2.3	tk_get_mpl - Get Variable-size Memory Block	Э1
		4.6.2.4	tk_get_mpl_u - Get Variable-size Memory Block (Microseconds))3
		4.6.2.5	tk_rel_mpl - Release Variable-size Memory Block)4
		4.6.2.6	tk_ref_mpl - Reference Variable-size Memory Pool Status)5
4.7	Time	Manager	ment Functions	Э7
	4.7.1	System	Time Management	Э8
		4.7.1.1	tk_set_utc - Set System Time)9
		4.7.1.2	tk_set_utc_u - Set Time (Microseconds)	11
		4.7.1.3	tk_set_tim - Set System Time (TRON)	12
		4.7.1.4	tk_set_tim_u - Set Time (TRON, Microseconds)	13
		4.7.1.5	tk_get_utc - Get System Time	14
		4.7.1.6	tk_get_utc_u - Get System Time (Microseconds)	16
		4.7.1.7	tk_get_tim - Get System Time (TRON)	18
		4.7.1.8	tk_get_tim_u - Get System Time (TRON, Microseconds)	20
		4.7.1.9	tk_get_otm - Get Operating Time	22
		4.7.1.10	tk_get_otm_u - Get Operating Time (Microseconds)	23
	4.7.2	Cyclic I	Handler	24
		4.7.2.1	tk_cre_cyc - Create Cyclic Handler	25
		4.7.2.2	tk_cre_cyc_u - Create Cyclic Handler (Microseconds)	28
		4.7.2.3	tk_del_cyc - Delete Cyclic Handler	30
		4.7.2.4	tk_sta_cyc - Start Cyclic Handler	31
		4.7.2.5	tk_stp_cyc - Stop Cyclic Handler	32
		4.7.2.6	tk_ref_cyc - Reference Cyclic Handler Status	33
		4.7.2.7	tk_ref_cyc_u - Reference Cyclic Handler Status (Microseconds)	35
	4.7.3	Alarm F	Handler	36
		4.7.3.1	tk_cre_alm - Create Alarm Handler	37
		4.7.3.2	tk_del_alm - Delete Alarm Handler	39
		4.7.3.3	tk_sta_alm - Start Alarm Handler	40
		4.7.3.4	tk_sta_alm_u - Start Alarm Handler (Microseconds)	41
		4.7.3.5	tk_stp_alm - Stop Alarm Handler	42

		4.7.3.6 tk_ref_alm - Reference Alarm Handler Status
		4.7.3.7 tk_ref_alm_u - Reference Alarm Handler Status (Microseconds) 245
	4.8	Interrupt Management Functions
		4.8.1 tk_def_int - Define Interrupt Handler
		4.8.2 tk_ret_int - Return from Interrupt Handler
	4.9	System Management Functions
		4.9.1 tk_rot_rdq - Rotate Ready Queue
		4.9.2 tk_get_tid - Get Task Identifier
		4.9.3 tk_dis_dsp - Disable Dispatch
		4.9.4 tk_ena_dsp - Enable Dispatch
		4.9.5 tk_ref_sys - Reference System Status
		4.9.6 tk_set_pow - Set Power Mode
		4.9.7 tk_ref_ver - Reference Version Information
	4.10	Subsystem Management Functions
		4.10.1 tk_def_ssy - Define Subsystem
		4.10.2 tk_evt_ssy - Call Event Function
		4.10.3 tk_ref_ssy - Reference Subsystem Status
5	μT-	Kernel/SM Functions 276
	5.1	System Memory Management Functions
		5.1.1 Memory Allocation Library Functions
		5.1.1.1 Kmalloc - Allocate Memory
		5.1.1.2 Kcalloc - Allocate Memory and Clear
		5.1.1.3 Krealloc - Reallocate Memory
		5.1.1.4 Kfree - Release Memory
	5.2	Device Management Functions
		5.2.1 Common Notes Related to Device Drivers
		5.2.1.1 Basic Concepts
		5.2.1.1.1 Device Name (UB* type)
		5.2.1.1.2 Device ID (ID type)
		5.2.1.1.3 Device Attribute (ATR type)
		5.2.1.1.4 Device Descriptor (ID type)
		5.2.1.1.5 Request ID (ID type)
		5.2.1.1.6 Data Number (W type, D type)
		5.2.1.2 Attribute Data
		5.2.2 Device Input/Output Operations
		5.2.2.1 tk_opn_dev - Open Device
		5.2.2.2 tk_cls_dev - Close Device
		5.2.2.3 tk_rea_dev - Start Read Device

		5.2.2.4 tk_rea_dev_du - Read Device (64-bit, Microseconds)) 7
		5.2.2.5 tk_srea_dev - Synchronous Read	9
		5.2.2.6 tk_srea_dev_d - Synchronous Read (64-bit))1
		5.2.2.7 tk_wri_dev - Start Write Device)3
		5.2.2.8 tk_wri_dev_du - Write Device (64-bit, Microseconds))5
		5.2.2.9 tk_swri_dev - Synchronous Write)7
		5.2.2.10 tk_swri_dev_d - Synchronous Write (64-bit))9
		5.2.2.11 tk_wai_dev - Wait for Request Completion for Device	1
		5.2.2.12 tk_wai_dev_u - Wait Device (Microseconds)	13
		5.2.2.13 tk_sus_dev - Suspends Device	15
		5.2.2.14 tk_get_dev - Get Device Name	17
		5.2.2.15 tk_ref_dev - Get Device Information	8
		5.2.2.16 tk_oref_dev - Get Device Information	9
		5.2.2.17 tk_lst_dev - Get Registered Device Information	20
		5.2.2.18 tk_evt_dev - Send Driver Request Event to Device	22
	5.2.3	Registration of Device Driver	23
		5.2.3.1 Registration Method of Device Driver	23
		5.2.3.1.1 tk_def_dev - Register Device	24
		5.2.3.1.2 tk_ref_idv - Reference Device Initialization Information	27
		5.2.3.2 Device Driver Interface	28
		5.2.3.2.1 openfn - Open function	31
		5.2.3.2.2 closefn - Close function	32
		5.2.3.2.3 execfn - Execute function	33
		5.2.3.2.4 waitfn - Wait-for-completion function	35
		5.2.3.2.5 abortfn - Abort function	37
		5.2.3.2.6 eventfn - Event function	39
		5.2.3.3 Device Event Notification	11
		5.2.3.4 Device Suspend/Resume Processing	13
		5.2.3.4.1 Device suspend processing	13
		5.2.3.4.2 Device resume processing	13
5.3	Interr	upt Management Functions	14
	5.3.1	CPU Interrupt Control	15
		5.3.1.1 DI - Disable External Interrupts	16
		5.3.1.2 EI - Enable External Interrupt	17
		5.3.1.3 isDI - Get Interrupt Disable Status	18
		5.3.1.4 SetCpuIntLevel - Set Interrupt Mask Level in CPU	19
		5.3.1.5 GetCpuIntLevel - Get Interrupt Mask Level in CPU	51
	5.3.2	Control of Interrupt Controller	52
		5.3.2.1 EnableInt - Enable Interrupts	53

		5.3.2.2	DisableInt - Disable Interrupts	354
		5.3.2.3	ClearInt - Clear Interrupt	355
		5.3.2.4	EndOfInt - Issue EOI to Interrupt Controller	356
		5.3.2.5	CheckInt - Check Interrupt	357
		5.3.2.6	SetIntMode - Set Interrupt Mode	358
		5.3.2.7	$SetCtrlIntLevel - Set\ Interrupt\ Mask\ Level\ in\ Interrupt\ Controller\ \dots\dots\dots$	360
		5.3.2.8	GetCtrlIntLevel - Get Interrupt Mask Level in Interrupt Controller	362
5.4	I/O Po	rt Acces	s Support Functions	363
	5.4.1	I/O Port	Access	363
		5.4.1.1	out_b - Write to I/O Port (In Unit of Byte)	364
		5.4.1.2	out_h - Write to I/O Port (In Unit of Half-word)	365
		5.4.1.3	out_w - Write to I/O Port (In Unit of Word)	366
		5.4.1.4	out_d - Write to I/O Port (In Unit of Double-word)	367
		5.4.1.5	in_b - Read from I/O Port (In Unit of Byte) \hdots	369
		5.4.1.6	in_h - Read from I/O Port (In Unit of Half-word)	370
		5.4.1.7	in_w - Read from I/O Port (In Unit of Word) \hdots	371
		5.4.1.8	in_d - Read from I/O Port (In Unit of Double-word) $\ldots \ldots \ldots$	372
	5.4.2	Micro W	^r ait	373
		5.4.2.1	WaitUsec - Micro Wait (Microseconds)	373
		5.4.2.2	WaitNsec - Micro Wait (Nanoseconds)	374
5.5	Power	Manage	ment Functions	375
	5.5.1	low_pow	v - Move System to Low-power Mode	376
	5.5.2	off_pow	- Move System to Suspend State	378
5.6	System	n Configu	uration Information Management Functions	380
	5.6.1	System (Configuration Information Acquisition	381
		5.6.1.1	tk_get_cfn - Get Numbers	382
		5.6.1.2	tk_get_cfs - Get Character String	383
	5.6.2	Standard	d System Configuration Information	384
5.7	Memor	ry Cache	Control Functions	386
	5.7.1	SetCach	eMode - Set Cache Mode	387
	5.7.2	Control	Cache - Control Cache	389
5.8	Physic	al Timer	Functions	391
	5.8.1	Use Case	e of Physical Timer	392
	5.8.2	StartPhy	rsicalTimer - Start Physical Timer	394
	5.8.3	StopPhy	rsicalTimer - Stop Physical Timer	396
	5.8.4	GetPhys	icalTimerCount - Get Physical Timer Count	398
	5.8.5	DefinePl	hysicalTimerHandler - Define Physical Timer Handler	399
	5.8.6	GetPhys	icalTimerConfig - Get Physical Timer Configuration Information	401
5.9	Utility	Function	ns	403

		5.9.1	Set Object Name	404
			5.9.1.1 SetOBJNAME - Set Object Name	405
		5.9.2	Fast Lock and Multi-lock Libraries	406
			5.9.2.1 CreateLock - Create Fast Lock	407
			5.9.2.2 DeleteLock - Delete Fast Lock	408
			5.9.2.3 Lock - Lock Fast Lock	409
			5.9.2.4 Unlock - Unlock Fast Lock	410
			5.9.2.5 CreateMLock - Create Fast Multi-lock	411
			5.9.2.6 DeleteMLock - Delete Fast Multi-lock	412
			5.9.2.7 MLock - Lock Fast Multi-lock	413
			5.9.2.8 MLockTmo - Lock Fast Multi-lock (with Timeout)	414
			$5.9.2.9 MLockTmo_u - Lock \; Fast \; Multi-lock \; (with \; Timeout, \; Microseconds) \; \dots \; \dots \; .$	415
			5.9.2.10 MUnlock - Unlock Fast Multi-lock	416
6	μT-I	Kernel	/DS Functions	417
	6.1	Kerne	l Internal State Acquisition Functions	418
		6.1.1	td_lst_tsk - Reference Task ID List	419
		6.1.2	td_lst_sem - Reference Semaphore ID List	420
		6.1.3	td_lst_flg - Reference Event Flag ID List	421
		6.1.4	td_lst_mbx - Reference Mailbox ID List	422
		6.1.5	td_lst_mtx - Reference Mutex ID List	423
		6.1.6	td_lst_mbf - Reference Message Buffer ID List	424
		6.1.7	$td_lst_mpf - Reference \ Fixed-size \ Memory \ Pool \ ID \ List \ \dots $	425
		6.1.8	td_lst_mpl - Reference Variable-size Memory Pool ID List	426
		6.1.9	td_lst_cyc - Reference Cyclic Handler ID List	427
		6.1.10	td_lst_alm - Reference Alarm Handler ID List	428
		6.1.11	td_lst_ssy - Reference Subsystem ID List	429
		6.1.12	td_rdy_que - Reference Task Precedence	430
		6.1.13	td_sem_que - Reference Semaphore Queue	431
		6.1.14	td_flg_que - Reference Event Flag Queue	432
		6.1.15	td_mbx_que - Reference Mailbox Queue	433
		6.1.16	td_mtx_que - Reference Mutex Queue	434
		6.1.17	td_smbf_que - Reference Message Buffer Send Queue	435
		6.1.18	td_rmbf_que - Reference Message Buffer Receive Queue	436
		6.1.19	td_mpf_que - Reference Fixed-size Memory Pool Queue	437
		6.1.20	td_mpl_que - Reference Variable-size Memory Pool Queue	438
		6.1.21	td_ref_tsk - Reference Task Status	439
		6.1.22	td_ref_tex - Reference Task Exception Status	441
		6.1.23	td_ref_sem - Reference Semaphore Status	442

		6.1.24 td_ref_flg - Reference Event Flag Status
		6.1.25 td_ref_mbx - Reference Mailbox Status
		6.1.26 td_ref_mtx - Refer Mutex Status
		6.1.27 td_ref_mbf - Reference Message Buffer Status
		6.1.28 td_ref_mpf - Reference Fixed-size Memory Pool Status
		6.1.29 td_ref_mpl - Reference Variable-size Memory Pool Status
		6.1.30 td_ref_cyc - Reference Cyclic Handler Status
		$6.1.31\ td_ref_cyc_u - Reference\ Cyclic\ Handler\ Status\ (Microseconds) \ldots \ldots \qquad . 450$
		$6.1.32\ td_ref_alm - Reference\ Alarm\ Handler\ Status \qquad \dots \qquad \qquad 451$
		$6.1.33 \ td_ref_alm_u - Reference \ Alarm \ Handler \ Status \ (Microseconds) \\ Microsecon$
		6.1.34 td_ref_sys - Reference System Status
		6.1.35 td_ref_ssy - Reference Subsystem Status
		6.1.36 td_get_reg - Get Task Register
		6.1.37 td_set_reg - Set Task Registers
		6.1.38 td_get_utc - Get System Time
		$6.1.39 \ td_get_utc_u \ - \ Get \ System \ Time \ (Microseconds) \ \ \ldots \ \ \ldots \ \ \ \ \ \ \ \ \ \ \ \ \ $
		$6.1.40 \ td_get_tim \ - \ Get \ System \ Time \ (TRON) \ \dots \ \dots \ \ \dots \ \ \dots \ \ \ \ \ \ \ \ \ $
		$6.1.41~td_get_tim_u - Get~System~Time~(TRON,~Microseconds) \\ $
		$6.1.42~td_get_otm - Get~Operating~Time~\dots~\dots~\dots~\dots~\dots~.~464$
		$6.1.43 \ td_get_otm_u \ - \ Get \ Operating \ Time \ (Microseconds) \ \dots \ $
		6.1.44 td_ref_dsname - Refer to DS Object Name
		$6.1.45~td_set_dsname - Set~DS~Object~Name ~~\dots ~~\dots ~~469$
	6.2	Trace Functions
		$6.2.1 td_hok_svc - Define \ System \ Call/Extended \ SVC \ Hook \ Routine \\ \dots \\ \dots \\ \dots \\ 472$
		6.2.2 td_hok_dsp - Define Task Dispatch Hook Routine
		$6.2.3 td_hok_int - Define \ Interrupt \ Handler \ Hook \ Routine \ \dots \ $
7	Δnn	endix 478
'	7.1	System Configuration
		Keywords 480
	1.2	Reywords
8	Refe	erence 481
	8.1	List of C Language Interface
		8.1.1 μ T-Kernel/OS
		8.1.1.1 Task Management Functions
		8.1.1.2 Task Synchronization Functions
		8.1.1.3 Task Exception Handling Functions
		8.1.1.4 Synchronization and Communication Functions
		8.1.1.5 Extended Synchronization and Communication Functions 484

		8.1.1.6	Memory Pool Management Functions
		8.1.1.7	Time Management Functions
		8.1.1.8	Interrupt Management Functions
		8.1.1.9	System Management Functions
		8.1.1.10	Subsystem Management Functions
	8.1.2	μT-Ker	nel/SM
		8.1.2.1	System Memory Management Functions
		8.1.2.2	Device Management Functions
		8.1.2.3	Interrupt Management Functions
		8.1.2.4	I/O Port Access Support Functions
		8.1.2.5	Power Management Functions
		8.1.2.6	System Configuration Information Management Functions 488
		8.1.2.7	Memory Cache Control Functions
		8.1.2.8	Physical Timer Functions
		8.1.2.9	Utility Functions
	8.1.3	μT-Ker	nel/DS
		8.1.3.1	Kernel Internal State Acquisition Functions
		8.1.3.2	Trace Functions
8.2	List of	f Error C	odes
	8.2.1	Normal	Completion Error Class (0)
	8.2.2	Normal	completion Internal Error Class (5 to 8)
	8.2.3	Unsupp	ported Error Class (9 to 16)
	8.2.4	Parame	ter Error Class (17 to 24)
	8.2.5	Call Co	ntext Error Class (25 to 32)
	8.2.6	Resource	ce Constraint Error Class (33 to 40)
	8.2.7	Object :	State Error Class (41 to 48)
	8.2.8	Wait Er	ror Class (49 to 56)
	8.2.9	Device	Error Class (57 to 64) (μ T-Kernel/SM)
	8.2.10	Status I	Error Class (65 to 72) (μ T-Kernel/SM)
8.3	List of	f APIs an	d Service Profile Items
	8.3.1	μT-Ker	nel/OS
		8.3.1.1	Task Management Functions
		8.3.1.2	Task Synchronization Functions
		8.3.1.3	Task Exception Handling Functions
		8.3.1.4	Synchronization and Communication Functions
		8.3.1.5	Extended Synchronization and Communication Functions 495
		8.3.1.6	Memory Pool Management Functions
		8.3.1.7	Time Management Functions
		8.3.1.8	Interrupt Management Functions
		8.3.1.8	Interrupt Management Functions

	8.3.1.9	System Management Functions	497
	8.3.1.10	Subsystem Management Functions	497
8.3.2	μT-Ker	nel/SM	498
	8.3.2.1	System Memory Management Functions	498
	8.3.2.2	Device Management Functions	498
	8.3.2.3	Interrupt Management Functions	499
	8.3.2.4	I/O Port Access Support Functions	500
	8.3.2.5	Power Management Functions	500
	8.3.2.6	System Configuration Information Management Functions	500
	8.3.2.7	Memory Cache Control Functions	500
	8.3.2.8	Physical Timer Functions	500
	8.3.2.9	Utility Functions	501
8.3.3	μT-Ker	nel/DS	501
	8.3.3.1	Kernel Internal State Acquisition Functions	501
	8.3.3.2	Trace Functions	502

List of Figures

1.1	Position and Structure of μ T-Kernel 3.0)
2.1	Task State Transition Diagram	,
2.2	Precedence in Initial State)
2.3	Precedence After Task B Goes To RUNNING State)
2.4	Precedence After Task B Goes To WAITING State)
2.5	Precedence After Task B WAITING State Is Released)
2.6	Classification of System States	-
2.7	Interrupt Nesting and Delayed Dispatching	
3.1	Behavior of High-Level Language Support Routine)
4.1	Multiple Tasks Waiting for One Event Flag	1
4.2	Format of Messages Using a Mailbox	5
4.3	Synchronous Communication by Message Buffer	О
4.4	Synchronous Communication Using Message Buffer of bufsz = 0	3
4.5	Precedence Before Issuing tk_rot_rdq	4
4.6	Precedence After Issuing tk_rot_rdq (tskpri = 2)	4
4.7	maker Format	4
4.8	prid Format	4
4.9	spver Format	4
4.10	μ T-Kernel Subsystems	6
5.1	Device Management Functions	5

List of Tables

2.1	State Transitions Distinguishing Invoking Task and Other Tasks	28
4.1	Target Task State and Execution Result (tk_ter_tsk)	70
4.2	Values of tskwait and wid	82
4.3	Target Task State and Execution Result (tk_rel_wai)	92
5 1	Whether Concurrent Open of Same Device is Allowed or NOT	293

API Notation

In the parts of this specification that describe APIs, the specification of each API (Application Programming Interface) is explained in the format illustrated below. In addition to system calls that directly call kernel functions, APIs include functions implemented as extended SVCs (extended system calls), macros, and libraries.

API Name - Description

This is an API name and its description.

C Language Interface

This is an API's C language interface and header file(s) to include.

Parameter

Describes an API's parameter(s), i.e. information passed to the μ T-Kernel when the API is issued.

Return Parameter

Describes an API's return parameter(s), i.e. information returned by the μ T-Kernel when the execution of the API ends.

A return parameter that is returned as an API's function value may be called "return code." A return parameter can include, besides return code, a value stored at a pointer that points at memory location where some information can be stored.

Error Code

Describes errors that can occur in an API.

The following error codes are common to all APIs and are not included in the error code listings for each API: E_SYS , E_NOSPT , E_RSFN , E_MACV , E_OACV .

The detection of the error conditions that may result in the following error codes is implementation-dependent; such conditions may not always be detected as errors:

E_PAR , E_MACV , E_CTX.

Error code E_CTX is included in the error code section of individual API only when API can encounter an error due to a semantically wrong caller context: e.g., the case of task-independent portion's calling an API that can block. If an API's constraints in the caller's context are implementation-dependent, and such semantic errors

are not universal across all implementations, the explanation of E_CTX is not included in the error section of the API under discussion.

Implementations may generate errors that are not explained in the explanation section of error codes.

Valid Context

Indicates the context (task portion, quasi-task portion, and task-independent portion) that can issue the API under consideration. Note that items marked with "x" are sometimes clearly impossible to use in the context discussed, but the usability of some items in the context discussed may be implementation-dependent, and some may be usable in some implementations.

Related Service Profile Items

The relation of the service profile item(s) associated with API is shown.

Description

Describes the API functions.

When the values to be passed in a parameter are selected from various choices, the following notation is used in the parameter descriptions:

```
(x || y || z )
    Set one of x, y, or z.

x | y
    Both x and y can be set at the same time (in which case the logical sum of x and y is taken).
[x]
    x is optional.
```

Example of Using Parameters Notation

```
wfmode := (TWF_ANDW || TWF_ORW) | [TWF_CLR]
The above description means that wfmode can be specified in any of the following four ways:
   TWF_ANDW
   TWF_ORW
   (TWF_ANDW | TWF_CLR)
   (TWF_ORW | TWF_CLR)
```

Additional Notes

Supplements the description by noting matters that need special attention or caution, etc.

Rationale for the Specification

Explains the reason for adopting a particular approach and specification.

Index of μ T-Kernel/OS APIs

The μ T-Kernel/OS system APIs described in this specification are listed below in alphabetical order.

- tk_can_wup Cancel Wakeup Task
- tk_chg_pri Change Task Priority
- tk_clr_flg Clear Event Flag
- tk_cre_alm Create Alarm Handler
- tk_cre_cyc Create Cyclic Handler
- tk_cre_cyc_u Create Cyclic Handler (Microseconds)
- · tk_cre_flg Create Event Flag
- tk_cre_mbf Create Message Buffer
- tk_cre_mbx Create Mailbox
- tk_cre_mpf Create Fixed-size Memory Pool
- tk_cre_mpl Create Variable-size Memory Pool
- tk_cre_mtx Create Mutex
- tk_cre_sem Create Semaphore
- tk_cre_tsk Create Task
- tk_def_int Define Interrupt Handler
- tk_def_ssy Define Subsystem
- tk_def_tex Define Task Exception Handler
- tk_del_alm Delete Alarm Handler
- tk_del_cyc Delete Cyclic Handler
- tk_del_flg Delete Event Flag
- · tk_del_mbf Delete Message Buffer
- · tk_del_mbx Delete Mailbox
- tk_del_mpf Delete Fixed-size Memory Pool
- tk_del_mpl Delete Variable-size Memory Pool
- tk_del_mtx Delete Mutex
- · tk_del_sem Delete Semaphore

- · tk del tsk Delete Task
- tk_dis_dsp Disable Dispatch
- tk_dis_tex Disable Task Exception
- · tk_dis_wai Disable Task Wait
- · tk_dly_tsk Delay Task
- tk_dly_tsk_u Delay Task (Microseconds)
- tk_ena_dsp Enable Dispatch
- · tk_ena_tex Enable Task Exception
- · tk_ena_wai Enable Task Wait
- tk_end_tex End Task Exception Handler
- tk_evt_ssy Call Event Function
- tk_exd_tsk Exit and Delete Task
- · tk_ext_tsk Exit Task
- tk_frsm_tsk Force Resume Task
- tk_get_cpr Get Task Coprocessor Registers
- tk_get_mpf Get Fixed-size Memory Block
- tk_get_mpf_u Get Fixed-size Memory Block (Microseconds)
- tk_get_mpl Get Variable-size Memory Block
- tk_get_mpl_u Get Variable-size Memory Block (Microseconds)
- tk_get_otm Get Operating Time
- tk_get_otm_u Get Operating Time (Microseconds)
- · tk_get_reg Get Task Registers
- · tk_get_tid Get Task Identifier
- tk_get_tim Get System Time (TRON)
- tk_get_tim_u Get System Time (TRON, Microseconds)
- tk_get_utc Get System Time
- tk_get_utc_u Get System Time (Microseconds)
- tk loc mtx Lock Mutex
- tk_loc_mtx_u Lock Mutex (Microseconds)
- tk_ras_tex Raise Task Exception
- tk_rcv_mbf Receive Message from Message Buffer
- tk_rcv_mbf_u Receive Message from Message Buffer (Microseconds)
- tk_rcv_mbx Receive Message from Mailbox
- tk_rcv_mbx_u Receive Message from Mailbox (Microseconds)
- tk_ref_alm Reference Alarm Handler Status

- tk_ref_alm_u Reference Alarm Handler Status (Microseconds)
- tk_ref_cyc Reference Cyclic Handler Status
- tk_ref_cyc_u Reference Cyclic Handler Status (Microseconds)
- tk_ref_flg Reference Event Flag Status
- tk_ref_mbf Reference Message Buffer Status
- tk ref mbx Reference Mailbox Status
- tk ref mpf Reference Fixed-size Memory Pool Status
- tk_ref_mpl Reference Variable-size Memory Pool Status
- tk_ref_mtx Refer Mutex Status
- tk_ref_sem Reference Semaphore Status
- tk_ref_ssy Reference Subsystem Status
- tk_ref_sys Reference System Status
- tk_ref_tex Reference Task Exception Status
- · tk ref tsk Reference Task Status
- tk_ref_ver Reference Version Information
- tk_rel_mpf Release Fixed-size Memory Block
- tk_rel_mpl Release Variable-size Memory Block
- · tk rel wai Release Wait
- tk_ret_int Return from Interrupt Handler
- · tk_rot_rdq Rotate Ready Queue
- tk_rsm_tsk Resume Task
- tk_set_cpr Set Task Coprocessor Registers
- · tk_set_flg Set Event Flag
- tk_set_pow Set Power Mode
- · tk_set_reg Set Task Registers
- tk_set_tim Set System Time (TRON)
- tk_set_tim_u Set System Time (TRON, Microseconds)
- · tk set utc Set System Time
- tk_set_utc_u Set System Time (Microseconds)
- tk_sig_sem Signal Semaphore
- tk_sig_tev Signal Task Event
- · tk_slp_tsk Sleep Task
- tk_slp_tsk_u Sleep Task (Microseconds)
- tk_snd_mbf Send Message to Message Buffer
- tk_snd_mbf_u Send Message to Message Buffer (Microseconds)

- tk_snd_mbx Send Message to Mailbox
- tk_sta_alm Start Alarm Handler
- tk_sta_alm_u Start Alarm Handler (Microseconds)
- tk_sta_cyc Start Cyclic Handler
- tk_sta_tsk Start Task
- tk_stp_alm Stop Alarm Handler
- tk_stp_cyc Stop Cyclic Handler
- tk_sus_tsk Suspend Task
- tk_ter_tsk Terminate Task
- tk_unl_mtx Unlock Mutex
- · tk_wai_flg Wait Event Flag
- tk_wai_flg_u Wait Event Flag (Microseconds)
- · tk_wai_sem Wait on Semaphore
- tk_wai_sem_u Wait on Semaphore (Microseconds)
- tk_wai_tev Wait Task Event
- tk_wai_tev_u Wait Task Event (Microseconds)
- tk_wup_tsk Wakeup Task

Index of μ T-Kernel/SM APIs

The μ T-Kernel/SM system APIs described in this specification are listed below in alphabetical order.

- · abortfn Abort function
- · CheckInt Check Interrupt
- · ClearInt Clear Interrupt
- · closefn Close function
- · ControlCache Control Cache
- · CreateLock Create Fast Lock
- · CreateMLock Create Fast Multi-lock
- · DefinePhysicalTimerHandler Define Physical Timer Handler
- DeleteLock Delete Fast Lock
- · DeleteMLock Delete Fast Multi-lock
- DI Disable External Interrupts
- DisableInt Disable Interrupts
- EI Enable External Interrupts
- EnableInt Enable Interrupts
- EndOfInt Issue EOI to Interrupt Controller
- eventfn Event function
- · execfn Execute function
- · GetCpuIntLevel Get CPU Interrupt Mask Level
- GetCtrlIntLevel Get Interrupt Controller Interrupt Mask Level
- GetPhysicalTimerConfig Get Physical Timer Configuration Information
- · GetPhysicalTimerCount Get Physical Timer Count
- in_b Read from I/O Port (in Bytes)
- in_d Read from I/O Port (in Double-words)
- in_h Read from I/O Port (in Half-words)
- in_w Read from I/O Port (in Words)
- isDI Get Interrupt Disable Status

- · Kcalloc Allocate Memory and Clear
- · Kfree Release Memory
- Kmalloc Allocate Memory
- · Krealloc Reallocate Memory
- · Lock Lock Fast Lock
- · low_pow Move System to Low-power Mode
- · MLock Lock Fast Multi-lock
- MLockTmo Lock Fast Multi-lock (with Timeout)
- MLockTmo_u Lock Fast Multi-lock (with Timeout, Microseconds)
- · MUnlock Unlock Fast Multi-lock
- · off pow Move System to Suspend State
- · openfn Open function
- out_b Write to I/O Port (in Bytes)
- out_d Write to I/O Port (in Double-words)
- out_h Write to I/O Port (in Half-words)
- · out_w Write to I/O Port (in Words)
- · SetCacheMode Set Cache Mode
- · SetCpuIntLevel Set CPU Interrupt Mask Level
- SetCtrlIntLevel Set Interrupt Controller Interrupt Mask Level
- · SetIntMode Set Interrupt Mode
- SetOBJNAME Set Object Name
- · StartPhysicalTimer Start Physical Timer
- StopPhysicalTimer Stop Physical Timer
- · tk_cls_dev Close Device
- tk_def_dev Register Device
- tk_evt_dev Send Driver Request Event to Device
- tk_get_cfn Get Numbers
- \cdot tk_get_cfs Get Character String
- · tk_get_dev Get Device Name
- tk_lst_dev Get Registered Device Information
- tk_opn_dev Open Device
- tk_oref_dev Get Device Information
- tk_rea_dev Start Read Device
- tk_rea_dev_du Read Device (64-bit, Microseconds)
- tk_ref_dev Get Device Information

- tk_ref_idv Reference Device Initialization Information
- tk_srea_dev Synchronous Read
- tk_srea_dev_d Synchronous Read (64-bit)
- tk_sus_dev Suspends Device
- tk_swri_dev Synchronous Write
- tk_swri_dev_d Synchronous Write (64-bit)
- tk_wai_dev Wait for Request Completion for Device
- tk_wai_dev_u Wait Device (Microseconds)
- tk_wri_dev Start Write Device
- tk_wri_dev_du Write Device (64-bit, Microseconds)
- · Unlock Unlock Fast Lock
- · waitfn Wait function
- · WaitNsec Micro Wait (Nanoseconds)
- WaitUsec Micro Wait (Microseconds)

Index of μ T-Kernel/DS APIs

The μ T-Kernel/DS APIs described in this specification are listed below in alphabetical order.

```
• td_flg_que - Reference Event Flag Queue
```

- td_get_otm Get Operating Time
- td_get_otm_u Get Operating Time (Microseconds)
- · td_get_reg Get Task Register
- td_get_tim Get System Time (TRON)
- td_get_tim_u Get System Time (TRON, Microseconds)
- td_get_utc Get System Time
- td_get_utc_u Get System Time (Microseconds)
- td_hok_dsp Define Task Dispatch Hook Routine
- td_hok_int Define Interrupt Handler Hook Routine
- td_hok_svc Define System Call/Extended SVC Hook Routine
- td_lst_alm Reference Alarm Handler ID List
- td_lst_cyc Reference Cyclic Handler ID List
- td_lst_flg Reference Event Flag ID List
- · td_lst_mbf Reference Message Buffer ID List
- td_lst_mbx Reference Mailbox ID List
- td_lst_mpf Reference Fixed-size Memory Pool ID List
- td_lst_mpl Reference Variable-size Memory Pool ID List
- td_lst_mtx Reference Mutex ID List
- td_lst_sem Reference Semaphore ID List
- td_lst_ssy Reference Subsystem ID List
- td_lst_tsk Reference Task ID List
- td mbx que Reference Mailbox Queue
- td_mpf_que Reference Fixed-size Memory Pool Queue
- td_mpl_que Reference Variable-size Memory Pool Queue
- td_mtx_que Reference Mutex Queue

- · td_rdy_que Reference Task Precedence
- td_ref_alm Reference Alarm Handler Status
- td_ref_alm_u Reference Alarm Handler Status (Microseconds)
- td_ref_cyc Reference Cyclic Handler Status
- td_ref_cyc_u Reference Cyclic Handler Status (Microseconds)
- td_ref_dsname Refer to DS Object Name
- td_ref_flg Reference Event Flag Status
- · td_ref_mbf Reference Message Buffer Status
- td_ref_mbx Reference Mailbox Status
- td_ref_mpf Reference Fixed-size Memory Pool Status
- td_ref_mpl Reference Variable-size Memory Pool Status
- td_ref_mtx Refer Mutex Status
- td_ref_sem Reference Semaphore Status
- td_ref_ssy Reference Subsystem Status
- td_ref_sys Reference System Status
- td_ref_tex Reference Task Exception Status
- td_ref_tsk Get Task Status
- td_rmbf_que Reference Message Buffer Receive Queue
- td_sem_que Reference Semaphore Queue
- · td_set_dsname Set DS Object Name
- td_set_reg Set Task Registers
- td_smbf_que Reference Message Buffer Send Queue

Chapter 1

Overview of μ T-Kernel 3.0

1.1 TRON Project and μ T-Kernel 3.0

This standard defines the specification of a real-time operating system (RTOS) called " μ T-Kernel 3.0." μ T-Kernel 3.0 is the latest result from the TRON project (http://www.tron.org/), which was started by Dr. Ken Sakamura, then at the University of Tokyo in 1984.

The TRON Project envisioned that environments optimized to humans would be created by embedding small microprocessors, invented in the prior decade, in many objects in our surroundings and having them talk to each other. In the TRON Project, the computing paradigm to achive this goal was called a "Highly Functionally Distributed System (HFDS)" and an RTOS called ITRON was created to control such microprocessors efficiently. The specification of the first version of ITRON, namely ITRON1, was published in 1987. The project promoted the industry-academic cooperation and published the technical specification and other information so that anyone can make use of the technology for free under the philosophy of "Open Approach." As a result, ITRON specification OS was born and it ran on many types of processors. It became the de facto standard RTOS for embedded computer systems. Additionally, the development of " μ ITRON," which is an improved version of ITRON and has better adaptability, proceeded concurrently. OSs based on ITRON and μ ITRON specifications have been used widely in many embedded computer systems: they are used in consumer products, such as home electronic appliances and AV equipment, and industrial applications, such as machine control on factory floors, engine control of automobiles, etc.

The concept of "HFDS," which the TRON Project proposed, started to be called "ubiquitous computing" before the turn of the century and is now widely recognized as the Internet of Things (IoT). Since its inception in 1984, the TRON Project has targeted the IoT in today's parlance as the main application field of microprocessors and carried out research and development of OS and computer architecture. The latest result of such research and development of OS is μ T-Kernel, a resource-efficient RTOS suitable for IoT edge nodes. It is an improvement of μ ITRON, and has features for IoT.

Based on the adoptions so far, it has been reported that 60 percent or more of embedded devices use the results of the TRON Project in the 2010s, 30 years after the inception of the project (https://www.tron.org/blog/2017/0 In 2018, IEEE (Institute of Electrical and Electronics Engineers), a global standard creating organization, published the IEEE 2050-2018 standard specification for RTOS for IoT edge nodes based on the specification of the updated version of μ T-Kernel, μ T-Kernel 2.0.

This document defines the standard of μ T-Kernel 3.0, an updated version of μ T-Kernel 2.0 by streamlining some features to adapt them specificically for controlling IoT edge devices. μ T-Kernel 3.0 maintains high compatibility with IEEE 2050-2018 by adopting the API added in IEEE 2050-2018. As a result, μ T-Kernel 3.0 specification is completely upper compatible with IEEE 2050-2018.

1.2 Design Policy of μ T-Kernel 3.0

 μ T-Kernel 3.0 specification defines an embedded real-time OS with small resource footprint meant for controlling IoT edge devices. μ T-Kernel improves development efficiency and interoperability of the software by standardizing basic OS functions and API specification. It is designed to deliver high performance even on a lower-end single-chip microcontroller unit (MCU), including 16-bit MCU, MCUs without a memory management unit (MMU), and small-scale embedded systems with a small amount ROM/RAM. Furthermore, μ T-Kernel has functions such as device driver control and power saving, so it can build low-power systems in which various types of devices and communication methods are embedded for building an IoT network.

The %utk 3.0 specification defines a standard for an RTOS, and it can be implemented on many types of CPUs irrespective of CPU architectures. At the same time, the designers are aware that it makes sense to adapt the OS implementation or limit the OS functions in the case of very resource-poor systems in order to cope with a particular choice of CPU and hardware configuration as in the case of tiny IoT edge nodes. To cope with such situations, a concept and description of "service profile" has been introduced in %utk to leave room for the flexible implementation of the OS, at the same time retaining the compatibility of software and portability. Service profile makes it possible to formally describe the omission and/or difference of functions available in a particular implementation of the OS. This makes it easy for middleware and applications that run under the OS to learn and cope with the implementation-dependent differences.

The %utk 3.0 specification includes common definitions such as data types, the state transition of tasks, which are the basic units of parallel execution inside programs, non-task behavior such as that of interrupt handler, and API specifications provided by the OS. File system management, network communication, process management, etc., are not included in the %utk 3.0 specification. However, by adding appropriate middleware packages, we can build relatively large systems using %utk 3.0. That is, %utk 3.0 can be used as a microkernel for a large system that has functions such as file system management, network communication, and process management. It can be extended to support multi-core processors as well.

1.3 Structure of μ T-Kernel 3.0

%utk 3.0 consists of "%utk/OS" that handles the intrinsic functions of RTOS such as task scheduling, synchronization, and communication between tasks, "%utk/SM" that offers additional system management functions, and "%utk/DS" that offers functions for software debugger. The position and structure of μ T-Kernel 3.0 is shown in Figure 1.1, "Position and Structure of μ T-Kernel 3.0".

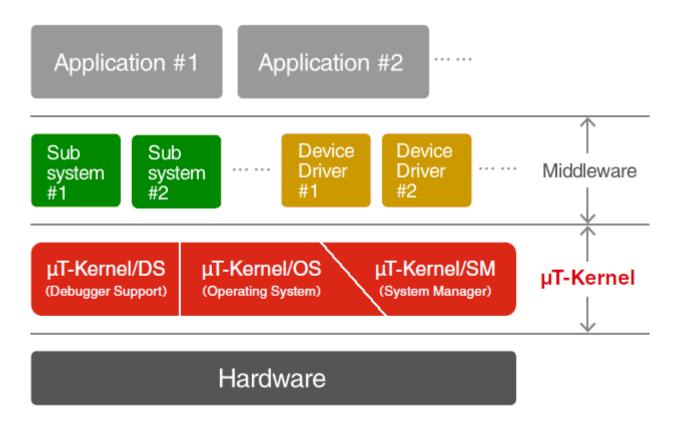


Figure 1.1: Position and Structure of μ T-Kernel 3.0

 μ T-Kernel/OS provides the following functions:

- · Task Management Functions
- Task Synchronization Functions
- · Task Exception Handling Functions
- Synchronization and Communication Functions
- Extended Synchronization and Communication Functions
- · Memory Pool Management Functions
- Time Management Functions
- · Interrupt Management Functions
- System Management Functions
- Subsystem Management Functions

 μ T-Kernel/SM provides the following kinds of functions:

- System Memory Management Functions
- Device Management Functions
- Interrupt Management Functions
- I/O Port Access Support Functions
- Power Management Functions
- System Configuration Information Management Functions
- Memory Cache Control Functions
- Physical Timer Functions
- Utility Functions

 μ T-Kernel/DS provides the following kinds of functions exclusively for debugging use:

- Kernel Internal State Acquisition Functions
- Trace Functions

1.4 Reference Code

Since the optimization and customization is very important on small scale embedded systems, μ T-Kernel 3.0 does not aim at the uniqueness of source code unlike T-Kernel. Instead it offers reference code, a source code that can be referenced as a sample implementation.

Reference code is an example of an implementation of μ T-Kernel 3.0, and is distributed by TRON Forum. A major difference with T-Kernel is that this reference code is not the only implementation of μ T-Kernel 3.0, and it is free for any OS implementer to modify this reference code, or implement it from scratch. However, only those that behave exactly as the reference code is officially recognized as μ T-Kernel 3.0 specification OS.

The reference code has been provided to specify behaviors which are difficult to describe in the specification, and the introduction of the reference code has made it possible to assure and check the uniform behavior across different implementations that are optimized and customized to target systems.

1.5 Adaptability and Service Profile

 μ T-Kernel 3.0 has been designed by paying attention to the the compatibility with T-Kernel. Namely, porting between μ T-Kernel 3.0 and T-Kernel ought to be simple. If only common features are used, a simple recompilation will do. Even if changes are necessary, the amount of change is small. That is the design goal.

For features that have strong dependency on hardware such as MMU and FPU, unnecessary features for the intended narrow target, and features that have potential implications for run-time efficiency such as hooks for debug support, the specification allows subsetting. To accommodate the subsetting in this manner, and the desire to keep the distribution and portability of middleware and application high, such software needs to obtain information about the implementation details of μ T-Kernel 3.0. μ T-Kernel 3.0 has introduced a mechanism, "service profile", to let each implementation of μ T-Kernel 3.0 describe implementation details clearly. All μ T-Kernel 3.0 implementations shall provide a service profile and provide information on the functions that were omitted to create a subset.

1.6 Implementation Specification Document

With the introduction of service profile, not all the implementations of μ T-Kernel 3.0 provide all the features in the specification completely.

Hence, to let the user verify the implementation-dependent details of a particular implementation of μ T-Kernel 3.0, and avoid spending time to understand unexpected behavior, all μ T-Kernel 3.0 implementations shall produce an implementation specification document. The implementation specification document shall describe the following at least.

Version number of μ T-Kernel 3.0 specification

Clearly specify the major and minor version numbers of μ T-Kernel 3.0.

Information about the Service Profile

Explicitly specify the values of all the service profile items.

1.7 Relation with Existing RTOS Specifications

This section lists the major differences between the μ T-Kernel 3.0 specification and other legacy RTOS specifications that have close relationship with μ T-Kernel 3.0.

1.7.1 Relation with μ T-Kernel 2.0

1. Removal of features that assumes process management and virtual memory

 μ T-Kernel 3.0 defines a real-time OS to control small embedded systems and IoT edge nodes equipped with 16-bit or 32-bit CPU. It is not designed to be used as the OS kernel with process management or virtual memory for generic information processing systems. Because of this design decision, Address Space Management Functions (Address Space Configuration, Address Space Checking, Logical Address Space Management) and System Memory Allocation function which μ T-Kernel 2.0 has are not included in μ T-Kernel 3.0. Also, among Subsystem Management Functions, startup/cleanup processing and functions for resource group are not included in μ T-Kernel 3.0.

2. Addition of handling system time

API that uses 0:00:00 of January 1st 1970 (UTC) as epoch to set system time have been added to μ T-Kernel 3.0: these are tk_set_utc, tk_set_utc_u, tk_get_utc, tk_get_utc_u, td_get_utc, td_get_utc_u.

3. Removal of Rendezvous Function

 μ T-Kernel 3.0 does not have Rendezvous function, one of Extended Synchronization and Communication Functions of T-Kernel.

1.7.2 Relation with T-Kernel 2.0

1. Removal of features that assumes process management and virtual memory

 μ T-Kernel 3.0 defines a real-time OS to control small embedded systems and IoT edge nodes equipped with 16-bit or 32-bit CPU. It is not designed to be used as the OS kernel with process management or virtual memory for generic information processing systems. Because of this design decision, Address Space Management Functions (Address Space Configuration, Address Space Checking, Logical Address Space Management) and System Memory Allocation function which T-Kernel 2.0 has are not included in μ T-Kernel 3.0. Also, among Subsystem Management Functions, startup/cleanup processing and functions for resource group are not included in μ T-Kernel 3.0.

2. Introduction of service profile

For μ T-Kernel that addresses the needs of small-scale embedded systems, the specification aims at the ease of optimization and customization. However, at the same time, to improve the ease of distribution of middleware and applications by increasing portability, a formal mechanism to describe the issues for implementation-dependency of μ T-Kernel is now introduced. For details, see Section 2.8, "Service Profile".

3. Specification of user buffer

APIs that need to use internal memory on the stack or in the memory pools can use a user-specified buffer area instead of using the automatically allocated area by the kernel. Specification by TA_USERBUF is enough to use a user-specified buffer in general.

4. Type changes for supporting 16-bit CPU

 μ T-Kernel needs to support 16-bit CPU, and the integer that can be represented by INT or UINT type may be restricted to 16-bit integer values. For this reason, some arguments of APIs and members of structures now have wide enough scalar types, instead of INT or UINT types, so that they can present the values adequately.

- 5. Customization for small-scale embedded systems
 - μ T-Kernel is meant for small-scale embedded systems, and so the specification has been tuned to such usage. For example, an implementation with a smaller value, than in T-Kernel, for the largest value of task priority is allowed.
- 6. Re-organization and extension of interrupt management function
 - μ T-Kernel 3.0 offers interrupt management functions that are based on those of T-Kernel 2.0 after reorganizing and extending these one way or the other. There are differences as follows.
 - (a) Addition of functions to obtain and set interrupt mask level

 Add APIs for obtaining and setting the interrupt mask level of CPU and/or interrupt controller
 namely SetCpuIntLevel, GetCpuIntLevel, SetCtrlIntLevel, and GetCtrlIntLevel.
 - (b) Abolishing interrupt vector number (INTVEC)

 In order to simplify number systems used for interrupts and make it simple to understand, we abolished with the specification using interrupt vector number (INTVEC) For APIs that take INTVEC as argument in T-Kernel 2.0, we use the common interrupt number used in tk_def_int() as the argument instead of INTVEC.

1.7.3 Relation with IEEE 2050-2018

Specification of μ T-Kernel 3.0 is upward compatible with the specification of IEEE 2050-2018 standard which IEEE published for the standard RTOS for IoT edge nodes. Because of this, an OS that satisfies the μ T-Kernel 3.0 specification automatically satisfies IEEE 2050-2018 specification.

On the other hand, the specification of IEEE 2050-2018 is a subset of μ T-Kernel 3.0 specification. The following functions of μ T-Kernel 3.0 are not included in IEEE 2050-2018: Subsystem Management Functions, and Kernel Internal State Acquisition Functions and Trace Functions for debugging purposes provided by μ T-Kernel/DS. Also the following functions are not in IEEE 2050-2018: Functions that handle DS Object Names(dsname) and APIs to handle system time using 00:00:00, January 1, 1985 (GMT) as epoch (tk_get_tim, tk_get_tim_u, tk_set_tim_u).

Chapter 2

 μ T-Kernel Concepts

2.1 Meaning of Basic Terminology

Real-time system and real-time operating system (RTOS)

A system whose response time and delay time are deterministic without uncertainty and non-reproducibility and has an internal configuration that makes the worst value predictable or makes it easy to produce an educated guess value is called a real-time system.

 μ T-Kernel is the real-time operating system (RTOS) that is used for building real-time systems with the preceding characteristics.

Task, invoking task

The basic logical unit of concurrent program execution is called a "task." Whereas the code in one task is executed in sequence, codes in different tasks can be executed in parallel. This concurrent processing is a conceptual phenomenon, from the standpoint of applications; in actual implementation it is accomplished by time-sharing among tasks as controlled by the kernel.

A task that invokes a system call is called the "invoking task."

Dispatch, dispatcher

The switching of tasks executed by the processor is called "dispatching" (or task dispatching). The kernel mechanism by which dispatching is realized is called a "dispatcher" (or task dispatcher).

Scheduling, scheduler

The processing to determine which task to execute next is called "scheduling" (or task scheduling). The kernel mechanism by which scheduling is realized is called a "scheduler" (or task scheduler). Generally a scheduler is implemented inside system call processing or in the dispatcher.

Context

The environment in which a program runs is generally called "context." For a context to be called identical, at the very least the processor operation mode must be the same and the stack space must be the same (part of the same contiguous area). Note that context is a conceptual entity from the standpoint of applications; even when processing must be executed in independent contexts, in actual implementation both contexts may sometimes use the same processor operation mode and the same stack space.

Precedence

The execution order of tasks, i.e., the order relation, is called precedence. This refers to the order of tasks when an execution right is given to a task among a group of tasks in the executable state to be in the execution state. If task Y has a higher precedence than task X, task Y will be executed first. If task Y, which has higher precedence than task X, becomes ready for execution while task X is executed, the execution right will be transferred to task Y, and task Y will be in execution state, i.e., RUNNING state. In this case, task X will be in the executable state, i.e., READY state, instead of execution state.

Additional Notes

Precedence has a similar meaning to "priority", and they both affect the execution order of tasks. However, "priority" is an attribute of tasks specified by API parameter, etc., explicitly from applications, whereas "precedence" is a concept that is employed to define the execution order among a group of tasks. The precedence among a group of tasks is determined based on the priority of the tasks. A task with higher priority has higher precedence. On the other hand, tasks with the same priority do not have the same precedence. Among tasks having the same priority, the one that entered an executable state (i.e., RUNNING state or READY state) first has the highest precedence. It is possible, however, to use an API such as tk_rot_rdq to change the precedence among tasks having the same priority.

API and system call

The standard interfaces for calling functions provided by μ T-Kernel from applications or middleware are collectively called API (Application Programming Interface). In addition to system calls that directly call kernel functions, APIs include functions implemented as extended SVCs, macros, and libraries.

Extended SVC

System calls that are added at the time of the initial startup of OS or added later are called extended SVC. μ T-Kernel 3.0 specification stipulates @_Subsystem Management Functions_@ can be used to define/implement extended SVC. Implementation of μ T-Kernel/SM API can use extended SVC(s).

A program that executes the function of an extended SVC is extended SVC handler.

Kernel

Kernel refers to the portion of μ T-Kernel that is not implemented by extended SVCs, compile-time macros, or library functions. μ T-Kernel/SM API can be implemented using extended SVC, compile-time macros, and/or library functions. Such APIs are part of μ T-Kernel specification. However, it is not deemed to be part of the kernel. On the other hand, all the functions of μ T-Kernel/OS and μ T-Kernel/DS are included in the kernel.

When we refer to system state while a non-task portion is executing, we need to be aware whether the execution is within the kernel or not.

Implementation-defined

That something is implementation-defined means that something is not standardized in the T-Kernel specification and should be defined for each implementation. The specifics of the implementation should be described clearly in the implementation specifications. In application programs, the portability for the portion dependent on implementation-defined items is not assured.

Implementation-dependent

That something is implementation-dependent means that in the T-Kernel specification, the behavior of something varies according to the target systems or system operating conditions. The behavior should be defined for each implementation. The specifics of the implementation should be described clearly in the implementation specifications. In application programs, the portion dependent on implementation-dependent items needs to be modified when porting in principle.

2.2 Task States and Scheduling Rules

2.2.1 Task States

Task states are classified primarily into the five below. Of these, Waiting state in the broad sense is further classified into three states. Saying that a task is in a RUN state means it is in either RUNNING state or READY state.

RUNNING state

The task is currently being executed. When a task-independent portion is executing, except when otherwise specified, the task that was executing prior to the start of task-independent portion execution is said to be in RUNNING state.

READY state

The task has completed preparations for running, but cannot run because a task with higher precedence is running. In this state, the task is able to run whenever it becomes the task with the highest precedence among the tasks in READY state.

Waiting states

The task cannot run because the conditions for running are not in place. In other words, the task is waiting for the conditions for its execution to be met. While a task is in one of the Waiting states, the program counter and register values, and the other information representing the program execution state, are saved. When the task resumes running from this state, the program counter, registers and other values revert to their values immediately prior to going to the Waiting state. This state is subdivided into the following three states.

WAITING state

Execution is stopped because a system call was invoked that interrupts execution of the invoking task until some condition is met.

SUSPENDED state

Execution was forcibly interrupted by another task.

WAITING-SUSPENDED state

The task is in both WAITING state and SUSPENDED state at the same time. WAITING-SUSPENDED state results when another task requests suspension of a task already in WAITING state.

 μ T-Kernel makes a clear distinction between WAITING state and SUSPENDED state. A task cannot go to SUSPENDED state on its own.

DORMANT state

The task has not yet been started or has completed execution. While a task is in DORMANT state, information presenting its execution state is not saved. When a task is started from DORMANT state, execution starts from the task start address. Except when otherwise specified, the register values are not saved.

NON-EXISTENT state

A virtual state before a task is created, or after it is deleted, and is not registered in the system.

Depending on the implementation, there may also be transient states that do not fall into any of the above categories (see Section 2.5, "System States").

When a task going to READY state has higher precedence than the currently running task, a dispatch may occur at the same time as the task goes to READY state and it may make an immediate transition to RUNNING state. In such a case the task that was in RUNNING state up to that time is said to have been preempted by the task that goes to RUNNING state anew. Note also that in explanations of system call functions, even when a task is said to go to READY state, depending on the task precedence it may go immediately to RUNNING state.

Task starting means transferring a state from DORMANT state to READY state. A task is therefore said to be in "started" state if it is in any state other than DORMANT or NON-EXISTENT. Task exit means that a task in started state goes to DORMANT state.

Task wait release means that a task in WAITING state goes to READY state, or a task in WAITING-SUSPENDED state goes to SUSPENDED state. The resumption of a suspended task means that a task in SUSPENDED state goes to READY state, or a task in WAITING-SUSPENDED state goes to WAITING state.

Task state transitions in a typical implementation are shown in Figure 2.1, "Task State Transition Diagram". Depending on the implementation, there may be other states besides those shown here.

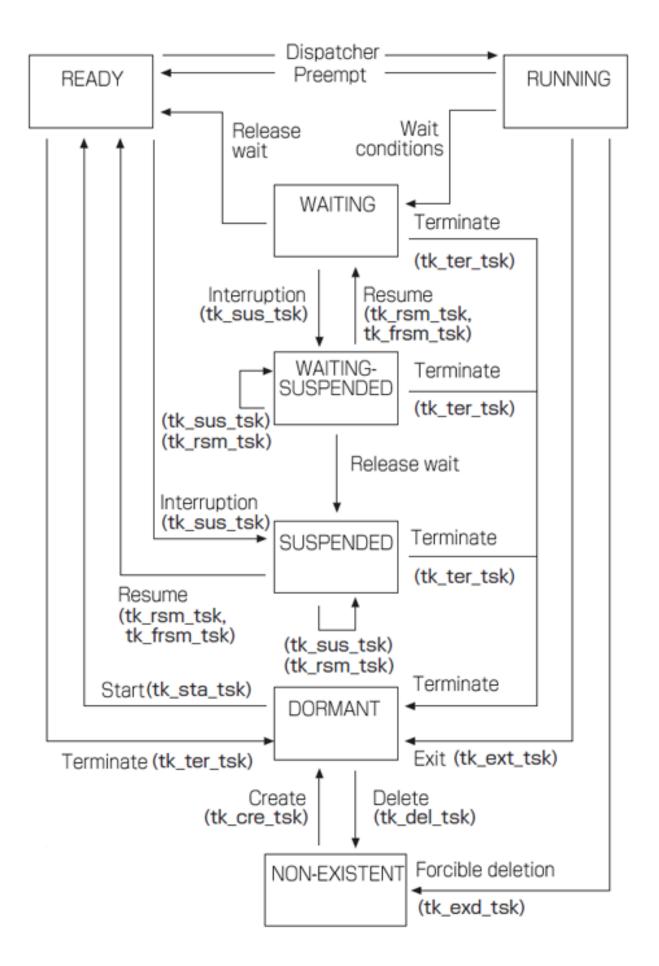


Figure 2.1: Task State Transition Diagram

A feature of μ T-Kernel is the clear distinction made between system calls that perform operations affecting the invoking task and those whose operations affect other tasks (see Table 2.1, "State Transitions Distinguishing Invoking Task and Other Tasks"). The reason for this is to clarify task state transitions and facilitate understanding of system calls. This distinction between system call operations in the invoking task and operations affecting other tasks can also be seen as a distinction between state transitions from RUNNING state and those from other states.

	Operations in invoking tasks (Transition from RUNNING state)	Operations on other tasks (Transitions from other states)
Task transition to a waiting state	tk_slp_tsk	tk_sus_tsk
(including SUSPENDED)	RUNNING state → WAITING	READY state, WAITING state →
	state	SUSPENDED state,
		WAITING-SUSPENDED state
Task exit	tk_ext_tsk	tk_ter_tsk
	RUNNING state → DORMANT	READY state, WAITING state →
	state	DORMANT state
Task deletion	tk_exd_tsk	tk_del_tsk
	RUNNING state →	DORMANT state →
	NON-EXISTENT state	NON-EXISTENT state

Table 2.1: State Transitions Distinguishing Invoking Task and Other Tasks

Additional Notes

WAITING state and SUSPENDED state are orthogonally related, in that a request for transition to SUSPENDED state cannot have any effect on the conditions for task wait release. That is, the task wait release conditions are the same whether the task is in WAITING state or WAITING-SUSPENDED state. Thus even if transition to SUSPENDED state is requested for a task that is in a state of waiting to acquire some resource (semaphore resource, memory block, etc.), and the task goes to WAITING-SUSPENDED state, the conditions for allocation of the resource do not change but remain the same as before the request to go to SUSPENDED state.

Rationale for the Specification

The reason the μ T-Kernel makes a distinction between WAITING state (wait caused by the invoking task) and SUSPENDED state (wait caused by another task) is that these states sometimes overlap. By recognising these overlapped states as WAITING-SUSPENDED states, the task state transitions become clearer and system calls are easier to understand. On the other hand, since a task in WAITING state cannot invoke a system call, different types of WAITING state (e.g., waiting for wakeup, or waiting to acquire a semaphore resource) will never overlap. Since there is only one kind of waiting state caused by another task (SUSPENDED state), the μ T-Kernel treats repeated entries to SUSPENDED state as nesting, thereby achieving clarity of task state transitions.

2.2.2 Task Scheduling Rules

The μ T-Kernel adopts a preemptive priority-based scheduling method based on priority levels assigned to each task. Tasks having the same priority are scheduled on a FCFS (First Come First Served) basis. Specifically, task precedence is used as the task scheduling rule, and precedence among tasks is determined as follows based on the priority of each task. If there are multiple tasks that can be run, the one with the highest precedence goes to RUNNING state and the others go to READY state. In determining precedence among tasks, of those tasks having different priority levels, that with the highest priority has the highest precedence. Among tasks having the same priority, the one that entered a run state (RUNNING state or READY state) first

has the highest precedence. It is possible, however, to use a system call to change the precedence among tasks having the same priority.

When the task with the highest precedence changes from one task to another, a dispatch occurs immediately and the task in RUNNING state is switched. If no dispatch occurs (during execution of a handler, during dispatch disabled state, etc.), however, the switching of the task in RUNNING state is held off until the next dispatch occurs.

Additional Notes

According to the scheduling rules adopted in the μ T-Kernel, so long as there is a higher precedence task in a run state, a task with lower precedence will simply not run. That is, unless the highest-precedence task goes to WAITING state or for other reason cannot run, other tasks are not run. This is a fundamental difference from TSS (Time Sharing System) scheduling in which multiple tasks are treated equally.

It is possible, however, to issue a system call changing the precedence among tasks having the same priority. An application can use such a system call to realize round-robin scheduling, which is a typical kind of TSS scheduling.

Examples in figures below illustrate how the task that first goes to a run state (RUNNING state or READY state) gains precedence among tasks having the same priority. Figure 2.2, "Precedence in Initial State" shows the precedence among tasks after Task A of priority 1, Task E of priority 3, and Tasks B, C and D of priority 2 are started in that order. The task with the highest precedence, Task A, goes to RUNNING state.

When Task A exits, Task B with the next-highest precedence goes to RUNNING state (Figure 2.3, "Precedence After Task B Goes To RUNNING State"). When Task A is again started, Task B is preempted and reverts to READY state; but since Task B went to a run state earlier than Task C and Task D, it still has the highest precedence among tasks with the same priority. In other words, the task precedence reverts to that in Figure 2.2, "Precedence in Initial State".

Next, consider what happens when Task B goes to WAITING state in the conditions in Figure 2.3, "Precedence After Task B Goes To RUNNING State". Since task precedence is defined among tasks that can be run, the precedence among tasks becomes as shown in Figure 2.4, "Precedence After Task B Goes To WAITING State". Thereafter when the Task B waiting state is released, Task B goes to run state after Task C and Task D, and thus assumes the lowest precedence among tasks of the same priority (Figure 2.5, "Precedence After Task B WAITING State Is Released").

Summarizing the above, immediately after a task that goes from READY state to RUNNING state reverts to READY state, it has the highest precedence among tasks of the same priority; but after a task goes from RUNNING state to WAITING state and then the wait is released, its precedence is the lowest among tasks of the same priority.

Note that after a task goes from SUSPENDED state to a run state, it has the lowest precedence among tasks of the same priority.

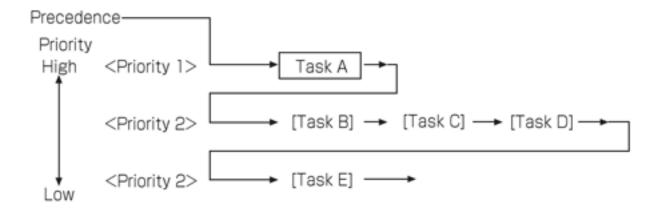


Figure 2.2: Precedence in Initial State

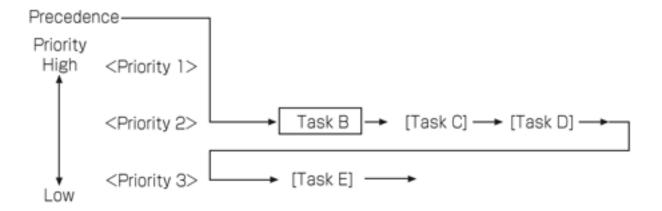


Figure 2.3: Precedence After Task B Goes To RUNNING State

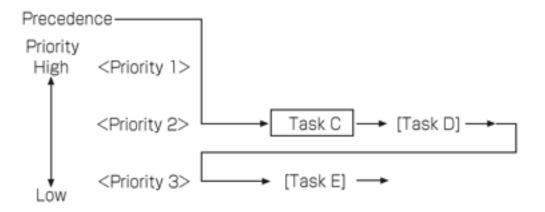


Figure 2.4: Precedence After Task B Goes To WAITING State

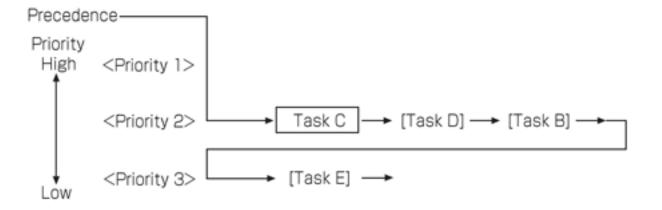


Figure 2.5: Precedence After Task B WAITING State Is Released

2.3 Interrupt Handling

Interrupts in the μ T-Kernel include both external interrupts from devices and interrupts due to CPU exceptions. One interrupt handler may be defined for each interrupt handler number. Interrupt handlers can be started in two ways: one is to start it without the kernel intervention, the other is to start it via a high-level language support routine.

For more details, see Section 4.8, "Interrupt Management Functions".

2.4 Task Exception Handling

The μ T-Kernel defines task exception handling functions for dealing with exceptions. Note that CPU exceptions are treated as interrupts.

A task exception handling function invokes a system call requesting task exception handling by a designated task, interrupts execution by the specified task, and runs a task exception handler. Execution of the task exception handler takes place in the same context as the interrupted task. Upon return from the task exception handler, the interrupted processing continues.

One task exception handler per task can be registered from an application.

For more details, see Section 4.3, "Task Exception Handling Functions".

2.5 System States

2.5.1 System States While Non-task Portion Is Executing

When programming tasks to run on μ T-Kernel, one can keep track of the changes in task states by using a task state transition diagram. In the case of routines such as interrupt handlers or extended SVC handlers, however, the user must perform programming at a level closer to the kernel than tasks. In this case consideration must be made also of system states while a non-task portion is being executed, for application programs to work properly. An explanation of μ T-Kernel system states is therefore given here.

System states are classified as in Figure 2.6, "Classification of System States".

Of these shown in Figure 2.6, "Classification of System States", a "transient state" is equivalent to the kernel running state (system call execution). From the standpoint of the user, it is important that each of the system calls issued by the user application program be executed indivisibly, and that the internal states while a system call is executing cannot be seen by the user. For this reason the state while the kernel running is considered a "transient state" and internally it is treated as a black box.

However, in the following case, for instance, a transient state may become visible to users.

• When memory is being allocated or freed in the case of a system call that gets or releases memory (while a μ T-Kernel/SM system memory management function is called).

When a task is in a transient state such as these, the behavior of a task termination (tk_ter_tsk) system call is not guaranteed. Moreover, task suspension (tk_sus_tsk) may cause a deadlock or other problem by stopping without clearing the transient state.

Accordingly, as a rule tk_ter_tsk and tk_sus_tsk cannot be used in programs. These system calls should be used only in specific middleware or debugger, which is closely related to OS itself.

While being a "non-task portion," the portion that is considered to be running a processing requested from a specific task (called a "requesting task") is called "quasi-task portion." For example, an extended SVC handler is executed as a "quasi-task portion." The invoking task can be identified in a "quasi-task portion" and the requesting task becomes the invoking task. Similar to the task portion, in the quasi-task portion, the task state transitions can be defined and system calls can be issued to enter into WAITING state from the quasi-task portion. In this way, the quasi-task portion behaves similarly to a subroutine called from a requesting task. "Quasi-task portion" is, however, positioned as an extended part of OS and its processor operation mode and stack space are different from those of the task portion. It means that when a state enters into a quasi-task portion from a task portion, its processor operation mode and stack space are switched. This behavior is different from when a function or subroutine is called in a task portion.

Among the "non-task portion," a "task-independent portion" is activated due to a factor that completely ignore the progress of the task portion or quasi-task portion processing. Specifically, an interrupt handler that is triggered by an external interrupt or a time event handler (cyclic handler and alarm handler) that is triggered due to the specified elapsed time is executed as a "task-independent portion." Note that both the external interrupt and the specified elapsed time are the factors that is independent from a task that is incidentally running at that moment.

Finally, "non-task portion" is separated into three classes: "transient state," "quasi-task portion," and "task-independent portion." The states other than these represent a state where a program for the task is running, this is, the state where "task portion is running."

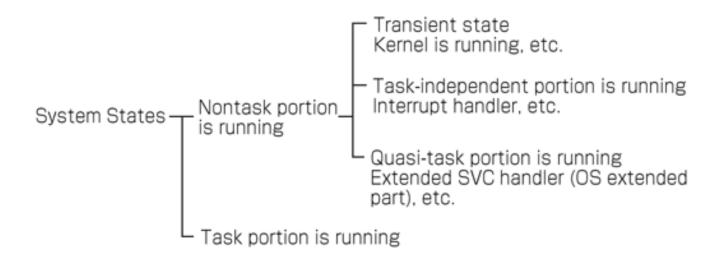


Figure 2.6: Classification of System States

2.5.2 Task-Independent Portion and Quasi-Task Portion

A feature of a task-independent portion (interrupt handlers, time event handlers, etc.) is that it is meaningless to identify the task that was running immediately prior to entering a task-independent portion, and the concept of "invoking task" does not exist. Accordingly, a system call that enters WAITING state, or one that is issued implicitly specifying the invoking task, cannot be called from a task-independent portion. Moreover, since the currently running task cannot be identified in a task-independent portion, there is no task switching (dispatching). If dispatching is necessary, it is delayed until processing leaves the task-independent portion. This is called delayed dispatching.

If dispatching were to take place in the interrupt handler, which is a task-independent portion, the rest of the interrupt handler routine would be delayed for execution after the task started by the dispatching, causing problems in case of interrupt nesting. This is illustrated in Figure 2.7, "Interrupt Nesting and Delayed Dispatching".

In Figure 2.7, "Interrupt Nesting and Delayed Dispatching", Interrupt X is raised during Task A execution, and while its interrupt handler is running, a higher-priority interrupt Y is raised. In this case, if dispatching were to occur immediately on return from interrupt Y at (1), starting Task B, the processing of parts (2) to (3) of Interrupt X would be put off until after Task B relinquishes CPU, with parts (2) to (3) executed only after Task A goes to RUNNING state. The danger is that the low-priority Interrupt X handler would be preempted not only by a higher-priority interrupt but even by Task B started by that interrupt. There would no longer be any guarantee of the interrupt handler execution maintaining priority over task execution, making it impossible to write an interrupt handler. This is the reason for introducing the principle of delayed dispatching.

A feature of a quasi-task portion, on the other hand, is that the task executing prior to entering the quasi-task portion (the requesting task) can be identified, making it possible to define task states just as in the task portion; moreover, it is possible to enter WAITING state while in a quasi-task portion. Accordingly, dispatching occurs in a quasi-task portion in the same way as in ordinary task execution. As a result, even though the OS extended part and other quasi-task portion is a non-task portion, its execution does not necessarily have priority at all times over the task portion. This is in contrast to interrupt handlers, which must always be given execution precedence over tasks.

The following two examples illustrate the difference between a task-independent portion and quasi-task portion.

¹ If dispatching takes place at (1), the remainder of the handler routine for Interrupt X ((2) to (3)) ends up being put off until later.

- An interrupt is raised while Task A (priority 8 = low) is running, and in its interrupt handler (task-independent portion) tk_wup_tsk is issued for Task B (priority 2 = high). In accordance with the principle of delayed dispatching, however, dispatching does not yet occur at this point. Instead, after tk_wup_tsk execution, first the remaining part of the interrupt handler are executed. Only when tk_ret_int is executed at the end of the interrupt handler does dispatching occur, causing Task B to run.
- An extended SVC is executed in Task A (priority 8 = low), and in its extended SVC handler (quasi-task portion), tk_wup_tsk is issued for Task B (priority 2 = high). In this case the principle of delayed dispatching is not applied, so dispatching occurs in tk_wup_tsk processing. Task A goes to READY state in a quasi-task portion, and Task B goes to RUNNING state. Task B is therefore executed before the rest of the extended SVC handler is completed. The rest of the extended SVC handler is executed after dispatching occurs again and Task A goes to RUNNING state.

: Task-independent portion

Task portion

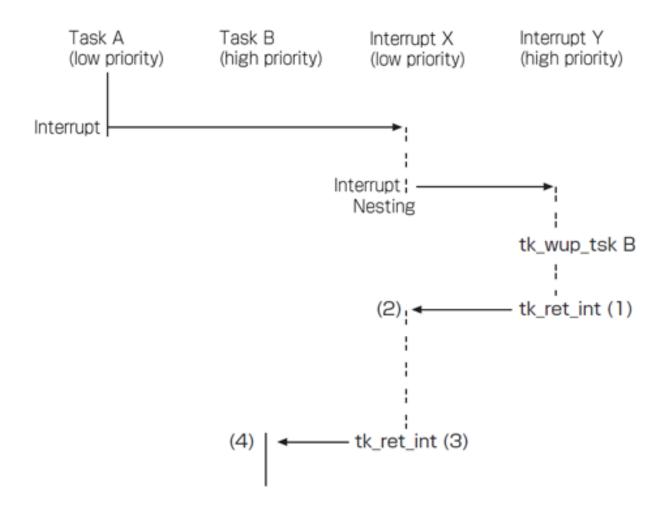


Figure 2.7: Interrupt Nesting and Delayed Dispatching

2.6 Objects

"Object" is the general term for resources handled by μ T-Kernel. Besides tasks, objects include memory pools, semaphores, event flags, mailboxes and other synchronization and communication mechanisms, as well as time event handlers (cyclic handlers and alarm handlers).

Attributes can generally be specified when an object is created. Attributes determine detailed differences in object behavior or the object initial state. When TA_XXXXX is specified for an object, that object is called a "TA_XXXXX attribute object." If there is no particular attribute to be defined, TA_NULL (= 0) is specified. Generally there is no interface provided for reading attributes after an object is registered.

In an object attribute value, the lower bits indicate system attributes and the upper bits indicate implementation-dependent attributes. This specification does not define the bit position at which the upper and lower distinction is to be made. Basically, bits that are not defined in the standard specification can be used as implementation-dependent attributes. In principle, however, the system attribute portion is assigned from the least significant bit (LSB) toward the most significant bit (MSB), and implementation-dependent attributes from the MSB toward the LSB. Bits not defining any attribute must be cleared to 0.

In some cases an object may contain extended information. Extended information is specified when the object is registered. Information passed in parameters when an object starts execution has no effect on μ T-Kernel behavior. Extended information can be read by calling an object status reference system call.

An object is identified by an ID number. In μ T-Kernel, an ID number is automatically assigned when an object is created. Users cannot specify ID numbers. This makes identifying an object during debugging difficult. We can specify an object name for debugging upon creating each object. This name is used temporarily for debugging and can be referred to only from μ T-Kernel/DS functions. No check is performed on the naming by μ T-Kernel.

2.7 Protection Levels

In μ T-Kernel, four levels from 0 to 3 (meaning privileged mode, user mode, etc.) are defined as the protection level at runtime, and also four levels from 0 to 3 are defined as the protection level of memory to be accessed. The currently running execution task can access only to the memory with the same or lower protection level. This function is useful for protecting a system such as the OS from being illegally accessed by programs.

The uses of each protection level are as follows.

Protection Levels	Usage
0	Kernel, subsystems, device drivers, etc.
1	System application tasks
2	(reserved)
3	User application tasks

Some CPUs support only two protection levels privileged (supervisor mode) and user levels. In such a case protection level 0 is assigned to the privileged level and protection level 3 to the user level. In such a case if protection levels from 0 to 2 are specified in an API the behavior of the system is the same as in the case of privileged level 0 being specified. For example if TA_RNG2 is specified in tskatr when tk_cre_tsk is invoked it is assumed that TA_RNG0 has been specified and the task executes at the privileged level (protection level 0). Another example is specifying TA_RNG2 in mplatr when tk_cre_mpl is invoked. This is assumed to specify TA_RNG0 and the access protection level of the created memory pool is 0. In this case the service profile defines the following macros to be 0: TK MEM RNG0, TK MEM RNG1, TK MEM RNG2.

In the case of CPUs without any distinction for privileged and user modes only protection level 0 is used. In such a case if protection levels 1 to 3 are specified in an API the behavior of the system is the same as in the case of privileged level 0 being specified. In this case the service profile defines the following macros to be 0: TK MEM RNG0, TK MEM RNG1, TK MEM RNG2, TK MEM RNG3.

When a protection privilege level of the currently running context is lower than that of the memory being accessed the violation of memory access privilege shall be detected and a CPU exception shall be generated.

Changing from one protection level to another is accomplished by invoking a system call or extended SVC or by interrupt or CPU exception.

A non-task portion (task-independent portion, quasi-task portion, etc.) runs at protection level 0. Only a task portion can run at protection levels 1 to 3. A task portion can also run at protection level 0.

2.8 Service Profile

 μ T-Kernel 3.0 is an OS specification for small-scale embedded computer systems, and it allows many implementations, and permits customization and optimization suitable for each target platform. For features that have strong dependency on hardware such as floating-point unit (FPU), and features that have potential implications for run-time efficiency such as hooks for debug support, the specification allows subsetting as exceptional case, and this allows efficient implementation of μ T-Kernel 3.0 specification OS on target hardware. To accommodate the subsetting in this manner, and the desire to keep the distribution and portability of middleware and application high, μ T-Kernel 3.0 has introduced a mechanism to let each implementation of μ T-Kernel 3.0 describe the differences in the implementation from other implementation of μ T-Kernel 3.0. This description as a whole is called service profile.

Service profile in μ T-Kernel 3.0 is realized by enumerating the information about a particular implementation of μ T-Kernel 3.0 as a list of C language macros that have constant value. For example, an implementation that allows the specification of TA_USERBUF, the corresponding service profile items must be defined as below to announce the support of TA_USERBUF.

```
#define TK_SUPPORT_USERBUF TRUE /* Support of user-specified buffer (TA_USERBUF) */
```

Applications and middleware can use the service profile information and write code according to the existence of the support of TA USERBUF. For example, the following is a typical use case.

```
T_CTSK ctsk = {
                 = NULL,
        .exinf
#if TK_SUPPORT_USERBUF
        .tskatr = TA_HLNG|TA_RNG0|TA_USERBUF,
        .bufptr = taskA_stack,
#else
        .tskatr = TA_HLNG|TA_RNG0,
#endif
        .task
                 = task,
        .itskpri = 10,
        .stksz
                 = 2048
};
tskid = tk_cre_tsk(&ctsk);
```

The code sample above changes, depending on the availability of TA_USERBUF, changes the content of parameter packet ctsk which is passed to tk_cre_tsk. In this manner, it is possible to develop applications and middleware that can be used on both the implementations, those that support TA_USERBUF and those that do not. Middleware developers are requested to improve the portability and thus facilitate distribution of middleware software packages by using the service profile mechanism appropriately.

For the details of service profile items defined in μ T-Kernel 3.0, see Section 3.4, "Service Profile".

Chapter 3

Common Rules of µT-Kernel

3.1 Data Types

3.1.1 General Data Types

```
typedef signed char
                             В;
                                    /* signed 8-bit integer */
typedef signed short
                             Н;
                                    /* signed 16-bit integer */
typedef signed long
                             W;
                                    /* signed 32-bit integer */
                            D;
typedef signed long long
                                    /* signed 64-bit integer */
typedef unsigned char
                            UB;
                                    /* unsigned 8-bit integer */
typedef unsigned short
                            UH;
                                    /* unsigned 16-bit integer */
typedef unsigned long
                            UW;
                                    /* unsigned 32-bit integer */
typedef unsigned long long
                            UD;
                                    /* unsigned 64-bit integer */
                            VB;
typedef char
                                    /* 8-bit data without an intended type */
typedef short
                                    /* 16-bit data without an intended type */
                            VH;
typedef long
                                    /* 32-bit data without an intended type */
                            VW;
typedef long long
                            VD;
                                    /* 64-bit data without an intended type */
typedef volatile B
                            В;
                                    /* volatile declaration */
typedef volatile H
                            _H;
typedef volatile W
                            W;
typedef volatile D
                            D;
typedef volatile UB
                            _UB;
typedef volatile UH
                            _UH;
typedef volatile UW
                            _UW;
typedef volatile UD
                            _UD;
                            INT;
                                    /* signed integer of processor bit width */
typedef signed int
typedef unsigned int
                            UINT;
                                   /st unsigned integer of processor bit width st/
                            SZ;
                                    /* Generic SiZe */
typedef INT
typedef INT
                            ID;
                                    /* general ID */
                            MSEC;
                                    /* general time (in milliseconds) */
typedef W
typedef void
                        (*FP)();
                                   /* general function address */
typedef INT
                        (*FUNCP)(); /* general function address */
                                    /* local symbol definition */
#define LOCAL
                        static
#define EXPORT
                                    /* global symbol definition */
#define IMPORT
                        extern
                                    /* global symbol reference */
* Boolean values
        TRUE = 1 is defined, but any value other than 0 is logically TRUE.
        Do NOT use as in if ( bool == TRUE )
 *
        use as in if (bool)
 *
 */
typedef UINT
                        BOOL;
#define TRUE
                        1
                                    /* true */
#define FALSE
                                    /* false */
```

Note

- VB, VH, VW, and VD differ from B, H, W, and D in that the former mean only the bit width is known, not the contents of the data type, whereas the latter clearly indicate integer type.
- SZ type is an integer data type with implementation-defined bit width, and it shall be properly defined based on the CPU bit width and memory space size for each implementation.
- BOOL defines TRUE as 1, but any value other than 0 is also true. For this reason, TRUE must not be used as left-hand or right-hand value of comparison operators (== and !=) for deciding whether the value is true or false. That is, conditional operations like "if (boolean value == TRUE)" should be avoided, and instead use boolean value directly as condition, like "if (boolean value)".

Related Service Profile Items

The 64-bit data types, D, UD, and VD, are guaranteed to be usable when the following service profile item is set to be effective.

TK_HAS_DOUBLEWORD

Support of 64-bit data types (D, UD, VD)

Additional Notes

Parameters such as stksz, wupcnt, and message size that clearly do not take negative values are also in principle signed integer (INT or W) data type. This is in keeping with the overall TRON project rule that integers should be treated as signed numbers as much as possible. As for the timeout (TMO tmout) parameter, its being a signed integer enables the use of TMO_FEVR=(-1) having special meaning. Parameters with unsigned data type are those treated as bit patterns (object attribute, event flag, etc.)

3.1.2 Other Defined Data Types

The following names are used for other data types that appear frequently or have special meaning, in order to make The parameter meaning clear.

```
/* Function Codes */
typedef INT
                          FN;
typedef UW
                          ATR;
                                           /* Object/handler attributes */
                                           /* Error Code */
typedef INT
                          ER;
typedef INT
                          PRI;
                                           /* Priority */
typedef W
                          TMO;
                                           /* Timeout specification in milliseconds */
typedef D
                          TMO_U;
                                           /* Timeout specification in microseconds with 64- \leftarrow
    bit integer */
typedef UW
                          RELTIM;
                                           /* Relative time in milliseconds */
typedef UD
                          RELTIM U;
                                           /* Relative time in microseconds with 64-bit \leftrightarrow
    integer */
                                           /* System time in milliseconds */
typedef struct systim {
        W
                                           /* High 32 bits */
                 hi;
        UW
                                           /* Low 32 bits */
                 lo;
} SYSTIM;
                          SYSTIM U;
                                           /* System time in microseconds with 64-bit integer
typedef D
   */
 * Common constants
```

```
#define NULL 0  /* Null pointer */
#define TA_NULL 0  /* No special attributes indicated */
#define TMO_POL 0  /* Polling */
#define TMO_FEVR (-1)  /* Eternal wait */
```

Note

A data type that combines two or more data types is represented by its main data type. For example, the
value returned by tk_cre_tsk can be a task ID or error code, but since it is mainly a task ID, the data type is
ID.

Related Service Profile Items

TMO_U, RELTIM_U, and SYSTEM_U dealing with date and relative time in microsecond resolution are guaranteed to be usable only when the following service profile items are set to be effective.

TK_SUPPORT_USEC

Support of microsecond

Additional Notes

The policy is to append "_u" (u means μ) or "_U" at the end for parameters and data types representing microsecond (μ sec), or append "_d" (d means double integer) or "_D" at the end for other parameters and data types representing 64-bit integer. TMO_U, RELTIM_U, and SYSTIM_U are data type names complying to this policy.

3.2 System Calls

3.2.1 System Call Format

 μ T-Kernel adopts C as the standard high-level language, and standardizes interfaces for system call execution from C language routines.

The method for interfacing with the assembly language shall be implementation-dependent. Calling by means of a C language interface is recommended even when an assembly language is used. In this way, portability is assured for programs written in assembly language even if the OS changes, so long as the CPU is the same.

The following common rules are established for system call interfaces.

- · All system calls are defined as C language functions.
- A function return code of 0 or a positive value indicates normal completion, while negative values are used for error codes.

The implementation of the system call interface is not standardized, and is implementation-dependent. For example, we can use C language macros, inline functions, inline assembly language description, etc.

Among C language interfaces for system calls, those which pass parameters using a packet or pointer have CONST modifier attached to explicitly indicate that μ T-Kernel does not overwrite a parameter referred to by the pointer.

CONST is intended to be the C language const modifier equivalent. This alias for const is used so that the compiler check can be disabled by using #define macro function when any program that does not support const modifier mixes in.

Specific usage of CONST is as follows: Details, however, depend on the development environment.

1. Include the following descriptions in the common include file:

```
/* If TKERNEL_CHECK_CONST definition exists, enable the check for const */
#ifdef TKERNEL_CHECK_CONST
#define CONST const
#else
#define CONST
#endif
```

2. Describe a function definition or system call definition in the program by using CONST.

```
Description Example of CONST

tk_cre_tsk( CONST T_CTSK *pk_ctsk );
foo_bar( CONST void *buf );
```

In μ T-Kernel 3.0 or later, it is strongly recommended that CONST is used explicitly in a program and the check for const is enabled in the configuration.

3.2.2 APIs Possible from Task-Independent Portion

The following system calls of μ T-Kernel/OS can be issued from a task-independent portion and in dispatch disabled state:

System call name	Summary description
tk_sta_tsk	Start Task
tk_ref_tsk	Reference Task Status

System call name	Summary description
tk_wup_tsk	Wakeup Task
tk_rel_wai	Release Wait
tk_sus_tsk	Suspend Task
tk_sig_tev	Signal Task Event
tk_sig_sem	Signal Semaphore
tk_set_flg	Set Event Flag
tk_sta_cyc	Start Cyclic Handler
tk_stp_cyc	Stop Cyclic Handler
tk_ref_cyc	Reference Cyclic Handler Status
tk_ref_cyc_u	Reference Cyclic Handler Status (Microseconds)
tk_sta_alm	Start Alarm Handler
tk_sta_alm_u	Start Alarm Handler (Microseconds)
tk_stp_alm	Stop Alarm Handler
tk_ref_alm	Reference Alarm Handler Status
tk_ref_alm_u	Reference Alarm Handler Status (Microseconds)
tk_ret_int	Return from Interrupt Handler (can be issued only
	from an interrupt handler written in an assembly
	language)
tk_rot_rdq	Rotate Ready Queue
tk_get_tid	Get Task Identifier
tk_ref_sys	Reference System Status

The following APIs of μ T-Kernel/SM can be issued from a task-independent portion and in dispatch disabled state:

API name	Summary description
DI	Disable External Interrupts
EI	Enable External Interrupts
isDI	Get Interrupt Disable Status
SetCpuIntLevel	Set CPU Interrupt Mask Level
GetCpuIntLevel	Get CPU Interrupt Mask Level
EnableInt	Enable Interrupts
DisableInt	Disable Interrupts
ClearInt	Clear Interrupt
EndOfInt	Issue EOI to Interrupt Controller
CheckInt	Check Interrupt
SetIntMode	Set Interrupt Mode
SetCtrlIntLevel	Set Interrupt Controller Interrupt Mask Level
GetCtrlIntLevel	Get Interrupt Controller Interrupt Mask Level
out_b	Write to I/O Port (in Bytes)
out_h	Write to I/O Port (in Half-words)
out_w	Write to I/O Port (in Words)
out_d	Write to I/O Port (in Double-words)
in_b	Read from I/O Port (in Bytes)
in_h	Read from I/O Port (in Half-words)
in_w	Read from I/O Port (in Words)
in_d	Read from I/O Port (in Double-words)
WaitUsec	Micro Wait (Microseconds)
WaitNsec	Micro Wait (Nanoseconds)
SetOBJNAME	Set Object Name

All system calls of μ T-Kernel/DS can be issued from a task-independent portion and in dispatch disabled state.

Whether system calls or APIs other than those above can be issued from a task-independent portion or in dispatch disabled state is implementation-dependent.

3.2.3 Restricting System Call Invocation

The protection levels at which a system call is invokable can be restricted. In this case, if a system call is issued from a task (task portion) running at lower privilege than the specified protection level, the error code E_OACV is returned.

Extended SVC calling cannot be restricted.

If, for example, issuing a system call from a level with lower privilege than level 1 is prohibited, system calls cannot be made from tasks running at protection levels 2 and 3. Tasks running at those levels will only be able to make extended SVC calls, and are programmed using subsystem functions only.

This kind of restriction is used when μ T-Kernel is combined with middleware that offers process management function and other functions, to prevent tasks (as part of user process, etc.) that use the functions of such middleware (process management, etc.) from directly accessing μ T-Kernel functions. It allows μ T-Kernel to be used as a micro-kernel. The idea is that the user process cannot control the micro-kernel directly via available process API, and only the middleware can control the micro-kernel directly.

The protection level restriction on system call invocation is set using the system configuration information management functions. (see Section 5.6, "System Configuration Information Management Functions").

3.2.4 Modifying a Parameter Packet Format

Some parameters passed to system calls use packet format. The packet format parameters are of two kinds, either input parameters passing information to a system call (e.g., T_CTSK) or output parameters returning information from a system call (e.g., T_RTSK).

Additional information that is implementation-dependent can be added to a parameter packet. When implementation dependent information is added, it must be positioned after the standard defined information. It is permitted to delete only parameters that are declared ineffective by the service profile, and other parameters shall not be deleted. It is not allowed, however, to change the data types and order of information defined in the standard specification.

When implementation-dependent information is added to a packet of input information passed to a system call (T_CTSK, etc.), if the system call is invoked while this additional information is not yet initialized (memory content is indeterminate), the system call must still function normally.

Ordinarily a flag indicating that valid values are set in the additional information is defined in the implementation-dependent area of attribute flag included in the standard specification. When that flag is set (1), the additional information is to be used; and when the flag is not set (0), the additional information is not initialized (memory content is indeterminate) and the default values are to be used instead.

The reason for this specification is to make sure we can run the same application program merely by recompiling, irrespective of whether implementation dependent function extension is added to an implementation of the specification.

Porting Guideline

A care must be taken now for parameter packet initialization since the parameter may be deleted by declaring it to be ineffective by service profile. For example, it is not recommended to initialize T_CTSK structure in the following manner from the viewpoint f portability.

```
T_CTSK    ctsk = {
        NULL,
        TA_HLNG|TA_RNG0|TA_USERBUF,
        task,
        10,
        2048,
        "",
        buf
};
```

Instead, it is recommended to perform initialization using the syntax specified in ISO/IEC 9899:1999 as follows.

3.2.5 Function Codes

Function codes are numbers assigned to each system call and used to identify the system call.

The system call function codes are not specified here but are to be defined in implementation.

See tk_def_ssy on extended SVC function codes.

3.2.6 Error Codes

System call return codes are in principle to be signed integers. When an error occurs, a negative error code is returned; and if processing is completed normally, E_OK (= 0) or a positive value is returned. The meaning of returned values in the case of normal completion is specified individually for each system call. An exception to this principle is that there are some system calls that do not return when called. A system call that does not return is declared in the C language interface as having no return code (i.e., a void type function).

An error code consists of the main error code and sub error code. The low 16 bits of the error code are the sub error code, and the remaining high bits are the main error code. Main error codes are classified into error classes based on the necessity of their detection, the circumstances in which they occur and other factors.

```
#define MERCD(er) ( (ER)(er) >> 16 ) /* main error code */ #define SERCD(er) ( (H)(er) ) /* sub error code */ #define ERCD(mer, ser) ( (ER)(mer) << 16 | (ER)(UH)(ser) )
```

Note that, in an environment where ER is 16-bit data type, sub error code can be omitted and main error code can be returned as the error code. In this case, SERCD macro shall not be defined.

```
#define MERCD(er) ( (ER)(er) ) /* main error code */ #define ERCD(mer, ser) ( (ER)(mer) )
```

Related Service Profile Items

Only when the service profile items below are set to be effective, the error code contains sub error code, and SERCD macro is supported.

TK_SUPPORT_SERCD

Support of sub error code

3.2.7 Timeout

A system call that may enter WAITING state has a timeout function. If processing is not completed by the time the specified timeout interval has elapsed, the processing is canceled and the system call returns error code E_TMOUT.

In accordance with the principle that there should be no side-effects from calling a system call if that system call returns an error code, the calling of a system call that times out should in principle result in no change in system state. An exception to this is when the functioning of the system call is such that it cannot return to its original state if processing is canceled. This is indicated in the system call description.

If the timeout interval is set to 0, a system call does not enter even when a situation arises in which it would ordinarily go to WAITING state. In other words, a system call with timeout set to 0 when it is invoked has no possibility of entering WAITING state. Invoking a system call with timeout set to 0 is called polling; i.e., a system call that performs polling has no chance of entering WAITING state.

The descriptions of individual system calls as a rule describe the behavior when there is no timeout (in other words, when an eternal wait occurs). Even if the system call description states that the system call "enters WAITING state" or "is put in WAITING state," if a timeout is set and that time interval elapses before processing is completed, the WAITING state is released and the system call returns error code E_TMOUT. In the case of polling, the system call returns E_TMOUT without entering WAITING state.

Timeout (TMO and TMO_U types) is given as a positive integer, or as TMO_POL=0 for polling, or as TMO_FEVR (= -1) for eternal wait. If a timeout interval is set, the timeout processing must be guaranteed to take place after the specified interval from the system call issuing has elapsed.

Additional Notes

Since a system call that performs polling does not enter WAITING state, there is no change in the precedence of the task calling it.

In a general implementation, when the timeout is set to 1, timeout processing takes place on the second timer interrupt (sometimes called "time tick") after a system call is invoked. Since a timeout of 0 cannot be specified (0 being allocated to TMO_POL), in this kind of implementation timeout does not occur on the initial timer interrupt after the system call is invoked.

3.2.8 Relative Time and System Time

When the time of an event occurrence is specified relative to another time, such as the time when a system call was invoked, relative time (RELTIM or RELTIM_U type) is used. If relative time is used to specify event occurrence time, it is necessary to guarantee that the event processing will take place after the specified time has elapsed from the time base. Relative time (RELTIM or RELTIM_U type) is also used for e.g. event occurrence. In such cases the method of interpreting the specified relative time is determined for each case. When time is specified as an absolute value, system time (SYSTIM or SYSTIM_U type) is used. The μ T-Kernel provides a function for setting system time, but even if the system time is changed using this function, there is no change in the real world time (actual time) at which an event occurs that was specified using relative time. What changes is the system time at which an event occurs that was specified as relative time.

SYSTIM: System time

Time base 1 millisecond, 64-bit signed integer

```
typedef struct systim {
    W hi; /* High 32 bits */
    UW lo; /* Low 32 bits */
} SYSTIM;
```

SYSTIM_U: System time

Time base 1 microsecond, 64-bit signed integer

```
typedef D SYSTIM_U; /* 64-bit */
```

RELTIM: Relative time

Time base 1 millisecond, 32-bit unsigned integer (UW)

```
typedef UW RELTIM;
```

RELTIM_U: Relative time

Time base 1 microsecond, 64-bit unsigned (UD) integer

```
typedef UD RELTIM_U; /* Relative time in microseconds with 64-bit integer */
```

TMO: Timeout time

Time base 1 millisecond, 32-bit signed integer (W)

```
typedef W TMO;
```

Eternal wait can be specified as TMO_FEVR (= -1).

TMO U timeout period

Time base 1 microsecond, 64-bit signed (D) integer

```
typedef D TMO_U; /* Timeout in microseconds with 64-bit integer */
```

Eternal wait can be specified as TMO_FEVR (= -1).

Related Service Profile Items

TMO_U, RELTIM_U, and SYSTEM_U dealing with date and relative time in microsecond resolution are guaranteed to be usable only when the following service profile items are set to be effective.

TK_SUPPORT_USEC

Support of microsecond

Additional Notes

Timeout or other such processing must be guaranteed to occur after the time specified as RELTIM, RELTIM_U, TMO, or TMO_U has elapsed. For example, if the timer interrupt interval is 1 ms and a timeout of 1 ms is specified, timeout occurs on the second timer interrupt after system call invocation. (The first timer interrupt does not exceed 1 ms.)

When a system time (SYSTIM_U) value that may overflow internally in kernel is specified as an argument, the system call behavior is undefined.

3.3 High-Level Language Support Routines

High-level language support routine capability is provided so that even if a task or handler is written in high-level language, the kernel-related processing can be kept separate from the language environment-related processing. Whether or not a high-level language support routine is used is specified in TA_HLNG, one of the object attributes and handler attributes.

When TA_HLNG is not specified, a task or handler is started directly from the start address passed in a parameter to tk_cre_tsk or tk_def_int, etc.; whereas when TA_HLNG is specified, first the high-level language startup processing routine (high-level language support routine) is started, then from this routine an indirect jump is made to the task start address or handler address passed in a parameter to tk_cre_tsk or tk_def_int. Viewed from the kernel, the task start address or handler address is a parameter given to the high-level language support routine. Separating the kernel processing from the language environment processing in this way facilitates support for different language environments.

Use of high-level language support routines has the further advantage that when a handler is written as a C language function, a system call for return from a handler can be executed automatically, simply by performing a function return (explicit return or "}").

In a system that utilizes CPU's operating modes, however, whereas it is relatively easy to realize a high-level language support routine in the case of an interrupt handler or the like that runs at the same protection level as the kernel, it is more difficult in the case of a task or task exception handler running at a different protection level from the kernel's. For this reason, when a high-level language support routine is used for a task, there is no guarantee that the task will exit by a return from the function. Returning a task function using return or "}" leads to an undefined behavior. At the end of a task, Exit Task (tk_ext_tsk) or Exit and Delete Task (tk_exd_tsk) must always be issued.

In the case of a task exception handler, the high-level language support routine is supplied as source code and is to be embedded in the user program.

The internal working of a high-level language support routine is as illustrated in Figure 3.1, "Behavior of High-Level Language Support Routine".

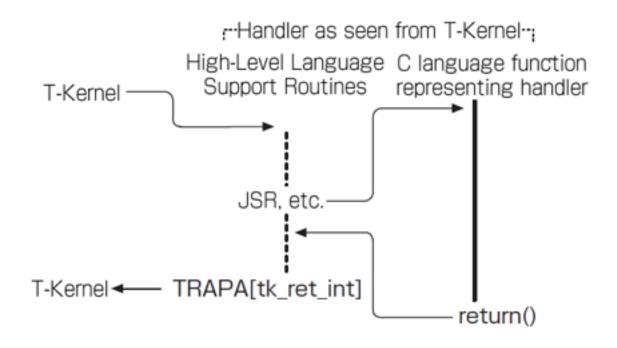


Figure 3.1: Behavior of High-Level Language Support Routine

3.4 Service Profile

 μ T-Kernel 3.0 service profile items are shown below. Defining these service profile items is a requirement. The implementor of OS may add original service profile definitions.

3.4.1 Service Profile Items that Represent Function Availability

The service profile item that shows whether a particular function is effective (or enabled) or ineffective (or disabled) is described by using a macro shown below, which is defined to be either TRUE, or FALSE. (The following definitions are given as example only, and each implementation shall define these appropriately.)

3.4.1.1 Device Driver Functions

```
#define TK_SUPPORT_TASKEVENT TRUE /* Support of task event */
#define TK_SUPPORT_DISWAI TRUE /* Support of disabling wait */
#define TK_SUPPORT_IOPORT TRUE /* Support of I/O port access */
#define TK_SUPPORT_MICROWAIT TRUE /* Support of micro wait */
```

Setting TK_SUPPORT_TASKEVENT and TK_SUPPORT_DISWAI to TRUE is recommended on systems that use advanced general-purpose device drivers.

Setting TK_SUPPORT_IOPORT and TK_SUPPORT_MICROWAIT to TRUE is generally recommended.

3.4.1.2 Power Management Functions

```
#define TK_SUPPORT_LOWPOWER TRUE /* Support of power management functions */
```

Setting TK_SUPPORT_LOWPOWER to TRUE is recommended. However, this may as well be set to FALSE on systems with little need for power-saving or restrictions due to used hardware.

3.4.1.3 Static/dynamic Memory Management Functions

```
#define TK_SUPPORT_USERBUF FALSE /* Support of user-specified buffer
(TA_USERBUF) */

#define TK_SUPPORT_AUTOBUF TRUE /* Support of automatic buffer allocation
(No TA_USERBUF specification) */

#define TK_SUPPORT_MEMLIB TRUE /* Support of memory allocation library */
```

Setting TK_SUPPORT_USERBUF to FALSE is generally recommended.

Setting TK_SUPPORT_AUTOBUF to TRUE is generally recommended.

However, it is acceptable in a system where memory management is staticfally done to set TK_SUPPORT_USERBUF to TRUE, and TK_SUPPORT_AUTOBUF to FALSE.

You cannot set both TK SUPPORT USERBUF and TK SUPPORT AUTOBUF to FALSE.

Setting TK_SUPPORT_MEMLIB to TRUE is generally recommended.

3.4.1.4 Task Exception Handling Functions

```
#define TK_SUPPORT_TASKEXCEPTION TRUE /* Support of task exception handling functions */
```

Setting TK_SUPPORT_TASKEXCEPTION to TRUE is recommended on a relatively large system that consist of many software modules and that requires flexible handling of abnormal conditions.

3.4.1.5 Subsystem Management Functions

```
#define TK_SUPPORT_SUBSYSTEM TRUE /* Support of subsystem management functions */ #define TK_SUPPORT_SSYEVENT TRUE /* Support of event processing of subsystems */
```

Setting TK_SUPPORT_SUBSYSTEM and TK_SUPPORT_SSYEVENT to TRUE is recommended on a relatively large system which use middleware.

3.4.1.6 System Configuration Information Acquisition Functions

```
#define TK_SUPPORT_SYSCONF FALSE /* Support of system configuration information management functions */
```

TK_SUPPORT_SYSCONF need to be set to FALSE on a system where system configuration information such as the maximum counts of objects (e.g. tasks), is fixed statically at OS build time by hard-coding. On the other hand, if the system configuration information is specified flexibly (e.g. at runtime), TK_SUPPORT_SYSCONF need to be set to TRUE.

3.4.1.7 Supporting 64-bit and 16-bit CPUs

```
#define TK_HAS_DOUBLEWORD FALSE /* Support of 64-bit data types
(D, UD, VD) */

#define TK_SUPPORT_USEC FALSE /* Support of microsecond */

#define TK_SUPPORT_LARGEDEV FALSE /* Support of large mass-storage device
(64-bit) */

#define TK_SUPPORT_SERCD TRUE /* Support of sub error code */
```

TK_HAS_DOUBLEWORD, TK_SUPPORT_USEC, and TK_SUPPORT_LARGEDEV need to be set to either TRUE or FALSE, according to the target hardware characteristics, and the usage or purpose of the target system.

TK_SUPPORT_USEC and TK_SUPPORT_LARGEDEV depend on TK_HAS_DOUBLEWORD. That is, when TK_HAS_DOUBLEWORD is set to FALSE, these two profile items are also set to FALSE.

Setting TK_SUPPORT_SERCD to TRUE is recommended on a system where INT and ER are 32 bit entities. Setting TK_SUPPORT_SERCD to FALSE is recommended on a system where INT and ER are 16 bit entities.

3.4.1.8 Functions that Depend on CPU, Hardware, System, and Compiler

Each of the following profiles needs to be set to TRUE or FALSE according to the target hardware and the implementation of the OS.

3.4.1.8.1 Interrupt Management Functions

```
#define TK SUPPORT INTCTRL
                                   TRUE
                                          /* Support of interrupt controller
                                             management */
#define TK HAS ENAINTLEVEL
                                   TRUE
                                            Can specify interrupt priority
                                             level */
#define TK SUPPORT CPUINTLEVEL
                                          /* Support of CPU interrupt mask level */
                                   FALSE
#define TK_SUPPORT_CTRLINTLEVEL
                                          /* Support of interrupt controller
                                   TRUE
                                             mask level */
#define TK_SUPPORT_INTMODE
                                   TRUE
                                          /* Support of setting interrupt mode */
```

3.4.1.8.2 Memory Cache Control Functions

```
#define TK_SUPPORT_CACHECTRL TRUE /* Support of memory cache control functions */
#define TK_SUPPORT_SETCACHEMODE TRUE /* Support of set cache mode function */
#define TK_SUPPORT_WBCACHE FALSE /* Support of write-back cache */
#define TK_SUPPORT_WTCACHE TRUE /* Support of write-through cache */
```

3.4.1.8.3 FPU(COP) Support Functions

```
#define TK_SUPPORT_FPU TRUE /* Support of FPU */
#define TK_SUPPORT_COP0 TRUE /* Support of co-processor number 0 */
#define TK_SUPPORT_COP1 FALSE /* Support of co-processor number 1 */
#define TK_SUPPORT_COP2 FALSE /* Support of co-processor number 2 */
#define TK_SUPPORT_COP3 FALSE /* Support of co-processor number 3 */
```

3.4.1.8.4 Miscellaneous Functions

```
#define TK SUPPORT ASM
                                  FALSE /* Support of assembly language function
                                             entry/exit */
#define TK SUPPORT REGOPS
                                  FALSE
                                            Support for task-register manipulation
                                             functions */
#define TK_ALLOW MISALIGN
                                  FALSE
                                         /* Memory misalign access is permitted */
#define TK BIGENDIAN
                                  FALSE
                                         /* Is big endian (Must be defined) */
#define TK TRAP SVC
                                  TRUE
                                         /* Use CPU Trap instruction for system
                                                call entry */
#define TK HAS SYSSTACK
                                  TRUE
                                          /* Task has a separate system stack */
#define TK SUPPORT PTIMER
                                  TRUE
                                          /* Support of physical timer function */
#define TK_SUPPORT_UTC
                                  TRUE
                                          /* Support of UNIX time */
#define TK_SUPPORT_TRONTIME
                                  FALSE /* Support of TRON time */
```

At least one of TK SUPPORT UTC and TK SUPPORT TRONTIME must be set to TRUE.

3.4.1.9 Debugger Support Functions

```
#define TK_SUPPORT_DSNAME FALSE /* Support of DS object name */ #define TK_SUPPORT_DBGSPT FALSE /* Support of \muT-Kernel/DS */
```

Depending on the user's need, TK_SUPPORT_DSNAME and TK_SUPPORT_DBGSPT may be set to either TRUE or FALSE.

TK_SUPPORT_DBGSPT specifies whether the APIs of μ T-Kernel/DS, other than td_ref_dsname and td_set_dsname, can be used. Even if TK_SUPPORT_DBGSPT is set to FALSE, td_ref_dsname and td_set_dsname can be used if TK_SUPPORT_DSNAME is set to TRUE.

3.4.1.10 Check Method of Service Profile

Although the implementations of μ T-Kernel 3.0 must define the profile items mentioned previously, the use of profile where some definitions are missing should be practiced since other OSs does not provide profile at all, and there bound to be implementation's failures to define all the profile items. For example, if you want to distinguish the effective/ineffective/undefined status, you can perform the following check:

```
#if defined(TK_SUPPORT_xxx)
    #if TK_SUPPORT_xxx
    /* when a profile item is set to be effective. */
#else
```

```
/* when a profile item is set to be ineffective */
#endif
#else
/* when a profile item is undefined. */
#endif
```

Note that if profile item is directly used for the parameter of "#if" macro as follows, you cannot distinguish whether the profile item is ineffective or undefined.

```
#if TK_SUPPORT_xxx
   /* when a profile item is set to be effective. */
#else
   /* when a profile item is set to be ineffective or undefined. */
#endif
```

3.4.2 Service Profile Items that Represent Values

A service profile item that represents a limit value or version number will be specified as a MACRO that holds the value. (The following definitions are given as example only. The real values of profile items are implementation-dependent.)

```
#define
         TK SPECVER MAGIC
                                               /* Magic number of \muT-Kernel */
#define
         TK SPECVER MAJOR
                                               /* Major Version number of \muT-Kernel */
                                              /* Minor Version number of \muT-Kernel */
#define
         TK SPECVER MINOR
#define
         TK SPECVER
                                       ((TK_SPECVER_MAJOR << 8) | TK_SPECVER_MINOR)</pre>
                                               /* Version number of \muT-Kernel */
#define
                                       32
         TK MAX TSKPRI
                                              /* Maximum task priority (>= 16) */
         TK_WAKEUP_MAXCNT
                                       65535
                                              /* Maximum queuing count of the task wakeup
#define
                                                  requests (>= 1) */
#define
         TK_SEMAPHORE_MAXCNT
                                       65535
                                              /* Upper limit of maximum semaphore resource
                                                  count (maxsem) (>= 32767) */
#define
         TK SUSPEND MAXCNT
                                       65535
                                              /* Maximum nest count of the forced wait
                                                  of tasks (>= 1) */
#define
         TK_MEM_RNG0
                                               /* Real memory protection level of TA_RNG0
                                                  (0 \sim 3) */
#define
        TK_MEM_RNG1
                                       0
                                               /* Real memory protection level of TA_RNG1
                                                  (0 \sim 3) */
#define
        TK_MEM_RNG2
                                       0
                                               /* Real memory protection level of TA_RNG2
                                                  (0 \sim 3) */
         TK_MEM_RNG3
#define
                                       3
                                               /* Real memory protection level of TA_RNG3
                                                  (0 \sim 3) */
#define
        TK_MAX_PTIMER
                                       2
                                               /* Maximum number of physical timers (>= 0)
                                                  (Values from 1 to TK MAX PTIMER can be used
                                                  as physical timer number) */
```

TK_MEM_RNGn defines the real memory protection level of memory specified by TA_RNGn, and if TK_MEM_RNGn == TK_MEM_RNGm, then as far as memory access protection level goes, TA_RNGn and TA_RNGm are equivalent. In other words, it is guaranteed that a task with protection level m can access memory with protection level n without generating access privilege violation exception.

It is recommended that the developer is prepared for the case of missing definitions for service profile items that are supposed to have a value by means of coding such as defined(...).

3.4.3 Examples of Service Profile Items

Following are concrete examples of service profile items.

3.4.3.1 Service Profile Items for a Very Small-scale System using 16-bit CPU

```
#define TK SUPPORT TASKEVENT
                                   FALSE
#define TK SUPPORT DISWAI
                                   FALSE
#define TK SUPPORT IOPORT
                                   TRUE
#define TK_SUPPORT_MICROWAIT
                                   TRUE
#define TK_SUPPORT_LOWPOWER
                                   TRUE
#define TK_SUPPORT_USERBUF
                                   TRUE
#define TK_SUPPORT_AUTOBUF
                                   FALSE
#define TK_SUPPORT_MEMLIB
                                   FALSE
#define TK SUPPORT TASKEXCEPTION
                                   FALSE
#define TK SUPPORT SUBSYSTEM
                                   FALSE
#define TK SUPPORT SSYEVENT
                                   FALSE
#define TK_SUPPORT_SYSCONF
                                   FALSE
#define TK_HAS_DOUBLEWORD
                                   FALSE
#define TK_SUPPORT_USEC
                                   FALSE
#define TK_SUPPORT_LARGEDEV
                                   FALSE
#define TK_SUPPORT_SERCD
                                   FALSE
#define TK SUPPORT INTCTRL
                                   FALSE
#define TK HAS ENAINTLEVEL
                                   FALSE
#define TK SUPPORT CPUINTLEVEL
                                   FALSE
#define TK_SUPPORT_CTRLINTLEVEL
                                   FALSE
#define TK_SUPPORT_INTMODE
                                   TRUE
#define TK_SUPPORT_CACHECTRL
                                   FALSE
#define TK_SUPPORT_SETCACHEMODE
                                   FALSE
#define TK_SUPPORT_WBCACHE
                                   FALSE
#define TK_SUPPORT_WTCACHE
                                   FALSE
#define TK_SUPPORT_FPU
                                   FALSE
#define TK SUPPORT COP0
                                   FALSE
#define TK_SUPPORT_COP1
                                   FALSE
#define TK_SUPPORT_COP2
                                   FALSE
#define TK_SUPPORT_COP3
                                   FALSE
#define TK_SUPPORT_ASM
                                   TRUE
#define TK SUPPORT REGOPS
                                   FALSE
#define TK_ALLOW_MISALIGN
                                   FALSE
#define TK BIGENDIAN
                                   FALSE
#define TK TRAP SVC
                                   FALSE
#define TK HAS SYSSTACK
                                   FALSE
#define TK SUPPORT PTIMER
                                   FALSE
#define TK_SUPPORT_UTC
                                   TRUE
#define TK_SUPPORT_TRONTIME
                                   FALSE
#define TK_SUPPORT_DSNAME
                                   FALSE
#define TK_SUPPORT_DBGSPT
                                   FALSE
#define TK_SPECVER_MAGIC
                                   6
#define TK_SPECVER_MAJOR
                                   3
#define TK_SPECVER_MINOR
                                   ((TK_SPECVER_MAJOR << 8) | TK_SPECVER_MINOR)
#define TK_SPECVER
                                   16
#define TK_MAX_TSKPRI
#define TK_WAKEUP_MAXCNT
                                   4095
```

3.4.3.2 Service Profile Items for a Relatively Large-scale System

```
#define TK_SUPPORT_TASKEVENT
                                   TRUE
#define TK_SUPPORT_DISWAI
                                   TRUE
#define TK_SUPPORT_IOPORT
                                   TRUE
#define TK SUPPORT MICROWAIT
                                   TRUE
#define TK SUPPORT LOWPOWER
                                   TRUE
#define TK_SUPPORT_USERBUF
                                   FALSE
#define TK SUPPORT AUTOBUF
                                   TRUE
#define TK_SUPPORT_MEMLIB
                                   TRUE
#define TK_SUPPORT_TASKEXCEPTION
                                   TRUE
#define TK SUPPORT SUBSYSTEM
                                   TRUE
#define TK_SUPPORT_SSYEVENT
                                   TRUE
#define TK SUPPORT SYSCONF
                                   TRUE
#define TK_HAS_DOUBLEWORD
                                   TRUE
#define TK_SUPPORT_USEC
                                   TRUE
#define TK_SUPPORT_LARGEDEV
                                   TRUE
#define TK_SUPPORT_SERCD
                                   TRUE
#define TK_SUPPORT_INTCTRL
                                   TRUE
#define TK_HAS_ENAINTLEVEL
                                   TRUE
#define TK_SUPPORT_CPUINTLEVEL
                                   FALSE
#define TK SUPPORT CTRLINTLEVEL
                                   TRUE
#define TK_SUPPORT_INTMODE
                                   TRUE
#define TK SUPPORT CACHECTRL
                                   TRUE
#define TK_SUPPORT_SETCACHEMODE
                                   TRUE
#define TK_SUPPORT_WBCACHE
                                   TRUE
#define TK_SUPPORT_WTCACHE
                                   TRUE
#define TK SUPPORT FPU
                                   TRUE
#define TK SUPPORT COP0
                                   TRUE
#define TK SUPPORT COP1
                                   FALSE
#define TK SUPPORT COP2
                                   FALSE
#define TK_SUPPORT_COP3
                                   FALSE
#define TK_SUPPORT_ASM
                                   TRUE
#define TK_SUPPORT_REGOPS
                                   TRUE
#define TK_ALLOW_MISALIGN
                                   FALSE
#define TK_BIGENDIAN
                                   FALSE
#define TK_TRAP_SVC
                                   TRUE
#define TK_HAS_SYSSTACK
                                   TRUE
#define TK_SUPPORT_PTIMER
                                   TRUE
#define TK SUPPORT UTC
                                   TRUE
#define TK_SUPPORT_TRONTIME
                                   FALSE
```

```
#define TK SUPPORT DSNAME
                                             TRUE
#define TK_SUPPORT_DBGSPT
                                             TRUE
#define TK_SPECVER_MAGIC
                                             6
#define TK_SPECVER_MAJOR
                                             3
#define TK_SPECVER_MINOR
                                             0
\#define\ TK\_SPECVER
                                             ((TK_SPECVER_MAJOR << 8) | TK_SPECVER_MINOR)
#define TK_MAX_TSKPRI
#define TK_WAKEUP_MAXCNT
#define TK_SEMAPHORE_MAXCNT
#define TK_SUSPEND_MAXCNT
#define TK_MEM_RNG0
                                             65535
                                             65535
                                             65535
                                             0
#define TK_MEM_RNG1
                                             0
#define TK_MEM_RNG2
#define TK_MEM_RNG3
                                             0
                                             3
\#define\ TK\_MAX\_PTIMER
                                             10
```

Chapter 4

μ T-Kernel/OS Functions

This chapter describes details of the system calls provided by μ T-Kernel/OS (Operating System).

4.1 Task Management Functions

Task management functions are functions that directly manipulate or reference task states. Functions are provided for creating and deleting a task, for task starting and exit, changing task priority, and referencing task state. A task is an object identified by an ID number called a task ID. Task states and scheduling rules are explained in Section 2.2, "Task States and Scheduling Rules".

For control of execution order, a task has a base priority and current priority. When simply "task priority" is mentioned, this means the current priority. The base priority of a task is initialized to the startup priority when a task is started. If the mutex function is not used, the task current priority is always identical to its base priority. For this reason, the current priority immediately after a task is started is the task startup priority. When the mutex function is used, the current priority is set as discussed in Section 4.5.1, "Mutex".

The kernel does not perform processing for freeing of resources acquired by a task (semaphore resources, memory blocks, etc.) upon task exit, other than mutex unlocking. Freeing of task resources is the responsibility of the application.

4.1.1 tk_cre_tsk - Create Task

C Language Interface

#include <tk/tkernel.h>

ID tskid = tk_cre_tsk(CONST T_CTSK *pk_ctsk);

Parameter

CONST T_CTSK*	pk_ctsk	Packet to Create Task	Information about task creation
pk_ctsk Detail:			
void*	exinf	Extended Information	Extended information
ATR	tskatr	Task Attribute	Task attribute
FP	task	Task Start Address	Task start address
PRI	itskpri	Initial Task Priority	Initial task priority
SZ	stksz	Stack Size	Stack size (in bytes)
SZ	sstksz	System Stack Size	System stack size (in bytes)
void*	stkptr	User Stack Pointer	User stack pointer
UB	dsname[8]	DS Object name	DS object name
void*	bufptr	Buffer Pointer	User buffer pointer
(Other implementat	ion-dependent r	parameters may be added bey	ond this point.)

Return Parameter

ID	tskid	Task ID	Task ID
	or	Error Code	Error code

Error Code

E_NOMEM	Insufficient memory (memory for control block or user stack cannot be allocated)
E_LIMIT	Number of tasks exceeds the system limit
E_RSATR	Reserved attribute (tskatr is invalid or cannot be used), or the specified
	coprocessor does not exist
E_NOSPT	Unsupported functions (when the specification of TA_ASM, TA_USERSTACK,
	TA_TASKSPACE, or TA_USERBUF is not supported.)
E_PAR	Parameter error
E_NOCOP	The specified coprocessor cannot be used (not installed, or abnormal operation
	detected)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

TK_SUPPORT_ASM	Support for specifying TA_ASM for task attribute
TK_SUPPORT_USERBUF	Support for specifying TA_USERBUF for task attribute
TK_SUPPORT_AUTOBUF	Automatic buffer allocation is supported (by not specifying
	TA_USERBUF to task attribute)
TK_SUPPORT_FPU	Support for specifying TA_FPU for task attribute
TK_SUPP0RT_C0Pn	Support for specifying TA_COPn for task attribute
TK_HAS_SYSSTACK	Task can have a system stack independent of user-stack, and
	each can be specified separately using (TA_USERSTACK,
	TA_SSTKSZ)
TK_SUPPORT_DSNAME	Support for specifying TA_DSNAME for task attribute
TK_MAX_TSKPRI	Maximum task priority that can be specified (must be 16 or
	higher)

Description

Creates a task, assigning to it a task ID number. This system call allocates a TCB (Task Control Block) to the created task and initializes it based on itskpri, task, stksz and other parameters.

After the task is created, it is initially in DORMANT state.

itskpri is used to specify the startup priority when a task is started. Task priority level can be specified by a positive integer, and the smaller the value, higher priority the task has. The largest task priority level is defined by TK_MAX_TSKPRI.

exinf can be used freely by the user to insert miscellaneous information about the task. The information set here is passed to the task as startup parameter information and can be referred to by calling tk_ref_tsk. If a larger area is needed for indicating user information, or if the information may need to be changed after the task is created, this can be done by allocating separate memory for this purpose and putting the memory packet address in exinf. The kernel pays no attention to the contents of exinf.

tskatr indicates system attributes in its lower bits and implementation-dependent attributes in its higher bits. The system attribute part of tskatr is as follows.

```
tskatr := (TA ASM || TA HLNG)
   | [TA SSTKSZ] | [TA USERSTACK] | [TA USERBUF] | [TA DSNAME]
   | (TA_RNG0 || TA_RNG1 || TA_RNG2 || TA_RNG3)
   | [TA_COP0] | [TA_COP1] | [TA_COP2] | [TA_COP3] | [TA_FPU]
  TA ASM
                     Indicates that the task is written in assembly language
  TA HLNG
                     Indicates that the task is written in high-level language
                     Specifies the system stack size
  TA SSTKSZ
  TA USERSTACK
                     Points to the user stack
  TA USERBUF
                     Use of user-specified memory area as stack
  TA DSNAME
                     Specifies DS object name
  TA RNGn
                     Indicates that the task runs at protection level n
  TA COPn
                     Specifies use of the nth coprocessor (including floating point coprocessor or DSP)
  TA FPU
                     Specifies use of a floating point coprocessor (when a coprocessor specified in
                     TA COPn is a general-purpose FPU particularly for floating point processing and not
                     dependent on the CPU)
```

The function for specifying implementation-dependent attributes can be used, for example, to specify that a task is subject to debugging. One use of the remaining system attribute fields is for indicating multiprocessor attributes in the future.

```
#define TA USERBUF
                         0x00000020
                                           /* Use user-specified buffer */
#define TA DSNAME
                          0x00000040
                                           /* DS object name */
#define TA RNG0
                          0x00000000
                                           /* Run at protection level 0 */
#define TA RNG1
                          0 x 0 0 0 0 0 1 0 0
                                           /* Run at protection level 1 */
#define TA_RNG2
                          0 x 0 0 0 0 0 2 0 0
                                           /* Run at protection level 2 */
#define TA_RNG3
                          0x00000300
                                           /* Run at protection level 3 */
                                           /* Use ID=0 coprocessor */
#define TA_COP0
                          0x00001000
#define TA_COP1
                          0x00002000
                                           /* Use ID=1 coprocessor */
#define TA_COP2
                          0x00004000
                                           /* Use ID=2 coprocessor */
#define TA COP3
                          0x00008000
                                           /* Use ID=3 coprocessor */
```

When TA_HLNG is specified, starting the task jumps to the task address not directly but by going through a high-level language environment configuration program (high-level language support routine). The task takes the following form in this case.

The startup parameters passed to the task include the task startup code stacd specified in tk_sta_tsk, and the extended information exinf specified in tk_cre_tsk.

The task cannot (must not) be terminated by a simple return from the function, otherwise the operation will be indeterminate (implementation-dependent).

The form of the task when the TA_ASM attribute is specified in implementation-dependent, but stacd and exinf must be passed as startup parameters.

The task runs at the protection level specified in the TA_RNGn attribute. When a system call or extended SVC is called, the protection level goes to 0, then goes back to its original level upon return from the system call or extended SVC.

Each task has two stack areas, a system stack and user stack. The user stack is used at the protection level specified in TA_RNGn while the system stack is used at protection level 0. When the calling of a system call or extended SVC causes the protection level to change, the stack is also switched.

Note that a task running at TA_RNGO does not switch protection levels, so there is no stack switching either. When TA_RNGO is specified, the combined total of the user stack size and system stack size is the size of one stack, employed as both a user stack and system stack.

When TA_SSTKSZ is specified, sstksz is valid. If TA_SSTKSZ is not specified, sstksz is ignored and the default size applies.

When TA_USERSTACK is specified, stkptr is valid. In this case a user stack is not provided by the OS, but must be allocated by the caller. stksz must be set to 0. If TA_USERSTACK is not specified, stkptr is ignored. Note that if TA_RNG0 is set, TA_USERSTACK cannot be specified. E_PAR occurs if TA_RNG0 and TA_USERSTACK are specified at the same time.

TA_USERBUF can be specified for implementation where there is no distinction of user stack and system stack and there is only one unified stack for a task. When this attribute is specified, bufptr becomes effective, and the memory area starting at bufptr containing stksz octets is used as the unified user and system stack area. In this case, the kernel does not provide the stack area.

When TA_DSNAME is specified, dsname is valid and specifies the DS object name. DS object name is used to identify objects by debugger, and it is handled only by T-Kernel/DS API, td_ref_dsname and td_set_dsname. For more details, see the description of td_ref_dsname and td_set_dsname. If TA_DSNAME is not specified, dsname is ignored. Then td_ref_dsname and td_set_dsname return E_OBJ error.

Additional Notes

A task runs either at the protection level set in TA_RNGn or at protection level 0. For example, a task for which TA_RNG3 is specified in no case runs at protection level 1 or 2.

In a system with separate interrupt stack, interrupt handlers also use the system stack. An interrupt handler runs at protection level 0.

The system stack default size is decided taking into account the amount taken up by system call execution and, in a system with separate interrupt stack, the amount used by interrupt handlers.

The definition of TA_COPn is dependent on the CPU and other hardware and is not portable.

TA_FPU is provided as a portable notation method only for the definition in TA_COPn of a floating point coprocessor. If, for example, the floating point coprocessor is TA_COP0, then TA_FPU = TA_COP0. If there is no particular need to specify the use of a coprocessor for floating point operations, TA_FPU = 0 is set.

Even in a system with a single CPU's operating mode, for the sake of portability all attributes including TA_RNGn must be accepted. It is possible, for example, to handle all TA_RNGn as equivalent to TA_RNG0, but error must not be returned.

Porting Guideline

The T-Kernel 2.0 specification does not define TA_USERBUF and its associated notion of bufptr. So if this feature is used, a modification is necessary to port the software to T-Kernel 2.0. However, if stksz is properly set already, simply removing TA_USERBUF and bufptr will complete the modification for porting.

The largest task priority is defined by TK_MAX_TSKPRI. Although TK_MAX_TSKPRI is variable, but is guaranteed to be equal to or larger than 16, and so by restricting the used task priorities only to the range from 1 to 16, there shall be no need for modifying the task priorities during porting.

4.1.2 tk_del_tsk - Delete Task

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_del_tsk(ID tskid);

Parameter

ID tskid Task ID Task ID

Return Parameter

ER ercd Error Code Error Code

Error Code

E_OK Normal completion

E_ID Invalid ID number (tskid is invalid or cannot be used)

E_NOEXS Object does not exist (the task specified in tskid does not exist)

E_OBJ Invalid object state (the task is not in DORMANT state)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

Deletes the task specified in tskid.

This system call changes the state of the task specified in tskid from DORMANT state to NONEXISTENT state (no longer exists in the system), releasing the TCB and stack area that were assigned to the task. The task ID number is also released. When this system call is issued for a task not in DORMANT state, error code E_OBJ is returned.

This system call cannot specify the invoking task. If the invoking task is specified, error code E_OBJ is returned since the invoking task is not in DORMANT state. The invoking task is deleted not by this system call but by the tk_exd_tsk system call.

4.1.3 tk sta tsk - Start Task

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_sta_tsk(ID tskid, INT stacd);

Parameter

ID tskid	Task ID	Task ID
----------	---------	---------

INT stacd Task Start Code Task start code

Return Parameter

ER	ercd	Error Code	Error code
	0100	Liidi Code	Liidi coac

Error Code

E_OK Normal completion

E_ID Invalid ID number (tskid is invalid or cannot be used)

E NOEXS Object does not exist (the task specified in tskid does not exist)

E_OBJ Invalid object state (the task is not in DORMANT state)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

None.

Description

Starts the task specified in tskid. This system call changes the state of the specified task from DORMANT state to READY state.

Parameters to be passed to the task when it starts can be set in stacd. These parameters can be referred to from the started task, enabling use of this feature for simple message passing.

The task priority when it starts is the task startup priority (itskpri) specified when the started task was created.

Start requests by this system call are not queued. If this system call is issued while the target task is in a state other than DORMANT state, the system call is ignored and error code E_OBJ is returned to the calling task.

Porting Guideline

Note that stacd is INT type, and its value range is implementation-dependent, so care must be taken.

4.1.4 tk ext tsk - Exit Task

C Language Interface

#include <tk/tkernel.h>

void tk_ext_tsk(void);

Parameter

None.

Return Parameter

Does not return to the context issuing the system call.

Error Codes

The following kind of error may be detected, but no return is made to the context issuing the system call even if the error is detected. For this reason the error code cannot be passed directly as a system call return parameter. The behavior in case an error occurs is implementation-dependent.

E CTX

Context error (issued from task-independent portion, or in dispatch disabled state)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

Exits the invoking task normally and changes its state to DORMANT state.

Additional Notes

When a task terminates by tk_ext_tsk, the resources acquired by the task up to that time (memory blocks, semaphores, etc.) are not automatically freed. The user is responsible for releasing such resources before the task exits.

tk_ext_tsk is a system call that does not return to the context from which it was called. Even if an error code is returned when an error of some kind is detected, normally no error checking is performed in the context from which the system call was invoked, leaving the possibility that the program will behave in an unexpected manner. For this reason these system calls do not return even if error is detected.

As a rule, the task priority and other information included in the TCB is reset when the task returns to DOR-MANT state. If, for example, the task priority is changed by tk_chg_pri and later terminated by tk_ext_tsk, the

task priority reverts to the startup priority (itskpri) specified by tk_cre_tsk at startup. It does not keep the task priority in effect at the time tk_ext_tsk was executed.

System calls that do not return to the calling context are those named tk_ret_??? or tk_ext_??? (tk_exd_???).

4.1.5 tk exd tsk - Exit and Delete Task

C Language Interface

#include <tk/tkernel.h>

void tk_exd_tsk(void);

Parameter

None.

Return Parameter

Does not return to the context issuing the system call.

Error Codes

The following kind of error may be detected, but no return is made to the context issuing the system call even if the error is detected. For this reason the error code cannot be passed directly as a system call return parameter. The behavior in case an error occurs is implementation-dependent.

E CTX

Context error (issued from task-independent portion, or in dispatch disabled state)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

Terminates the invoking task normally and also deletes it. This system call changes the state of the invoking task to NON-EXISTENT state (no longer exists in the system).

Additional Notes

When a task terminates by tk_exd_tsk, the resources acquired by the task up to that time (memory blocks, semaphores, etc.) are not automatically freed. The user is responsible for releasing such resources before the task exits.

tk_exd_tsk is a system call that does not return to the context from which it was called. Even if an error code is returned when an error of some kind is detected, normally no error checking is performed in the context from which the system call was invoked, leaving the possibility that the program will behave in an unexpected manner. For this reason these system calls do not return even if error is detected.

4.1.6 tk ter tsk - Terminate Task

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_ter_tsk(ID tskid);

Parameter

ID tskid Task ID Task ID

Return Parameter

ER ercd Error Code Error code

Error Code

E OK Normal completion

E_ID Invalid ID number (tskid is invalid or cannot be used)

E_NOEXS Object does not exist (the task specified in tskid does not exist)

E OBJ Invalid object state (the target task is in DORMANT state or is the invoking task)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

Forcibly terminates the task specified in tskid. This system call changes the state of the target task specified in tskid to DORMANT state.

Even if the target task was in the waiting state (including SUSPENDED state), the waiting state is released and the task is terminated. If the target task was in some kind of queue (semaphore wait, etc.), executing tk_ter_tsk results in its removal from the queue.

This system call cannot specify the invoking task. If the invoking task is specified, error code E_OBJ is returned.

The relationships between target task states and the results of executing tk_ter_tsk are summarized in Table 4.1, "Target Task State and Execution Result (tk_ter_tsk)".

Additional Notes

When a task is terminated by tk_ter_tsk, the resources acquired by the task up to that time (memory blocks, semaphores, etc.) are not automatically freed. The user is responsible for releasing such resources before the task is terminated.

Target Task State	tk_ter_tskercd Return Value	(processing)
Run state (RUNNING or READY) (not	E_OK	Forced termination
for invoking task)		
Running state (RUNNING) (invoking	E_OBJ	No operation
task)		
Waiting state (WAITING)	E_OK	Forced termination
Suspended state (SUSPENDED)	E_OK	Forced termination
Waiting-suspended state	E_OK	Forced termination
(WAITING-SUSPENDED)		
Dormant state (DORMANT)	E_OBJ	No operation
Non-existent state (NON-EXISTENT)	E_NOEXS	No operation

Table 4.1: Target Task State and Execution Result (tk ter tsk)

As a rule, the task priority and other information included in the TCB is reset when the task returns to DOR-MANT state. If, for example, the task priority is changed by tk_chg_pri and later terminated by tk_ter_tsk, the task priority reverts to the startup priority (itskpri) that is specified by tk_cre_tsk at startup. The task priority at task termination by tk_ter_tsk is not used after the task is restarted by tk_sta_tsk.

Forcible termination of another task is intended for use only by a debugger or a few other tasks closely related to the OS. As a rule, this system call is not to be used by ordinary applications or middleware, for the following reason.

Forced termination occurs regardless of the running state of the target task. If, for example, a task were forcibly terminated while the task was calling a middleware function, the task would terminate right while the middleware was executing. If such a situation were allowed, normal operation of the middleware could not be guaranteed.

This is an example of how task termination should not be allowed when the task status (what it is executing) is unknown. Ordinary applications therefore must not use the forcible termination function.

4.1.7 tk_chg_pri - Change Task Priority

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_chg_pri(ID tskid, PRI tskpri);

Parameter

ID	tskid	Task ID	Task ID
PRI	tskpri	Task Priority	Task priority

Return Parameter

ER	ercd	Error Code	Error code

Error Code

E_OK	Normal completion
E_ID	Invalid ID number (tskid is invalid or cannot be
D MODMO	

E_NOEXS Object does not exist (the task specified in tskid does not exist)

E_PAR Parameter error (tskpri is invalid or cannot be used)

E_ILUSE Illegal use (upper priority limit exceeded)

Valid Context

Task portion Quasi-task portion		Task-independent portion
YES	YES	NO

used)

Related Service Profile Items

TK_MAX_TSKPRI Maximum task priority that can be specified (must be 16 or higher)

Description

Changes the base priority of the task specified in tskid to the value specified in tskpri. The current priority of the task also changes as a result.

Task priority values are specified from 1 to TK_MAX_TSKPRI, with the smaller numbers indicating higher priority.

When TSK_SELF (= 0) is specified in tskid, the invoking task is the target task. Note, however, that when $tskid=TSK_SELF$ is specified in a system call issued from a task-independent portion, error code E_ID is returned. When $TPRI_INI$ (= 0) is specified as tskpri, the target task base priority is changed to the initial priority when the task was started (itskpri).

A priority changed by this system call remains valid until the task is terminated. When the task reverts to DORMANT state, the task priority before its exit is discarded, with the task again assigned to the initial priority when the task was started (itskpri). However, the priority changed in DORMANT state is valid. The next time the task is started, it has the new initial priority.

If as a result of this system call execution the target task current priority matches the base priority (this condition is always met when the mutex function is not used), processing is as follows.

If the target task is in a run state, the task precedence changes according to its priority. The target task has the lowest precedence among tasks of the same priority after the change.

If the target task is in some kind of priority-based queue, the order in that queue changes in accordance with the new task priority. Among tasks of the same priority after the change, the target task is queued at the end.

If the target task has locked a TA_CEILING attribute mutex or is waiting for a lock, and the base priority specified in tskpri is higher than any of the ceiling priorities, error code E_ILUSE is returned.

Additional Notes

In some cases when this system call results in a change in the queued order of the target task in a task priority-based queue, it may be necessary to release the wait state of another task waiting in that queue (in a message buffer send queue, or in a queue waiting to acquire a variable-size memory pool).

In some cases when this system call results in a base priority change while the target task is waiting for a mutex lock with TA_INHERIT dynamic priority inheritance processing may be necessary.

When a mutex function is not used and the system call is issued specifying the invoking task as the target task, setting the new priority to the base priority of the invoking task, the order of execution of the invoking task becomes the lowest among tasks of the same priority. This system call can therefore be used to relinquish execution privilege.

Porting Guideline

The largest task priority is defined by TK_MAX_TSKPRI. Although TK_MAX_TSKPRI is variable, but is guaranteed to be equal to or larger than 16, and so by restricting the used task priorities only to the range from 1 to 16, there shall be no need for modifying the task priorities during porting.

4.1.8 tk_get_reg - Get Task Registers

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_get_reg(ID tskid, T_REGS *pk_regs, T_EIT *pk_eit, T_CREGS *pk_cregs);

Parameter

ID	tskid	Task ID	Task ID
T_REGS*	pk_regs	Packet of Registers	Pointer to the area to return the
			general register values
T_EIT^*	pk_eit	Packet of EIT Registers	Pointer to the area to return the
			values of registers saved when an
			exception occurs
T_CREGS*	pk_cregs	Packet of Control Registers	Pointer to the area to return the
			control register values

Return Parameter

The contents of T_REGS, T_EIT, and T_CREGS are defined for each CPU and implementation.

Error Code

E_OK	Normal completion
E_ID	Invalid ID number (tskid is invalid or cannot be used)
E_NOEXS	Object does not exist (the task specified in tskid does not exist)
E_OBJ	Invalid object state (called for the invoking task)
E_CTX	Context error (called from task-independent portion)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_REGOPS Support for task-register manipulation functions

Description

Gets the current register contents of the task specified in tskid.

If NULL is set in pk_regs , pk_eit , or pk_cregs , the corresponding registers are not referenced.

The referenced register values are not necessarily the values at the time the task portion was executing. If this system call is issued for the invoking task, error code E_OBJ is returned.

Additional Notes

In principle, all registers in the task context can be referenced. This includes not only physical CPU registers but also those treated by the kernel as virtual registers.

4.1.9 tk_set_reg - Set Task Registers

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_set_reg(ID tskid, CONST T_REGS *pk_regs, CONST T_EIT *pk_eit, CONST T_CREGS *pk_cregs);

Parameter

ID	tskid	Task ID	Task ID
CONST T_REGS*	pk_regs	Packet of Registers	General registers
CONST T_EIT*	pk_eit	Packet of EIT Registers	Registers saved when EIT occurs
CONST T_CREGS*	pk_cregs	Packet of Control Registers	Control registers

The contents of T_REGS, T_EIT, and T_CREGS are defined for each CPU and implementation.

Return Parameter

ER	ercd	Error Code	Error code

Error Code

E_OK	Normal completion
E_ID	Invalid ID number (tskid is invalid or cannot be used)
E_NOEXS	Object does not exist (the task specified in tskid does not exist)
E_OBJ	Invalid object state (called for the invoking task)
E_CTX	Context error (called from task-independent portion)
E_PAR	Invalid register value (implementation-dependent)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_REGOPS Support for task-register manipulation functions

Description

Sets the current register contents of the task specified in tskid.

If NULL is set in pk_regs, pk_eit, or pk_cregs, the corresponding registers are not set.

The set register values are not necessarily the values while the task portion is executing. The kernel is not responsible for handling the side-effects of register value changes.

It is possible, however, that some registers or register bits cannot be changed if the kernel does not allow such changes.(Implementation-dependent)

If this system call is issued for the invoking task, error code E_OBJ is returned.

4.1.10 tk_get_cpr - Get Task Coprocessor Registers

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_get_cpr(ID tskid, INT copno, T_COPREGS *pk_copregs);

Parameter

tskid	Task ID	Task ID
copno	Coprocessor Number	Coprocessor number (0 to 3)
pk_copregs	Packet of Coprocessor	Pointer to the area to return
	Registers	coprocessor register values
	copno	copno Coprocessor Number pk_copregs Packet of Coprocessor

Return Parameter

ER	ercd	Error Code	Error code
pk_copregs Detail:			
T_COP0REG	cop0	Coprocessor Number 0 Register	Coprocessor number 0 register
T_COP1REG	cop1	Coprocessor Number 1 Register	Coprocessor number 1 register
T_COP2REG	cop2	Coprocessor Number 2 Register	Coprocessor number 2 register
T_COP3REG	cop3	Coprocessor Number 3 Register	Coprocessor number 3 register

The contents of $T_{COPn}REG$ are defined for each CPU and implementation.

Error Code

E_OK	Normal completion
E_ID	Invalid ID number (tskid is invalid or cannot be used)
E_NOEXS	Object does not exist (the task specified in tskid does not exist)
E_OBJ	Invalid object state (called for the invoking task)
E_CTX	Context error (called from task-independent portion)
E_PAR	Parameter error (copno is invalid or the specified coprocessor does not exist)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

TK_SUPPORT_COPn

Support of co-processor number n

If TK_SUPPORT_COPn is ineffective for all n, this API is unsupported.

Description

Gets the current contents of the register specified in copno of the task specified in tskid.

The referenced register values are not necessarily the values at the time the task portion was executing. If this system call is issued for the invoking task, error code E_OBJ is returned.

Additional Notes

In principle, all registers in the task context can be referenced. This includes not only physical CPU registers but also those treated by the kernel as virtual registers.

4.1.11 tk_set_cpr - Set Task Coprocessor Registers

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_set_cpr(ID tskid, INT copno, CONST T_COPREGS *pk_copregs);

tskid

Parameter

ID

copno pk_copregs	Coprocessor Number Packet of Coprocessor Registers	Coprocessor number (0 to 3) Coprocessor register
cop0	Coprocessor Number 0 Register	Coprocessor number 0 register
cop1	Coprocessor Number 1 Register	Coprocessor number 1 register
cop2	Coprocessor Number 2 Register	Coprocessor number 2 register
cop3	Coprocessor Number 3 Register	Coprocessor number 3 register
	cop0 cop1 cop2	cop0 Coprocessor Number 0 Register cop1 Coprocessor Number 1 Register cop2 Coprocessor Number 2 Register cop3 Coprocessor Number 3

Task ID

Task ID

Return Parameter

ER ercd Error C	Code Error code
-----------------	-----------------

Error Code

E_OK	Normal completion
E_ID	Invalid ID number (tskid is invalid or cannot be used)
E_NOEXS	Object does not exist (the task specified in tskid does not exist)
E_OBJ	Invalid object state (called for the invoking task)
E_CTX	Context error (called from task-independent portion)
E_PAR	Parameter error (copno is invalid or the specified coprocessor does not exist), or the
	set register value is invalid (implementation-dependent)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

TK_SUPPORT_COPn Support of co-processor number n

If TK_SUPPORT_COPn is ineffective for all n, this API is unsupported.

Description

Sets the contents of the register specified in copno of the task specified in tskid.

The set register values are not necessarily the values while the task portion is executing. The kernel is not responsible for handling the side-effects of register value changes.

It is possible, however, that some registers or register bits cannot be changed if the kernel does not allow such changes.(Implementation-dependent)

If this system call is issued for the invoking task, error code E_OBJ is returned.

4.1.12 tk_ref_tsk - Reference Task Status

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_ref_tsk(ID tskid, T_RTSK *pk_rtsk);

Parameter

Task ID	ID	tskid	Task ID	Task ID
---------	----	-------	---------	---------

T_RTSK* pk_rtsk Packet to Return Task Status Pointer to the area to return the task

status

Return Parameter

ER	ercd	Error Code	Error code

pk_rtsk Detail:

void*	exinf	Extended Information	Extended information
PRI	tskpri	Task Priority	Current priority
PRI	tskbpri	Task Base Priority	Base priority
UINT	tskstat	Task State	Task State
UW	tskwait	Task Wait Factor	Wait factor
ID	wid	Waiting Object ID	Waiting object ID
INT	wupcnt	Wakeup Count	Wakeup request queuing count
INT	suscnt	Suspend Count	Suspend request nesting count
UW	waitmask	Wait Mask	Disabled wait factors
UINT	texmask	Task Exception Mask	Allowed task exceptions
UINT	tskevent	Task Event	Raised task event
(Other implementation-dependent parameters may be added beyond this point.)			

Error Code

E OK Normal completion

E_ID Invalid ID number (tskid is invalid or cannot be used)

E_NOEXS Object does not exist (the task specified in tskid does not exist)

E_PAR Parameter error (invalid pk_rtsk)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

TK_SUPPORT_DISWAI Information about disabled wait factors (waitmask) is obtainable TK_SUPPORT_TASKEXCEPTION Task exception information (texmask) can be acquired. Generated task event(tskevent) can be acquired

Description

Gets the state of the task specified in tskid.

tskstat takes the following values.

TTS_RUN	0x0001	RUNNING state
TTS_RDY	0x0002	READY state
TTS_WAI	0x0004	WAITING state
TTS_SUS	0x0008	SUSPENDED state
TTS_WAS	0x000c	WAITING-SUSPENDED state
TTS_DMT	0x0010	DORMANT state
TTS_NODISWAI	0x0080	Disabling of wait by tk_dis_wai is prohibited

Task states such as TTS_RUN and TTS_WAI are expressed by corresponding bits, which is useful when making a complex state decision (e.g., deciding that the state is one of either RUNNING or READY state). Note that of the above states, TTS_WAS is a combination of TTS_SUS and TTS_WAI but TTS_SUS is never combined with other states (TTS_RUN, TTS_RDY, TTS_DMT).

In the case of TTS_WAI (including TTS_WAS), disabling of wait by the tk_dis_wai is prohibited, TTS_NODISWAI is set. TTS NODISWAI is never combined with states other than TTS WAI.

When tk_ref_tsk is executed for an interrupted task from an interrupt handler, RUNNING (TTS_RUN) is returned as tskstat.

When tskstat is TTS_WAI (including TTS_WAS), the values of tskwait and wid are as shown in Table 4.2, "Values of tskwait and wid".

tskwait	Value	Description	wid
TTW_SLP	0x00000001	Wait caused by tk_slp_tsk	0
TTW_DLY	0x00000002	Wait caused by tk_dly_tsk	0
TTW_SEM	0x00000004	Wait caused by tk_wai_sem	semid
TTW_FLG	0x00000008	Wait caused by tk_wai_flg	flgid
TTW_MBX	0x00000040	Wait caused by tk_rcv_mbx	mbxid
TTW_MTX	0x00000080	Wait caused by tk_loc_mtx	mtxid
TTW_SMBF	0x00000100	Wait caused by tk_snd_mbf	mbfid
TTW_RMBF	0x00000200	Wait caused by tk_rcv_mbf	mbfid
TTW_CAL	0x00000400	(reserved)	(reserved)
TTW_ACP	0x00000800	(reserved)	(reserved)
TTW_RDV	0x00001000	(reserved)	(reserved)
(TTW_CAL TTW_RDV)	0x00001400	(reserved)	(reserved)
TTW_MPF	0x00002000	Wait caused by tk_get_mpf	mpfid
TTW_MPL	0x00004000	Wait caused by tk_get_mpl	mplid
TTW_EV1	0x00010000	Wait for task event #1	0
TTW_EV2	0x00020000	Wait for task event #2	0
TTW_EV3	0x00040000	Wait for task event #3	0
TTW_EV4	0x00080000	Wait for task event #4	0
TTW_EV5	0x00100000	Wait for task event #5	0
TTW_EV6	0x00200000	Wait for task event #6	0
TTW_EV7	0x00400000	Wait for task event #7	0
TTW_EV8	0x00800000	Wait for task event #8	0

Table 4.2: Values of tskwait and wid

When tskstat is not TTS_WAI (including TTS_WAS), both tskwait and wid are 0. waitmask is the same bit array as tskwait.

texmask is a logical OR bit array representing permitted task exception codes in the form 1<< task exception code for each code.

tskevent shows the list of generated and pending task events by representing each event as 1 << (task event number - 1) and calculating the logical OR of the bit values.

For a task in DORMANT state, wupcnt = 0, suscnt = 0, and tskevent = 0.

The invoking task can be specified by setting $tskid = TSK_SELF = 0$. Note, however, that when $tskid = TSK_SELF = 0$ is specified in a system call issued from a task-independent portion, error code E_ID is returned.

When the task specified with tk_ref_tsk does not exist, error code E_NOEXS is returned.

Additional Notes

Even when $tskid = TSK_SELF$ is specified with this system call, the ID of the invoking task is not known. Use tk_get_tid to find out the ID of the invoking task.

4.2 Task Synchronization Functions

Task synchronization functions achieve synchronization among tasks by direct manipulation of task states. They include functions for task sleep and wakeup, for canceling wakeup requests, for forcibly releasing task WAITING state, for changing a task state to SUSPENDED state, for delaying execution of the invoking task, and for disabling task WAITING state.

Wakeup requests for a task are queued. That is, when it is attempted to wake up a task that is not sleeping, the wakeup request is remembered, and the next time the task is to go to a sleep state (waiting for wakeup), it does not enter that state. The queuing of task wakeup requests is realized by having the task keep a task wakeup request queuing count. When the task is started, this count is cleared to 0.

Suspend requests for a task are nested. That is, if it is attempted to suspend a task already in SUSPENDED state (including WAITING-SUSPENDED state), the request is remembered, and later when it is attempted to resume the task in SUSPENDED state (including WAITING-SUSPENDED state), it is not resumed. The nesting of suspend requests is realized by having the task keep a suspend request nesting count. When the task is started, this count is cleared to 0.

4.2.1 tk_slp_tsk - Sleep Task

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_slp_tsk(TMO tmout);

Parameter

TMO tmout Timeout (ms)

Return Parameter

ER ercd Error Code Error code

Error Code

E OK Normal completion

E_PAR Parameter error (tmout \leq (-2))

E_RLWAI Waiting state released (tk_rel_wai received in waiting state)

E DISWAI Wait released due to disabling of wait

E TMOUT Polling failed or timeout

E_CTX Context error (issued from task-independent portion, or in dispatch disabled state)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

Changes the state of the invoking task from RUNNING state to sleep state (WAITING state for tk_wup_tsk). Note if the wakeup requests for the invoking task are queued, i.e., the wakeup request queuing count of the invoking task is 1 or more, the count is decremented by 1, and the execution is continued without moving the invoking task to the waiting state.

If tk_wup_tsk is issued for the invoking task before the time specified in tmout has elapsed, this system call completes normally. If timeout occurs before tk_wup_tsk is issued, the timeout error code E_TMOUT is returned. Specifying $tmout = TMO_FEVR$ (= -1) means eternal wait. In this case, the task stays in waiting state until tk_wup_tsk is issued.

Additional Notes

Since tk_slp_tsk is a system call that puts the invoking task into the waiting state, tk_slp_tsk can never be nested. It is possible, however, for another task to issue tk_sus_tsk for a task that was put in the waiting state

by tk_slp_tsk. In this case the task goes to WAITING-SUSPENDED state.

For simply delaying a task, tk_dly_tsk should be used rather than tk_slp_tsk.

The task sleep function is intended for use by applications and as a rule should not be used by middleware. The reason is as follows.

Attempting to achieve synchronization by putting a task to sleep in two or more places would cause confusion, leading to mis-operation. For example, if sleep were used by both an application and middleware for synchronization, a wakeup request might arise in the application while middleware has a task sleeping. In such a situation, normal operation would not be possible in either the application or middleware.

In this manner, proper task synchronization is not possible if it is not clear where the wait for wakeup originated. Task sleep is often used as a simple means of task synchronization. Applications should be able to use it freely, which means as a rule it should not be used by middleware.

4.2.2 tk_slp_tsk_u - Sleep Task (Microseconds)

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_slp_tsk_u(TMO_U tmout_u);

Parameter

TMO_U tmout_u Timeout (in microseconds)

Return Parameter

ER ercd Error Code Error code

Error Code

E_OK Normal completion

E_PAR Parameter error $(tmout_u \le (-2))$

E_RLWAI Waiting state released (tk_rel_wai received in waiting state)

E DISWAI Wait released due to disabling of wait

E TMOUT Polling failed or timeout

E_CTX Context error (issued from task-independent portion, or in dispatch disabled state)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_USEC Support of microsecond

Description

This system call takes 64-bit tmout_u in microseconds instead of the parameter tmout of tk_slp_tsk.

The specification of this system call is same as that of tk_slp_tsk, except that the parameter is replaced with tmout_u. For more details, see the description of tk_slp_tsk.

4.2.3 tk_wup_tsk - Wakeup Task

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_wup_tsk(ID tskid);

Parameter

ID tskid Task ID Task ID

Return Parameter

ER ercd Error Code Error code

Error Code

E OK Normal completion

E_ID Invalid ID number (tskid is invalid or cannot be used)

E_NOEXS Object does not exist (the task specified in tskid does not exist)

E_OBJ Invalid object state (called for the invoking task or for a task in DORMANT state)
E_QOVR Queuing or nesting overflow (too many queued wakeup requests in wupcnt)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

TK_WAKEUP_MAXCNT Maximum queuing count of the task wakeup requests (>= 1)

Description

If the task specified in tskid has been put in WAITING state by tk_slp_tsk, this system call releases the WAIT-ING state.

This system call cannot be called for the invoking task. If the invoking task is specified, error code E_OBJ is returned.

If the target task has not called tk_slp_tsk and is not in WAITING state, the wakeup request by tk_wup_tsk is queued. That is, the calling of tk_wup_tsk for the target task is recorded, then when tk_slp_tsk is called after that, the task does not go to WAITING state. This is what is meant by queuing of wakeup requests.

The queuing of wakeup requests works as follows. Each task keeps a wakeup request queuing count (wupcnt) in its TCB. Its initial value (when tk_sta_tsk is executed) is 0. When tk_wup_tsk is issued for a task not sleeping (not in WAITING state), the count is incremented by 1; but each time tk_slp_tsk is executed, the count is decremented by 1. When tk_slp_tsk is executed for a task whose wakeup queuing count is 0, the queuing count is not made negative but rather the task goes to WAITING state.

It is always possible to queue tk_wup_tsk at least one time (wupcnt = 1), but the maximum queuing count (wupcnt) is implementation-dependent and its maximum value is defined by serviced profile item, TK_WAKEUP_MAXCNT. In other words, issuing tk_wup_tsk once for a task not in WAITING state does not return an error, but whether an error is returned for the second or subsequent call of tk_wup_tsk is implementation-dependent.

When calling tk_wup_tsk causes wupcnt to exceed the allowed maximum value, error code E_QOVR is returned.

4.2.4 tk can wup - Cancel Wakeup Task

C Language Interface

#include <tk/tkernel.h>

INT wupcnt = tk_can_wup(ID tskid);

Parameter

ID tskid Task ID Task ID

Return Parameter

INT wupcnt Wakeup Count Number of queued wakeup requests

or Error Code Error code

Error Code

E_ID Invalid ID number (tskid is invalid or cannot be used)

E_NOEXS Object does not exist (the task specified in tskid does not exist)

E OBJ Invalid object state (called for a task in DORMANT state)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

Passes in the return value the wakeup request queuing count (wupcnt) for the task specified in tskid, at the same time canceling all wakeup requests. That is, this system call clears the wakeup request queuing count (wupcnt) to 0 for the specified task.

The invoking task can be specified by setting tskid = TSK_SELF = 0. Note, however, that when tskid = TSK_SELF = 0 is specified in a system call issued from a task-independent portion, error code E_ID is returned.

Additional Notes

This system call can be used to determine whether the processing was completed within the allotted time when processing is performed that involves cyclic wakeup of a task. Before processing of a prior wakeup request is completed and <code>tk_slp_tsk</code> is called by the waken up task, the task monitoring this task calls <code>tk_can_wup</code>. If <code>wupcnt</code> in the return parameter is 1 or above, this means the previous wakeup request was not processed within the allotted time. Measure can then be taken accordingly to compensate for the delay.

4.2.5 tk rel wai - Release Wait

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_rel_wai(ID tskid);

Parameter

ID tskid Task ID Task ID

Return Parameter

ER ercd Error Code Error code

Error Code

E OK Normal completion

E_ID Invalid ID number (tskid is invalid or cannot be used)

E_NOEXS Object does not exist (the task specified in tskid does not exist)

E OBJ Invalid object state (called for a task not in WAITING state (including when called

for the invoking task, or for a task in DORMANT state))

Valid Context

Task portion	Quasi-task portion	Task-independent portion	
YES	YES	YES	

Related Service Profile Items

None.

Description

If the task specified in tskid is in some kind of waiting state (not including SUSPENDED state), forcibly releases that state.

To the task whose WAITING state was released by tk_rel_wai, the error code E_RLWAI is returned. At this time, the target task is guaranteed to be released from its wait state without the allocation of the waited resource (without the wait release conditions being met).

Wait release requests are not queued by tk_rel_wai. That is, if the task specified in tskid is already in WAITING state, the WAITING state is cleared; but if it is not in WAITING state when this system call is issued, error code E_OBJ is returned to the caller. Likewise, error code E_OBJ is returned when this system call is issued specifying the invoking task.

The tk_rel_wai system call does not release a SUSPENDED state. If tk_rel_wai is issued for a task in WAITING-SUSPENDED state, the task goes to SUSPENDED state. If it is necessary to release SUSPENDED state, the separate system call tk_rsm_tsk or tk_frsm_tsk is used.

The states of the target task when tk_rel_wai is called and the results of its execution in each state are shown in Table 4.3, "Target Task State and Execution Result (tk_rel_wai)".

Target Task State	tk_rel_waiercd Return Value	(processing)
Run state (RUNNING or READY) (not for	E_OBJ	No operation
invoking task)		
Running state (RUNNING) (invoking task)	E_OBJ	No operation
Waiting state (WAITING)	E_OK	Wait released/release wait
Suspended state (SUSPENDED)	E_OBJ	No operation
Waiting-suspended state	E_OK	Goes to SUSPENDED
(WAITING-SUSPENDED)		state
Dormant state (DORMANT)	E_OBJ	No operation
Non-existent state (NON-EXISTENT)	E_NOEXS	No operation

Table 4.3: Target Task State and Execution Result (tk_rel_wai)

Additional Notes

A function similar to timeout can be realized by using an alarm handler or the like to issue this system call after a given task has been in WAITING state for a set time.

The main differences between tk_rel_wai and tk_wup_tsk are the following.

- Whereas tk_wup_tsk releases only WAITING state effected by tk_slp_tsk, tk_rel_wai releases also WAITING state caused by other factors (tk_wai_flg, tk_wai_sem, tk_rcv_mbx, tk_get_mpl, tk_dly_tsk, etc.).
- Seen from the task in WAITING state, release of the WAITING state by tk_wup_tsk returns a Normal completion (E_OK), whereas release by tk_rel_wai returns an error code (E_RLWAI).
- Wakeup requests by tk_wup_tsk are queued if tk_slp_tsk has not yet been executed. If tk_rel_wai is issued for a task not in WAITING state, error code E_OBJ is returned.

4.2.6 tk_sus_tsk - Suspend Task

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_sus_tsk(ID tskid);

Parameter

ID tskid Task ID Task ID

Return Parameter

ER ercd Error Code Error code

Error Code

E_OK Normal completion

E_ID Invalid ID number (tskid is invalid or cannot be used)

E_NOEXS Object does not exist (the task specified in tskid does not exist)

E OBJ Invalid object state (called for the invoking task or for a task in DORMANT state)

E_CTX A task in RUNNING state was specified in dispatch disabled state E_QOVR Queuing or nesting overflow (too many nested requests in suscnt)

Valid Context

Task portion	Quasi-task portion	Task-independent portion	
YES	YES	YES	

Related Service Profile Items

TK_SUSPEND_MAXCNT Maximum nest count of the forced wait of tasks (>= 1)

Description

Puts the task specified in tskid in SUSPENDED state and interrupts execution by the task.

SUSPENDED state is released by issuing system call tk_rsm_tsk or tk_frsm_tsk.

If tk_sus_tsk is called for a task already in WAITING state, the state goes to a combination of WAITING state and SUSPENDED state (WAITING-SUSPENDED state) after the execution of tk_sus_tsk. Thereafter when the task wait release conditions are met, the task goes to SUSPENDED state. If tk_rsm_tsk is issued for the task in WAITING-SUSPENDED state, the task state reverts to WAITING state. (See Figure 2.1, "Task State Transition Diagram").

Since SUSPENDED state means task interruption by a system call issued by another task, this system call cannot be issued for the invoking task. If the invoking task is specified, error code E_OBJ is returned.

When this system call is issued from a task-independent portion, if a task in RUNNING state is specified while dispatching is disabled, error code E_CTX is returned.

If tk_sus_tsk is issued more than once for the same task, the task is put in nested SUSPENDED state. This is called nesting of suspend requests. In this case, the task reverts to its original state only when tk_rsm_tsk has been issued for the same number of times as tk_sus_tsk (suscnt). Accordingly, nesting of the pair of system calls tk_sus_tsk and tk_rsm_tsk is possible.

The nesting feature of suspend requests (issuing tk_sus_tsk two or more times for the same task) and upper limits on nesting count are implementation-dependent.

If tk_sus_tsk is issued multiple times in a system that does not allow suspend request nesting, or if the nesting count exceeds the allowed limit, error code E QOVR is returned.

Additional Notes

When a task is in WAITING state for resource acquisition (semaphore wait, etc.) and is also in SUSPENDED state, the resource allocation (semaphore allocation, etc.) takes place under the same conditions as when the task is not in SUSPENDED state. Resource allocation is not delayed by the SUSPENDED state, and there is no change whatsoever in the priority of resource allocation or release from WAITING state. In this way SUSPENDED state is in an orthogonal relation with other processing and task states.

In order to delay resource allocation to a task in SUSPENDED state (temporarily lowering its priority), the user can employ tk_sus_tsk and tk_rsm_tsk in combination with tk_chg_pri.

Task suspension is intended only for very limited uses closely related to the OS, such as breakpoint processing in a debugger. As a rule it should not be used in ordinary applications or in middleware. The reason is as follows.

Task suspension takes place regardless of the target task running state. If, for example, a task is put in SUS-PENDED state while it is calling a middleware function, the task will be stopped in the course of middleware internal processing. In some cases middleware performs resource management or other mutual exclusion control. If a task stops inside middleware while it has resources allocated, other tasks may not be able to use that middleware. This situation can cause chain reactions, with other tasks stopping and leading to systemwide deadlock.

For this reason a task must not be stopped without knowing its status (what it is doing at the time), and ordinary tasks should not use the task suspension function.

4.2.7 tk rsm tsk - Resumes a task in a SUSPENDED state

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_rsm_tsk(ID tskid);

Parameter

ID tskid Task ID Task ID

Return Parameter

ER ercd Error Code Error code

Error Code

E OK Normal completion

E_ID Invalid ID number (tskid is invalid or cannot be used)

E_NOEXS Object does not exist (the task specified in tskid does not exist)

E_OBJ Invalid object state (the specified task is not in SUSPENDED state (including when

this system call specifies the invoking task or a task in DORMANT state))

Valid Context

Task portion	Quasi-task portion	Task-independent portion	
YES	YES	NO	

Related Service Profile Items

None.

Description

Releases the SUSPENDED state of the task specified in tskid. If the target task was earlier put in SUSPENDED state by the tk_sus_tsk system call, this system call releases that SUSPENDED state and resumes the task execution.

When the target task is in a combined WAITING state and SUSPENDED state (WAITING-SUSPENDED state), executing tk_rsm_tsk releases only the SUSPENDED state, putting the task in WAITING state (see Figure 2.1, "Task State Transition Diagram").

This system call cannot be called for the invoking task. If the invoking task is specified, error code E_OBJ is returned.

Executing tk_rsm_tsk once clears only one nested suspend request (suscnt). If tk_sus_tsk was issued more than once for the target task (suscnt ≥ 2), the target task remains in SUSPENDED state even after tk_rsm_tsk is executed.

Additional Notes

After a task in RUNNING state or READY state is put in SUSPENDED state by tk_sus_tsk and then resumed by tk_rsm_tsk or tk_frsm_tsk, the task has the lowest precedence among tasks of the same priority.

When, for example, the following system calls are executed for tasks A and B of the same priority, the result is as indicated below.

```
tk_sta_tsk (tskid=task_A, stacd_A);
tk_sta_tsk (tskid=task_B, stacd_B);
  /* By the rule of FCFS, precedence becomes task_A → task_B. */

tk_sus_tsk (tskid=task_A);
tk_rsm_tsk (tskid=task_A);
  /* In this case precedence becomes task_B → task_A. */
```

4.2.8 tk_frsm_tsk - Force Resume Task

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_frsm_tsk(ID tskid);

Parameter

ID tskid Task ID Task ID

Return Parameter

ER ercd Error Code Error code

Error Code

E OK Normal completion

E_ID Invalid ID number (tskid is invalid or cannot be used)

E_NOEXS Object does not exist (the task specified in tskid does not exist)

E OBJ Invalid object state (the specified task is not in SUSPENDED state (including when

this system call specifies the invoking task or a task in DORMANT state))

Valid Context

Task portion	Quasi-task portion	Task-independent portion	
YES	YES	NO	

Related Service Profile Items

None.

Description

Releases the SUSPENDED state of the task specified in tskid. If the target task was earlier put in SUSPENDED state by the tk_sus_tsk system call, this system call releases that SUSPENDED state and resumes the task execution.

When the target task is in a combined WAITING state and SUSPENDED state (WAITING-SUSPENDED state), executing tk_frsm_tsk releases only the SUSPENDED state, putting the task in WAITING state (see Figure 2.1, "Task State Transition Diagram").

This system call cannot be called for the invoking task. If the invoking task is specified, error code E_OBJ is returned.

Executing tk_frsm_tsk once clears all the nested suspend requests (suscnt) (suscnt = 0). Therefore, all suspend requests are released (suscnt is cleared to 0) even if tk_sus_tsk was issued more than once ($suscnt \ge 2$). The SUSPENDED state is always cleared, and unless the task was in the WAITING-SUSPENDED state, its execution resumes.

Additional Notes

After a task in RUNNING state or READY state is put in SUSPENDED state by tk_sus_tsk and then resumed by tk_rsm_tsk or tk_frsm_tsk, the task has the lowest precedence among tasks of the same priority.

When, for example, the following system calls are executed for tasks A and B of the same priority, the result is as indicated below.

```
tk_sta_tsk (tskid=task_A, stacd_A);
tk_sta_tsk (tskid=task_B, stacd_B);
  /* By the rule of FCFS, precedence becomes task_A → task_B. */

tk_sus_tsk (tskid=task_A);
tk_frsm_tsk (tskid=task_A);
  /* In this case precedence becomes task_B → task_A. */
```

4.2.9 tk_dly_tsk - Delay Task

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_dly_tsk(RELTIM dlytim);

Parameter

RELTIM dlytim Delay Time Delay time (ms)

Return Parameter

ER ercd Error Code Error code

Error Code

E OK Normal completion

E_PAR Parameter error (dlytim is invalid)

E_CTX Context error (issued from task-independent portion, or in dispatch disabled state)

E RLWAI Waiting state released (tk rel wai received in waiting state)

E_DISWAI Wait released due to disabling of wait

Valid Context

Task portion	Quasi-task portion	Task-independent portion	
YES	YES	NO	

Related Service Profile Items

None.

Description

Temporarily stops execution of the invoking task and waits for time dlytim to elapse.

The state while the task waits for the delay time to elapse is a WAITING state and is subject to release by tk_rel_wai.

If the task issuing this system call goes to SUSPENDED state or WAITING-SUSPENDED state while it is waiting for the delay time to elapse, the elapsed time continues to be counted in the SUSPENDED state.

The time unit for dlytim (time unit) is the same as that for system time (= 1 ms).

Additional Notes

This system call differs from tk_slp_tsk in that normal completion, not an error code, is returned when the specified delay time elapses. Moreover, the wait is not released even if tk_wup_tsk is executed during the delay time. The only way to terminate tk_dly_tsk before the delay time elapses is by calling tk_ter_tsk or tk_rel_wai.

4.2.10 tk_dly_tsk_u - Delay Task (Microseconds)

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_dly_tsk_u(RELTIM_U dlytim_u);

Parameter

RELTIM_U dlytim_u Delay Time Delay time (microseconds)

Return Parameter

ER ercd Error Code Error code

Error Code

E_OK Normal completion

E_PAR Parameter error (dlytim_u is invalid)

E_CTX Context error (issued from task-independent portion, or in dispatch disabled state)

E_RLWAI Waiting state released (tk_rel_wai received in waiting state)

E_DISWAI Wait released due to disabling of wait

Valid Context

Task portion	Quasi-task portion	Task-independent portion	
YES	YES	NO	

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_USEC Support of microsecond

Description

This system call takes 64-bit dlytim_u in microseconds instead of the parameter dlytim of tk_dly_tsk.

The specification of this system call is same as that of tk_dly_tsk, except that the parameter is replaced with dlytim_u. For more details, see the description of tk_dly_tsk.

4.2.11 tk_sig_tev - Signal Task Event

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_sig_tev(ID tskid, INT tskevt);

Parameter

ID	tskid	Task ID	Task ID
1D	LONIU	Task ID	I ask ID

INT tskevt Task Event Task event number (1 to 8)

Return Parameter

ER ercd Error Code Error code

Error Code

E_OK Normal completion

E_ID Invalid ID number (tskid is invalid or cannot be used)

E NOEXS Object does not exist (the task specified in tskid does not exist)

E OBJ Invalid object state (called for a task in DORMANT state)

E_PAR Parameter error (tskevt is invalid)

Valid Context

Task portion	Quasi-task portion	Task-independent portion	
YES	YES	YES	

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_TASKEVENT

Support of task event

Description

Sends the task event specified in tskevt to the task specified in tskid.

There are eight task event types stored for each task, specified by numbers 1 to 8.

The task event send count is not saved, only whether the event occurs or not.

The invoking task can be specified by setting tskid = TSK_SELF = 0. Note, however, that when tskid = TSK_SELF = 0 is specified in a system call issued from a task-independent portion, error code E_ID is returned.

Additional Notes

The task event function is used for task synchronization much like tk_slp_tsk and tk_wup_tsk, but differs from the use of these system calls in the following ways.

- The wakeup request (task event) count is not kept.
- Wakeup requests can be classified by the eight event types.

Using the same event type for synchronization in two or more places in the same task would cause confusion. Event type allocation should be clearly defined.

The task event function is intended for use in middleware, and as a rule should not be used in ordinary applications. Use of tk_slp_tsk and tk_wup_tsk is recommended for applications.

4.2.12 tk wai tev - Wait Task Event

C Language Interface

#include <tk/tkernel.h>

INT tevptn = tk_wai_tev(UINT waiptn, TMO tmout);

Parameter

UINT waiptn Wait Event Pattern Task event pattern TMO tmout Timeout Timeout (ms)

Return Parameter

INT tevptn Task Event Pattern Task event status when wait released

or Error Code Error code

Error Code

E_PAR Parameter error (waiptn or tmout is invalid)

E RLWAI Waiting state released (tk rel wai received in waiting state)

E DISWAI Wait released due to disabling of wait

E_TMOUT Polling failed or timeout

E_CTX Context error (issued from task-independent portion, or in dispatch disabled state)

Valid Context

Task portion	Quasi-task portion	Task-independent portion	
YES	YES	NO	

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_TASKEVENT Support of task event

Description

Waits for the occurrence of one of the task events specified in waiptn. When the wait is released by a task event, the task events specified in waiptn are cleared (raised task event &= ~waiptn). The task event status when the wait was released (the state before clearing) is passed in the return code (tevptn).

The parameters waiptn and tevptn consist of logical OR values of the bits for each task event in the form $1 \ll (\text{task event number -}1)$.

A maximum wait time (timeout) can be set in tmout. The time unit for tmout is the same as that for system time (= 1 ms). If the tmout time elapses before the wait release condition is met (tk_sig_tev is not executed), the system call terminates, returning timeout error code E_TMOUT .

When TMO_POL=0 is set in tmout, this means 0 was specified as the timeout value, and E_TMOUT is returned

without entering WAITING star infinity was specified as the tir	te even if no task ever neout value, and the t	nt occurs. When TMO_I ask continues to wait	FEVR=(-1) is set in tmout for a task event withou	t, this means

4.2.13 tk wai tev u - Wait Task Event (Microseconds)

C Language Interface

#include <tk/tkernel.h>

INT tevptn = tk_wai_tev_u(UINT waiptn, TMO_U tmout_u);

Parameter

UINT waiptn Wait Event Pattern Task event pattern

TMO_U tmout_u Timeout (in microseconds)

Return Parameter

INT tevptn Task Event Pattern Task event status when wait released

r Error Code Error code

Error Code

E_PAR Parameter error (waiptn or tmout_u is invalid)

E RLWAI Waiting state released (tk rel wai received in waiting state)

E DISWAI Wait released due to disabling of wait

E_TMOUT Polling failed or timeout

E_CTX Context error (issued from task-independent portion, or in dispatch disabled state)

Valid Context

Task portion	Quasi-task portion	Task-independent portion	
YES	YES	NO	

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_TASKEVENT Support of task event Support of microsecond

Description

This system call takes 64-bit tmout_u in microseconds instead of the parameter tmout of tk_wai_tev.

The specification of this system call is same as that of tk_wai_tev , except that the parameter is replaced with $tmout_u$. For more details, see the description of tk_wai_tev .

4.2.14 tk dis wai - Disable Task Wait

C Language Interface

#include <tk/tkernel.h>

INT tskwait = tk_dis_wai(ID tskid, UW waitmask);

Parameter

Task ID	ID	tskid	Task ID	Task ID
---------	----	-------	---------	---------

UW waitmask Wait Mask Task wait disabled setting

Return Parameter

INT tskwait Task Wait Task state after task wait is disabled

or Error Code Error code

Error Code

E_ID Invalid ID number (tskid is invalid or cannot be used)

E NOEXS Object does not exist (the task specified in tskid does not exist)

E_PAR Parameter error (waitmask is invalid)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_DISWAI Support of disabling of wait of a task

Description

Disables waits for the wait factors set in waitmask by the task specified in tskid. If the task is already waiting for a factor specified in waitmask, that wait is released.

waitmask is specified as the logical OR of any combination of the following wait factors.

```
#define TTW SLP
                        0x00000001
                                         /* Wait caused by sleep */
#define TTW DLY
                         0x00000002
                                         /* Wait for task delay */
#define TTW SEM
                        0x00000004
                                         /* Wait for semaphore */
                        80000000x0
#define TTW_FLG
                                         /* Wait for event flag */
                                         /* Wait for mailbox */
                        0x00000040
#define TTW_MBX
                        0x00000080
#define TTW_MTX
                                         /* Wait for mutex */
#define TTW_SMBF
                        0x00000100
                                         /* Wait for message buffer send */
#define TTW_RMBF
                        0x00000200
                                         /* Wait for message buffer receive */
#define TTW_CAL
                        0x00000400
                                         /* (reserved) */
```

```
#define TTW ACP
                         0x00000800
                                           /* (reserved) */
#define TTW RDV
                         0x00001000
                                           /* (reserved) */
#define TTW MPF
                         0x00002000
                                           /* Wait for fixed-size memory pool */
#define TTW MPL
                         0 x 0 0 0 0 4 0 0 0
                                           /* Wait for variable-size memory pool */
                         0x00010000
#define TTW EV1
                                           /* Wait for task event #1 */
#define TTW EV2
                         0 x 0 0 0 2 0 0 0 0
                                           /* Wait for task event #2 */
#define TTW EV3
                         0x00040000
                                          /* Wait for task event #3 */
#define TTW EV4
                         0x00080000
                                          /* Wait for task event #4 */
#define TTW EV5
                         0x00100000
                                          /* Wait for task event #5 */
#define TTW EV6
                         0x00200000
                                          /* Wait for task event #6 */
#define TTW EV7
                         0x00400000
                                          /* Wait for task event #7 */
#define TTW EV8
                         0x00800000
                                          /* Wait for task event #8 */
#define TTX SVC
                         0x80000000
                                          /* Extended SVC disabled */
```

TTX_SVC is a special value disabling not the task wait but the calling of an extended SVC. If TTX_SVC has been set when a task attempts to call an extended SVC, E_DISWAI is returned without calling the extended SVC. This value does not have the effect of terminating an already called extended SVC.

The return value (tskwait) includes the waiting state of a task as a pattern of concatenated bits (bit width of INT data type - 1) after the waiting states are disabled by tk_dis_wai. If bit width of INT data type is 32, then this value is the same as the value tskwait returned by tk_ref_tsk. Information concerning TTX_SVC is not returned in tskwait. A tskwait value of 0 means the task has not entered WAITING state (or the wait was released). If tskwait is not 0, this means the task is in WAITING state for a cause other than those disabled in waitmask. If the bit width of INT data type is less than 32, the information represented by upper bits that will not fit into INT data are not returned. Hence, in this case, even if tskwait is zero, there is a possibility that the task is waiting for a cause that is not specified in waitmask.

When a task wait is cleared by tk_dis_wai or the task is prevented from entering WAITING state after this system call has taken effect, E_DISWAI is returned.

When a system call for which there is the possibility of entering the WAITING state is invoked during wait-disabled state, E_DISWAI is returned even if the processing could be performed without waiting. For example, when message buffer space is available and it is possible to send message without entering the WAITING state, and if a message is sent to message buffer (tk_snd_mbf is called), the message is not sent and E_DISWAI is returned.

Disabling of wait that is set during an extended SVC will be cleared automatically upon return from the extended SVC to its caller. It is automatically cleared also when an extended SVC is called, reverting to the original setting upon return from the extended SVC.

Disabling of wait that is set is cleared also when the task reverts to DORMANT state. The setting made while a task is in DORMANT state, however, is valid and the disabling of wait is applied the next time the task is started.

In the case of semaphores and most other objects, TA_NODISWAI can be specified when the object is created. An object created with TA_NODISWAI specified cannot have wait disabled, and rejects any attempt to disable wait by tk_dis_wai.

The invoking task can be specified by setting tskid = TSK_SELF = 0. Note, however, that when tskid = TSK_SELF = 0 is specified in a system call issued from a task-independent portion, error code E_ID is returned.

Additional Notes

The function to disable wait is provided for aborting the execution of an extended SVC handler in midway, but it is not restricted to that purpose only.

Porting Guideline

Note that the data type of return value of tk_dis_wai, (tskwait), is of type INT, and its value range is implementation-dependent, so care must be taken. For example, you can not receive information concerning waiting task

events under an implementation on 16-bits CPU. If it is desired to obtain task wait status without regard to the CPU bit width under μ T-Kernel, it is necessary to reference <code>tskwait</code> by invoking <code>tk_ref_tsk</code>. On the other hand, under T-Kernel, INT is defined to be 32 bits or wider, the return value of <code>tk_dis_wai</code> can show all the details of the wait status of a task.

4.2.15 tk_ena_wai - Enable Task Wait

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_ena_wai(ID tskid);

Parameter

ID tskid Task ID Task ID

Return Parameter

ER ercd Error Code Error code

Error Code

E_OK Normal completion

E_ID Invalid ID number (tskid is invalid or cannot be used)

E_NOEXS Object does not exist (the task specified in tskid does not exist)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_DISWAI Support of disabling of wait of a task

Description

Releases all disabling of waits set by tk_dis_wai for the task specified in tskid.

The invoking task can be specified by setting tskid = TSK_SELF = 0. Note, however, that when tskid = TSK_SELF = 0 is specified in a system call issued from a task-independent portion, error code E_ID is returned.

4.3 Task Exception Handling Functions

Task exception handling functions handle exception events that are raised for a task in the context of that task.

The task exception handler is started when all the following processing has taken place:

- 1. Register task exception handler by tk_def_tex
- 2. Enable task exception by tk_ena_tex
- 3. Raise task exception by tk_ras_tex

A task exception handler is executed as a part of the task where the task exception occurred, in the context of that task and at the protection level specified when the task was created. The task states in a task exception handler, except for those states concerning task exceptions, are the same as the states when running an ordinary task portion; and the same set of system calls are available.

A task exception handler can be started only when the target task is running in a task portion. If the task is running in any other portion when a task exception is raised, the task exception handler is started only after the control returns to the task portion. If a quasi-task portion (extended SVC) is being executed when a task exception is raised, the processing of the extended SVC handler is aborted and the control returns to the task portion. If it is needed to abort the processing of the extended SVC handler (called "break processing" for the extended SVC handler), it is performed before the control returns to the task portion where the extended SVC handler is called. "Break processing" is executed by the break function of Subsystem Management Functions.

Requested task exceptions are cleared when the task exception handler is called (when the task exception handler starts running).

Task exception is identified by a task exception code: from 1 to (bit width of UINT data type - 1). For example, if UINT is 16 bits, a number from 0 to 15 can be used as task exception code. 0 corresponds to the highest priority, and (bit width of UINT data type - 1) corresponds to the lowest priority. Task exception code 0 is handled differently from the others, as explained below.

Processing of task exception code from 1 to (bit width of UINT data type) - 1:

- These task exception handlers cannot be executed by nesting them. A task exception (other than task exception code 0) raised while a task exception handler is running will be made pending.
- On return from a task exception handler, the task resumes from the point where processing was interrupted by the exception.
- It is also possible to use <code>longjmp()</code> or the like to jump to any point in the task without returning from the task exception handler.

Task exception code 0:

- This exception can be executed by nesting even while a task exception handler is executing for an exception of task exception code from 1 to (bit width of UINT data type 1). Nesting does not take place when the task exception handler of task exception code 0 is executed.
- A task exception handler runs after setting the user stack pointer to the initial setting when the task was started. In a system without a separate user stack and system stack, however, the stack pointer is not reset to its initial setting.
- A task exception code 0 handler does not return to task processing. The task must be terminated by calling tk_ext_tsk or tk_exd_tsk.

Porting Guideline

Be warned that the available number of task exception codes is now dependent on the bit width of UINT data type. For example, task exception code can take the value from 0 to 15 in 16-bit environment.

4.3.1 tk_def_tex - Define Task Exception Handler

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_def_tex(ID tskid, CONST T_DTEX *pk_dtex);

Parameter

ID tskid Task ID Task ID

CONST T_DTEX* pk_dtex Packet to Define Task Task exception handler definition

Exception information

pk_dtex Detail:

ATR texatr Task Exception Attribute Task exception handler attributes
FP texhdr Task Exception Handler Task exception handler address

(Other implementation-dependent parameters may be added beyond this point.)

Return Parameter

ER ercd Error Code Error code

Error Code

E_OK Normal completion

E_NOMEM Insufficient memory (memory for control block cannot be allocated)

E_ID Invalid ID number (tskid is invalid or cannot be used)

E_NOEXS Object does not exist (the task specified in tskid does not exist)

E_OBJ Invalid object state (the task specified in tskid runs at protection level 0 (TA_RNG0))

E_RSATR Reserved attribute (texatr is invalid or cannot be used)
E_PAR Parameter error (pk_dtex is invalid or cannot be used)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_TASKEXCEPTION Support of task exception handling functions

Description

Defines a task exception handler for the task specified in tskid. Only one task exception handler can be defined per task; if one is already defined, the last-defined handler is valid. Setting pk_dtex = NULL cancels a

definition.

Defining or canceling a task exception handler clears pending task exception requests and disables all task exceptions.

texatr indicates system attributes in its lower bits and implementation-dependent attributes in its higher bits. The texatr system attributes are not assigned in the present version of T-Kernel specification, and system attributes are not used.

A task exception handler takes the following form.

A task exception handler behaves like a TA_ASM attribute object and cannot be called via a high-level language support routine. The entry part of the task exception handler must be written in assembly language. The kernel vendor must provide the assembly language source code of the entry routine for calling the above C language task exception handler. That is, source code equivalent to a high-level language support routine must be provided.

A task set to protection level TA RNG0 when it is created cannot use task exceptions.

Additional Notes

At the time a task is created, no task exception handler is defined and task exceptions are disabled.

When a task reverts to DORMANT state, the task exception handler definition is canceled and task exceptions are disabled. Pending task exceptions are cleared. It is possible, however, to define a task exception handler for a task in DORMANT state.

Task exceptions are software interrupts raised by tk_ras_tex, with no direct relation to CPU exceptions.

4.3.2 tk_ena_tex - Enable Task Exception

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_ena_tex(ID tskid, UINT texptn);

Parameter

ID tskid Task ID Task ID

UINT texptn Task Exception Pattern Task exception pattern

Return Parameter

ER ercd Error Code Error code

Error Code

E_OK Normal completion

E_ID Invalid ID number (tskid is invalid or cannot be used)

E_NOEXS Object does not exist (the task specified in tskid does not exist or no task exception

handler is defined)

E_PAR Parameter error (texptn is invalid or cannot be used)

Valid Context

Ī	Task portion	Quasi-task portion	Task-independent portion
Ī	YES	YES	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_TASKEXCEPTION

Support of task exception handling functions

Description

Enables task exceptions for the task specified in tskid.

The parameter texptn is a logical OR bit array representing task exception codes in the form 1 << task exception code.

tk_ena_tex enables the task exceptions specified in texptn. If the current exception enabled status is texmask, it changes as follows.

enable: texmask |= texptn

If all the bits of texptn are cleared to 0, no operation is made to texmask. No error will result in this case.

Task exceptions cannot be enabled for a task with no task exception handler defined.

This system call can be called to tasks in DORMANT state.

Porting Guideline

Be warned that the available number of task exception codes is now dependent	on the bit width of UINT data
type. For example, task exception code can take the value from 0 to 15 in 16-bit	t environment.

4.3.3 tk_dis_tex - Disable Task Exception

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_dis_tex(ID tskid, UINT texptn);

Parameter

ID tskid Task ID Task ID

UINT texptn Task Exception Pattern Task exception pattern

Return Parameter

ER ercd Error Code Error code

Error Code

E_OK Normal completion

E_ID Invalid ID number (tskid is invalid or cannot be used)

E_NOEXS Object does not exist (the task specified in tskid does not exist or no task exception

handler is defined)

E_PAR Parameter error (texptn is invalid or cannot be used)

Valid Context

Ī	Task portion	Quasi-task portion	Task-independent portion
Ī	YES	YES	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_TASKEXCEPTION

Support of task exception handling functions

Description

Disables task exceptions for the task specified in tskid.

The parameter texptn is a logical OR bit array representing task exception codes in the form 1 << task exception code.

tk_dis_tex disables the task exceptions specified in texptn. If the current exception enabled status is texmask, it changes as follows.

disable: texmask &= ~texptn

If all the bits of texptn are cleared to 0, no operation is made to texmask. No error will result in either case.

A disabled task exception is ignored, and is not made pending. If exceptions are disabled for a task while there are pending task exceptions, the pending task exception requests are discarded (their pending status is cleared).

This system call can be called to tasks in DORMANT state.

Porting Guideline

Be warned that the available number of task exception codes is now dependent on the bit width of UINT data type. For example, task exception code can take the value from 0 to 15 in 16-bit environment.

4.3.4 tk ras tex - Raise Task Exception

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_ras_tex(ID tskid, INT texcd);

Parameter

ID	tskid	Task ID	Task ID

INT texcd Task Exception Code Task exception code

Return Parameter

ER	ercd	Error Code	Error code

Error Code

E_OK	Normal completion
E_{ID}	Invalid ID number (tskid is invalid or cannot be used)
E_NOEXS	Object does not exist (the task specified in tskid does not exist or no task exception
	handler is defined)
E_OBJ	Invalid object state (the task specified in tskid is in DORMANT state)
E PAR	Parameter error (texcd is invalid or cannot be used)

 E_CTX Context error (issued from task-independent portion, or in dispatch disabled state)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK SUPPORT TASKEXCEPTION Support of task exception handling functions

Description

Raises the task exception specified in texcd for the task specified in tskid. If the task specified in tskid disables the task exception specified in texcd, the raised task exception is ignored, and is not made pending. In this case, E OK is returned to this system call.

If a task exception handler is already running in the task specified in tskid, the newly raised task exception is made pending. If an exception is pending, the break processing (break function) for the extended SVC handler is not performed even if the target task is executing an extended SVC.

In the case of texcd = 0, however, exceptions are not made pending even if the target task is executing an exception handler. If the target task is running a task exception handler for an exception of task exception codes from 1 to (bit width of UINT data type - 1), the task exception is accepted; and if an extended SVC is

executing, the break processing (break function) for the extended SVC handler is performed. If the target task is running a task exception handler for an exception of task exception code 0, task exceptions are ignored.

The invoking task can be specified by setting tskid = TSK SELF = 0.

If this system call is issued from a task-independent portion, error code E CTX is returned.

Additional Notes

If the target task is executing an extended SVC, the break processing (break function) corresponding to the extended SVC runs as a quasi-task portion of the task that issued tk_ras_tex. That is, it is executed in the context of the quasi-task portion whose requesting task is the task that issued tk_ras_tex.

In such a case tk_ras_tex does not return control until the break processing ends. For this reason, the specification does not allow tk_ras_tex to be issued from a task-independent portion.

Task exceptions raised in the task that called tk_ras_tex while the break processing is running are held until the break processing (break function) ends.

Porting Guideline

Be warned that the available number of task exception codes is now dependent on the bit width of UINT data type. For example, task exception code can take the value from 0 to 15 in 16-bit environment.

4.3.5 tk_end_tex - end task exception handler

C Language Interface

#include <tk/tkernel.h>

INT texcd = tk_end_tex(BOOL enatex);

Parameter

BOOL enatex Enable Task Exception Task exception handler calling enabled

flag

Return Parameter

INT texcd Task Exception Code Raised exception code

Error Code Error code

Error Code

E_CTX Context error (called for other than a task exception handler or task exception code

0 (detection is implementation-dependent))

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_TASKEXCEPTION Support of task exception handling functions

Description

Ends a task exception handler and enables the new task exception handler. If there are pending task exceptions, the highest-priority task exception code among them is passed in the return code. If there are no pending task exceptions, 0 is returned.

If enatex = FALSE and there are pending task exception, calling the new task exception handler is not allowed. In this case, the exception handler specified in return code texcd is in running state upon return from tk_end_tex. If there are no pending task exceptions, calling the new task exception handler is allowed.

If enatex = TRUE, calling the new task exception handler is allowed regardless of whether there are pending task exceptions. Even if there are pending task exceptions, the task exception handler is in terminated status.

There is no way of ending a task exception handler other than by calling tk_end_tex. A task exception handler continues executing from the time it is started until tk_end_tex is called. Even if return is made from a task exception handler without calling tk_end_tex, the task exception handler will still be running at the point of

return. Similarly, even if <code>longjmp</code> is used to get out of a task exception handler without calling <code>tk_end_tex</code>, the task exception handler will still be running at the jump destination.

Calling tk_end_tex while task exceptions are pending results in a new task exception being accepted. At this time even when tk_end_tex is called from an extended SVC handler, a break processing (break function) cannot be called for that extended SVC handler. If extended SVC calls are nested, then when the extended SVC nesting goes down one level, the break processing (break function) corresponding to the extended SVC return destination can be called. Calling of a task exception handler takes place upon return to the task portion.

The tk_end_tex system call cannot be issued in the case of task exception code 0 since the task exception handler cannot be ended in this case. The task must be terminated by calling tk_ext_tsk or tk_exd_tsk. If tk_end_tex is called while processing the task exception code 0, the behavior is undefined (implementation-dependent).

This system call cannot be issued from other than a task exception handler. The behavior when it is called from other than a task exception handler is undefined (implementation-dependent).

Additional Notes

When tk_end_tex (TRUE) is called and there are pending task exceptions, another task exception handler call is made immediately following tk_end_tex. In this case, a task exception handler is called without restoring the stack, giving rise to possible stack overflow.

Ordinarily tk_end_tex (FALSE) can be used, and processing looped as illustrated below while there are task exceptions pending.

```
void texhdr( INT texcd )
{
   if ( texcd == 0 ) {
      /*
      Processing for task exception 0
      */
      tk_exd_tsk();
}

do {
   /*
      Processing of task exception: from 1 to (bit width of UINT data type) - 1
      */
} while ( (texcd = tk_end_tex(FALSE)) > 0 );
}
```

Strictly speaking, if a task exception were to occur during the interval after 0 is returned by tk_end_tex ending the loop and before exit from texhdr, the possibility exists of reentering texhdr without restoring the stack. Since task exceptions are software driven, however, ordinarily they do not occur independently of executing tasks; so in practice this is not a problem.

Porting Guideline

Be warned that the available number of task exception codes is now dependent on the bit width of UINT data type. For example, task exception code can take the value from 0 to 15 in 16-bit environment.

4.3.6 tk_ref_tex - Reference Task Exception Status

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_ref_tex(ID tskid, T_RTEX *pk_rtex);

Parameter

ID tskid Task ID Task ID

T_RTEX* pk_rtex Packet to Return Task Pointer to the area to return the task

Exception Status exception status

Return Parameter

ER ercd Error Code Error code

pk_rtex Detail:

UINT pendtex Pending Task Exception Pending task exceptions
UINT texmask Task Exception Mask Allowed task exceptions

(Other implementation-dependent parameters may be added beyond this point.)

Error Code

E_OK Normal completion

E_ID Invalid ID number (tskid is invalid or cannot be used)

E_NOEXS Object does not exist (the task specified in tskid does not exist)

E_PAR Parameter error (invalid pk_rtex)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_TASKEXCEPTION Support of task exception handling functions

Description

Gets the status of task exceptions for the task specified in tskid.

pendtex indicates the currently pending task exceptions. A raised task exception is indicated in pendtex from the time the task exception is raised until its task exception handler is called.

texmask indicates allowed task exceptions.

Both pendtex and texmask are bit arrays of the form 1 << task exception code.

The invoking task can be specified by setting tskid = TSK_SELF = 0. Note, however, that when tskid = TSK_SELF = 0 is specified in a system call issued from a task-independent portion, error code E_ID is returned.

4.4 Synchronization and Communication Functions

Synchronization and communication functions use objects independent of tasks used to synchronize tasks and achieve communication between tasks. The objects available for these purposes include semaphores, event flags, and mailboxes.

4.4.1 Semaphore

A semaphore is an object indicating the availability of a resource and its quantity as a numerical value. A semaphore is used to realize mutual exclusion control and synchronization when using a resource. Functions are provided for creating and deleting a semaphore, acquiring and returning resources corresponding to semaphores, and referencing semaphore status. A semaphore is an object identified by an ID number. The ID number for the semaphore is called a semaphore ID.

A semaphore contains a resource count (semaphore resource count) indicating whether the corresponding resource exists and in what quantity, and a queue of tasks waiting to acquire the resource. When a task (the task making event notification) returns m resources, it increments the semaphore resource count by m. When a task (the task waiting for an event) acquires n resources, it decreases the semaphore resource count by n. If the number of semaphore resources is insufficient (i.e., further reducing the semaphore resource count would cause it to be negative), a task attempting to acquire resources goes into WAITING state until the next time resources are returned. A task waiting for semaphore resources is put in the semaphore queue.

To prevent too many resources from being returned to a semaphore, a maximum value of semaphore resource count can be set for each semaphore. Error is reported if it is attempted to return resources to a semaphore that would cause this maximum count to be exceeded.

4.4.1.1 tk_cre_sem - Create Semaphore

C Language Interface

#include <tk/tkernel.h>

ID semid = tk_cre_sem(CONST T_CSEM *pk_csem);

Parameter

CONST T_CSEM*	pk_csem	Packet to Create	Semaphore creation information
		Semaphore	

pk_csem Detail:

_			
void*	exinf	Extended Information	Extended information
ATR	sematr	Semaphore Attribute	Semaphore attribute
INT	isemont	Initial Semaphore Count	Initial semaphore resource count
INT	maxsem	Maximum Semaphore	Maximum semaphore resource
		Count	count
UB	dsname[8]	DS Object name	DS object name
(Other implementation-dependent parameters may be added beyond this point.)			

Return Parameter

ID	semid		Semaphore ID	Semaphore ID
		or	Error Code	Error code

Error Code

E_NOMEM	Insufficient memory (memory for control block cannot be allocated)	
E_LIMIT	Semaphore count exceeds the system limit	

E_RSATR Reserved attribute (sematr is invalid or cannot be used)

E_PAR Parameter error (pk_csem is invalid, or isement or maxsem is negative or invalid)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

TK_SUPPORT_DISWAI	Support for specifying TA_NODISWAI (reject request to disable
	wait) to semaphore attribute
TK_SUPPORT_DSNAME	Support for specifying TA_DSNAME for semaphore attribute
TK_SEMAPHORE_MAXCNT	Upper limit of maximum number of semaphore resource count
	(>= 32767)

Description

Creates a semaphore, assigning a semaphore ID to it. This system call allocates a control block to the created semaphore and sets its initial value of semaphore resource count to isement, and its maximum (upper limit) to maxsem. Note that the lowest number that can be specified to maxsem shall be 32767. Whether a number larger than 32767 can be set is implementation-dependent.

exinf can be used freely by the user to set miscellaneous information about the created semaphore. The information set in this parameter can be referenced by tk_ref_sem. If a larger area is needed for indicating user information, or if the information may need to be changed after the message buffer is created, this can be done by allocating separate memory for this purpose and putting the memory packet address in exinf. The kernel pays no attention to the contents of exinf.

sematr indicates system attributes in its lower bits and implementation-dependent attributes in its higher bits. The system attribute part of sematr is as follows.

```
sematr:= (TA_TFIFO || TA_TPRI) | (TA_FIRST || TA_CNT) | [TA_DSNAME] | [TA_NODISWAI]
```

TA_TFIFO	Tasks are queued in FIFO order
TA TPRI	Tasks are queued in priority order
TA_FIRST	The first task in the queue has precedence
TA_CNT	Tasks with fewer requests have precedence
TA_DSNAME	Specifies DS object name
TA_NODISWAI	Disabling of wait by tk_dis_wai is prohibited

The queuing order of tasks waiting for a semaphore can be specified in TA_TFIFO or TA_TPRI. If the attribute is TA_TFIFO, tasks are ordered by FIFO, whereas TA_TPRI specifies queuing of tasks in order of their priority setting.

TA_FIRST and TA_CNT specify precedence of resource acquisition. TA_FIRST and TA_CNT do not change the order of the queue, which is determined by TA_TFIFO and TA_TPRI.

When TA_FIRST is specified, resources are allocated starting from the first task in the queue regardless of requested semaphore resource count. As long as the first task in the queue cannot obtain the requested number of resources, tasks behind it in the queue are prevented from obtaining resources.

TA_CNT means resources are assigned based on the order in which tasks are able to obtain the requested semaphore resource count. The requested semaphore resource counts are checked starting from the first task in the queue, and tasks to which their requested counts can be allocated receive resources. This is not the same as allocating in order of fewest requests.

When TA_DSNAME is specified, dsname is valid and specifies the DS object name. DS object name is used to identify objects by debugger, and it is handled only by T-Kernel/DS API, td_ref_dsname and td_set_dsname. For more details, see the description of td_ref_dsname and td_set_dsname. If TA_DSNAME is not specified, dsname is ignored. Then td_ref_dsname and td_set_dsname return E_OBJ error.

```
#define TA_TFIF0
                         0x00000000
                                          /* manage queue by FIFO */
#define TA_TPRI
                         0 x 0 0 0 0 0 0 0 1
                                          /st manage queue by priority st/
#define TA_FIRST
                         0x00000000
                                          /* first task in queue has precedence */
                         0x00000002
#define TA_CNT
                                          /* tasks with fewer requests have precedence */
#define TA_DSNAME
                         0x00000040
                                          /* DS object name */
#define TA NODISWAI
                         0x00000080
                                          /* reject request to disable wait */
```

4.4.1.2 tk_del_sem - Delete Semaphore

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_del_sem(ID semid);

Parameter

ID semid Semaphore ID Semaphore ID

Return Parameter

ER ercd Error Code Error code

Error Code

E_OK Normal completion

E_ID Invalid ID number (semid is invalid or cannot be used)

E_NOEXS Object does not exist (the semaphore specified in semid does not exist)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

Deletes the semaphore specified in semid.

The semaphore ID and control block area are released as a result of this system call.

This system call completes normally even if there is a task waiting for condition fulfillment on the semaphore, but error code E_DLT is returned to the task in WAITING state.

4.4.1.3 tk_sig_sem - Signal Semaphore

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_sig_sem(ID semid, INT cnt);

Parameter

ID	semid	Semaphore ID	Semaphore ID
INT	cnt	Count	Resource return count

Return Parameter

ER	arcd	Error Code	Error code
EK	ercd	EHOI Code	EHOI COGE

Error Code

E_OK	Normal completion
E_ID	Invalid ID number (semid is invalid or cannot be used)
E_NOEXS	Object does not exist (the semaphore specified in semid does not exist)
E_QOVR	Queuing or nesting overflow (semaphore resource count sement over limit)

E_PAR Parameter error (cnt ≤ 0)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

None.

Description

Returns to the semaphore specified in semid the number of resources indicated in cnt. If there is a task waiting for the semaphore, the requested semaphore resource count is checked and resources allocated if possible. A task allocated resources goes to READY state. In some conditions more than one task may be allocated resources and put in READY state.

If the semaphore resource count increases to the point where the maximum semaphore resource count (maxsem) would be exceeded by the return of more resources, error code E_QOVR is returned. In this case no resources are returned and the semaphore resource count (sement) does not change.

Additional Notes

Error is not returned even if sement goes over the initial semaphore resource count (isement). When semaphores are used not for mutual exclusion control but for synchronization (like tk_wup_tsk and tk_slp_tsk), the semaphore resource count (sement) will sometimes go over the initial setting (isement). The semaphore function can be used for mutual exclusion control by setting isement and the maximum semaphore resource count (maxsem) to the same value and checking for the error that is returned when the count increases.

4.4.1.4 tk_wai_sem - Wait on Semaphore

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_wai_sem(ID semid, INT cnt, TMO tmout);

Parameter

ID	semid	Semaphore ID	Semaphore ID
----	-------	--------------	--------------

INT cnt Count Resource request count

TMO tmout Timeout (ms)

Return Parameter

ER ercd Error Code Error code

Error Code

E OK Normal completic	าท

E ID Invalid ID number (semid is invalid or cannot be used)

E_NOEXS Object does not exist (the semaphore specified in semid does not exist)

E_PAR Parameter error (tmout \leq (-2), cnt \leq 0)

E_DLT The object being waited for was deleted (the specified semaphore was deleted while

waiting)

E RLWAI Waiting state released (tk rel wai received in waiting state)

E_DISWAI Wait released due to disabling of wait

E TMOUT Polling failed or timeout

E CTX Context error (issued from task-independent portion, or in dispatch disabled state)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

Obtains from the semaphore specified in semid the number of resources indicated in cnt. If the requested resources can be allocated, the task issuing this system call does not enter WAITING state but continues executing. In this case the semaphore resource count (semcnt) is decreased by the size of cnt. If the resources are not available, the task issuing this system call enters WAITING state, and is put in the queue of tasks waiting for the semaphore. The semaphore resource count (semcnt) for this semaphore does not change in this case.

A maximum wait time (timeout) can be set in tmout. The time unit for tmout is the same as that for system time (= 1 ms). If the tmout time elapses before the wait release condition is met (tk_sig_sem is not executed), the system call terminates, returning timeout error code E_TMOUT.

When $TMO_POL=0$ is set in tmout, this means 0 was specified as the timeout value, and E_TMOUT is returned without entering WAITING state even if no resources are acquired. When $TMO_FEVR=(-1)$ is set in tmout, this means infinity was specified as the timeout value, and the task continues to wait for resource acquisition without timing out.

4.4.1.5 tk_wai_sem_u - Wait on Semaphore (Microseconds)

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_wai_sem_u(ID semid, INT cnt, TMO_U tmout_u);

Parameter

ID	semid	Semaphore ID	Semaphore ID
INT	cnt	Count	Resource request count
TMO_U	tmout_u	Timeout	Timeout (in microseconds)

Return Parameter

ER ercd Error Code Error code

Error Code

E OZ

E_OK	Normal completion
E_ID	Invalid ID number (semid is invalid or cannot be used)
E_NOEXS	Object does not exist (the semaphore specified in semid does not exist)
E_PAR	Parameter error (tmout_u \leq (-2), cnt \leq 0)
E_DLT	The object being waited for was deleted (the specified semaphore was deleted while
	waiting)
E_RLWAI	Waiting state released (tk_rel_wai received in waiting state)
E_DISWAI	Wait released due to disabling of wait
E_TMOUT	Polling failed or timeout
E CTX	Context error (issued from task-independent portion, or in dispatch disabled state)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_USEC Support of microsecond

Description

This system call takes 64-bit $tmout_u$ in microseconds instead of the parameter tmout of tk_wai_sem .

The specification of this system call is same as that of tk_wai_sem, except that the parameter is replaced with tmout_u. For more details, see the description of tk_wai_sem.

4.4.1.6 tk_ref_sem - Reference Semaphore Status

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_ref_sem(ID semid, T_RSEM *pk_rsem);

Parameter

ID semid Semaphore ID Semaphore ID

T RSEM* pk rsem Packet to Return Semaphore Pointer to the area to return the

Status semaphore status

Return Parameter

ER ercd Error Code Error code

pk rsem Detail:

void* exinf Extended Information Extended information

ID wtsk Waiting Task ID Waiting task ID

INT sement Semaphore Count Current semaphore resource count

(Other implementation-dependent parameters may be added beyond this point.)

Error Code

E_OK Normal completion

E_ID Invalid ID number (semid is invalid or cannot be used)

E_NOEXS Object does not exist (the semaphore specified in semid does not exist)

E_PAR Parameter error (invalid pk_rsem)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

References the status of the semaphore specified in semid, passing in the return parameters the current semaphore resource count (sement), the waiting task ID (wtsk), and extended information (exinf).

wtsk indicates the ID of a task waiting for the semaphore. If there are two or more such tasks, the ID of the task at the head of the queue is returned. If there are no waiting tasks, wtsk = 0 is returned.

If the specified semaphore does not exist, error code E NOEXS is returned.

4.4.2 Event Flag

An event flag is an object used for synchronization, consisting of a pattern of bits used as flags to indicate the existence of the corresponding events. Functions are provided for creating and deleting an event flag, for event flag setting and clearing, event flag waiting, and event flag status reference. An event flag is an object identified by an ID number. The ID number for the event flag is called an event flag ID.

In addition to the bit pattern indicating the existence of corresponding events, an event flag has a queue of tasks waiting for the event flag. The event flag bit pattern is sometimes called simply event flag. The event notifier sets or clears the specified bits of the event flag. A task can be made to wait for all or some of the event flag bits to be set. A task waiting for an event flag is put in the queue of that event flag.

4.4.2.1 tk_cre_flg - Create Event Flag

C Language Interface

#include <tk/tkernel.h>

ID flgid = tk_cre_flg(CONST T_CFLG *pk_cflg);

Parameter

CONST T CFLG* pk cflg Packet to Create EventFlag Event flag creation information

pk cflg Detail:

void*	exinf	Extended Information	Extended information
ATR	flgatr	EventFlag Attribute	Event flag attribute
UINT	iflgptn	Initial EventFlag Pattern	Event flag initial value
UB	dsname[8]	DS Object name	DS object name
(Other implementation dependent parameters may be added beyond this point)			

(Other implementation-dependent parameters may be added beyond this point.)

Return Parameter

ID flgid EventFlag ID Event flag ID or Error Code Error code

Error Code

E_NOMEM Insufficient memory (memory for control block cannot be allocated)

E_LIMIT Number of event flags exceeds the system limit

E_RSATR Reserved attribute (flgatr is invalid or cannot be used)

E_PAR Parameter error (pk_cflg is invalid)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

TK SUPPORT DISWAI Support for specifying prohibition of "disabling wait"

(TA_NODISWAI) to event flag attribute

TK_SUPPORT_DSNAME Support for specifying TA_DSNAME for event flag attribute

Description

Creates an event flag, assigning to it an event flag ID. This system call allocates a control block to the created event flag and sets its initial value to iflgptn. An event flag handles one word's worth of bits as a group. All operations are performed in single word units.

exinf can be used freely by the user to set miscellaneous information about the created event flag. The information set in this parameter can be referenced by tk_ref_flg. If a larger area is needed for indicating user

information, or if the information may need to be changed after the message buffer is created, this can be done by allocating separate memory for this purpose and putting the memory packet address in exinf. The kernel pays no attention to the contents of exinf.

flgatr indicates system attributes in its lower bits and implementation-dependent attributes in its higher bits. The system attribute part of flgatr is as follows.

flgatr:= (TA TFIFO || TA TPRI) | (TA WMUL || TA WSGL) | [TA DSNAME] | [TA NODISWAI]

TA_TFIF0	Tasks are queued in FIFO order
TA_TPRI	Tasks are queued in priority order
TA_WSGL	Waiting by multiple tasks is not allowed (Wait Single Task)
TA_WMUL	Waiting by multiple tasks is allowed (Wait Multiple Tasks)
TA_DSNAME	Specifies DS object name
TA_NODISWAI	Disabling of wait by tk_dis_wai is prohibited

When TA_WSGL is specified, multiple tasks cannot be in the WAITING state at the same time. Specifying TA_WMUL allows waiting by multiple tasks at the same time.

The queuing order of tasks waiting for an event flag can be specified in TA_TFIFO or TA_TPRI. If the attribute is TA_TFIFO, tasks are ordered by FIFO, whereas TA_TPRI specifies queuing of tasks in order of their priority setting. When TA_WSGL is specified, however, since tasks cannot be queued, TA_TFIFO or TA_TPRI makes no difference.

When multiple tasks are waiting for an event flag, tasks are checked in order from the head of the queue, and the wait is released for tasks meeting the conditions. The first task to have its WAITING state released is therefore not necessarily the first in the queue. If multiple tasks meet the conditions, wait state is released for each of them.

When TA_DSNAME is specified, dsname is valid and specifies the DS object name. DS object name is used to identify objects by debugger, and it is handled only by T-Kernel/DS API, td_ref_dsname and td_set_dsname. For more details, see the description of td_ref_dsname and td_set_dsname. If TA_DSNAME is not specified, dsname is ignored. Then td_ref_dsname and td_set_dsname return E_OBJ error.

```
#define TA TFIF0
                         0x00000000
                                         /* manage queue by FIFO */
#define TA_TPRI
                         0x00000001
                                         /* manage queue by priority */
#define TA WSGL
                         0x00000000
                                         /* prohibit multiple task waiting */
#define TA WMUL
                                         /* permit multiple task waiting */
                         0x00000008
#define TA DSNAME
                         0x00000040
                                         /* DS object name */
                                         /st reject request to disable wait st/
#define TA NODISWAI
                         0x00000080
```

Porting Guideline

Note that member, iflgptn, of T_CFLG is UINT type, and its value range is implementation-dependent, so care must be taken.

4.4.2.2 tk_del_flg - Delete Event Flag

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_del_flg(ID flgid);

Parameter

ID flgid EventFlag ID Event flag ID

Return Parameter

ER ercd Error Code Error code

Error Code

E_OK Normal completion

E_ID Invalid ID number (flgid is invalid or cannot be used)

E_NOEXS Object does not exist (the event flag specified in flgid does not exist)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

Deletes the event flag specified in flgid.

Issuing this system call releases the corresponding event flag ID and control block memory space.

This system call is completed normally even if there are tasks waiting for the event flag, but error code E_DLT is returned to each task in WAITING state.

4.4.2.3 tk_set_flg - Set Event Flag

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_set_flg(ID flgid, UINT setptn);

Parameter

ID	flgid	EventFlag ID	Event flag ID
UINT	setptn	Set Bit Pattern	Bit pattern to be set

Return Parameter

ER	ercd	Error Code	Error code
EIX	Ellu	Error Code	Error code

Error Code

E_OK Normal completion

E_ID Invalid ID number (flgid is invalid or cannot be used)

E NOEXS Object does not exist (the event flag specified in flgid does not exist)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

None.

Description

 tk_set_flg sets the bits indicated in setptn in a one-word event flag specified in flgid. That is, a logical sum is taken of the values of the event flag specified in flgid and the values indicated in setptn. (the processing flgptn) = setptn is executed for the event flag value flgptn)

After event flag values are changed by tk_set_flg , if the condition for releasing the wait state of a task that called tk_wai_flg is met, the WAITING state of that task is cleared, putting it in RUNNING state or READY state (or SUSPENDED state if the waiting task was in WAITING-SUSPENDED state).

If all the bits of setptn are cleared to 0 in tk_set_flg, no operation is made to the target event flag. No error will result in either case.

Multiple tasks can wait for a single event flag if that event flag has the TA_WMUL attribute. The event flag in that case has a queue for the waiting tasks. A single tk_set_flg call for such an event flag may result in the release of multiple waiting tasks.

Porting Guideline

Note that setptn is UINT type, and its value range is implementation-dependent, so care must be taken.

4.4.2.4 tk_clr_flg - Clear Event Flag

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_clr_flg(ID flgid, UINT clrptn);

Parameter

TT	£	E+E1 ID	Event flag ID
11)	flaid	EventFlag ID	E.Vent flag III

UINT clrptn Clear Bit Pattern Bit pattern to be cleared

Return Parameter

ER ercd Error Code Error code

Error Code

E_OK Normal completion

E_ID Invalid ID number (flgid is invalid or cannot be used)

E NOEXS Object does not exist (the event flag specified in flgid does not exist)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

tk_clr_flg clears the bits of the one-word event flag specified in flgid, based on the corresponding zero bits of clrptn. That is, a logical product is taken of the values of the event flag specified in flgid and the values indicated in clrptn.(the processing flgptn &= clrptn is executed for the event flag value flgptn)

Issuing tk_clr_flg never results in wait conditions being released for a task waiting for the specified event flag; that is, dispatching never occurs with tk_clr_flg.

If all the bits of clrptn are set to 1 in tk_clr_flg, no operation is made to the target event flag. No error will be returned in either case.

Porting Guideline

Note that clrptn is UINT type, and its value range is implementation-dependent, so care must be taken.

4.4.2.5 tk_wai_flg - Wait Event Flag

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_wai_flg(ID flgid, UINT waiptn, UINT wfmode, UINT *p_flgptn, TMO tmout);

Parameter

ID	flgid	EventFlag ID	Event flag ID
UINT	waiptn	Wait Bit Pattern	Wait bit pattern
UINT	wfmode	Wait EventFlag Mode	Wait release condition
UINT*	p_flgptn	Pointer to EventFlag Bit Pattern	Pointer to the area to return the return
			parameter flgptn
TMO	tmout	Timeout	Timeout (ms)

Return Parameter

ER	ercd	Error Code	Error code
UINT	flgptn	EventFlag Bit Pattern	Event flag bit pattern

Normal completion

Error Code

E OK

L_O11	Normal completion
E_ID	Invalid ID number (flgid is invalid or cannot be used)
E_NOEXS	Object does not exist (the event flag specified in flgid does not exist)
E_PAR	Parameter error (waiptn = 0, wfmode is invalid, or tmout \leq (-2))
E_OBJ	Invalid object state (multiple tasks are waiting for an event flag with TA_WSGL attribute)
E_DLT	The object being waited for was deleted (the specified event flag was deleted while waiting)
E_RLWAI	Waiting state released (tk_rel_wai received in waiting state)
E_DISWAI	Wait released due to disabling of wait
E_TMOUT	Polling failed or timeout
E_CTX	Context error (issued from task-independent portion, or in dispatch disabled state)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

Waits for the event flag specified in flgid to be set, fulfilling the wait release condition specified in wfmode.

If the event flag specified in flgid already meets the wait release condition set in wfmode, the waiting task continues executing without going to WAITING state.

wfmode is specified as follows.

wfmode :	= (TWF_	_ANDW		TWF_ORW)		[TWF_	$_{\sf CLR}$		TWF	BIT	CLR]
----------	---------	-------	--	----------	--	-------	--------------	--	-----	-----	------

TWF_ANDW	0x00	AND wait condition
TWF_ORW	0x01	OR wait condition
TWF_CLR	0x10	Clear all
TWF_BITCLR	0x20	Clear condition bit only

If TWF_ORW is specified, the issuing task waits for any of the bits specified in waiptn to be set for the event flag specified in flgid (OR wait). If TWF_ANDW is specified, the issuing task will wait for all of the bits specified in waiptn to be set for the event flag specified in flgid (AND wait).

If TWF_CLR specification is not specified, the event flag values will remain unchanged even after the conditions have been satisfied and the task has been released from WAITING state. If TWF_CLR is specified, all bits of the event flag will be cleared to 0 once wait conditions of the waiting task have been met. If TWF_BITCLR is specified, then when the conditions are met and the task is released from WAITING state, only the bits matching the event flag wait release conditions are cleared to 0(event flag values &= ~wait release conditions).

The return parameter flgptn returns the value of the event flag after the WAITING state of a task has been released due to this system call. If TWF_CLR or TWF_BITCLR was specified, the value before event flag bits were cleared is returned. The value returned by flgptn meets the wait release conditions of this system call. The contents of flgptn are indeterminate if the wait is released due to timeout or the like.

A maximum wait time (timeout) can be set in tmout. The time unit for tmout is the same as that for system time (= 1 ms). If the tmout time elapses before the wait release condition is met, the system call terminates, returning timeout error code E_TMOUT.

When TMO_POL=0 is set in tmout, this means 0 was specified as the timeout value, and E_TMOUT is returned without entering WAITING state even if the condition is not met. When TMO_FEVR=(-1) is set in tmout, this means infinity was specified as the timeout value, and the task continues to wait for the condition to be met without timing out.

In the case of a timeout, the event flag bits are not cleared even if TWF CLR or TWF BITCLR was specified.

Setting waiptn to 0 results in Parameter error E PAR.

A task cannot execute tk_wai_flg for an event flag having the TA_WSGL attribute while another task is waiting for it. Error code E_OBJ will be returned for the task issuing the subsequent tk_wai_flg, regardless of whether that task would have gone to WAITING state; i.e., regardless of whether the wait release conditions would be met.

If an event flag has the TA_WMUL attribute, multiple tasks can wait for it at the same time. The event flag in that case has a queue for the waiting tasks. A single tk_set_flg call for such an event flag may result in the release of multiple waiting tasks.

If multiple tasks are queued for an event flag with TA_WMUL attribute, the behavior is as follows.

- Tasks are queued in either FIFO or priority order. (Release of wait state does not always start from the head of the queue, however, depending on factors such as waiptn and wfmode settings.)
- If TWF_CLR or TWF_BITCLR was specified by a task in the queue, the event flag is cleared when that task is released from WAITING state.
- Tasks later in the queue than a task specifying TWF_CLR or TWF_BITCLR will see the event flag after it has already been cleared.

If multiple tasks having the same priority are released from waiting simultaneously as a result of tk_set_flg, the order of tasks in the ready queue (precedence) after release will continue to be the same as their original order in the event flag queue.

Additional Notes

If a logical sum of all bits is specified as the wait release condition when tk_wai_flg is called (waiptn = 0xfff...ff, wfmode = TWF_0RW), it is possible to transfer messages using one-word bit patterns in combination with tk_set_flg. However, it is not possible to send a message containing only 0s for all bits. Moreover, if the next message is sent by tk_set_flg before a previous message has been read by tk_wai_flg, the previous message will be lost; that is, message queuing is not possible.

Since setting waiptn = 0 will result in an E_PAR error, it is guaranteed that the waiptn of tasks waiting for an event flag will not be 0. The result is that if tk_set_flg sets all bits of an event flag to 1, the task at the head of the queue will always be released from waiting no matter what its wait condition is.

The ability to have multiple tasks wait for the same event flag is useful in situations like the following. Suppose, for example, that Task B and Task C are waiting for tk_{mai} flg calls (2) and (3) until Task A issues (1) $tk_{set_{n}}$ If multiple tasks are allowed to wait for the event flag, the result will be the same regardless of the order in which system calls (1)(2)(3) are executed (see Figure 4.1, "Multiple Tasks Waiting for One Event Flag"). On the other hand, if multiple task waiting is not allowed and system calls are executed in the order (2), (3), (1), an E_OBJ error will result from the execution of (3) $tk_{mai_{n}}$ flg.

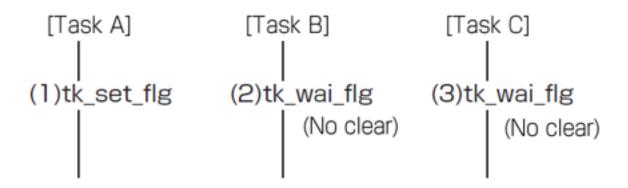


Figure 4.1: Multiple Tasks Waiting for One Event Flag

Rationale for the Specification

The reason for returning E_PAR error for specifying waiptn = 0 is that if waiptn = 0 were allowed, it would not be possible to get out of WAITING state regardless of the subsequent event flag values.

Porting Guideline

Note that the data pointed at waiptn and p_flgptn are UINT type, and their value range is implementation-dependent, so care must be taken.

4.4.2.6 tk_wai_flg_u - Wait Event Flag (Microseconds)

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_wai_flg_u(ID flgid, UINT waiptn, UINT wfmode, UINT *p_flgptn, TMO_U tmout_u);

Parameter

ID	flgid	EventFlag ID	Event flag ID
UINT	waiptn	Wait Bit Pattern	Wait bit pattern
UINT	wfmode	Wait EventFlag Mode	Wait mode
UINT*	p_flgptn	Pointer to EventFlag Bit Pattern	Pointer to the area to return the return
			parameter flgptn
TMO_U	tmout_u	Timeout	Timeout (in microseconds)

Return Parameter

ER	ercd	Error Code	Error code
UINT	flgptn	EventFlag Bit Pattern	Bit pattern of wait releasing

Error Code

E_OK	Normal completion
E_ID	Invalid ID number (flgid is invalid or cannot be used)
E_NOEXS	Object does not exist (the event flag specified in flgid does not exist)
E_PAR	Parameter error (waiptn = 0, wfmode is invalid, or tmout_u \leq (-2))
E_OBJ	Invalid object state (multiple tasks are waiting for an event flag with TA_WSGL attribute)
E_DLT	The object being waited for was deleted (the specified event flag was deleted while waiting)
E_RLWAI	Waiting state released (tk_rel_wai received in waiting state)
E_DISWAI	Wait released due to disabling of wait
E_TMOUT	Polling failed or timeout
E_CTX	Context error (issued from task-independent portion, or in dispatch disabled state)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK SUPPORT USEC Support of microsecond

Description

This system call takes 64-bit tmout_u in microseconds instead of the parameter tmout of tk_wai_flg.

The specification of this system call is same as that of tk_wai_flg , except that the parameter is replaced with $tmout_u$. For more details, see the description of tk_wai_flg .

Porting Guideline

Note that the data pointed at waiptn and p_flgptn are UINT type, and their value range is implementation-dependent, so care must be taken.

4.4.2.7 tk_ref_flg - Reference Event Flag Status

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_ref_flg(ID flgid, T_RFLG *pk_rflg);

Parameter

ID flgid EventFlag ID Event flag ID

T RFLG* pk rflg Packet to Return EventFlag Pointer to the area to return the event

Status flag status

Return Parameter

ER ercd Error Code Error code

pk rflg Detail:

void* exinf Extended Information Extended information

ID wtsk Waiting Task ID Waiting task ID

UINT flgptn EventFlag Bit Pattern The current event flag bit pattern

(Other implementation-dependent parameters may be added beyond this point.)

Error Code

E_OK Normal completion

E_ID Invalid ID number (flgid is invalid or cannot be used)

E_NOEXS Object does not exist (the event flag specified in flgid does not exist)

E_PAR Parameter error (invalid pk_rflg)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

References the status of the event flag specified in flgid, passing in the return parameters the current flag pattern (flgptn), waiting task ID (wtsk), and extended information (exinf).

wtsk returns the ID of a task waiting for this event flag. If more than one task is waiting (only when the TA_WMUL was specified), the ID of the first task in the queue is returned. If there are no waiting tasks, wtsk = 0 is returned.

If the specified event flag does not exist, error code E_NOEXS is returned.

4.4.3 Mailbox

A mailbox is an object used to achieve synchronization and communication by passing messages in system (shared) memory space. Functions are provided for creating and deleting a mailbox, sending and receiving messages in a mailbox, and referencing the mailbox status. A mailbox is an object identified by an ID number. The ID number for the mailbox is called a mailbox ID.

A mailbox has a message queue for sent messages, and a task queue for tasks waiting to receive messages. At the message sending end (posting event notification), messages to be sent go in the message queue. On the message receiving end (waiting for event notification), a task fetches one message from the message queue. If there are no queued messages, the task goes to WAITING state for receipt from the mailbox until the next message is sent. Tasks waiting for message receipt from a mailbox are put in the task queue of that mailbox.

Since the contents of messages using this function are in memory space shared both by the sending and receiving sides, only the start address of a message located in this shared space is actually sent and received. The contents of the messages themselves are not copied. T-Kernel manages messages in the message queue by means of a linked listed. An application program must allocate space at the beginning of a message to be sent, for linked list processing by T-Kernel. This area is called the message header. The message header and the message body together are called a message packet. When a system call sends a message to a mailbox, the start address of the message packet (pk_msg) is passed in a parameter.

When a system call receives a message from a mailbox, the start address of the message packet is passed in a return parameter.

If messages are assigned a priority in the message queue, the message priority (msgpri) of each message must be specified in the message header. [Figure 4.2, "Format of Messages Using a Mailbox"]

The user puts the message contents not at the beginning of the packet but after the header part (the message contents part in the figure).

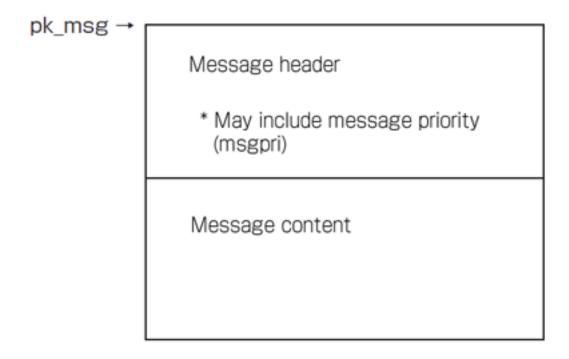


Figure 4.2: Format of Messages Using a Mailbox

T-Kernel overwrites the contents of the header when a message is put in the message queue (except for the message priority area). An application, on the other hand, must not overwrite the header of a message in

the queue (including the message priority area). The behavior when an application overwrites the message header is not defined. This specification applies not only to the direct writing of a message header by an application program, but also to the multiple passing of a header address to T-Kernel and having T-Kernel overwrite the message header. Accordingly, the behavior when a message already in the message queue is again sent to a mailbox is undefined.

Additional Notes

Since the application program allocates the message header space for this mailbox function, there is no limit on the number of messages that can be queued. A system call sending a message does not enter WAITING state.

Memory blocks allocated dynamically from a fixed-size memory pool or variable-size memory pool, or else a statically allocated area can be used for message packets.

Generally, a sending task allocates a memory block from a memory pool, sending it as a message packet. After a task on the receiving end fetches the message, it returns the memory block directly to its memory pool.

The following sample programs show the above usage:

```
/* Message type definition */
typedef struct {
   T_MSG msgque;     /* Message header with T_MFIFO attribute */
   UB msgcont[MSG_SIZE]; /* Message content */
} T_MSG_PACKET;
```

```
/* Task operation that acquires a memory block and sends a message */

T_MSG_PACKET *pk_msg;
...

/* Acquire a memory block from the fixed-size memory pool. */
/* Fixed-memory block size must be sizeof(T_MSG_PACKET) or more */
tk_get_mpf( mpfid, (void**)&pk_msg, TMO_FEVR );

/* Create a message at pk_msg -> msgcont[] */
...
/* Send a message */
tk_snd_mbx( mbxid, (T_MSG*)pk_msg );
```

```
/* Task operation that receives a message and releases a memory block */

T_MSG_PACKET *pk_msg;
...

/* Receive a message */
tk_rcv_mbx( mbxid, (T_MSG**)&pk_msg, TMO_FEVR );

/* Check message content at pk_msg -> msgcont[] and process them accordingly */
...

/* Return the memory block to the fixed-size memory pool. */
tk_rel_mpf( mpfid, (void*)pk_msg );
```

4.4.3.1 tk_cre_mbx - Create Mailbox

C Language Interface

#include <tk/tkernel.h>

ID mbxid = tk_cre_mbx(CONST T_CMBX *pk_cmbx);

Parameter

CONST T_CMBX* pk_cmbx Packet to Create Mailbox Mailbox creation information

pk cmbx Detail:

void*exinfExtended InformationExtended informationATRmbxatrMailbox AttributeMailbox attributeUBdsname[8]DS Object nameDS object name(Other implementation-dependent parameters may be added beyond this point.)

Return Parameter

ID mbxid Mailbox ID Mailbox ID or Error Code Error code

Error Code

E_NOMEM Insufficient memory (memory for control block cannot be allocated)

E_LIMIT Number of mailboxes exceeds the system limit

E_RSATR Reserved attribute (mbxatr is invalid or cannot be used)

E_PAR Parameter error (pk_cmbx is invalid)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

TK_SUPPORT_DISWAI Support for specifying TA_NODISWAI (reject request to disable

wait) to mailbox attribute

TK_SUPPORT_DSNAME Support for specifying TA_DSNAME for mailbox attribute

Description

Creates a mailbox, assigning to it a mailbox ID. This system call allocates a control block, etc. for the created mailbox.

exinf can be used freely by the user to set miscellaneous information about the created mailbox. The information set in this parameter can be referenced by tk_ref_mbx. If a larger area is needed for indicating user information, or if the information may need to be changed after the message buffer is created, this can be

done by allocating separate memory for this purpose and putting the memory packet address in exinf. The kernel pays no attention to the contents of exinf.

mbxatr indicates system attributes in its lower bits and implementation-dependent attributes in its higher bits. The system attribute part of mbxatr is as follows.

mbxatr:= (TA TFIFO || TA TPRI) | (TA MFIFO || TA MPRI) | [TA DSNAME] | [TA NODISWAI]

TA_TFIF0	Tasks are queued in FIFO order
TA_TPRI	Tasks are queued in priority order
TA_MFIF0	Messages are queued in FIFO order
TA_MPRI	Messages are queued in priority order
TA_DSNAME	Specifies DS object name
TA_NODISWAI	Disabling of wait by tk_dis_wai is prohibited

The queuing order of tasks waiting for a mailbox can be specified in TA_TFIFO or TA_TPRI. If the attribute is TA_TFIFO, tasks are ordered by FIFO, whereas TA_TPRI specifies queuing of tasks in order of their priority setting.

TA_MFIF0 and TA_MPRI are used to specify the order of messages in the message queue (messages waiting to be received). If the attribute is TA_MFIF0, messages are ordered by FIFO; TA_MPRI specifies queuing of messages in priority order. Message priority is set in a special field in the message packet. Message priority is specified by positive values, with 1 indicating the highest priority and higher numbers indicating successively lower priority. The largest value that can be expressed in the PRI type is the lowest priority. Messages having the same priority are ordered as FIFO.

When TA_DSNAME is specified, dsname is valid and specifies the DS object name. DS object name is used to identify objects by debugger, and it is handled only by T-Kernel/DS API, td_ref_dsname and td_set_dsname. For more details, see the description of td_ref_dsname and td_set_dsname. If TA_DSNAME is not specified, dsname is ignored. Then td_ref_dsname and td_set_dsname return E_OBJ error.

```
#define TA TFIF0
                         0x00000000
                                         /* manage queue by FIFO */
#define TA TPRI
                        0x00000001
                                         /* manage queue by priority */
#define TA MFIFO
                        0x00000000
                                         /* manage message queue by FIFO */
#define TA MPRI
                        0x00000002
                                         /* manage message queue by priority */
#define TA DSNAME
                        0x00000040
                                         /* DS object name */
#define TA_NODISWAI
                        0x00000080
                                         /* reject request to disable wait */
```

Additional Notes

The body of a message passed by the mailbox function is located in memory; only its start address is actually sent and received.

4.4.3.2 tk_del_mbx - Delete Mailbox

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_del_mbx(ID mbxid);

Parameter

ID mbxid Mailbox ID Mailbox ID

Return Parameter

ER ercd Error Code Error code

Error Code

E_OK Normal completion

E_ID Invalid ID number (mbxid is invalid or cannot be used)

E_NOEXS Object does not exist (the mailbox specified in mbxid does not exist)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

Deletes the mailbox specified in mbxid.

Issuing this system call releases the mailbox ID and control block memory space, etc., associated with the mailbox.

This system call completes normally even if there are tasks waiting for messages in the deleted mailbox, but error code E_DLT is returned to each of the tasks in WAITING state. Even if there are messages still in the deleted mailbox, the mailbox is deleted without returning an error code.

4.4.3.3 tk_snd_mbx - Send Message to Mailbox

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_snd_mbx(ID mbxid, T_MSG *pk_msg);

Parameter

ID	mbyid	Mailbox ID	Mailbox ID
ID	mbxid	Maiidox 1D	Malibox 1D

T_MSG* pk_msg Packet of Message Start address of message packet

Return Parameter

ER ercd Error Code Error code

Error Code

E_OK Normal completion

E_ID Invalid ID number (mbxid is invalid or cannot be used)

E NOEXS Object does not exist (the mailbox specified in mbxid does not exist)

E_PAR Parameter error (invalid pk_msg , or $msgpri \le 0$)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

Sends the message packet having pk_msg as its start address to the mailbox specified in mbxid.

The message packet contents are not copied; only the start address (pk_msg) is passed at the time of message receipt. Therefore, the content of the message packet must not be overwritten until it is fetched by the task that receives this message.

If tasks are already waiting for messages in the same mailbox, the WAITING state of the task at the head of the queue is released, and the pk_msg specified in tk_snd_mbx is sent to that task, becoming a parameter returned by tk_rcv_mbx. If there are no tasks waiting for messages in the specified mailbox, the sent message goes in the message queue of that mailbox. In neither case does the task issuing tk_snd_mbx enter WAITING state.

pk_msg is the start address of the packet containing the message, including header. The message header has the following format.

```
T_MSG msgque; /* message queue area */
PRI msgpri; /* message priority */
} T_MSG_PRI;
```

The message header is T_MSG (if TA_MFIFO attribute is specified) or T_MSG_PRI (if TA_MPRI). In either case the message header has a fixed-size, which can be obtained by sizeof(T_MSG) or sizeof (T_MSG_PRI).

The actual message must be put in the area after the header. There is no limit on message size, which may be variable.

Additional Notes

Messages are sent by tk_snd_mbx regardless of the status of the receiving tasks. In other words, message sending is asynchronous. What waits in the queue is not the sending task itself, but the sent message. So while there are queues of waiting messages and receiving tasks, the sending task does not go to WAITING state.

4.4.3.4 tk_rcv_mbx - Receive Message from Mailbox

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_rcv_mbx(ID mbxid, T_MSG **ppk_msg, TMO tmout);

Parameter

ID mbxid Mailbox ID Mailbox	: ID
-----------------------------	------

T MSG** ppk msg Pointer to Packet of Message Pointer to the area to return the return

parameter pk_msg

TMO tmout Timeout (ms)

Return Parameter

ER ercd Error Code Error code

T_MSG* pk_msg Packet of Message Start address of message packet

Error Code

E OK Normal completion

E_ID Invalid ID number (mbxid is invalid or cannot be used)

E_NOEXS Object does not exist (the mailbox specified in mbxid does not exist)

E_PAR Parameter error (tmout \leq (-2))

E DLT The object being waited for was deleted (the mailbox was deleted while waiting)

E_RLWAI Waiting state released (tk_rel_wai received in waiting state)

E_DISWAI Wait released due to disabling of wait

E TMOUT Polling failed or timeout

E_CTX Context error (issued from task-independent portion, or in dispatch disabled state)

Valid Context

	Task portion	Quasi-task portion	Task-independent portion
Ì	YES	YES	NO

Related Service Profile Items

None.

Description

tk_rcv_mbx receives a message from the mailbox specified in mbxid.

If no messages have been sent to the mailbox (the message queue is empty), the task issuing this system call enters WAITING state and is queued for message arrival. If there are messages in the mailbox, the task issuing this system call fetches the first message in the message queue, passing this in the return parameter pk_msg.

A maximum wait time (timeout) can be set in <code>tmout</code>. The time unit for <code>tmout</code> is the same as that for system time (= 1 ms). If the <code>tmout</code> time elapses before the wait release condition is met (before a message arrives), the system call terminates, returning timeout error code <code>E_TMOUT</code>.

When TMO_POL=0 is set in tmout, this means 0 was specified as the timeout value, and E_TMOUT is returned without entering WAITING state even if no message arrives. When TMO_FEVR=(-1) is set in tmout, this means infinity was specified as the timeout value, and the task continues to wait for message arrival without timing out

Additional Notes

 pk_msg is the start address of the packet containing the message, including header. The message header is T_MSG (if TA_MFIFO attribute is specified) or T_MSG_PRI (if TA_MPRI).

4.4.3.5 tk_rcv_mbx_u - Receive Message from Mailbox (Microseconds)

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_rcv_mbx_u(ID mbxid, T_MSG **ppk_msg, TMO_U tmout_u);

Parameter

TD WAIDOX ID	ID	mbxid	Mailbox ID	Mailbox ID
--------------	----	-------	------------	------------

 T_MSG^* ppk_msg Pointer to Packet of Message Pointer to the area to return the return

parameter pk msg

TMO_U tmout_u Timeout (in microseconds)

Return Parameter

ER ercd Error Code Error code

T_MSG* pk_msg Packet of Message Start address of message packet

Error Code

E OK Normal completion

E_ID Invalid ID number (mbxid is invalid or cannot be used)

E_NOEXS Object does not exist (the mailbox specified in mbxid does not exist)

E_PAR Parameter error $(tmout_u \le (-2))$

E DLT The object being waited for was deleted (the mailbox was deleted while waiting)

E_RLWAI Waiting state released (tk_rel_wai received in waiting state)

E_DISWAI Wait released due to disabling of wait

E TMOUT Polling failed or timeout

E_CTX Context error (issued from task-independent portion, or in dispatch disabled state)

Valid Context

	Task portion	Quasi-task portion	Task-independent portion
Ì	YES	YES	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK SUPPORT USEC

Support of microsecond

Description

This system call takes 64-bit tmout_u in microseconds instead of the parameter tmout of tk_rcv_mbx.

The specification of this system call is same as that of tk_rcv_mbx, except that the parameter is replaced with tmout_u. For more details, see the description of tk_rcv_mbx.

4.4.3.6 tk_ref_mbx - Reference Mailbox Status

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_ref_mbx(ID mbxid, T_RMBX *pk_rmbx);

Parameter

ID mbxid Mailbox ID Mailbox ID

T_RMBX* pk_rmbx Packet to Refer Mailbox Status Pointer to the area to return the

mailbox status

Return Parameter

ER ercd Error Code Error code

pk rmbx Detail:

void*exinfExtended InformationExtended informationIDwtskWaiting Task IDWaiting task ID

T_MSG* pk_msg Packet of Message Next message to be received

(Other implementation-dependent parameters may be added beyond this point.)

Error Code

E_OK Normal completion

E_ID Invalid ID number (mbxid is invalid or cannot be used)

E_NOEXS Object does not exist (the mailbox specified in mbxid does not exist)

E_PAR Parameter error (invalid pk_rmbx)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

References the status of the mailbox specified in mbxid, passing in the return parameters the next message to be received (the first message in the message queue), waiting task ID (wtsk), and extended information (exinf).

wtsk indicates the ID of a task waiting for the mailbox. If there are multiple waiting tasks, the ID of the first task in the queue is returned. If there are no waiting tasks, wtsk = 0 is returned.

If the specified mailbox does not exist, error code E_NOEXS is returned.

-	-					· · · · · · · · · · · · · · · · · · ·
pk_msg indicates	s the message that	will be received	d the next time	tk_rcv_mbx is	issued. If there	are no message
in the message	queue, $pk_msg = N$	ULL is returned.	. At least one	of pk_msg= NULL	and wtsk = 0 19	s always true fo
this system call	•					

4.5 Extended Synchronization and Communication Functions

Extended synchronization and communication functions use objects independent of tasks to realize more sophisticated synchronization and communication between tasks. The functions specified here include mutex and message buffer functions.

4.5.1 Mutex

A mutex is an object for mutual exclusion control among tasks that use shared resources. Priority inheritance mutexes and priority ceiling mutexes are supported, as a mechanism to prevent the problem of unbounded priority inversion that can occur in mutual exclusion control.

Functions are provided for creating and deleting a mutex, locking and unlocking a mutex, and referencing mutex status. A mutex is identified by an ID number. The ID number for the mutex is called a mutex ID.

A mutex has a status (locked or unlocked) and a queue for tasks waiting to lock the mutex. For each mutex, T-Kernel keeps track of the tasks locking it; and for each task, it keeps track of the mutexes it has locked. Before a task uses a resource, it locks a mutex associated with that resource. If the mutex is already locked by another task, the task waits for the mutex to become unlocked. Tasks in mutex lock waiting state are put in the mutex queue. When a task finishes with a resource, it unlocks the mutex.

A mutex with TA_INHERIT (= 0x02) specified as mutex attribute supports priority inheritance protocol while one with TA_CEILING (= 0x03) specified supports priority ceiling protocol. When a mutex with TA_CEILING attribute is created, a ceiling priority is assigned to it, indicating the base priority of the task having the highest base priority among the tasks that will lock that mutex. If a task having a higher base priority than the ceiling priority of the mutex with TA_CEILING attribute tries to lock it, error code E_ILUSE is returned. If tk_chg_pri is issued in an attempt to set the base priority of a task having locked a mutex with TA_CEILING attribute to a value higher than the ceiling priority of that mutex, E_ILUSE is returned by the tk_chg_pri system call.

When these protocols are used, unbounded priority inversion is prevented by automatically changing the current priority of a task in a mutex operation. Strict adherence to the priority inheritance protocol and priority ceiling protocol requires that the task current priority must always be changed to match the peak value of the following priorities. This is called strict priority control.

- · Task base priority
- When tasks lock mutexes with TA_INHERIT attribute, the current priority of the task having the highest current priority of the tasks waiting for those mutexes.
- When tasks lock mutexes with TA_CEILING attribute, the highest ceiling priority of the mutex among those
 mutexes.

Note that when the current priority of a task waiting for a mutex with TA_INHERIT attribute changes as the result of a base priority change brought about by mutex operation or tk_chg_pri, it may become necessary to change the current priority of the task locking that mutex. This is called dynamic priority inheritance. Further, if this task is waiting for another mutex with TA_INHERIT attribute, dynamic priority inheritance processing may become necessary also for the task locking that mutex.

The T-Kernel defines, in addition to the above strict priority control, a simplified priority control limiting the situations in which the current priority is changed. The choice between the two is implementation-dependent. In the simplified priority control, whereas all changes in the direction of raising the task current priority are carried out, changes in the direction of lowering that priority are made only when a task is no longer locking any mutexes. (In this case the task current priority reverts to the base priority.) More specifically, processing to change the current priority is needed only in the following circumstances.

- When a task with a higher current priority than that of the task locking a mutex with TA_INHERIT attribute starts waiting for that mutex.
- When task B is waiting for a mutex with TA_INHERIT attribute being locked by another task called A, and if the current priority of B is changed to a higher one than that of task A.
- When a task locks a mutex with TA_CEILING attribute having a higher ceiling priority than the task's current priority.
- · When a task is no longer locking any mutexes.

When the current priority of a task is changed in connection with a mutex operation, the following processing is performed.

If the task whose priority changed is in a run state, the task precedence is changed in accordance with the new priority. Its precedence among other tasks having the same priority is implementation-dependent. Likewise, if the task whose priority changes is waiting in a queue of some kind, its order in that queue is changed based on its new priority. Its order among other tasks having the same priority is implementation-dependent. When a task terminates and there are mutexes still locked by that task, all the mutexes are unlocked. The order in which multiple locked mutexes are unlocked is implementation-dependent. See the description of tk_unl_mtx for the specific processing involved.

Additional Notes

TA_TFIF0 attribute mutex or TA_TPRI attribute mutex has functionality equivalent to that of a semaphore with a maximum of one resource (binary semaphore). The main differences are that a mutex can be unlocked only by the task that locked it, and a mutex is automatically unlocked when the task locking it terminates.

The term "priority ceiling protocol" is used here in a broad sense. The protocol described here is not the same as the algorithm originally proposed. Strictly speaking, it is what is otherwise referred to as a highest locker protocol or by other names.

When the change in current priority of a task due to a mutex operation results in that task's order being changed in a priority-based queue, it may be necessary to release the waiting state of other tasks waiting for that task or for that queue.

Rationale for the Specification

The precedence of tasks having the same priority as the result of a change in task current priority in a mutex operation is left as implementation-dependent, for the following reason. Depending on the application, the mutex function may lead to frequent changes in current priority. It would not be desirable for this to result in constant task switching, which is what would happen if the precedence were made the lowest each time among tasks of the same priority. Ideally task precedence rather than priority should be inherited, but that results in large overhead in implementation. This aspect of the specification is therefore made an implementation-dependent matter.

4.5.1.1 tk_cre_mtx - Create Mutex

C Language Interface

#include <tk/tkernel.h>

ID mtxid = tk_cre_mtx(CONST T_CMTX *pk_cmtx);

Parameter

CONST T_CMTX* pk_cmtx Packet to Create Mutex Information about the mutex to be

created

pk_cmtx Detail:

void*	exinf	Extended Information	Extended information	
ATR	mtxatr	Mutex Attribute	Mutex attributes	
PRI	ceilpri	Ceiling Priority of Mutex	Mutex ceiling priority	
UB	dsname[8]	DS Object name	DS object name	
(Other implementation-dependent parameters may be added beyond this point.)				

Return Parameter

ID	mtxid		Mutex ID	Mutex ID
		or	Error Code	Error code

Error Code

E_NOMEM Insufficient memory (memory for control block cannot be allocated)

E_LIMIT Number of mutexes exceeds the system limit

E_RSATR Reserved attribute (mtxatr is invalid or cannot be used)

E_PAR Parameter error (pk_cmtx or ceilpri is invalid)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

TK_SUPPORT_DISWAI Support for specifying TA_NODISWAI (reject request to disable

wait) to mutex attribute

TK_SUPPORT_DSNAME Support for specifying TA_DSNAME for mutex attribute

Description

Creates a mutex, assigning to it a mutex ID. This system call allocates a control block, etc. for the created mutex.

exinf can be used freely by the user to set miscellaneous information about the created mutex. The information set in this parameter can be referenced by tk_ref_mtx. If a larger area is needed for indicating user information,

or if the information may need to be changed after the message buffer is created, this can be done by allocating separate memory for this purpose and putting the memory packet address in exinf. The kernel pays no attention to the contents of exinf.

mtxatr indicates system attributes in its lower bits and implementation-dependent attributes in its higher bits. The system attribute part of mtxatr is specified as follows.

mtxatr:= (TA TFIFO || TA TPRI || TA INHERIT || TA CEILING) | [TA DSNAME] | [TA NODISWAI]

TA_TFIF0	Tasks are queued in FIFO order
TA_TPRI	Tasks are queued in priority order
TA_INHERIT	Priority inheritance protocol
TA_CEILING	Priority ceiling protocol
TA_DSNAME	Specifies DS object name
TA_NODISWAI	Disabling of wait by tk_dis_wai is prohibited

When the TA_TFIFO attribute is specified, the order of the mutex task queue is FIFO. If TA_TPRI, TA_INHERIT, or TA_CEILING is specified, tasks are ordered by their priority. TA_INHERIT indicates that priority inheritance protocol is used, and TA_CEILING specifies priority ceiling protocol.

Only when TA_CEILING is specified, ceilpri is valid and specifies the mutex ceiling priority.

When TA_DSNAME is specified, dsname is valid and specifies the DS object name. DS object name is used to identify objects by debugger, and it is handled only by T-Kernel/DS API, td_ref_dsname and td_set_dsname. For more details, see the description of td_ref_dsname and td_set_dsname. If TA_DSNAME is not specified, dsname is ignored. Then td_ref_dsname and td_set_dsname return E_OBJ error.

```
#define TA_TFIF0
                         0 x 0 0 0 0 0 0 0 0
                                          /* manage queue by FIFO */
#define TA_TPRI
                         0x00000001
                                          /* manage queue by priority */
#define TA_INHERIT
                         0x00000002
                                          /* priority inheritance protocol */
#define TA CEILING
                         0x00000003
                                          /* priority ceiling protocol */
#define TA DSNAME
                         0x00000040
                                          /* DS object name */
#define TA NODISWAI
                         0x00000080
                                          /* reject request to disable wait */
```

4.5.1.2 tk_del_mtx - Delete Mutex

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_del_mtx(ID mtxid);

Parameter

ID mtxid Mutex ID Mutex ID

Return Parameter

ER ercd Error Code Error code

Error Code

E_OK Normal completion

E_ID Invalid ID number (mtxid is invalid or cannot be used)

E_NOEXS Object does not exist (the mutex specified in mtxid does not exist)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

Deletes the mutex specified in mtxid.

Issuing this system call releases the mutex ID and control block memory space allocated to the mutex.

This system call completes normally even if there are tasks waiting to lock the deleted mutex, but error code E_DLT is returned to each of the tasks in WAITING state.

When a mutex is deleted, a task locking the mutex will have one fewer locked mutexes. If the mutex to be deleted was a priority inheritance mutex (TA_INHERIT) or priority ceiling mutex (TA_CEILING), then deleting the mutex might change the priority of the task that has locked it.

4.5.1.3 tk_loc_mtx - Lock Mutex

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_loc_mtx(ID mtxid, TMO tmout);

Parameter

ID	mtxid	Mutex ID	Mutex ID
TMO	tmout	Timeout	Timeout (ms)

Return Parameter

	1	D 0 1	
ER	ercd	Error Code	Error code
Lil	GIGU	EHOL COUC	EHOI COO

Error Code

E_OK	Normal completion
E_ID	Invalid ID number (mtxid is invalid or cannot be used)
E_NOEXS	Object does not exist (the mutex specified in mtxid does not exist)
E_PAR	Parameter error (tmout \leq (-2))
E_DLT	The object being waited for was deleted (the mutex was deleted while waiting for a
	lock)
E_RLWAI	Waiting state released (tk_rel_wai received in waiting state)
E_DISWAI	Wait released due to disabling of wait
E_TMOUT	Polling failed or timeout
E_CTX	Context error (issued from task-independent portion, or in dispatch disabled state)
E ILUSE	Illegal use (multiple lock, or upper priority limit exceeded)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

Locks the mutex specified in mtxid. If the mutex can be locked immediately, the task issuing this system call continue executing without entering WAITING state, and the mutex goes to locked status. If the mutex cannot be locked, the task issuing this system call enters WAITING state. That is, the task is put in the queue of this mutex

A maximum wait time (timeout) can be set in tmout. The time unit for tmout is the same as that for system time (= 1 ms). If the tmout time elapses before the wait release condition is met, the system call terminates, returning timeout error code E TMOUT.

When $TMO_POL = 0$ is set in tmout, this means 0 was specified as the timeout value, and E_TMOUT is returned without entering WAITING state even if the resource cannot be locked. When $TMO_FEVR = (-1)$ is set in tmout,

this means infinity was specified as the timeout value, and the task continues wait to until the resource is locked.

If the invoking task has already locked the specified mutex, error code E_ILUSE (multiple lock) is returned.

If the specified mutex is a priority ceiling mutex (TA_CEILING) and the base priority¹ of the invoking task is higher than the ceiling priority of the mutex, error code E_ILUSE (upper priority limit exceeded) is returned.

Additional Notes

· Priority inheritance mutex (TA_INHERIT attribute)

If the invoking task is waiting to lock a mutex and the current priority of the task currently locking that mutex is lower than that of the invoking task, the priority of the locking task is raised to the same level as the invoking task. If the wait ends before the waiting task can obtain a lock (timeout or other reason), the priority of the task locking that mutex can be lowered to the highest of the following three priorities. Whether this lowering takes place is implementation-dependent.

- a. The highest priority among the current priorities of tasks waiting to lock the mutex.
- b. The highest priority among all the other mutexes locked by the task currently locking this mutex.
- c. The base priority of the locking task.
- Priority ceiling mutex (TA_CEILING attribute)

If the invoking task obtains a lock and its current priority is lower than the mutex ceiling priority, the priority of the invoking task is raised to the mutex ceiling priority.

¹ Base priority: The task priority before it is automatically raised by the mutex. This is the priority last set by tk_chg_pri (including while the mutex is locked), or if tk_chg_pri has never been issued, the priority that was set when the task was created.

4.5.1.4 tk_loc_mtx_u - Lock Mutex (Microseconds)

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_loc_mtx_u(ID mtxid, TMO_U tmout_u);

Parameter

ID	mtxid	Mutex ID	Mutex ID

TMO_U tmout_u Timeout (in microseconds)

Return Parameter

ER ercd Error Code Error code

Error Code

E_OK	Normal completion
E_ID	Invalid ID number (mtxid is invalid or cannot be used)
E_NOEXS	Object does not exist (the mutex specified in mtxid does not exist)
E_PAR	Parameter error (tmout_u \leq (-2))
E_DLT	The object being waited for was deleted (the mutex was deleted while waiting for a
	lock)
E_RLWAI	Waiting state released (tk_rel_wai received in waiting state)
E_DISWAI	Wait released due to disabling of wait
E_TMOUT	Polling failed or timeout
E_CTX	Context error (issued from task-independent portion, or in dispatch disabled state)

Illegal use (multiple lock, or upper priority limit exceeded)

Valid Context

E ILUSE

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_USEC Support of microsecond

Description

This system call takes 64-bit tmout_u in microseconds instead of the parameter tmout of tk_loc_mtx.

The specification of this system call is same as that of tk_loc_mtx , except that the parameter is replaced with $tmout_u$. For more details, see the description of tk_loc_mtx .

4.5.1.5 tk_unl_mtx - Unlock Mutex

C Language Interface

#include <tk/tkernel.h>

 $ER \ ercd = tk_unl_mtx(ID \ mtxid);$

Parameter

ID mtxid Mutex ID Mutex ID

Return Parameter

ER ercd Error Code Error code

Error Code

E_OK Normal completion

E_ID Invalid ID number (mtxid is invalid or cannot be used)

E_NOEXS Object does not exist (the mutex specified in mtxid does not exist)

E_ILUSE Illegal use (not a mutex locked by the invoking task)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

Unlocks the mutex specified in mtxid.

If there are tasks waiting to lock the mutex, the WAITING state of the task at the head of the queue for that mutex is released and that task locks the mutex.

If a mutex that was not locked by the invoking task is specified, error code E_ILUSE is returned.

Additional Notes

If the unlocked mutex is a priority inheritance mutex (TA_INHERIT) or priority ceiling mutex (TA_CEILING), task priority must be lowered as follows.

If as a result of this operation the invoking task no longer has any locked mutexes, the invoking task priority is lowered to its base priority.

If the invoking task continues to have locked mutexes after the operation above, the invoking task priority is lowered to whichever of the following priority is highest.

- a. The highest priority among the current priority of the tasks in the queue of the mutex with the TA_INHERIT attribute locked by the invoking task
- b. The highest priority among the ceiling priority of the mutexes with the ${\sf TA_CEILING}$ attribute locked by the invoking task
- c. Base priority of the invoking task

Note that the lowering of priority when locked mutexes remain is implementation-dependent.

If a task terminates (goes to DORMANT state or NON-EXISTENT state) without explicitly unlocking mutexes, all its locked mutexes are automatically unlocked by μ T-Kernel.

4.5.1.6 tk_ref_mtx - Refer Mutex Status

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_ref_mtx(ID mtxid, T_RMTX *pk_rmtx);

Parameter

ID mtxid Mutex ID Mutex ID

T RMTX* pk rmtx Packet to Return Mutex Status Pointer to the area to return the mutex

status

Return Parameter

ER ercd Error Code Error code

pk rmtx Detail:

void*exinfExtended InformationExtended informationIDhtskLocking Task IDID of task locking the mutex

ID wtsk Lock Waiting Task ID ID of tasks waiting to lock the mutex

(Other implementation-dependent parameters may be added beyond this point.)

Error Code

E OK Normal completion

E_ID Invalid ID number (mtxid is invalid or cannot be used)

E_NOEXS Object does not exist (the mutex specified in mtxid does not exist)

E_PAR Parameter error (invalid pk_rmtx)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

References the status of the mutex specified in mtxid, passing in the return parameters the task currently locking the mutex (htsk), tasks waiting to lock the mutex (wtsk), and extended information (exinf).

htsk indicates the ID of the task locking the mutex. If no task is locking it, htsk = 0 is returned.

wtsk indicates the ID of a task waiting to lock the mutex. If there are two or more such tasks, the ID of the task at the head of the queue is returned. If there are no waiting tasks, wtsk = 0 is returned.

If the specified mutex does not exist, error code E_NOEXS is returned.

4.5.2 Message Buffer

A message buffer is an object for achieving synchronization and communication by the passing of variable-size messages. Functions are provided for creating and deleting a message buffer, sending and receiving messages using a message buffer, and referencing message buffer status. A message buffer is an object identified by an ID number. The ID number for the message buffer is called a message buffer ID.

A message buffer keeps a queue of tasks waiting to send a message (send queue) and a queue of tasks waiting for receive a message (receive queue). It also has a message buffer space for holding sent messages. The message sender (the side posting event notification) copies a message it wants to send to the message buffer. If there is insufficient space in the message buffer area, the task trying to send the message is queued for sending until enough space is available.

A task waiting to send a message to the message buffer is put in the send queue. On the message receive side (waiting for event notification), one message is fetched from the message buffer. If the message buffer has no messages, the task enters WAITING state until the next message is sent. A task waiting for receiving a message from a message buffer is put in the receive queue of that message buffer.

A synchronous message function can be realized by setting the message buffer space size to 0. In that case both the sending task and receiving task wait for a system call to be invoked by each other, and the message is passed when both sides issue system calls.

Additional Notes

The message buffer behavior when the size of the message buffer space is set to 0 is explained here using the example in Figure 4.3, "Synchronous Communication by Message Buffer". In this example Task A and Task B run asynchronously.

- If Task A calls tk_snd_mbf first, it goes to WAITING state until Task B calls tk_rcv_mbf. In this case Task A is put in the message buffer send queue [Figure 4.3, "Synchronous Communication by Message Buffer" (a)]
- If Task B calls tk_rcv_mbf first, on the other hand, Task B goes to WAITING state until Task A calls tk_snd_mbf. Task B is put in the message buffer receive queue [Figure 4.3, "Synchronous Communication by Message Buffer" (b)].
- At the point where both Task A has called tk_snd_mbf and Task B has called tk_rcv_mbf, a message is passed from Task A to Task B; Thereafter both tasks enter a run state.

Tasks waiting to send to a message buffer send messages in their queued order. Suppose Task A wanting to send a 40-byte message to a message buffer, and Task B wanting to send a 10-byte message, are queued in that order. If another task receives a message opening 20 bytes of space in the message buffer, Task B is still required to wait until Task A sends its message.

A message buffer is used to pass variable-size messages by copying them. It is the copying of messages that makes this function different from the mailbox function.

It is assumed that the message buffer will be implemented as a ring buffer.

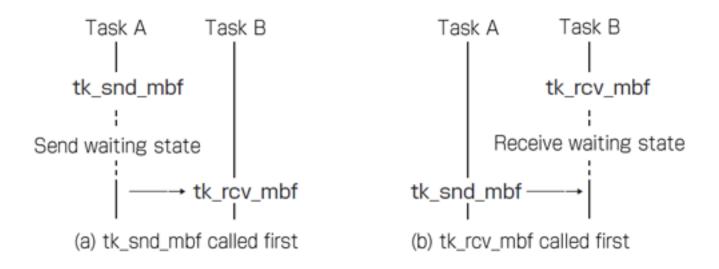


Figure 4.3: Synchronous Communication by Message Buffer

4.5.2.1 tk_cre_mbf - Create Message Buffer

C Language Interface

#include <tk/tkernel.h>

ID mbfid = tk_cre_mbf(CONST T_CMBF *pk_cmbf);

Parameter

CONST T_CMBF*	pk_cmbf	Packet to Create Message	Message buffer creation
		Buffer	information

pk_cmbf Detail:

void*	exinf	Extended Information	Extended information	
ATR	mbfatr	Message Buffer Attribute	Message buffer attribute	
SZ	bufsz	Buffer Size	Message buffer size (in bytes)	
INT	maxmsz	Max Message Size	Maximum message size (in bytes)	
UB	dsname[8]	DS Object name	DS object name	
void*	bufptr	Buffer Pointer	User buffer pointer	
(Other in all and a table and a second and a second and a second all all and a second all in a				

(Other implementation-dependent parameters may be added beyond this point.)

Return Parameter

ID	mbfid	Message Buffer ID	Message buffer ID
	or	Error Code	Error code

Error Code

E_NOMEM	Insufficient memory (memory for control	block or ring buffer	r area cannot be
	allocated)			

allocated)

 $\begin{array}{ll} E_LIMIT & Number of message buffers exceeds the system limit \\ E_RSATR & Reserved attribute (mbfatr is invalid or cannot be used) \end{array}$

E_PAR Parameter error (pk_cmbf is illegal, bufsz, maxmsz is negative or invalid, bufptr is

illegal)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

TK_SUPPORT_USERBUF	Support for specifying TA_USERBUF for message buffer attribute
TK_SUPPORT_AUTOBUF	Automatic buffer allocation is supported (by not specifying
	TA_USERBUF to message buffer attribute)
TK_SUPPORT_DISWAI	Support for specifying TA_NODISWAI (reject request to disable
	wait) to message buffer attribute
TK_SUPPORT_DSNAME	Support for specifying TA_DSNAME for message buffer attribute

Description

Creates a message buffer, assigning to it a message buffer ID. This system call allocates a control block to the created message buffer. Based on the information specified in bufsz, it allocates a ring buffer area for message queue use (for messages waiting to be received).

A message buffer is an object for managing the sending and receiving of variable-size messages. If differs from a mailbox (mbx) in that the contents of the variable-size messages are copied when the message is sent and received. It also has a function for putting the sending task in WAITING state when the buffer is full.

exinf can be used freely by the user to set miscellaneous information about the created message buffer. The information set in this parameter can be referenced by tk_ref_mbf. If a larger area is needed for indicating user information, or if the information may need to be changed after the message buffer is created, this can be done by allocating separate memory for this purpose and putting the memory packet address in exinf. The kernel pays no attention to the contents of exinf.

mbfatr indicates system attributes in its lower bits and implementation-dependent attributes in its higher bits. The system attribute part of mbfatr is specified as follows.

```
mbfatr := (TA_TFIFO || TA_TPRI) | [TA_DSNAME] | [TA_USERBUF] | [TA_NODISWAI]
```

TA_TFIF0	Tasks waiting on call are queued in FIFO order
TA_TPRI	Tasks waiting on call are queued in priority order
TA_DSNAME	Specifies DS object name
TA_USERBUF	Support of user-specified memory area as message buffer area
TA_NODISWAI	Disabling of wait by tk_dis_wai is prohibited

The queuing order of tasks waiting for sending a message when the buffer is full can be specified in TA_TFIFO or TA_TPRI. If the attribute is TA_TFIFO, tasks are ordered by FIFO, whereas TA_TPRI specifies queuing of tasks in order of their priority setting. Messages themselves are queued in FIFO order only.

Tasks waiting for receiving a message from a message buffer are queued in FIFO order only.

When TA_USERBUF is specified, bufptr becomes effective, and the memory area starting at bufptr and containing bufsz octets is used as message buffer area. In this case, the message buffer area is not provided by he OS, but must be allocated by the caller. When TA_USERBUF is not specified, bufptr is ineffective, and the message buffer area is provided by the kernel.

When TA_DSNAME is specified, dsname is valid and specifies the DS object name. DS object name is used to identify objects by debugger, and it is handled only by T-Kernel/DS API, td_ref_dsname and td_set_dsname. For more details, see the description of td_ref_dsname and td_set_dsname. If TA_DSNAME is not specified, dsname is ignored. Then td_ref_dsname and td_set_dsname return E_OBJ error.

```
#define TA_TFIFO 0x00000000 /* manage task queue by FIFO */
#define TA_TPRI 0x00000001 /* manage task queue by priority */
#define TA_USERBUF 0x00000020 /* Use user-specified buffer */
#define TA_DSNAME 0x00000040 /* DS object name */
#define TA_NODISWAI 0x00000080 /* reject request to disable wait */
```

Additional Notes

When there are multiple tasks waiting to send messages, the order in which their messages are sent when buffer space becomes available is always in their queued order.


If, for example, a Task A wanting to send a 30-byte message is queued with a Task B wanting to send a 10-byte message, in the order A-B, even if 20 bytes of message buffer space becomes available, Task B never sends its message before Task A.

The ring buffer in which messages are queued also contains information for managing each message. For this reason the total size of queued messages will ordinarily not be identical to the ring buffer size specified in bufsz. Normally the total message size will be smaller than bufsz. In this sense bufsz does not strictly represent the total message capacity.

It is possible to create a message buffer with bufsz = 0. In this case communication using the message buffer is completely synchronous between the sending and receiving tasks. That is, if either tk_snd_mbf or tk_rcv_mbf is executed ahead of the other, the task executing the first system call goes to WAITING state. When the other system call is executed, the message is passed (copied), then both tasks resume running.

In the case of a bufsz = 0 message buffer, the specific functioning is as follows.

- 1. In Figure 4.4, "Synchronous Communication Using Message Buffer of bufsz = 0", Task A and Task B operate asynchronously. If Task A arrives at point (1) first and executes tk_snd_mbf(mbfid), Task A goes to send waiting state until Task B arrives at point (2). If tk_ref_tsk is issued for Task A in this state, tskwait=TTW_SMBF is returned. If, on the other hand, Task B gets to point (2) first and calls tk_rcv_mbf(mbfid), Task B goes to receive waiting state until Task A gets to point (1). If tk_ref_tsk is issued for Task B in this state, tskwait=TTW_RMBF is returned.
- 2. At the point where both Task A has executed tk_snd_mbf(mbfid) and Task B has executed tk_rcv_mbf(mbfid), a message is passed from Task A to Task B, their wait states are released and both tasks resume running.

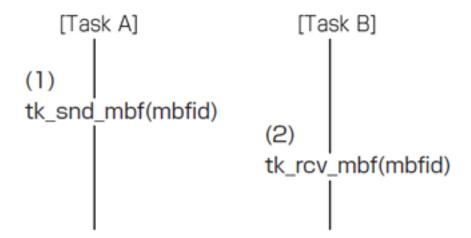

Message send wait (TTW_SMBF) if wait entered at (1) Message receive wait (TTW_RMBF) if wait entered at (2)

Figure 4.4: Synchronous Communication Using Message Buffer of bufsz = 0

Porting Guideline

Note that member, maxmsz, of T_CMBF is INT type, and its value range is implementation-dependent, so care must be taken.

The T-Kernel 2.0 specification does not define TA_USERBUF and its associated notion of bufptr. So if this feature is used, a modification is necessary to port the software to T-Kernel 2.0. However, if bufsz is properly set already, simply removing TA_USERBUF and bufptr will complete the modification for porting.

4.5.2.2 tk_del_mbf - Delete Message Buffer

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_del_mbf(ID mbfid);

Parameter

ID mbfid Message Buffer ID Message buffer ID

Return Parameter

ER ercd Error Code Error code

Error Code

E_OK Normal completion

E_ID Invalid ID number (mbfid is invalid or cannot be used)

E_NOEXS Object does not exist (the message buffer specified in mbfid does not exist)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

Deletes the message buffer specified in mbfid.

Issuing this system call releases the corresponding message buffer and control block memory space, as well as the message buffer space.

This system call completes normally even if there were tasks queued in the message buffer for message receipt or message sending, but error code E_DLT is returned to the tasks in WAITING state. If there are messages left in the message buffer when it is deleted, the message buffer is deleted anyway. No error code is returned and the messages are discarded.

4.5.2.3 tk_snd_mbf - Send Message to Message Buffer

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_snd_mbf(ID mbfid, CONST void *msg, INT msgsz, TMO tmout);

Parameter

ID	mbfid	Message Buffer ID	Message buffer ID
CONST void*	msg	Send Message	Start address of send message
INT	msgsz	Send Message Size	Send message size (in bytes)
TMO	tmout	Timeout	Timeout (ms)

Return Parameter

ER	ercd	Error Code	Error code
	CICU	Error Code	Error code

Error Code

E_OK	Normal completion
E_ID	Invalid ID number (mbfid is invalid or cannot be used)
E_NOEXS	Object does not exist (the message buffer specified in mbfid does not exist)
E_PAR	Parameter error (msgsz ≤ 0 , msgsz > maxmsz, invalid msg, or tmout $\leq (-2)$)
E_DLT	The object being waited for was deleted (message buffer was deleted while waiting)
E_RLWAI	Waiting state released (tk_rel_wai received in waiting state)
E_DISWAI	Wait released due to disabling of wait
E_TMOUT	Polling failed or timeout
E_CTX	Context error (issued from task-independent portion, or in dispatch disabled state)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO(* Available in some
		circumstances)

Related Service Profile Items

None.

Description

tk_snd_mbf sends the message at the address specified in msg to the message buffer indicated in mbfid. The message size is specified in msgsz. This system call copies msgsz bytes starting from msg to the message queue of message buffer mbfid. The message queue is assumed to be implemented as a ring buffer.

If msgsz is larger than the maxmsz specified in tk_cre_mbf, error code E_PAR is returned.

If there is not enough available buffer space to accommodate message msg in the message queue, the task issuing this system call goes to send waiting state and is put in the send queue of the message buffer waiting for buffer space to become available. Waiting tasks are queued in either FIFO or priority order, depending on the attribute specified in tk_cre_mbf .

A maximum wait time (timeout) can be set in tmout. The time unit for tmout is the same as that for system time (= 1 ms). If the tmout time elapses before the wait release condition is met (before there is sufficient buffer space), the system call terminates, returning timeout error code E TMOUT.

When TMO_POL=0 is specified in tmout, it means 0 is specified as the timeout value, and if there is not enough buffer space, then E_TMOUT is returned without entering WAITING state. When TMO_FEVR=(-1) is specified in tmout, this means infinity was specified as the timeout value, and the task continues to wait for buffer space to become available, without timing out.

A message of size 0 cannot be sent. When $msgsz \le 0$, error code E PAR is returned.

When this system call is invoked from a task-independent portion or in dispatch disabled state, error code E_CTX is returned; but in the case of $tmout = TMO_POL$, there may be implementations where execution from a task-independent portion or in dispatch disabled state is possible.

Porting Guideline

Note that msgsz is INT type, and its value range is implementation-dependent, so care must be taken. For example, there is a chance that the message size that can sent at once might be limited to 32767 octets on 16-bit CPU.

4.5.2.4 tk_snd_mbf_u - Send Message to Message Buffer (Microseconds)

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_snd_mbf_u(ID mbfid, CONST void *msg, INT msgsz, TMO_U tmout_u);

Parameter

ID	mbtid	Message Buffer ID	Message buffer ID
CONST void*	msg	Send Message	Start address of send message
INT	msgsz	Send Message Size	Send message size (in bytes)
TMO_U	tmout_u	Timeout	Timeout (in microseconds)

Return Parameter

ER	ercd	Error Code	Error code
EIL	CICU	Lifui Code	Error code

Error Code

Normal completion
Invalid ID number (mbfid is invalid or cannot be used)
Object does not exist (the message buffer specified in mbfid does not exist)
Parameter error (msgsz ≤ 0 , msgsz > maxmsz, invalid msg, or tmout_u $\leq (-2)$)
The object being waited for was deleted (message buffer was deleted while waiting)
Waiting state released (tk_rel_wai received in waiting state)
Wait released due to disabling of wait
Polling failed or timeout
Context error (issued from task-independent portion, or in dispatch disabled state)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO(* Available in certain
		circumstance)

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_USEC Support of microsecond

Description

This system call takes 64-bit tmout_u in microseconds instead of the parameter tmout of tk_snd_mbf.

The specification of this system call is same as that of tk_snd_mbf , except that the parameter is replaced with $tmout_u$. For more details, see the description of tk_snd_mbf .

Porting Guideline

Note that msgsz is INT type, and its value range is implementation-dependent, so care must be taken. For example, there is a chance that the message size that can sent at once might be limited to 32767 octets on 16-bit CPU.

4.5.2.5 tk_rcv_mbf - Receive Message from Message Buffer

C Language Interface

#include <tk/tkernel.h>

INT msgsz = tk_rcv_mbf(ID mbfid, void *msg, TMO tmout);

Parameter

ID	mbfid	Message Buffer ID	Message buffer ID
void*	msg	Receive Message	Address of the receive message
TMO	tmout	Timeout	Timeout (ms)

Return Parameter

INT	msgsz	Receive Message Size		Received message size (in bytes)	
		or	Error Code	Error code	

Error Code

E_ID	Invalid ID number (mbfid is invalid or cannot be used)
E_NOEXS	Object does not exist (the message buffer specified in mbfid does not exist)
E_PAR	Parameter error (invalid msg, or tmout \leq (-2))
E_DLT	The object being waited for was deleted (message buffer was deleted while waiting)
E_RLWAI	Waiting state released (tk_rel_wai received in waiting state)
E_DISWAI	Wait released due to disabling of wait
E_TMOUT	Polling failed or timeout
E CTX	Context error (issued from task-independent portion, or in dispatch disabled state)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

tk_rcv_mbf receives a message from the message buffer specified in mbfid, copying it in the location specified in msg. This system call copies the contents of the first queued message in the message buffer specified in mbfid, and copies it to an area of msgsz bytes starting at address msg.

If no message has been sent to the message buffer specified in mbfid (the message queue is empty), the task issuing this system call goes to WAITING state and is put in the receive queue of the message buffer to wait for message arrival. Tasks in the receive queue are ordered by FIFO only.

A maximum wait time (timeout) can be set in tmout. The time unit for tmout is the same as that for system time (= 1 ms). If the tmout time elapses before the wait release condition is met (before a message arrives), the system call terminates, returning timeout error code E_TMOUT .

When TMO_POL=0 is set in tmout, this means 0 was specified as the timeout value, and E_TMOUT is returned without entering WAITING state even if there is no message. When TMO_FEVR=(-1) is set in tmout, this means infinity was specified as the timeout value, and the task continues to wait for message arrival without timing out

4.5.2.6 tk_rcv_mbf_u - Receive Message from Message Buffer (Microseconds)

C Language Interface

#include <tk/tkernel.h>

INT msgsz = tk_rcv_mbf_u(ID mbfid, void *msg, TMO_U tmout_u);

Parameter

ID	mbfid	Message Buffer ID	Message buffer ID

void*msgReceive MessageAddress of the receive messageTMO_Utmout_uTimeoutTimeout (in microseconds)

Return Parameter

INT msgsz Receive Message Size Received message size (in bytes)

or Error Code Error code

Error Code

E ID Invalid ID number (mbfid is invalid or cannot be used)

E_NOEXS Object does not exist (the message buffer specified in mbfid does not exist)

E_PAR Parameter error (invalid msg, or tmout_u \leq (-2))

E_DLT The object being waited for was deleted (message buffer was deleted while waiting)

E_RLWAI Waiting state released (tk_rel_wai received in waiting state)

E DISWAI Wait released due to disabling of wait

E_TMOUT Polling failed or timeout

E_CTX Context error (issued from task-independent portion, or in dispatch disabled state)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_USEC

Support of microsecond

Description

This system call takes 64-bit tmout_u in microseconds instead of the parameter tmout of tk_rcv_mbf.

The specification of this system call is same as that of tk_rcv_mbf , except that the parameter is replaced with $tmout_u$. For more details, see the description of tk_rcv_mbf .

4.5.2.7 tk_ref_mbf - Reference Message Buffer Status

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_ref_mbf(ID mbfid, T_RMBF *pk_rmbf);

Parameter

ID	mbfid	Message Buffer ID	Message buffer ID

T_RMBF* pk_rmbf Packet to Return Message Buffer Pointer to the area to return the

Status message buffer status

Return Parameter

ER ercd Error Code Error code

pk_rmbf Detail:

void*	exinf	Extended Information	Extended information
ID	wtsk	Waiting Task ID	Receive waiting task ID
ID	stsk	Send Waiting Task ID	Send waiting task ID
INT	msgsz	Message Size	Size of the next message to be
			received (in bytes)
SZ	frbufsz	Free Buffer Size	Free buffer size (in bytes)
INT	maxmsz	Maximum Message Size	Maximum message size (in bytes)
(0.1	1 1	1 / / 1 11 11	1,11

(Other implementation-dependent parameters may be added beyond this point.)

Error Code

E OK Normal completion

E_ID Invalid ID number (mbfid is invalid or cannot be used)

E_NOEXS Object does not exist (the message buffer specified in mbfid does not exist)

E PAR Parameter error (invalid pk rmbf)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

References the status of the message buffer specified in mbfid, passing in the return parameters the send waiting task ID(stsk), the size of the next message to be received (msgsz), free buffer size (frbufsz), maximum message size (maxmsz), receive waiting task ID (wtsk), and extended information (exinf).

wtsk indicates the ID of a task waiting to receive a message from the message buffer. stsk indicates the ID of a task waiting to send a message to the message buffer. If multiple tasks are waiting in the message buffer queues, the ID of the task at the head of the queue is returned. If no tasks are waiting, 0 is returned.

If the specified message buffer does not exist, error code E NOEXS is returned.

The size of the message at the head of the queue (the next message to be received) is returned in msgsz. If there are no queued messages, msgsz = 0 is returned. A message of size 0 cannot be sent.

At least one of msgsz = 0 and wtsk = 0 is always true for this system call.

frbufsz indicates the free space in the ring buffer of which the message queue consists. This value indicates the approximate size of messages that can be sent.

The maximum message size as specified in tk_cre_mbf is returned to maxmsz.

4.6 Memory Pool Management Functions

Memory pool management functions are for managing memory pools and allocating memory blocks by using software.

There are fixed-size memory pools and variable-size memory pools, which are considered separate objects and require separate sets of system calls for their operation. Memory blocks allocated from a fixed-size memory pool are all of one fixed size, whereas memory blocks from a variable-size memory pool can be of various sizes.

4.6.1 Fixed-size Memory Pool

A fixed-size memory pool is an object used for dynamic management of fixed-size memory blocks. Functions are provided for creating and deleting a fixed-size memory pool, getting and returning memory blocks in a fixed-size memory pool, and referencing the status of a fixed-size memory pool. A fixed-size memory pool is an object identified by an ID number. The ID number for the fixed-size memory pool is called a fixed-size memory pool ID.

A fixed-size memory pool has a memory space used as the fixed-size memory pool (called a fixed-size memory pool area or simply memory pool area), and a queue for tasks waiting for memory block allocation. A task wanting to allocate a memory block from a fixed-size memory pool that lacks sufficient available memory space goes to WAITING state for fixed-size memory block until memory blocks are returned to the pool. A task in this state is put in the task queue of the fixed-size memory pool.

Additional Notes

When memory blocks of various sizes are needed from fixed-size memory pools, it is necessary to provide multiple memory pools of different sizes.

4.6.1.1 tk_cre_mpf - Create Fixed-size Memory Pool

C Language Interface

#include <tk/tkernel.h>

ID mpfid = tk_cre_mpf(CONST T_CMPF *pk_cmpf);

Parameter

CONST T_CMBX*	pk_cmpf	Packet to Create Memory Pool	Information about the fixed-size memory pool to be created
pk_cmpf Detail:			
void*	exinf	Extended Information	Extended information
ATR	mpfatr	Memory Pool Attribute	Memory pool attribute
SZ	mpfcnt	Memory Pool Block Count	Memory pool block count
SZ	blfsz	Memory Block Size	Fixed-size memory block size (in
			bytes)
UB	dsname[8]	DS Object name	DS object name
void*	bufptr	Buffer Pointer	User buffer pointer
(Other implements	ation-dependent p	parameters may be added beyon	nd this point.)

Return Parameter

ID	mptid		Memory Pool ID	Fixed-size memory pool ID
		or	Error Code	Error code

Error Code

E_NOMEM	Insufficient memory (memory for control block or memory pool area cannot be allocated)
E_LIMIT	Number of fixed-size memory pools exceeds the system limit
E_RSATR	Reserved attribute (mpfatr is invalid or cannot be used)
E_PAR	Parameter error (pk_cmpf is illegal, mpfcnt, blfsz is negative or invalid, or bufptr is
	illegal)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

TK_SUPPORT_USERBUF	Support for specifying TA_USERBUF for fixed-size memory pool
	attribute
TK_SUPPORT_AUTOBUF	Automatic buffer allocation is supported (by not specifying
	TA_USERBUF to fixed-size memory pool attribute)
TK_SUPPORT_DISWAI	Support for specifying TA_NODISWAI (reject request to disable
	wait) to fixed-size memory pool attribute

TK SUPPORT DSNAME

Support for specifying TA_DSNAME for fixed-size memory pool attribute

Description

Creates a fixed-size memory pool, assigning to it a fixed-size memory pool ID. This system call allocates a memory space for use as a memory pool based on the information specified in parameters mpfcnt and blfsz, and assigns a control block to the memory pool. A memory block of size blfsz can be allocated from the created memory pool by calling the tk get mpf system call.

exinf can be used freely by the user to set miscellaneous information about the created memory pool. The information set in this parameter can be referenced by tk_ref_mpf. If a larger area is needed for indicating user information, or if the information may need to be changed after the message buffer is created, this can be done by allocating separate memory for this purpose and putting the memory packet address in exinf. The kernel pays no attention to the contents of exinf.

mpfatr indicates system attributes in its lower bits and implementation-dependent attributes in its higher bits. The system attribute part of mpfatr is as follows.

```
TA_TFIFO
Tasks waiting for memory allocation are queued in FIFO order
TA_TPRI
Tasks waiting for memory allocation are queued in priority order
Memory access privilege is set to protection level n
TA_DSNAME
TA_USERBUF
TA_NODISWAI
Tasks waiting for memory allocation are queued in FIFO order
Tasks waiting for memory allocation are queued in FIFO order
Tasks waiting for memory allocation are queued in FIFO order
Tasks waiting for memory allocation are queued in FIFO order
Tasks waiting for memory allocation are queued in FIFO order
Tasks waiting for memory allocation are queued in FIFO order
Tasks waiting for memory allocation are queued in FIFO order
Tasks waiting for memory allocation are queued in FIFO order
Tasks waiting for memory allocation are queued in FIFO order
Tasks waiting for memory allocation are queued in FIFO order
Tasks waiting for memory allocation are queued in priority order
Memory access privilege is set to protection level n
Specifies DS object name
Support of user-specified memory area as memory pool area
Disabling of wait by tk_dis_wai is prohibited
```

```
#define TA TFIF0
                        0x00000000
                                         /* manage queue by FIFO */
#define TA TPRI
                        0x00000001
                                         /* manage queue by priority */
#define TA_USERBUF
                        0x00000020
                                         /* Use user-specified buffer */
#define TA_DSNAME
                        0x00000040
                                         /* DS object name */
#define TA_NODISWAI
                        0x00000080
                                         /* reject request to disable wait */
#define TA_RNG0
                        0x00000000
                                         /* Protection level 0 */
#define TA_RNG1
                        0x00000100
                                         /* Protection level 1 */
#define TA_RNG2
                        0x00000200
                                         /* Protection level 2 */
#define TA_RNG3
                        0x00000300
                                         /* Protection level 3 */
```

The queuing order of tasks waiting for memory block allocation from a memory pool can be specified in TA_TFIFO or TA_TPRI. If the attribute is TA_TFIFO, tasks are ordered by FIFO, whereas TA_TPRI specifies queuing of tasks in order of their priority setting.

TA_RNGn is specified to limit the protection levels from which memory can be accessed. Only tasks running at the same or higher protection level than the one specified can access the allocated memory. If a task running at a lower protection level attempts an access, a CPU protection fault exception is raised. For example, memory allocated from a memory pool specified as TA_RNG1 can be accessed by tasks running at levels TA_RNG0 or TA_RNG1, but not by tasks running at levels TA_RNG2 or TA_RNG3.

When TA_DSNAME is specified, dsname is valid and specifies the DS object name. DS object name is used to identify objects by debugger, and it is handled only by T-Kernel/DS API, td_ref_dsname and td_set_dsname. For more details, see the description of td_ref_dsname and td_set_dsname. If TA_DSNAME is not specified, dsname is ignored. Then td_ref_dsname and td_set_dsname return E_OBJ error.

Additional Notes

In the case of a fixed-size memory pool, separate memory pools must be provided for different block sizes. That is, if various memory block sizes are required, memory pools must be created for each block size.

For the sake of portability, the TA_RNGn attribute must be accepted even by a system with a single CPU's operating mode. It is possible, for example, to handle all TA_RNGn as equivalent to TA_RNG0, but error must not be returned.

Porting Guideline

The T-Kernel 2.0 specification does not define TA_USERBUF and its associated notion of bufptr. So if this feature is used, a modification is necessary to port the software to T-Kernel 2.0. However, if mpfcnt and blfsz is properly set already, simply removing TA_USERBUF and bufptr will complete the modification for porting.

4.6.1.2 tk_del_mpf - Delete Fixed-size Memory Pool

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_del_mpf(ID mpfid);

Parameter

ID mpfid Memory Pool ID Fixed-size memory pool ID

Return Parameter

ER ercd Error Code Error code

Error Code

E_OK Normal completion

E_ID Invalid ID number (mpfid is invalid or cannot be used)

E_NOEXS Object does not exist (the fixed-size memory pool specified in mpfid does not exist)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

Deletes the fixed-size memory pool specified in mpfid.

No check or notification is made as to whether there are tasks using memory allocated from this memory pool. The system call completes normally even if not all blocks have been returned to the pool.

Issuing this system call releases the memory pool ID number, the control block memory space and the memory pool space itself.

This system call completes normally even if there are tasks waiting for memory block allocation from the deleted memory pool, but error code E_DLT is returned to the tasks in WAITING state.

4.6.1.3 tk_get_mpf - Get Fixed-size Memory Block

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_get_mpf(ID mpfid, void **p_blf, TMO tmout);

Parameter

ID	mpfid	Memory Pool ID	Fixed-size memory pool ID
void**	p_blf	Pointer to Block Start Address	Pointer to the area to return the block
			start address blf
TMO	tmout	Timeout	Timeout (ms)

Return Parameter

ER	ercd	Error Code	Error code
void*	blf	Block Start Address	Memory block start address

Error Code

E_OK	Normal completion
E_ID	Invalid ID number (mpfid is invalid or cannot be used)
E_NOEXS	Object does not exist (the fixed-size memory pool specified in mpfid does not exist)
E_PAR	Parameter error (tmout \leq (-2))
E_DLT	The object being waited for was deleted (the memory pool was deleted while
	waiting)
E_RLWAI	Waiting state released (tk_rel_wai received in waiting state)
E_DISWAI	Wait released due to disabling of wait
E_TMOUT	Polling failed or timeout
E_CTX	Context error (issued from task-independent portion, or in dispatch disabled state)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

Gets a memory block from the fixed-size memory pool specified in mpfid. The start address of the allocated memory block is returned in blf. The size of the allocated memory block is the value specified in the blfsz parameter when the fixed-size memory pool was created.

The allocated memory is not cleared to zero, and the memory block contents are indeterminate.

If a block cannot be allocated from the specified memory pool, the task that issued tk_get_mpf is put in the queue of tasks waiting for memory allocation from that memory pool, and waits until memory can be allocated.

A maximum wait time (timeout) can be set in tmout. The time unit for tmout is the same as that for system time (= 1 ms). If the tmout time elapses before the wait release condition is met (memory space does not become available), the system call terminates, returning timeout error code E_TMOUT.

When TMO_POL=0 is set in tmout, this means 0 was specified as the timeout value, and E_TMOUT is returned without entering WAITInG state even if memory cannot be allocated.

When TMO_FEVR=(-1) is set in tmout, this means infinity was specified as the timeout value, and the task continues to wait for memory allocation without timing out.

The queuing order of tasks waiting for memory block allocation is either FIFO or task priority order, depending on the memory pool attribute.

4.6.1.4 tk_get_mpf_u - Get Fixed-size Memory Block (Microseconds)

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_get_mpf_u(ID mpfid, void **p_blf, TMO_U tmout_u);

Parameter

ID	mpfid	Memory Pool ID	Fixed-size memory pool ID
void**	p_blf	Pointer to Block Start Address	Pointer to the area to return the block

start address blf
TMO U tmout u Timeout Timeout (in microseconds)

Return Parameter

ER	ercd	Error Code	Error code
void*	blf	Block Start Address	Memory block start address

Error Code

E_OK	Normal completion
E_ID	Invalid ID number (mpfid is invalid or cannot be used)
E_NOEXS	Object does not exist (the fixed-size memory pool specified in mpfid does not exist)
E_PAR	Parameter error (tmout_u \leq (-2))
E_DLT	The object being waited for was deleted (the memory pool was deleted while
	waiting)
E_RLWAI	Waiting state released (tk_rel_wai received in waiting state)
E_DISWAI	Wait released due to disabling of wait
E_TMOUT	Polling failed or timeout
E_CTX	Context error (issued from task-independent portion, or in dispatch disabled state)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_USEC Support of microsecond

Description

This system call takes 64-bit tmout_u in microseconds instead of the parameter tmout of tk_get_mpf.

The specification of this system call is same as that of tk_get_mpf , except that the parameter is replaced with $tmout_u$. For more details, see the description of tk_get_mpf .

4.6.1.5 tk_rel_mpf - Release Fixed-size Memory Block

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_rel_mpf(ID mpfid, void *blf);

Parameter

ID	mpfid	Memory Pool ID	Fixed-size memory pool ID
void*	blf	Block Start Address	Memory block start address

Return Parameter

ER	arad	Error Code	Error code
EK	ercd	EHOI Code	EHOI COGE

Error Code

E_OK Normal completion

E_ID Invalid ID number (mpfid is invalid or cannot be used)

E NOEXS Object does not exist (the fixed-size memory pool specified in mpfid does not exist)

E_PAR Parameter error (blf is invalid, or block returned to wrong memory pool)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

Returns the memory block specified in blf to the fixed-size memory pool specified in mpfid.

Executing tk_rel_mpf may enable memory block acquisition by another task waiting to allocate memory from the memory pool specified in mpfid, releasing the WAITING state of that task.

When a memory block is returned to a fixed-size memory pool, it must be the same fixed-size memory pool from which the block was allocated. If an attempt to return a memory block to a different memory pool is detected, error code E_PAR is returned. Whether this error detection is performed or not is implementation-dependent.

4.6.1.6 tk_ref_mpf - Reference Fixed-size Memory Pool Status

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_ref_mpf(ID mpfid, T_RMPF *pk_rmpf);

Parameter

mpfid Memory Pool ID Fixed-size memory pool ID T RMPF* pk_rmpf Packet to Return Memory Pool Pointer to the area to return the Status

memory pool status

Return Parameter

ER Error Code Error code ercd

pk rmpf Detail:

void* exinf Extended Information Extended information ID wtsk Waiting Task ID Waiting task ID frbcnt Free Block Count Free block count SZ(Other implementation-dependent parameters may be added beyond this point.)

Error Code

E OK Normal completion

 E_{ID} Invalid ID number (mpfid is invalid or cannot be used)

E_NOEXS Object does not exist (the fixed-size memory pool specified in mpfid does not exist)

E_PAR Parameter error (invalid pk_rmpf)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

References the status of the fixed-size memory pool specified in mpfid, passing in return parameters the current free block count (frbcnt), waiting task ID (wtsk), and extended information (exinf).

wtsk indicates the ID of a task waiting for memory block allocation from this fixed-size memory pool. If multiple tasks are waiting for the fixed-size memory pool, the ID of the task at the head of the queue is returned. If there are no waiting tasks, wtsk = 0 is returned.

If the fixed-size memory pool specified with tk ref mpf does not exist, error code E NOEXS is returned.

At least one of frbcnt = 0 and wtsk = 0 is always true for this system call.

Additional Notes

Whereas frsz returned by tk_ref_mpl gives the total free memory size in bytes, frbcnt returned by tk_ref_mpl gives the number of unused memory blocks.

4.6.2 Variable-size Memory Pool

A variable-size memory pool is an object for dynamically managing memory blocks of any size. Functions are provided for creating and deleting a variable-size memory pool, allocating and returning memory blocks in a variable-size memory pool, and referencing the status of a variable-size memory pool. A variable-size memory pool is an object identified by an ID number. The ID number for the variable-size memory pool is called a variable-size memory pool ID.

A variable-size memory pool has a memory space used as the variable-size memory pool (called a variable-size memory pool area or simply memory pool area), and a queue for tasks waiting for memory block allocation. A task wanting to allocate a memory block from a variable-size memory pool that lacks sufficient available memory space goes to WAITING state for variable-size memory block until memory blocks are returned to the pool. A task in this state is put in the task queue of the variable-size memory pool.

Additional Notes

When tasks are waiting for memory block allocation from a variable-size memory pool, they are served in queued order. If, for example, Task A requesting a 400-byte memory block from a variable-size memory pool is queued along with Task B requesting a 100-byte block, in A-B order, then even if 200-byte block of space are free, Task B is made to wait until Task A has acquired the requested memory block.

4.6.2.1 tk_cre_mpl - Create Variable-size Memory Pool

C Language Interface

#include <tk/tkernel.h>

ID mplid = tk_cre_mpl(CONST T_CMPL *pk_cmpl);

Parameter

CONST T_CMPL* pk_cmpl Packet to Create Memory Information about the Pool variable-size memory pool to be created

pk_cmpl Detail:

void* exinf **Extended Information** Extended information ATR mplatr Memory Pool Attribute Memory pool attribute Memory Pool Size SZ mplsz Memory pool size (in bytes) UB DS Object name dsname[8] DS object name void* bufptr **Buffer Pointer** User buffer pointer

(Other implementation-dependent parameters may be added beyond this point.)

Return Parameter

ID mplid Memory Pool ID Variable-size memory pool ID or Error Code Error code

Error Code

E_NOMEM Insufficient memory (memory for control block or memory pool area cannot be

allocated

E_LIMIT Number of variable-size memory pools exceeds the system limit

E_RSATR Reserved attribute (mplatr is invalid or cannot be used)

E PAR Parameter error: (pk cmpl is invalid, mplsz is negative or invalid, or bufptr is illegal)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

TK_SUPPORT_USERBUF Support for specifying TA_USERBUF for variable-size memory

pool attribute

TK_SUPPORT_AUTOBUF Automatic buffer allocation is supported (by not specifying

TA_USERBUF to variable-size memory pool attribute)

TK_SUPPORT_DISWAI Support for specifying TA_NODISWAI (reject request to disable

wait) to variable-size memory pool attribute

TK_SUPPORT_DSNAME Support for specifying TA_DSNAME for variable-size memory pool

attribute

Description

Creates a variable-size memory pool, assigning to it a variable-size memory pool ID. This system call allocates a memory space for use as a memory pool, based on the information in parameter mplsz, and assigns a control block to the memory pool.

exinf can be used freely by the user to set miscellaneous information about the created memory pool. The information set in this parameter can be referenced by tk_ref_mpl. If a larger area is needed for indicating user information, or if the information may need to be changed after the message buffer is created, this can be done by allocating separate memory for this purpose and putting the memory packet address in exinf. The kernel pays no attention to the contents of exinf.

mplatr indicates system attributes in its lower bits and implementation-dependent attributes in its higher bits. The system attribute part of mplatr is as follows.

TA_TFIFO

Tasks waiting for memory allocation are queued in FIFO order
TA_TPRI

Tasks waiting for memory allocation are queued in priority order
Memory access privilege is set to protection level n

TA DSNAME Specifies DS object name

TA USERBUF Support of user-specified memory area as memory pool area

TA_NODISWAI Disabling of wait by tk_dis_wai is prohibited

```
#define TA TFIF0
                         0x00000000
                                          /* manage task queue by FIFO */
#define TA TPRI
                         0 x 0 0 0 0 0 0 0 1
                                          /* manage task queue by priority */
#define TA USERBUF
                         0x00000020
                                          /* Use user-specified buffer */
#define TA DSNAME
                         0x00000040
                                          /* DS object name */
#define TA NODISWAI
                         0x00000080
                                          /* reject request to disable wait */
#define TA RNG0
                         0x00000000
                                          /* protection level 0 */
#define TA RNG1
                         0x00000100
                                          /* protection level 1 */
#define TA RNG2
                         0x00000200
                                          /* protection level 2 */
#define TA RNG3
                         0x00000300
                                          /* protection level 3 */
```

The queuing order of tasks waiting for memory block allocation from a memory pool can be specified in TA_TFIFO or TA_TPRI. If the attribute is TA_TFIFO, tasks are ordered by FIFO, whereas TA_TPRI specifies queuing of tasks in order of their priority setting.

When tasks are queued waiting for memory allocation, memory is allocated in the order of queuing. Even if other tasks in the queue are requesting smaller amounts of memory than the task at the head of the queue, they do not acquire memory blocks before the first task. If, for example, Task A requesting a 400-byte memory block from a variable-size memory pool is queued along with Task B requesting a 100-byte block, in A-B order, then even if 200-byte block of space are freed by tk_rel_mpl of another task, Task B is made to wait until Task A has acquired the requested memory block.

TA_RNGn is specified to limit the protection levels from which memory can be accessed. Only tasks running at the same or higher protection level than the one specified can access the allocated memory. If a task running at a lower protection level attempts an access, a CPU protection fault exception is raised. For example, memory allocated from a memory pool specified as TA_RNG1 can be accessed by tasks running at levels TA_RNG0 or TA_RNG1, but not by tasks running at levels TA_RNG2 or TA_RNG3.

When TA_DSNAME is specified, dsname is valid and specifies the DS object name. DS object name is used to identify objects by debugger, and it is handled only by T-Kernel/DS API, td_ref_dsname and td_set_dsname. For more details, see the description of td_ref_dsname and td_set_dsname. If TA_DSNAME is not specified, dsname is ignored. Then td_ref_dsname and td_set_dsname return E_OBJ error.

Additional Notes

If the task at the head of the queue waiting for memory allocation has its WAITING state forcibly released, or if a different task becomes the first in the queue as a result of a change in task priority, memory allocation is attempted to that task. If memory can be allocated, the WAITING state of that task is released. In this way it is possible under some circumstances for memory allocation to take place and task WAITING state to be released even when memory is not released by tk_rel_mpl.

For the sake of portability, the TA_RNGn attribute must be accepted even by a system with a single CPU's operating mode. It is possible, for example, to handle all TA_RNGn as equivalent to TA_RNG0, but error must not be returned.

Rationale for the Specification

The capability of creating multiple variable-size memory pools can be used for memory allocation as needed for error handling or in emergent situations in programming, etc.

Porting Guideline

The T-Kernel 2.0 specification does not define TA_USERBUF and its associated notion of bufptr. So if this feature is used, a modification is necessary to port the software to T-Kernel 2.0. However, if mplsz is properly set already, simply removing TA_USERBUF and bufptr will complete the modification for porting.

4.6.2.2 tk_del_mpl - Delete Variable-size Memory Pool

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_del_mpl(ID mplid);

Parameter

ID mplid Memory Pool ID Variable-size memory pool ID

Return Parameter

ER ercd Error Code Error code

Error Code

E_OK Normal completion

E_ID Invalid ID number (mplid is invalid or cannot be used)

E_NOEXS Object does not exist (the variable-size memory pool specified in mplid does not

exist)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

Deletes the variable-size memory pool specified in mplid.

No check or notification is made as to whether there are tasks using memory allocated from this memory pool. The system call completes normally even if not all blocks have been returned to the pool.

Issuing this system call releases the memory pool ID number, the control block memory space and the memory pool space itself.

This system call completes normally even if there are tasks waiting for memory block allocation from the deleted memory pool, but error code E_DLT is returned to the tasks in WAITING state.

4.6.2.3 tk_get_mpl - Get Variable-size Memory Block

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_get_mpl(ID mplid, SZ blksz, void **p_blk, TMO tmout);

Parameter

ID	mplid	Memory Pool ID	Variable-size memory pool ID
SZ	blksz	Memory Block Size	Memory block size (in bytes)
void**	p_blk	Pointer to Block Start Address	Pointer to the area to return the block
			start address blk
TMO	tmout	Timeout	Timeout (ms)

Return Parameter

ER	ercd	Error Code	Error code
void*	blk	Block Start Address	Memory block start address

Error Code

E_OK	Normal completion
E_ID	Invalid ID number (mplid is invalid or cannot be used)
E_NOEXS	Object does not exist (the variable-size memory pool specified in mplid does not exist)
E_PAR	Parameter error (tmout \leq (-2))
E_DLT	The object being waited for was deleted (the memory pool was deleted while waiting)
E_RLWAI	Waiting state released (tk_rel_wai received in waiting state)
E_DISWAI	Wait released due to disabling of wait
E_TMOUT	Polling failed or timeout
E_CTX	Context error (issued from task-independent portion, or in dispatch disabled state)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

Gets a memory block of size blksz (bytes) from the variable-size memory pool specified in mplid. The start address of the allocated memory block is returned in blk.

The allocated memory is not cleared to zero, and the memory block contents are indeterminate.

If memory cannot be allocated, the task issuing this system call enters WAITING state.

A maximum wait time (timeout) can be set in tmout. The time unit for tmout is the same as that for system time (= 1 ms). If the tmout time elapses before the wait release condition is met (memory space does not become available), the system call terminates, returning timeout error code E_TMOUT.

When TMO_POL=0 is set in tmout, this means 0 was specified as the timeout value, and E_TMOUT is returned without entering WAITING state even if memory cannot be allocated.

When TMO_FEVR=(-1) is set in tmout, this means infinity was specified as the timeout value, and the task continues to wait for memory allocation without timing out.

The queuing order of tasks waiting for memory block allocation is either FIFO or task priority order, depending on the memory pool attribute.

4.6.2.4 tk_get_mpl_u - Get Variable-size Memory Block (Microseconds)

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_get_mpl_u(ID mplid, SZ blksz, void **p_blk, TMO_U tmout_u);

Parameter

ID	mplid	Memory Pool ID	Variable-size memory pool ID
SZ	blksz	Memory Block Size	Memory block size (in bytes)
void'	** p_blk	Pointer to Block Start Address	Pointer to the area to return the block
			start address blk
TMC) U tmout u	Timeout	Timeout (in microseconds)

Return Parameter

ER	ercd	Error Code	Error code
void*	blk	Block Start Address	Memory block start address

Error Code

E_OK	Normal completion
E_{ID}	Invalid ID number (mplid is invalid or cannot be used)
E_NOEXS	Object does not exist (the variable-size memory pool specified in mplid does not
	exist)
E_PAR	Parameter error $(tmout_u \le (-2))$
E_DLT	The object being waited for was deleted (the memory pool was deleted while
	waiting)
E_RLWAI	Waiting state released (tk_rel_wai received in waiting state)
E_DISWAI	Wait released due to disabling of wait
E_TMOUT	Polling failed or timeout
E_CTX	Context error (issued from task-independent portion, or in dispatch disabled state)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_USEC Support of microsecond

Description

This system call takes 64-bit tmout_u in microseconds instead of the parameter tmout of tk_get_mpl.

The specification of this system call is same as that of tk_get_mpl , except that the parameter is replaced with $tmout_u$. For more details, see the description of tk_get_mpl .

4.6.2.5 tk_rel_mpl - Release Variable-size Memory Block

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_rel_mpl(ID mplid, void *blk);

Parameter

ID	mplid	Memory Pool ID	Variable-size memory pool ID
void*	blk	Block Start Address	Memory block start address

Return Parameter

ER	ercd	Error Code	Error code
EK	ercu	Effor Code	Effor code

Error Code

E_OK Normal completion

E_ID Invalid ID number (mplid is invalid or cannot be used)

E NOEXS Object does not exist (the variable-size memory pool specified in mplid does not

exist)

E_PAR Parameter error (blk is invalid, or block returned to wrong memory pool)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

Returns the memory block specified in blk to the variable-size memory pool specified in mplid.

Executing tk_rel_mpl may enable memory block acquisition by another task waiting to allocate memory from the memory pool specified in mplid, releasing the WAITING state of that task.

When a memory block is returned to a variable-size memory pool, it must be the same variable-size memory pool from which the block was allocated. If an attempt to return a memory block to a different memory pool is detected, error code E_PAR is returned. Whether this error detection is performed or not is implementation-dependent.

Additional Notes

When memory is returned to a variable-size memory pool in which multiple tasks are queued, multiple tasks may be released at the same time depending on the amount of memory returned and their requested memory size. The task precedence among tasks of the same priority after their WAITING state is released in such a case is the order in which they were queued.

4.6.2.6 tk_ref_mpl - Reference Variable-size Memory Pool Status

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_ref_mpl(ID mplid, T_RMPL *pk_rmpl);

Parameter

ID mg	plid	Memory Pool ID	Variable-size memory pool ID
T_RMPL* pl	k_rmpl	Packet to Return Memory Pool	Pointer to the area to return the
		Status	memory pool status

Return Parameter

ER	ercd	Error Code	Error code

pk rmpl Detail:

void*	exinf	Extended Information	Extended information	
ID	wtsk	Waiting Task ID	Waiting task ID	
SZ	frsz	Free Memory Size	Free memory size (in bytes)	
SZ	maxsz	Max Memory Size	Maximum memory space size (in bytes)	
(Other implementation dependent parameters may be added beyond this point)				

(Other implementation-dependent parameters may be added beyond this point.)

Error Code

E_OK	Normal completion
E_ID	Invalid ID number (mplid is invalid or cannot be used)
E_NOEXS	Object does not exist (the variable-size memory pool specified in mplid does not
	exist)
	D (' 1' 1 al

E_PAR Parameter error (invalid pk_rmpl)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

References the status of the variable-size memory pool specified in mplid, passing in return parameters the total size of free space (frsz), the maximum size of memory immediately available (maxsz), the waiting task ID (wtsk), and extended information (exinf).

wtsk indicates the ID of a task waiting for memory block allocation from this variable-size memory pool. If multiple tasks are waiting for the variable-size memory pool, the ID of the task at the head of the queue is returned. If there are no waiting tasks, wtsk = 0 is returned.

If the variable-size memory pool specified with tk_ref_mpl does not exist, error code E_NOEXS is returned.

4.7 Time Management Functions

Time management functions perform time-dependent processing. They include functions for system time management, cyclic handlers, and alarm handlers.

The generic name used in the following for cyclic handlers and alarm handlers is time event handlers.

4.7.1 System Time Management

System time is the time which a system that runs μ T-Kernel uses as timing reference for its operation. Functions are provided for system clock setting and reference, and for referencing system operating time.

System time of μ T-Kernel 3.0 starts from the epoch, January 1st 1970, 0:00:00 (UTC). It is represented either in the elapsed milliseconds or in microseconds. System time is set using tk_set_utc or tk_set_utc_u. It can be referenced by tk_get_utc or tk_get_utc_u.

Additional Notes

System time epoch in μ T-Kernel 3.0 is 0:00:00, January 1, 1970 (UTC). The epoch, 0:00:00, January 1, 1970 (UTC), is the same epoch used by UNIX operating systems that conform to the POSIX standard.

4.7.1.1 tk_set_utc - Set System Time

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_set_utc(CONST SYSTIM *pk_tim);

Parameter

CONST SYSTIM*	pk_tim	Packet of Current Time	Packet indicating current time (ms)
pk_tim Detail:			
W	hi	High 32 bits	Higher 32 bits of current time for setting the system time
UW	lo	Low 32 bits	Lower 32 bits of current time for setting the system time
Return Parameter			

Error Code

Error code

Error Code

ER

E_OK Normal completion

ercd

E_PAR Parameter error (pk_tim is invalid, or time setting is invalid)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_UTC

Support of UNIX time

Description

Sets the system clock to the value specified in pk_tim .

System time is expressed as cumulative milliseconds from 0:00:00, January 1, 1970 (UTC).

Additional Notes

The relative time specified in RELTIM or TMO does not change even if the system clock is changed by calling tk_set_utc during system operation. For example, if a timeout is set to elapse in 60 seconds and the system

clock is advanced by 60 seconds by tk_set_utc while waiting for the timeout, the timeout occurs not immediately but 60 seconds after it was set. Instead, tk_set_utc changes the system time at which the timeout occurs.

The time specified in pk_tim for tk_set_utc is not restricted to the resolution of the timer interrupt cycle. But the time that is read later by tk_get_utc changes according to the time resolution of the timer interrupt cycle. For example, in the system where the timer interrupt cycle is 10 milliseconds, if the time of 10005 (ms) is specified in tk_set_utc , then the time obtained later by tk_get_utc changes as follows: 10005 (ms) \rightarrow 10015 (ms) \rightarrow 10025 (ms).

4.7.1.2 tk_set_utc_u - Set Time (Microseconds)

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_set_utc_u(SYSTIM_U tim_u);

Parameter

SYSTIM U tim u Current Time Current time (in microseconds)

Return Parameter

ER ercd Error Code Error code

Error Code

E_OK Normal completion

E_PAR Parameter error (tim_u is invalid, or time setting is invalid)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_UTC Support of UNIX time
TK_SUPPORT_USEC Support of microsecond

Description

This system call takes 64-bit tim_u in microseconds instead of the parameter pk_tim of tk_set_utc. In the parameter tim_u of this API, system time is expressed as cumulative microseconds from 0:00:00, January 1, 1970 (UTC).

Whereas the parameter pk_tim of tk_set_utc is passed in packet using the structure SYSTIM, the parameter tim_u of tk_set_utc_u is passed by value (not packet) using the 64-bit signed integer SYSTIM_U.

The specification of this system call is same as that of tk_set_utc , except the above-mentioned point. For more details, see the description of tk_set_utc .

4.7.1.3 tk_set_tim - Set System Time (TRON)

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_set_tim(CONST SYSTIM *pk_tim);

Parameter

CONST SYSTIM*	pk_tim	Packet of Current Time	Packet indicating current time (ms)
pk_tim Detail:			
W	hi	High 32 bits	Higher 32 bits of current time for setting the system time
UW	lo	Low 32 bits	Lower 32 bits of current time for setting the system time
Return Parameter			
ER	ercd	Error Code	Error code

Error Code

E_OK Normal completion

E_PAR Parameter error (pk_tim is invalid, or time setting is invalid)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_TRONTIME

Support of TRON time

Description

Sets the system clock to the value specified in pk_tim. In the parameter hi and lo of this API, system time is expressed as cumulative milliseconds from 0:00:00 (GMT), January 1, 1985.

Additional Notes

tk_set_tim is very similar to tk_set_utc. However, it uses the time system with a different epoch. tk_set_tim is an API to keep compatibility with legacy μ T-Kernel or T-Kernel specifications.

4.7.1.4 tk_set_tim_u - Set Time (TRON, Microseconds)

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_set_tim_u(SYSTIM_U tim_u);

Parameter

SYSTIM U tim u Current Time Current time (in microseconds)

Return Parameter

ER ercd Error Code Error code

Error Code

E_OK Normal completion

E_PAR Parameter error (tim_u is invalid, or time setting is invalid)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_TRONTIME Support of TRON time
TK_SUPPORT_USEC Support of microsecond

Description

This system call takes 64-bit tim_u in microseconds instead of the parameter pk_tim of tk_set_tim. In the parameter tim_u of this API, system time is expressed as cumulative microseconds from 0:00:00 (GMT), January 1, 1985.

Whereas the parameter pk_tim of tk_set_tim is passed in packet using the structure SYSTIM, the parameter tim_u of tk_set_tim_u is passed by value (not packet) using the 64-bit signed integer SYSTIM_U.

The specification of this system call is same as that of tk_set_tim , except the above-mentioned point. For more details, see the description of tk_set_tim .

Additional Notes

tk_set_tim_u is very similar to tk_set_utc_u. However, it uses the time system with a different epoch. tk_set_tim_u is an API to keep compatibility with legacy μ T-Kernel or T-Kernel specifications.

4.7.1.5 tk_get_utc - Get System Time

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_get_utc(SYSTIM *pk_tim);

Parameter

 $SYSTIM^* \ \ \mathsf{pk_tim} \qquad \qquad \mathsf{Packet} \ \mathsf{of} \ \mathsf{Current} \ \mathsf{Time} \qquad \qquad \mathsf{Pointer} \ \mathsf{to} \ \mathsf{the} \ \mathsf{area} \ \mathsf{to} \ \mathsf{return} \ \mathsf{the} \ \mathsf{current}$

time (ms)

Return Parameter

ER ercd Error Code Error code

pk tim Detail:

W hi High 32 bits Higher 32 bits of current time of the

system time

UW lo Low 32 bits Lower 32 bits of current time of the

system time

Error Code

E_OK Normal completion

E_PAR Parameter error (pk_tim is invalid)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_UTC

Support of UNIX time

Description

Reads the current value of the system clock and returns in it pk_tim .

System time is expressed as cumulative milliseconds from 0:00:00, January 1, 1970 (UTC).

Additional Notes

The resolution of the current system time read by this API varies depending on the time resolution of the timer interrupt interval (cycle). Hence, this API cannot be used to get the elapsed time that is shorter than

the timer interrupt interval (cycle). For more details, see the Additional Notes of tk_set_utc . To find out the elapsed time shorter than the timer interrupt interval (cycle), use the return parameter ofs of $tk_get_utc_u$ or td_get_utc .

4.7.1.6 tk_get_utc_u - Get System Time (Microseconds)

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_get_utc_u(SYSTIM_U *tim_u, UW *ofs);

Parameter

SYSTIM_U*	tim_u	Time	Pointer to the area to return the
			current time (in microseconds)
UW*	ofs	Offset	Pointer to the area to return the
			return parameter ofs

Return Parameter

ER	ercd	Error Code	Error code
SYSTIM_U	tim_u	Time	Current time (in microseconds)
UW	ofs	Offset	Relative elapsed time from tim_u (in
			nanoseconds)

Error Code

E_OK	Normal completion
E_PAR	Parameter error (invalid tim_u or ofs)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_UTC	Support of UNIX time
TK_SUPPORT_USEC	Support of microsecond

Description

This system call takes 64-bit tim_u in microseconds instead of the return parameter pk_tim of tk_get_utc . System time is expressed as cumulative microseconds from 0:00:00 (UTC), January 1, 1970. It also includes the return parameter ofs that returns the relative time in nanoseconds.

 tim_u has the resolution of time interrupt interval (cycle), but even more precise time information is obtained in ofs as the elapsed time from tim_u in nanoseconds. The resolution of ofs is implementation-dependent, but generally is the resolution of hardware timer.

If ofs = NULL, the information of ofs is not stored.

The specification of this system call is same as that of tk_get_utc, except the above-mentioned point. In addition, the specification of this system call is the same as that of td_get_utc, except that the data type of

tim_u is SYSTIM_U. For more details, see the description of tk_get_utc and td_get_utc.

4.7.1.7 tk_get_tim - Get System Time (TRON)

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_get_tim(SYSTIM *pk_tim);

Parameter

 $SYSTIM^* \ \ \mathsf{pk_tim} \qquad \qquad \mathsf{Packet} \ \mathsf{of} \ \mathsf{Current} \ \mathsf{Time} \qquad \qquad \mathsf{Pointer} \ \mathsf{to} \ \mathsf{the} \ \mathsf{area} \ \mathsf{to} \ \mathsf{return} \ \mathsf{the} \ \mathsf{current}$

time (ms)

Return Parameter

ER ercd Error Code Error code

pk tim Detail:

W hi High 32 bits Higher 32 bits of current time of the

system time

UW lo Low 32 bits Lower 32 bits of current time of the

system time

Error Code

E_OK Normal completion

E_PAR Parameter error (pk_tim is invalid)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

 ${\sf TK_SUPPORT_TRONTIME}$

Support of TRON time

Description

Reads the current value of the system clock and returns in it pk_tim . In the return parameter hi and lo of this API, system time is expressed as cumulative milliseconds from 0:00:00 (GMT), January 1, 1985.

Additional Notes

The resolution of the current system time read by this API varies depending on the time resolution of the timer interrupt interval (cycle). Hence, this API cannot be used to get the elapsed time that is shorter than

the timer interrupt interval (cycle). For more details, see the Additional Notes of tk_set_utc . To find out the elapsed time shorter than the timer interrupt interval (cycle), use the return parameter ofs of $tk_get_tim_u$ or td_get_tim .

 tk_get_tim is very similar to tk_get_utc . However, it uses the time system with a different epoch. tk_get_tim is an API to keep compatibility with legacy μ T-Kernel or T-Kernel specifications.

4.7.1.8 tk_get_tim_u - Get System Time (TRON, Microseconds)

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_get_tim_u(SYSTIM_U *tim_u, UW *ofs);

Parameter

SYSTIM_U*	tim_u	Time	Pointer to the area to return the
			current time (in microseconds)
UW*	ofs	Offset	Pointer to the area to return the
			return parameter ofs

Return Parameter

ER	ercd	Error Code	Error code
SYSTIM_U	tim_u	Time	Current time (in microseconds)
UW	ofs	Offset	Relative elapsed time from tim_u (in
			nanoseconds)

Error Code

E_OK	Normal completion	
E_PAR	Parameter error (invalid tim_u or ofs)	

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_TRONTIME	Support of TRON time
TK_SUPPORT_USEC	Support of microsecond

Description

This system call takes 64-bit tim_u in microseconds instead of the return parameter pk_tim of tk_get_tim. In the return parameter tim_u of this API, system time is expressed as cumulative microseconds from 0:00:00 (GMT), January 1, 1985. It also includes the return parameter ofs that returns the relative time in nanoseconds.

 tim_u has the resolution of time interrupt interval (cycle), but even more precise time information is obtained in ofs as the elapsed time from tim_u in nanoseconds. The resolution of ofs is implementation-dependent, but generally is the resolution of hardware timer.

If ofs = NULL, the information of ofs is not stored.

The specification of this system call is same as that of tk_get_tim, except the above-mentioned point. In addition, the specification of this system call is the same as that of td_get_tim, except that the data type of

tim_u is SYSTIM_U. For more details, see the description of tk_get_tim and td_get_tim.

Additional Notes

 $tk_get_tim_u$ is very similar to $tk_get_utc_u$. However, it uses the time system with a different epoch. $tk_get_tim_u$ is an API to keep compatibility with legacy μ T-Kernel or T-Kernel specifications.

4.7.1.9 tk_get_otm - Get Operating Time

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_get_otm(SYSTIM *pk_tim);

Parameter

 $SYSTIM^* \ \ pk_tim \qquad \qquad Packet of Operating Time \qquad \qquad Pointer to the area to return the$

operating time (ms)

Return Parameter

ER ercd Error Code Error code

pk tim Detail:

W hi High 32 bits Higher 32 bits of the system operating

time

UW lo Low 32 bits Lower 32 bits of the system operating

time

Error Code

E_OK Normal completion

E_PAR Parameter error (pk_tim is invalid)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

Gets the system operating time (up time).

System operating time, unlike system time, indicates the length of time elapsed linearly since the system was started. It is not affected by clock settings made by tk_set_utc or tk_set_tim .

System operating time must have the same precision as system time.

4.7.1.10 tk_get_otm_u - Get Operating Time (Microseconds)

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_get_otm_u(SYSTIM_U *tim_u, UW *ofs);

Parameter

SYSTIM_U*	tim_u	Time	Pointer to the area to return the
Ū₩*	ofs	Offset	operating time (in microseconds) Pointer to the area to return the
OW	013	Oliset	return parameter ofs

Return Parameter

ER	ercd	Error Code	Error Codes
SYSTIM_U	tim_u	Time	Operating time (in microseconds)
UW	ofs	Offset	Relative elapsed time from tim_u (in
			nanoseconds)

Error Code

E_OK	Normal completi	on
E_PAR	Parameter error ((invalid tim_u or ofs)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_USEC Support of microsecond

Description

This system call takes 64-bit tim_u in microseconds instead of the return parameter pk_tim of tk_get_otm. It also includes the return parameter ofs that returns the relative time in nanoseconds.

 tim_u has the resolution of time interrupt interval (cycle), but even more precise time information is obtained in ofs as the elapsed time from tim_u in nanoseconds. The resolution of ofs is implementation-dependent, but generally is the resolution of hardware timer.

If ofs = NULL is set, the information of ofs is not stored.

The specification of this system call is same as that of tk_get_otm, except the above-mentioned point. In addition, the specification of this system call is the same as that of td_get_otm, except that the data type of tim_u is SYSTIM_U. For more details, see the description of tk_get_otm and td_get_otm.

4.7.2 Cyclic Handler

A cyclic handler is a time event handler started at regular intervals. Cyclic handler functions are provided for creating and deleting a cyclic handler, activating and deactivating a cyclic handler operation, and referencing cyclic handler status. A cyclic handler is an object identified by an ID number. The ID number for the cyclic handler is called a cyclic handler ID.

The time interval at which a cyclic handler is started (cycle time) and the cycle phase are specified for each cyclic handler when it is created. When a cyclic handler operation is requested, T-Kernel determines the time at which the cyclic handler should next be started based on the cycle time and cycle phase set for it. When a cyclic handler is created, the time when it is to be started next is the time of its creation plus the cycle phase. When the time comes to start a cyclic handler, exinf, containing extended information about the cyclic handler, is passed to it as a starting parameter. The time when the cyclic handler is started plus its cycle time becomes the next start time. Sometimes when a cyclic handler is activated, the next start time will be newly set.

In principle the cycle phase of a cyclic handler is no longer than its cycle time. The behavior is implementation-dependent when the cycle phase is made longer than the cycle time.

A cyclic handler has two activation states, active and inactive. While a cyclic handler is inactive, it is not started even when its start time arrives, although calculation of the next start time does take place. When a system call for activating a cyclic handler is called (tk_sta_cyc), the cyclic handler goes to active state, and the next start time is decided if necessary. When a system call for deactivating a cyclic handler is called (tk_stp_cyc), the cyclic handler goes to inactive state. Whether a cyclic handler upon creation is active or inactive is decided by a cyclic handler attribute.

The cycle phase of a cyclic handler is a relative time specifying the first time the cyclic handler is to be started, in relation to the time when the system call creating it was invoked. The cycle time of a cyclic handler is likewise a relative time, specifying the next time the cyclic handler is to be started in relation to the time it should have started (not the time it started). For this reason, the intervals between times the cyclic handler is started will individually be shorter than the cycle time in some cases, but their average over a longer time span will match the cycle time.

Additional Notes

Actual time resolution in μ T-Kernel time management functions processing uses one that is specified by the "timer interrupt interval" (TTimPeriod) in Section 5.6.2, "Standard System Configuration Information". It also means that a cyclic handler or an alarm handler is actually started at the time according to the time resolution provided by the timer interrupt interval (TTimPeriod). For this reason, the cyclic handler is actually started at the time of timer interrupt occurrence immediately after the time when the cyclic handler should be started. A general μ T-Kernel implementation checks if a cyclic handler or an alarm handler that is to be started within the processing of timer interrupt exists, and then starts them as necessary.

4.7.2.1 tk_cre_cyc - Create Cyclic Handler

C Language Interface

#include <tk/tkernel.h>

ID cycid = tk_cre_cyc(CONST T_CCYC *pk_ccyc);

Parameter

CONST T_CCYC*	pk_ccyc	Packet to Create Cyclic	Cyclic handler definition
		Handler	information

pk_ccyc Detail:

void*	exinf	Extended Information	Extended information
ATR	cycatr	Cyclic Handler Attribute	Cyclic handler attribute
FP	cychdr	Cyclic Handler Address	Cyclic handler address
RELTIM	cyctim	Cycle Time	Interval of cyclic start (ms)
RELTIM	cycphs	Cycle Phase	Cycle phase (ms)
UB	dsname[8]	DS Object name	DS object name
(Other implementa	tion-dependent p	arameters may be added beyo	nd this point.)

Return Parameter

ID	cycid		Cyclic Handler ID	Cyclic handler ID
		or	Error Code	Error code

Error Code

E_NOMEM In	usufficient memory (memory for control block cannot be allocated)
E_LIMIT N	umber of cyclic handlers exceeds the system limit
E_RSATR Re	eserved attribute (cycatr is invalid or cannot be used)
E_PAR Pa	arameter error (pk_ccyc, cychdr, cyctim, or cycphs is invalid or cannot be used)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

TK_SUPPORT_ASM	Support for specifying TA_ASM for cyclic handler attribute
TK_SUPPORT_DSNAME	Support for specifying TA_DSNAME for cyclic handler attribute

Description

Creates a cyclic handler, assigning to it a cyclic handler ID. This is performed by assigning a control block for the generated cyclic handler.

A cyclic handler is a handler running at specified intervals as a task-independent portion.

exinf can be used freely by the user to set miscellaneous information about the created cyclic handler. The information set in this parameter can be referenced by tk_ref_cyc. If a larger area is needed for indicating user information, or if the information may need to be changed after the message buffer is created, this can be done by allocating separate memory for this purpose and putting the memory packet address in exinf. The kernel pays no attention to the contents of exinf.

cycatr indicates system attributes in its lower bits and implementation-dependent attributes in its higher bits. The system attribute part of cycatr is as follows.

```
cycatr := (TA_ASM || TA_HLNG) | [TA_STA] | [TA_PHS] | [TA_DSNAME]
```

```
TA_ASM
The handler is written in assembly language
TA_HLNG
The handler is written in high-level language
TA_STA
Activate immediately upon cyclic handler creation
TA_PHS
Save the cycle phase
TA_DSNAME
Specifies DS object name
```

```
#define TA_ASM 0x00000000 /* assembly language program */
#define TA_HLNG 0x00000001 /* high-level language program */
#define TA_STA 0x00000002 /* activate cyclic handler */
#define TA_PHS 0x00000004 /* save cyclic handler cycle phase */
#define TA_DSNAME 0x00000040 /* DS object name */
```

cychdr specifies the cyclic handler start address, cyctim the cycle time, and cycphs the cycle phase.

When the TA_HLNG attribute is specified, the cyclic handler is started via a high-level language support routine. The high-level language support routine takes care of saving and restoring register values. The cyclic handler terminates by a simple return from a function. The cyclic handler takes the following format when the TA_HLNG attribute is specified.

The cyclic handler format when the TA_ASM attribute is specified is implementation-dependent, but exinf must be passed in a starting parameter.

cycphs indicates the length of time until the cyclic handler is initially started after being created by tk_cre_cyc. Thereafter it is started periodically at the interval set in cyctim. If zero is specified in cycphs, the cyclic handler starts immediately after it is created. Zero cannot be specified in cyctim.

The starting of the cyclic handler for the nth time occurs after at least cycphs + cyctim* (n-1) time has elapsed from the cyclic handler creation.

When TA_STA is specified, the cyclic handler goes to active state immediately on creation, and starts at the intervals noted above. If TA_STA is not specified, the cycle time is calculated but the cyclic handler is not actually started.

When TA_PHS is specified, then even if tk_sta_cyc is called activating the cyclic handler, the cycle time is not reset, and the cycle time calculated as above from the time of cyclic handler creation continues to apply. If TA_PHS is not specified, calling tk_sta_cyc resets the cycle time and the cyclic handler is started at cyctim intervals measured from the time tk_sta_cyc was called. Note that the resetting of cycle time by tk_sta_cyc does not affect cycphs. In this case the starting of the cyclic handler for the nth time occurs after at least cyctim * n has elapsed from the calling of tk_sta_cyc.

Even if a system call is invoked from a cyclic handler and this causes the task in RUNNING state up to that time to go to another state, with a different task going to RUNNING state, dispatching (task switching) does not occur while the cyclic handler is running. Completion of execution by the cyclic handler has precedence even if dispatching is necessary; only when the cyclic handler terminates does the dispatch take place. In other words, a dispatch request that is generated while a cyclic handler is running is not processed immediately, but is delayed until the cyclic handler terminates. This is called delayed dispatching.

A cyclic handler runs as a task-independent portion. As such, it is not possible to call in a cyclic handler a system call that can enter WAITING state, or one that is intended for the invoking task.

When TA_DSNAME is specified, dsname is valid and specifies the DS object name. DS object name is used to identify objects by debugger, and it is handled only by T-Kernel/DS API, td_ref_dsname and td_set_dsname. For more details, see the description of td_ref_dsname and td_set_dsname. If TA_DSNAME is not specified, dsname is ignored. Then td_ref_dsname and td_set_dsname return E_OBJ error.

Additional Notes

Once a cyclic handler is defined, it continues to run at the specified cycles either until tk_stp_cyc is called to deactivate it or until it is deleted. There is no parameter to specify the number of cycles in tk_cre_cyc.

When multiple time event handlers or interrupt handlers operate at the same time, it is implementation-dependent whether to have them run serially (after one handler exits, another starts) or in a nested manner (one handler operation is suspended, another runs, and when that one finishes the previous one resumes). In either case, since time event handlers and interrupt handlers run as task-independent portion, the principle of delayed dispatching applies.

If 0 is specified in cycphs, the first startup of the cyclic handler is executed immediately after this system call execution. However, depending on the implementation, the first startup (execution) of the cyclic handler may be executed while processing this system call, instead of immediately after the completion of this system call execution. In such case, the interrupt disabled or other state in the cyclic handler may differ from the state at the second and subsequent ordinary startups. In addition, when 0 is set to cycphs, the first startup of the cyclic handler is executed without waiting for a timer interrupt, that is, regardless of the timer interrupt interval. This behavior also differs from the second and subsequent startups of the cyclic handler, and from the startup of the cyclic handler with cycphs set to other than 0.

4.7.2.2 tk_cre_cyc_u - Create Cyclic Handler (Microseconds)

C Language Interface

#include <tk/tkernel.h>

ID cycid = tk_cre_cyc_u(CONST T_CCYC_U *pk_ccyc_u);

Parameter

CONST T_CCYC_U* pk_ccyc_u Packet to Create Cyclic Cyclic handler definition Handler information

pk_ccyc_u Detail:

void*	exinf	Extended Information	Extended information
ATR	cycatr	Cyclic Handler Attribute	Cyclic handler attribute
FP	cychdr	Cyclic Handler Address	Cyclic handler address
RELTIM_U	cyctim_u	Cycle Time	Interval of cyclic start (in
		-	microseconds)
RELTIM_U	cycphs_u	Cycle Phase	Cycle phase (in microseconds)
UB	dsname[8]	DS Object name	DS object name

(Other implementation-dependent parameters may be added beyond this point.)

Return Parameter

ID cyclic Handler ID Cyclic handler ID or Error Code Error code

Error Code

E_NOMEM	Insufficient memory (memory for control block cannot be allocated)
E_LIMIT	Number of cyclic handlers exceeds the system limit
E_RSATR	Reserved attribute (cycatr is invalid or cannot be used)
E_PAR	Parameter error (pk_ccyc_u, cychdr, cyctim_u, or cycphs_u is invalid or cannot be
	used)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_USEC Support of microsecond

Additionally, the following service profile items are related to this system call.

TK_SUPPORT_ASM Support for specifying TA_ASM for cyclic handler attribute

TK_SUPPORT_DSNAME

Support for specifying TA_DSNAME for cyclic handler attribute

Description

This system call takes 64-bit cyctim_u and cycphs_u in microseconds instead of the parameters cyctim and cycphs of tk_cre_cyc.

The specification of this system call is same as that of tk_cre_cyc, except that the parameter is replaced with cyctim_u and cycphs_u. For more details, see the description of tk_cre_cyc.

4.7.2.3 tk_del_cyc - Delete Cyclic Handler

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_del_cyc(ID cycid);

Parameter

ID cyclic Handler ID Cyclic handler ID

Return Parameter

ER ercd Error Code Error code

Error Code

E_OK Normal completion

E_ID Invalid ID number (cycid is invalid or cannot be used)

E_NOEXS Object does not exist (the cyclic handler specified in cycld does not exist)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

Deletes a cyclic handler.

4.7.2.4 tk_sta_cyc - Start Cyclic Handler

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_sta_cyc(ID cycid);

Parameter

ID cyclic Handler ID Cyclic handler ID

Return Parameter

ER ercd Error Code Error code

Error Code

E_OK Normal completion

E_ID Invalid ID number (cycid is invalid or cannot be used)

E_NOEXS Object does not exist (the cyclic handler specified in cycld does not exist)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

None.

Description

Activates a cyclic handler, putting it in active state.

If the TA_PHS attribute was specified, the cycle time of the cyclic handler is not reset when the cyclic handler goes to active state. If it was already in active state when this system call was executed, it continues unchanged in active state.

If the TA_PHS attribute was not specified, the cycle time is reset when the cyclic handler goes to active state. If it was already in active state, it continues in active state but its cycle time is reset. In this case, the next time the cyclic handler starts is after cyclim has elapsed.

4.7.2.5 tk_stp_cyc - Stop Cyclic Handler

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_stp_cyc(ID cycid);

Parameter

ID cyclic Handler ID Cyclic handler ID

Return Parameter

ER ercd Error Code Error code

Error Code

E_OK Normal completion

E_ID Invalid ID number (cycid is invalid or cannot be used)

E_NOEXS Object does not exist (the cyclic handler specified in cycld does not exist)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

None.

Description

Deactivates a cyclic handler, putting it in inactive state. It the cyclic handler was already in inactive state, this system call has no effect (no operation).

4.7.2.6 tk_ref_cyc - Reference Cyclic Handler Status

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_ref_cyc(ID cycid, T_RCYC *pk_rcyc);

Parameter

ID **cyclic** Handler ID Cyclic handler ID

T RCYC* pk rcyc Packet to Return Cyclic Pointer to the area to return the cyclic

Handler Status handler status

Return Parameter

ER ercd Error Code Error code

pk_rcyc Detail:

void* exinf Extended Information Extended information

RELTIM lfttim Left Time Time remaining until the next handler

starts (ms)

UINT cycstat Cyclic Handler Status Cyclic handler activation state

(Other implementation-dependent parameters may be added beyond this point.)

Error Code

E_OK Normal completion

E_ID Invalid ID number (cycid is invalid or cannot be used)

E_NOEXS Object does not exist (the cyclic handler specified in cyclid does not exist)

E_PAR Parameter error (invalid pk_rcyc)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

None.

Description

References the status of the cyclic handler specified in cycid, passing in return parameters the cyclic handler activation state (cycstat), the time remaining until the next start (lfttim), and extended information (exinf).

The following information is returned in cycstat.

cycstat := (TCYC_STP | TCYC_STA)

```
#define TCYC_STP 0x00 /* cyclic handler is inactive */ #define TCYC_STA 0x01 /* cyclic handler is active */
```

lfttim returns the remaining time (milliseconds) until the next time when the cyclic handler is invoked. It does not matter whether the cyclic handler is currently running or stopped.

exinf returns the extended information specified as a parameter when the cyclic handler is generated.exinf is passed to the cyclic handler as a parameter.

If the cyclic handler specified in cycld does not exist for, error code E_NOEXS is returned.

The time remaining lfttim returned in the cyclic handler status information (T_RCYC) is a value rounded to milliseconds. To know the value in microseconds, call tk_ref_cyc_u.

4.7.2.7 tk_ref_cyc_u - Reference Cyclic Handler Status (Microseconds)

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_ref_cyc_u(ID cycid, T_RCYC_U *pk_rcyc_u);

Parameter

ID **cyclic** Handler ID Cyclic handler ID

T RCYC U* pk rcyc u Packet to Return Cyclic Pointer to the area to return the

Handler Status cyclic handler status

Return Parameter

ER ercd Error Code Error code

pk_rcyc_u Detail:

void* exinf Extended Information Extended information

RELTIM_U lfttim_u Left Time Time remaining until the next

handler starts (in microseconds)

UINT cycstat Cyclic Handler Status Cyclic handler activation state

(Other implementation-dependent parameters may be added beyond this point.)

Error Code

E_OK Normal completion

E_ID Invalid ID number (cycid is invalid or cannot be used)

E_NOEXS Object does not exist (the cyclic handler specified in cyclid does not exist)

E_PAR Parameter error (invalid pk_rcyc_u)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_USEC Support of microsecond

Description

This system call takes 64-bit lfttim_u in microseconds instead of the return parameter lfttim of tk_ref_cyc.

The specification of this system call is same as that of tk_ref_cyc, except that the return parameter is replaced with lfttim_u. For more details, see the description of tk_ref_cyc.

4.7.3 Alarm Handler

An alarm handler is a time event handler that starts at a specified time. Functions are provided for creating and deleting an alarm handler, activating and deactivating the alarm handler, and referencing the alarm handler status. An alarm handler is an object identified by an ID number. The ID number for an alarm handler is called an alarm handler ID.

The time at which an alarm handler starts (called the alarm time) can be set independently for each alarm handler. When the alarm time arrives, exinf, containing extended information about the alarm handler, is passed to it as a starting parameter.

After an alarm handler is created, initially it has no alarm time set and is in inactive state. The alarm time is set when the alarm handler is activated by calling tk_sta_alm, as relative time from the time that system call is executed. When tk_stp_alm is called deactivating the alarm handler, the alarm time setting is canceled. Likewise, when an alarm time arrives and the alarm handler runs, the alarm time is canceled and the alarm handler becomes inactive.

Additional Notes

An alarm handler is actually started at the time according to the time resolution provided by the timer interrupt interval (TTimPeriod). For more details, see the additional notes for Section 4.7.2, "Cyclic Handler".

4.7.3.1 tk_cre_alm - Create Alarm Handler

C Language Interface

#include <tk/tkernel.h>

ID almid = tk_cre_alm(CONST T_CALM *pk_calm);

Parameter

CONST T_CALM*	pk_calm	Packet to Create Alarm	Alarm handler definition
		Handler	information

pk_calm Detail:

void*	exinf	Extended Information	Extended information	
ATR	almatr	Alarm Handler Attribute	Alarm handler attributes	
FP	almhdr	Alarm Handler Address	Alarm handler address	
UB	dsname[8]	DS Object name	DS object name	
(Other implementation-dependent parameters may be added beyond this point.)				

Return Parameter

ID	almid		Alarm Handler ID	Alarm handler ID
		or	Error Code	Error code

Error Code

E_NOMEM	Insufficient memory (memory for control block cannot be allocated)
E_LIMIT	Number of alarm handlers exceeds the system limit
E_RSATR	Reserved attribute (almatr is invalid or cannot be used)
E_PAR	Parameter error (pk_calm or almhdr is invalid or cannot be used)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

TK_SUPPORT_ASM	Support for specifying TA_ASM for alarm handler attribute
TK_SUPPORT_DSNAME	Support for specifying TA_DSNAME for alarm handler attribute

Description

Creates an alarm handler, assigning to it an alarm handler ID. This is performed by assigning a control block for the generated alarm handler.

An alarm handler is a handler running at the specified time as a task-independent portion.

exinf can be used freely by the user to set miscellaneous information about the created alarm handler. The information set in this parameter can be referenced by tk_ref_alm. If a larger area is needed for indicating

#define TA_DSNAME

user information, or if the information may need to be changed after the message buffer is created, this can be done by allocating separate memory for this purpose and putting the memory packet address in exinf. The kernel pays no attention to the contents of exinf.

almatr indicates system attributes in its lower bits and implementation-dependent attributes in its higher bits. The system attribute part of almatr is as follows.

/* DS object name */

almhdr specifies the alarm handler start address.

0x00000040

almatr := (TA ASM || TA HLNG) | [TA DSNAME]

When the TA_HLNG attribute is specified, the alarm handler is started via a high-level language support routine. The high-level language support routine takes care of saving and restoring register values. The alarm handler terminates by a simple return from a function. The alarm handler takes the following format when the TA_HLNG attribute is specified.

The alarm handler format when the TA_ASM attribute is specified is implementation-dependent, but exinf must be passed in a starting parameter.

Even if a system call is invoked from an alarm handler and this causes the task in RUNNING state up to that time to go to another state, with a different task going to RUNNING state, dispatching (task switching) does not occur while the alarm handler is running. Completion of execution by the alarm handler has precedence even if dispatching is necessary; only when the alarm handler terminates does the dispatch take place. In other words, a dispatch request that is generated while an alarm handler is running is not processed immediately, but is delayed until the alarm handler terminates. This is called delayed dispatching.

An alarm handler runs as a task-independent portion. As such, it is not possible to call in an alarm handler a system call that can enter WAITING state, or one that is intended for the invoking task.

When TA_DSNAME is specified, dsname is valid and specifies the DS object name. DS object name is used to identify objects by debugger, and it is handled only by T-Kernel/DS API, td_ref_dsname and td_set_dsname. For more details, see the description of td_ref_dsname and td_set_dsname. If TA_DSNAME is not specified, dsname is ignored. Then td_ref_dsname and td_set_dsname return E_OBJ error.

Additional Notes

When multiple time event handlers or interrupt handlers operate at the same time, it is an implementation-dependent whether to have them run serially (after one handler exits, another starts) or in a nested manner (one handler operation is suspended, another runs, and when that one finishes the previous one resumes). In either case, since time event handlers and interrupt handlers run as task-independent portion, the principle of delayed dispatching applies.

4.7.3.2 tk_del_alm - Delete Alarm Handler

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_del_alm(ID almid);

Parameter

ID almid Alarm Handler ID Alarm handler ID

Return Parameter

ER ercd Error Code Error code

Error Code

E_OK Normal completion

E_ID Invalid ID number (almid is invalid or cannot be used)

E_NOEXS Object does not exist (the alarm handler specified in almid does not exist)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

Deletes an alarm handler.

4.7.3.3 tk_sta_alm - Start Alarm Handler

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_sta_alm(ID almid, RELTIM almtim);

Parameter

ID almid Alarm Handler ID Alarm handler ID

RELTIM almtim Alarm Time Alarm handler start relative time (ms)

Return Parameter

ER ercd Error Code Error code

Error Code

E_OK Normal completion

E_ID Invalid ID number (almid is invalid or cannot be used)

E_NOEXS Object does not exist (the alarm handler specified in almid does not exist)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

None.

Description

Sets the alarm time of the alarm handler specified in almid to the time given in almtim, putting the alarm handler in active state. almtim is specified as relative time from the time of calling tk_sta_alm. After the time specified in almtim has elapsed, the alarm handler starts. If the alarm handler is already active when this system call is invoked, the existing almtim setting is canceled and the alarm handler is activated anew with the alarm time specified here.

If almtim = 0 is set, the alarm handler starts as soon as it is activated.

4.7.3.4 tk_sta_alm_u - Start Alarm Handler (Microseconds)

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_sta_alm_u(ID almid, RELTIM_U almtim_u);

Parameter

ID almid Alarm Handler ID Alarm handler ID

RELTIM U almtim u Alarm Time Alarm handler start relative time (in

microseconds)

Return Parameter

ER ercd Error Code Error code

Error Code

E_OK Normal completion

E ID Invalid ID number (almid is invalid or cannot be used)

E_NOEXS Object does not exist (the alarm handler specified in almid does not exist)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_USEC Support of microsecond

Description

This system call takes 64-bit almtim_u in microseconds instead of the parameter almtim of tk_sta_alm.

The specification of this system call is same as that of tk_sta_alm , except that the parameter is replaced with $almtim_u$. For more details, see the description of tk_sta_alm .

4.7.3.5 tk_stp_alm - Stop Alarm Handler

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_stp_alm(ID almid);

Parameter

ID almid Alarm Handler ID Alarm handler ID

Return Parameter

ER ercd Error Code Error code

Error Code

E_OK Normal completion

E_ID Invalid ID number (almid is invalid or cannot be used)

E_NOEXS Object does not exist (the alarm handler specified in almid does not exist)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

None.

Description

Cancels the alarm time of the alarm handler specified in almid, putting it in inactive state. It the cyclic handler was already in inactive state, this system call has no effect (no operation).

4.7.3.6 tk_ref_alm - Reference Alarm Handler Status

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_ref_alm(ID almid, T_RALM *pk_ralm);

Parameter

ID almid Alarm Handler ID Alarm handler ID

T RALM* pk ralm Packet to Return Alarm Pointer to the area to return the alarm

Handler Status handler status

Return Parameter

ER ercd Error Code Error code

pk_ralm Detail:

void* exinf Extended Information Extended information

RELTIM lfttim Left Time Time remaining until the handler starts

(ms)

UINT almstat Alarm Handler Status Alarm handler activation state

(Other implementation-dependent parameters may be added beyond this point.)

Error Code

E_OK Normal completion

E_ID Invalid ID number (almid is invalid or cannot be used)

E_NOEXS Object does not exist (the alarm handler specified in almid does not exist)

E_PAR Parameter error (invalid pk_ralm)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

None.

Description

References the status of the alarm handler specified in almid, passing in return parameters the time remaining until the handler starts (lfttim), and extended information (exinf).

The following information is returned in almstat.

almstat:= (TALM_STP | TALM_STA)

```
#define TALM_STP 0x00 0x00 /* alarm handler is inactive */ #define TALM_STA 0x01 0x01 /* alarm handler is active */
```

If the alarm handler is active (TALM_STA), the relative time until the alarm handler is scheduled to be started next time is returned to lfttim. This value is within the range almtim \geq lfttim \geq 0 specified with tk_sta_alm. Since lfttim is decremented with each timer interrupt, lfttim = 0 means the alarm handler will start at the next timer interrupt.

exinf returns the extended information specified as a parameter when the alarm handler is generated. exinf is passed to the alarm handler as a parameter.

If the alarm handler is inactive (TALM_STP), lfttim is indeterminate.

If the alarm handler specified with tk_ref_alm in almid does not exist, error code E_NOEXS is returned.

The time remaining lfttim returned in the alarm handler status information (T_RALM) is a value rounded to milliseconds. To know the value in microseconds, call tk_ref_alm_u.

4.7.3.7 tk_ref_alm_u - Reference Alarm Handler Status (Microseconds)

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_ref_alm_u(ID almid, T_RALM_U *pk_ralm_u);

Parameter

ID almid Alarm Handler ID Alarm handler ID

T RALM U* pk ralm u Packet to Return Alarm Pointer to the area to return the

Handler Status alarm handler status

Return Parameter

ER ercd Error Code Error code

pk_ralm_u Detail:

void* exinf Extended Information Extended information

RELTIM_U lfttim_u Left Time Time remaining until the handler

starts (in microseconds)

UINT almstat Alarm Handler Status Alarm handler activation state

(Other implementation-dependent parameters may be added beyond this point.)

Error Code

E_OK Normal completion

E_ID Invalid ID number (almid is invalid or cannot be used)

E_NOEXS Object does not exist (the alarm handler specified in almid does not exist)

E_PAR Parameter error (invalid pk_ralm_u)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_USEC Support of microsecond

Description

This system call takes 64-bit lfttim_u in microseconds instead of the return parameter lfttim of tk_ref_alm.

The specification of this system call is same as that of tk_ref_alm, except that the return parameter is replaced with lfttim_u. For more details, see the description of tk_ref_alm.

4.8 Interrupt Management Functions

Interrupt management functions are for defining and manipulating handlers for external interrupts and CPU exceptions.

An interrupt handler runs as a task-independent portion. System calls can be invoked in a task-independent portion in the same way as in a task portion, but the following restriction applies to system call issuing in a task-independent portion.

• A system call that implicitly specifies the invoking task, or one that may put the invoking task in WAITING state cannot be issued. Error code E_CTX is returned in such cases.

During task-independent portion execution, task switching (dispatching) does not occur. If system call processing results in a dispatch request, the dispatch is delayed until processing leaves the task-independent portion. This is called delayed dispatching.

4.8.1 tk_def_int - Define Interrupt Handler

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_def_int(UINT intno, CONST T_DINT *pk_dint);

Parameter

UINT intno Interrupt Number Interrupt number

CONST T_DINT* pk_dint Packet to Define Interrupt Interrupt handler definition

Handler information

pk_dint Detail:

ATR intatr Interrupt Handler Attribute Interrupt handler attribute
FP inthdr Interrupt Handler Address Interrupt handler address

(Other implementation-dependent parameters may be added beyond this point.)

Return Parameter

ER ercd Error Code Error code

Error Code

E_OK Normal completion

E_NOMEM Insufficient memory (memory for control block cannot be allocated)

E_RSATR Reserved attribute (intatr is invalid or cannot be used)

E_PAR Parameter error (intno, pk_dint, or inthdr is invalid or cannot be used)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

TK_SUPPORT_ASM Support for specifying TA_ASM for alarm handler attribute

Description

Defines an interrupt handler for the interrupt number intno to enable use of the interrupt handler. This system call maps the interrupt number specified by intno to the address and attributes of the interrupt handler.

intno is the number used to distinguish different interrupts. Its specific meaning is defined for each implementation, but generally the interrupt number used by the interrupt mechanism of the CPU hardware (such as IRQ number) is used as it is, or any number that can be mapped to such number is used.

[&]quot;Interrupts" include both external interrupts from devices and interrupts due to CPU exceptions.

intatr indicates system attributes in its lower bits and implementation-dependent attributes in its higher bits. The system attribute part of intatr is specified as follows.

```
TA_ASM The handler is written in assembly language
TA_HLNG The handler is written in high-level language
```

As a rule, the kernel is not involved in the starting of a TA_ASM attribute interrupt handler. When an interrupt is raised, the interrupt handling function in the CPU hardware directly starts the interrupt handler defined by this system call (depending on the implementation, processing by program may be included). Accordingly, processing for saving and restoring registers used by the interrupt handler is necessary at the beginning and end of the interrupt handler. An interrupt handler is terminated by execution of the tk_ret_int system call or by the CPU interrupt return instruction (or an equivalent mechanism).

Support of a mechanism for return from an interrupt handler without using tk_ret_int and hence without kernel intervention is mandatory. Note that if tk_ret_int is not used, delayed dispatching does not need to be performed.

Support for return from an interrupt handler using tk_ret_int is also mandatory, and in this case delayed dispatching must be performed.

When the TA_HLNG attribute is specified, the interrupt handler is started via a high-level language support routine. The high-level language support routine takes care of saving and restoring register values. The interrupt handler terminates by a return from a C language function. The interrupt handler takes the following format when the TA HLNG attribute is specified.

The parameter intno passed to an interrupt handler is the interrupt number identifying the interrupt that was raised, and is the same as that specified with tk_def_int. Depending on the implementation, other information about the interrupt may be passed in addition to intno. If such information is used, it must be defined for each implementation in the second parameter or subsequent parameters passed to the interrupt handler.

If the TA_HLNG attribute is specified, it is assumed that the CPU interrupt flag will be set to interrupts disabled state from the time the interrupt is raised until the interrupt handler is called. In other words, as soon as an interrupt is raised, multiple interrupts are disabled, and this state remains when the interrupt handler is called. If multiple interrupts are to be allowed, the interrupt handler must include processing that handles multiple interrupts by manipulating the CPU interrupt flag.

Also in the case of the TA_HLNG attribute, upon entry into the interrupt handler, issuing system call must be possible. Note, however, that assuming standard provision of the functionality described above, extensions are allowed such as adding a function for entering an interrupt handler with multiple interrupts enabled.

When the TA_ASM attribute is specified, the state upon entry into the interrupt handler shall be defined for each implementation. Such matters as the stack and register status upon interrupt handler entry, whether system calls can be made, the method of invoking system calls, and the method of returning from the interrupt handler without kernel intervention must all be defined explicitly.

In the case of the TA_ASM attribute, depending on the implementation there may be cases where interrupt handler execution is not considered to be a task-independent portion. In such a case the following points need to be noted carefully.

- · If interrupts are enabled, there is a possibility that task dispatching will occur.
- When a system call is invoked, it will be processed as having been called from a task portion or quasi-task portion.

If a method is provided for performing some kind of operation in an interrupt handler to detected whether it runs as task-independent portion, that method shall be announced for each implementation.

Even if a system call is invoked from an interrupt handler and this causes the task in RUNNING state up to that time to go to another state, with a different task going to RUNNING state, dispatching (task switching) does not occur while the interrupt handler is running. Completion of execution of the interrupt handler has precedence even if dispatching is necessary; only when the interrupt handler terminates does the dispatch take place. In other words, a dispatch request that is generated while an interrupt handler is running is not processed immediately, but is delayed until the interrupt handler terminates. This is called delayed dispatching.

An interrupt handler runs as a task-independent portion. As such, it is not possible to call in an interrupt handler a system call that can enter WAITING state, or one that is intended for the invoking task.

When $pk_dint = NULL$ is set, a previously defined interrupt handler is canceled. When the handler definitions are canceled, the default handler defined by the system is used.

It is possible to redefine an interrupt handler for an interrupt number for which a handler is already defined. It is not necessary first to cancel the definition for that number. Defining a new handler for a intno already having an interrupt handler defined does not return error.

Additional Notes

The various specifications governing the TA_ASM attribute are mainly concerned with realizing an interrupt hook. For example, when an exception is raised due to illegal address access, ordinarily an interrupt handler defined in a higher-level program detects this and performs the error processing; but in the case of debugging, in place of error processing by a higher-level program, the default interrupt handler defined by the system may perform the processing and starts a debugger. In this case, the interrupt handler defined by high-level program hooks the default interrupt handler defined by the system. And, according to the situation, the handler either passes the interrupt handling to a system program such as a debugger, or it just processes it for itself.

4.8.2 tk_ret_int - Return from Interrupt Handler

C Language Interface

#include <tk/tkernel.h>

void tk_ret_int(void);

Although this system call is defined in the form of a C language interface, it will not be called in this format if a high-level language support routine is used.

Parameter

None.

Return Parameter

Does not return to the context issuing the system call.

Error Codes

The following kind of error may be detected, but no return is made to the context issuing the system call even if the error is detected. For this reason the error code cannot be passed directly as a system call return parameter. The behavior in case an error occurs is implementation-dependent.

 E_CTX

Context error (issued from other than an interrupt handler (implementation-dependent error))

Valid Context

Task portion	Quasi-task portion	Task-independent portion
NO	NO	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK SUPPORT ASM

Support for specifying TA_ASM for interrupt handler attribute

Description

Exits from an interrupt handler.

System calls invoked from an interrupt handler do not result in dispatching while the handler is running; instead, the dispatching is delayed until <code>tk_ret_int</code> is called ending the interrupt handler processing(delayed dispatching). Accordingly, <code>tk_ret_int</code> results in the processing of all dispatch requests made while the interrupt handler was running.

tk_ret_int is invoked only if the interrupt handler was defined specifying the TA_ASM attribute. In the case of a TA_HLNG attribute interrupt handler, the functionality equivalent to tk_ret_int is executed implicitly in the high-level language support routine, so tk_ret_int is not (must not be) called explicitly.

As a rule, the kernel is not involved in the starting of a TA_ASM attribute interrupt handler. When an interrupt is raised, the defined interrupt handler is started directly by the CPU hardware interrupt processing function. The saving and restoring of registers used by the interrupt handler must therefore be taken care of in the interrupt handler.

For the same reason, the stack and register states at the time <code>tk_ret_int</code> is issued must be the same as those at the time of entry into the interrupt handler. Because of this, in some cases function codes cannot be used in <code>tk_ret_int</code>, in which case <code>tk_ret_int</code> can be implemented using a trap instruction of another vector separate from that used for other system calls.

Additional Notes

tk_ret_int is a system call that does not return to the context from which it was called. Even if an error code is returned when an error of some kind is detected, normally no error checking is performed in the context from which the system call was invoked, leaving the possibility that the program will hang. For this reason these system calls do not return even if error is detected.

Using an assembly language return-from-interrupt instruction instead of tk_ret_int to exit the interrupt handler is possible if it is clear no dispatching will take place on return from the handler (the same task is guaranteed to continue executing), or if there is no need for dispatching to take place.

Depending on the CPU architecture and method of implementing the kernel, it may be possible to perform delayed dispatching even when an interrupt handler exits using an assembly language return-from-interrupt instruction. In such cases, it is permissible for the assembly language return-from-interrupt instruction to be interpreted as if it were a tk_ret_int system call.

Performing of E_CTX error checking when tk_ret_int is called from a time event handler is implementation-dependent. Depending on implementation, control may return from a different type of handler immediately.

4.9 System Management Functions

System management functions sets and references system states. Functions are provided for rotating task precedence in a queue, getting the ID of the task in RUNNING state, disabling and enabling task dispatching, referencing context and system states, setting low-power mode, and referencing the T-Kernel version.

4.9.1 tk_rot_rdq - Rotate Ready Queue

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_rot_rdq(PRI tskpri);

Parameter

PRI tskpri Task Priority Task priority

Return Parameter

ER ercd Error Code Error code

Error Code

E OK Normal completion

E_PAR Parameter error (tskpri is invalid)

Valid Context

ſ	Task portion	Quasi-task portion	Task-independent portion
	YES	YES	YES

Related Service Profile Items

None.

Description

Rotates the precedence among tasks having the priority specified in tskpri. This system call changes the precedence of tasks in RUN or READY state having the specified priority, so that the task with the highest precedence among those tasks is given the lowest precedence.

By setting $tskpri = TPRI_RUN = 0$, this system call rotates the precedence of tasks having the priority level of the task currently in RUNNING state. When tk_rot_rdq is called from an ordinary task, it rotates the precedence of tasks having the same priority as the invoking task. When calling from a cyclic handler or other task-independent portion, it is also possible to call tk_rot_rdq ($tskpri = TPRI_RUN$).

Additional Notes

If there are no tasks in a run state having the specified priority, or only one such task, the system call completes normally with no operation (no error code is returned).

When this system call is issued in dispatch enabled state, specifying as the priority either TPRI_RUN or the current priority of the invoking task, the precedence of the invoking task will be the lowest among tasks of the same priority. This system call can therefore be used to relinquish execution privilege.

In dispatch disabled state, the task with highest precedence among tasks of the same priority is not always the currently executing task. The precedence of the invoking task will therefore not always become the lowest among tasks having the same priority when the above method is used in dispatch disabled state.

Examples of tk_rot_rdq execution are given in Figure 4.5, "Precedence Before Issuing tk_rot_rdq " and Figure 4.6, "Precedence After Issuing tk_rot_rdq (tskpri=2)". When this system call is issued in the state shown in Figure 4.5, "Precedence Before Issuing tk_rot_rdq " specifying tskpri=2, the new precedence order becomes that in Figure 4.6, "Precedence After Issuing tk_rot_rdq (tskpri=2)", and Task C becomes the executing tskpri=20.


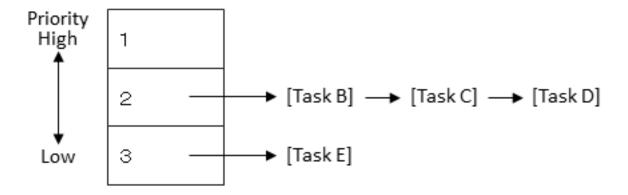


Figure 4.5: Precedence Before Issuing tk_rot_rdq

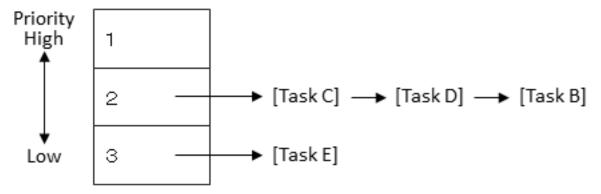

Task C executes next.

Figure 4.6: Precedence After Issuing tk_rot_rdq (tskpri = 2)

4.9.2 tk_get_tid - Get Task Identifier

C Language Interface

#include <tk/tkernel.h>

ID tskid = tk_get_tid(void);

Parameter

None.

Return Parameter

ID tskid Task ID

ID of the task in RUNNING state

Error Codes

None.

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

None.

Description

Gets the ID number of the task currently in RUNNING state. Unless the task-independent portion is executing, the current RUNNING state task will be the invoking task.

If there is no task currently in RUNNING state, 0 is returned.

Additional Notes

The task ID returned by tk_get_tid is identical to runtskid returned by tk_ref_sys.

4.9.3 tk_dis_dsp - Disable Dispatch

C Language Interface

#include <tk/tkernel.h>

 $ER ercd = tk_dis_dsp(void);$

Parameter

None.

Return Parameter

ER ercd Error Code Error code

Error Code

E OK Normal completion

E_CTX Context error (issued from task-independent portion)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

Disables task dispatching. Dispatch disabled state remains in effect until tk_ena_dsp is called enabling task dispatching. While dispatching is disabled, the invoking task does not change from RUNNING state to READY state or to WAITING state. External interrupts, however, are still enabled, so even in dispatch disabled state an interrupt handler can be started. In dispatch disabled state, the running task can be preempted by an interrupt handler, but not by another task.

The specific operations during dispatch disabled state are as follows.

- Even if a system call issued from an interrupt handler or by the task that called tk_dis_dsp results in a task going to READY state with a higher priority than the task that called tk_dis_dsp, that task will not be dispatched. Dispatching of the higher-priority task is delayed until dispatch disabled state ends.
- If the task that called tk_dis_dsp issues a system call that may cause the invoking task to be put in WAITING state (e.g., tk_slp_tsk or tk_wai_sem), error code E_CTX is returned.
- · When system status is referenced by tk ref sys, TSS DDSP is returned in sysstat.

If tk_dis_dsp is called for a task already in dispatch disabled state, that state continues with no error code returned. No matter how many times tk_dis_dsp is called, calling tk_ena_dsp just one time is enough to enable dispatching again. The sophisticated operation when the pair of system calls tk_dis_dsp and tk_ena_dsp are used in a nested manner must therefore be managed by the user as necessary.

Additional Notes

A task in RUNNING state cannot go to DORMANT state or NON-EXISTENT state while dispatching is disabled. If tk_ext_tsk or tk_exd_tsk is called for a task in RUNNING state while interrupts or dispatching is disabled, error code E_CTX is detected. Since, however, tk_ext_tsk and tk_exd_tsk are system calls that do not return to their original context, such errors are not passed in return parameters by these system calls.

4.9.4 tk_ena_dsp - Enable Dispatch

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_ena_dsp(void);

Parameter

None.

Return Parameter

ER ercd Error Code Error code

Error Code

E_OK Normal completion

E_CTX Context error (issued from task-independent portion)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

Enables task dispatching. This system call cancels the disabling of dispatching by the tk_dis_dsp system call. If tk_ena_dsp is called from a task not in dispatch disabled state, the dispatch enabled state continues and no error code is returned.

4.9.5 tk_ref_sys - Reference System Status

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_ref_sys(T_RSYS *pk_rsys);

Parameter

T_RSYS* pk_rsys Packet to Refer System Status Pointer to the area to return the system

status

Return Parameter

ER ercd Error Code Error code

pk_rsys Detail:

UINT sysstat System State System State

ID runtskid Running Task ID ID of the task currently in RUNNING

state

ID schedtskid Scheduled Task ID ID of the task scheduled to run next

(Other implementation-dependent parameters may be added beyond this point.)

Error Code

E_OK Normal completion

E_PAR Parameter error (invalid pk_rsys)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

None.

Description

Gets the current system execution status, passing in return parameters such information as the dispatch disabled state and whether a task-independent portion is executing.

The following values are returned in sysstat.

TSS_TSK	0	Task portion is running
TSS_DDSP	1	Dispatch disabled
TSS_DINT	2	Interrupts disabled
TSS_INDP	4	Task-independent portion is running
TSS_QTSK	8	Quasi-task portion is running

The ID of the task currently in RUNNING state is returned in runtskid, while schedtskid indicates the ID of the next task scheduled to go to RUNNING state. Normally runtskid = schedtskid, but this is not necessarily true if, for example, a higher-priority task was wakened during dispatch disabled state. If there is no such task, 0 is returned.

It must be possible to invoke this system call from an interrupt handler or time event handler.

Additional Notes

Depending on the kernel implementation, the information returned by tk_ref_sys is not necessarily guaranteed to be accurate at all times.

4.9.6 tk set pow - Set Power Mode

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_set_pow(UINT powmode);

Parameter

UINT powmode Power Mode Low-power mode

Return Parameter

ER ercd Error Code Error code

Error Code

E OK Normal completion

E_PAR Parameter error (value that cannot be used in powmode)

E_QOVR Low-power mode disable count overflow

E OBJ TPW ENALOWPOW was requested with low-power mode disable count at 0

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_LOWPOWER

Support of power management functions

Description

The following two power-saving functions are supported.

• Switching to low-power mode when the system is idle

When there are no tasks to be executed, the system switches to a low-power mode provided in hardware.

Low-power mode is a function for reducing power use during very short intervals, such as from one timer interrupt to the next. This is accomplished, for example, by lowering the CPU clock frequency. It does not require complicated mode-switching in software but is implemented mainly using hardware functionality.

Automatic power-off

When the operator performs no operations for a certain length of time, the system automatically cuts the power and goes to suspended state. If there is a start request (interrupt, etc.) from a peripheral device or if the operator turns on the power, the system resumes from the state when the power was cut.

In the case of a power supply problem such as low battery, the system likewise cuts the power and goes to suspended state.

In suspended state, the power is cut to peripheral devices and circuits as well as to the CPU, but the main memory contents are retained.

tk_set_pow sets the low-power mode.

```
powmode:= ( TPW DOSUSPEND || TPW DISLOWPOW || TPW ENALOWPOW )
```

```
#define TPW_DOSUSPEND 1 Suspended state
#define TPW_DISLOWPOW 2 Switching to low-power mode disabled
#define TPW_ENALOWPOW 3 Switching to low-power mode enabled (default)
```

· TPW DOSUSPEND

Execution of all tasks and handlers is stopped, peripheral circuits (timers, interrupt controllers, etc.) are stopped, and the power is cut (suspended). (off_pow is called.)

When power is turned back on, peripheral circuits are restarted, execution of all tasks and handlers is resumed, operations resume from the point before power was cut, and the system call returns.

If for some reason the resume processing fails, normal startup processing (for reset) is performed and the system boots fresh.

· TPW DISLOWPOW

Switching to low-power mode in the dispatcher is disabled.(low_pow is not called.)

· TPW ENALOWPOW

Switching to low-power mode in the dispatcher is enabled (low pow is called).

The default at system startup is low-power mode enabled (TPW_ENALOWPOW).

Each time TPW_DISLOWPOW is specified, the request count is incremented. Low-power mode is enabled only when TPW_ENALOWPOW is requested for as many times as TPW_DISLOWPOW was requested. The maximum request count is implementation-dependent, but a count of at least 255 times must be possible.

Additional Notes

off_pow and low_pow are μ T-Kernel/SM functions. For more details, see Section 5.5, "Power Management Functions".

 μ T-Kernel does not detect power supply problems or other factors for suspending the system. Actual suspension requires suspend processing in each of the peripheral devices (device drivers). The system is suspended not by calling tk_set_pow directly but by use of the μ T-Kernel/SM suspend function.

4.9.7 tk_ref_ver - Reference Version Information

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_ref_ver(T_RVER *pk_rver);

Parameter

T_RVER^* pk_rver	Packet to Return Version	Pointer to the area to return the version

Information information

Return Parameter

ER	ercd	Error Code	Error code

pk_rver Detail:

UH	maker	Maker Code	T-Kernel maker code
UH	prid	Product ID	T-Kernel identification number
UH	spver	Specification Version	Specification version
UH	prver	Product Version	T-Kernel version
UH	prno[4]	Product Number	T-Kernel products management
			information

Error Code

E OK	Normal completion

E_PAR Parameter error (invalid pk_rver)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

Gets information about the T-Kernel version in use, returning that information in the packet specified in pk_rver. The following information can be obtained.

maker is the maker code assigned to the developer who has implemented the version of μ T-Kernel. maker format is described in [Figure 4.7, "maker Format"].




Figure 4.7: maker Format

prid is a number indicating the T-Kernel type. The prid field has the format shown in Figure 4.8, "prid Format".

Assignment of values to prid is left to the vendor who has implemented this version of μ T-Kernel. Note, however, that this is the only number distinguishing product types, and that vendors should give careful thought to how they assign these numbers, doing so in a systematic way. In this way, the combination of maker and prid becomes a unique identifier of the kernel version.

The reference source code of μ T-Kernel is provided from TRON Forum, and its maker and prid are as follows.

maker = 0x0000 prid = 0x0000




Figure 4.8: prid Format

The upper 4 bits of **spver** give the TRON specification series. The lower 12 bits indicate the T-Kernel specification version implemented. The **spver** field has the format shown in Figure 4.9, "**spver** Format".

If, for example, a product conforms to the μ T-Kernel specification Ver 3.01.xx, spver is as follows.

MAGIC = 0x6 (μ T-Kernel) SpecVer = 0x301 (Ver 3.01) spver = 0x6301

If a product implements the draft version of μ T-Kernel specification, that is,Ver 3.B0.xx draft specification, spver is as follows.

MAGIC = 0x6 (μ T-Kernel) SpecVer = 0x3B0 (Ver 3.80)

spver = 0x63B0




Figure 4.9: spver Format

MAGIC:

Type of OS specification

0x0	TRON common (TAD, etc.)
0x1	reserved
0x2	reserved
0x3	reserved
0x4	reserved
0x5	reserved
0x6	μ T-Kernel
0x7	T-Kernel

SpecVer:

The version of the specification that the kernel complies with. This is given as a three-digit packed-format BCD code. In the case of a draft version, the letter A, B, or C may appear in the second digit. In this case the corresponding hexadecimal form of A, B, or C is inserted.

prver is the version number of the T-Kernel implementation. The specific values assigned to prver are left to the T-Kernel implementing vendor to decide.

prno is a return parameter for use in indicating T-Kernel product management information, product number or the like. The specific meaning of values set in prno is left to the T-Kernel implementing vendor to decide.

Additional Notes

The format of the packet and structure members for getting version information is mostly uniform across each version of T-Kernel or μ T-Kernel specification.

The value obtained by tk_ref_ver in SpecVer is the first three digits of the specification version number. The numbers after that indicate minor revisions such as those issued to correct misprints and the like, and are not obtained by tk_ref_ver. For the purpose of matching to the specification contents, the first three numbers of the specification version are sufficient.

A kernel implementing a draft version may have A, B, or C as the second number of SpecVer. It must be noted that in such cases the specification order of release may not correspond exactly to higher and lower SpecVer values. For example, specifications may be released in the following order: Ver $2.A1 \rightarrow Ver 2.A2 \rightarrow Ver 2.B1 \rightarrow Ver 2.C1 \rightarrow Ver 2.00 \rightarrow Ver 2.01...$ In this example, when going from Ver 2.Cx to Ver 2.00, SpecVer goes from a higher to a lower value.

4.10 Subsystem Management Functions

Subsystem management functions extends the functions of μ T-Kernel itself by adding a user-defined function called "subsystem" to the kernel in order to implement middleware and others running on the μ T-Kernel. Some functions provided by μ T-Kernel/SM are also implemented by utilizing the subsystem management functions.

A subsystem consists of extended SVC handlers to execute user-defined system calls (called "extended SVCs"), a break function that performs the required processing when any exception occurs, and an event handling function that performs the required processing when any event is raised from devices, etc. (Figure 4.10, " μ T-Kernel Subsystems")

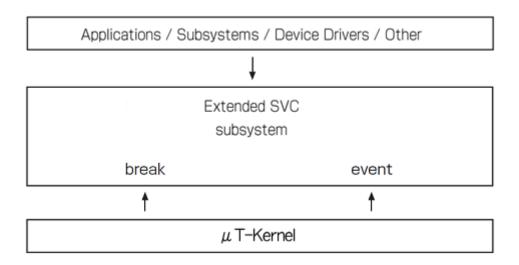


Figure 4.10: μ T-Kernel Subsystems

The extended SVC handler directly accepts requests from applications and others. A break function and event processing function are so-called callback type functions and accept requests from the kernel.

Additional Notes

Generally speaking, upper layer middleware including the process management functions and the file management functions are also implemented by utilizing the subsystem management functions. Other examples of middleware that are implemented by utilizing the subsystem management functions include TCP/IP manager, USB manager, and PC card manager.

Though subsystem management functions are meant to allow users to add custom system calls (SVC: Super-Visor Calls) as the primary purpose, they can be used to build complex and advanced middleware through not only the addition of just user-defined system calls but also through provision of exception processing functions to handle the exceptions, which are required for the added system calls.

In addition to the subsystem management functions, μ T-Kernel also provides the device driver functions in order to extend itself. Both subsystems and device drivers are function modules independent from μ T-Kernel itself. They can be used by loading their corresponding binary programs and then calling them from a task on μ T-Kernel. Both run at the protection level 0. While API is limited to using open/close and read/write type when calling a device driver, API for calling a subsystem can be defined without any restriction.

Subsystems are identified by subsystem IDs (ssid), more than one subsystem can be defined and used at the same time. One subsystem can be called and used from within another subsystem.

4.10.1 tk_def_ssy - Define Subsystem

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_def_ssy(ID ssid, CONST T_DSSY *pk_dssy);

Parameter

ID CONST T_DSSY*	ssid pk_dssy	Subsystem ID Packet to Define Subsystem	Subsystem ID Subsystem definition information
pk_dssy Detail:			
ATR	ssyatr	Subsystem Attributes	Subsystem attributes
PRI	ssypri	Subsystem Priority	Subsystem priority
FP	svchdr	Extended SVC Handler Address	Extended SVC handler address
FP	breakfn	Break Function Address	Break function address
FP	eventfn	Event Handling Function Address	Event handling function address

(Other implementation-dependent parameters may be added beyond this point.)

Return Parameter

מת	a a al	F C1-	F1-
ER	ercd	Error Code	Error code
	CICA	Liidi Code	Liioi couc

Error Code

E_OK	Normal completion
E_ID	Invalid ID number (ssid is invalid or cannot be used)
E_NOMEM	Insufficient memory (memory for control block cannot be allocated)
E_RSATR	Reserved attribute (ssyatr is invalid or cannot be used)
E_PAR	Parameter error (pk_dssy is invalid or cannot be used)
E_OBJ	ssid is already defined (when $pk_dssy \neq NULL$)
E_NOEXS	$ssid$ is not defined (when $pk_dssy = NULL$)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_SUBSYSTEM

Support of subsystem management functions

When the service profile items below is set to be effective, subsystem priority (ssypri) can be specified.

TK SUPPORT SSYEVENT

Support of event processing of subsystems

Only when the service profile items below are set to be effective, break function can be specified.

TK SUPPORT TASKEXCEPTION

Support of task exception handling functions

Description

Defines subsystem specified in ssid.

One subsystem ID must be assigned to one subsystem without overlapping with other subsystems. The kernel does not have a function for assigning subsystem IDs automatically.

Subsystem IDs 1 to 9 are reserved for μ T-Kernel use. 10 to 255 are numbers used by middleware, etc. The maximum usable subsystem ID value is implementation-dependent and may be lower than 255 in some implementations.

ssyatr indicates system attributes in its lower bits and implementation-dependent attributes in its higher bits. The system attribute in ssyatr are not assigned in this version, and no system attributes are used.

ssypri indicates the subsystem priority. The startup function, cleanup function, and event handling function are called in order of priority. The calling order is undefined when these subsystems have the same priority. Subsystem priority 1 is the highest priority, with larger numbers indicating lower priorities. The range of priorities that can be specified is implementation-dependent, but it must be possible to assign at least priorities 1 to 16.

NULL can be specified in breakfn and eventfn, in which case the corresponding function will not be called.

Specifying pk_dssy = NULL deletes a subsystem definition.

· Extended SVC handler

An extended SVC handler accepts requests from applications and other programs as an application programming interface (API) for a subsystem. It can be called in the same way as an ordinary system call, and is normally invoked using a trap instruction or the like.

The format of an extended SVC handler is as follows.

fncd is a function code. The lower 8 bits of the instruction code are the subsystem ID. The remaining higher bits can be used in any way by the subsystem. Ordinarily they are used as a function code inside the subsystem. A function code must be a positive value, so the most significant bit is always 0.

pk_para points to a packet of parameters passed to this system call. The packet format can be decided by the subsystem. Generally a format like the stack passed to a C language function is used, which in many cases is the same format as a C language structure.

The return code passed from an extended SVC handler is passed to the caller transparently as the function return code. As a rule, negative values are error codes and 0 or positive values are the return code for normal completion. If an extended SVC call fails for some reason, the error code (negative value) set by T-Kernel is returned to the caller without invoking the extended SVC handler, so it is best to avoid confusion with these values.

The format by which an extended SVC is called is dependent on the kernel implementation. As a subsystem API, however, it must be specified in a C language function format independent of the kernel implementation. The subsystem must provide an interface library for converting from the C language function format to the kernel-dependent extended SVC calling format.

An extended SVC handler runs as a quasi-task portion.

It can be called from a task-independent portion, and in this case the extended SVC handler also runs as a task-independent portion.

· Break function

A break function is a function called when a task exception is raised for a task while an extended SVC handler is executing.

When a break function is called, the processing by the extended SVC handler running at the time the task exception was raised must be stopped promptly and control must be returned from the extended SVC handler to its caller. The role of a break function is to abort the processing of the currently running extended SVC handler.

The format of a break function is as follows.

tskid is the ID of the task in which the task exception was raised.

A break function is called when a task exception is raised by tk_ras_tex. If extended SVC handler calls are nested, then when the nesting level of the extended SVC handler is decreased by the return from the latest extended SVC handler, the break function corresponding to the former extended SVC handler to which the control will be returned next, is called.

A break function is called only once for one extended SVC handler per one task exception.

If another nested extended SVC call is made while a task exception is raised, no break function is called for the called extended SVC handler.

A break function runs as a quasi-task portion. Its requesting task is identified as follows: If a break function is called by tk_ras_tex, it runs as a quasi-task portion of the task that issued tk_ras_tex. On the other hand, when the nesting level of extended SVC handler is decreased, the break function runs as a quasi-task portion of the task that raised the task exception (the task running the extended SVC handler). This means that the task executing the break function may be different from the task executing the extended SVC handler. In such a case, the break function and extended SVC handler run concurrently as controlled by task scheduling.

It is thus conceivable that the extended SVC handler will return to its caller before the break function finished executing, but in that case the extended SVC handler waits at the point right before returning, until the break function completes. How this waiting state maps to the task state transitions is implementation-dependent, but preferably it should remain in READY state (a READY state that does not go to RUNNING state). The precedence of a task may change while it is waiting for a break function to complete, but how task precedence is treated is implementation-dependent.

Similarly, an extended SVC handler cannot call an extended SVC until break function execution completes.

In other words, during the time from the raising of a task interrupt until the break function completes, the affected task must stay in the extended SVC handler that was executing at the time of the task exception.

In the case where the requesting task of the break function differs from that of the extended SVC handler, that is, where the break function and the extended SVC handler run in different task contexts, the task priority of the break function is raised to the same as that of the extended SVC handler only while the break handler is executing if the former is lower than the latter. On the other hand, if the break function task priority is the same as or higher than that of the extended SVC handler, the priority does not change. The priority that gets changed is the current priority; the base priority stays the same.

The change in priority occurs only immediately before entry into the break function; any changes after that of the extended SVC handler task priority are not followed by further changes in priority of the break function task. In no case does a change in the break function priority while a break function is running results in a priority change in the extended SVC handler task. At the same time, there is no restriction on priority changes due to a running break function.

When the break function completes, the current priority of its task reverts to base priority. If a mutex was locked, however, the priority reverts to that as adjusted by the mutex. (In other words, the ability is provided to adjust the current priority at the entry and exit of the break function only; other than that, the priority is the same as when an ordinary task is running.)

• Event handling function

An event handling function is called by issuing the tk_evt_ssy system call.

It processes various requests made to a subsystem.

Note that it has to process all requests for all subsystems. If processing is not required, it can simply return E_OK without performing any operation.

The format of an event handling function is as follows.

evttyp indicates the request type and info is a parameter that can be used freely. These parameters are specified in tk_evt_ssy.

If processing completes normally, E_OK is passed in the return code; otherwise an error code (negative value) is returned.

The following event types evttyp are defined. For more details, see Section 5.2, "Device Management Functions".

```
#define TSEVT_SUSPEND_BEGIN 1 /* before suspending device */
#define TSEVT_SUSPEND_DONE 2 /* after suspending device */
#define TSEVT_RESUME_BEGIN 3 /* before resuming device */
#define TSEVT_RESUME_DONE 4 /* after resuming device */
#define TSEVT_DEVICE_REGIST 5 /* device registration notice */
#define TSEVT_DEVICE_DELETE 6 /* device deletion notice */
```

An event handling function runs as a quasi-task portion of the task that issued tk evt ssy.

Additional Notes

Extended SVC handlers as well as break functions and event handling functions all have the equivalent of the TA_HLNG attribute only. There is no means of specifying the TA_ASM attribute.

It is possible to issue a system call that enters WAITING state in the extended SVC handler, but in that case the program must be designed so that it can be stopped by calling a break function. The specific processing flow is as follows: If tk_ras_tex is issued for the caller task while an extended SVC handler is executing, it is necessary to stop the running extended SVC handler as soon as possible and return a stop error to the caller task. For this purpose the break function is used. In order to stop the running extended SVC handler immediately, the break function must forcibly release the WAITING state, even if the system call is in WAITING state during processing the extended SVC handler. For this purpose, the tk_dis_wai system call is generally used. tk_dis_wai can prevent the system call from entering WAITING state until the control returns from the extended SVC handler to the caller task, but the implementor should also make it possible to stop the program

of the extended SVC handler by calling a break function. For example, leaving from WAITING state with the error code E_DISWAI can mean that the execution is stopped by a break function. So it is best to stop the extended SVC handler immediately and return a stop error to the caller task, without continuing to execute the subsequent processing.

An extended SVC handler may be called concurrently by multiple tasks. If the tasks share same resources, the mutual exclusion control must be performed in the extended SVC handler.

Porting Guideline

Note that, in an environment where INT data type is 16 bits, part of function code that can be used for subsystem function code is only 7 bits wide (0-127), and care must be taken.

4.10.2 tk evt ssy - Call Event Function

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_evt_ssy(ID ssid, INT evttyp, ID resid, INT info);

Parameter

ID	ssid	Subsystem ID	Subsystem ID
INT	evttyp	Event Type	Event request type
INT	info	Information	Any parameter

Return Parameter

ER	ercd	Error Code	Error code
	U I UU	Error Code	Error code

Error Code

D 017	3.7 1 1 1
E OK	Normal completion

E ID Invalid ID number (ssid is invalid or cannot be used)

E NOEXS Object does not exist (the subsystem specified in ssid is not defined)

E_CTX Context error (issued from task-independent portion, or in dispatch disabled state)

Other Error code returned by the event handling function

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_SUBSYSTEM Support of subsystem management functions Support of event processing of subsystems

Description

Calls the event handling function of the subsystem specified in ssid.

Specifying ssid = 0 makes the system call applied to all currently defined subsystems. In this case the event handling function of each subsystem is called in sequence.

When evttyp is an odd number:

Calls subsystems in descending order of priority.

When evttyp is an even number:

Calls subsystems in ascending order of priority.

The calling order is undefined wheren these subsystems have the same priority.

If this system call is issued for a subsystem with no event handling function defined, the function is simply not called; no error results.

If the event handling function returns an error, the error code is passed transparently in the system call return code. When ssid = 0 and an event handler returns an error, the event handling functions of all other subsystems continue to be called. In the system call return code, only one error code is returned even if more than one event handling function returned an error. It is not possible to know which subsystem's event handling function returned the error.

If a task exception is raised for the task that called tk_evt_ssy, during the execution of event handling function, the task exception is held until the event handling function completes its processing.

Additional Notes

An example of using an event handling function is to perform the suspend/resume processing for the power management functions. Specifically, when the system enters the power-off state (device suspended state) due to power failure or other reason, it notifies each subsystem of its transition to suspended state. Then the event handling function of each subsystem is called to perform the appropriate processing for it. In μ T-Kernel/SM, tk_evt_ssy is executed for this purpose during the processing of tk_sus_dev. The event handling function of each subsystem performs any necessary operations before going to suspended state, such as saving the data. On the other hand, when the system returns (resumes) from the suspended state due to power on or other reason, it notifies each subsystem of its return from suspended state. Then the event handling function of each subsystem is called again to perform the appropriate processing for it. For more details, see the description of tk sus dev.

For another example, when a new device is registered by tk_def_dev , the system notifies each subsystem of the registration, and the event handling function of each subsystem is called to perform the appropriate processing for it. In μ T-Kernel/SM, tk_evt_ssy is executed for this purpose during the processing of tk_def_dev .

Porting Guideline

Note that info is INT type, and its value range is implementation-dependent, so care must be taken.

4.10.3 tk ref ssy - Reference Subsystem Status

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_ref_ssy(ID ssid, T_RSSY *pk_rssy);

Parameter

ID ssid Subsystem ID Subsystem ID

T_RSSY* pk_rssy Packet to Return Subsystem Status Pointer to the area to return the

subsystem definition information

Return Parameter

ER ercd Error Code Error code

pk_rssy Detail:

PRI ssypri Subsystem Priority Subsystem priority

(Other implementation-dependent parameters may be added beyond this point.)

Error Code

E_OK Normal completion

E_ID Invalid ID number (ssid is invalid or cannot be used)

E_NOEXS Object does not exist (the subsystem specified in ssid is not defined)

E_PAR Parameter error (invalid pk_rssy)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_SUBSYSTEM Support of subsystem management functions

When the service profile items below is set to be effective, subsystem priority (ssypri) can be acquired.

TK_SUPPORT_SSYEVENT Support of event processing of subsystems

Description

References information about the subsystem specified in ssid.

 $\label{thm:continuous} \mbox{ssypri returns the subsystem priority specified in $tk_def_ssy.} \mbox{If the subsystem specified in sid is not defined, E_NOEXS is returned.}$

Chapter 5

μT-Kernel/SM Functions

This chapter describes details of the functions provided by μ T-Kernel/SM (System Manager).

Overall Note and Supplement

- There are two types of API names that are defined in μ T-Kernel/SM specification: ones beginning with 'tk_' and others. It is generally assumed that APIs with a name beginning with 'tk_' are implemented using extended SVC (a Subsystem Management Function), and other APIs are implemented as library functions (including in-line functions) or macros of the C language. However, μ T-Kernel specification does not define the implementation of these APIs. So the developers are free to adopt different implementation methods. API implemented by libraries and macros may call extended SVCs or system calls indirectly.
- Error codes such as E_PAR, E_MACV, and E_NOMEM that can be returned in many situations are not described here always unless there is some special reason for doing so.
- Except where otherwise noted, extended SVC and libraries of μ T-Kernel/SM cannot be called from a task-independent portion and while dispatching and interrupts are disabled. There may be some limitations, however, imposed by particular implementations (E_CTX).
- Extended SVC and libraries of μ T-Kernel/SM cannot be invoked from a lower protection level than that at which T-Kernel/OS system calls can be invoked (lower than TSVCLimit)(E_OACV).
- Extended SVC and libraries of μ T-Kernel/SM are reentrant except when a special explanation is given. Note that some functions perform mutual exclusion internally.

5.1 System Memory Management Functions

The system memory management functions manage all the memory (system memory) allocated dynamically by μ T-Kernel. This includes memory used internally by μ T-Kernel as well as task stacks, message buffers, and memory pools.

System memory management functions include memory allocation libraries that manage memory through subdividing system memory into smaller blocks.

The system memory management functions are for use not only within μ T-Kernel but also used by applications, subsystems, and device drivers.

5.1.1 Memory Allocation Library Functions

 $\label{location} \mbox{Memory allocation library provides functions equivalent to $\mbox{malloc/calloc/free}$ provided by C standard library.}$

These memories are all allocated as memory with a protection level specified in TSVCLimit.

5.1.1.1 Kmalloc - Allocate Memory

C Language Interface

#include <tk/tkernel.h>

void* Kmalloc(size t size);

Parameter

size_t size Size Memory size to be allocated (in bytes)

Return Parameter

void* addr Memory Start Address Start address of the allocated memory

Error Codes

None.

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this API can be used.

TK SUPPORT MEMLIB

Support of memory allocation library

Description

Allocates the memory of bytes specified in size and returns the start address of the allocated memory in addr.

When the specified size of memory cannot be allocated or 0 is specified in size, NULL is returned in addr.

APIs in the memory allocation library, including Kmalloc, cannot be called from a task-independent portion and while dispatch or interrupt is disabled. Such a call may lead to an undefined behavior including possible system failure, and the caller is responsible for guaranteeing the state on the call.

Additional Notes

Any value can be specified in size. Note that a larger memory size than the number of bytes specified in size may be allocated internally due to allocating the management space, aligning the allocated memory address, or other reasons. For example, when the implementation specifies that the least allocatable memory size is 16 bytes and the alignment is an 8-byte unit, 16-byte memory is allocated internally even if a value less than 16 bytes is specified in size. Similarly, 24-byte memory is allocated even if 20 bytes is specified in size.

5.1.1.2 Kcalloc - Allocate Memory and Clear

C Language Interface

#include <tk/tkernel.h>

void* Kcalloc(size_t nmemb, size_t size);

Parameter

size_t	nmemb	Number of Memory Blocks	Number of memory blocks to be
			allocated
size_t	size	Size	Memory block size to be allocated (in
			bytes)

Return Parameter

void* addr Memory Start Address Start address of the allocated memory

Error Codes

None.

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this API can be used.

TK_SUPPORT_MEMLIB

Support of memory allocation library

Description

Allocates the specified number (nmemb) of contiguous memory blocks of the specified bytes (size), clears them with 0, then returns the start address of them in addr. This memory allocation operation is identical to allocating one memory block of the number of size*nmemb bytes.

When the specified number of memory blocks cannot be allocated or 0 is specified in nmemb or size, NULL is returned in addr.

APIs in the memory allocation libraries, including Kcalloc, cannot be called from a task-independent portion and while dispatch or interrupt is disabled. Such a call may lead to an undefined behavior including possible system failure, and the caller is responsible for guaranteeing the state on the call.

Additional Notes

A larger memory size than the number of size*nmemb bytes may be allocated internally. For more details, see the additional note for Kmalloc.

5.1.1.3 Krealloc - Reallocate Memory

C Language Interface

#include <tk/tkernel.h>

void* Krealloc(void *ptr, size t size);

Parameter

void*	ptr	Pointer to Memory	Memory address to be reallocated
size_t	size	Size	Reallocated memory size (in bytes)

Return Parameter

void*	addr	Memory Start Address	Start address of the reallocated memory
voiu	auui	Memory Start Address	Start address of the reallocated incliner

Error Codes

None.

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this API can be used.

TK SUPPORT_MEMLIB

Support of memory allocation library

Description

Changes the size of the previously allocated memory specified in ptr to the size specified in size. At that time, reallocates the memory and returns the start address of the reallocated memory in addr.

Generally, addr results in different value from ptr because the memory start address is moved by reallocating the memory with resizing. The content of the reallocated memory is retained. To do so, the memory content is copied during the Krealloc processing. The memory that becomes free by reallocation will be released.

The start address of the memory allocated previously by Kmalloc, Kcalloc, or Krealloc must be specified in ptr. The caller must guarantee the validity of ptr.

If NULL is specified in ptr, only the new memory allocation is performed. This operation is identical to Kmalloc.

When the specified size of memory cannot be reallocated or 0 is specified in size, NULL is returned in addr. In this case, the memory specified by ptr is only released if a value other than NULL is specified in ptr. This operation is identical to Kfree.

APIs in the memory allocation library, including Krealloc, cannot be called from a task-independent portion and while dispatch or interrupt is disabled. Such a call may lead to an undefined behavior including possible system failure, and the caller is responsible for guaranteeing the state on the call.

Additional Notes

The memory address returned in addr may be the same as ptr in some cases, for example, when the memory size becomes smaller than before by reallocation or when the reallocation is performed without moving the memory start address because an unallocated memory area was around the memory specified in ptr.

A larger memory size than the number of bytes specified in size may be allocated internally. For more details, see the additional note for Kmalloc.

5.1.1.4 Kfree - Release Memory

C Language Interface

#include <tk/tkernel.h>

void Kfree(void *ptr);

Parameter

void* ptr

Pointer to Memory

Start address of memory to be released

Return Parameter

None.

Error Codes

None.

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this API can be used.

TK SUPPORT MEMLIB

Support of memory allocation library

Description

Releases the memory specified in ptr.

The start address of the memory allocated previously by Kmalloc, Kcalloc, or Krealloc must be specified in ptr. The caller must guarantee the validity of ptr.

APIs in the memory allocation library, including Kfree, cannot be called from a task-independent portion and while dispatch or interrupt is disabled. Such a call may lead to an undefined behavior including possible system failure, and the caller is responsible for guaranteeing the state on the call.

5.2 Device Management Functions

Device management functions manage device drivers running on μ T-Kernel.

A device driver is a program that is implemented independent from μ T-Kernel itself to control a hardware device or perform I/O processing with the hardware device. Since the difference of specifications among individual devices is absorbed by the device driver when an application or middleware operates a device or performs I/O processing with the device via the device driver, the application or middleware can enhance its hardware independence and compatibility.

Device management functions include a function to define a device driver, or to register the device driver to μ T-Kernel, and a function to use the registered device driver from an application or middleware.

While this registration of device drivers is mostly performed in the initialization at system startup, it can also be performed dynamically during the normal operation of the system. A device driver is registered in the device registration information (ddev) that is one of parameters for the API, tk_def_dev, by specifying the set of functions (driver processing functions) of a program that actually implements device driver. These functions include the open function (openfn) that is called when a device is opened, the execute function (execfn) that is called when read or write processing starts, wait-for-completion function (waitfn) that waits for completion of read or write processing, etc. The actual operation of a device or I/O processing with the devices are performed in these driver processing functions.

As these driver execute functions are executed at protection level 0 as quasi-task portion, they can also access hardware directly. I/O processing with a device may be performed directly in these driver execute functions or may be performed in another task that runs based on the request from one of these driver execute functions. The specification of parameters, etc. when these driver execute functions are called is defined as part of the device driver interface. The device driver interface is an interface between a device driver and the μ T-Kernel device management functions.

When a device driver program is implemented, it is recommended to separate three layers of interface, logical, and physical layers carefully in order to enhance their maintainability and portability. The interface layer is responsible for implementing an interface between the μ T-Kernel device management functions and a device driver. The logical layer is responsible for performing a common processing according to the type of device. The physical layer is responsible for performing an operation dependent on the actual hardware or control chip. The interface specification, however, among the interface layer, logical layer, and physical layer is not specified in the μ T-Kernel, so that the actual layer separation can be implemented appropriately in each device driver. Programs that process the interface layer may be provided as libraries since there are many common processing steps that are independent of individual devices in the physical layer.

APIs are provided such as open (tk_opn_dev), close (tk_cls_dev), read (tk_rea_dev), write (tk_wri_dev), etc. to use the registered device driver from an application or middleware. The specification of these APIs is called an application interface. For example, when an application executes tk_opn_dev to open a device, the μ T-Kernel calls the open function (openfn) for the corresponding device driver to request the device open processing.

The positioning and structure of μ T-Kernel device management functions are shown in Figure 5.1, "Device Management Functions".

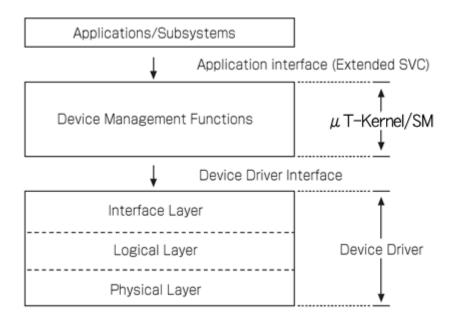


Figure 5.1: Device Management Functions

Additional Notes

The device drivers have common features with the subsystems as being implemented independent from μ T-Kernel itself and also being a system program to add or extend functions for μ T-Kernel. Additionally, both are also same in that they operate at protection level 0, and can access a hardware. Notable differences between the two, is that while API for calling a device driver is limited to using open/close and read/write type, API for calling a subsystem can be defined without any restriction.

Though μ T-Kernel device drivers managed by device management functions are assumed to be drivers for physical devices or hardware, they are not necessarily required to handle real physical devices or hardware. Also, system program for operating a device could be implemented as a subsystem rather than a device driver if it is not compatible with open/close or read/write type APIs.

5.2.1 Common Notes Related to Device Drivers

5.2.1.1 Basic Concepts

In addition to a physical device that represents a device as a physical hardware, there is a logical device that represents a perceived unit of a device from the viewpoint of software.

Although both devices match for most devices, when partitions were created on a hard disk or any other storage type device (SD card, USB storage, etc.), entire device represents a physical device and each partition represents a logical device.

The physical devices of same type are identified by "unit" while logical devices in one physical device are identified by "subunit." For example, the information that distinguishes the first hard disk from the second is called "unit," and the information that distinguishes the first partition from the second within that first hard disk is called "subunit."

The data definitions used in device management functions are explained in the subsequent subsections.

In the following description, the references and mentions are made to particular types of devices and their names. These are not meant to be the part of μ T-Kernel specification, but rather are offered as a common guideline for defining device driver specifications. Each device driver does not have to implement all the functions described here. However, each driver should be designed so that their behavior is compliant with the description in the following if applicable.

5.2.1.1.1 Device Name (UB* type)

A device name is a string of up to eight characters that is given to each device. US-ASCII is the used character code. It consists of the following elements:

#define L_DEVNM 8 /* Device name length */

Type

Name indicating the device type

Characters a to z and A to Z can be used.

Unit

One letter indicating a physical device

Each unit is assigned a letter from a to z in order starting from a.

Subunit

One to three digits indicating a logical device

Each subunit is assigned a number from 0 to 254 in order starting from 0.

Device names take the format of type + unit + subunit. Some devices may not have a unit or subunit, in which case the corresponding field is omitted.

The subunit is usually used to distinguish partitions in a hard disk. In other devices also, it can be used to create multiple logical devices in one physical device.

A name consisting of type + unit is called a physical device name. A name consisting of type + unit + subunit is called a logical device name. If there is no subunit, the physical device name and logical device name are identical. The term "device name" by itself means the logical device name.

Device name	Target device		
Example of Device Name			
Device name	Target device		
hda	Hard disk (entire disk)		
hda0	Hard disk (1st partition)		
fda	Floppy disk		
rsa	Serial port		
kbpd	Keyboard/pointing device		
fla	Flash memory		
neta	Network		

5.2.1.1.2 Device ID (ID type)

By registering a device (device driver) with μ T-Kernel/SM, a device ID (> 0) is assigned to the device (physical device name). Device IDs are assigned to each physical device. The device ID of a logical device consists of the device ID assigned to the physical device to which is appended the subunit number + 1 (1 to 255).

devid: The device ID assigned at device registration

devid Physical device devid + n+1 The nth subunit (logical device)

Example of Device ID		
Device name	Device ID	Summary description
hda	devid	Hard disk (entire disk)
hda0	devid + 1	1st partition of hard disk
hda1	devid + 2	2nd partition of hard disk

5.2.1.1.3 Device Attribute (ATR type)

Device attributes are defined in order to represent a feature for each device and classify a device for each type. Device attributes should be specified when registering a device driver.

The specification method of device attributes is as follows:

IIII IIII IIII PRxx xxxx KKKK KKKK

The high 16 bits are device-dependent attributes defined for each device. The low 16 bits are standard attributes defined as follows.

```
#define TD PROTECT
                          0 x 8 0 0 0
                                   /* P: Write protected */
#define TD_REMOVABLE
                          0x4000
                                   /* R: removable media */
#define TD DEVKIND
                          0 x 0 0 f f
                                   /* K: device/media kind */
#define TD_DEVTYPE
                          0 x 0 0 f 0
                                          device type */
                                   /* device type */
#define TDK_UNDEF
                          0x0000
                                   /* undefined/unknown */
                          0 x 0 0 1 0
#define TDK_DISK
                                   /* disk device */
```

Within the realm of μ T-Kernel, the device type other than disk type is not defined. Defining the device type other than disk type does not affect the behavior of μ T-Kernel. Other devices are assigned to undefined type (TDK UNDEF).

For the disk device, the disk kinds are additionally defined. The typical disk kinds are as follows:

```
/* disk kind */
#define TDK DISK UNDEF
                         0x0010
                                 /* miscellaneous disk */
#define TDK_DISK_RAM
                         0x0011
                                 /* RAM disk (used as main memory) */
#define TDK_DISK_ROM
                         0x0012
                                 /* ROM disk (used as main memory) */
#define TDK DISK FLA
                         0x0013
                                 /st Flash ROM or other silicon disk st/
#define TDK_DISK_FD
                         0 x 0 0 1 4
                                 /* Floppy disk */
                                 /* hard disk */
#define TDK_DISK_HD
                         0x0015
#define TDK_DISK_CDROM
                         0x0016
                                 /* CD-ROM */
```

The definition of disk kinds does not affect the μ T-Kernel behavior. These definitions are used only when they are required in a device driver or an application. For example, when an application must change its processing according to the kind of devices or media, the disk kind information is used. Devices or media that do not need such distinctions do not have to be assigned a device type.

5.2.1.1.4 Device Descriptor (ID type)

A device descriptor is an identifier used to access a device.

The device descriptor is assigned a positive value (> 0) by the $\,\mu$ T-Kernel/SM when a device is opened.

5.2.1.1.5 Request ID (ID type)

When an I/O request is made to a device, a request ID (> 0) is assigned identifying the request. This ID can be used to wait for I/O completion.

5.2.1.1.6 Data Number (W type, D type)

Data input/output from/to device is specified by a data number. Data is roughly classified into device-specific data and attribute data.

Device-specific data: Data number ≥ 0

As device-specific data, the data numbers are defined separately for each device.

Data number
Data number = physical block number
Data number = 0 only
_

Attribute data: Data number < 0

Attribute data specifies driver or device state acquisition and setting modes, and special functions, etc. Data numbers common to devices are defined, but device-dependent attribute data can also be defined. For more details, see Section 5.2.1.2, "Attribute Data".

5.2.1.2 Attribute Data

Attribute data are classified broadly into the following three types of data.

Common attributes

Attributes defined in common for all devices (device drivers).

Device kind attributes

Attributes defined in common for devices (device drivers) of the same kind.

Device-specific attributes

Attributes defined individually for each device (device driver).

Device kind attributes and device-specific attributes are out of scope of this specification and defined in device driver's specifications. Only the common attributes are defined here.

Common attributes are assigned attribute data numbers in the range from -1 to -99. While common attribute data numbers are the same for all devices, not all devices necessarily support all the common attributes. If an unsupported data number is specified, error code E_PAR is returned.

The definition of common attributes is as follows:

```
#define TDN_EVENT (-1) /* RW: event notification message buffer ID */
#define TDN_DISKINFO (-2) /* R: disk information */
#define TDN_DISPSPEC (-3) /* reserved */
#define TDN_PCMCIAINFO (-4) /* reserved */
#define TDN_DISKINFO_D (-5) /* R: disk information (64-bit device) */
```

```
RW: read (tk_rea_dev)/write (tk_wri_dev) enabled
```

R-: read (tk_rea_dev) only

TDN EVENT

Event notification message buffer ID

```
Data type ID
```

The ID of the message buffer used for device event notification.

As a device is registered by tk_def_dev when a device driver is started and the system default event notification message buffer ID (evtmbfid) is returned as this API return parameter, the value is held in the device driver and is used as the initial value of this attribute data.

If 0 is set, device events are not notified. For device event notification, see Section 5.2.3.3, "Device Event Notification".

TDN DISKINFO

32-bit device and disk information

Data type DiskInfo

```
typedef enum {
        DiskFmt STD
                         = 0.
                                           /* standard (HD, etc.) */
        DiskFmt CDROM
                                           /* CD-ROM 640MB */
} DiskFormat;
typedef struct {
        DiskFormat format;
                                           /* format */
        UW
                                           /* protected status */
                 protect:1;
        UW
                 removable:1;
                                           /* removable */
        UW
                 rsv:30;
                                           /* reserved (always 0) */
```

```
W blocksize; /* block size in bytes */
W blockcont; /* total block count */
} DiskInfo;
```

For definition of DiskFormat other than the above description, see the specification related to device drivers

TDN DISPSPEC

Display Device Specification

Data type DEV_SPEC

For the definition of DEV_SPEC, see the specification related to device drivers.

TDN DISKINFO D

64-bit device and disk information

Data type DiskInfo_D

```
typedef struct diskinfo d {
        DiskFormat format;
                                  /* format */
        B00L
                 protect:1;
                                  /* protected status */
        B00L
                 removable:1;
                                  /* removable */
        UW
                 rsv:30;
                                  /* reserved (0) */
                                  /* block size in bytes */
        W
                 blocksize;
                                  /* total number of blocks in 64-bit */
        D
                 blockcont d;
} DiskInfo_D;
```

Difference between DiskInfo_D and DiskInfo is only the part of their names being blockcont or blockcont_d, and the data type.

 μ T-Kernel/SM does not convert a data between DiskInfo and DiskInfo_D. TDN_DISKINFO and TDN_DISKINFO_D just pass the request to device driver without any modification.

The disk device driver must support one of TDN_DISKINFO and TDN_DISKINFO_D, or both. It is recommended that TDN_DISKINFO is supported wherever possible.

Even if the total number of blocks of entire disk exceeds W, the number of blocks of individual partition may fit within W. In that case, the preferable implementation is such that a partitions fitting within W correspond to TDN_DISKINFO and partitions not fitting within W are determined to be an error (E_PAR) by TDN_DISKINFO. It is also preferable that TDN_DISKINFO_D is supported even if the number of blocks fit within W.

There is no direct dependency between the support for TDN_DISKINFO_D and the device driver attribute TDA_DEV_D. A device driver does not always have TDA_DEV_D attribute even if TDN_DISKINFO_D is supported. Also, TDN DISKINFO D is not always supported even if the device driver has TDA DEV D attribute.

As the definition of common attributes described above is a part of the specification of device driver rather than μ T-Kernel, it does not directly affect the μ T-Kernel behavior. Each device driver does not need to implement all the functions defined in the common attributes. However, as the definition of common attributes is applicable to all the device drivers, the specification of each device driver must be specified in a way that does not conflict with these definitions.

5.2.2 Device Input/Output Operations

The application interface is used to make use of the registered device drivers from an application or middleware. API of μ T-Kernel provides the following functions. These functions cannot be called from a taskindependent portion or while dispatch or interrupts are disabled (E_CTX).

```
tk opn dev ( CONST UB *devnm, UINT omode )
ER
   tk_cls_dev( ID dd, UINT option )
    tk_rea_dev( ID dd, W start, void *buf, SZ size, TMO tmout )
ID
    tk_rea_dev_du( ID dd, D start_d, void *buf, SZ size, TMO_U tmout_u )
ΙD
ER
    tk_srea_dev( ID dd, W start, void *buf, SZ size, SZ *asize )
    tk_srea_dev_d( ID dd, D start_d, void *buf, SZ size, SZ *asize )
ER
    tk_wri_dev( ID dd, W start, CONST void *buf, SZ size, TMO tmout )
tk_wri_dev_du( ID dd, D start_d, CONST void *buf, SZ size, TMO_U tmout_u )
ΙD
ΙD
    tk_swri_dev( ID dd, W start, CONST void *buf, SZ size, SZ *asize )
ER
    tk_swri_dev_d( ID dd, D start_d, CONST void *buf, SZ size, SZ *asize )
ER
    tk_wai_dev( ID dd, ID reqid, SZ *asize, ER *ioer, TMO tmout )
ΙD
   tk_wai_dev_u( ID dd, ID reqid, SZ *asize, ER *ioer, TMO_U tmout_u )
ΙD
INT tk_sus_dev( UINT mode )
ID tk_get_dev( ID devid, UB *devnm )
ID tk ref dev( CONST UB *devnm, T RDEV *rdev )
ID tk_oref_dev( ID dd, T_RDEV *rdev )
INT tk lst dev( T LDEV *ldev, INT start, INT ndev )
INT tk evt dev( ID devid, INT evttyp, void *evtinf )
```

5.2.2.1 tk_opn_dev - Open Device

C Language Interface

#include <tk/tkernel.h>

ID dd = tk_opn_dev(CONST UB *devnm, UINT omode);

Parameter

CONST UB*	devnm	Device Name	Device name
UINT	omode	Open Mode	Open mode

Return Parameter

ID	dd		Device Descriptor	Device descriptor
		or	Error Code	Error code

Error Code

E_BUSY	Device BUSY (exclusive open)
E NOEXS	Device does not exist

E_LIMIT Open count exceeds the limit

Other Error code returned by device driver

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

Opens the device specified in devnm in the mode specified in omode, and prepares for device access. The device descriptor is passed in the return code.

```
omode := (TD_READ || TD_WRITE || TD_UPDATE) | [TD_EXCL || TD_WEXCL || TD_REXCL]
```

```
#define TD READ
                         0x0001
                                          /* read only */
#define TD WRITE
                         0x0002
                                          /* write only */
#define TD UPDATE
                         0x0003
                                          /* read/write */
#define TD EXCL
                         0x0100
                                          /* exclusive */
#define TD WEXCL
                         0x0200
                                          /* exclusive write */
#define TD_REXCL
                         0x0400
                                          /* exclusive read */
```

TD READ

read only

TD WRITE

Write only

TD_UPDATE

Read/write

Sets the access mode.

When TD_READ is set, tk_wri_dev cannot be used.

When TD_WRITE is set, tk_rea_dev cannot be used.

TD EXCL

Exclusive

TD WEXCL

Exclusive write

TD REXCL

Exclusive read

Sets the exclusive mode.

When $\ensuremath{\mathsf{TD_EXCL}}$ is set, all concurrent opening is prohibited.

When TD_WEXCL is set, concurrent opening in write mode (TD_WRITE or TD_UPDATE) is prohibited.

When TD_REXCL is set, concurrent opening in read mode (TD_READ or TD_UPDATE) is prohibited.

						Cond	current	Open I	Mode				
Present Open	Mode	No exclusive		TD_WEXCL		TD_REXCL		TD_EXCL		L			
			mode										
		R	U	W	R	U	W	R	U	W	R	U	W
No exclusive	R	YES	YES	YES	YES	YES	YES	NO	NO	NO	NO	NO	NO
mode	U	YES	YES	YES	NO	NO	NO	NO	NO	NO	NO	NO	NO
mode	W	YES	YES	YES	NO	NO	NO	YES	YES	YES	NO	NO	NO
TD_WEXCL U	R	YES	NO	NO	YES	NO	NO	NO	NO	NO	NO	NO	NO
	U	YES	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
	W	YES	NO	NO	NO	NO	NO	YES	NO	NO	NO	NO	NO
	R	NO	NO	YES	NO	NO	YES	NO	NO	NO	NO	NO	NO
TD_REXCL	U	NO	NO	YES	NO	NO	NO	NO	NO	NO	NO	NO	NO
	W	NO	NO	YES	NO	NO	NO	NO	NO	YES	NO	NO	NO
	R	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
TD_EXCL	U	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
	W	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO

Table 5.1: Whether Concurrent Open of Same Device is Allowed or NOT

R = TD READ

W = TD_WRITE

 $U = TD_UPDATE$

YES = Yes, can be opened

NO = No, cannot be opened (E_BUSY)

When a physical device is opened, the logical devices belonging to it are all treated as having been opened in the same mode, and are processed as exclusive open.

5.2.2.2 tk_cls_dev - Close Device

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_cls_dev(ID dd, UINT option);

Parameter

IDddDevice DescriptorDevice descriptorUINToptionClose OptionClose option

Return Parameter

ER ercd Error Code Error code

Error Code

E_ID dd is invalid or not open

Other Error code returned by device driver

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

Closes device descriptor dd. If a request is being processed, the processing is aborted and the device is closed.

option := [TD_EJECT]

TD EJECT

Eject media

If the same device has not been opened by another task, the media is ejected. In the case of devices that cannot eject their media, the request is ignored.

5.2.2.3 tk_rea_dev - Start Read Device

C Language Interface

#include <tk/tkernel.h>

ID reqid = tk_rea_dev(ID dd, W start, void *buf, SZ size, TMO tmout);

Parameter

ID	dd	Device Descriptor	Device descriptor
W	start	Start Location	Read start location (≥ 0 :
			Device-specific data, < 0: Attribute
			data)
void*	buf	Buffer	Buffer location for putting the read data
SZ	size	Read Size	Read size
TMO	tmout	Timeout	Request acceptance timeout (ms)

Return Parameter

ID	reqid		Request ID	Request ID
		or	Error Code	Error code

Error Code

E_ID	dd is invalid or not open
E_OACV	Open mode is invalid (read not permitted)
E_LIMIT	Number of requests exceeds the limit
E_TMOUT	Busy processing other requests
E_ABORT	Processing aborted
Other	Error code returned by device driver

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

Initiates reading device-specific data or attribute data from the specified device. This function initiates reading only, returning to its caller without waiting for the read operation to finish. The space specified in <code>buf</code> must be retained until the read operation completes. Read completion is waited for by <code>tk_wai_dev</code>. The time required for initiating read operation differs among device drivers; return of control is not necessarily immediate.

In the case of device-specific data, the start and size units are defined for each device. With attribute data, start is an attribute data number and size is in bytes. The attribute data of the data number specified in start is read. Normally size must be at least as large as the size of the attribute data to be read. Reading of multiple

attribute data in one operation is not possible. When size = 0 is specified, actual reading does not take place but the current size of data that can be read is checked.

Whether or not a new request can be accepted while a read or write operation is in progress depends on the device driver. If a new request cannot be accepted, the request is queued. The timeout for request waiting is set in tmout. The TMO_POL or TMO_FEVR attribute can be specified in tmout. Note that the timeout applies to the request acceptance. Once a request has been accepted, this function does not time out.

It is permissible to call this API to a driver that has TDA_DEV_D or TDA_TMO_U attribute. In that case, the parameters are converted appropriately by μ T-Kernel/SM. For example, if the device driver has TDA_TMO_U attribute, the timeout interval (milliseconds) specified in tmout of this API is converted to time in microseconds, and then passed to the driver with TDA_TMO_U attribute.

5.2.2.4 tk_rea_dev_du - Read Device (64-bit, Microseconds)

C Language Interface

#include <tk/tkernel.h>

ID reqid = tk_rea_dev_du(ID dd, D start_d, void *buf, SZ size, TMO_U tmout_u);

Parameter

ID	dd	Device Descriptor	Device descriptor
D	start_d	Start Location	Read start location (64 bit, ≥ 0 :
			Device-specific data, < 0: Attribute
			data)
void*	buf	Buffer	Buffer location for putting the read data
SZ	size	Read Size	Read size
TMO_U	tmout_u	Timeout	Request acceptance timeout (in
			microseconds)

Return Parameter

ID	reqid		Request ID	Request ID
		or	Error Code	Error code

Error Code

E_ID	dd is invalid or not open
E_OACV	Open mode is invalid (read not permitted)
E_LIMIT	Number of requests exceeds the limit
E_TMOUT	Busy processing other requests
E_ABORT	Processing aborted
Other	Error code returned by device driver

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this API can be used.

TK_SUPPORT_LARGEDEV	Support of large mass-storage devices (64-bit)
TK_SUPPORT_USEC	Support of microsecond

Description

This API takes the parameters $start_d$ (64 bits) and $tmout_u$ (64-bit microseconds), instead of the parameters start and tmout of tk_rea_dev .

Its specification is the same as that of tk_rea_dev , except that the parameters are changed to $start_d$ and $tmout_u$. For more details, see the description of tk_rea_dev .

Additional Notes

If the corresponding device driver does not have the TDA_DEV_D attribute, the error code E_PAR is returned when specifying a value that is out of the range of W for the start position start_d.

If the corresponding device driver does not have the TDA_TMO_U attribute (does not supports microseconds), it cannot handle the timeout in microseconds. In that case, the timeout (in microseconds) specified by this API in $tmout_u$ is rounded to the time in milliseconds and passed to the device driver.

Thus, the appropriate conversion of parameters is executed by μ T-Kernel/SM. The application does not have to know whether the device driver has the TDA_DEV_D attribute or not, i.e. whether the device driver supports 64 bits or not.

5.2.2.5 tk_srea_dev - Synchronous Read

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_srea_dev(ID dd, W start, void *buf, SZ size, SZ *asize);

Parameter

ID	dd	Device Descriptor	Device descriptor
W	start	Start Location	Read start location (≥ 0 :
			Device-specific data, < 0: Attribute
			data)
void*	buf	Buffer	Buffer location for putting the read data
SZ	size	Read Size	Read size
SZ^*	asize	Actual Size	Pointer to the area to return the read
			size

Return Parameter

ER	ercd	Error Code	Error code
SZ	asize	Actual Size	Actually read size

Error Code

E_ID	dd is invalid or not open
E_OACV	Open mode is invalid (read not permitted)
E_LIMIT	Number of requests exceeds the limit
E_ABORT	Processing aborted
Other	Error code returned by device driver

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

Synchronous read. This is equivalent to the following.

```
if ( er > 0 ) er = ioer;
}
return er;
}
```

This API can be used for a device driver that has the TDA_DEV_D attribute. In that case, the parameters are converted appropriately by μ T-Kernel/SM.

5.2.2.6 tk_srea_dev_d - Synchronous Read (64-bit)

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_srea_dev_d(ID dd, D start_d, void *buf, SZ size, SZ *asize);

Parameter

dd	Device Descriptor	Device descriptor
start_d	Start Location	Read start location (64 bit, ≥ 0 :
		Device-specific data, < 0: Attribute
		data)
buf	Buffer	Buffer location for putting the read data
size	Read Size	Read size
asize	Actual Size	Pointer to the area to return the read
		size
	start_d buf size	start_d Start Location buf Buffer size Read Size

Return Parameter

ER	ercd	Error Code	Error code
SZ	asize	Actual Size	Actually read size

Error Code

E_ID	dd is invalid or not open
E_OACV	Open mode is invalid (read not permitted)
E_LIMIT	Number of requests exceeds the limit
E_ABORT	Processing aborted
Other	Error code returned by device driver

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this API can be used.

TK_SUPPORT_LARGEDEV Support of large mass-storage devices (64-bit)

Description

This API takes the 64-bit parameter start_d, instead of the parameter start of tk_srea_dev.

Its specification is the same as that of tk_srea_dev , except that the parameter is changed to $start_d$. For more details, see the description of tk_srea_dev .

Additional Notes

If the corresponding device driver does not have the TDA_DEV_D attribute, the error code E_PAR is returned when specifying a value that is out of the range of W for the start position $start_d$.

Thus, the appropriate conversion of parameters is executed by μ T-Kernel/SM. The application does not have to know whether the device driver has the TDA_DEV_D attribute or not, i.e. whether the device driver supports 64 bits or not.

5.2.2.7 tk_wri_dev - Start Write Device

C Language Interface

#include <tk/tkernel.h>

ID reqid = tk_wri_dev(ID dd, W start, CONST void *buf, SZ size, TMO tmout);

Parameter

ID	dd	Device Descriptor	Device descriptor
W	start	Start Location	write start location (≥ 0 :
			Device-specific data, < 0: Attribute
			data)
CONST void*	buf	Buffer	Buffer holding data to be written
SZ	size	Write Size	Size of data to be written
TMO	tmout	Timeout	Request acceptance timeout (ms)

Return Parameter

ID	reqid		Request ID	Request ID
		or	Error Code	Error code

Error Code

E_ID	dd is invalid or not open
E_OACV	Open mode is invalid (write not permitted)
E_RONLY	Read-only device
E_LIMIT	Number of requests exceeds the limit
E_TMOUT	Busy processing other requests
E_ABORT	Processing aborted
Other	Error code returned by device driver

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

Initiates writing device-specific data or attribute data to a device. This function initiates writing only, returning to its caller without waiting for the write operation to finish. The space specified in buf must be retained until the write operation completes. Write completion is waited for by tk_wai_dev. The time required for initiating write operation differs among device drivers; return of control is not necessarily immediate.

In the case of device-specific data, the start and size units are defined for each device. With attribute data, start is an attribute data number and size is in bytes. The attribute data of the data number specified in start is written. Normally size must be at least as large as the size of the attribute data to be written. Multiple

attribute data cannot be written in one operation. When size = 0 is specified, actual writing does not take place but the current size of data that can be written is checked.

Whether or not a new request can be accepted while a read or write operation is in progress depends on the device driver. If a new request cannot be accepted, the request is queued. The timeout for request waiting is set in tmout. The TMO_POL or TMO_FEVR attribute can be specified in tmout. Note that the timeout applies to the request acceptance. Once a request has been accepted, this function does not time out.

It is permissible to call this API to a driver that has TDA_DEV_D or TDA_TMO_U attribute. In that case, the parameters are converted appropriately by μ T-Kernel/SM. For example, if the device driver has TDA_TMO_U attribute, the timeout interval (milliseconds) specified in tmout of this API is converted to time in microseconds, and then passed to the driver with TDA_TMO_U attribute.

5.2.2.8 tk_wri_dev_du - Write Device (64-bit, Microseconds)

C Language Interface

#include <tk/tkernel.h>

ID reqid = tk_wri_dev_du(ID dd, D start_d, CONST void *buf, SZ size, TMO_U tmout_u);

Parameter

ID	dd	Device Descriptor	Device descriptor
D	start_d	Start Location	Write start location (64 bit, ≥ 0 :
			Device-specific data, < 0: Attribute
			data)
CONST void*	buf	Buffer	Buffer holding data to be written
SZ	size	Write Size	Size of data to be written
TMO_U	tmout_u	Timeout	Request acceptance timeout (in
			microseconds)

Return Parameter

ID	reqid		Request ID	Request ID
		or	Error Code	Error code

Error Code

E_ID	dd is invalid or not open
E_OACV	Open mode is invalid (write not permitted)
E_RONLY	Read-only device
E_LIMIT	Number of requests exceeds the limit
E_TMOUT	Busy processing other requests
E_ABORT	Processing aborted
Other	Error code returned by device driver

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this API can be used.

TK_SUPPORT_LARGEDEV	Support of large mass-storage devices (64-bit)
TK_SUPPORT_USEC	Support of microsecond

Description

This API takes the parameters $start_d$ (64 bits) and $tmout_u$ (64-bit microseconds), instead of the parameters start and tmout of tk_wri_dev .

Its specification is the same as that of tk_wri_dev , except that the parameters are changed to $start_d$ and

tmout_u. For more details, see the description of tk_wri_dev.

Additional Notes

If the corresponding device driver does not have the TDA_DEV_D attribute, the error code E_PAR is returned when specifying a value that is out of the range of W for the start position start_d.

If the corresponding device driver does not have the TDA_TMO_U attribute (does not supports microseconds), it cannot handle the timeout in microseconds. In that case, the timeout (in microseconds) specified by this API in tmout_u is rounded to the time in milliseconds and passed to the device driver.

Thus, the appropriate conversion of parameters is executed by μ T-Kernel/SM. The application does not have to know whether the device driver has the TDA_DEV_D attribute or not, i.e. whether the device driver supports 64 bits or not.

5.2.2.9 tk_swri_dev - Synchronous Write

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_swri_dev(ID dd, W start, CONST void *buf, SZ size, SZ *asize);

Parameter

ID	dd	Device Descriptor	Device descriptor
W	start	Start Location	Write start location (≥ 0 :
			Device-specific data, < 0: Attribute
			data)
CONST void*	buf	Buffer	Buffer holding data to be written
SZ	size	Write Size	Size of data to be written
SZ^*	asize	Actual Size	Pointer to the area to return the
			written size

Return Parameter

ER	ercd	Error Code	Error code
SZ	asize	Actual Size	Actually written size

Error Code

E_ID	dd is invalid or not open
E_OACV	Open mode is invalid (write not permitted)
E_RONLY	Read-only device
E_LIMIT	Number of requests exceeds the limit
E_ABORT	Processing aborted
Other	Error code returned by device driver

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

Synchronous write. This is equivalent to the following.

```
ER tk_swri_dev( ID dd, W start, void *buf, SZ size, SZ *asize )
{
    ER     er, ioer;
    er = tk_wri_dev(dd, start, buf, size, TMO_FEVR);
    if ( er > 0 ) {
```

```
er = tk_wai_dev(dd, er, asize, &ioer, TMO_FEVR);
    if ( er > 0 ) er = ioer;
}
return er;
}
```

This API can be used for a device driver that has the TDA_DEV_D attribute. In that case, the parameters are converted appropriately by μ T-Kernel/SM.

5.2.2.10 tk_swri_dev_d - Synchronous Write (64-bit)

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_swri_dev_d(ID dd, D start_d, CONST void *buf, SZ size, SZ *asize);

Parameter

ID	dd	Device Descriptor	Device descriptor
D	start_d	Start Location	Write start location (64 bit, ≥ 0 :
			Device-specific data, < 0: Attribute
			data)
CONST void*	buf	Buffer	Buffer holding data to be written
SZ	size	Write Size	Size of data to be written
SZ^*	asize	Actual Size	Pointer to the area to return the
			written size

Return Parameter

ER	ercd	Error Code	Error code
SZ	asize	Actual Size	Actually written size

Error Code

E_{ID}	dd is invalid or not open
E_OACV	Open mode is invalid (write not permitted)
E_RONLY	Read-only device
E_LIMIT	Number of requests exceeds the limit
E_ABORT	Processing aborted
Other	Error code returned by device driver

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this API can be used.

TK_SUPPORT_LARGEDEV Support of large mass-storage devices (64-bit)

Description

This API takes the 64-bit parameter start_d, instead of the parameter start of tk_swri_dev.

Its specification is the same as that of tk_swri_dev, except that the parameter is changed to start_d. For more details, see the description of tk_swri_dev.

Additional Notes

If the corresponding device driver does not have the TDA_DEV_D attribute, the error code E_PAR is returned when specifying a value that is out of the range of W for the start position start_d.

Thus, the appropriate conversion of parameters is executed by μ T-Kernel/SM. The application does not have to know whether the device driver has the TDA_DEV_D attribute or not, i.e. whether the device driver supports 64 bits or not.

5.2.2.11 tk_wai_dev - Wait for Request Completion for Device

C Language Interface

#include <tk/tkernel.h>

ID creqid = tk_wai_dev(ID dd, ID reqid, SZ *asize, ER *ioer, TMO tmout);

Parameter

ID	dd	Device Descriptor	Device descriptor
ID	reqid	Request ID	Request ID
SZ*	asize	Actually Read/Written Size	Pointer to the area to return the read/written size
ER* TMO	ioer tmout	I/O Error Timeout	Pointer to the area to return I/O error Timeout (ms)
11010	tillout	Timeout	Timeout (ms)

Return Parameter

ID	creqid		Completed Request ID	Completed request ID
		or	Error Code	Error code
SZ	asize		Actually Read/Written Size	Actually read/written size
ER	ioer		I/O Error	I/O error

Error Code

E_ID	dd is invalid or not opened, or reqid is invalid or not a request for dd
E_OBJ	Another task is already waiting for request reqid
E_NOEXS	No requests are being processed (only when $reqid = 0$)
E_TMOUT	Timeout (processing continues)
E_ABORT	Processing aborted
Other	Error code returned by device driver

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

Waits for completion of request reqid for device dd. If reqid = 0 is set, this function waits for completion of any pending request to dd. This function waits for completion only of requests currently processing when the function is called. A request issued after tk_wai_dev was called is not waited for.

When multiple requests are being processed concurrently, the order of their completion is not necessarily the same as the order of request but is dependent on the device driver. Processing is, however, guaranteed to be performed in a sequence such that the result is consistent with the order of requesting. When processing a read operation from a disk, for example, the sequence might be changed as follows.

Block number request sequence 1 4 3 2 5

Block number processing sequence 1 2 3 4 5

Disk access can be made more efficient by changing the sequence as above with the aim of reducing seek time and spin wait time.

The timeout for waiting for completion is set in tmout. The TMO_POL or TMO_FEVR attribute can be specified for tmout. If a timeout error is returned (E_TMOUT), tk_wai_dev must be called again to wait for completion since the request processing is still ongoing. When reqid > 0 and $tmout = TMO_FEVR$ are both set, the processing must be completed without timing out.

If the device driver returns a processing result error (such as I/O error) for the requested processing, the error code is stored in ioer instead of the return code. Specifically, the error code, which is stored in error of the request packet T_DEVREQ by the wait-for-completion function (waitfn) called for processing tk_wai_dev, is returned to ioer as the processing result error.

On the other hand, the return code is used for errors when the wait request itself was not handled properly. When error is passed in the return code, ioer has no meaning. Note also that if an error is passed in the return code, tk_wai_dev must be called again to wait for completion since the processing is still ongoing. For more details, see Section 5.2.3.2.4, "waitfn - Wait-for-completion function".

If a task exception is raised during completion waiting by tk_wai_dev, the request in reqid is aborted and processing is completed. The result of aborting the requested processing is dependent on the device driver. When reqid = 0 was set, however, requests are not aborted but are treated as timeout. In this case E_ABORT rather than E TMOUT is returned.

It is not possible for multiple tasks to wait for completion of the same request ID at the same time. If there is a task waiting for request completion with reqid = 0 set, another task cannot wait for completion for the same dd. Similarly, if there is a task waiting for request completion with reqid > 0 set, another task cannot wait for completion specifying reqid = 0.

It is permissible to call this API to a driver with TDA_TMO_U attribute In such instances, μ T-Kernel/SM converts the parameter(s) appropriately. For example, if the device driver has TDA_TMO_Uattribute, the timeout in milliseconds specified in tmout of this API is converted to timeout value in microseconds, and is passed to the driver with TDA_TMO_U.

5.2.2.12 tk_wai_dev_u - Wait Device (Microseconds)

C Language Interface

#include <tk/tkernel.h>

ID creqid = tk_wai_dev_u(ID dd, ID reqid, SZ *asize, ER *ioer, TMO_U tmout_u);

Parameter

ID	dd	Device Descriptor	Device descriptor
ID	reqid	Request ID	Request ID
SZ*	asize	Actually Read/Written Size	Pointer to the area to return the read/written size
ER*	ioer	I/O Error	Pointer to the area to return I/O error
TMO U	tmout u	Timeout	Timeout (in microseconds)

Return Parameter

ID	creqid		Completed Request ID	Completed request ID
		or	Error Code	Error code
SZ	asize		Actually Read/Written Size	Actually read/written size
ER	ioer		I/O Error	I/O error

Error Code

E_ID	dd is invalid or not opened, or reqid is invalid or not a request for dd
E_OBJ	Another task is already waiting for request reqid
E_NOEXS	No requests are being processed (only when $reqid = 0$)
E_TMOUT	Timeout (processing continues)
E_ABORT	Processing aborted
Other	Error code returned by device driver

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this API can be used.

TK_SUPPORT_USEC Support of microsecond

Description

This API takes the parameter tmout_u (64-bit microseconds), instead of the parameter tmout of tk_wai_dev.

Its specification is the same as that of tk_wai_dev , except that the parameter changed to $tmout_u$. For more details, see the description of tk_wai_dev .

Additional Notes

If the corresponding device driver does not have the TDA_TMO_U attribute (does not supports microseconds), it cannot handle the timeout in microseconds. In that case, the timeout (in microseconds) specified by this API in tmout_u is rounded to the time in milliseconds and passed to the device driver.

Thus, the appropriate conversion of parameters is executed by μ T-Kernel/SM. The application does not have to know whether the device driver has the TDA_TMO_U attribute or not, i.e., whether the device driver supports microseconds or not.

5.2.2.13 tk_sus_dev - Suspends Device

C Language Interface

#include <tk/tkernel.h>

INT dissus = tk_sus_dev(UINT mode);

Parameter

UINT mode Mode Mode

Return Parameter

INT dissus Suspend Disable Request Suspend disable request count

Count

or Error Code Error code

Error Code

E_BUSY Suspend already disabled

E_QOVR Suspend disable request count limit exceeded

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this API can be used.

TK_SUPPORT_LOWPOWER

Support of power management functions

Description

Performs the processing specified in mode, then passes the resulting suspend disable request count in the return code.

```
mode := ( (TD_SUSPEND | [TD_FORCE]) || TD_DISSUS || TD_ENASUS || TD_CHECK)
```

```
#define TD_SUSPEND 0x0001 /* suspend */
#define TD_DISSUS 0x0002 /* disable suspension */
#define TD_ENASUS 0x0003 /* enable suspension */
#define TD_CHECK 0x0004 /* get suspend disable request count */
#define TD_FORCE 0x8000 /* forced suspend specification */
```

TD_SUSPEND

Suspend

If suspending is enabled, suspends processing.

If suspending is disabled, returns E_BUSY.

TD_SUSPEND | TD_FORCE

Forcibly suspend

Suspends even in suspend disabled state.

TD DISSUS

Disable suspension

Disables suspension.

TD ENASUS

Enable suspension

Enables suspension.

TD CHECK

Get suspend disable count

Gets only the number of times suspend disable has been requested.

Suspension is performed in the following steps.

1. Processing prior to start of suspension in each subsystem

```
tk_evt_ssy(0, TSEVT_SUSPEND_BEGIN, 0)
```

- 2. Suspension processing in devices
- 3. Processing after completion of suspension in each subsystem

```
tk_evt_ssy(0, TSEVT_SUSPEND_DONE, 0)
```

4. Suspended state

```
tk_set_pow(TPW_DOSUSPEND)
```

Resumption from SUSPEND state is performed in the following steps.

1. Return from SUSPEND state

```
Return from tk_set_pow(TPW_DOSUSPEND)
```

2. Processing prior to start of resumption in each subsystem

```
tk_evt_ssy(0, TSEVT_RESUME_BEGIN, 0)
```

- 3. Resumption processing in devices
- 4. Processing after completion of resumption in each subsystem

```
tk\_evt\_ssy(0, \, \mathsf{TSEVT\_RESUME\_DONE}, \, 0)
```

The number of suspend disable requests is counted. Suspension is enabled only if the same number of suspend enable requests is made. At system boot, the suspend disable count is 0 and suspension is enabled. The maximum suspend disable request count is implementation-dependent, but must be at least 255. When the upper limit is exceeded, E_QOVR is returned.

5.2.2.14 tk_get_dev - Get Device Name

C Language Interface

#include <tk/tkernel.h>

ID pdevid = tk_get_dev(ID devid, UB *devnm);

Parameter

ID	devid	Device ID	Device ID

UB* devnm Device Name Pointer to the device name storage

location

Return Parameter

ID pdevid Device ID of Physical Device Device ID of the physical device

or Error Code Error code

UB devnm Device Name Device name

Error Code

E_NOEXS The device specified in devid does not exist

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

Gets the device name of the device specified in devid and puts the result in devnm.

devid is the device ID of either a physical device or a logical device.

If devid is a physical device, the physical device name is put in devnm.

If devid is a logical device, the logical device name is put in devnm.

devnm requires a space of L_DEVNM + 1 bytes or larger.

The device ID of the physical device to which device devid belongs is passed in the return code.

5.2.2.15 tk_ref_dev - Get Device Information

C Language Interface

#include <tk/tkernel.h>

ID devid = tk_ref_dev(CONST UB *devnm, T_RDEV *rdev);

Parameter

CONST UB*	devnm	Device Name	Device name
T_RDEV^*	rdev	Packet to Return Device	Pointer to the area to return the
		Information	device information

Return Parameter

ID	devid		Device ID	Device ID
		or	Error Code	Error code

rdev Detail:

ATR	devatr	Device Attribute	Device attributes
SZ	blksz	Block Size of Device-specific	Block size of device-specific data (-1:
		Data	unknown)
INT	nsub	Subunit Count	Number of subunits
INT	subno	Subunit Number	0: Physical device, 1 to nsub:
			Subunit number+1

(Other implementation-dependent parameters may be added beyond this point.)

Error Code

 $\label{eq:energy} E_NOEXS \qquad \qquad \text{The device specified in devnm does not exist}$

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

Gets device information about the device specified in devnm, and puts the result in rdev. If rdev = NULL is set, the device information is not stored.

nsub indicates the number of physical device subunits belonging to the device specified in devnm.

The device ID of the device specified in devnm is passed in the return code.

5.2.2.16 tk_oref_dev - Get Device Information

C Language Interface

#include <tk/tkernel.h>

ID devid = tk_oref_dev(ID dd, T_RDEV *rdev);

Parameter

ID	dd	Device Descriptor	Device descriptor

T RDEV* rdev Packet to Return Device Pointer to the area to return the device

Information information

Return Parameter

ID devid Device ID Device ID or Error Code Error code

rdev Detail:

ATR devatr Device Attribute Device attributes
SZ blksz Block Size of Device-specific Block size of device-specific data (-1:

Data unknown)
INT nsub Subunit Count Number of

INT nsub Subunit Count Number of subunits
INT subno Subunit Number 0: Physical device, 1 to nsub: Subunit

number+1

(Other implementation-dependent parameters may be added beyond this point.)

Error Code

E_ID dd is invalid or not open

Valid Context

	Task portion	Quasi-task portion	Task-independent portion	
YES		YES	NO	

Related Service Profile Items

None.

Description

Gets device information about the device specified in dd, and puts the result in rdev. If rdev = NULL is set, the device information is not stored.

nsub indicates the number of physical device subunits belonging to the device specified in dd.

The device ID of the device specified in dd is passed in the return code.

5.2.2.17 tk_lst_dev - Get Registered Device Information

C Language Interface

#include <tk/tkernel.h>

INT remcnt = tk_lst_dev(T_LDEV *ldev, INT start, INT ndev);

Parameter

T_LDEV*	ldev	List of Devices	Location of registered device
			information (array)

INTstartStarting NumberStarting numberINTndevNumber of DevicesNumber to acquire

Return Parameter

INT rement Remaining Device Count Number of remain	naining registrations
--	-----------------------

or Error Code Error code

ldev Detail:

ATR devatr Device Attribute Device attribut	es
---	----

SZ blksz Block Size of Device-specific Block size of device-specific data (-1:

Data unknown)

INT nsub Subunit Count Number of subunits
UB devnm[L_DEVNM] Physical Device Name Physical device name
(Other implementation-dependent parameters may be added beyond this point.)

Error Code

E_NOEXS start exceeds the registered number

Valid Context

	Task portion	Quasi-task portion	Task-independent portion	
YES		YES	NO	

Related Service Profile Items

None.

Description

Gets information about registered devices. Registered devices are managed per physical device. The registered device information is therefore also obtained per physical device.

When the number of registered devices is N, number are assigned serially to devices from 0 to N - 1. Starting from the number specified in start in accordance with this scheme, the number of registrations specified in ndev is acquired and put in ldev. The space specified in ldev must be large enough to hold ndev registration information. The number of remaining registrations after start (N-start) is passed in the return code.

If the number of registrations from start is fewer than ndev, all remaining registrations are stored. A value passed in return code less than or equal to ndev means all remaining registrations were obtained. Note that this numbering changes as devices are registered and deleted. For this reason, accurate information may not be always obtained if the acquisition is carried out over multiple operations.

5.2.2.18 tk_evt_dev - Send Driver Request Event to Device

C Language Interface

#include <tk/tkernel.h>

INT retcode = tk_evt_dev(ID devid, INT evttyp, void *evtinf);

Parameter

ID	devid	Device ID	Event destination device ID
INT	evttyp	Event Type	Driver request event type
void*	evtinf	Event Information	Information for each event type

Return Parameter

INT retcode			Return Code from eventfn	Return code passed by eventfn	
		or	Error Code	Error code	

Error Code

E_NOEXS	The device specified in devid does not exist
E_PAR	Internal device manager events (evttyp < 0) cannot be specified
Other	Error code returned by device driver

Valid Context

Task portion	Quasi-task portion	Task-independent portion	
YES	YES	NO	

Related Service Profile Items

None.

Description

Sends a driver request event to the device (device driver) specified in devid.

The functioning of driver request events and the contents of evtinf are defined for each event type. For details on driver request event, see Section 5.2.3.2.6, "eventfn - Event function".

5.2.3 Registration of Device Driver

5.2.3.1 Registration Method of Device Driver

Device driver registration is performed for each physical device.

5.2.3.1.1 tk_def_dev - Register Device

C Language Interface

#include <tk/tkernel.h>

ID devid = tk def dev(CONST UB *devnm, CONST T DDEV *ddev, T IDEV *idev);

Parameter

CONST UB*	devnm	Physical Device Name	Physical device name
CONST T_DDEV*	ddev	Define Device	Device registration information
T_{IDEV^*}	idev	Initial Device Information	Device initial information

Return Parameter

ID	devid		Device ID	Device ID
	C	or	Error Code	Error code

idev Detail:

ID evtmbfid Event Notification Event notification message buffer Message Buffer ID ID

(Other implementation-dependent parameters may be added beyond this point.)

Error Code

E LIMIT Number of registrations exceeds the system limit

E_NOEXS The device specified in devnm does not exist (when ddev = NULL)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

Registers a device (device driver) with the device name set in <code>devnm</code>, and passes the device ID of the registered device in the return code. If a device with device name <code>devnm</code> is already registered, the registration is updated with new information, in which case the device ID does not change.

ddev specifies the device registration information. When ddev = NULL is specified, device devnm registration is deleted.

ddev is a structure in the following format:

```
typedef struct t_ddev {
    void *exinf; /* extended information */
```

```
ATR
                drvatr;
                          /* driver attributes */
        ATR
                devatr;
                          /* device attributes */
        INT
                          /* number of subunits */
                nsub;
        SZ
                          /* block size of device-specific data (-1: unknown) */
                blksz;
        FΡ
                openfn;
                          /* open function */
                         /st close function st/
        FΡ
                closefn;
                          /* execute function */
        FΡ
                execfn;
        FΡ
                          /* wait-for-completion function */
                waitfn:
                          /* abort function */
        FΡ
                abortfn;
        FΡ
                eventfn; /* event function */
        /* Implementation-dependent information may be added beyond this point.*/
} T DDEV;
```

exinf is used to store any desired information. The value is passed to the processing functions. Device management pays no attention to the contents.

drvatr sets device driver attribute information. The lower bits indicate system attributes, and the high bits are used for implementation-dependent attributes. The implementation-dependent attribute portion is used, for example, to define validity flags when implementation-dependent data is added to T_DDEV.

```
drvatr := [TDA_OPENREQ] | [TDA_TMO_U] | [TDA_DEV_D]
```

drvatr can be specified by combining the following driver attributes.

TDA OPENREQ

When a device is opened multiple times, normally openfn is called only the first time it is opened and closefn the last time it is closed. If TDA_OPENREQ is specified, then openfn/closefn will be called for all open/close operations even in case of multiple openings.

TDA TMO U

Indicates that timeout in microseconds is used.

In this case, the timeout tmout of driver processing functions is specified in the TMO_U format (microseconds).

TDA DEV D

Indicates that a 64-bit device is used. In this case, the type of the request packet devreq of driver processing functions is T_DEVREQ_D .

If TDA_TMO_U or TDA_DEV_D is specified, type of some parameters of driver processing functions is changed. If a combination of multiple driver attributes that change the type of parameters is specified in a driver processing function, the type of all specified parameters of that function is changed.

Device attributes are specified in devatr. The details of device attribute setting are as noted above.

The number of subunits is set in nsub. If there are no subunits, 0 is specified.

blksz sets the block size of device-specific data in bytes. In the case of a disk device, this is the physical block size. It is set to 1 byte for a serial port, etc. For a device with no device-specific data, it is set to 0. For an unformatted disk or other device whose block size is unknown, -1 is set. If blksz \leq 0, device-specific data cannot be accessed. When device-specific data is accessed by tk_rea_dev or tk_wri_dev, size * blksz must be the size of the area being accessed, that is, the size of buf.

openfn, closefn, execfn, waitfn, abortfn, and eventfn set the entry address of driver processing functions. For more details on driver processing functions, see Section 5.2.3.2, "Device Driver Interface".

The device initialization information is returned in idev. This includes information set by default when the device driver is started, and can be used as necessary. When idev = NULL is set, device initialization information is not stored.

evtmbfid specifies the system default message buffer ID for event notification. If there is no system default event notification message buffer, 0 is set.

Notification like the following is made to each subsystem when a device is registered or deleted. devid is the device ID of the registered or deleted physical device.

Device registration or update:

tk_evt_ssy(0, TSEVT_DEVICE_REGIST, devid)

Device deletion:

tk_evt_ssy(0, TSEVT_DEVICE_DELETE, devid)

5.2.3.1.2 tk_ref_idv - Reference Device Initialization Information

C Language Interface

#include <tk/tkernel.h>

ER ercd = tk_ref_idv(T_IDEV *idev);

Parameter

T_IDEV* idev Packet to Return Initial Device Pointer to the area to return the device

Information initialization information

Return Parameter

ER ercd Error Code Error code

idev Detail:

ID evtmbfid Event Notification Message Event notification message buffer ID

Buffer ID

(Other implementation-dependent parameters may be added beyond this point.)

Error Code

E_MACV Memory access privilege error

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

Gets device initialization information. The contents are the same as the information obtained by tk_def_dev.

Additional Notes

The error code E_MACV is common to many system calls, and usually not included in the error code list of each system call. However, for this API, E_MACV is included in this error code list because it is the only typical error.

5.2.3.2 Device Driver Interface

The device driver interface consists of processing functions (driver processing functions) specified when registering a device.

Open function

ER openfn(ID devid, UINT omode, void *exinf);

Close function

ER closefn(ID devid, UINT option, void *exinf);

Execute function

ER execfn(T_DEVREQ *devreq, TMO tmout, void *exinf);

Wait-for-completion function

INT waitfn(T_DEVREQ *devreq, INT nreq, TMO tmout, void *exinf);

Abort function

ER abortfn(ID tskid, T_DEVREQ *devreq, INT nreq, void *exinf);

Event function

INT eventfn(INT evttyp, void *evtinf, void *exinf);

If TDA_TMO_U is specified for a driver attribute, the timeout specification tmout for the following driver processing functions is set to TMO_U type (in microseconds).

Execute function

ER execfn(T DEVREQ *devreq, TMO U tmout u, void *exinf);

Wait-for-completion function

INT waitfn(T_DEVREQ *devreq, INT nreq, TMO_U tmout_u, void *exinf);

If TDA_DEV_D is specified for a driver attribute, the type of request packet devreq for the following driver processing functions is set to T_DEVREQ_D.

Execute function

ER execfn(T_DEVREQ_D *devreq_d, TMO tmout, void *exinf);

Wait-for-completion function

INT waitfn(T_DEVREQ_D *devreq_d, INT nreq, TMO tmout, void *exinf);

Abort function

ER abortfn(ID tskid, T DEVREQ D *devreq d, INT nreq, void *exinf);

If TDA_TMO_U and TDA_DEV_D are specified set a driver attribute, a driver processing function is set to the one that has parameters with all the specified types of changes were applied.

Execute function

```
ER execfn(T_DEVREQ_D *devreq_d, TMO_U tmout_u, void *exinf);
```

Wait-for-completion function

INT waitfn(T_DEVREQ_D *devreq_d, INT nreq, TMO_U tmout_u, void *exinf);

Driver processing functions are called by device management and run as a quasi-task portion. These driver processing functions must be reentrant. Calling of these driver processing functions in a mutually exclusive manner is not guaranteed. If, for example, there are simultaneous requests from multiple devices for the same device, different tasks might call the same driver processing function at the same time. The device driver must perform mutual exclusion control in such cases as necessary.

I/O requests to a device driver are made by means of the following request packet associated with a request ID.

```
/*
 * Device request packet: For 32-bit
 * In: Input parameter to driver processing function (set in \muT-Kernel/SM device \leftrightarrow
    management)
  Out: Output parameter from driver processing function (set in driver processing function \leftrightarrow
    )
 * X:
        Parameters other than input and output
 */
typedef struct t devreq {
        struct t devreq *next;
                                   /* In: Link to request packet (NULL: termination) */
        void
                *exinf;
                                   /* X: Extended information */
                 devid;
        T D
                                   /* In: Target device ID */
        TNT
                 cmd:4;
                                   /* In: Request command */
        B00L
                                   /* In: TRUE if abort request */
                 abort:1;
                                   /* In: Starting data number */
                 start;
        SZ
                 size;
                                   /* In: Request size */
                                   /* In: IO buffer address */
        void
                 *buf;
        SZ
                 asize;
                                   /* Out: Size of result */
        ER
                 error;
                                   /* Out: Error result */
        /* Implementation-dependent information may be added beyond this point.*/
} T DEVREQ;
```

```
* Device request packet: For 64-bit
 st In: Input parameter to driver processing function (set in \muT-Kernel/SM device \leftrightarrow
    management)
  Out: Output parameter from driver processing function (set in driver processing function \leftrightarrow
    )
 * X:
        Parameters other than input and output
 */
typedef struct t_devreq_d {
        struct t_devreq_d *next; /* In: Link to request packet (NULL: termination) */
                *exinf;
                                   /* X: Extended information */
        void
        ID
                devid;
                                   /* In: Target device ID */
        INT
                cmd:4;
                                   /* In: Request command */
        B00L
                abort:1;
                                   /* In: TRUE if abort request */
        D
                start d;
                                   /* In: Starting data number, 64-bit */
        SZ
                size:
                                   /* In: Request size */
                                   /* In: IO buffer address */
        void
                *buf;
                                   /* Out: Size of result */
        SZ
                asize;
                                   /* Out: Error result */
        FR
                error;
        /* Implementation-dependent information may be added beyond this point.*/
} T DEVREQ D;
```

In: Input parameter to the driver processing function is set in μ T-Kernel/SM device management. Should not be changed on the device driver side. Parameters other than input parameters (In) are initially cleared to 0 by the device management. After that, device management does not modify them. Out: Output parameter returned from the driver execute function is set in the driver processing function.

next is used to link the request packet. In addition to usage for keeping track of request packets in device management, it is used also by the completion wait function (waitfn) and abort function (abortfn).

exinf can be used freely by the device driver. Device management does not pay attention to the contents.

The device ID of the device to which the request is issued is specified in devid.

The request command is specified in cmd as follows.

```
cmd := (TDC READ || TDC WRITE)
```

```
#define TDC_READ 1 /* read request */
#define TDC_WRITE 2 /* write request */
```

If abort processing is to be carried out, abort is set to TRUE right before calling the abort function (abortfn). abort is a flag indicating whether abort processing was requested, and does not indicate that processing was aborted. In some cases abort is set to TRUE even when the abort function (abortfn) is not called. Abort processing is performed when a request with abort set to TRUE is actually passed to the device driver.

start, start_d, and size are just set as start, start_d, and size specified in tk_rea_dev, tk_rea_dev_du, tk_wri_dev, and tk_wri_dev_du.

buf is just set as buf specified in tk_rea_dev, tk_rea_dev_du, tk_wri_dev, and tk_wri_dev_du. On systems that support virtual memory, the memory space specified in buf may be nonresident or belong to task space, so care must be taken to handle such cases.

The device driver sets in asize the value returned in asize by tk_wai_dev.

The device driver sets in error the error code passed by tk_wai_dev in its return code. E_OK indicates a normal result.

Difference between T_DEVREQ and T_DEVREQ_D is only the part of their names being start or start_d, and the data type.

The type of device request packet (T_DEVREQ or T_DEVREQ_D) is selected based on the driver attribute (TDA_DEV_D) at device registration. For this reason, T_DEVREQ and T_DEVRE do not co-exist in the request packet for one driver.

5.2.3.2.1 openfn - Open function

C Language Interface

ER ercd = openfn(ID devid, UINT omode, void *exinf);

Parameter

ID	devid	Device ID	Device ID of the device to open
UINT	omode	Open Mode	Open mode (same as tk_opn_dev)
void*	exinf	Extended Information	Extended information set at device
			registration

Return Parameter

ER ercd Error Code Error code

Error Code

Other Error code returned by the device driver

Description

The open function openfn is called when tk_opn_dev is invoked.

The function openfn performs processing to enable use of a device. Details of the processing are device-dependent; if no processing is needed, it does nothing. The device driver does not need to remember whether a device is open or not, nor is it necessary to treat as error the calling of another processing function simply because the device was not opened (openfn had not been called). If another processing function is called for a device that is not open, the necessary processing can be performed so long as there is no problem in device driver operation.

When openfn is used to perform device initialization or the like, in principle no processing should be performed that causes a wait. The processing and return from openfn must be as prompt as possible. In the case of a device such as a serial port for which it is necessary to set the communication mode, for example, the device can be initialized when the communication mode is set by tk_wri_dev. There is no need for openfn to initialize the device.

When the same device is opened multiple times, normally this function is called only for the first time. If, however, the driver attribute TDA_OPENREQ is specified in device registration, this function is called each time the device is opened.

The openfn function does not need to perform any processing with regard to multiple opening or open mode, which are handled by device management. Likewise, omode is simply passed as reference information; no processing relating to omode is required.

openfn runs as a quasi-task portion of the task that issued tk_opn_dev. That is, it is executed in the context of the quasi-task portion whose requesting task is the task that issued tk_opn_dev.

5.2.3.2.2 closefn - Close function

C Language Interface

ER ercd = closefn(ID devid, UINT option, void *exinf);

Parameter

ID	devid	Device ID	Device ID of the device to close
UINT	option	Close Option	Close option (same as tk_cls_dev)
void*	exinf	Extended Information	Extended information set at device
			registration

Return Parameter

ER ercd Error Code Error code

Error Code

Other Error code returned by the device driver

Description

The close function closefn is called when tk_cls_dev is invoked.

The closefn function performs processing to end use of a device. Details of the processing are device-dependent; if no processing is needed, it does nothing.

If the device is capable of ejecting media and TD EJECT is set in option, media ejection is performed.

When closefn is used to perform device shutdown processing or media ejection, in principle no processing should be performed that causes a wait. The processing and return from closefn must be as prompt as possible. If media ejection takes time, it is permissible to return from closefn without waiting for the ejection to complete.

When the same device is opened multiple times, normally this function is called only the last time it is closed. If, however, the driver attribute TDA_OPENREQ is specified in device registration, this function is called each time the device is closed. In this case TD EJECT is specified in option only for the last time.

The closefn function does not need to perform any processing with regard to multiple opening or open mode, which are handled by device management.

closefn runs as a quasi-task portion of the task that issued tk_cls_dev.

5.2.3.2.3 execfn - Execute function

C Language Interface

```
/* Execute function (32-bit request packet, millisecond timeout) */

ER ercd = execfn(T_DEVREQ *devreq, TMO tmout, void *exinf);

/* execute function (64-bit request packet, millisecond timeout) */

ER ercd = execfn(T_DEVREQ_D *devreq_d, TMO tmout, void *exinf);

/* execute function (32-bit request packet, microsecond timeout) */

ER ercd = execfn(T_DEVREQ *devreq, TMO_U tmout_u, void *exinf);

/* execute function (64-bit request packet, microsecond timeout) */

ER ercd = execfn(T_DEVREQ_D *devreq_d, TMO_U tmout_u, void *exinf);
```

Parameter

T_DEVREQ*	devreq	Device Request Packet	Request packet (32-bit)
$T_DEVREQ_D^*$	devreq_d	Device Request Packet	Request packet (64-bit)
TMO	tmout	Timeout	Request acceptance timeout (ms)
TMO_U	tmout_u	Timeout	Request acceptance timeout (in
			microseconds)
void^*	exinf	Extended Information	Extended information set at device
			registration

Return Parameter

ER ercd Error Code Error code

Error Code

Other Error code returned by the device driver

Description

The execute function execfn is called when tk_rea_dev or tk_wri_dev is invoked.

Initiates the processing requested in devreq. This function initiates the requested processing only, returning to its caller without waiting for the processing to complete. The time required to initiate processing depends on the device driver; this function does not necessarily complete immediately.

When new processing cannot be accepted, this function goes to WAITING state for request acceptance. If the new request cannot be accepted within the time specified in <code>tmout</code>, the function times out. The <code>TMO_POL</code> or <code>TMO_FEVR</code> attribute can be specified in <code>tmout</code>. If the function times out, <code>E_TMOUT</code> is passed in the <code>execfn</code> return code. The request packet <code>error</code> parameter does not change. Timeout applies to the request acceptance, not to the processing after acceptance.

When error is passed in the execfn return code, the request is considered not to have been accepted and the request packet is discarded.

If processing is aborted before the request is accepted (before the requested processing starts), E_ABORT is passed in the execfn return code. In this case, the request packet is discarded. If the abort occurs after the processing has been accepted, E_OK is returned for this function. The request packet is not discarded until waitfn is executed and processing completes.

When abort occurs, the important thing is to return from execfn as quickly as possible. If processing will end soon anyway without aborting, it is not necessary to abort.

execfn runs as a quasi-task portion of the task that issued tk_rea_dev, tk_wri_dev, tk_srea_dev, or tk_swri_dev.

In a device driver for which TDA_DEV_D is specified as an attribute at the time of registering the device, the execute function (64-bit request packet, millisecond timeout) execfn is called when tk_rea_dev or tk_wri_dev is invoked. In this case, the function specification is the same as that of 32-bit request packet, millisecond timeout execfn, except that the parameter request packet is a 64-bit T_DEVREQ_D* devreq_d.

In a device driver for which TDA_TMO_U is specified as an attribute at the time of registering the device, the execute function (32-bit request packet, microsecond timeout) execfn is called when tk_rea_dev or tk_wri_dev is invoked. In this case, the function specification is the same as that of 32-bit request packet, millisecond timeout execfn, except that the parameter timeout specification is a microsecond TMO_U tmout_u.

In a device driver for which both TDA_DEV_D and TDA_TMO_U are specified as an attribute at the time of registering the device, the execute function (64-bit request packet, microsecond timeout) execfn is called when tk_rea_dev or tk_wri_dev is invoked. In this case, the function specification is the same as that of 32-bit request packet, millisecond timeout execfn, except that the parameter request packet is a 64-bit T_DEVREQ_D* devreq_d and the parameter timeout specification is a microsecond TMO_U tmout_u.

5.2.3.2.4 waitfn - Wait-for-completion function

C Language Interface

/* wait-for-completion function (32-bit request packet, millisecond timeout) */

INT creqno = waitfn(T_DEVREQ *devreq, INT nreq, TMO tmout, void *exinf);

/* wait-for-completion function (64-bit request packet, millisecond timeout) */

INT crequo = waitfn(T DEVREQ D*devreq d, INT nreq, TMO tmout, void *exinf);

/* wait-for-completion function (32-bit request packet, microsecond timeout) */

INT crequo = waitfn(T DEVREQ *devreq, INT nreq, TMO U tmout u, void *exinf);

/* wait-for-completion function (64-bit request packet, microsecond timeout) */

INT creqno = waitfn(T_DEVREQ_D *devreq_d, INT nreq, TMO_U tmout_u, void *exinf);

Parameter

T_DEVREQ*	devreq	Device Request Packet	Request packet list (32-bit)
T_DEVREQ_D*	devreq_d	Device Request Packet	Request packet list (64-bit)
INT	nreq	Number of Requests	Request packet count
TMO	tmout	Timeout	Timeout (ms)
TMO_U	tmout_u	Timeout	Timeout (in microseconds)
void*	exinf	Extended Information	Extended information set at device
			registration

Return Parameter

INT.	creqno	Completed Request Packet	Completed request packet number
		Number	

or Error Code Error code

Error Code

Other Error code returned by the device driver

Description

The wait-for-completion function waitfn is called when tk_wai_dev is invoked.

devreq is a list of request packets in a chain linked by devreq->next. This function waits for completion of any of the nreq request packets starting from devreq. The final next is not necessarily NULL, so the nreq must always be followed. The number of the completed request packet (which one after devreq) is passed in the return code. The first one is numbered 0 and the last one is numbered nreq - 1. Here completion means any of normal completion, abnormal (error) termination, or abort.

The timeout for waiting for completion is set in tmout. The TMO_POL or TMO_FEVR attribute can be specified for tmout. If the wait times out, the requested processing continues. The waitfn return code in case of timeout is

E_TMOUT. The request packet error parameter does not change. Note that if return from waitfn occurs while the requested processing continues, error must be returned in the waitfn return code; but the processing must not be completed when error is passed in the return code, and a value other than error must not be returned if processing is ongoing. As long as error is passed in the waitfn return code, the request is considered to be pending and no request packet is discarded. When the number of a request packet whose processing was completed is passed in the waitfn return code, the processing of that request is considered to be completed and that request packet is discarded.

I/O error and other device-related errors are stored in the request packet error parameter. Error is passed in the waitfn return code when completion waiting did not take place properly. The waitfn return code is set in the tk_wai_dev return code, whereas the request packet error value is returned in ioer.

The abort processing when the abort function abortfn was executed during completion waiting by waitfn differs depending on whether to wait for completion of a single request (waitfn, nreq = 1) or multiple requests (waitfn, nreq > 1). When waiting for completion of a single request, the request currently processing is aborted. On the other hand, when waiting for completion of multiple requests, as a special handling, only the completion waiting by waitfn is released and the processing for the request itself is not aborted. It means that, even if the abort function abortfn is executed, the request packets' abort remains FALSE and the processing for the requests continues. E ABORT is passed in the return code from the released waitfn.

During a wait for request completion, an abort request may be set in the abort parameter of a request packet. In such a case, if it is a single request, the request abort processing must be performed. If the wait is for multiple requests it is also preferable that abort processing be executed, but it is also possible to ignore the abort flag.

When abort occurs, the important thing is to return from waitfn as quickly as possible. If processing will end soon anyway without aborting, it is not necessary to abort.

As a rule, E_ABORT is returned in the request packet error parameter when processing is aborted; but a different error code than E_ABORT may be returned as appropriate based on the device properties. It is also permissible to return E_OK on the basis that the processing right up to the abort is valid. If processing completes normally to the end, E_OK is returned even if there was an abort request.

waitfn runs as a quasi-task portion of the task that issued tk_wai_dev, tk_srea_dev, or tk_swri_dev.

In a device driver for which TDA_DEV_D is specified as an attribute at the time of registering the device, the wait-for-completion function (64-bit request packet, millisecond timeout) waitfn is called when tk_wai_dev is invoked. In this case, the function specification is the same as that of 32-bit request packet, millisecond timeout waitfn, except that the parameter request packet is a 64-bit T DEVREQ D* devreq d.

In a device driver for which TDA_TMO_U is specified as an attribute at the time of registering the device, the wait-for-completion function (32-bit request packet, microsecond timeout) waitfn is called when tk_wai_dev is invoked. In this case, the function specification is the same as that of 32-bit request packet, millisecond timeout waitfn, except that the parameter timeout specification is a microsecond TMO_U tmout_u.

In a device driver for which TDA_DEV_D and TDA_TMO_U are specified as an attribute at the time of registering the device, the wait-for-completion function (64-bit request packet, microsecond timeout) waitfn is called when tk_wai_dev is invoked. In this case, the function specification is the same as that of 32-bit request packet, millisecond timeout waitfn, except that the parameter request packet is a 64-bit T_DEVREQ_D* devreq_d and the parameter timeout specification is a microsecond TMO_U tmout_u.

5.2.3.2.5 abortfn - Abort function

C Language Interface

```
/* abort function (32-bit request packet) */
```

ER ercd = abortfn(ID tskid, T DEVREQ *devreq, INT nreq, void *exinf);

/* abort function (64-bit request packet) */

ER ercd = abortfn(ID tskid, T DEVREQ D*devreq d, INT nreq, void *exinf);

Parameter

ID	tskid	Task ID	Task ID of the task executing execfn
			or waitfn
T_DEVREQ^*	devreq	Device Request Packet	Request packet list (32-bit)
$T_DEVREQ_D^*$	devreq_d	Device Request Packet	Request packet list (64-bit)
INT	nreq	Number of Requests	Request packet count
void*	exinf	Extended Information	Extended information set at device
			registration

Return Parameter

ER erco	Error Code	Error code

Error Code

Other Error code returned by the device driver

Description

The abort function abortfn is called when you want to promptly return from the currently running execute function execfn or wait-for-completion function waitfn. Normally this means the request being processed is aborted. If, however, the processing can be completed soon without aborting, it may not have to be aborted. The important thing is to return as quickly as possible from execfn or waitfn.

abortfn is called in the following cases.

- When a break function is executing after a task exception and the task that raised the exception requests abort processing, abortfn is used to abort the request being processed by that task.
- When a device is being closed by tk_cls_dev, and the device descriptor was processing a request, abortfn is used to abort the request being processed by the device descriptor.

tskid indicates the task executing the request specified in devreq. In other words, it is the task executing execfn or waitfn. devreq and nreq are the same as the parameters that were passed to execfn or waitfn. In the case of execfn, nreq is always 1.

abortfn is called by a different task from the one executing execfn or waitfn. Since both tasks run concurrently, mutual exclusion control must be performed as necessary. It is possible that the abortfn function will be called immediately before calling execfn or waitfn, or during return from these functions. Measures must be taken to ensure proper operation in such cases. Before abortfn is called, the abort flag in the request packet whose

processing is to be aborted is set to TRUE, enabling execfn or waitfn to know whether there is going to be an abort request. Note also that abortfn can use tk_dis_wai for any object.

When waitfn is executing for multiple requests (nreq > 1), this is treated as a special case differing as follows from other cases.

- · Only the completion wait is aborted (waited is released), not the requested processing.
- The abort flag is not set in the request packet (remains as abort = FALSE).

Aborting a request when execfn and waitfn are not executing is done not by calling abortfn but by setting the request packet abort flag. If execfn is called when the abort flag is set, the request is not accepted. If waitfn is called, abort processing is the same as if abortfn is called.

If a request for which processing was started by execfn is aborted before waitfn was called to wait for its completion, the completion of the aborted processing is notified when waitfn is called later. Even though processing was aborted, the request itself is not discarded until its completion has been checked by waitfn.

abortfn initiates abort processing only, returning promptly without waiting for the abort to complete.

The abortfn that is executed on a task exception runs as a quasi-task portion of the task issuing tk_ras_tex that raised the task exception. The abortfn that is executed on a device close runs as a quasi-task portion of the task that issued tk_cls_dev.

In a device driver for which TDA_DEV_D is specified as an attribute at the time of registering the device, the abort function (64-bit request packet) abortfn is called when you want to promptly return from the currently running execute function execfn or wait-for-completion function waitfn. In this case, the function specification is the same as that of 32-bit request packet abortfn, except that the parameter request packet is a 64-bit T DEVREQ D* devreq d.

5.2.3.2.6 eventfn - Event function

C Language Interface

INT retcode = eventfn(INT evttyp, void *evtinf, void *exinf);

Parameter

INT	evttyp	Event Type	Driver request event type
void*	evtinf	Event Information	Information for each event type
void*	exinf	Extended Information	Extended information set at device
			registration

Return Parameter

INT	retcode		Return Code	Return code defined for each event type
		or	Error Code	Error code

Error Code

Other Error code returned by the device driver

Description

When a state change occurs in the device or system which is caused by a factor other than normal device I/O processing by an application interface, requiring some processing by the device driver, a driver request event is raised and then the event function eventfn is called.

The driver request event is raised when suspending or resuming a device for power control (see tk_sus_dev) or when connecting a removable device such as USB.

For example, when the system is suspended by tk_sus_dev , the driver request event for the suspend (TDV_SUSPEND) is raised in the μ T-Kernel (during tk_sus_dev processing) and the event function for each device is called with $evttyp = TDV_SUSPEND$. The event function called for each device performs necessary operations for suspend such as saving the state on receiving this driver request event.

The following driver request events are defined.

```
#define TDV_SUSPEND (-1) /* suspend */
#define TDV_RESUME (-2) /* resume */
#define TDV_CARDEVT 1 /* reserved */
#define TDV_USBEVT 2 /* USB event */
```

The driver request events with a negative value are called internally from the device management in the μ T-Kernel/SM, for suspend or resume processing.

On the other hand, the driver request events with a positive value (TDV_USBEVT) are reference specifications which are not directly related to the μ T-Kernel operation, and raised by calling tk_evt_dev. These driver request events are used as needed to implement a bus driver for USB or other device.

The processing performed by the event function is defined for each event type. For suspend and resume processings, see Section 5.2.3.4, "Device Suspend/Resume Processing".

When a device event is called by tk_evt_dev, the eventfn return code is set transparently as the tk_evt_dev return code.

Requests to event functions must be accepted even if another request is processed, and must be processed as quickly as possible.

The eventfn runs as a quasi-task portion of the task that issued tk_evt_dev or tk_sus_dev that caused the event.

Additional Notes

The following behaviors are assumed for USB event.

Note that they describe implementation examples of device drivers that handle a device such as USB and are not part of the μ T-Kernel specification.

When a USB device is connected, a class driver should dynamically be mapped to the USB device to perform an actual I/O processing.

For example, when a storage such as USB memory is connected, a device driver for the mass storage class handles the I/O for the device, or when a USB camera is connected, a device driver for the video class handles the I/O for the device. Which device driver should be used cannot be determined until the USB device is connected.

In this case, the driver request event for the USB connection and the event function for each device driver are used in order to map a class driver to the USB device. Specifically, when the USB bus driver (USB manager) monitoring the USB ports detects a newly connected USB device, it sends the driver request event for the USB connection (TDV_USBEVT) to each device driver which will be candidate of the class driver and then calls the event function for each device.

The event function for each device returns whether or not it can support the newly connected USB device in response to this TDV_USBEVT. The USB bus driver receives the return codes and determines the mapping to the actual class driver.

5.2.3.3 Device Event Notification

A device driver sends events that occur on each device to the specific message buffer (event notification message buffer) as device event notification messages. The event notification message buffer ID is referenced or set as an attribute data of TDN_EVENT for each device.

The system default event notification message buffer is used immediately after device registration. As a device is registered by tk_def_dev when a device driver is started, the system default event notification message buffer ID value is returned as this API's return parameter, the value is held in the device driver and is used as the initial value of this attribute data, TDN_EVENT.

The system default event notification message buffer is created at system startup. Its size and maximum message length are defined by TDEvtMbfSz in the system configuration information.

The message formats used in device event notification are as follows: The content and size of the event notification message vary depending on the event type.

♦ Basic format of device event notification

♦ Format of device event notification with device ID

♦ Format of device event notification with extended information

The event type of a device event notification is classified as follows:

- a. Basic event notification (event type: 0x0001 to 0x002F) Basic event notification from a device
- b. System event notification (event type: 0x0030 to 0x007F)

 Event notification related to entire system such as power supply control
- c. Event notification with extended information (event type: 0x0080 to 0x00FF) Event notification from a device with extended information
- d. User-defined event notification (event type: 0x0100 to 0xFFFF) Notification of event that users can arbitrarily define

Typical event types are as follows:

```
typedef enum tdevttyp {
         TDE unknown
                           = 0,
                                              /* undefined */
         TDE MOUNT
                           = 0 \times 01,
                                              /* media insert */
                           = 0 \times 02,
         TDE EJECT
                                              /* Eject media */
         TDE POWEROFF
                           = 0x31,
                                              /* power switch off */
         TDE POWERLOW
                           = 0 \times 32,
                                             /* low power alarm */
         TDE POWERFAIL
                           = 0 \times 33,
                                              /* abnormal power */
         TDE POWERSUS
                           = 0 \times 34
                                              /* auto suspend */
} TDEvtTyp;
```

Measures must be taken so that if event notification cannot be sent because the message buffer is full, the lack of notification will not adversely affect operation on the receiving end. One option is to hold the notification until space becomes available in the message buffer, but in that case other device driver processing should not, as a rule, be allowed to fall behind as a result. Processing on the receiving end should be designed to avoid message buffer overflow as much as possible.

5.2.3.4 Device Suspend/Resume Processing

Device drivers perform suspend and resume operations in response to the issuing of suspend/resume events (TDV_SUSPEND/TDV_RESUME) to the event handling function (eventfn). Suspend and resume events are issued only to physical devices.

5.2.3.4.1 Device suspend processing

The event for starting suspend processing is as follows:

```
evttyp = TDV_SUSPEND
evtinf = NULL (none)
```

By issuing suspend event (TDV_SUSPEND), suspend processing takes place as follows.

1. If there is a request being processed at the time, the device driver waits for it to complete, pauses it or aborts it. Which of these options to take depends on the device driver implementation. Since the suspension must be effected as quickly as possible, however, pause or abort should be chosen if completion of the request will take time.

Suspend events can be issued only for physical devices, but the same processing is applied to all logical devices included in the physical device.

Pause: Processing is suspended, then continues after the device resumes operation.

Abort: Processing is aborted just as when the abort function (abortfn) is executed, and is not continued afte

- 2. New requests other than a resume event are not accepted.
- 3. The device power is cut off and other suspend operation is performed.

Abort should be avoided if possible because of its effects on applications. It should be used only in such cases as long input wait from a serial port, or when pause would be difficult. Normally it is best to wait for completion of a request or, if possible, choose pause (suspend and resume).

Requests arriving at the device driver in suspend state are made to wait until operation resumes, after which they are accepted for processing. If the request does not involve access to the device, however, or otherwise can be processed even during suspension, a request may be accepted without waiting for resumption.

5.2.3.4.2 Device resume processing

The event for starting resume processing is as follows:

```
evttyp = TDV_RESUME
evtinf = NULL (none)
```

By issuing resume event (TDV_RESUME), resume processing takes place as follows.

- 1. The device power is turned back on, the device states are restored and other device resume processing is performed.
- 2. Paused processing is resumed.
- 3. Accepting request is resumed.

5.3 Interrupt Management Functions

 μ T-Kernel/SM interrupt management functions are functions for disabling or enabling external interrupt, retrieving interrupt disable status, controlling interrupt controller, etc.

Interrupt handling is largely hardware-dependent, different on each system, and therefore difficult to standardize. The following are given as standard specification, but it may not be possible to follow these exactly on all systems. Implementors should comply with these specifications as much as possible; but where implementation is not feasible, full compliance is not mandatory. If functions not in the standard specification are added, however, the function names must be different from those given here. In any case, DI, EI, and isDI must be implemented in accordance with the standard specification.

Interrupt management functions are provided as library functions or C language macros. These can be called from a task-independent portion and while dispatching and interrupts are disabled.

5.3.1 CPU Interrupt Control

These functions control the external interrupt mask flag or interrupt mask level in the CPU. Generally speaking, interrupt controller is not touched.

DI disables all the external interrupts and EI enables them. After DI is issued and until EI is issued, the system is in external interrupt disabled state. In this state, an indivisible processing can be performed since no interruption occurs and no dispatching takes place.

There are a few restrictions about the API to control CPU interrupt and the external interrupt disabled state.

- CPU interrupt control API is usually implemented as C language compile time macro to set the external interrupt mask flag or interrupt mask level inside the CPU. Hence, this API can be invoked only in the privileged level that can access and control hardware directly. The precise meaning of the level is implementation-dependent.
- CPU interrupt control API only sets CPU's external interrupt mask flag or interrupt mask level only. Hence, generally speaking, except for some implementations, the execution of these APIs will not cause delayed dispatching.
- There are restrictions on the available APIs in the external interrupt disabled state. API that puts the calling task into waiting state cannot be invoked. The system should return E_CTX. However, the proper error checking to return E_CTX is implementation-dependent. The following APIs of μ T-Kernel/SM, Interrupt Management Functions and I/O Port Access Support Functions, can be invoked even when external interrupt is disabled. Whether other APIs can be invoked when external interrupt is disabled is implementation-dependent.
- System timer interrupt is disabled in the external interrupt disabled state. Hence, no timeout occurs, and no time event handler processing occurs.

Additional Notes

The APIs for controlling CPU interrupt is meant for device drivers to perform indivisible execution for low-level control such as hardware by disabling external interrupt temporarily. However, the disabling of external interrupt reduces the system responsiveness and the real-time performance suffers. So the indivisible operation should be finished quickly and external interrupt disabled state should be exited soon.

External interrupt disabled state entered by DI is very similar to task-independent portion. Even if an API that would usually cause dispatch such as tk_wup_tsk is invoked, dispatching does not occur. Afterward, when EI is issued to return to external interrupt enabled state, the delayed dispatching associated with EI do not occur generally (except for some implementations). As a result, after EI is issued, we may have an unexpected situation where a lower priority task continues to run even though a higher priority task in READY state exists. To avoid the unexpected situation, when a program needs to issue an API that causes dispatching during the time interval that starts with DI and ends with EI, it is recommended to surround the interval of external interrupt disabled state by a pair of tk_dis_dsp and tk_ena_dsp . Namely, the APIs should be issued in the following order: $tk_dis_dsp \rightarrow DI \rightarrow API$ that causes dispatching tlaub EI tlaub the APIs, external interrupt and dispatching are disabled between DI and EI. Only dispatching is disabled bewteen tlaub the unexpected situation mentioned in the preceding sentences is corrected after all. Issueing the APIs in this order guarantees the same system behavior that is not implementation-dependent.

5.3.1.1 DI - Disable External Interrupts

C Language Interface

#include <tk/tkernel.h>

DI (UINT intsts);

Parameter

UINT intsts

Interrupt Status

Variable that stores the CPU external interrupt flag

Return Parameter

None.

Error Codes

None.

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Description

Controls the external interrupt flag in the CPU and disables all external interrupts. Also stores the flag state in intsts before disabling interrupt.

intsts is not a pointer. Write a variable directly. Generally, this API is defined as a C language macro.

Regarding the APIs that can be issued during external interrupt disabled state, see the explanation at the beginning of Section 5.3.1, "CPU Interrupt Control".

5.3.1.2 EI - Enable External Interrupt

C Language Interface

#include <tk/tkernel.h>

EI (UINT intsts);

Parameter

UINT intsts Interrupt Status

Variable that stores the CPU external interrupt flag

Return Parameter

None.

Error Codes

None.

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Description

Controls the external interrupt flag in the CPU and reverts the flag state to intsts. That is, this API reverts the flag state to the state before disabling external interrupts by the previously executed DI(intsts).

If the state before executing DI(intsts) was the external-interrupt-enabled, the subsequent EI(intsts) enables external interrupts. On the other hand, if the state was already interrupt-disabled at the time DI(intsts) was executed, interrupt is not enabled by EI(intsts). However, if 0 is specified in intsts, the external interrupt flag in the CPU is set to the interrupt-enable state.

intsts must be either the value saved by DI or 0. If any other value is specified, the subsequent correct behavior is not guaranteed.

The specifications pays attention to the execution efficiency to minimize overhead. Therefore, this API is usually implemented using assembly language or C language macro. This API controls the external interrupt mask flag in the CPU only and does nothing else. No error result is returned. Hence, except for some implementations, the execution of this API will not cause delayed dispatching, generally speaking.

5.3.1.3 isDI - Get Interrupt Disable Status

C Language Interface

#include <tk/tkernel.h>

BOOL disint = isDI(UINT intsts);

Parameter

UINT intsts Interrupt Status Variable that stores the CPU external interrupt flag

Return Parameter

BOOL disint Interrupt Disabled Status External interrupt disabled status

Error Codes

None.

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Description

Checks the external interrupt flag in the CPU that was stored in intsts by the previously executed DI, and returns TRUE(a non-zero value) if the flag status is determined as the interrupt-disabled, or FALSE otherwise.

intsts must be the value saved by DI. If any other value is specified, the subsequent correct behavior is not guaranteed.

This specification pay attention to the execution efficiency to minimize overhead. Therefore, this API is usually implemented using assembly language or C language macro.

```
Sample Usage of isDI
```

5.3.1.4 SetCpuIntLevel - Set Interrupt Mask Level in CPU

C Language Interface

#include <tk/tkernel.h>

void SetCpuIntLevel(INT level);

Parameter

INT level Interrupt Mask Level Interrupt mask level

Return Parameter

None.

Error Codes

None.

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this API can be used.

TK_SUPPORT_CPUINTLEVEL

Support of CPU interrupt mask level

Description

Set interrupt mask level of CPU and disable interrupts that have lower interrupt priority than level. Interrupts that have interrupt priority that is equal to level or higher are enabled.

When INTLEVEL_DI is specified to level, the interrupt mask level within the interrupt controller is set to disable all external interrupts at all priority levels. Generally speaking, this is the same state of the system after DI is called.

When INTLEVEL_EI is specified to level, the mask level within the interrupt controller is set to enable all external interrupts at all priority levels. Generally speaking, this is the same state of the system after EI(0) is called.

While interrupts are disabled due to the execution of this API, dispatch may be delayed, as in the case of the interrupt handler's being executed, until the interrupts are enabled again.

The range of value that can be specified by level and the concrete value of INTLEVEL_DI are implementation-dependent. The ordering relation of the interrupt level as numeric value and the interrupt priority is implementation-dependent. Generally speaking, the specification about these is decided based on the CPU architecture.

The specifications pays attention to the execution efficiency to minimize overhead. Therefore, this API is usually implemented using assembly language or C language macro. This API controls the interrupt mask level in the CPU only and does nothing else. No error result is returned. Hence, except for some implementations, the execution of this API will not cause delayed dispatching, generally speaking.

Additional Notes

"Interrupt mask level" is defined to be the lower bound of interrupt priority level (interrupt level) for external interrupts that are enabled (masked). External interrupts with priorities equal to or higher than the interrupt mask level are enabled.

This API sets the interrupt mask level within CPU, and has a similar function as that of SetCtrlIntLevel which sets the interrupt mask level within the interrupt controller. The former affects the result of interrupt enable/disable setting done by DI, EI. The latter has nothing to do with this.

This API sets the interrupt mask level within CPU without regard to the previous setting. Note that there are both cases of either the increase of the disabled interrupts, or the decrease of disabled interrupts after the execution of this API.

5.3.1.5 GetCpuIntLevel - Get Interrupt Mask Level in CPU

C Language Interface

#include <tk/tkernel.h>

INT level = GetCpuIntLevel(void);

Parameter

None.

Return Parameter

INT level Interrupt Mask Level Interrupt mask level

Error Codes

None.

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this API can be used.

TK_SUPPORT_CPUINTLEVEL

Support of CPU interrupt mask level

Description

Get the current value of interrupt mask level in CPU, and return it as the value of return parameter level. The range of value that can be specified by level is implementation-dependent.

Additional Notes

See the explanation and additional notes in SetCpuIntLevel.

5.3.2 Control of Interrupt Controller

These functions control the interrupt controller. Generally they do not perform any operation with respect to the CPU interrupt flag.

5.3.2.1 EnableInt - Enable Interrupts

C Language Interface

#include <tk/tkernel.h>

void EnableInt(UINT intno);
void EnableInt(UINT intno, INT level);

Parameter

UINT	intno	Interrupt Number	Interrupt number
INT	level	Interrupt Priority Level	Interrupt priority level

Return Parameter

None.

Error Codes

None.

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this API can be used.

TK_SUPPORT_INTCTRL

Support of interrupt controller management

Additionally, the following service profile items are related to this API.

TK_HAS_ENAINTLEVEL Interrupt priority level (level) can be specified as the 2nd argument

Description

Enable interrupt with interrupt number, intno. On a system where interrupt priority level can be specified, level is used to specify the interrupt priority level.

The interrupt number that can be specified in intno is limited to a number that can be usable by tk_def_int and at the same time, an interrupt number that is controlled by the interrupt controller. The subsequent correct behavior of the system as a whole when an invalid intno is specified is not guaranteed.

Either the support of level or the support without level is provided.

Additional Notes

This API does not check for error just as other interrupt-related APIs do not.

5.3.2.2 DisableInt - Disable Interrupts

C Language Interface

#include <tk/tkernel.h>

void DisableInt(UINT intno);

Parameter

UINT intno Interrupt Number Interrupt number

Return Parameter

None.

Error Codes

None.

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this API can be used.

TK SUPPORT INTCTRL

Support of interrupt controller management

Description

Disable interrupt with the interrupt number, intno. Generally speaking, an interrupt that is disabled will become pending and, once it is enabled by EnableInt, an interrupt is generated. If it is desired to cancel an interrupt condition that became pending because the interrupt was disabled, ClearInt must be called.

The interrupt number that can be specified in intno is limited to a number that can be usable by tk_def_int and at the same time, an interrupt number that is controlled by the interrupt controller. The subsequent correct behavior of the system as a whole when an invalid intno is specified is not guaranteed.

Additional Notes

This API does not check for error just as other interrupt-related APIs do not.

5.3.2.3 ClearInt - Clear Interrupt

C Language Interface

#include <tk/tkernel.h>

void ClearInt(UINT intno);

Parameter

UINT intno Interrupt Number Interrupt number

Return Parameter

None.

Error Codes

None.

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this API can be used.

TK SUPPORT INTCTRL

Support of interrupt controller management

Description

If an interrupt with interrupt number, intno, has been generated, it is cleared.

The interrupt number that can be specified in intno is limited to a number that can be usable by tk_def_int and at the same time, an interrupt number that is controlled by the interrupt controller. The subsequent correct behavior of the system as a whole when an invalid intno is specified is not guaranteed.

Additional Notes

This API does not check for errors since it focuses on the execution efficiency to minimize overhead.

5.3.2.4 EndOfInt - Issue EOI to Interrupt Controller

C Language Interface

#include <tk/tkernel.h>

void EndOfInt(UINT intno);

Parameter

UINT intno Interrupt Number Interrupt number

Return Parameter

None.

Error Codes

None.

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this API can be used.

TK SUPPORT INTCTRL

Support of interrupt controller management

Description

Issue EOI to Interrupt Controller. intno must identify an interrupt that is the target of EOI. Generally this must be executed at the end of an interrupt handler.

The interrupt number that can be specified in intno is limited to a number that can be usable by tk_def_int and at the same time, an interrupt number that is controlled by the interrupt controller. The subsequent correct behavior of the system as a whole when an invalid intno is specified is not guaranteed.

Additional Notes

This API does not check for errors since it focuses on the execution efficiency to minimize overhead.

5.3.2.5 CheckInt - Check Interrupt

C Language Interface

#include <tk/tkernel.h>

BOOL rasint = CheckInt(UINT intno);

Parameter

UINT intno Interrupt Number Interrupt number

Return Parameter

BOOL rasint Interrupt Raised Status External interrupt raised status

Error Codes

None.

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this API can be used.

TK SUPPORT INTCTRL

Support of interrupt controller management

Description

Check to see if an interrupt with interrupt number, intno, has been generated. If an interrupt with the interrupt number, intno, has been generated, TRUE (a non-zero value) is returned, and if it has not, then FALSE is returned.

5.3.2.6 SetIntMode - Set Interrupt Mode

C Language Interface

#include <tk/tkernel.h>

void SetIntMode(UINT intno, UINT mode);

Parameter

UINT	intno	Interrupt Number	Interrupt number
UINT	mode	Mode	Interrupt mode

Return Parameter

None.

Error Codes

None.

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this API can be used.

TK_SUPPORT_INTMODE

Support of setting interrupt mode

Description

Set the interrupt mode of interrupt specified by intno to mode.

The interrupt number that can be specified in intno is limited to a number that can be usable by tk_def_int and at the same time, an interrupt number that is controlled by the interrupt controller. The subsequent correct behavior of the system as a whole when an invalid intno is specified is not guaranteed.

The settable modes and how to specify mode are implementation-dependent. The following is an example of settable modes:

```
mode := (IM_LEVEL || IM_EDGE) | (IM_HI || IM_LOW)
```

```
#define IM_LEVEL 0x0002 /* Level trigger */
#define IM_EDGE 0x0000 /* Edge trigger */
#define IM_HI 0x0000 /* H level/Interrupt at rising edge */
#define IM_LOW 0x0001 /* L level/Interrupt at falling edge */
```

If invalid mode is specified, the subsequent correct behavior is not guaranteed.

Additional Notes

This API does not check for error just as other interrupt-related APIs do not.

5.3.2.7 SetCtrlIntLevel - Set Interrupt Mask Level in Interrupt Controller

C Language Interface

#include <tk/tkernel.h>

void SetCtrlIntLevel(INT level);

Parameter

INT level Interrupt Mask Level Interrupt mask level

Return Parameter

None.

Error Codes

None.

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this API can be used.

TK_SUPPORT_CTRLINTLEVEL

Support of interrupt controller mask level

Description

Set interrupt mask level of the interrupt controller and disable interrupts that have lower interrupt priority than level. Interrupts that have interrupt priority that is equal to level or higher are enabled.

When INTLEVEL_DI is specified to level, the interrupt mask level within the interrupt controller is set to disable all external interrupts at all priority levels.

When INTLEVEL_EI is specified to level, the mask level within the interrupt controller is set to enable all external interrupts at all priority levels.

While interrupts are disabled due to the execution of this API, dispatch may be delayed, as in the case of the interrupt handler's being executed, until the interrupts are enabled again.

The range of value that can be specified by level and the concrete value of INTLEVEL_DI are implementation-dependent. The ordering relation of the interrupt level as numeric value and the interrupt priority is implementation-dependent. Generally speaking, the specification about these is decided based on the CPU architecture.

Additional Notes

See the additional notes for SetCpuIntLevel.

This API sets the interrupt mask level within interrupt controller without regard to the previous setting. Note that there are both cases of either the increase of the disabled interrupts, or the decrease of disabled interrupts after the execution of this API.

This API does not check for errors since it focuses on the execution efficiency to minimize overhead.

5.3.2.8 GetCtrlIntLevel - Get Interrupt Mask Level in Interrupt Controller

C Language Interface

#include <tk/tkernel.h>

INT level = GetCtrlIntLevel(void);

Parameter

None.

Return Parameter

INT level Interrupt Mask Level Interrupt mask level

Error Codes

None.

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this API can be used.

TK_SUPPORT_CTRLINTLEVEL

Support of interrupt controller mask level

Description

This returns the current interrupt mask level configured inside the interrupt controller, and return it in the return parameter level.

The range of value that can be specified by level is implementation-dependent.

Additional Notes

See the additional notes for SetCpuIntLevel.

5.4 I/O Port Access Support Functions

I/O port access support functions support accesses or operations to the I/O devices. These include functions that read from or write to the I/O port of the specified address using the unit of byte or word, and a function that realizes a wait for a short time (micro wait) which is used for I/O device operations.

I/O port access support functions are provided as library functions or C language macros. These can be called from a task-independent portion or while task dispatching and interrupts are disabled.

5.4.1 I/O Port Access

In a system with separate I/O space and memory space, I/O port access functions access I/O space. In a system with memory-mapped I/O only, I/O port access functions access memory space. Using these functions will improve software portability and readability even in a memory-mapped I/O system.

5.4.1.1 out_b - Write to I/O Port (In Unit of Byte)

C Language Interface

#include <tk/tkernel.h>

void out_b(INT port, UB data);

Parameter

INT	port	I/O Port Address	I/O port address
UB	data	Write Data	Data to be written (in unit of byte)

Return Parameter

None.

Error Codes

None.

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this API can be used.

TK_SUPPORT_IOPORT

Support of I/O port access

Description

Writes data in byte (8-bit) to the I/O port pointed by the address port.

5.4.1.2 out_h - Write to I/O Port (In Unit of Half-word)

C Language Interface

#include <tk/tkernel.h>

void out_h(INT port, UH data);

Parameter

INT	port	I/O Port Address	I/O port address
UH	data	Write Data	Data to be written (in unit of half-word)

Return Parameter

None.

Error Codes

None.

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this API can be used.

TK_SUPPORT_IOPORT

Support of I/O port access

Description

Writes data in a half-word (16-bit) to the I/O port pointed by the address port.

5.4.1.3 out_w - Write to I/O Port (In Unit of Word)

C Language Interface

#include <tk/tkernel.h>

void out_w(INT port, UW data);

Parameter

INT	port	I/O Port Address	I/O port address
UW	data	Write Data	Data to be written (in unit of word)

Return Parameter

None.

Error Codes

None.

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this API can be used.

TK_SUPPORT_IOPORT

Support of I/O port access

Description

Writes data in a word (32-bit) to the I/O port pointed by the address port.

5.4.1.4 out_d - Write to I/O Port (In Unit of Double-word)

C Language Interface

#include <tk/tkernel.h>

void out_d(INT port, UD data);

Parameter

1N1 port 1/O Port Address 1/O port addres	INT	port	I/O Port Address	I/O port addres
---	-----	------	------------------	-----------------

UD data Write Data Data to be written (in unit of

double-word)

Return Parameter

None.

Error Codes

None.

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this API can be used.

TK_SUPPORT_IOPORT Support of I/O port access

TK_HAS_DOUBLEWORD Support of 64-bit data types (D, UD, VD)

Description

Writes data in a double-word (64-bit) to the I/O port pointed by the address port.

Note that, in a system where I/O port cannot be accessed in double-word (64-bit) due to hardware constraint, data is separated into shorter units than double-word (64-bit) before they are written.

Rationale for the Specification

There are many systems where I/O port cannot be accessed in double-word (64-bit) due to hardware constraint such as 32-bit or less I/O data bus. In such systems, the strict specification of out_d and in_d cannot be implemented; that is, they cannot process data in one chunk of the specified bit width. In terms of the original purpose of this API, it is preferable not to implement the out_d and in_d or return an error at runtime. However, it is not practical to detect an error by determining the bus configuration at runtime, and it is often harmless to separate 64-bit data into 32-bit or narrower units before writing.

This is why the specification of out_d and in_d allow for the case where 64-bit data cannot be processed in one chunk. Therefore, whether out_d and in_d support the block access to 64-bit I/O port or not is implementation-

dependent. If the block access to 64-bit I/O port is needed, the system hardware corof out_d and in_d should be checked.	nfiguration and handling

5.4.1.5 in_b - Read from I/O Port (In Unit of Byte)

C Language Interface

#include <tk/tkernel.h>

UB data = in_b(INT port);

Parameter

INT port I/O Port Address I/O port address

Return Parameter

UB data Read Data Data to be read (in unit of byte)

Error Codes

None.

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this API can be used.

TK SUPPORT IOPORT

Support of I/O port access

Description

Reads data in a byte (8-bit) from the I/O port pointed by the address port and returns it in the return parameter data.

5.4.1.6 in_h - Read from I/O Port (In Unit of Half-word)

C Language Interface

#include <tk/tkernel.h>

UH data = in_h(INT port);

Parameter

INT port I/O Port Address I/O port address

Return Parameter

UH data Read Data Data to be read (in unit of half-word)

Error Codes

None.

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this API can be used.

TK SUPPORT IOPORT

Support of I/O port access

Description

Reads data in a half-word (16-bit) from the I/O port pointed by the address port and returns it in the return parameter data.

5.4.1.7 in_w - Read from I/O Port (In Unit of Word)

C Language Interface

#include <tk/tkernel.h>

UW data = in_w(INT port);

Parameter

INT port I/O Port Address I/O port address

Return Parameter

UW data Read Data Data to be read (in unit of word)

Error Codes

None.

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this API can be used.

TK SUPPORT IOPORT

Support of I/O port access

Description

Reads data in a word (32-bit) from the I/O port pointed by the address port and returns it in the return parameter data.

5.4.1.8 in_d - Read from I/O Port (In Unit of Double-word)

C Language Interface

#include <tk/tkernel.h>

UD data = in_d(INT port);

Parameter

INT port I/O Port Address I/O port address

Return Parameter

UD data Read Data Data to be read (in unit of double-word)

Error Codes

None.

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this API can be used.

TK SUPPORT IOPORT Support of I/O port access

TK_HAS_DOUBLEWORD Support of 64-bit data types (D, UD, VD)

Description

Reads data in a double-word (64-bit) from the I/O port pointed by the address port and returns it in the return parameter data.

Note that, in a system where I/O port cannot be accessed in one chunk of double-word (64-bit) due to hardware constraint, data is separated into shorter units than double-word (64-bit) before reading.

Rationale for the Specification

See Section 5.4.1.4, "out_d - Write to I/O Port (In Unit of Double-word)".

5.4.2 Micro Wait

5.4.2.1 WaitUsec - Micro Wait (Microseconds)

C Language Interface

#include <tk/tkernel.h>

void WaitUsec(UW usec);

Parameter

UW usec Micro Seconds Wait time (in microseconds)

Return Parameter

None.

Error Codes

None.

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this API can be used.

TK_SUPPORT_MICROWAIT

Support of micro wait

Description

Performs a micro wait for the specified interval (in microseconds).

This wait is usually implemented as a busy loop. This means that the micro wait occurs in the task RUNNING state rather than WAITING state.

The micro wait is easily influenced by the runtime environment, such as execution in RAM, execution in ROM, memory cache on or off, etc. The wait time is therefore not very accurate.

5.4.2.2 WaitNsec - Micro Wait (Nanoseconds)

C Language Interface

#include <tk/tkernel.h>

void WaitNsec(UW nsec);

Parameter

UW nsec

Nanoseconds

Wait time (in nanoseconds)

Return Parameter

None.

Error Codes

None.

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this API can be used.

TK SUPPORT MICROWAIT

Support of micro wait

Description

Performs a micro wait for the specified interval (in nanoseconds).

This wait is usually implemented as a busy loop. This means that the micro wait occurs in the task RUNNING state rather than WAITING state.

The micro wait is easily influenced by the runtime environment, such as execution in RAM, execution in ROM, memory cache on or off, etc. The wait time is therefore not very accurate.

5.5 Power Management Functions

Power management functions are used to realize system power saving. Power management functions are called as a callback type function from within μ T-Kernel/OS.

Though low_pow and off_pow exist as part of APIs that are defined in the power management function, they are INTERNAL reference specification and should be used only internally inside the μ T-Kernel. Since device drivers, middleware, and applications do not call these APIs directly, it is allowed to modify the functions or their APIs in the original specification to realize more advanced power management function. If, however, the new functions implemented have only the equivalent or similar performance as the APIs being defined as the INTERNAL reference specification here, it is preferable to follow this INTERNAL reference specification in order to enhance the program reusability.

Calling method of APIs for these functions is also implementation-dependent. Simple system calls are possible, as is the use of a trap. These functions may be provided in programs other than the μ T-Kernel. Use of an extended SVC or other means that makes use of μ T-Kernel function is not possible, however.

5.5.1 low_pow - Move System to Low-power Mode

C Language Interface

void low_pow(void);

Parameter

None.

Return Parameter

None.

Error Codes

None.

Valid Context

	Task portion	Quasi-task portion	Task-independent portion
Γ	NO	NO	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this API can be used.

TK_SUPPORT_LOWPOWER

Support of power management functions

Description

It is called within the μ T-Kernel task dispatcher, and performs processing that will put CPU hardware into low-power consumption mode.

After moving CPU to the low-power mode, low_pow waits for an external interrupt. When an external interrupt occurs, low_pow moves the CPU and its associated hardware back to the normal mode (non low-power mode) and then returns to the caller of it.

The detailed processing procedure for low_pow is as follows:

- 1. Move CPU to the low-power mode. For example, lower the clock frequency.
- 2. Stop CPU, waiting for an external interrupt. For example, execute such a CPU instruction.
- 3. Resume CPU after an external interrupt (by hardware).
- 4. Move the CPU back to the normal mode. For example, restore the normal clock frequency.
- 5. Return to the caller. Caller is actually the internal dispatcher within μ T-Kernel.

When implementing low_pow, the following points need to be noted:

· This function is called in interrupts disabled state.

- · Interrupts must not be enabled.
- \cdot Since the processing speed affects the speed of response to an interrupt, it should be as fast as possible.

Additional Notes

The task dispatcher calls low_pow to lower the power consumption when it has no tasks to be executed.

5.5.2 off_pow - Move System to Suspend State

C Language Interface

void off_pow(void);

Parameter

None.

Return Parameter

None.

Error Codes

None.

Valid Context

Task portion	Quasi-task portion	Task-independent portion
NO	NO	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this API can be used.

TK_SUPPORT_LOWPOWER

Support of power management functions

Description

This is called during the processing of tk_set_pow with powmode = TPW_DOSUSPEND within μ T-Kernel, and it will move the CPU hardware and its peripherals to suspend state (state where the applied power is off).

After moving the hardware to the suspend state, off_pow waits for a resume factor (power on, etc.). When a resume factor occurs, off_pow releases the suspend state and then returns to the caller of it.

The detailed processing procedure for off_pow is as follows:

- 1. Move CPU to the suspend state and wait for a resume factor. For example, stop the clock.
- 2. Resume CPU on the occurrence of a resume factor (by hardware).
- 3. Move CPU or other hardware back to the normal state, if necessary. Release the suspend state.(may be processed by hardware together with the previous step)
- 4. Return to the caller. Caller is actually the processing portion of tk_set_pow in μ T-Kernel.

When implementing off_pow, the following points need to be noted:

- · This function is called in interrupts disabled state.
- · Interrupts must not be enabled.

Note that the device drivers perform the suspending and resuming of peripherals and other devices. For n details, see the description of tk_sus_dev.	nore

5.6 System Configuration Information Management Functions

System configuration information management functions maintain and manage various information related to system configuration.

A part of system configuration information including the information on the maximum number of tasks, timer interrupt intervals, etc. are defined as the standard definition. Other than these, any information arbitrarily defined in applications, subsystems, or device drivers can be used by adding it to the system configuration information.

The format of system configuration information consists of a name and defined data as a pair.

Name

The name is a string of up to 16 characters. A character encoding is US-ASCII.

Characters that can be used (UB) are a to z, A to Z, 0 to 9 and '_' (underscore).

Defined Data

Data consists of numbers (integers) or character strings.

Characters that can be used (UB) are any characters other than 0x00 to 0x1F, 0x7F, or 0xFF (in character code).

Example of Format of System	n Configuration Information
Name	Defined Data
SysVer	3 0
SysVer SysName	microT-Kernel Version 3.00

How the system configuration information is to be stored is not specified here, but it is generally put in memory (ROM/RAM). This functionality is therefore not intended for storing large amounts of information.

System configuration information can be retrieved by tk_get_cfn and tk_get_cfs.

However, system configuration information cannot be added or changed during system execution.

5.6.1 System Configuration Information Acquisition

There are tk_get_cfn and tk_get_cfs as API to retrieve system configuration information. These are callable from applications, subsystems, device drivers, etc. and are also used internally in the μ T-Kernel.

5.6.1.1 tk_get_cfn - Get Numbers

C Language Interface

#include <tk/tkernel.h>

INT ct = tk_get_cfn(CONST UB *name, W *val, INT max);

Parameter

CONST UB*	name	Name	Name
-----------	------	------	------

W* val Value Array storing numbers

INT max Maximum Count Number of elements in val array

Return Parameter

INT ct Defined Numeric Number of defined numeric

Information Count information or Error Code Error code

Error Code

E_NOEXS No information is defined for the name specified in the name parameter

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this API can be used.

TK_SUPPORT_SYSCONF Support of system configuration information management functions

Description

Gets numeric information from system configuration information. This function gets up to max items of numerical information defined for the name specified in the name parameter and stores the acquired information in val. The number of defined numeric information is passed in the return code. If return code $> \max$, this indicates that not all the information could be stored. By specifying $\max = 0$, the number of defined numeric values can be found out without actually storing them in val.

E_NOEXS is returned if no information is defined for the name specified in the name parameter. The behavior if the information defined for name is a character string is indeterminate.

This function can be invoked from any protection level, without being limited to the protection level from which μ T-Kernel/OS system call can be invoked.

5.6.1.2 tk_get_cfs - Get Character String

C Language Interface

#include <tk/tkernel.h>

INT rlen = tk_get_cfs(CONST UB *name, UB *buf, INT max);

Parameter

CONST UB*	name	Name	Name
-----------	------	------	------

UB* buf Buffer Array storing character string INT Maximum Length Maximum size of buf (in bytes)

Return Parameter

INT rlen Size of Defined Character Size of defined character string

String Information information (in bytes)

or Error Code Error code

Error Code

E_NOEXS No information is defined for the name specified in the name parameter

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this API can be used.

TK_SUPPORT_SYSCONF Support of system configuration information management functions

Description

Gets character string information from system configuration information. This function gets up to \max characters of character string information defined for the name specified in the name parameter and stores the acquired information in buf. If the acquired character string is shorter than \max characters, it is terminated by '¥0' when stored. The length of the defined character string information (not including '¥0') is passed in the return code. If return code > \max , this indicates that not all the information could be stored. By specifying \max = 0, the character string length can be found out without actually storing anything in buf.

E_NOEXS is returned if no information is defined for the name specified in the name parameter. The behavior if the information defined for name is a numeric string is indeterminate.

This function can be invoked from any protection level, without being limited to the protection level from which μ T-Kernel/OS system call can be invoked.

5.6.2 Standard System Configuration Information

The following information is defined as standard system configuration information. A standard information name is prefixed by T.

character string	Summary description
N	Numeric string information
S	Character string information

· Product information

character string	Name of standard definition	Summary description
S	TSysName	System name (product name)

· Maximum number of objects

character string	Name of standard definition	Summary description
N	TMaxTskId	Maximum number of tasks
N	TMaxSemId	Maximum number of
		semaphores
N	TMaxFlgId	Maximum number of event flags
N	TMaxMbxId	Maximum number of mailboxes
N	TMaxMtxId	Maximum number of mutexes
N	TMaxMbfId	Maximum number of message
		buffers
N	TMaxMpfId	Maximum number of fixed-size
		memory pools
N	TMaxMplId	Maximum number of
		variable-size memory pools
N	TMaxCycId	Maximum number of cyclic
		handlers
N	TMaxAlmId	Maximum number of alarm
		handlers
N	TMaxSsyId	Maximum number of
		subsystems
N	TMaxSsyPri	Maximum number of subsystem
		priorities

Other

character string	Name of standard definition	Summary description
N	TSysStkSz	Default system stack size (in
		bytes)
N	TSVCLimit	Lowest protection level for
		system call invoking
N	TTimPeriod	Timer interrupt interval (in
		milliseconds)Timer interrupt
		interval (in microseconds)

The actual length of timer interrupt interval is a sum of time in milliseconds and time in microseconds. The interval in microseconds is assumed to be 0 when omitted.

For example, when timer interrupt interval should be 5 milliseconds, describe as "TTimPeriod 5" or "TTimPeriod 0 5000". When timer interval should be 1.5 milliseconds (1,500 microseconds), describe as "TTimPeriod 1 500" or "TTimPeriod 0 1500".

· device management function

character string	Name of standard definition	Summary description
N	TMaxRegDev	Maximum number of device
		registrations
N	TMax0pnDev	Maximum device open count
N	TMaxReqDev	Maximum number of device
		requests
N	TDEvtMbfSz	Event notification message
		buffer size (in bytes)Maximum
		event notification message
		length (in bytes)

If TDEvtMbfSz is not defined or if the message buffer size is a negative value, an event notification message buffer is not used.

When multiple values are defined for any of the above numeric strings, they are stored in the same order as in the explanation.

Example of Storage Order of More than One Numeric Value

tk_get_cfn("TDEvtMbfSz", val, 2)

val[0] = Event notification message buffer size

val[1] = Maximum event notification message length

5.7 Memory Cache Control Functions

Memory cache control functions perform a cache control or mode setting.

The approach of cache control in μ T-Kernel is as follows:

Basically, even if application and device driver programs are created without paying attention to the existence of cache, the appropriate cache control should be automatically performed during their execution. Especially, in consideration of program portability, functions with strong dependency on system including cache are better to be handled separately from application programs wherever possible. For this reason, it is the policy of individual systems based on μ T-Kernel to make the μ T-Kernel itself control the cache automatically.

Specifically, μ T-Kernel sets the cache so that it is turned ON for space like memory to store usual programs or data, and OFF for space such as I/O. For this reason, ordinary application programs do not need to explicitly call a function for cache control. Appropriate cache control is automatically performed even if cache control is not explicitly performed from the program.

However, the cache control by μ T-Kernel only (cache control by default setting) may not be enough for particular situations. For example, for I/O processing with DMA transfer or using memory space outside the kernel management, explicit cache control may be required. When executing a program by dynamically loading or generating (compiling) it, such cache control may be required so that data cache and instruction cache are appropriately synchronized. Memory cache control functions are assumed to be used in these situations.

5.7.1 SetCacheMode - Set Cache Mode

C Language Interface

#include <tk/tkernel.h>

SZ rlen = SetCacheMode(void *addr, SZ len, UINT mode);

Parameter

void*	addr	Start Address	Start address
-------	------	---------------	---------------

SZ len Length memory area size (in bytes)

UINT mode Mode Cache mode

Return Parameter

SZ rlen Result Length Size of the area for which the cache

mode was set (in bytes)

or Error Code Error code

Error Code

E_OK Normal completion

E_PAR Parameter error (addr, len, or mode is invalid or cannot be used)
E_NOSPT Unsupported function (function specified in mode is unsupported)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this API can be used.

TK_SUPPORT_CACHECTRL Support of memory cache control functions

TK_SUPPORT_SETCACHEMODE Support of set cache mode function

Additionally, the following service profile items are related to this API.

TK_SUPPORT_WBCACHE Support for specifying write-back mode for cache mode(CM_WB)

TK_SUPPORT_WTCACHE Support for specifying write-through mode for cache

 $mode(CM_WT)$

Description

Sets the cache mode for a memory area. Specifically, performs the setting specified in mode for the cache of the len bytes memory area from the address addr.

Specify CM_OFF in mode to flush (writes back) the cache, invalidate it, and turn it off.

Specify CM WT in mode to flush the cache and then set the write through cache mode.

Specify CM_WB in mode to set the write back cache mode. In this case, whether or not to flush the cache is implementation-dependent.

Specify CM_CONT in mode to apply the cache mode setting only for the contiguous address (physical address) space area starting from addr. If non-allocated area exists within the specified space, the processing is aborted immediately before the area and the size of the processed space is returned. If CM_CONT is not specified, then the all area is the target of the cache mode processing, and the size of the area for which the processing has been performed is returned.

Some or all of the cache mode settings may be unusable depending on CPU or implementation. If an unusable mode is specified, E_NOSPT is returned without any processing.

len must be 1 or more. If a value of 0 or less is specified, the error code E_PAR is returned.

Additional Notes

Generally speaking, because the cache mode setting is performed in page units, the start address of the page including addr and subsequent addresses is taken as the setting target when addr is not at the start of the specified area. Note that unintended cache access may occur to an adjacent area when using this API. Care should be taken.

When you want more detailed cache mode settings depending on the hardware configuration or the cache function of CPU, add and use an implementation-dependent mode. For example, NORMAL CACHE OFF (Weakly Order), DEVICE CACHE OFF (Weakly Order), STRONG ORDER, or other cache mode may be specified.

When an unavailable mode is specified, it is implementation-dependent whether to generate an error as E_NOSPT or E_PAR.

5.7.2 ControlCache - Control Cache

C Language Interface

#include <tk/tkernel.h>

SZ rlen = ControlCache(void *addr, SZ len, UINT mode);

Parameter

void*	addr	Start Address	Start address
SZ	len	Length	Memory area size (in bytes)
T TT3 TT3		3.5.1	~ , ,

UINT mode Mode Control mode

Return Parameter

SZ rlen Result Length Size of the area for which the cache

mode was set (in bytes)

or Error Code Error code

Error Code

E OK Normal completion

E_PAR Parameter error (invalid addr, len or mode)

E_NOSPT Unsupported function (function specified in mode is unsupported)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this API can be used.

TK_SUPPORT_CACHECTRL Support of memory cache control functions

Description

Control the cache (flush or invalidate) of a memory area. Specifically, performs the control specified in mode for the cache of the len bytes memory area from the logical address addr.

```
mode := (CC_FLUSH | CC_INVALIDATE)

CC_FLUSH Flush (write back) cache

CC_INVALIDATE Invalidate cache

...
```

/* Implementation-dependent mode values may be added */

Both CC_FLUSH and $CC_INVALIDATE$ can be set at the same time. This combination flushes the cache and then invalidates it.

If the processing is successful, the size of the processed space is returned.

A range that spans areas with different cache modes or attributes must not be specified. For example, a range that spans areas with cache on and cache off, or areas with different protection levels must not be specified. If such a range is specified, the subsequent correct behavior is not guaranteed.

The detail of the function varies depending on CPU, hardware, or implementation because the cache control depends heavily on the hardware. The cache control is basically applied on the specified area using the specified mode, but it may affect more area including the specified area. For example, there are the following cases:

- Only the exactly specified range is not always controlled (flushed or invalidated). An area including the specified range is controlled, but it is also possible to flush or invalidate the cache for other areas (for example, entire memory) depending on CPU, hardware, or implementation.
- Normally, no operation is performed when a cache-off area is specified. Even in this case, it is possible to flush or invalidate the cache for areas other than the specified range.(always flush the entire space, etc.)
- · No operation is performed in a system without cache.

Generally, the cache control is performed in cache line size units. For this reason, note that unintended cache access may occur to adjacent area when using this API.

5.8 Physical Timer Functions

Physical timer functions are useful in the system equipped with more than one hardware timer when processing should be performed based on smaller unit of elapsed time than the timer interrupt interval (TTimPeriod).

A physical timer means a hardware counter that is monotonically incremented by one from 0 at a constant time interval. When a count value reaches a certain value (upper limit) specified for each physical timer, the handler (physical timer handler) specified for each physical timer is started and the count value is reset to 0.

More than one physical timer can be used depending on the number of hardware timers available in the system. The number of available physical timers is implementation-dependent. In the usual μ T-Kernel implementation, one hardware timer is used to realize the time management functions. Therefore it is assumed that remaining hardware timers are used for the physical timers.

Positive integer of ascending order like 1, 2, ... is used as a physical timer number. For example, when there are four hardware timers, as one of them is used for the μ T-Kernel time management functions, remaining three hardware timers are available with physical timer numbers assigned as 1, 2, and 3, respectively.

 μ T-Kernel/SM physical timer functions do not manage coordination between an individual physical timer and tasks that use the timer. If more than one task share one physical timer, coordination like mutual exclusion control must be performed on the application side.

Additional Notes

For the μ T-Kernel time management functions, the kernel starts alarm handler or cyclic handler, processes timeout, and processes these requests, all in the handler that is started on the time interval specified by "timer interrupt interval" (TTimPeriod) in Section 5.6.2, "Standard System Configuration Information". On the other hand, the physical timer functions only standardize the primitive functions such as setting a hardware timer, reading a count value, and triggering interrupt. They do not handle simultaneous multiple requests like the time management functions do. Based on this observation, the physical timer functions carry the name of "physical timer" since they have lower abstraction level than conventional time management functions, and are closer to hardware layer.

Due to the above positioning, the physical timer functions are made to be as simple as possible and limited to a small specification, and are assumed to be realized by library functions which have small overhead. This policy is reflected in the specification of using the statically fixed physical timer numbers rather than dynamical ID numbers, and the specification of never performing the management of mapping with the requesting task or the requests from more than one task.

Physical timer functions standardize APIs that operate the timer (counter) device. However, the timer devices have direct relation with time related behaviors such as calling interrupt handler based on a small elapsed time, making such devises more closely connected with the kernel than other devices (storage and communication). For this reason, the physical timer is provided as more generic function by standardizing its specification as a part of the μ T-Kernel/SM instead of standardizing it as part of device driver specification. Since the physical timer functions belong to the μ T-Kernel/SM [Overall Note and Supplement] is applicable. Hardware timer counter used as a physical timer is assumed to be 32-bit or less. Therefore, 32-bit UW is used for the data type that represents the count values or upper limits. In the future, 64-bit functions can be added.

5.8.1 Use Case of Physical Timer

Examples of effective use of physical timer functions are as follows:

(a) Example of processing to be realized

Assume that there are a cyclic processing X to be run every 2,500 microseconds and a cyclic processing Y to be run every 1,800 microseconds. Physical timers can achieve this efficiently.

(b)Implementation with physical timer functions

Two physical timers are used, and one is set to start a physical timer handler every 2,500 microseconds.

For example, if the physical timer clock frequency is 10 MHz, as 1 clock corresponds to 0.1 microseconds (= 100 nanoseconds), set a physical timer upper limit (limit) to 24,999 (= 25,000 - 1) to make the physical timer handler start when the count value is changed from 24,999 to 0.

As this is a cyclic processing, mode of StartPhysicalTimer should be set to TA_CYC_PTMR.

Processing X is performed within this physical timer handler.

Similarly using another physical timer, the physical timer handler is set to start every 1,800 microseconds to perform the processing Y within this physical timer handler.

The timer interrupt interval (TTimPeriod) used by the μ T-Kernel time management functions can be left at the default value (10 milliseconds) since it has no relationship with the physical timer functions.

(c)Implementation without physical timer functions

Instead of the physical timer handler, the μ T-Kernel 3.0 system call (tk_cre_cyc_u) that can specify time in microseconds is used to define the cyclic handler that is invoked every 2,500 microseconds to perform the processing X within this cyclic handler. Similarly using another physical timer, a physical timer handler is invoked every 1,800 microseconds to perform the processing Y within this physical timer handler.

However, in this case, the timer interrupt interval used by μ T-Kernel Time Management Function must be set with small enough interval so that the time of every 2,500 microseconds and every 1,800 microseconds can be processed precisely. Specifically, both processing every 2,500 microseconds and processing every 1,800 microseconds can be achieved with almost exact timing by using the timer interrupt interval of 100 microseconds which is a common divisor of 2,500 microseconds and 1,800 microseconds.

With the method (b) which uses the physical timer functions, the timer interrupt interval can be left as the default value (every 10 milliseconds) since the μ T-Kernel time management functions are not used. Interrupts by the physical timer will occur every 2,500 and 1,800 microseconds, from which the physical timer handler is called to perform the processing X and Processing Y. No unnecessary interrupt related to timer will occur other than these.

On the other hand, for the method of (c) which does not use a physical timer, because the timer interrupt interval must be shortened, the overhead increases accordingly as the number of timer interrupts increases. For example, when comparing (b) and (c) in terms of the number of timer related interrupts that occur in 10 milliseconds period, (b) will have a total interrupt number of 10; $1 = 10 \text{ milliseconds}/10 \text{ milliseconds}/10 \text{ milliseconds}/10 \text{ milliseconds}/10 \text{ milliseconds}/10 \text{ milliseconds}/100 \text{ microseconds}/100 \text{ microseconds$

However, the physical timer functions are highly effective only when the number of processings that depend on time is small and statically fixed, and enough number of hardware timers exist for them. Because the physical timer functions are, as its name shows, subject to the constraints of physical hardware resources, physical timer functions cannot be used effectively when the number of hardware timers is too small. Additionally, it will experience difficulty with the case where the number of time-dependent processings dynamically increases. In these cases, using the conventional time management functions such as the cyclic handler and alarm handler will achieve more flexible handling.

Though the application area of physical timer functions and time management functions in microseconds may overlap, they have different characteristics shown above. Therefore, it is recommended to use appropriate one depending on the hardware configuration and applications. The physical timer functions have been added for this reason.

5.8.2 StartPhysicalTimer - Start Physical Timer

C Language Interface

#include <tk/tkernel.h>

ER ercd = StartPhysicalTimer(UINT ptmrno, UW limit, UINT mode);

Parameter

UINT	ptmrno	Physical Timer Number	Physical timer number
UW	limit	Limit	Upper limit
UINT	mode	Mode	Operation mode

Return Parameter

ER	ercd	Error Code	Error code
EIX	c i cu	EHOI COUE	EIIOI COUE

Error Code

E_OK Normal completion

E PAR Parameter error (ptmrno, limit, or mode is invalid or cannot be used)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this API can be used.

TK_SUPPORT_PTIMER Support of physical timer function

Additionally, the following service profile items are related to this API.

TK_MAX_PTIMER Maximum number of physical timers

Description

Sets the count value of the physical timer specified by ptmrno to 0, and then starts counting. After this function is executed, the count value is incremented by one at a constant time interval that is the inverse of the timer clock frequency.

limit specifies the upper limit of the count value. When a time period equal to the inverse of the clock frequency has elapsed after the count value reaches the upper limit, the count value is reset to 0. At that timing, if a physical timer handler is defined for this physical timer, that handler will be started. The duration between when the counting is started by StartPhysicalTimer call and when the counter is reset to zero is (inverse of timer clock frequency) x (upper limit + 1).

If limit is set to 0, an E_PAR error will occur. mode specifies the following modes:

TA_CYC_PTMR 1

The counting is stopped when the count value is reset to 0 from the upper limit value. Afterward, the count value remains as 0.

The count value starts to increase again, after it is reset to 0 from the upper limit value. Therefore, the cycle of increasing and resetting the count value repeats periodically.

5.8.3 StopPhysicalTimer - Stop Physical Timer

C Language Interface

#include <tk/tkernel.h>

ER ercd = StopPhysicalTimer(UINT ptmrno);

Parameter

UINT ptmrno Physical Timer Number Physical timer number

Return Parameter

ER ercd Error Code Error code

Error Code

E_OK Normal completion

E_PAR Parameter error (ptmrno is invalid or cannot be used)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this API can be used.

TK_SUPPORT_PTIMER Support of physical timer function

Additionally, the following service profile items are related to this API.

TK_MAX_PTIMER Maximum number of physical timers

Description

Stops the counting operation of the physical timer specified by ptmrno.

After executing this function, the last count value of the physical timer is retained. Therefore, if GetPhysical-TimerCount is executed after this function is executed, that function will return the physical timer count value just before this function is executed.

Executing this function for the physical timer that has already stopped counting does nothing. It does not generate any error.

Additional Notes

If the physical timer that is no longer used is kept running, it may not adversely affect the program operation, but clock signals will be used unnecessarily, which may not be desirable in terms of electric power saving. So, it is recommended to stop the physical timer no longer used by executing this function.

Use of this function is effective for the case TA_CYC_PTMR is specified for the physical timer and its use is ended. If TA_ALM_PTMR is specified as the mode, the physical timer automatically stopped counting after the count value is reset to 0 from the upper limit value, which results in the same state as that after this function being executed. In this case, it is not necessary to issue this function additionally. Issuing this function does not cause any problem, but nothing is changed.

5.8.4 GetPhysicalTimerCount - Get Physical Timer Count

C Language Interface

#include <tk/tkernel.h>

ER ercd = GetPhysicalTimerCount(UINT ptmrno, UW *p_count);

Parameter

UINT ptmrno Physical Timer Number Physical timer number

UW* p_count Pointer to Physical Timer Count Pointer to the area to return the current

physical timer count

Return Parameter

ER ercd Error Code Error code

UW count Physical Timer Count Current count value

Error Code

E OK Normal completion

E_PAR Parameter error (ptmrno is invalid or cannot be used)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this API can be used.

TK_SUPPORT_PTIMER Support of physical timer function

Additionally, the following service profile items are related to this API.

TK_MAX_PTIMER Maximum number of physical timers

Description

Gets the current count value of the physical timer specified by ptmrno, and returns it as the return parameter count.

Physical timer number

5.8.5 DefinePhysicalTimerHandler - Define Physical Timer Handler

C Language Interface

#include <tk/tkernel.h>

ER ercd = DefinePhysicalTimerHandler(UINT ptmrno, CONST T_DPTMR *pk_dptmr);

ptmrno

Parameter

UINT

CONST T_DPTMR*	pk_dptmr	Packet to Define Physical Timer Handler	Physical timer handler definition information
pk_dptmr Detail			
void*	exinf	Extended Information	Extended information
ATR	ptmratr	Physical Timer Attribute	Physical timer handler attribute (TA_ASM TA_HLNG)
FP	ptmrhdr	Physical Timer Handler Address	Physical timer handler address

Physical Timer Number

Return Parameter

ER	2424	Error Code	E
H.K	ercd	E.Fror C.Oge	Error code

Error Code

cated)
ot be used, or the

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this API can be used.

TK_SUPPORT_PTIMER Support of physical timer function

Additionally, the following service profile items are related to this API.

TK_MAX_PTIMER Maximum number of physical timers

Description

If pk_dptmr is not NULL, this function defines the physical timer handler for the physical timer specified by ptmrno. The physical timer handler is a handler running as a task-independent portion, and is started when the physical timer count is reset to 0 from the upper limit value specified by limit of StartPhysicalTimer.

The programming format of physical timer handler is similar to that of cyclic handler or alarm handler. This means that if the TA_HLNG attribute is specified, the physical timer handler is started via a high-level language support routine and terminated by a return from the function. If the TA_ASM attribute is specified, the physical timer handler format is implementation-dependent. Regardless of which attribute is specified, exinf is passed as a startup parameter of physical timer handler.

If pk_dptmr is NULL, this function cancels the definition of the physical timer handler for the physical timer specified by ptmrno. The physical timer handlers for all the physical timers are undefined right after the system startup.

If the physical timer handler for the physical timer specified by ptmrno cannot be defined (if the pk_rptmr->defhdr in GetPhysicalTimerConfig returns FALSE), the E_PAR error occurs. If the physical timer specified by ptmrno does not exist or cannot be used, the E_PAR error also occurs.

Additional Notes

In a typical implementation, an interrupt handler to implement the function of physical timer is defined within μ T-Kernel/SM, and is configured so that an interrupt to be raised when the physical timer counter value wraps around from the upper limit to zero. In this interrupt handler, the physical timer handler which is defined in this function is called as well as other processing for implementation of physical timer such as the support for TA_ALM_PTMR and TA_CYC_PTMR.

5.8.6 GetPhysicalTimerConfig - Get Physical Timer Configuration Information

C Language Interface

#include <tk/tkernel.h>

ER ercd = GetPhysicalTimerConfig(UINT ptmrno, T_RPTMR *pk_rptmr);

Parameter

UINT	ptmrno	Physical Timer Number	Physical timer number
T_RPTMR^*	pk_rptmr	Packet to Return Physical	Pointer to the area to return the
			configuration information of the
		Information	physical timer

Return Parameter

ER	ercd	Error Code	Error code
pk_rptmr Detail			
UW	ptmrclk	Physical Timer Clock Frequency	Physical timer clock frequency
UW	maxcount	Maximum Count	Maximum count value
BOOL	defhdr	Handler Support	Whether physical timer handler is supported or not

Error Code

E_OK	Normal completion
E_PAR	Parameter error (ptmrno or pk_rptmr is invalid or cannot be used)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this API can be used.

TK_SUPPORT_PTIMER Support of physical timer function

Additionally, the following service profile items are related to this API.

TK_MAX_PTIMER Maximum number of physical timers

Description

Gets the configuration information of the physical timer specified by ptmrno.

The retrievable configuration information includes the physical timer clock frequency ptmrclk, the maximum count value maxcount, and whether the support for physical timer handler exists defhdr.

ptmrclk indicates the clock frequency used to count up the target physical timer. If ptmrclk is set to 1, the clock is 1 Hz, and if it is set to MATH: 2^{32} - 1, then the clock is MATH: 2^{32} - 1 Hz (approximately 4 GHz). If the clock is long (less than 1 Hz), then ptmrclk is 0. If ptmrclk is other than 0, the physical timer count value is monotonically incremented by 1, from 0 to the upper limit value limit, at a constant time interval that is the inverse of ptmrclk.

maxcount is the maximum value that can be counted by the target physical timer, and also the maximum value that can be set as the upper limit value. Generally, maxcount is MATH: 2^{16} - 1 for a 16-bit timer counter, and MATH: 2^{32} - 1 for a 32-bit timer counter, but it may be other value depending on the hardware or system configuration.

If defhdr is TRUE, the physical timer handler, which is started when the target physical timer count reaches the upper limit value, can be defined. If defhdr is FALSE, the physical timer handler for this physical timer cannot be defined.

If the physical timer specified by ptmrno does not exist or cannot be used, the E_PAR error occurs. For the physical timer number, a positive integer value is assigned in ascending order, so if the system has N physical timers, the E_PAR error occurs when ptmrno is 0 or larger than N.

Additional Notes

As the substring "configuration" of this function name suggests, the values acquired by this function, ptmrclk, maxcount, and defhdr are assumed to be statically fixed by hardware or by the initialization done during the startup processing of the system, and are not expected to change during the subsequent execution of the system. Note, however, that there is a chance of adding dynamical reconfiguration feature to the core specification or implementation-defined feature: for example, changing the clock frequency of the physical timer. When such modifications are introduced, the information acquired by this function can be a value dynamically changed during the execution of the system. Such changes of use cases depend heavily on the operation methods or applications, and it was considered better to handle such differences in the upper library that use physical timer rather than in the base μ T-Kernel specification. Hence, μ T-Kernel specification does not define the possibility of dynamically changing nature of the configuration information acquired by this function. In a nutshell, whether the information acquired by this function may change during the execution of the system is implementation-dependent.

5.9 Utility Functions

Utility functions are used commonly from general programs such as applications, middleware, and device drivers on the μ T-Kernel.

Utility functions are provided as library functions or C language macros.

5.9.1 Set Object Name

API for setting object name is provided as C language macros. It can be called from a task-independent portion and while task dispatching and interrupts are disabled.

5.9.1.1 SetOBJNAME - Set Object Name

C Language Interface

#include <tk/tkernel.h>

void SetOBJNAME(void *exinf, CONST UB *name);

Parameter

void*	exinf	Extended Information	Variable to set as extended
			information
CONST UB*	name	Object Name	Object name to be set

Return Parameter

None.

Error Codes

None.

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

None.

Description

Interprets the ASCII string of four or less characters specified in name as a single 32-bit data to store it in exinf. This API is defined as a C language macro and exinf is not a pointer. Write a variable directly.

Additional Notes

This API can assign the ASCII string names (such as task name) to the kernel objects, and the names are stored in the extended information <code>exinf</code> of the kernel objects. It is possible to list the object names set by this API by printing the information in <code>exinf</code> as ASCII string using the debugger, etc. to investigate the state of the kernel objects.

Sample Usage of SetOBJNAME

```
T_CTSK ctsk;
...

/* Set the object name "TEST" for the task ctsk */
SetOBJNAME(ctsk.exinf, "TEST");
task_id = tk_cre_tsk ( &ctsk );
```

Note that you need to add '¥0' which indicates the end of the string if you would like to manipulate the string by C language functions.

5.9.2 Fast Lock and Multi-lock Libraries

Fast lock and multi-lock libraries are for performing exclusion control faster between multiple tasks in the device drivers or subsystems. In order to perform the exclusion control, while semaphore or mutex can be used, fast lock is implemented as the μ T-Kernel/SM library functions that processes the lock acquisition operation with specially higher speed when the task is not queued.

Fast lock and multi-lock libraries are for performing exclusion control quicker than semaphore and mutexes between multiple tasks in the device drivers or subsystems. Fast multi-lock is one object built by combining independent binary semaphores for mutual exclusion control. The number of binary semaphores is the number of the bits in UINT data type, and each binary semaphore is distinguished by the number from 0 to (bit width of UINT) - 1.

For example, when exclusion control is performed at ten locations, one fast multi-lock can be created and then the binary semaphores with lock numbers from 0 to 9 can be used to perform exclusion control while ten fast locks can be used. While using ten fast locks bring faster result, the total required resources is lower when the fast multi-lock is used.

Additional Notes

Fast lock function is implemented by using counters that show the lock states and a semaphore. Fast multi-lock function is implemented by using a counter that shows the lock states and event flags. When the invoking task is not queued at the lock acquisition, it performs faster than the usual semaphores or event flags because only counter operation is performed. On the other hand, when the invoking task is queued at lock acquisition, it is not necessarily faster than the usual semaphores or event flags because it uses usual semaphores and event flags to manage transitions to waiting state or queues. Fast lock and multi-lock are effective when possibility of being queued is low due to mutual exclusion control.

5.9.2.1 CreateLock - Create Fast Lock

C Language Interface

#include <tk/tkernel.h>

ER ercd = CreateLock(FastLock *lock, CONST UB *name);

Parameter

FastLock* lock Control Block of FastLock Control block of fast lock CONST UB* name Name of FastLock Name of fast lock

Return Parameter

ER ercd Error Code Error code

Error Code

E_OK Normal completion

E_NOMEM Insufficient memory (memory for control block cannot be allocated)

E_LIMIT Number of fast locks exceeds the system limit

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

Creates a fast lock.

lock is a structure to control a fast lock. name is the name of the fast lock and can be NULL.

Fast lock is a binary semaphore used for mutual exclusion control and is implemented to be operated as fast as possible.

5.9.2.2 DeleteLock - Delete Fast Lock

C Language Interface

#include <tk/tkernel.h>

void DeleteLock(FastLock *lock);

Parameter

FastLock* lock Control Block of FastLock Control block of fast lock

Return Parameter

None.

Error Codes

None.

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

Deletes a fast lock.

Error detection is omitted for faster operation.

5.9.2.3 Lock - Lock Fast Lock

C Language Interface

#include <tk/tkernel.h>

void Lock(FastLock *lock);

Parameter

FastLock* lock Control Block of FastLock Control block of fast lock

Return Parameter

None.

Error Codes

None.

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

Locks a fast lock.

If the lock is already locked, the invoking task goes to the waiting state and is put in the task queue until it is unlocked. Tasks are queued in the priority order.

Error detection is omitted for faster operation.

5.9.2.4 Unlock - Unlock Fast Lock

C Language Interface

#include <tk/tkernel.h>

void Unlock(FastLock *lock);

Parameter

FastLock* lock Control Block of FastLock Control block of fast lock

Return Parameter

None.

Error Codes

None.

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

Unlocks a fast lock.

If there are tasks waiting for the fast lock, the first task in the task queue newly acquires the lock.

Error detection is omitted for faster operation.

5.9.2.5 CreateMLock - Create Fast Multi-lock

C Language Interface

#include <tk/tkernel.h>

ER ercd = CreateMLock(FastMLock *lock, CONST UB *name);

Parameter

FastMLock* lock Control Block of FastMLock Control block of fast multi-lock
CONST UB* name Name of FastMLock Name of fast multi-lock

Return Parameter

ER ercd Error Code Error code

Error Code

E_OK Normal completion

E_NOMEM Insufficient memory (memory for control block cannot be allocated)

E LIMIT Number of fast multi-locks exceeds the system limit

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

Creates a fast multi-lock.

lock is a structure to control a fast multi-lock. name is the name of the fast multi-lock and can be NULL.

Fast multi-lock is one object built by combining independent binary semaphores for mutual exclusion control, and is implemented for very fast execution. The number of binary semaphores is the number of the bits in UINT data type, and each binary semaphore is distinguished by the number from 0 to (bit width of UINT data type) - 1. For example, if UINT is 16 bits, a number from 0 to 15 can be used as lock number.

Porting Guideline

Be warned that the number of available lock numbers is now dependent on the bit width of UINT data type. For example, the number of binary semaphores can take the value from 0 to 15 in 16-bit environment.

5.9.2.6 DeleteMLock - Delete Fast Multi-lock

C Language Interface

#include <tk/tkernel.h>

ER ercd = DeleteMLock(FastMLock *lock);

Parameter

FastMLock* lock Control Block of FastMLock Control block of fast multi-lock

Return Parameter

ER ercd Error Code Error code

Error Code

E_OK Normal completion E_PAR Parameter error

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

Deletes a fast multi-lock.

5.9.2.7 MLock - Lock Fast Multi-lock

C Language Interface

#include <tk/tkernel.h>

ER ercd = MLock(FastMLock *lock, INT no);

Parameter

FastMLock* lock Control Block of FastMLock Control block of fast multi-lock INT Lock Number Lock number

Return Parameter

ER ercd Error Code Error code

Error Code

E_OK Normal completion E_PAR Parameter error

E_DLT Waiting object was deleted

E_RLWAI Waiting state was forcibly released

E_CTX Context error

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

Locks a fast multi-lock.

no is the lock number and is from 0 to (the bit width of UINT data type) - 1. For example, if UINT is 16 bits, a number from 0 to 15 can be used as lock number.

If the lock is already locked with the same lock number, the invoking task goes to the waiting state and is put in the task queue until it is unlocked with the same lock number. Tasks are queued in the priority order.

Porting Guideline

Be warned that the number of available lock numbers is now dependent on the bit width of UINT data type. For example, the number of binary semaphores can take the value from 0 to 15 in 16-bit environment.

5.9.2.8 MLockTmo - Lock Fast Multi-lock (with Timeout)

C Language Interface

#include <tk/tkernel.h>

ER ercd = MLockTmo(FastMLock *lock, INT no, TMO tmout);

Parameter

FastMLock*	lock	Control Block of FastMLock	Control block of fast multi-lock
INT	no	Lock Number	Lock number
TMO	tmout	Timeout	Timeout (ms)

Return Parameter

ER	ercd	Error Code	Error code

Error Code

E_OK	Normal completion
E_PAR	Parameter error
E_DLT	Waiting object was deleted
E_RLWAI	Waiting state was forcibly released
E_TMOUT	Timeout
E_CTX	Context error

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

Locks a fast multi-lock with timeout.

This API is identical to MLock, except that it can specify the timeout interval in tmout. If the lock cannot be acquired before the timeout interval specified in tmout has elapsed, E_TMOUT is returned.

Porting Guideline

Be warned that the number of available lock numbers is now dependent on the bit width of UINT data type. For example, the number of binary semaphores can take the value from 0 to 15 in 16-bit environment.

5.9.2.9 MLockTmo_u - Lock Fast Multi-lock (with Timeout, Microseconds)

C Language Interface

#include <tk/tkernel.h>

ER ercd = MLockTmo_u(FastMLock *lock, INT no, TMO_U tmout_u);

Parameter

FastMLock*	lock	Control Block of FastMLock	Control block of fast multi-lock
INT	no	Lock Number	Lock number

TMO_U tmout_u Timeout Timeout (in microseconds)

Return Parameter

ER	ercd	Error Code	Error code

Error Code

E_OK	Normal completion
E_PAR	Parameter error

E_DLT Waiting object was deleted

E_RLWAI Waiting state was forcibly released

E_TMOUT Timeout E_CTX Context error

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

Only when all the service profile items below are set to be effective, this API can be used.

TK_SUPPORT_USEC Support of microsecond

Description

Locks a fast multi-lock with timeout in microseconds.

This API is identical to MLockTmo, except that the timeout interval is specified with a 64-bit value in microseconds.

Porting Guideline

Be warned that the number of available lock numbers is now dependent on the bit width of UINT data type. For example, the number of binary semaphores can take the value from 0 to 15 in 16-bit environment.

5.9.2.10 MUnlock - Unlock Fast Multi-lock

C Language Interface

#include <tk/tkernel.h>

ER ercd = MUnlock(FastMLock *lock, INT no);

Parameter

FastMLock* lock Control Block of FastMLock Control block of fast multi-lock INT Lock Number Lock number

Return Parameter

ER ercd Error Code Error code

Error Code

E_OK Normal completion

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	NO

Related Service Profile Items

None.

Description

Unlocks a fast multi-lock.

no is the lock number and is from 0 to (the bit width of UINT data type) - 1. For example, if UINT is 16 bits, a number from 0 to 15 can be used as lock number.

If there are tasks in the waiting state for the same lock number, the first task in the task queue newly acquires the lock.

Porting Guideline

Be warned that the number of available lock numbers is now dependent on the bit width of UINT data type. For example, the number of binary semaphores can take the value from 0 to 15 in 16-bit environment.

Chapter 6

μ T-Kernel/DS Functions

This chapter describes details of the functions provided by μ T-Kernel/DS (Debugger Support).

 μ T-Kernel/DS provides functions enabling a debugger to reference μ T-Kernel internal states and run a trace. The functions provided by μ T-Kernel/DS are only for debugger use and not for use by applications or other programs.

Overall Note and Supplement

• Except where otherwise noted, μ T-Kernel/DS system calls (td_...) can be called from a task independent portion and while dispatching and interrupts are disabled.

There may be some limitations, however, imposed by particular implementations.

- When μT-Kernel/DS system calls (td_...) are invoked in interrupts disabled state, they are processed without enabling interrupts. Other kernel states likewise remain unchanged during this processing. Changes in kernel states may occur if a service call is invoked while interrupts or dispatching are enabled, since the kernel continues operating.
- μ T-Kernel/DS system calls (td_...) cannot be invoked from a lower protection level than that at which μ T-Kernel/OS system calls can be invoked (lower than TSVCLimit)(E_OACV).
- Error codes such as E_PAR, E_MACV, and E_CTX that can be returned in many situations are not described here always unless there is some special reason for doing so.

6.1 Kernel Internal State Acquisition Functions

Kernel internal state reference functions are functions for enabling a debugger to get T-Kernel internal states. They include functions for getting a list of objects, getting task precedence, getting the order in which tasks are queued, getting the status of objects, system, and task registers, and getting time.

6.1.1 td_lst_tsk - Reference Task ID List

C Language Interface

#include <tk/dbgspt.h>

INT ct = td_lst_tsk(ID list[], INT nent);

Parameter

ID list[] List Location of task ID list

INT nent Number of List Entries Maximum number of entries in list

Return Parameter

INT ct Count Number of used tasks

Error Code Error code

Error Codes

None.

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_DBGSPT Support of μ T-Kernel/DS

Description

Gets the list of the IDs of the currently used tasks, and puts in list up to nent IDs. The number of the used tasks is passed in the return code. If return code > nent, this means not all task IDs could be retrieved.

6.1.2 td_lst_sem - Reference Semaphore ID List

C Language Interface

#include <tk/dbgspt.h>

INT ct = td_lst_sem(ID list[], INT nent);

Parameter

ID	list[]	List	Location of semaphore ID list
INT	nent	Number of List Entries	Maximum number of entries in list

Return Parameter

INT	ct		Count	Number of used semaphores
		or	Error Code	Error code

Error Codes

None.

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_DBGSPT

Support of μ T-Kernel/DS

Description

Gets the list of the IDs of the currently used semaphores, and puts in list up to nent IDs. The number of the used semaphores is passed in the return code. If return code > nent, this means not all semaphore IDs could be retrieved.

6.1.3 td_lst_flg - Reference Event Flag ID List

C Language Interface

#include <tk/dbgspt.h>

INT ct = td_lst_flg(ID list[], INT nent);

Parameter

ID	list[]	List	Location of event flag ID list
----	--------	------	--------------------------------

INT nent Number of List Entries Maximum number of entries in list

Return Parameter

INT ct Count Number of used event flags

Error Code Error code

Error Codes

None.

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_DBGSPT Support of μ T-Kernel/DS

Description

Gets the list of the IDs of the currently used event flags, and puts in list up to nent IDs. The number of the used event flags is passed in the return code. If return code > nent, this means not all event flag IDs could be retrieved.

6.1.4 td_lst_mbx - Reference Mailbox ID List

C Language Interface

#include <tk/dbgspt.h>

INT ct = td_lst_mbx(ID list[], INT nent);

Parameter

TT	1 ! - A F T	т• ,	T 4' C '11 II 11' 4
11)	IITOII	LICT	Location of mailbox III list
11	list[]	List	Location of mailbox ID list

INT nent Number of List Entries Maximum number of entries in list

Return Parameter

INT ct Count Number of used mailboxes

Error Code Error code

Error Codes

None.

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_DBGSPT Support of μ T-Kernel/DS

Description

Gets the list of the IDs of the currently used mailboxes, and puts in list up to nent IDs. The number of the used mailboxes is passed in the return code. If return code > nent, this means not all mailbox IDs could be retrieved.

6.1.5 td_lst_mtx - Reference Mutex ID List

C Language Interface

#include <tk/dbgspt.h>

INT ct = td_lst_mtx(ID list[], INT nent);

Parameter

ID list[] List Location of mutex ID list

INT nent Number of List Entries Maximum number of entries in list

Return Parameter

INT ct Count Number of used mutexes

Error Code Error code

Error Codes

None.

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_DBGSPT Support of μ T-Kernel/DS

Description

Gets the list of the IDs of the currently used mutexes, and puts in list up to nent IDs. The number of the used mutexes is passed in the return code. If return code > nent, this means not all mutex IDs could be retrieved.

6.1.6 td_lst_mbf - Reference Message Buffer ID List

C Language Interface

#include <tk/dbgspt.h>

INT ct = td_lst_mbf(ID list[], INT nent);

Parameter

ID	list[]	List	Location of message buffer ID list
INT	nent	Number of List Entries	Maximum number of entries in list

Return Parameter

INT ct Count Number of used message buffers or Error Code Error code

Error Codes

None.

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK SUPPORT DBGSPT

Support of μ T-Kernel/DS

Description

Gets the list of the IDs of the currently used message buffers, and puts in list up to nent IDs. The number of the used message buffers is passed in the return code. If return code > nent, this means not all message buffer IDs could be retrieved.

6.1.7 td_lst_mpf - Reference Fixed-size Memory Pool ID List

C Language Interface

#include <tk/dbgspt.h>

INT ct = td_lst_mpf(ID list[], INT nent);

Parameter

ID	list[]	List	Location of fixed-size memory pool ID
110	LIGILI	List	Location of fixed size memory poor in

list

INT nent Number of List Entries Maximum number of entries in list

Return Parameter

INT ct Count Number of used fixed-size memory

pools

or Error Code Error code

Error Codes

None.

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_DBGSPT

Support of μ T-Kernel/DS

Description

Gets the list of the IDs of the currently used fixed-size memory pools, and puts in list up to nent IDs. The number of the used fixed-size memory pools is passed in the return code. If return code > nent, this means not all fixed-size memory pool IDs could be retrieved.

6.1.8 td_lst_mpl - Reference Variable-size Memory Pool ID List

C Language Interface

#include <tk/dbgspt.h>

INT ct = td_lst_mpl(ID list[], INT nent);

Parameter

TT	list[]	T : +	I + i
11)	117711	List	Location of variable-size memory pool
11	LIGIL	LIDE	Location of variable size memory poor

ID list

INT nent Number of List Entries Maximum number of entries in list

Return Parameter

INT ct Count Number of used variable-size memory

pools

r Error Code Error code

Error Codes

None.

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_DBGSPT

Support of μ T-Kernel/DS

Description

Gets the list of the IDs of the currently used variable-size memory pools, and puts in list up to nent IDs. The number of the used variable-size memory pools is passed in the return code. If return code > nent, this means not all variable-size memory pool IDs could be retrieved.

6.1.9 td_lst_cyc - Reference Cyclic Handler ID List

C Language Interface

#include <tk/dbgspt.h>

INT ct = td_lst_cyc(ID list[], INT nent);

Parameter

ID	list[]	List	Location of cyclic handler ID list
INT	nent	Number of List Entries	Maximum number of entries in list

Return Parameter

INT ct Count Number of used cyclic handlers or Error Code Error code

Error Codes

None.

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK SUPPORT DBGSPT

Support of μ T-Kernel/DS

Description

Gets the list of the IDs of the currently used cyclic handlers, and puts in list up to nent IDs. The number of the used cyclic handlers is passed in the return code. If return code > nent, this means not all cyclic handler IDs could be retrieved.

6.1.10 td_lst_alm - Reference Alarm Handler ID List

C Language Interface

#include <tk/dbgspt.h>

INT ct = td_lst_alm(ID list[], INT nent);

Parameter

ID	list[]	List	Location of alarm handler ID list
INT	nent	Number of List Entries	Maximum number of entries in list

Return Parameter

INT ct Count Number of used alarm handlers or Error Code Error code

Error Codes

None.

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK SUPPORT DBGSPT

Support of μ T-Kernel/DS

Description

Gets the list of the IDs of the currently used alarm handlers, and puts in list up to nent IDs. The number of the used alarm handlers is passed in the return code. If return code > nent, this means not all alarm handler IDs could be retrieved.

6.1.11 td_lst_ssy - Reference Subsystem ID List

C Language Interface

#include <tk/dbgspt.h>

INT ct = td_lst_ssy(ID list[], INT nent);

Parameter

ID list[] List Location of subsystem ID list

INT nent Number of List Entries Maximum number of entries in list

Return Parameter

INT ct Count Number of used subsystems

Error Code Error code

Error Codes

None.

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK SUPPORT DBGSPT Support of μ T-Kernel/DS

TK_SUPPORT_SUBSYSTEM Support of subsystem management functions

Description

Gets the list of the IDs of the currently used subsystems, and puts in list up to nent IDs. The number of the used subsystems is passed in the return code. If return code > nent, this means not all subsystem IDs could be retrieved.

6.1.12 td_rdy_que - Reference Task Precedence

C Language Interface

#include <tk/dbgspt.h>

INT ct = td_rdy_que(PRI pri, ID list[], INT nent);

Parameter

PRI	pri	Task Priority	Task priority
1 1 1 1	Pii	Table Titority	rask priority

ID list[] Task ID List Location of task ID list

INT nent Number of List Entries Maximum number of entries in list

Return Parameter

INT ct Count Number of tasks with priority pri in a

run state

or Error Code Error code

Error Code

E_PAR Parameter error (pri is invalid or cannot be used)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_DBGSPT Support of μ T-Kernel/DS

Description

Gets a list of IDs of the tasks in a run state (READY state or RUNNING state) whose task priority is pri, arranged in the order from the highest to the lowest precedence.

This function stores in list up to nent task IDs, arranged in the order of precedence starting from the highest-precedence task ID at the head of the list.

The number of tasks in a run state with priority pri is passed in the return code. If return code > nent, this means not all task IDs could be retrieved.

6.1.13 td_sem_que - Reference Semaphore Queue

C Language Interface

#include <tk/dbgspt.h>

INT ct = td_sem_que(ID semid, ID list[], INT nent);

Parameter

ID	semid	Semaphore ID	Target semaphore ID
ID	list[]	Task ID List	Location of waiting task IDs
INT	nent	Number of List Entries	Maximum number of entries in list

Return Parameter

INT	ct		Count	Number of waiting tasks
		or	Error Code	Error code

Error Code

E_{ID}	Invalid ID number (semid is invalid or cannot be used)
E_NOEXS	Object does not exist (the semaphore specified in semid does not exist)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_DBGSPT Support of μ T-Kernel/DS

Description

Gets the list of the IDs of the queued tasks waiting for a semaphore specified in semid. This function stores in list up to nent task IDs, arranged in the order in which tasks are queued, starting from the first task in the semaphore queue. The number of the tasks in the semaphore queue is passed in the return code. If return code > nent, this means not all task IDs could be retrieved.

6.1.14 td_flg_que - Reference Event Flag Queue

C Language Interface

#include <tk/dbgspt.h>

INT ct = td_flg_que(ID flgid, ID list[], INT nent);

Parameter

ID	flgid	EventFlag ID	Target event flag ID
----	-------	--------------	----------------------

ID list[] Task ID List Location of waiting task IDs

INT nent Number of List Entries Maximum number of entries in list

Return Parameter

INT ct Count Number of waiting tasks

or Error Code Error code

Error Code

E_ID Invalid ID number (flgid is invalid or cannot be used)

E_NOEXS Object does not exist (the event flag specified in flgid does not exist)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_DBGSPT Support of μ T-Kernel/DS

Description

Gets the list of the IDs of the queued tasks waiting for an event flag specified in flgid. This function stores in list up to nent task IDs, arranged in the order in which tasks are queued, starting from the first task in the event flag queue. The number of the tasks in the event flag queue is passed in the return code. If return code > nent, this means not all task IDs could be retrieved.

6.1.15 td_mbx_que - Reference Mailbox Queue

C Language Interface

#include <tk/dbgspt.h>

INT ct = td_mbx_que(ID mbxid, ID list[], INT nent);

Parameter

ID	mbxid	Mailbox ID	Target mailbox ID
----	-------	------------	-------------------

ID list[] Task ID List Location of waiting task IDs

INT nent Number of List Entries Maximum number of entries in list

Return Parameter

INT ct Count Number of waiting tasks

or Error Code Error code

Error Code

E ID Invalid ID number (mbxid is invalid or cannot be used)

E_NOEXS Object does not exist (the mailbox specified in mbxid does not exist)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_DBGSPT Support of μ T-Kernel/DS

Description

Gets the list of the IDs of the queued tasks waiting for a mailbox specified in mbxid. This function stores in list up to nent task IDs, arranged in the order in which tasks are queued, starting from the first task in the mailbox queue. The number of the tasks in the mailbox queue is passed in the return code. If return code > nent, this means not all task IDs could be retrieved.

6.1.16 td_mtx_que - Reference Mutex Queue

C Language Interface

#include <tk/dbgspt.h>

INT ct = td_mtx_que(ID mtxid, ID list[], INT nent);

Parameter

ID	mtxid	Mutex ID	Target mutex ID
----	-------	----------	-----------------

ID list[] Task ID List Location of waiting task IDs

INT nent Number of List Entries Maximum number of entries in list

Return Parameter

INT ct Count Number of waiting tasks

Error Code Error code

Error Code

E ID Invalid ID number (mtxid is invalid or cannot be used)

E_NOEXS Object does not exist (the mutex specified in mtxid does not exist)

Valid Context

Task portion	Quasi-task portion	Task-independent portion	
YES	YES	YES	

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_DBGSPT Support of μ T-Kernel/DS

Description

Gets the list of the IDs of the queued tasks waiting for a mutex specified in mtxid. This function stores in list up to nent task IDs, arranged in the order in which tasks are queued, starting from the first task in the mutex queue. The number of the tasks in the mutex queue is passed in the return code. If return code > nent, this means not all task IDs could be retrieved.

6.1.17 td_smbf_que - Reference Message Buffer Send Queue

C Language Interface

#include <tk/dbgspt.h>

INT ct = td_smbf_que(ID mbfid, ID list[], INT nent);

Parameter

ID	mbfid	Message Buffer ID	Target message buffer ID
ID	list[]	Task ID List	Location of waiting task IDs
INT	nent	Number of List Entries	Maximum number of entries in list

Return Parameter

INT	ct		Count	Number of waiting tasks
		or	Error Code	Error code

Error Code

E_ID	Invalid ID number (mbfid is invalid or cannot be used)
E_NOEXS	Object does not exist (the message buffer specified in mbfid does not exist)

Valid Context

Task portion	Quasi-task portion	Task-independent portion	
YES	YES	YES	

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_DBGSPT Support of μ T-Kernel/DS

Description

Gets the list of the IDs of the queued tasks waiting for sending a message to a message buffer specified in mbfid. This function stores in list up to nent task IDs, arranged in the order in which tasks are queued, starting from the first task in the message buffer send queue. The number of the tasks in the message buffer send queue is passed in the return code. If return code > nent, this means not all task IDs could be retrieved.

6.1.18 td_rmbf_que - Reference Message Buffer Receive Queue

C Language Interface

#include <tk/dbgspt.h>

INT ct = td_rmbf_que(ID mbfid, ID list[], INT nent);

Parameter

ID	mbfid	Message Buffer ID	Target message buffer ID
ID	list[]	Task ID List	Location of waiting task IDs
INT	nent	Number of List Entries	Maximum number of entries in List

Return Parameter

INT	ct		Count	Number of waiting tasks
		or	Error Code	Error code

Error Code

E_{ID}	Invalid ID number (mbfid is invalid or cannot be used)
E_NOEXS	Object does not exist (the message buffer specified in mbfid does not exist)

Valid Context

Task portion	Quasi-task portion	Task-independent portion	
YES	YES	YES	

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_DBGSPT Support of μ T-Kernel/DS

Description

Gets the list of the IDs of the queued tasks waiting for receiving a message from a message buffer specified in mbfid. This function stores in list up to nent task IDs, arranged in the order in which tasks are queued, starting from the first task in the message buffer receive queue. The number of the tasks in the message buffer receive queue is passed in the return code. If return code > nent, this means not all task IDs could be retrieved.

6.1.19 td_mpf_que - Reference Fixed-size Memory Pool Queue

C Language Interface

#include <tk/dbgspt.h>

INT ct = td_mpf_que(ID mpfid, ID list[], INT nent);

Parameter

ID	mpfid	Memory Pool ID	Target fixed-size memory pool ID
ID	list[]	Task ID List	Location of waiting task IDs
INT	nent	Number of List Entries	Maximum number of entries in list

Return Parameter

INT	ct		Count	Number of waiting tasks
		or	Error Code	Error code

Error Code

E_ID	Invalid ID number (mpfid is invalid or cannot be used)
E NOEXS	Object does not exist (the fixed-size memory pool specified in mpfid does not exist)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_DBGSPT Support of μ T-Kernel/DS

Description

Gets the list of the IDs of the queued tasks waiting for allocation in a fixed-size memory pool specified in mpfid. This function stores in list up to nent task IDs, arranged in the order in which tasks are queued, starting from the first task in the fixed-size memory pool queue. The number of the tasks in the fixed-size memory pool queue is passed in the return code. If return code > nent, this means not all task IDs could be retrieved.

6.1.20 td_mpl_que - Reference Variable-size Memory Pool Queue

C Language Interface

#include <tk/dbgspt.h>

INT ct = td_mpl_que(ID mplid, ID list[], INT nent);

Parameter

ID	mplid	Memory Pool ID	Target variable-size memory pool ID
ID	list[]	Task ID List	Location of waiting task IDs
INT	nent	Number of List Entries	Maximum number of entries in list

Return Parameter

INT	ct	Count	Number of waiting tasks
		or Error Code	Error code

Error Code

E_ID	Invalid ID number (mplid is invalid or cannot be used)
E_NOEXS	Object does not exist (the variable-size memory pool specified in mplid does not
	exist)

Valid Context

	Task portion	Quasi-task portion	Task-independent portion
Ī	YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_DBGSPT Support of μ T-Kernel/DS

Description

Gets the list of the IDs of the queued tasks waiting for allocation in a variable-size memory pool specified in mplid. This function stores in list up to nent task IDs, arranged in the order in which tasks are queued, starting from the first task in the variable-size memory pool queue. The number of the tasks in the variable-size memory pool queue is passed in the return code. If return code > nent, this means not all task IDs could be retrieved.

6.1.21 td_ref_tsk - Reference Task Status

C Language Interface

#include <tk/dbgspt.h>

ER ercd = td_ref_tsk(ID tskid, TD_RTSK *rtsk);

ercd

Parameter

ID	tskid	Task ID	Target task ID (TSK_SELF can be
			specified)
TD_RTSK^*	rtsk	Packet to Return Task Status	Pointer to the area to return the task
			status

Error code

Error Code

Return Parameter

ER

rtsk Detail:			
void*	exinf	Extended Information	Extended information
PRI	tskpri	Task Priority	Current priority
PRI	tskbpri	Task Base Priority	Base priority
UINT	tskstat	Task State	Task States
UW	tskwait	Task Wait Factor	Wait factor
ID	wid	Waiting Object ID	Waiting object ID
INT	wupcnt	Wakeup Count	Wakeup request queuing count
INT	suscnt	Suspend Count	Suspend request nesting count
UW	waitmask	Wait Mask	Disabled wait factors
UINT	texmask	Task Exception Mask	Allowed task exceptions
UINT	tskevent	Task Event	Raised task event
FP	task	Task Start Address	Task start address
SZ	stksz	User Stack Size	User stack size (in bytes)
SZ	sstksz	System Stack Size	System stack size (in bytes)
void*	istack	Initial User Stack Pointer	User stack pointer initial value
void*	isstack	Initial System Stack Pointer	System stack pointer initial value

Error Code

E_OK	Normal completion
E_ID	Bad identifier
E_NOEXS	Object does not exist

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK SUPPORT DBGSPT

Support of μ T-Kernel/DS

Additionally, the following service profile items are related to this system call.

TK_SUPPORT_DISWAI
TK_SUPPORT_TASKEXCEPTION
TK_SUPPORT_TASKEVENT
TK_HAS_SYSSTACK

Information about disabled wait factors (waitmask) is obtainable Task exception information (texmask) can be acquired.

Generated task event(tskevent)can be acquired

Task can have a system stack independent of user-stack, and information can be acquired of the system stack as well as user

stack(sstksz and isstack)

Description

Gets the state of the task designated in tskid. This function is similar to tk_ref_tsk, with the task start address and stack information added to the state information obtained.

The stack area extends from the stack pointer initial value toward the low addresses for the number of bytes designated as the stack size.

- istack stksz ≤ user stack area < istack
- isstack sstksz \leq system stack area < isstack

Note that the stack pointer initial value (istack, isstack) is not the same as its current position. The stack area may be used even before a task is started. Calling td_get_reg gets the stack pointer current position.

6.1.22 td_ref_tex - Reference Task Exception Status

C Language Interface

#include <tk/dbgspt.h>

ER ercd = td_ref_tex(ID tskid, TD_RTEX *pk_rtex);

Parameter

ID tskid Task ID Target task ID (TSK_SELF can be

specified)

TD_RTEX* pk_rtex Packet to Return Task Pointer to the area to return the task

Exception Status exception status

Return Parameter

ER ercd Error Code Error code

pk_rtex Detail:

UINT pendtex Pending Task Exception Pending task exceptions
UINT texmask Task Exception Mask Allowed task exceptions

Error Code

E_OK Normal completion E_ID Bad identifier

E_NOEXS Object does not exist

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_DBGSPT Support of μ T-Kernel/DS

TK_SUPPORT_TASKEXCEPTION Support of task exception handling functions

Description

Gets the task exception status. This is similar to tk_ref_tex.

6.1.23 td_ref_sem - Reference Semaphore Status

C Language Interface

#include <tk/dbgspt.h>

ER ercd = td_ref_sem(ID semid, TD_RSEM *rsem);

Parameter

Semaphore ID Target semaphore	ID	semıd	Semaphore ID	Target semaphore ID
-------------------------------	----	-------	--------------	---------------------

TD_RSEM* rsem Packet to Return Semaphore Pointer to the area to return the

Status semaphore status

Return Parameter

ER ercd Error Code Error code

rsem Detail:

void* exinf Extended Information Extended information ID wtsk Waiting Task ID Waiting task ID

INT semcnt Semaphore Count Current semaphore resource count

Error Code

E_OK Normal completion E_ID Bad identifier

E_NOEXS Object does not exist

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_DBGSPT Support of μ T-Kernel/DS

Description

References the semaphore status. This is similar to tk_ref_sem.

6.1.24 td_ref_flg - Reference Event Flag Status

C Language Interface

#include <tk/dbgspt.h>

ER ercd = td_ref_flg(ID flgid, TD_RFLG *rflg);

Parameter

ID flgid EventFlag ID Targe	et event flag ID
-----------------------------	------------------

TD_RFLG* rflg Packet to Return EventFlag Pointer to the area to return the

Status event flag status

Return Parameter

ER ercd Error Code Error code

rflg Detail:

void* exinf Extended Information Extended information ID wtsk Waiting Task ID Waiting task ID

UINT flgptn EventFlag Bit Pattern The current event flag bit

pattern

Error Code

E_OK Normal completion E_ID Bad identifier

E_NOEXS Object does not exist

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_DBGSPT Support of μ T-Kernel/DS

Description

References the event flag status. This is similar to tk_ref_flg.

6.1.25 td_ref_mbx - Reference Mailbox Status

C Language Interface

#include <tk/dbgspt.h>

ER ercd = td_ref_mbx(ID mbxid, TD_RMBX *rmbx);

Parameter

ID	mbxid	Mailbox ID	Target mailbox ID
----	-------	------------	-------------------

 TD_RMBX^* rmbx Packet to Return Mailbox Status Pointer to the area to return the

mailbox status

Return Parameter

ER	ercd	Error Code	Error code
LIL	CICU	Error Code	Elloi code

rmbx Detail:

void*	exinf	Extended Information	Extended information
ID	wtsk	Waiting Task ID	Waiting task ID
T MSG*	pk msg	Packet of Message	Next message to be received

Error Code

E_OK	Normal completion
E_ID	Bad identifier
E NOEXS	Object does not exist

Object does not exist

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_DBGSPT Support of μ T-Kernel/DS

Description

References the mailbox status. This is similar to tk_ref_mbx.

6.1.26 td_ref_mtx - Refer Mutex Status

C Language Interface

#include <tk/dbgspt.h>

ER ercd = td_ref_mtx(ID mtxid, TD_RMTX *rmtx);

Parameter

ID	mtxid	Mutex ID	Target mutex ID
----	-------	----------	-----------------

TD_RMTX* rmtx Packet to Return Mutex Status Pointer to the area to return the

mutex status

Return Parameter

ER ercd Error Code Error code

rmtx Detail:

void*	exinf	Extended Information	Extended information
ID	htsk	Locking Task ID	ID of task locking the mutex
ID	wtsk	Lock Waiting Task ID	ID of tasks waiting to lock the
			martor

mutex

Error Code

E_OK Normal completion
E_ID Bad identifier

E_NOEXS Object does not exist

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_DBGSPT Support of μ T-Kernel/DS

Description

References the mutex status. This is similar to tk_ref_mtx.

6.1.27 td_ref_mbf - Reference Message Buffer Status

C Language Interface

#include <tk/dbgspt.h>

ER ercd = td_ref_mbf(ID mbfid, TD_RMBF *rmbf);

Parameter

ID	mbfid	Message Buffer ID	Target message buffer ID
TD_RMBF*	rmbf	Packet to Return Message	Pointer to the area to return the
		Buffer Status	message buffer status

Return Parameter

ER	ercd	Error Code	Error code
rmbf Detail:			
void*	exinf	Extended Information	Extended information
ID	wtsk	Waiting Task ID	Receive waiting task ID
ID	stsk	Send Waiting Task ID	Send waiting task ID
INT	msgsz	Message Size	Size of the next message to be received (in bytes)
SZ	frbufsz	Free Buffer Size	Free buffer size (in bytes)
INT	maxmsz	Maximum Message Size	Maximum message size (in bytes)

Error Code

E_OK	Normal completion	
E_ID	Bad identifier	
E NOEXS	Object does not exist	

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_DBGSPT

Support of μ T-Kernel/DS

Description

References the message buffer status. This is similar to tk_ref_mbf.

6.1.28 td_ref_mpf - Reference Fixed-size Memory Pool Status

C Language Interface

#include <tk/dbgspt.h>

ER ercd = td_ref_mpf(ID mpfid, TD_RMPF *rmpf);

Parameter

ID	mpfid	Memory Pool ID	Target fixed-size memory pool ID
TD_RMPF^*	rmpf	Packet to Return Memory	Pointer to the area to return the
		D 10	•

Pool Status memory pool status

Return Parameter

ER ercd Error Code Error code

rmpf Detail:

void*exinfExtended InformationExtended informationIDwtskWaiting Task IDWaiting task IDSZfrbcntFree Block CountFree block count

Error Code

E_OK Normal completion
E_ID Bad identifier

E_NOEXS Object does not exist

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_DBGSPT Support of μ T-Kernel/DS

Description

References the fixed-size memory pool status. This is similar to tk_ref_mpf.

6.1.29 td_ref_mpl - Reference Variable-size Memory Pool Status

C Language Interface

#include <tk/dbgspt.h>

ER ercd = td_ref_mpl(ID mplid, TD_RMPL *rmpl);

Parameter

ID	mplid	Memory Pool ID	Target variable-size memory pool ID
TD_RMPL^*	rmpl	Packet to Return Memory	Pointer to the area to return the
		Pool Status	memory pool status

Error code

Return Parameter

ER

rmpl Detail:			
void*	exinf	Extended Information	Extended information Waiting task ID Free memory size (in bytes) Maximum memory space size (in bytes)
ID	wtsk	Waiting Task ID	
SZ	frsz	Free Memory Size	
SZ	maxsz	Max Memory Size	

Error Code

Error Code

E_OK	Normal completion
E_ID	Bad identifier
E_NOEXS	Object does not exist

ercd

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_DBGSPT Support of μ T-Kernel/DS

Description

References the variable-size memory pool status. This is similar to tk_ref_mpl.

6.1.30 td_ref_cyc - Reference Cyclic Handler Status

C Language Interface

#include <tk/dbgspt.h>

ER ercd = td_ref_cyc(ID cycid, TD_RCYC *rcyc);

Parameter

TD_RCYC* rcyc Packet to Return Cyclic Pointer to the area to return the

Handler Status cyclic handler status

Return Parameter

ER	ercd	Error Code	Error code
111	CI CU	Error Code	Error code

rcyc Detail:

void*	exinf	Extended Information	Extended information
	L.C. a. S	I - G Time -	m:

RELTIM Ifttim Left Time Time remaining until the next

handler starts (ms)

UINT cycstat Cyclic Handler Status Cyclic handler activation state

Error Code

E_OK Normal completion
E_ID Bad identifier

E_NOEXS Object does not exist

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_DBGSPT Support of μ T-Kernel/DS

Description

References the cyclic handler status. This is similar to tk_ref_cyc .

The time remaining lfttim returned in the cyclic handler status information (TD_RCYC) obtained by td_ref_cyc is a value rounded to milliseconds. To know the value in microseconds, call $td_ref_cyc_u$.

6.1.31 td_ref_cyc_u - Reference Cyclic Handler Status (Microseconds)

C Language Interface

#include <tk/dbgspt.h>

ER ercd = td_ref_cyc_u(ID cycid, TD_RCYC_U *rcyc_u);

Parameter

ID **cyclic** Cyclic Handler ID Target cyclic handler ID

TD_RCYC_U* rcyc_u Packet to Return Cyclic Pointer to the area to return the

Handler Status cyclic handler status

Return Parameter

ER ercd Error Code Error code

rcyc_u Detail:

void* exinf Extended Information Extended information

RELTIM_U lfttim_u Left Time Time remaining until the next

handler starts (in microseconds)

UINT cycstat Cyclic Handler Status Cyclic handler activation state

Error Code

E_OK Normal completion

E_ID Bad identifier

E_NOEXS Object does not exist

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_DBGSPT Support of μ T-Kernel/DS TK_SUPPORT_USEC Support of microsecond

Description

This system call takes 64-bit lfttim_u in microseconds instead of the return parameter lfttim of td_ref_cyc.

The specification of this system call is same as that of td_ref_cyc , except that the return parameter is replaced with $lfttim_u$. For more details, see the description of td_ref_cyc .

6.1.32 td_ref_alm - Reference Alarm Handler Status

C Language Interface

#include <tk/dbgspt.h>

ER ercd = td_ref_alm(ID almid, TD_RALM *ralm);

Parameter

ID	almid	Alarm Handler ID	Target alarm handler ID
----	-------	------------------	-------------------------

TD_RALM* ralm Packet to Return Alarm Pointer to the area to return the

Handler Status alarm handler status

Return Parameter

ER ercd Error Code Error code

ralm Detail:

void* exinf Extended Information Extended information

RELTIM lfttim Left Time Time remaining until the handler

starts (ms)

UINT almstat Alarm Handler Status Alarm handler activation state

Error Code

E_OK Normal completion

E_ID Bad identifier

E_NOEXS Object does not exist

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_DBGSPT Support of μ T-Kernel/DS

Description

References the alarm handler status. This is similar to tk_ref_alm.

The time remaining lfttim returned in the alarm handler status information (TD_RALM) obtained by td_ref_alm is a value rounded to milliseconds. To know the value in microseconds, call td_ref_alm_u.

6.1.33 td ref alm u - Reference Alarm Handler Status (Microseconds)

C Language Interface

#include <tk/dbgspt.h>

ER ercd = td_ref_alm_u(ID almid, TD_RALM_U *ralm_u);

Parameter

ID almid Alarm Handler ID Target alarm handler ID

TD_RALM_U* ralm_u Packet to Return Alarm Pointer to the area to return the

Handler Status alarm handler status

Return Parameter

ER ercd Error Code Error code

ralm_u Detail:

void* exinf Extended Information Extended information

RELTIM_U lfttim_u Left Time Time remaining until the handler

starts (in microseconds)

UINT almstat Alarm Handler Status Alarm handler activation state

Error Code

E_OK Normal completion

E_ID Bad identifier

E_NOEXS Object does not exist

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_DBGSPT Support of μ T-Kernel/DS TK_SUPPORT_USEC Support of microsecond

Description

This system call takes 64-bit lfttim_u in microseconds instead of the return parameter lfttim of td_ref_alm.

The specification of this system call is same as that of td_ref_alm , except that the return parameter is replaced with $lfttim_u$. For more details, see the description of td_ref_alm .

6.1.34 td_ref_sys - Reference System Status

C Language Interface

#include <tk/dbgspt.h>

ER ercd = td_ref_sys(TD_RSYS *pk_rsys);

Parameter

TD_RSYS* pk_rsys Packet to Return System Pointer to the area to return the

Status system status

Return Parameter

ER ercd Error Code Error code

pk_rsys Detail:

UINT sysstat System State System State

ID runtskid Running Task ID ID of the task currently in

RUNNING state

ID schedtskid Scheduled Task ID ID of the task scheduled to run next

Error Code

E_OK Normal completion

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_DBGSPT Support of μ T-Kernel/DS

Description

Gets the system status. This is similar to tk_ref_sys.

6.1.35 td_ref_ssy - Reference Subsystem Status

C Language Interface

#include <tk/dbgspt.h>

ER ercd = td_ref_ssy(ID ssid, TD_RSSY *rssy);

Parameter

ID ssid Subsystem ID Target subsystem ID

TD_RSSY* rssy Packet to Return Subsystem Pointer to the area to return the

Status subsystem definition information

Return Parameter

ER ercd Error Code Error code

rssy Detail:

PRI ssypri Subsystem Priority Subsystem priority

Error Code

E_OK Normal completion E_ID Bad identifier

E_NOEXS Object does not exist

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_DBGSPT Support of μ T-Kernel/DS

TK_SUPPORT_SUBSYSTEM Support of subsystem management functions

Description

References the subsystem status. This is similar to tk_ref_ssy.

6.1.36 td_get_reg - Get Task Register

C Language Interface

#include <tk/dbgspt.h>

ER ercd = td_get_reg(ID tskid, T_REGS *pk_regs, T_EIT *pk_eit, T_CREGS *pk_cregs);

Parameter

ID	tskid	Task ID	Target task ID (TSK_SELF cannot be specified)
T_REGS*	pk_regs	Packet of Registers	Pointer to the area to return the general register values
T_EIT*	pk_eit	Packet of EIT Registers	Pointer to the area to return the values of registers saved when an
T_CREGS*	pk_cregs	Packet of Control Registers	exception occurs Pointer to the area to return the control register values

Return Parameter

ER	ercd	Error Code	Error code

The contents of T_REGS, T_EIT, and T_CREGS are defined for each CPU and implementation.

Error Code

E_OK	Normal completion
E_ID	Invalid ID number (tskid is invalid or cannot be used)
E_NOEXS	Object does not exist (the task specified in tskid does not exist)
E_OBJ	Invalid object state (issued for a RUNNING state task)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_DBGSPT	Support of μ T-Kernel/DS
TK_SUPPORT_REGOPS	Support for task-register manipulation functions

Description

Gets the register values of the task designated in tskid. This is similar to tk_get_reg.

Registers cannot be referenced for the task currently in RUNNING state. Except when a task-independent portion is executing, the current RUNNING state task is the invoking task.

If NULL is set in pk_regs, pk_eit, or pk_cregs, the corresponding registers are not referenced.

The contents of T_REGS, T_EIT, and T_CREGS are implementation-dependent.

6.1.37 td_set_reg - Set Task Registers

C Language Interface

#include <tk/dbgspt.h>

ER ercd = td_set_reg(ID tskid, CONST T_REGS *pk_regs, CONST T_EIT *pk_eit, CONST T_CREGS *pk_cregs);

Parameter

ID	tskid	Task ID	Target task ID (TSK_SELF cannot
			be specified)
CONST T_REGS*	pk_regs	Packet of Registers	General registers
CONST T_EIT*	pk_eit	Packet of EIT Registers	Registers saved when EIT occurs
CONST T_CREGS*	pk_cregs	Packet of Control Registers	Control registers

The contents of T_REGS, T_EIT, and T_CREGS are defined for each CPU and implementation.

Return Parameter

ER ercd	Error Code	Error code
---------	------------	------------

Error Code

E_OK	Normal completion
E_ID	Invalid ID number (tskid is invalid or cannot be used)
E_NOEXS	Object does not exist (the task specified in tskid does not exist)
E_OBJ	Invalid object state (issued for a RUNNING state task)

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_DBGSPT	Support of μ T-Kernel/DS
TK_SUPPORT_REGOPS	Support for task-register manipulation functions

Description

Sets registers of the task designated in tskid. This is similar to tk_set_reg.

Registers cannot be set for the task currently in RUNNING state. Except when a task-independent portion is executing, the current RUNNING state task is the invoking task.

If NULL is set in pk_regs, pk_eit, or pk_cregs, the corresponding registers are not set.

The contents of T_REGS, T_EIT, and T_CREGS are implementation-dependent.

6.1.38 td_get_utc - Get System Time

C Language Interface

#include <tk/dbgspt.h>

ER ercd = td_get_utc(SYSTIM *tim, UW *ofs);

Parameter

SYSTIM*	tim	Time	Pointer to the area to return the current
			time (ms)
UW*	ofs	Offset	Pointer to the area to return the return
			parameter ofs

Error code

Return Parameter

ercd

ER

SYSTIM UW	tim ofs	Time Offset	Current time (in milliseconds) Elapsed time from tim (in nanoseconds)
tim Detail:			
W	hi	High 32 bits	Higher 32 bits of current time of the system time
UW	lo	Low 32 bits	Lower 32 bits of current time of the system time

Error Code

E_OK Normal completion

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_DBGSPT	Support of μ T-Kernel/DS
TK_SUPPORT_UTC	Support of UNIX time

Error Code

Description

Gets the current time as total elapsed milliseconds since 0:00:00, January 1, 1970 (UTC). The value returned in tim is the same as that obtained by tk_get_utc . tim is the resolution of timer interrupt intervals (cycles),

but even more precise time information is obtained in ofs as the elapsed time from tim in nanoseconds. The resolution of ofs is implementation-dependent, but generally is the resolution of hardware timer.

Since tim is a cumulative time counted based on timer interrupts, in some cases time is not refreshed, when a timer interrupt cycle arrives while interrupts are disabled and the timer interrupt handler is not started (is delayed). In such cases, the time as updated by the previous timer interrupt is returned in tim, and the elapsed time from the previous timer interrupt is returned in ofs. Accordingly, in some cases ofs will be longer than the timer interrupt cycle. The length of elapsed time that can be measured by ofs depends on the hardware, but preferably it should be possible to measure at least up to twice the timer interrupt cycle ($0 \le ofs < twice$ the timer interrupt cycle).

Note that the time returned in tim and ofs is the time at some point between the calling of and return from td_get_utc. It is neither the time at which td_get_utc was called nor the time of return from td_get_utc. In order to obtain more accurate information, this function should be called in interrupts disabled state.

6.1.39 td_get_utc_u - Get System Time (Microseconds)

C Language Interface

#include <tk/dbgspt.h>

ER ercd = td_get_utc_u(SYSTIM_U *tim_u, UW *ofs);

Parameter

SYSTIM_U*	tim_u	Time	Pointer to the area to return the
			current time (in microseconds)
UW*	ofs	Offset	Pointer to the area to return the
			return parameter ofs

Return Parameter

ER	ercd	Error Code	Error code
SYSTIM_U	tim_u	Time	Current time (in microseconds)
UW	ofs	Offset	Elapsed time from tim_u (in
			nanoseconds)

Error Code

E_OK	Normal	completion
------	--------	------------

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_DBGSPT	Support of μ T-Kernel/DS
TK_SUPPORT_UTC	Support of UNIX time
TK SUPPORT USEC	Support of microsecond

Description

This system call takes 64-bit tim_u in microseconds instead of the return parameter tim of td_get_utc .

The specification of this system call is same as that of td_get_utc , except that the return parameter is replaced with tim_u . For more details, see the description of td_get_utc .

6.1.40 td_get_tim - Get System Time (TRON)

C Language Interface

#include <tk/dbgspt.h>

ER ercd = td_get_tim(SYSTIM *tim, UW *ofs);

Parameter

SYSTIM	* tim	Time	Pointer to the area to return the current
			time (ms)
UW^*	ofs	Offset	Pointer to the area to return the return
			parameter ofs

Error code

Return Parameter

ercd

ER

SYSTIM UW	tim ofs	Time Offset	Current time (in milliseconds) Elapsed time from tim (in nanoseconds)
0 11			Empsed time from the (m manoscoomas)
tim Detail:			
W	hi	High 32 bits	Higher 32 bits of current time of the system time
UW	lo	Low 32 bits	Lower 32 bits of current time of the system time

Error Code

E_OK Normal completion

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_DBGSPT	Support of μ T-Kernel/DS
TK_SUPPORT_TRONTIME	Support of TRON time

Error Code

Description

Gets the current time as total elapsed milliseconds since 0:00:00 (GMT), January 1, 1985. The value returned in tim is the same as that obtained by tk_get_tim. tim is the resolution of timer interrupt intervals (cycles),

but even more precise time information is obtained in ofs as the elapsed time from tim in nanoseconds. The resolution of ofs is implementation-dependent, but generally is the resolution of hardware timer.

Since tim is a cumulative time counted based on timer interrupts, in some cases time is not refreshed, when a timer interrupt cycle arrives while interrupts are disabled and the timer interrupt handler is not started (is delayed). In such cases, the time as updated by the previous timer interrupt is returned in tim, and the elapsed time from the previous timer interrupt is returned in ofs. Accordingly, in some cases ofs will be longer than the timer interrupt cycle. The length of elapsed time that can be measured by ofs depends on the hardware, but preferably it should be possible to measure at least up to twice the timer interrupt cycle ($0 \le ofs < twice$ the timer interrupt cycle).

Note that the time returned in tim and ofs is the time at some point between the calling of and return from td_get_tim. It is neither the time at which td_get_tim was called nor the time of return from td_get_tim. In order to obtain more accurate information, this function should be called in interrupts disabled state.

Additional Notes

td_get_tim is very similar to td_get_utc. However, it uses the time system with a different epoch. td_get_tim is an API to keep compatibility with legacy μ T-Kernel or T-Kernel specifications.

6.1.41 td_get_tim_u - Get System Time (TRON, Microseconds)

C Language Interface

#include <tk/dbgspt.h>

ER ercd = td_get_tim_u(SYSTIM_U *tim_u, UW *ofs);

Parameter

SYSTIM_U*	tim_u	Time	Pointer to the area to return the
			current time (in microseconds)
UW*	ofs	Offset	Pointer to the area to return the
			return parameter ofs

Return Parameter

ER	ercd	Error Code	Error code
SYSTIM_U	tim_u	Time	Current time (in microseconds)
UW	ofs	Offset	Elapsed time from tim_u (in
			nanoseconds)

Error Code

E_OK	Normal	completion
------	--------	------------

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_DBGSPT	Support of μ T-Kernel/DS
TK_SUPPORT_TRONTIME	Support of TRON time
TK SUPPORT USEC	Support of microsecond

Description

This system call takes 64-bit tim_u in microseconds instead of the return parameter tim of td_get_tim.

The specification of this system call is same as that of td_get_tim , except that the return parameter is replaced with tim_u . For more details, see the description of td_get_tim .

Additional Notes

 $td_get_tim_u$ is very similar to $td_get_utc_u$. However, it uses the time system with a different epoch. $td_get_tim_u$ is an API to keep compatibility with legacy μ T-Kernel or T-Kernel specifications.

6.1.42 td_get_otm - Get Operating Time

C Language Interface

#include <tk/dbgspt.h>

ER ercd = td_get_otm(SYSTIM *tim, UW *ofs);

Parameter

SYSTIM [*]	* tim	Time	Pointer to the area to return the
			operating time (ms)
UW*	ofs	Offset	Pointer to the area to return the return
			parameter ofs

Return Parameter

ER SYSTIM UW	ercd tim ofs	Error Code Time Offset	Error code Operating time (in milliseconds) Elapsed time from tim (in nanoseconds)
tim Detail:			
W	hi	High 32 bits	Higher 32 bits of the system operating time
UW	lo	Low 32 bits	Lower 32 bits of the system operating time

Error Code

E_OK Normal completion

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_DBGSPT

Support of μ T-Kernel/DS

Description

Gets the system operating time (uptime, as elapsed milliseconds since the system was booted). The value returned in tim is the same as that obtained by tk_get_otm. tim is the resolution of timer interrupt intervals (cycles), but even more precise time information is obtained in ofs as the elapsed time from tim in nanoseconds. The resolution of ofs is implementation-dependent, but generally is the resolution of hardware timer.

Since tim is a cumulative time counted based on timer interrupts, in some cases time is not refreshed, when a timer interrupt cycle arrives while interrupts are disabled and the timer interrupt handler is not started (is delayed). In such cases, the time as updated by the previous timer interrupt is returned in tim, and the elapsed time from the previous timer interrupt is returned in ofs. Accordingly, in some cases ofs will be longer than the timer interrupt cycle. The length of elapsed time that can be measured by ofs depends on the hardware, but preferably it should be possible to measure at least up to twice the timer interrupt cycle ($0 \le ofs < twice$ the timer interrupt cycle).

Note that the time returned in tim and ofs is the time at some point between the calling of and return from td_get_otm. It is neither the time at which td_get_otm was called nor the time of return from td_get_otm. In order to obtain more accurate information, this function should be called in interrupts disabled state.

6.1.43 td_get_otm_u - Get Operating Time (Microseconds)

C Language Interface

#include <tk/dbgspt.h>

ER ercd = td_get_otm_u(SYSTIM_U *tim_u, UW *ofs);

Parameter

SYSTIM_U*	tim_u	Time	Pointer to the area to return the
UW*	ofs	Offset	operating time (in microseconds) Pointer to the area to return the return parameter ofs

Return Parameter

ER	ercd	Error Code	Error code
SYSTIM_U	tim_u	Time	Operating time (in microseconds)
UW	ofs	Offset	Elapsed time from tim_u (in
			nanoseconds)

Error Code

E_OK	Normal	completion	n
------	--------	------------	---

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_DBGSPT	Support of μ T-Kernel/DS
TK_SUPPORT_USEC	Support of microsecond

Description

This system call takes 64-bit tim_u in microseconds instead of the return parameter tim of td_get_otm.

The specification of this system call is same as that of td_get_otm , except that the return parameter is replaced with tim_u . For more details, see the description of td_get_otm .

6.1.44 td_ref_dsname - Refer to DS Object Name

C Language Interface

#include <tk/dbgspt.h>

ER ercd = td_ref_dsname(UINT type, ID id, UB *dsname);

Parameter

UINT Object Type Target object type type

Object ID Object ID IDid UB*

dsname DS Object Name Pointer to the area to return the DS

object name

Return Parameter

Error Code ER ercd Error code

dsname Detail:

DS object name, set at object creation or by td_set_dsname

Error Code

ЕОК Normal completion E_PAR Invalid object type Object does not exist E_NOEXS E_OBJ DS object name is not used

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_DSNAME Support for DS object name

Description

References the DS object name (dsname), which is set at object creation. The object is specified by object type (type) and object ID (id).

Object types (type) are as follows:

TN_TSK 0x01Task TN_SEM 0x02Semaphore

TN_FLG	0x03	Event Flag
TN_MBX	0x04	Mailbox
TN_MBF	0x05	Message Buffer
TN_POR	0x06	(reserved)
TN_MTX	0x07	Mutex
TN_MPL	0x08	Variable-size Memory Pool
TN_MPF	0x09	Fixed-size Memory Pool
TN_CYC	0x0a	Cyclic Handler
TN_ALM	0x0b	Alarm Handler

DS object name is valid if TA_DSNAME is set as object attribute. If DS object name is changed by td_set_dsname, then td_ref_dsname references the new name.

DS object name needs to satisfy the following conditions. However, character code range is not checked by μ T-Kernel.

```
Available characters (UB)
a to z, A to Z, 0 to 9, _
Name length
Up to 8 bytes (not including '\( \frac{1}{2}\) 0')
```

Additional Notes

The DS object name that is read is terminated with a '¥0' character. Hence, dsname must have a area of 9 or more bytes.

6.1.45 td_set_dsname - Set DS Object Name

C Language Interface

#include <tk/dbgspt.h>

ER ercd = td_set_dsname(UINT type, ID id, CONST UB *dsname);

Parameter

UINT	type	Object Type	Target object type
TT		01.1	01.

ID id Object ID Object ID

CONST UB* dsname DS Object Name DS object name to be set

Return Parameter

ER	ercd	Error Code	Error code
	UIUU	Lifoi Couc	Liidi coac

Error Code

E_OK	Normal completion
E_PAR	Invalid object type
E_NOEXS	Object does not exist
E OBJ	DS object name is not used

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_DSNAME

Support for DS object name

Description

Re-sets DS object name (dsname), which is set at object creation. The object is specified by object type (type) and object ID (id).

Object types (type) are as same as that of td_ref_dsname.

DS object name needs to satisfy the following conditions. However, character code range is not checked by μ T-Kernel.

Available characters (UB)

a to z, A to Z, 0 to 9, _

Name length

Up to 8 bytes (not including '\(\frac{1}{2}\) ()

DS object name is valid if TA_DSNAME is set as object attribute. attribute is not specified.	td_set_dsname returns E_OBJ error if TA_DSNAME

6.2 Trace Functions

Trace functions are functions for enabling a debugger to trace program execution. Execution trace is performed by setting hook routines.

- Return from a hook routine must be made after states have returned to where they were when the hook routine was called. Restoring of registers, however, can be done in accordance with the C language function saving rules.
- In a hook routine, limitations on states must not be loosened to make them less restrictive than when the routine was called. For example, if the hook routine was called during interrupts disabled state, interrupts must not be enabled.
- · A hook routine was called at protection level 0.
- A hook routine inherits the stack at the time of the hook. Using too much stack may therefore cause a stack overflow. The extent to which the stack can be used is not definite, since it differs with the situation at the time of the hook. Switching to a separate stack in the hook routine is a safer option.

6.2.1 td hok svc - Define System Call/Extended SVC Hook Routine

C Language Interface

#include <tk/dbgspt.h>

ER ercd = td_hok_svc(CONST TD_HSVC *hsvc);

Parameter

CONST TD_HSVC*	hsvc	SVC Hook Routine	Hook routine definition
			information

hsvc Detail:

FP enter Hook Routine before Hook routine before calling

Calling

FP leave Hook Routine after Calling Hook routine after calling

Return Parameter

ER ercd Error Code Error code

Error Codes

None.

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK SUPPORT DBGSPT

Support of μ T-Kernel/DS

Description

Sets hook routines before and after the issuing of a system call or extended SVC. Setting NULL in hsvc cancels a hook routine.

The target of trace functions are the system calls of μ T-Kernel/OS (tk $_\sim$) and extended SVCs. Note, however, generally speaking tk $_{\rm ret_int}$ is not the target of trace function. This is implementation-dependent.

System calls of μ T-Kernel/DS (td \sim) are not the target of trace functions.

A hook routine runs as a quasi-task portion of the task that called a system call or extended SVC for which a hook routine is set. Therefore, for example, the invoking task in a hook routine is the same as the task that invoked the system call or extended SVC.

Since task dispatching and interrupts can occur inside system call processing, enter() and leave() are not necessarily called in succession as a pair in every case. If a system call is one that does not return, leave() will not be called.

void *enter(FN fncd, TD_CALINF *calinf, ...);

FN fncd Function Codes< 0 System call \geq 0 Extended SVC TD CALINF* calinf Caller information

. Parameters (variable number)

Return Any value passed to leave()

```
typedef struct td_calinf {
	Information to determine the caller for the system call or extended SVC;
	it is preferable to include the information for the stack back-trace.
	The contents are implementation-dependent,
	but generally consist of register values such as stack pointer and program counter.
} TD_CALINF;
```

enter is called right before a system call or extended SVC.

The value passed in the return code is passed transparently to the corresponding leave(). This makes it possible to pair enter() and leave() calls or to pass any other information.

```
exinf = enter(fncd, &calinf, ...)
ret = system call or extended SVC execution
leave(fncd , ret, exinf)
```

· For system call

The parameters are the same as the system call parameters.

```
tk_wai_sem(ID semid, INT cnt, TMO tmout)
enter(TFN_WAI_SEM, &calinf, semid, cnt, tmout)
```

· For extended SVC

The parameters are as in the packet passed to the extended SVC handler.

fncd is likewise the same as that passed to the extended SVC handler.

enter (FN fncd, TD_CALINF *calinf, void *pk_para);
void leave(FN fncd, INT ret, void *exinf);

FN fncd Function Codes
INT ret Return code of the system call or extended SVC

void* exinf Any value returned by enter()

enter is called right after returning from a system call or extended SVC.

When a hook routine is set after a system call or extended SVC is called (while the system call or extended SVC is executing), in some cases <code>leave()</code> only may be called without calling <code>enter()</code>. In such a case <code>NULL</code> is passed in <code>exinf</code>.

If, on the other hand, a hook routine is canceled after a system call or extended SVC is called, there may be cases when enter() is called but not leave().

6.2.2 td_hok_dsp - Define Task Dispatch Hook Routine

C Language Interface

#include <tk/dbgspt.h>

ER ercd = td_hok_dsp(CONST TD_HDSP *hdsp);

Parameter

CONST TD_HDSP*	hdsp	Dispatcher Hook Routine	Hook routine definition information
hdsp Detail:			
FP	exec	Hook Routine when Execution Starts	Hook routine when execution starts
FP	stop	Hook Routine when Execution Stops	Hook routine when execution stops

Return Parameter

ER	ercd	Error Code	Error code
Lill	CICU	Elloi Code	Lifui Code

Error Codes

None.

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_DBGSPT

Support of μ T-Kernel/DS

Description

Sets hook routines in the task dispatcher. Setting NULL in hdsp cancels a hook routine.

A hook routine is called while dispatching is disabled. A hook routine shall not invoke system calls of μ T-Kernel/OS (tk \sim) and extended SVCs. A hook routine can invoke system calls of μ T-Kernel/DS (td \sim). void exec(ID tskid);

ID tskid

Task ID of the started or resumed task

exec() is called when the designated task starts execution or resumes. At the time exec() is called, the task designated in tskid is already in RUNNING state. However, execution of the tskid task program code occurs after the return from exec().

void stop(ID tskid, UINT tskstat);

ID	tskid	Task ID of the executed or stopped task
UINT	tskstat	State of the task designated in tskid

stop() is called when the designated task executes or stops. tskstat indicates the task state after stopping, as one of the following states:

TTS_RDY	READY state
TTS_WAI	WAITING state
TTS_SUS	SUSPENDED state
TTS_WAS	WAITING-SUSPENDED state
TTS_DMT	DORMANT state
0	NON-EXISTENT state

At the time stop() is called, the task designated in tskid has already entered the state indicated in tskstat.

6.2.3 td_hok_int - Define Interrupt Handler Hook Routine

C Language Interface

#include <tk/dbgspt.h>

ER ercd = td_hok_int(CONST TD_HINT *hint);

Parameter

CONST TD_HINT*	hint	Interrupt Handler Hook	Hook routine definition
		Routine	information

hint Detail:

FP	enter	Hook Routine before Calling Handler	Hook routine before calling handler
FP	leave	Hook Routine after Calling Handler	Hook routine after calling handler

Return Parameter

ER	ercd	Error Code	Error code
	0100	Liioi Coac	Liidi Codc

Error Codes

None.

Valid Context

Task portion	Quasi-task portion	Task-independent portion
YES	YES	YES

Related Service Profile Items

Only when all the service profile items below are set to be effective, this system call can be used.

TK_SUPPORT_DBGSPT

Support of μ T-Kernel/DS

Description

Sets hook routines before and after an interrupt handler is called. Hook routine setting cannot be done individually for different exception or interrupt factors. One pair of hook routines is set in common for all exception and interrupt factors.

Setting hint to NULL cancels the hook routines.

The hook routines are called as task-independent portion (part of the interrupt handler). Accordingly, the hook routines can call only those system calls that can be invoked from a task-independent portion.

Note that hook routines can be set only for interrupt handlers defined by tk_def_int with the TA_HLNG attribute. A TA_ASM attribute interrupt handler cannot be hooked by a hook routine. Hooking of a TA_ASM attribute interrupt handler is possible only by directly manipulating the exception/interrupt vector table. The actual methods are implementation-dependent.

```
void *enter(UINT intno);
void *leave(UINT intno);

UINT intno Interrupt number
```

Parameters passed to enter() and leave() are the same as those of exception handler and interrupt handler. Depending on the implementation, other information about the interrupt may be passed in addition to intno.

A hook routine is called as follows from a high-level language support routine.

```
enter(intno);
inthdr(intno); /* Interrupt or exception handler */
leave(intno);
```

enter() is called in interrupts disabled state, and interrupts must not be enabled. Since leave() assumes the status on return from inthdr(), the interrupts disabled or enabled status is indeterminate.

enter() can obtain the same amount of information which the function inthdr() can obtain. If the function
inthdr() cannot obtain a piece of information, that information cannot be acquired by enter(). either. The
specification guarantees that enter() and inthdr() can access information by means of intno, but whether
other information can be acquired is implementation dependent. Note that during the execution of the function leave(), the states such as interrupt mask status may have changed, it may be impossible to obtain the
same amount of information obtained by enter() or inthdr().

Chapter 7

Appendix

7.1 System Configuration

It is permitted to change μ T-Kernel or remove unnecessary functions from it when an implementation of μ T-Kernel is embedded into a real-world product, etc. The reference implementation of μ T-Kernel 3.0 contains features to change and set the parameters such as the number of resources and limit values of certain parameters. Changing and setting system parameters is called system configuration.

This section lists the system configuration items that are provided by the μ T-Kernel 3.0 reference implementation.

Name	Explanations
CFN_MAX_PRI	Maximum task priority (it is reflected in service
	profile item, TK_MAX_TSKPRI)
CFN_SYSTEMAREA_TOP	Lowest address of a region dynamically managed
	by the memory management function of
OFN OVOTENADEA FND	μ T-Kernel
CFN_SYSTEMAREA_END	Highest address of a region dynamically managed
	by the memory management function of
CEN TIMED DEDIOD	μ T-Kernel
CFN_TIMER_PERIOD CFN MAX TSKID	Timer interrupt interval (in milliseconds) Maximum number of tasks
CFN_MAX_SEMID	Maximum number of tasks Maximum number of semaphores
CFN MAX FLGID	Maximum number of semaphores Maximum number of event flags
CFN MAX MBXID	Maximum number of event hags Maximum number of mailboxes
CFN MAX MTXID	Maximum number of mutexes
CFN MAX MBFID	Maximum number of messages buffers.
CFN_MAX_MPFID	Maximum number of fixed-size memory pools
CFN_MAX_MPLID	Maximum number of variable-size memory pools
CFN_MAX_CYCID	Maximum number of cyclic handlers
CFN_MAX_ALMID	Maximum number of alarm handlers
CFN_MAX_SSYID	Maximum number of subsystems
CFN_MAX_SSYPRI	Maximum number of subsystem priorities
CFN_MAX_REGDEV	Maximum number of registered devices
CFN_MAX_OPNDEV	Maximum number of open devices
CFN_MAX_REQDEV	Maximum number of pending device requests

Additional Notes

System configuration is not within the scope of μ T-Kernel 3.0. But if similar function is to be provided, it is desirable to use naming conventions that are compatible with these item names.

7.2 Keywords

- 1. Keywords related to the name of the OS
 - μ T-Kernel
 - · TRON
 - · IEEE 2050-2018
- 2. Keywords related to the application of the OS
 - embedded
 - · real time
 - · IoT edgenode
 - · small scale
 - · 16-bit CPU
 - · single chip microcomputer
 - single chip MicroController Unit (MCU)
 - · power saving
- 3. Keywords related to the fundamental concepts used in the OS
 - real-time operating system (RTOS)
 - · Application Programming Interface (API)
 - · system call
 - · kernel
 - · task
 - dispatching (task dispatching)
 - · scheduling (task scheduling)
 - · priority-based
 - · task portion
 - · non-task portion
 - · taskindependent portion
 - · quasi-task portion
 - · service profile
- 4. Keywords related to the individual functions of OS
 - · semaphore
 - $\boldsymbol{\cdot}$ event flag
 - · mailbox
 - · message buffer
 - mutex
 - $\cdot \ \text{memory pool} \\$
 - · interrupt handler
 - · cyclic handler
 - · alarm handler
 - · device management
 - · power management
 - · physical timer
 - · fast lock
 - · fast multi-lock

Chapter 8

Reference

8.1 List of C Language Interface

8.1.1 μ T-Kernel/OS

```
8.1.1.1 Task Management Functions
• ID tskid = tk_cre_tsk ( CONST T_CTSK *pk_ctsk );
• ER ercd = tk_del_tsk ( ID tskid );
• ER ercd = tk_sta_tsk ( ID tskid, INT stacd );
void tk_ext_tsk (void);
void tk_exd_tsk (void);
• ER ercd = tk_ter_tsk ( ID tskid );
• ER ercd = tk_chg_pri ( ID tskid, PRI tskpri );

    ER ercd = tk_get_reg ( ID tskid, T_REGS *pk_regs, T_EIT *pk_eit, T_CREGS *pk_cregs );

• ER ercd = tk_set_reg (ID tskid, CONST T_REGS *pk_regs, CONST T_EIT *pk_eit, CONST T_CREGS *pk_cregs
 );
• ER ercd = tk_get_cpr ( ID tskid, INT copno, T_COPREGS *pk_copregs );
• ER ercd = tk_set_cpr ( ID tskid, INT copno, CONST T_COPREGS *pk_copregs );
• ER ercd = tk_ref_tsk ( ID tskid, T_RTSK *pk_rtsk );
8.1.1.2 Task Synchronization Functions
• ER ercd = tk_slp_tsk (TMO tmout);
• ER ercd = tk\_slp\_tsk\_u ( TMO_U tmout\_u );

    ER ercd = tk_wup_tsk ( ID tskid );

    INT wupcnt = tk_can_wup (ID tskid);

• ER ercd = tk rel wai (ID tskid);
• ER ercd = tk_sus_tsk (ID tskid);
• ER ercd = tk_rsm_tsk (ID tskid);
• ER ercd = tk_frsm_tsk ( ID tskid );
ER ercd = tk_dly_tsk ( RELTIM dlytim );
• ER ercd = tk_dly_tsk_u ( RELTIM_U dlytim_u );
• ER ercd = tk_sig_tev (ID tskid, INT tskevt);
• INT tevptn = tk wai tev (INT waiptn, TMO tmout);
INT tevptn = tk_wai_tev_u (INT waiptn, TMO_U tmout_u);

    INT tskwait = tk_dis_wai ( ID tskid, UW waitmask );

• ER ercd = tk_ena_wai ( ID tskid );
```

8.1.1.3 Task Exception Handling Functions

• ER ercd = tk_ref_mbx (ID mbxid, T_RMBX *pk_rmbx);

```
• ER ercd = tk_def_tex (ID tskid, CONST T_DTEX *pk_dtex);
• ER ercd = tk_ena_tex (ID tskid, UINT texptn);
• ER ercd = tk dis tex (ID tskid, UINT texptn);
• ER ercd = tk_ras_tex (ID tskid, INT texcd);

    INT texcd = tk_end_tex ( BOOL enatex );

• ER ercd = tk_ref_tex ( ID tskid, T_RTEX *pk_rtex );
8.1.1.4 Synchronization and Communication Functions
• ID semid = tk_cre_sem ( CONST T_CSEM *pk_csem );
• ER ercd = tk del sem (ID semid);
• ER ercd = tk_sig_sem (ID semid, INT cnt);
• ER ercd = tk_wai_sem (ID semid, INT cnt, TMO tmout);
• ER ercd = tk_wai_sem_u ( ID semid, INT cnt, TMO_U tmout_u );
• ER ercd = tk_ref_sem (ID semid, T_RSEM *pk_rsem);
• ID flgid = tk cre flg ( CONST T CFLG *pk cflg );
• ER ercd = tk_del_flg ( ID flgid );
• ER ercd = tk_set_flg ( ID flgid, UINT setptn );
• ER ercd = tk_clr_flg ( ID flgid, UINT clrptn );
• ER ercd = tk_wai_flg (ID flgid, UINT waiptn, UINT wfmode, UINT *p_flgptn, TMO tmout);
• ER ercd = tk\_wai\_flg\_u ( ID flgid, UINT waiptn, UINT wfmode, UINT *p_flgptn, TMO_U tmout_u );
• ER ercd = tk_ref_flg ( ID flgid, T_RFLG *pk_rflg );
• ID mbxid = tk_cre_mbx ( CONST T_CMBX* pk_cmbx );
• ER ercd = tk_del_mbx (ID mbxid);
• ER ercd = tk_snd_mbx ( ID mbxid, T_MSG *pk_msg );
• ER ercd = tk rcv mbx (ID mbxid, T MSG **ppk msg, TMO tmout);
• ER ercd = tk_rcv_mbx_u ( ID mbxid, T_MSG **ppk_msg, TMO_U tmout_u );
```

8.1.1.5 Extended Synchronization and Communication Functions

```
    ID mtxid = tk_cre_mtx ( CONST T_CMTX *pk_cmtx );

• ER ercd = tk_del_mtx (ID mtxid);
• ER ercd = tk loc mtx (ID mtxid, TMO tmout);
• ER ercd = tk_loc_mtx_u (ID mtxid, TMO_U tmout_u);
• ER ercd = tk_unl_mtx ( ID mtxid );
• ER ercd = tk_ref_mtx ( ID mtxid, T_RMTX *pk_rmtx );

    ID mbfid = tk_cre_mbf ( CONST T_CMBF *pk_cmbf );

• ER ercd = tk_del_mbf (ID mbfid);
• ER ercd = tk_snd_mbf ( ID mbfid, CONST void *msg, INT msgsz, TMO tmout );
• ER ercd = tk snd mbf u (ID mbfid, CONST void *msg, INT msgsz, TMO U tmout u);
• INT msgsz = tk_rcv_mbf ( ID mbfid, void *msg, TMO tmout );

    INT msgsz = tk_rcv_mbf_u ( ID mbfid, void *msg, TMO_U tmout_u );

• ER ercd = tk_ref_mbf ( ID mbfid, T_RMBF *pk_rmbf );
8.1.1.6 Memory Pool Management Functions

    ID mpfid = tk_cre_mpf ( CONST T_CMPF *pk_cmpf );

• ER ercd = tk_del_mpf (ID mpfid);
• ER ercd = tk_get_mpf ( ID mpfid, void **p_blf, TMO tmout );
• ER ercd = tk_get_mpf_u ( ID mpfid, void **p_blf, TMO_U tmout_u );
• ER ercd = tk_rel_mpf ( ID mpfid, void *blf );
• ER ercd = tk_ref_mpf ( ID mpfid, T_RMPF *pk_rmpf );
• ID mplid = tk_cre_mpl ( CONST T_CMPL *pk_cmpl );
• ER ercd = tk_del_mpl (ID mplid);
• ER ercd = tk_get_mpl ( ID mplid, SZ blksz, void **p_blk, TMO tmout );
```

• ER ercd = tk get mpl u (ID mplid, SZ blksz, void **p blk, TMO U tmout u);

• ER ercd = tk_rel_mpl (ID mplid, void *blk);

• ER ercd = tk ref mpl (ID mplid, T RMPL*pk rmpl);

8.1.1.7 Time Management Functions

```
• ER ercd = tk_set_utc ( CONST SYSTIM *pk_tim );
• ER ercd = tk_set_utc_u ( SYSTIM_U tim_u );

    ER ercd = tk_set_tim ( CONST SYSTIM *pk_tim );

• ER ercd = tk_set_tim_u ( SYSTIM_U tim_u );
• ER ercd = tk get utc (SYSTIM *pk tim);
• ER ercd = tk_get_utc_u ( SYSTIM_U *tim_u, UW *ofs );
• ER ercd = tk_get_tim ( SYSTIM *pk_tim );
• ER ercd = tk_get_tim_u ( SYSTIM_U *tim_u, UW *ofs );
• ER ercd = tk_get_otm ( SYSTIM *pk_tim );
• ER ercd = tk_get_otm_u ( SYSTIM_U *tim_u, UW *ofs );
• ID cycid = tk_cre_cyc ( CONST T_CCYC *pk_ccyc );

    ID cycid = tk_cre_cyc_u ( CONST T_CCYC_U *pk_ccyc_u );

• ER ercd = tk_del_cyc (ID cycid);
• ER ercd = tk_sta_cyc (ID cycid);
• ER ercd = tk_stp_cyc (ID cycid);
• ER ercd = tk_ref_cyc ( ID cycid, T_RCYC *pk_rcyc );
• ER ercd = tk_ref_cyc_u ( ID cycid, T_RCYC_U *pk_rcyc_u );
• ID almid = tk_cre_alm ( CONST T_CALM *pk_calm );
• ER ercd = tk_del_alm (ID almid);
• ER ercd = tk_sta_alm (ID almid, RELTIM almtim);
• ER ercd = tk_sta_alm_u ( ID almid, RELTIM_U almtim_u );
• ER ercd = tk_stp_alm (ID almid);
• ER ercd = tk_ref_alm ( ID almid, T_RALM *pk_ralm );
• ER ercd = tk_ref_alm_u ( ID almid, T_RALM_U *pk_ralm_u );
8.1.1.8 Interrupt Management Functions
• ER ercd = tk_def_int ( UINT intno, CONST T_DINT *pk_dint );
void tk_ret_int (void);
8.1.1.9 System Management Functions
• ER ercd = tk_rot_rdq ( PRI tskpri );
• ID tskid = tk_get_tid ( void );
• ER ercd = tk_dis_dsp (void);
• ER ercd = tk_ena_dsp (void);
• ER ercd = tk_ref_sys ( T_RSYS *pk_rsys );
• ER ercd = tk_set_pow ( UINT powmode );
ER ercd = tk_ref_ver ( T_RVER *pk_rver );
```

8.1.1.10 Subsystem Management Functions

```
• ER ercd = tk_def_ssy ( ID ssid, CONST T_DSSY *pk_dssy );
• ER ercd = tk_evt_ssy ( ID ssid, INT evttyp, ID resid, INT info );
• ER ercd = tk_ref_ssy ( ID ssid, T_RSSY *pk_rssy );
8.1.2
         \muT-Kernel/SM
8.1.2.1 System Memory Management Functions

    void* Kmalloc ( size_t size );

· void* Kcalloc ( size t nmemb, size t size );

    void* Krealloc (void *ptr, size_t size);

void Kfree (void *ptr);
8.1.2.2 Device Management Functions
• ID dd = tk opn dev ( CONST UB *devnm, UINT omode );
• ER ercd = tk cls dev (ID dd, UINT option);
• ID reqid = tk_rea_dev ( ID dd, W start, void *buf, SZ size, TMO tmout );

    ID reqid = tk_rea_dev_du (ID dd, D start_d, void *buf, SZ size, TMO_U tmout_u);

• ER ercd = tk_srea_dev ( ID dd, W start, void *buf, SZ size, SZ *asize );
• ER ercd = tk_srea_dev_d ( ID dd, D start_d, void *buf, SZ size, SZ *asize );

    ID reqid = tk_wri_dev ( ID dd, W start, CONST void *buf, SZ size, TMO tmout );

· ID regid = tk wri dev du (ID dd, D start d, CONST void *buf, SZ size, TMO U tmout u);
• ER ercd = tk_swri_dev (ID dd, W start, CONST void *buf, SZ size, SZ *asize);
• ER ercd = tk_swri_dev_d (ID dd, D start_d, CONST void *buf, W size, W *asize);
• ID creqid = tk_wai_dev ( ID dd, ID reqid, SZ *asize, ER *ioer, TMO tmout );
· ID creqid = tk wai dev u (ID dd, ID reqid, SZ *asize, ER *ioer, TMO U tmout u);

    INT dissus = tk_sus_dev ( UINT mode );

• ID pdevid = tk_get_dev ( ID devid, UB *devnm );

    ID devid = tk_ref_dev ( CONST UB *devnm, T_RDEV *rdev );

• ID devid = tk_oref_dev ( ID dd, T_RDEV *rdev );
• INT remcnt = tk_lst_dev ( T_LDEV *ldev, INT start, INT ndev );
• INT retcode = tk_evt_dev ( ID devid, INT evttyp, void *evtinf );
• ID devid = tk def dev ( CONST UB *devnm, CONST T DDEV *ddev, T IDEV *idev );
ER ercd = tk_ref_idv ( T_IDEV *idev );
```

• ER ercd = openfn (IDdevid, UINTomode, void * exinf);

```
• ER ercd = closefn (IDdevid, UINToption, void * exinf);
• ER ercd = execfn ( T_DEVREQ * devreq, TMOtmout, void * exinf);
• ER ercd = execfn ( T_DEVREQ_D * devreq_d, TMOtmout, void * exinf);
• ER ercd = execfn ( T_DEVREQ * devreq, TMO_Utmout_u, void * exinf);
• ER ercd = execfn ( T_DEVREQ_D * devreq_d, TMO_Utmout_u, void * exinf);
• INT crequo = waitfn ( T_DEVREQ * devreq, INTnreq, TMOtmout * exinf);

    INT crequo = waitfn ( T_DEVREQ_D * devreq_d, INTnreq, TMOtmout * exinf);

• INT creqno = waitfn ( T_DEVREQ * devreq, INTnreq, TMO_Utmout_u * exinf);
• INT creqno = waitfn ( T_DEVREQ_D * devreq_d, INTnreq, TMO_Utmout_u * exinf);
• ER ercd = abortfn ( IDtskid, T_DEVRQ * devreq, INTnreq, void * exinf);
• ER ercd = abortfn ( IDtskid, T_DEVRQ_D * devreq_d, INTnreq, void * exinf);
• INT retcode = eventfn (INTevttyp, void * evtinf, void * exinf);
8.1.2.3 Interrupt Management Functions
• DI (UINT intsts);
• EI (UINT intsts);
• BOOL disint = isDI (UINT intsts);

    void SetCpuIntLevel (INT level);

    INT level = GetCpuIntLevel (void);

    void EnableInt ( UINT intno );

    void EnableInt (UINT intno, INT level);

    void DisableInt (UINT intno);

· void ClearInt ( UINT intno );

    void EndOfInt ( UINT intno );

• BOOL rasint = CheckInt ( UINT intno );

    void SetIntMode ( UINT intno, UINT mode );

    void SetCtrlIntLevel (INT level);

    INT level = GetCtrlIntLevel (void);
```

8.1.2.4 I/O Port Access Support Functions

```
void out_b (INT port, UB data);
void out_h (INT port, UH data);
void out_w (INT port, UW data);
· void out_d (INT port, UD data);
• UB data = in_b ( INT port );

    UH data = in_h ( INT port );

UW data = in_w ( INT port );
UD data = in_d ( INT port );
· void WaitUsec (UW usec);
· void WaitNsec ( UW nsec );
8.1.2.5 Power Management Functions
· void low_pow (void);
void off_pow (void);
8.1.2.6 System Configuration Information Management Functions
• INT ct = tk_get_cfn ( CONST UB *name, W *val, INT max );
• INT rlen = tk_get_cfs ( CONST UB *name, UB *buf, INT max );
8.1.2.7 Memory Cache Control Functions
```

```
• SZ rlen = SetCacheMode ( void *addr, SZ len, UINT mode );
```

• SZ rlen = ControlCache (void *addr, SZ len, UINT mode);

8.1.2.8 Physical Timer Functions

```
    ER ercd = StartPhysicalTimer ( UINT ptmrno, UW limit, UINT mode );
    ER ercd = StopPhysicalTimer ( UINT ptmrno );
    ER ercd = GetPhysicalTimerCount ( UINT ptmrno, UW *p_count );
    ER ercd = DefinePhysicalTimerHandler ( UINT ptmrno, CONST T_DPTMR *pk_dptmr );
```

• ER ercd = GetPhysicalTimerConfig (UINT ptmrno, T_RPTMR *pk_rptmr);

8.1.2.9 Utility Functions

```
void SetOBJNAME (void *exinf, CONST UB *name);
ER ercd = CreateLock (FastLock *lock, CONST UB *name);
void DeleteLock (FastLock *lock);
void Lock (FastLock *lock);
void Unlock (FastLock *lock);
ER ercd = CreateMLock (FastMLock *lock, CONST UB *name);
ER ercd = DeleteMLock (FastMLock *lock);
ER ercd = MLock (FastMLock *lock, INT no);
ER ercd = MLockTmo (FastMLock *lock, INT no, TMO tmout);
ER ercd = MLockTmo_u (FastMLock *lock, INT no, TMO_U tmout_u);
ER ercd = MUnlock (FastMLock *lock, INT no);
```

8.1.3 μ T-Kernel/DS

8.1.3.1 Kernel Internal State Acquisition Functions

```
• INT ct = td_lst_tsk ( ID list[], INT nent );
• INT ct = td_lst_sem ( ID list[], INT nent );
• INT ct = td_lst_flg ( ID list[], INT nent );
• INT ct = td_lst_mbx ( ID list[], INT nent );
• INT ct = td_lst_mtx ( ID list[], INT nent );
• INT ct = td_lst_mbf ( ID list[], INT nent );
• INT ct = td_lst_mpf ( ID list[], INT nent );
INT ct = td_lst_mpl ( ID list[], INT nent );
INT ct = td_lst_cyc ( ID list[], INT nent );
• INT ct = td_lst_alm ( ID list[], INT nent );
• INT ct = td_lst_ssy ( ID list[], INT nent );
• INT ct = td_rdy_que ( PRI pri, ID list[], INT nent );
• INT ct = td_sem_que ( ID semid, ID list[], INT nent );
• INT ct = td_flg_que ( ID flgid, ID list[], INT nent );
• INT ct = td_mbx_que ( ID mbxid, ID list[], INT nent );
• INT ct = td_mtx_que ( ID mtxid, ID list[], INT nent );
• INT ct = td_smbf_que ( ID mbfid, ID list[], INT nent );
• INT ct = td_rmbf_que ( ID mbfid, ID list[], INT nent );
• INT ct = td_mpf_que ( ID mpfid, ID list[], INT nent );
```

```
• INT ct = td mpl que (ID mplid, ID list[], INT nent);

    ER ercd = td_ref_tsk ( ID tskid, TD_RTSK *rtsk );

• ER ercd = td_ref_tex ( ID tskid, TD_RTEX *pk_rtex );

    ER ercd = td_ref_sem ( ID semid, TD_RSEM *rsem );

• ER ercd = td_ref_flg ( ID flgid, TD_RFLG *rflg );
• ER ercd = td_ref_mbx ( ID mbxid, TD_RMBX *rmbx );
• ER ercd = td_ref_mtx ( ID mtxid, TD_RMTX *rmtx );
• ER ercd = td_ref_mbf ( ID mbfid, TD_RMBF *rmbf );
• ER ercd = td_ref_mpf ( ID mpfid, TD_RMPF *rmpf );
• ER ercd = td_ref_mpl ( ID mplid, TD_RMPL *rmpl );
• ER ercd = td_ref_cyc ( ID cycid, TD_RCYC *rcyc );
• ER ercd = td_ref_cyc_u ( ID cycid, TD_RCYC_U *rcyc_u );
• ER ercd = td ref alm (ID almid, TD RALM *ralm);
• ER ercd = td_ref_alm_u ( ID almid, TD_RALM_U *ralm_u );
ER ercd = td_ref_sys (TD_RSYS *pk_rsys);

    ER ercd = td_ref_ssy ( ID ssid, TD_RSSY *rssy );

    ER ercd = td_get_reg ( ID tskid, T_REGS *pk_regs, T_EIT *pk_eit, T_CREGS *pk_cregs );

• ER ercd = td_set_reg (ID tskid, CONSTT_REGS*pk_regs, CONSTT_EIT*pk_eit, CONSTT_CREGS*pk_cregs
 );
• ER ercd = td_get_utc ( SYSTIM *tim, UW *ofs );
• ER ercd = td get utc u (SYSTIM U*tim u, UW*ofs);
• ER ercd = td_get_tim ( SYSTIM *tim, UW *ofs );
• ER ercd = td_get_tim_u ( SYSTIM_U *tim_u, UW *ofs );
• ER ercd = td_get_otm ( SYSTIM *tim, UW *ofs );
• ER ercd = td_get_otm_u ( SYSTIM_U *tim_u, UW *ofs );
• ER ercd = td ref dsname (UINT type, ID id, UB *dsname);
• ER ercd = td_set_dsname ( UINT type, ID id, CONST UB *dsname );
8.1.3.2 Trace Functions

    ER ercd = td_hok_svc ( CONST TD_HSVC *hsvc );

• ER ercd = td hok dsp (CONST TD HDSP *hdsp);
• ER ercd = td_hok_int ( CONST TD_HINT *hint );
```

8.2 List of Error Codes

8.2.1 Normal Completion Error Class (0)

Error code name	Error Codes	Summary description
E_OK	0	Normal completion

8.2.2 Normal completion Internal Error Class (5 to 8)

Error code name	Error Codes	Summary description
E_SYS	ERCD(-5, 0)	System error

An error of unknown cause affecting the system as a whole.

Error code name	Error Codes	Summary description
E_NOCOP	ERCD(-6, 0)	Unavailable co-processor

This error code is returned when the specified co-processor is not installed in the currently running hardware, or abnormal co-processor condition was detected.

8.2.3 Unsupported Error Class (9 to 16)

Error code name	Error Codes	Summary description
E_NOSPT	ERCD(-9, 0)	Unsupported function

When some system call functions are not supported and such a function is invoked, error code E_RSATR or E_NOSPT is returned. If E_RSATR does not apply, error code E_NOSPT is returned.

Error code name	Error Codes	Summary description
E_RSFN	ERCD(-10, 0)	Reserved function code number

This error code is returned when it is attempted to execute a system call specifying a reserved function code (undefined function code), and also when it is attempted to execute an undefined extended SVC handler (a positive function code).

Error code name	Error Codes	Summary description
E_RSATR	ERCD(-11, 0)	Reserved attribute

This error code is returned when an undefined or unsupported object attribute is specified.

Checking for this error may be omitted if system-dependent optimization is implemented.

8.2.4 Parameter Error Class (17 to 24)

Error code name	Error Codes	Summary description
E_PAR	ERCD(-17, 0)	Parameter error

Checking for this error may be omitted if system-dependent optimization is implemented.

Error code name	Error Codes	Summary description
E_ID	ERCD(-18, 0)	Invalid ID number

E_ID is an error that is returned only for objects having an ID number.

Error code E_PAR is returned when a static error is detected for such as reserved number or out of range in the case of interrupt number.

8.2.5 Call Context Error Class (25 to 32)

Error code name	Error Codes	Summary description
E_CTX	ERCD(-25, 0)	Context error

This error indicates that the specified system call cannot be issued in the current context (task portion/task-independent portion or handler RUNNING state).

This error must be returned whenever there is a semantic context error in issuing a system call, such as calling from a task-independent portion a system call that may put the invoking task in WAITING state. Due to implementation limitations, there may be other system calls that, when called from a given context (such as an interrupt handler), will cause this error to be returned.

Error code name	Error Codes	Summary description
E_MACV	ERCD(-26, 0)	Memory cannot be accessed;
		memory access privilege error

Error detection is implementation-dependent.

Error code name	Error Codes	Summary description
E_OACV	ERCD(-27, 0)	Object access privilege error

This error code is returned when a user task tries to manipulate a system object.

The definition of system objects and error detection are implementation-dependent.

Error code name	Error Codes	Summary description
E_ILUSE	ERCD(-28, 0)	System call illegal use

8.2.6 Resource Constraint Error Class (33 to 40)

Error code name	Error Codes	Summary description
E_NOMEM	ERCD(-33, 0)	Insufficient memory

This error code is returned when there is insufficient memory (no memory) for allocating an object control block space, user stack area, memory pool area, message buffer area or the like.

Error code name	Error Codes	Summary description
E_LIMIT	ERCD(-34, 0)	System limit exceeded

This error code is returned, for example, when it is attempted to create more object(s) than the system allows.

8.2.7 Object State Error Class (41 to 48)

Error code name	Error Codes	Summary description
E_OBJ	ERCD(-41, 0)	Invalid object state
E_NOEXS	ERCD(-42, 0)	Object does not exist
E_QOVR	ERCD(-43, 0)	Queuing or nesting overflow

8.2.8 Wait Error Class (49 to 56)

Error code name	Error Codes	Summary description
E_RLWAI	ERCD(-49, 0)	Waiting state was forcibly
		released
E_TMOUT	ERCD(-50, 0)	Polling failed or timeout
E_DLT	ERCD(-51, 0)	Waiting object was deleted
E_DISWAI	ERCD(-52, 0)	Wait released due to disabling of
		wait

8.2.9 Device Error Class (57 to 64) (μ T-Kernel/SM)

Error code name	Error Codes	Summary description
E_IO	ERCD(-57, 0)	I/O error

* Error information specific to individual devices may be defined in E_IO sub-codes.

Error code name	Error Codes	Summary description
E_NOMDA	ERCD(-58, 0)	No media

8.2.10 Status Error Class (65 to 72) (μ T-Kernel/SM)

Error code name	Error Codes	Summary description
E_BUSY	ERCD(-65, 0)	Busy
E_ABORT	ERCD(-66, 0)	Processing was aborted
E_RONLY	ERCD(-67, 0)	Write protected

8.3 List of APIs and Service Profile Items

8.3.1 μ T-Kernel/OS

8.3.1.1 Task Management Functions

API name	Availability	Other related service profile
Airmanne	Availability	items
tk_cre_tsk	Always	TV CURRORT ACM
		TK_SUPPORT_ASM
		TK_SUPPORT_USERBUF
		TK_SUPPORT_AUTOBUF
		TK_SUPPORT_FPU
		TK_SUPPORT_COPn
		TK_HAS_SYSSTACK
		TK_SUPPORT_DSNAME
		TK_MAX_TSKPRI
tk_del_tsk	Always	None
tk_sta_tsk	Always	None
tk_ext_tsk	Always	None
tk_exd_tsk	Always	None
tk_ter_tsk	Always	None
tk_chg_pri	Always	
		TK_MAX_TSKPRI
tk_get_reg	TK_SUPPORT_REGOPS	None
tk_set_reg	TK_SUPPORT_REGOPS	None
tk_get_cpr	TK_SUPPORT_COPn	None
tk_set_cpr	TK_SUPPORT_COPn	None
tk_ref_tsk	Always	
		TK_SUPPORT_DISWAI
		TK_SUPPORT_TASKEXCEPTION
		TK_SUPPORT_TASKEVENT

8.3.1.2 Task Synchronization Functions

API name	Availability	Other related service profile
Allianie	Availability	items
tk_slp_tsk	Always	None
tk_slp_tsk_u	TK_SUPPORT_USEC	None
tk_wup_tsk	Always	
		TK_WAKEUP_MAXCNT
tk_can_wup	Always	None
tk_rel_wai	Always	None
tk_sus_tsk	Always	
		TK_SUSPEND_MAXCNT
tk_rsm_tsk	Always	None
tk_frsm_tsk	Always	None
tk_dly_tsk	Always	None
tk_dly_tsk_u	TK_SUPPORT_USEC	None
tk_sig_tev	TK_SUPPORT_TASKEVENT	None
tk_wai_tev	TK_SUPPORT_TASKEVENT	None
tk_wai_tev_u	TK_SUPPORT_TASKEVENT &&	None
	TK_SUPPORT_USEC	
tk_dis_wai	TK_SUPPORT_DISWAI	None

API name	Availability	Other related service profile items
tk_ena_wai	TK_SUPPORT_DISWAI	None

8.3.1.3 Task Exception Handling Functions

API name	Availability	Other related service profile
Arrhanie		items
tk_def_tex	TK_SUPPORT_TASKEXCEPTION	None
tk_ena_tex	TK_SUPPORT_TASKEXCEPTION	None
tk_dis_tex	TK_SUPPORT_TASKEXCEPTION	None
tk_ras_tex	TK_SUPPORT_TASKEXCEPTION	None
tk_end_tex	TK_SUPPORT_TASKEXCEPTION	None
tk ref tex	TK SUPPORT TASKEXCEPTION	None

8.3.1.4 Synchronization and Communication Functions

API name	Availability	Other related service profile items
tk_cre_sem	Always	TK_SUPPORT_DISWAI TK_SUPPORT_DSNAME TK_SEMAPHORE_MAXCNT
tk_del_sem	Always	None
tk_sig_sem	Always	None
tk_wai_sem	Always	None
tk_wai_sem_u	TK_SUPPORT_USEC	None
tk_ref_sem	Always	None
tk_cre_flg	Always	TK_SUPPORT_DISWAI TK_SUPPORT_DSNAME
tk_del_flg	Always	None
tk_set_flg	Always	None
tk_clr_flg	Always	None
tk_wai_flg	Always	None
tk_wai_flg_u	TK_SUPPORT_USEC	None
tk_ref_flg	Always	None
tk_cre_mbx	Always	TK_SUPPORT_DISWAI TK_SUPPORT_DSNAME
tk_del_mbx	Always	None
tk_snd_mbx	Always	None
tk_rcv_mbx	Always	None
tk_rcv_mbx_u	TK_SUPPORT_USEC	None
tk_ref_mbx	Always	None

8.3.1.5 Extended Synchronization and Communication Functions

API name	Availability	Other related service profile items
tk_cre_mtx	Always	TK_SUPPORT_DISWAI TK_SUPPORT_DSNAME

API name	Availability	Other related service profile
Airmanie	Availability	items
tk_del_mtx	Always	None
tk_loc_mtx	Always	None
tk_loc_mtx_u	TK_SUPPORT_USEC	None
tk_unl_mtx	Always	None
tk_ref_mtx	Always	None
tk_cre_mbf	Always	TK_SUPPORT_USERBUF TK_SUPPORT_AUTOBUF TK_SUPPORT_DISWAI TK_SUPPORT_DSNAME
tk_del_mbf	Always	None
tk_snd_mbf	Always	None
tk_snd_mbf_u	TK_SUPPORT_USEC	None
tk_rcv_mbf	Always	None
tk_rcv_mbf_u	TK_SUPPORT_USEC	None
tk_ref_mbf	Always	None

8.3.1.6 Memory Pool Management Functions

API name	Availability	Other related service profile items
tk_cre_mpf	Always	TK_SUPPORT_USERBUF TK_SUPPORT_AUTOBUF TK_SUPPORT_DISWAI TK_SUPPORT_DSNAME
tk_del_mpf	Always	None
tk_get_mpf	Always	None
tk_get_mpf_u	TK_SUPPORT_USEC	None
tk_rel_mpf	Always	None
tk_ref_mpf	Always	None
tk_cre_mpl	Always	TK_SUPPORT_USERBUF TK_SUPPORT_AUTOBUF TK_SUPPORT_DISWAI TK_SUPPORT_DSNAME
tk_del_mpl	Always	None
tk_get_mpl	Always	None
tk_get_mpl_u	TK_SUPPORT_USEC	None
tk_rel_mpl	Always	None
tk_ref_mpl	Always	None

8.3.1.7 Time Management Functions

API name	Availability	Other related service profile
Airmanie	Availability	items
tk_set_utc	TK_SUPPORT_UTC	None
tk_set_utc_u	TK_SUPPORT_UTC &&	None
	TK_SUPPORT_USEC	
tk_set_tim	TK_SUPPORT_TRONTIME	None
tk_set_tim_u	TK_SUPPORT_TRONTIME &&	None
	TK_SUPPORT_USEC	
tk_get_utc	TK_SUPPORT_UTC	None

API name	Arrailability	Other related service profile
API name	Availability	items
tk_get_utc_u	TK_SUPPORT_UTC &&	None
	TK_SUPPORT_USEC	
tk_get_tim	TK_SUPPORT_TRONTIME	None
tk_get_tim_u	TK_SUPPORT_TRONTIME &&	None
	TK_SUPPORT_USEC	
tk_get_otm	Always	None
tk_get_otm_u	TK_SUPPORT_USEC	None
tk_cre_cyc	Always	TV OUDDODT 10H
		TK_SUPPORT_ASM
		TK_SUPPORT_DSNAME
tk_cre_cyc_u	TK_SUPPORT_USEC	TK_SUPPORT_ASM
		TK_SUPPORT_ASM TK_SUPPORT_DSNAME
tlr dol ovo	Always	None
tk_del_cyc		None
tk_sta_cyc	Always	None
tk_stp_cyc	Always	None
tk_ref_cyc	Always	
tk_ref_cyc_u	TK_SUPPORT_USEC	None
tk_cre_alm	Always	TK SUPPORT ASM
		TK SUPPORT DSNAME
tk_del_alm	Always	None
tk_sta_alm	Always	None
tk_sta_alm_u	TK_SUPPORT_USEC	None
tk_stp_alm	Always	None
tk_ref_alm	Always	None
tk_ref_alm_u	TK_SUPPORT_USEC	None
ux_rcr_ann_u	111_0011 0111_00E0	TVOIIC

8.3.1.8 Interrupt Management Functions

API name	Availability	Other related service profile
Allianie	Availability	items
tk_def_int	Always	TK_SUPPORT_ASM
tk_ret_int	Always	TK_SUPPORT_ASM

8.3.1.9 System Management Functions

API name	Availability	Other related service profile
Ai i name	Availability	items
tk_rot_rdq	Always	None
tk_get_tid	Always	None
tk_dis_dsp	Always	None
tk_ena_dsp	Always	None
tk_ref_sys	Always	None
tk_set_pow	TK_SUPPORT_LOWPOWER	None
tk_ref_ver	Always	None

8.3.1.10 Subsystem Management Functions

API name	Availability	Other related service profile items
tk_def_ssy	TK_SUPPORT_SUBSYSTEM	TK_SUPPORT_SSYEVENT TK_SUPPORT_TASKEXCEPTION
tk_evt_ssy	TK_SUPPORT_SUBSYSTEM && TK_SUPPORT_SSYEVENT	None
tk_ref_ssy	TK_SUPPORT_SUBSYSTEM	TK_SUPPORT_SSYEVENT

8.3.2 μ T-Kernel/SM

8.3.2.1 System Memory Management Functions

API name	Availability	Other related service profile
Alliane	Availability	items
Kmalloc	TK_SUPPORT_MEMLIB	None
Kcalloc	TK_SUPPORT_MEMLIB	None
Krealloc	TK_SUPPORT_MEMLIB	None
Kfree	TK_SUPPORT_MEMLIB	None

8.3.2.2 Device Management Functions

API name	Availability	Other related service profile
Arrhanie	Availability	items
tk_opn_dev	Always	None
tk_cls_dev	Always	None
tk_rea_dev	Always	None
tk_rea_dev_du	TK_SUPPORT_LARGEDEV &&	None
	TK_SUPPORT_USEC	
tk_srea_dev	Always	None
tk_srea_dev_d	TK_SUPPORT_LARGEDEV	None
tk_wri_dev	Always	None
tk_wri_dev_du	TK_SUPPORT_LARGEDEV &&	None
	TK_SUPPORT_USEC	
tk_swri_dev	Always	None
tk_swri_dev_d	TK_SUPPORT_LARGEDEV	None
tk_wai_dev	Always	None
tk_wai_dev_u	TK_SUPPORT_USEC	None
tk_sus_dev	TK_SUPPORT_LOWPOWER	None
tk_get_dev	Always	None
tk_ref_dev	Always	None
tk_oref_dev	Always	None
tk_lst_dev	Always	None
tk_evt_dev	Always	None
tk_def_dev	Always	None
tk_ref_idv	Always	None
openfn	Always	None
closefn	Always	None
execfn	Always	
		TK_SUPPORT_LARGEDEV
		TK_SUPPORT_USEC
waitfn	Always	TV CUDDODT I ADCEDEV
		TK_SUPPORT_LARGEDEV
		TK_SUPPORT_USEC

API name	Availability	Other related service profile items
abortfn	Always	
		TK_SUPPORT_LARGEDEV
eventfn	Always	None

8.3.2.3 Interrupt Management Functions

API name	Availability	Other related service profile
Airmanie	Availability	items
DI	Always	None
EI	Always	None
isDI	Always	None
SetCpuIntLevel	TK_SUPPORT_CPUINTLEVEL	None
GetCpuIntLevel	TK_SUPPORT_CPUINTLEVEL	None
EnableInt	TK_SUPPORT_INTCTRL	
		TK_HAS_ENAINTLEVEL
DisableInt	TK_SUPPORT_INTCTRL	None
ClearInt	TK_SUPPORT_INTCTRL	None
EndOfInt	TK_SUPPORT_INTCTRL	None
CheckInt	TK_SUPPORT_INTCTRL	None
SetIntMode	TK_SUPPORT_INTMODE	None
SetCtrlIntLevel	TK_SUPPORT_CTRLINTLEVEL	None
GetCtrlIntLevel	TK_SUPPORT_CTRLINTLEVEL	None

8.3.2.4 I/O Port Access Support Functions

API name	Availability	Other related service profile
All hame	Availability	items
out_b	TK_SUPPORT_IOPORT	None
out_h	TK_SUPPORT_IOPORT	None
out_w	TK_SUPPORT_IOPORT	None
out_d	TK_SUPPORT_IOPORT &&	None
	TK_HAS_DOUBLEWORD	
in_b	TK_SUPPORT_IOPORT	None
in_h	TK_SUPPORT_IOPORT	None
in_w	TK_SUPPORT_IOPORT	None
in_d	TK_SUPPORT_IOPORT &&	None
	TK_HAS_DOUBLEWORD	
WaitUsec	TK_SUPPORT_MICROWAIT	None
WaitNsec	TK_SUPPORT_MICROWAIT	None

8.3.2.5 Power Management Functions

API name	Availability	Other related service profile
		items
low_pow	TK_SUPPORT_LOWPOWER	None
off_pow	TK_SUPPORT_LOWPOWER	None

8.3.2.6 System Configuration Information Management Functions

API name	Availability	Other related service profile items
tk_get_cfn	TK_SUPPORT_SYSCONF	None
tk_get_cfs	TK_SUPPORT_SYSCONF	None

8.3.2.7 Memory Cache Control Functions

API name	Availability	Other related service profile items
SetCacheMode	TK_SUPPORT_CACHECTRL && TK_SUPPORT_SETCACHEMODE	TK_SUPPORT_WBCACHE TK_SUPPORT_WTCACHE
ControlCache	TK_SUPPORT_CACHECTRL	None

8.3.2.8 Physical Timer Functions

API name	Availability	Other related service profile
	117 63266 3320 9	items
StartPhysicalTimer	TK_SUPPORT_PTIMER	
		TK_MAX_PTIMER
StopPhysicalTimer	TK_SUPPORT_PTIMER	
		TK_MAX_PTIMER
GetPhysicalTimerCount	TK_SUPPORT_PTIMER	
		TK_MAX_PTIMER

API name	Availability	Other related service profile
	-	items
DefinePhysicalTimerHandler	TK_SUPPORT_PTIMER	
		TK_MAX_PTIMER
GetPhysicalTimerConfig	TK_SUPPORT_PTIMER	
		TK_MAX_PTIMER

8.3.2.9 Utility Functions

API name	Availability	Other related service profile
	_	items
SetOBJNAME	Always	None
CreateLock	Always	None
DeleteLock	Always	None
Lock	Always	None
Unlock	Always	None
CreateMLock	Always	None
DeleteMLock	Always	None
MLock	Always	None
MLockTmo	Always	None
MLockTmo_u	TK_SUPPORT_USEC	None
MUnlock	Always	None

8.3.3 μ T-Kernel/DS

8.3.3.1 Kernel Internal State Acquisition Functions

API name	Availability	Other related service profile
Arrhame	Availability	items
td_lst_tsk	TK_SUPPORT_DBGSPT	None
td_lst_sem	TK_SUPPORT_DBGSPT	None
td_lst_flg	TK_SUPPORT_DBGSPT	None
td_lst_mbx	TK_SUPPORT_DBGSPT	None
td_lst_mtx	TK_SUPPORT_DBGSPT	None
td_lst_mbf	TK_SUPPORT_DBGSPT	None
td_lst_mpf	TK_SUPPORT_DBGSPT	None
td_lst_mpl	TK_SUPPORT_DBGSPT	None
td_lst_cyc	TK_SUPPORT_DBGSPT	None
td_lst_alm	TK_SUPPORT_DBGSPT	None
td_lst_ssy	TK_SUPPORT_SUBSYSTEM &&	None
	TK_SUPPORT_DBGSPT	
td_rdy_que	TK_SUPPORT_DBGSPT	None
td_sem_que	TK_SUPPORT_DBGSPT	None
td_flg_que	TK_SUPPORT_DBGSPT	None
td_mbx_que	TK_SUPPORT_DBGSPT	None
td_mtx_que	TK_SUPPORT_DBGSPT	None
td_smbf_que	TK_SUPPORT_DBGSPT	None
td_rmbf_que	TK_SUPPORT_DBGSPT	None
td_mpf_que	TK_SUPPORT_DBGSPT	None
td_mpl_que	TK_SUPPORT_DBGSPT	None
td_ref_tsk	TK_SUPPORT_DBGSPT	TIV OURDONT PROMAT
		TK_SUPPORT_DISWAI
		TK_SUPPORT_TASKEXCEPTION
		TK_SUPPORT_TASKEVENT
		TK_HAS_SYSSTACK

API name	Assailabilites	Other related service profile
API name	Availability	items
td_ref_tex	TK_SUPPORT_DBGSPT &&	None
	TK_SUPPORT_TASKEXCEPTION	
td_ref_sem	TK_SUPPORT_DBGSPT	None
td_ref_flg	TK_SUPPORT_DBGSPT	None
td_ref_mbx	TK_SUPPORT_DBGSPT	None
td_ref_mtx	TK_SUPPORT_DBGSPT	None
td_ref_mbf	TK_SUPPORT_DBGSPT	None
td_ref_mpf	TK_SUPPORT_DBGSPT	None
td_ref_mpl	TK_SUPPORT_DBGSPT	None
td_ref_cyc	TK_SUPPORT_DBGSPT	None
td_ref_cyc_u	TK_SUPPORT_DBGSPT &&	None
	TK_SUPPORT_USEC	
td_ref_alm	TK_SUPPORT_DBGSPT	None
td_ref_alm_u	TK_SUPPORT_DBGSPT &&	None
	TK_SUPPORT_USEC	
td_ref_sys	TK_SUPPORT_DBGSPT	None
td_ref_ssy	TK_SUPPORT_SUBSYSTEM &&	None
	TK_SUPPORT_DBGSPT	
td_get_reg	TK_SUPPORT_DBGSPT &&	None
	TK_SUPPORT_REGOPS	
td_set_reg	TK_SUPPORT_DBGSPT &&	None
	TK_SUPPORT_REGOPS	
td_get_utc	TK_SUPPORT_DBGSPT &&	None
	TK_SUPPORT_UTC	
td_get_utc_u	TK_SUPPORT_DBGSPT &&	None
	TK_SUPPORT_UTC &&	
	TK_SUPPORT_USEC	
td_get_tim	TK_SUPPORT_DBGSPT &&	None
	TK_SUPPORT_TRONTIME	
td_get_tim_u	TK_SUPPORT_DBGSPT &&	None
	TK_SUPPORT_TRONTIME &&	
	TK_SUPPORT_USEC	
td_get_otm	TK_SUPPORT_DBGSPT	None
td_get_otm_u	TK_SUPPORT_DBGSPT &&	None
	TK_SUPPORT_USEC	
td_ref_dsname	TK_SUPPORT_DSNAME	None
td_set_dsname	TK_SUPPORT_DSNAME	None

8.3.3.2 Trace Functions

API name	Availability	Other related service profile items
td_hok_svc	TK_SUPPORT_DBGSPT	None
td_hok_dsp	TK_SUPPORT_DBGSPT	None
td_hok_int	TK_SUPPORT_DBGSPT	None