XQE Layout and Aisle Planning Specification(Euro Pallets)

1. Traffic and Aisle Widths

Straight Passage

Passage Type	Channel	Minimum Width
Straight	One-way	2.5 m
Straight	Two-way	4.1 m

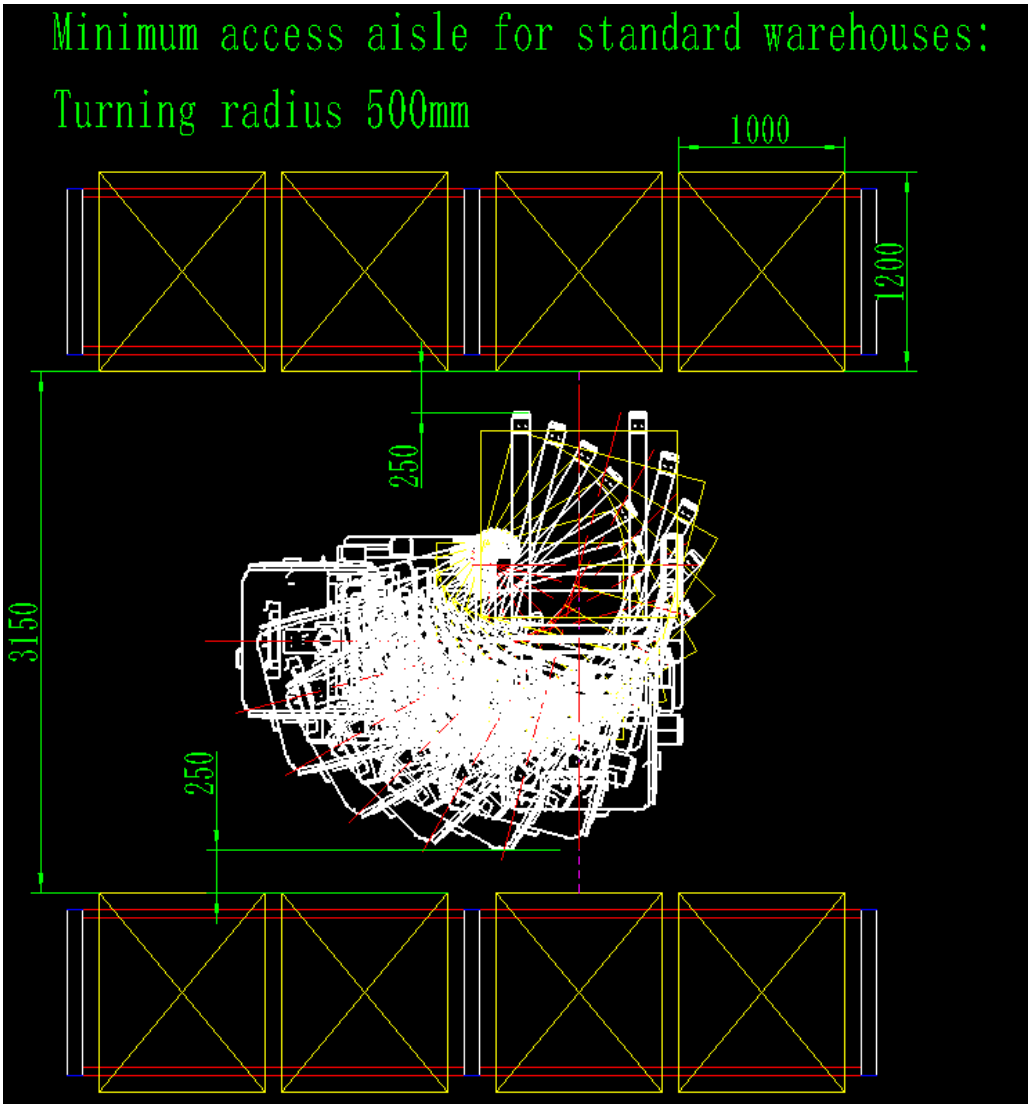

EP EQUIPMENT EUROPE
Schanzenstraße 35, 51063 Köln, Germany | VAT DE352494619
sales@ep-equipment.eu
+49 32 212239500
www.ep-ep.com

Turning Space

Turning Type	Channel	Minimum Width
90 degree turn	Single-channel	3.1 m

Notes:

- Applies to intersections, cross-aisles, or aisle transitions.
- Widths include vehicle overhang, steering radius, and safety margin.
- Keep turning zones free of obstacles.

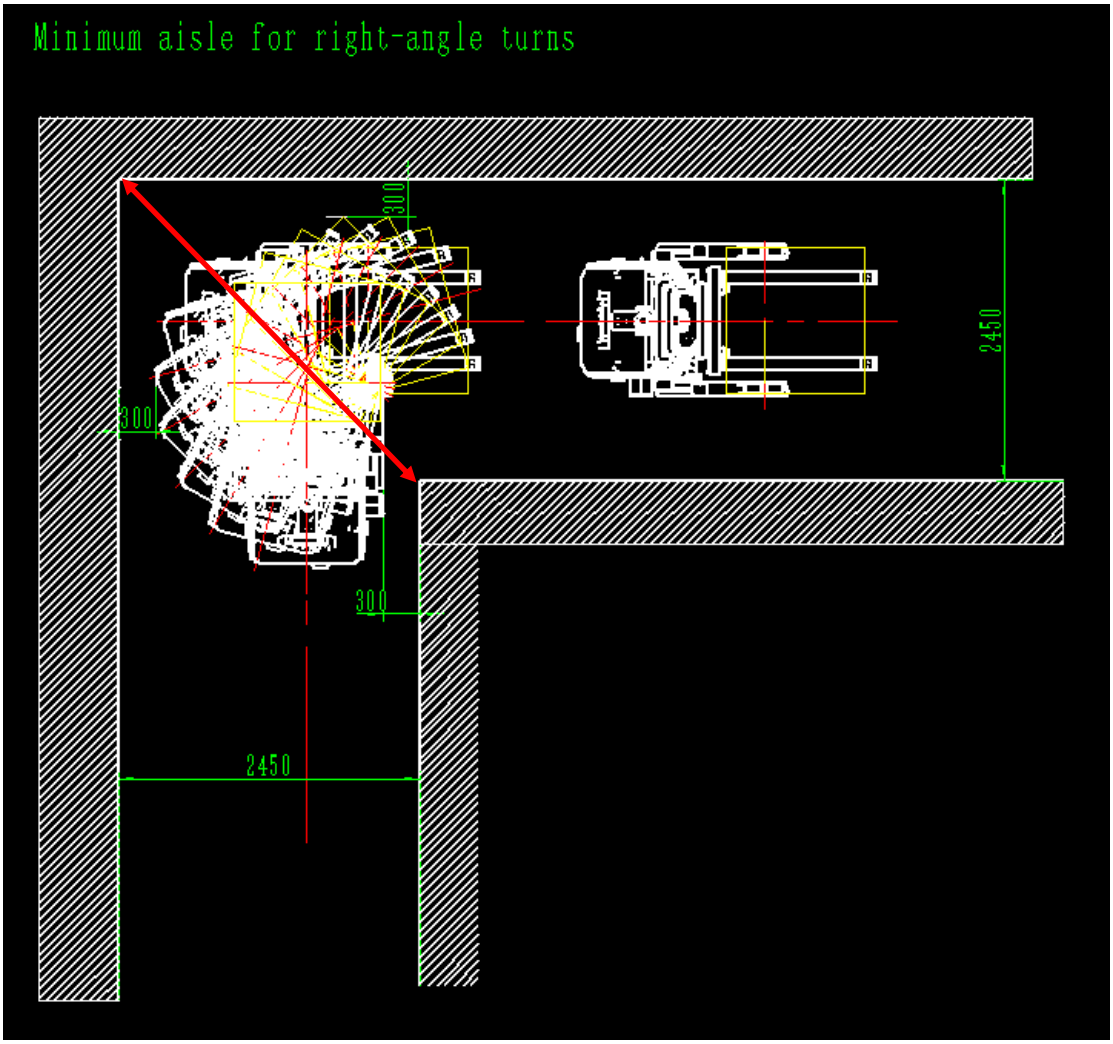

EP EQUIPMENT EUROPE
Schanzenstraße 35, 51063 Köln, Germany | VAT DE352494619
sales@ep-equipment.eu
+49 32 212239500
www.ep-ep.com

Loading and Unloading Zones

Operation	Configuration	Minimum Width
Automatic loading/unloading	Single-channel, one side	3.1 m
Automatic loading/unloading	Single-channel, both sides	3.6 m
Automatic loading	Dual-channel, load one side, passage other	4.1 m
Dual-lane operation	Unloading one side, passage other	4.1-5.6 m

Rack Placement

- Standard distance between the pallets inside the rack is: 100mm

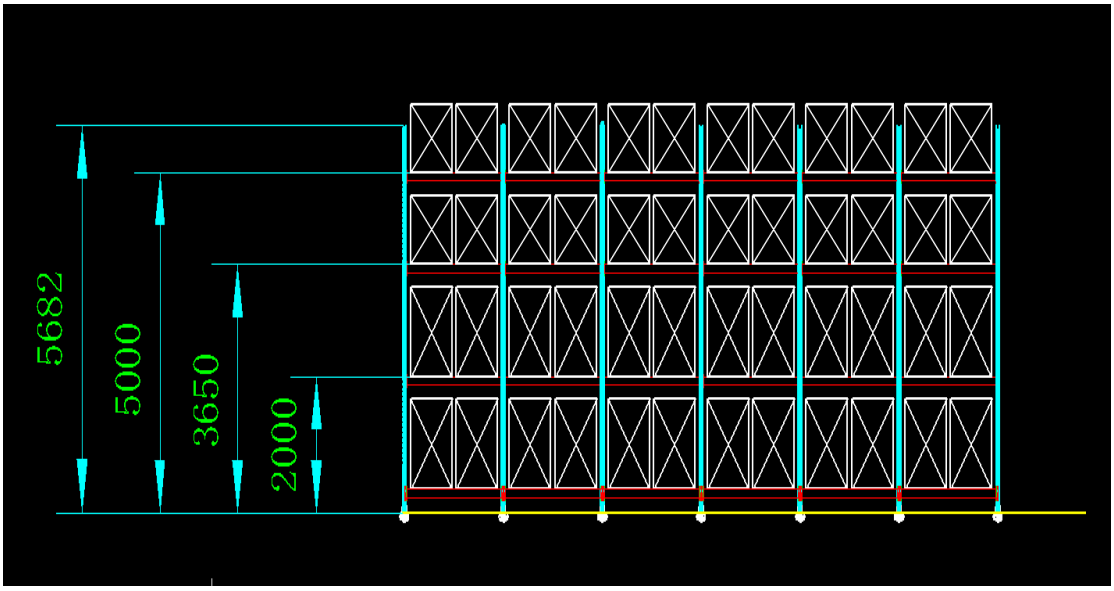

- Dense stacking: 200 mm clearance from truck on each side

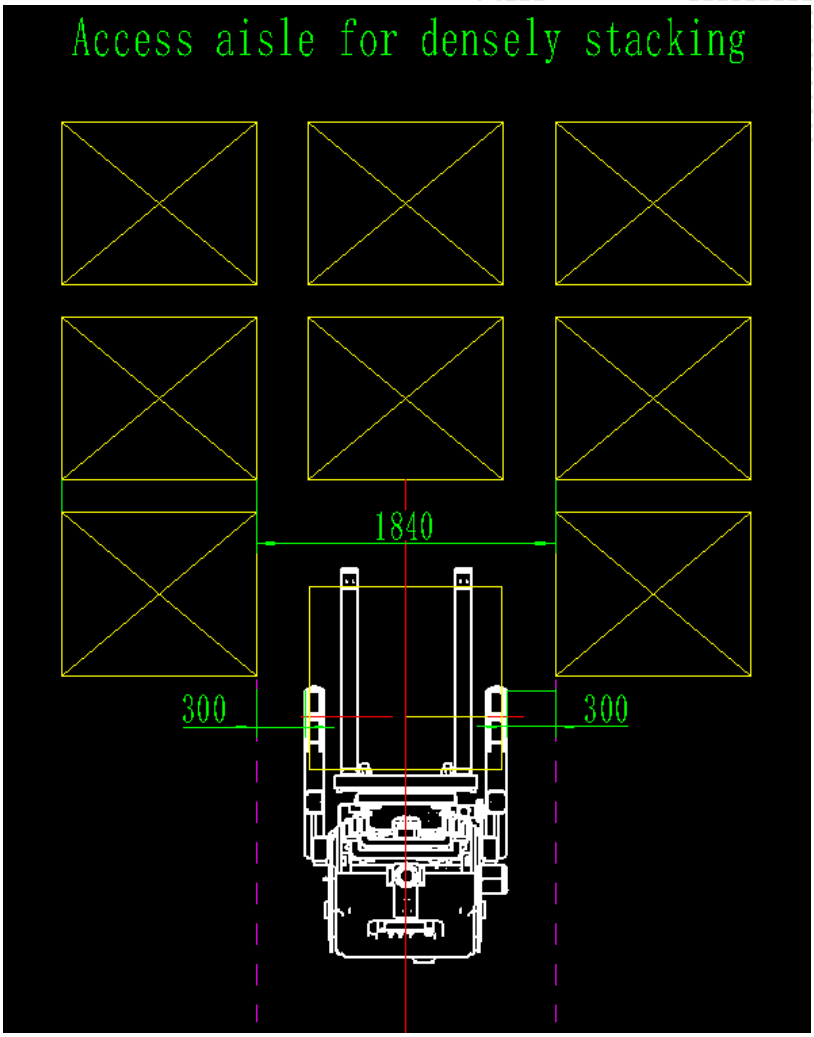

Charging Station Layout

Item	Requirement
Station length	3.6 m
Station width	1.5 m
Side clearance	≥ 300 mm each side
Rear clearance	≥ 500 mm
Overhead clearance	No reflective or glass surfaces
Approach	Straight only, no turning inside charging zone

Placement Guidelines:

- Place at end of straight aisles for easy access.
- Avoid pedestrian crossing through the charging area.
- Keep separate from high-traffic loading/unloading zones.

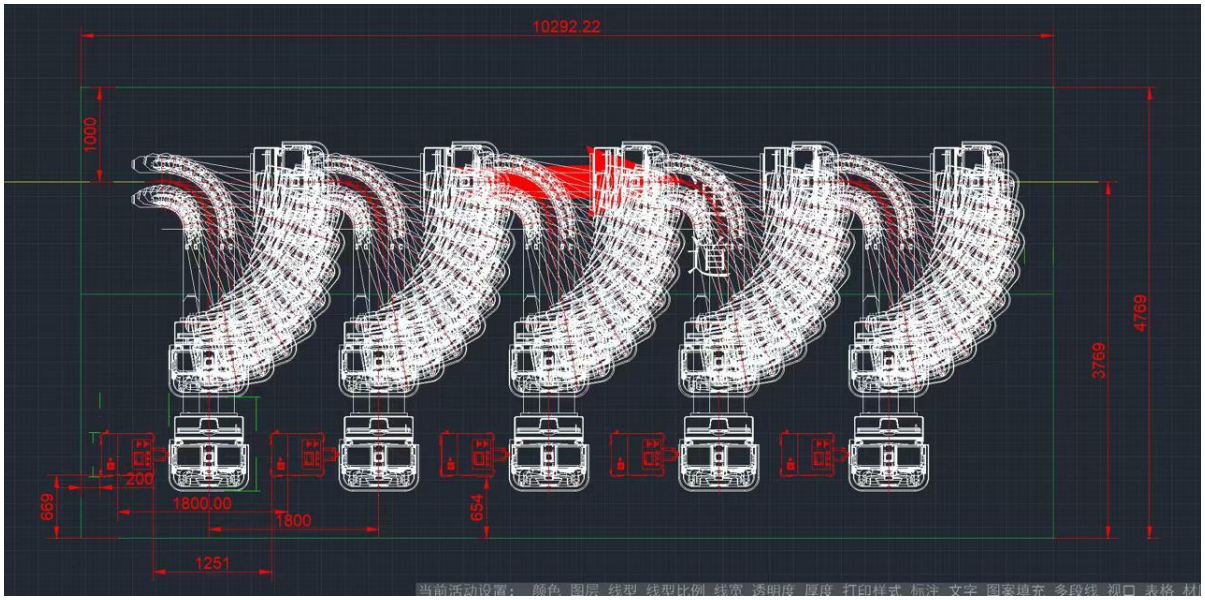

EP EQUIPMENT EUROPE
Schanzenstraße 35, 51063 Köln, Germany | VAT DE352494619
sales@ep-equipment.eu
+49 32 212239500
www.ep-ep.com