1. 1. Open the Codesys software and install the corresponding PLC manufacturer's library files and description files (this step can be referenced in the PLC manufacturer's setup guide).
2. The installation of our EDS joint motor module is shown in the following figure.
   Tools > Device Repository > Install > Select our EDS file > Open > Close

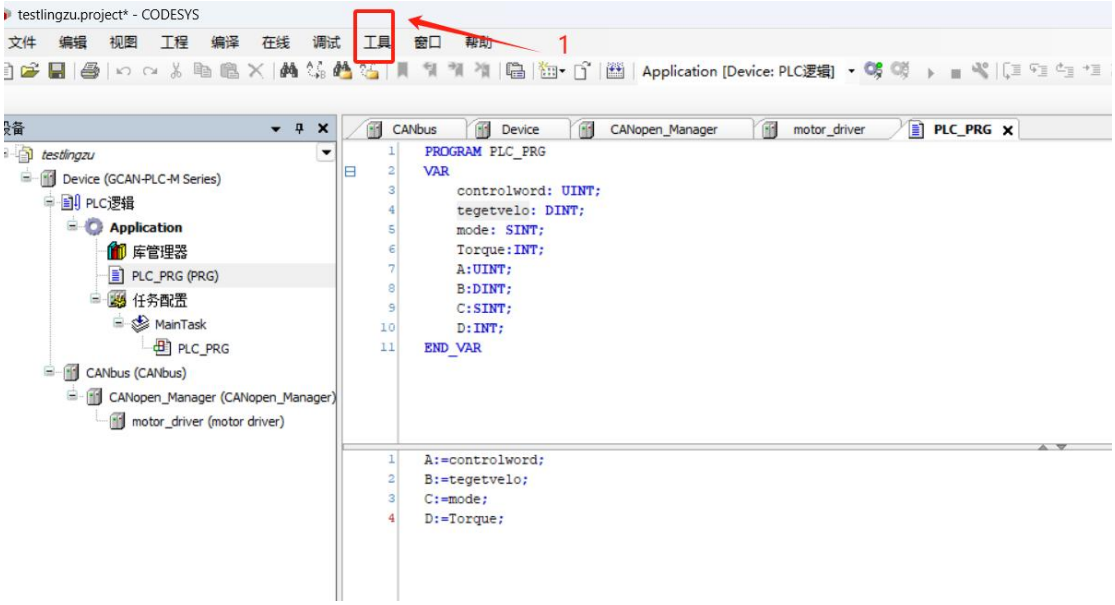

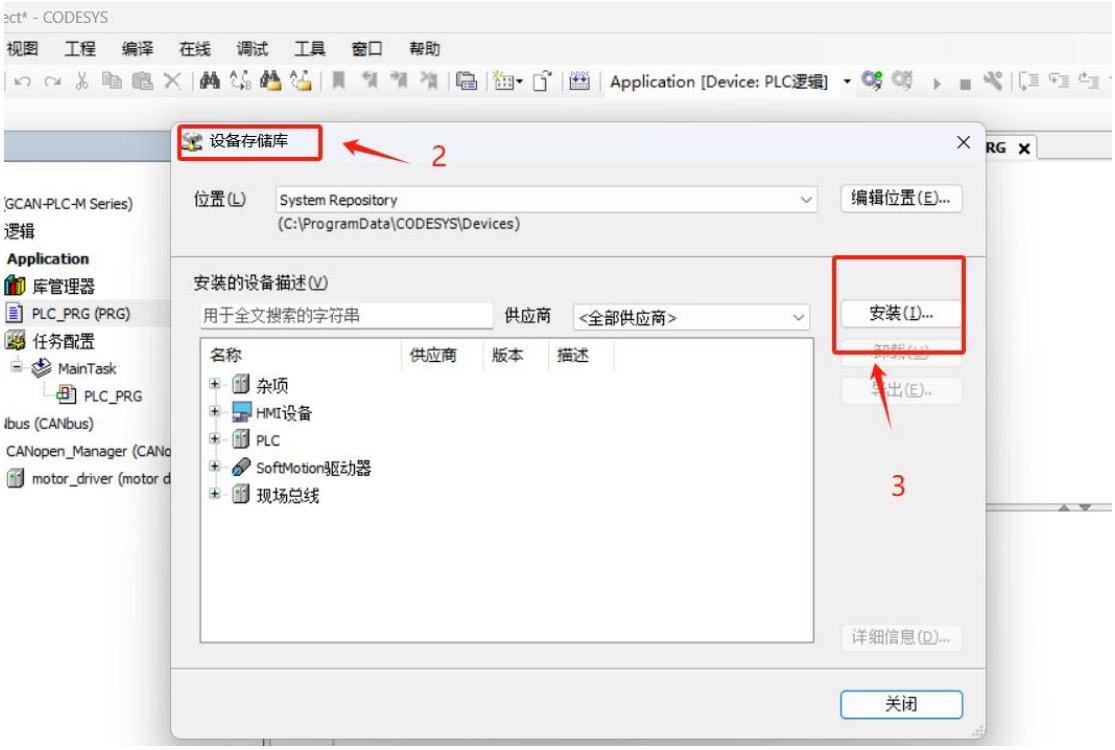

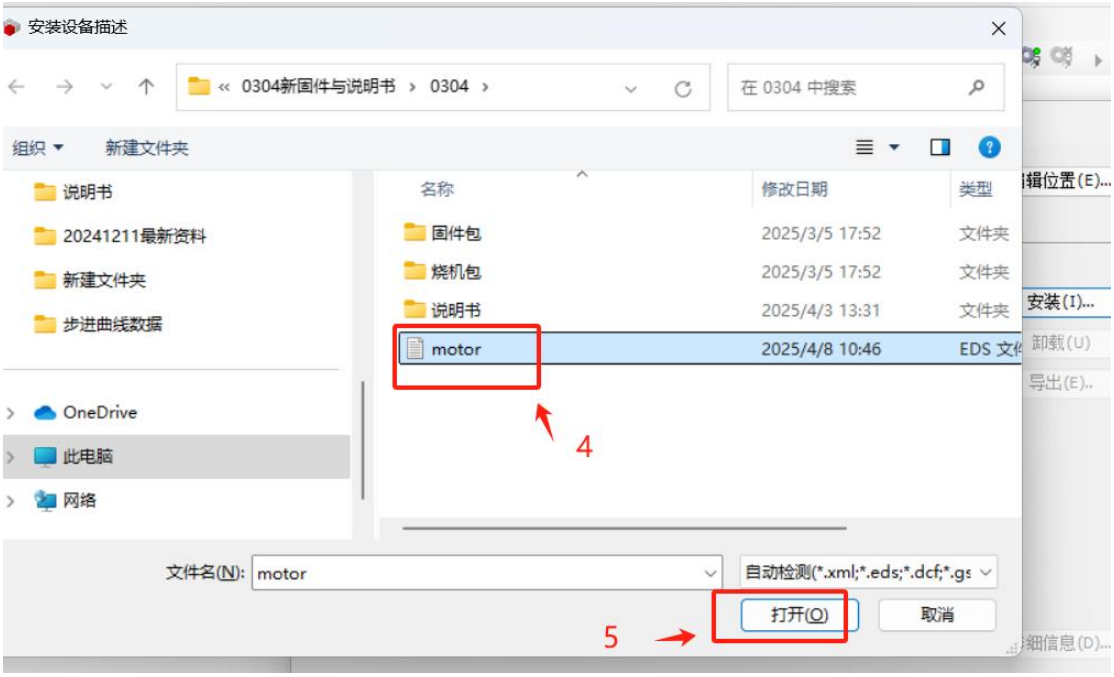

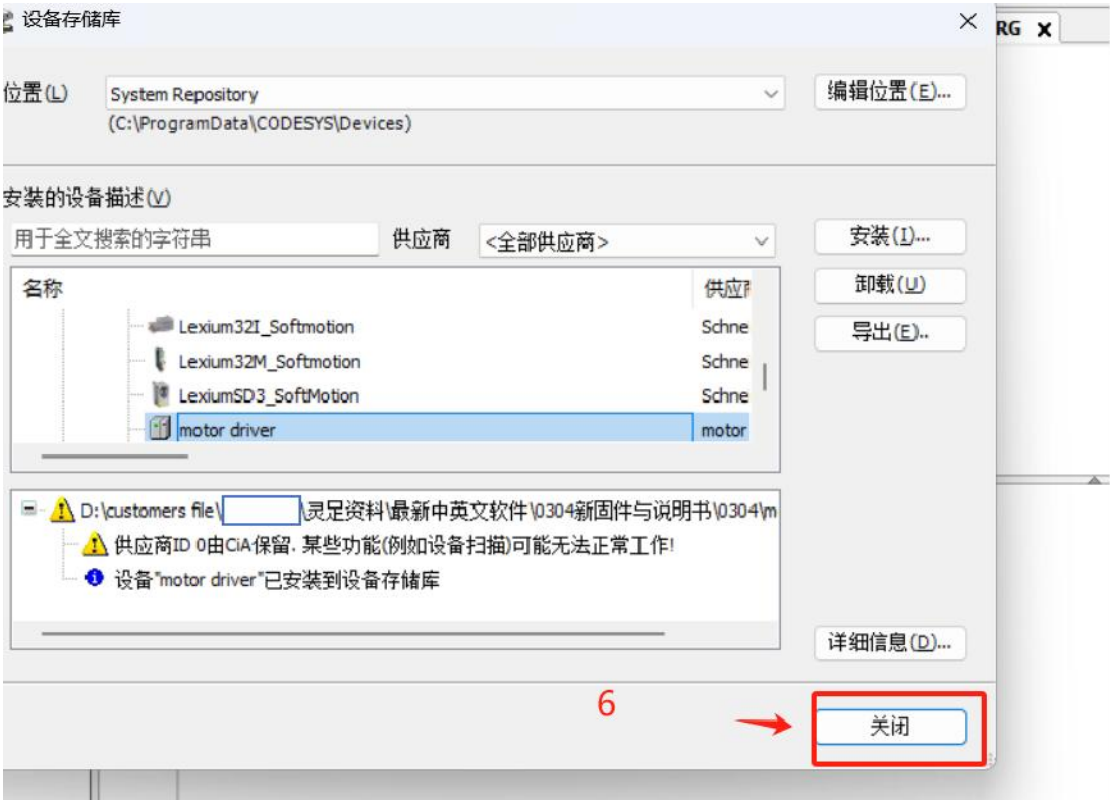

3. Build a CANopen bus network.

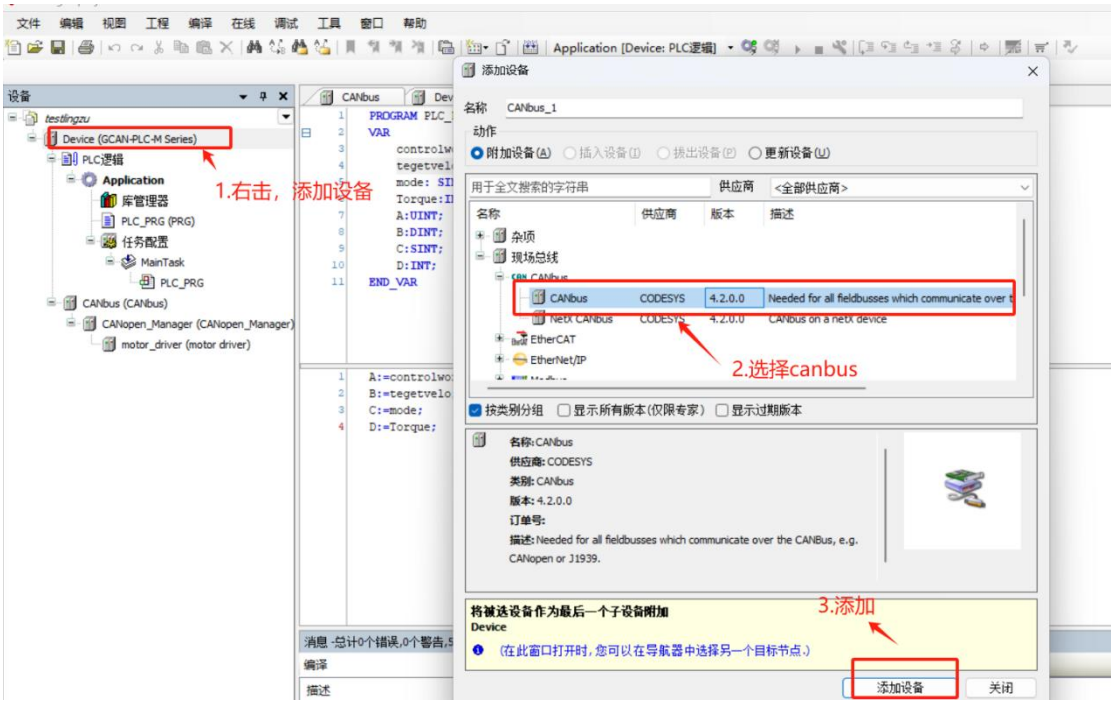
1.右击，添加设备
2.选择canbus
3.添加

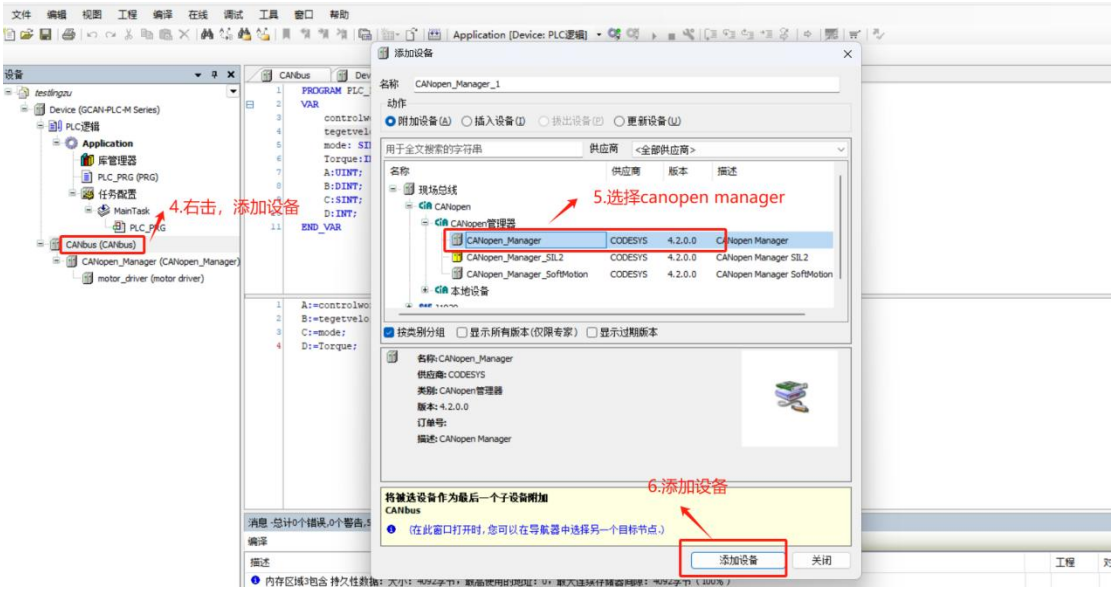
4.右击，添加设备
5.选择canopen manager
6.添加设备

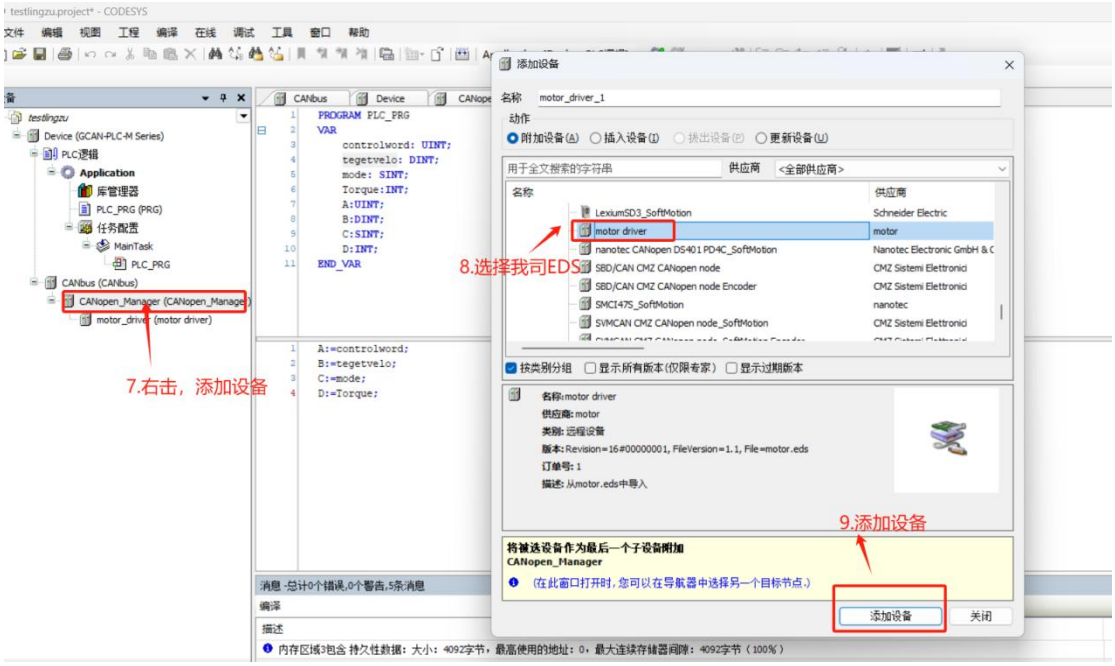
7.右击，添加设备
8.选择我司EDS
9.添加设备

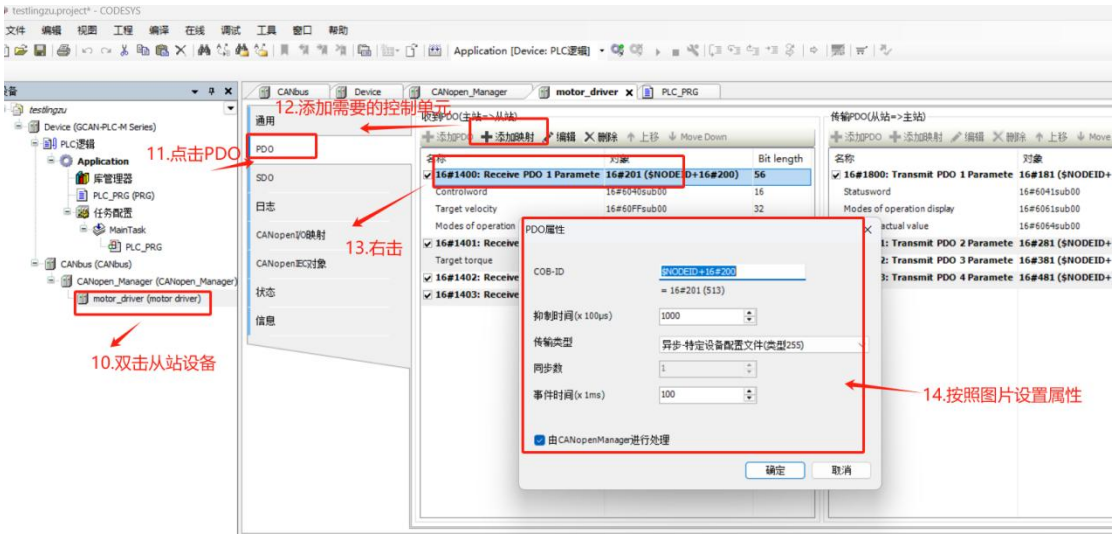
10.双击从站设备
11.点击PDO
12.添加需要的控制单元
13.右击
14.按照图片设置属性

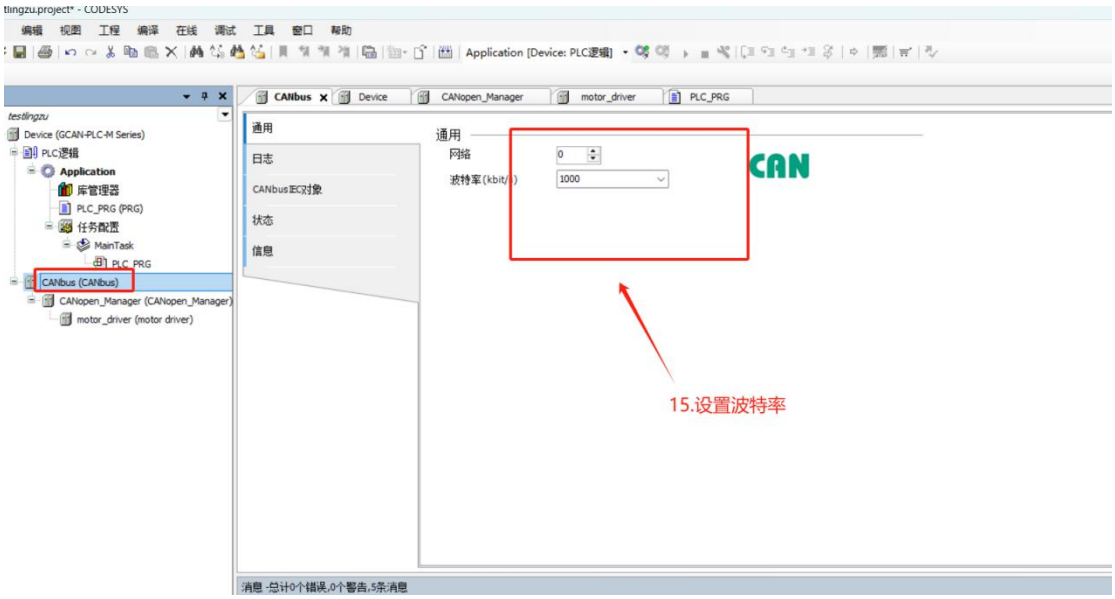

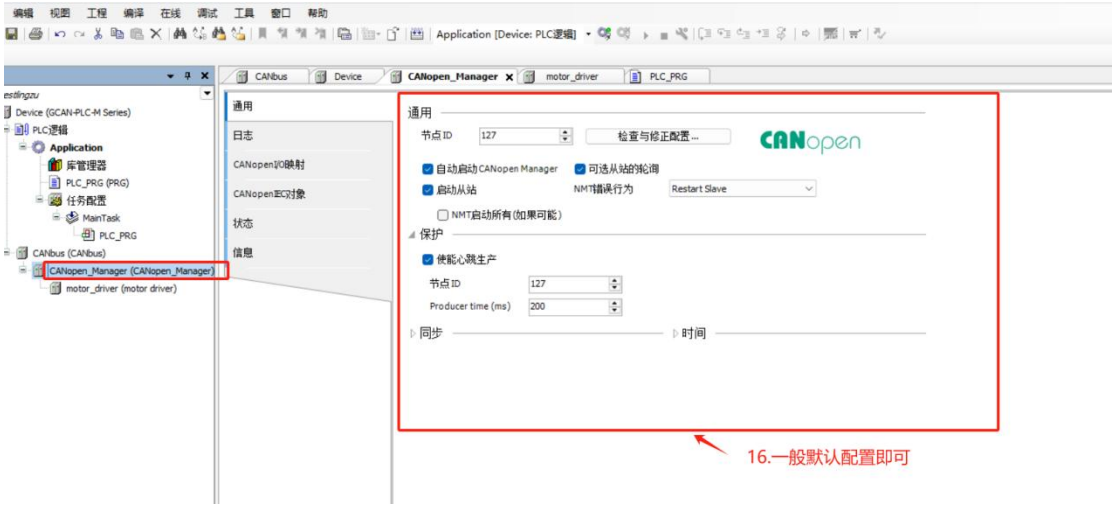

4. Create a program and connect variables.

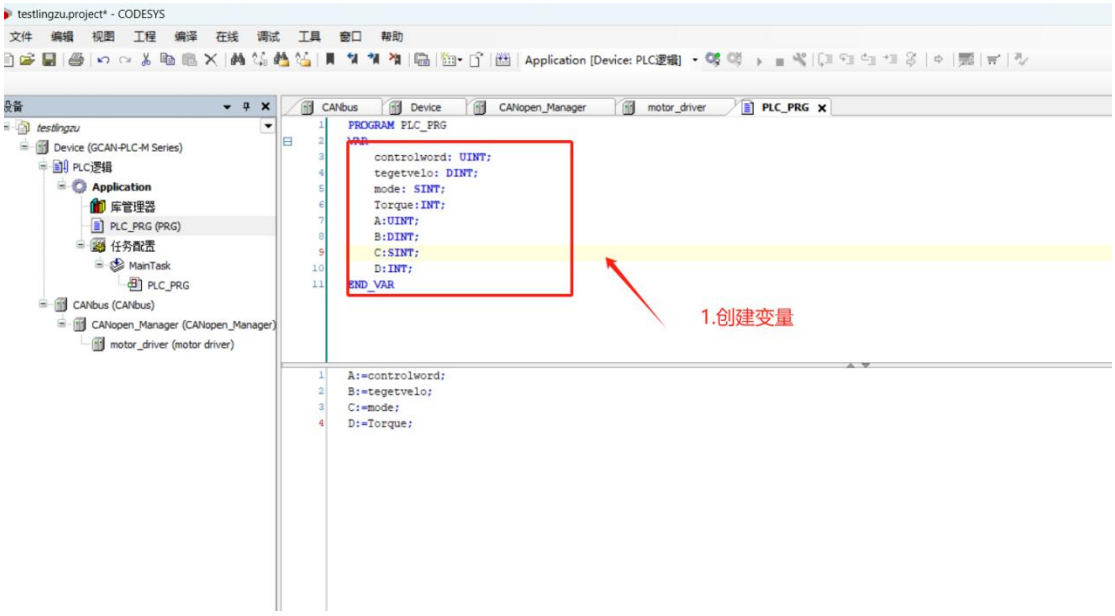

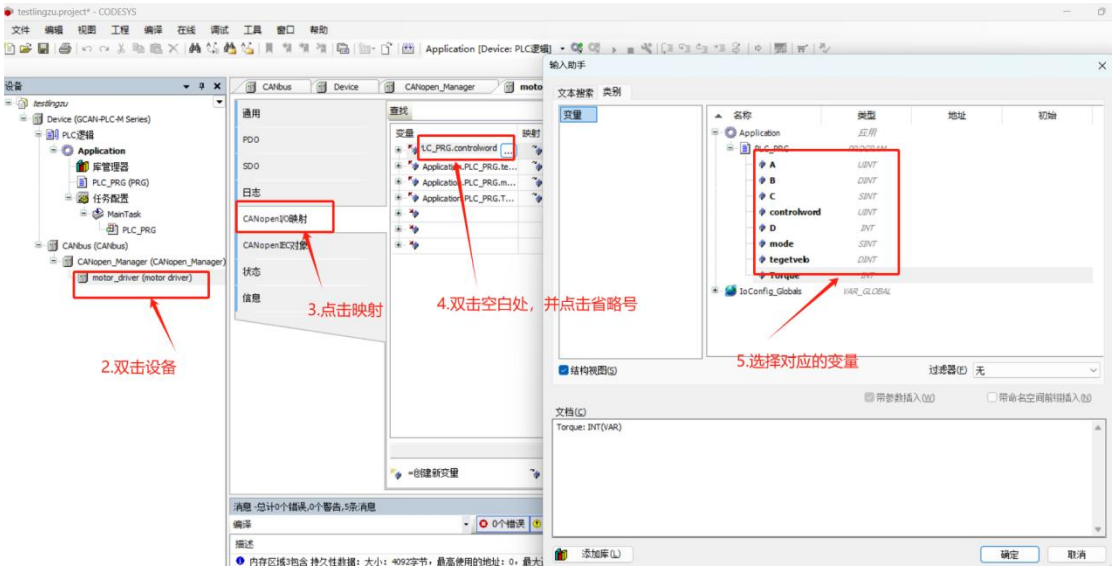

5. Use the speed mode to control the motor rotation.

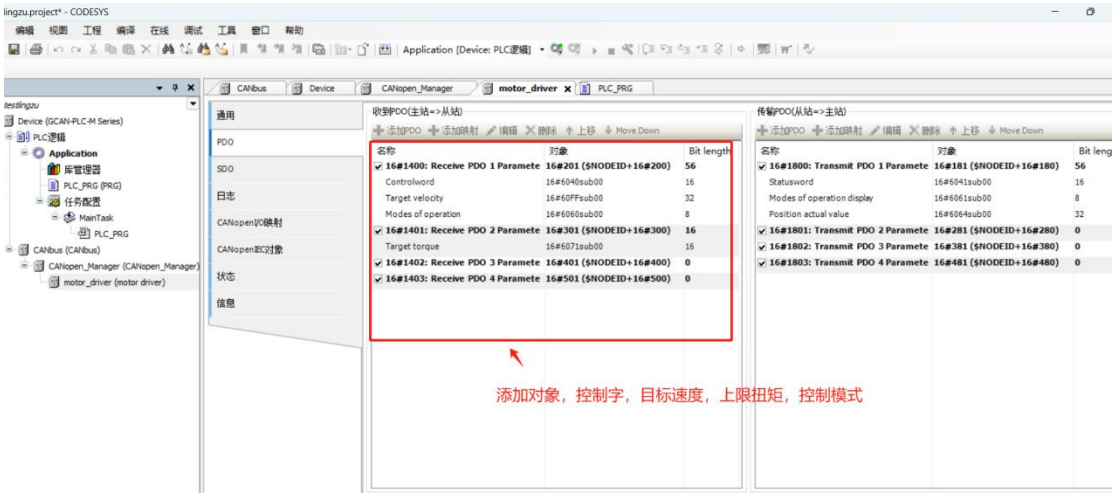

Control steps
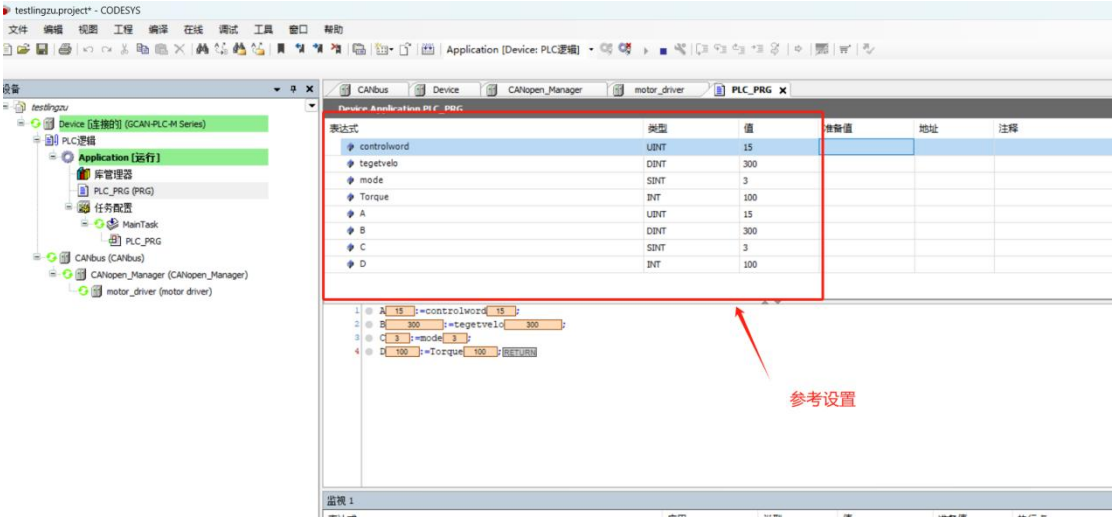
1) Set control mode 3, speed mode
2) Set the upper limit torque to 100 (equivalent to 10% of the rated torque).
3) Set control word， 15
4) Set the target speed to 300 (equivalent to 30 RPM).