Blocks

Set Wheel Speed

Sets the Beagle's wheel speed.
If the wheel speed is positive, the wheel rotates forward, and if the wheel speed is negative, the wheel rotates backward.
For example, if the wheel speed is 100, it rotates forward at a speed of 100,
and if the wheel speed is -100, it rotates backward at a speed of 100.
Once the wheel speed is set, the Beagle will keep moving at that speed until you set the wheel speed again.

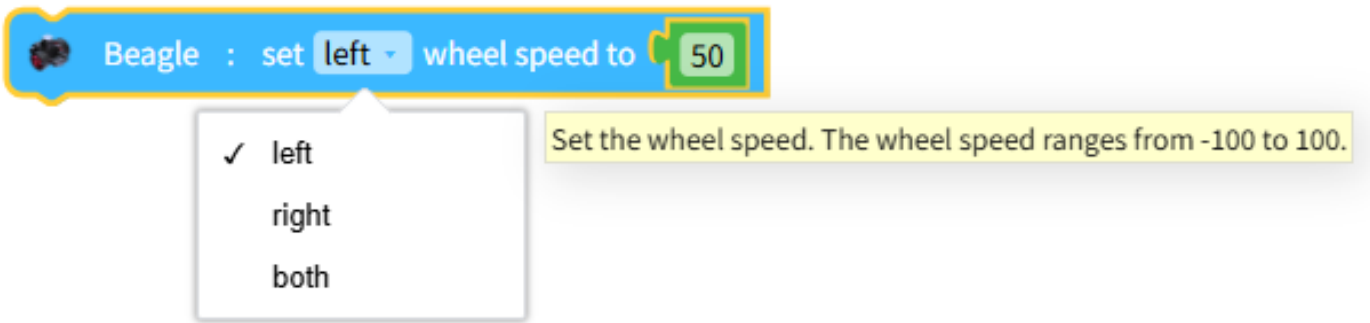

Dropdown Options and Input Values

Name	Type	Description	Range / Type
wheel	Dropdown Option	Wheel type	left, right, both
speed	Input	Wheel speed	Integer -100 ~ 100, 0: Stop

JavaScript Code

```
// Set left wheel speed to 100
if($('Beagle*0:wheel.move').d != 0) {
    $('Beagle*0:wheel.move').d = 0;
}
$('Beagle*0:wheel.speed.left').d = __getSpeed('Beagle*0', 100);

// Set right wheel speed to -100
if($('Beagle*0:wheel.move').d != 0) {
```

```
    $('Beagle*0:wheel.move').d = 0;
}
$('Beagle*0:wheel.speed.right').d = __getSpeed('Beagle*0', -100);

// Set both wheel speeds to 100
if($('Beagle*0:wheel.move').d != 0) {
    $('Beagle*0:wheel.move').d = 0;
}
$('Beagle*0:wheel.speed.left').d = __getSpeed('Beagle*0', 100);
$('Beagle*0:wheel.speed.right').d = __getSpeed('Beagle*0', 100);
```

Python Code

```
# Set left wheel speed to 100
if __('Beagle*0:wheel.move').d != 0:
    __('Beagle*0:wheel.move').d = 0
__('Beagle*0:wheel.speed.left').d = __getSpeed('Beagle*0', 100)

# Set right wheel speed to -100
if __('Beagle*0:wheel.move').d != 0:
    __('Beagle*0:wheel.move').d = 0
__('Beagle*0:wheel.speed.right').d = __getSpeed('Beagle*0', -100)

# Set both wheel speeds to 100
if __('Beagle*0:wheel.move').d != 0:
    __('Beagle*0:wheel.move').d = 0
__('Beagle*0:wheel.speed.left').d = __getSpeed('Beagle*0', 100)
__('Beagle*0:wheel.speed.right').d = __getSpeed('Beagle*0', 100)
```

Move by Distance

Sets the distance for the Beagle to move.

If the wheel speed is not set, it will not move.

If the distance value is 0, it will keep moving without stopping at the currently set wheel speed.

If wait is checked, it waits until the movement is completed.

However, if wait is checked, it can only be used inside an async function.

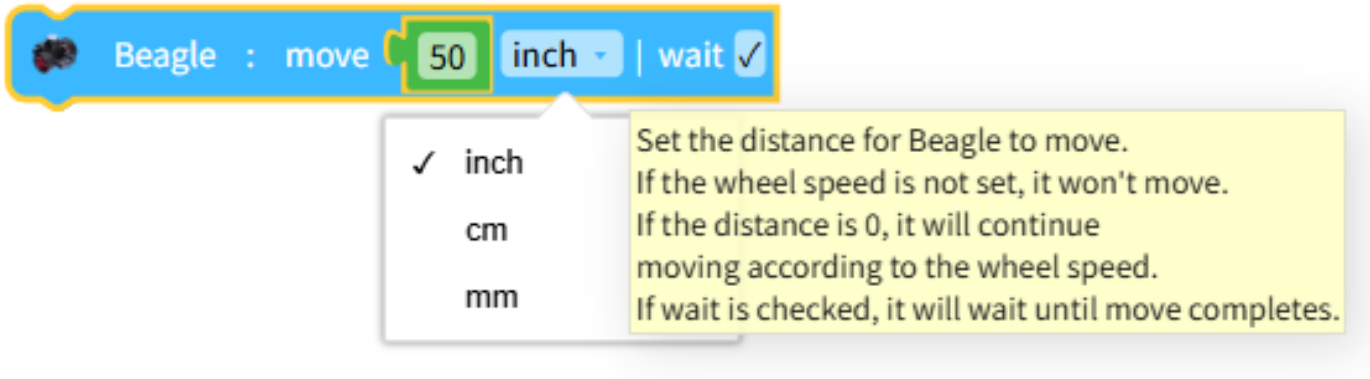

Dropdown Options and Input Values

Name	Type	Description	Range / Type
distance	Input	Distance value	Real number □ 0
unit	Dropdown Option	Distance unit	cm, mm, inch

JavaScript Code

```javascript
// Move 50cm | Wait O
$('Beagle*0:wheel.move').d = __getDistance('Beagle*0', 50, 'cm');
await $('Beagle*0:wheel.!move').w();

// Move 50mm | Wait X
$('Beagle*0:wheel.move').d = __getDistance('Beagle*0', 50, 'mm');

// Move 50inch | Wait X
$('Beagle*0:wheel.move').d = __getDistance('Beagle*0', 50, 'inch');
```

Python Code

```python
# Move 50cm | Wait O
__('Beagle*0:wheel.move').d = __getDistance('Beagle*0', 50, 'cm')
await __('Beagle*0:wheel.!move').w()
```

```
# Move 50mm | Wait X
__('Beagle*0:wheel.move').d = __getDistance('Beagle*0', 50, 'mm')

# Move 50inch | Wait X
__('Beagle*0:wheel.move').d = __getDistance('Beagle*0', 50, 'inch')
```

Move by Time

Sets the time for the Beagle to move.

If the wheel speed is not set, it will not move.

If wait is checked, it waits until the movement is completed.

However, if wait is checked, it can only be used inside an async function.

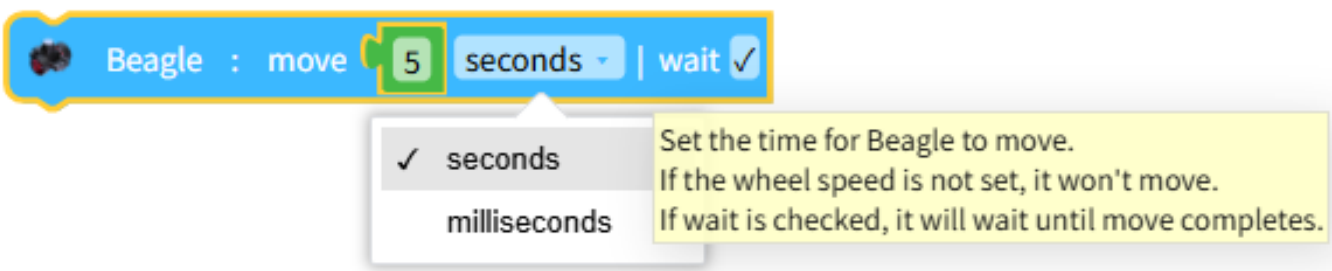

Dropdown Options and Input Values

Name	Type	Description	Range / Type
time	Input	Time value	Real number □ 0
unit	Dropdown Option	Time unit	seconds, milliseconds

If the option is set to milliseconds, the entered value is the time value divided by 1000.

JavaScript Code

```
// Move for 5 seconds | Wait O
await __stopAfterDelay('Beagle*0', 5, true);
```

```
// Move for 5 milliseconds | Wait X
__stopAfterDelay('Beagle*0', 0.005, false);
```

Python Code

```
# Move for 5 seconds | Wait O
await __stopAfterDelay('Beagle*0', 5, True)

# Move for 5 milliseconds | Wait X
__stopAfterDelay('Beagle*0', 0.005, False)
```

Turn in Place

Sets the direction and angle for the Beagle to rotate in place.

If wait is checked, it waits until the movement is completed.

However, if wait is checked, it can only be used inside an async function.

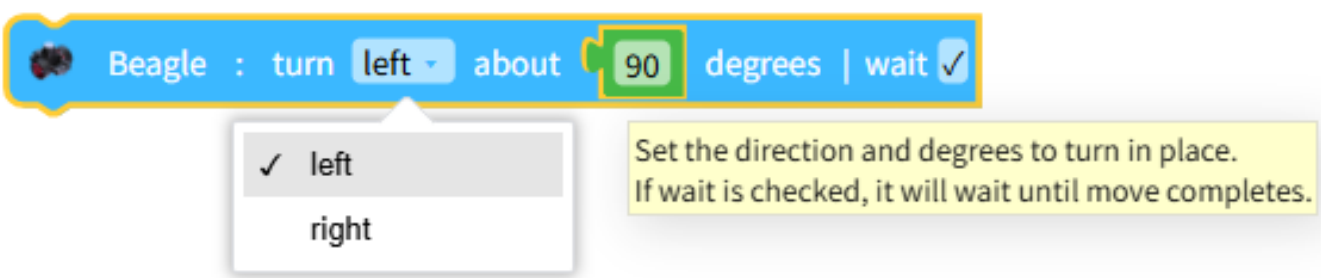

Dropdown Options and Input Values

Name	Type	Description	Range / Type
direction	Dropdown Option	Turn direction	left, right
degree	Input	Turn angle	Integer □ 0

JavaScript Code

```
// Turn in place 90 degrees to the left | Wait O
await __turn_degree_left('Beagle*0', 90, true);
```

```
// Turn in place 270 degrees to the right | Wait X
__turn_degree_right('Beagle*0', 270, false);
```

Python Code

```
# Turn in place 90 degrees to the left | Wait O
await __turn_degree_left('Beagle*0', 90, True)

# Turn in place 270 degrees to the right | Wait X
__turn_degree_right('Beagle*0', 270, False)
```

Change Wheel Speed

Changes the Beagle's wheel speed.

The new wheel speed is the current wheel speed plus the entered value.

The range of the newly set wheel speed is clamped to -100 ~ 100.

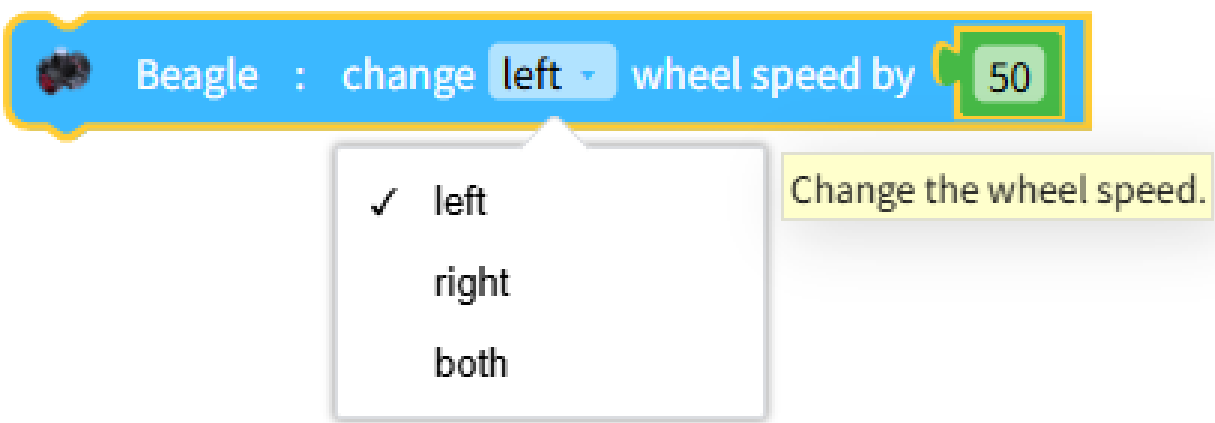

Dropdown Options and Input Values

Name	Type	Description	Range / Type
wheel	Dropdown Option	Wheel type	left, right, both
speed	Input	Value to add to the current wheel speed	Integer -200 ~ 200

JavaScript Code

```
// Change left wheel speed by 50
if($('Beagle*0:wheel.move').d != 0) {
    $('Beagle*0:wheel.move').d = 0;
}
$('Beagle*0:wheel.speed.left').d = $('Beagle*0:wheel.speed.left').d +
__getSpeed('Beagle*0', 50);

// Change right wheel speed by 40
if($('Beagle*0:wheel.move').d != 0) {
    $('Beagle*0:wheel.move').d = 0;
}
$('Beagle*0:wheel.speed.right').d = $('Beagle*0:wheel.speed.right').d +
__getSpeed('Beagle*0', 40);

// Change both wheel speeds by 30
if($('Beagle*0:wheel.move').d != 0) {
    $('Beagle*0:wheel.move').d = 0;
}
$('Beagle*0:wheel.speed.left').d = $('Beagle*0:wheel.speed.left').d +
__getSpeed('Beagle*0', 30);
$('Beagle*0:wheel.speed.right').d = $('Beagle*0:wheel.speed.right').d +
__getSpeed('Beagle*0', 30);
```

Python Code

```
# Change left wheel speed by 50
if __('Beagle*0:wheel.move').d != 0:
    __('Beagle*0:wheel.move').d = 0
__('Beagle*0:wheel.speed.left').d = __('Beagle*0:wheel.speed.left').d +
__getSpeed('Beagle*0', 50)

# Change right wheel speed by 40
```

```python
if __('Beagle*0:wheel.move').d != 0:
    __('Beagle*0:wheel.move').d = 0
__('Beagle*0:wheel.speed.right').d = __('Beagle*0:wheel.speed.right').d +
__getSpeed('Beagle*0', 40)

# Change both wheel speeds by 30
if __('Beagle*0:wheel.move').d != 0:
    __('Beagle*0:wheel.move').d = 0
__('Beagle*0:wheel.speed.left').d = __('Beagle*0:wheel.speed.left').d +
__getSpeed('Beagle*0', 30)
__('Beagle*0:wheel.speed.right').d = __('Beagle*0:wheel.speed.right').d +
__getSpeed('Beagle*0', 30)
```

Stop

Stops the Beagle's movement.

Both wheel speeds are reset to 0.

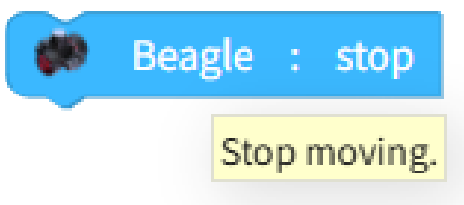

JavaScript Code

```javascript
__stopMove('Beagle*0');
```

Python Code

```python
__stopMove('Beagle*0')
```

Are the Wheels Moving?

Returns whether the Beagle's wheels are moving as **True (1) / False (0)**.

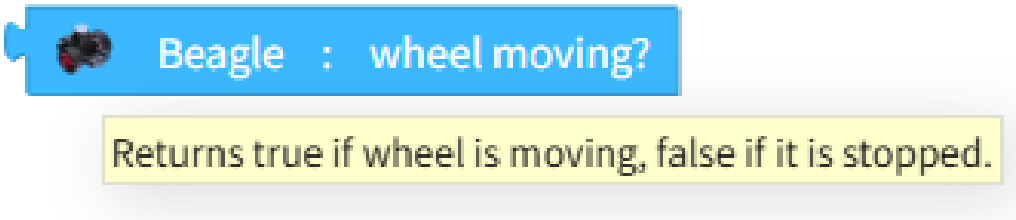

JavaScript Code

```
$('Beagle*0:wheel.speed.left').d !== 0 || $('Beagle*0:wheel.speed.right').d !== 0
```

Python Code

```
__('Beagle*0:wheel.speed.left').d != 0 or __('Beagle*0:wheel.speed.right').d != 0
```

Set Buzzer Sound

Sets the Beagle's buzzer to the specified frequency.

The frequency range is 10 Hz to 4200 Hz.

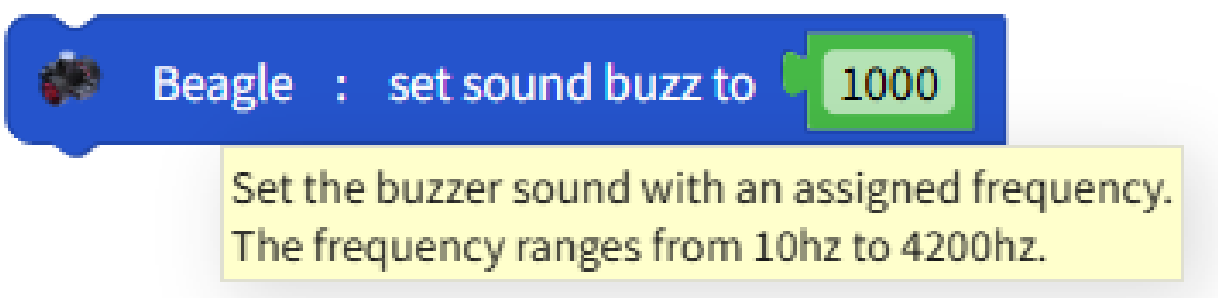

Dropdown Options and Input Values

Name	Type	Description	Range / Type
sound	Input	Buzzer frequency	10 ~ 4200 (Hz)

JavaScript Code

```
// Set buzzer frequency to 4200Hz
__stopSound('Beagle*0');
$('Beagle*0:sound.buzz').d = 4200;
```

Python Code

```
# Set buzzer frequency to 4200Hz
__stopSound('Beagle*0')
__('Beagle*0:sound.buzz').d = 4200
```

Play a Note

Plays the specified musical note on the Beagle.

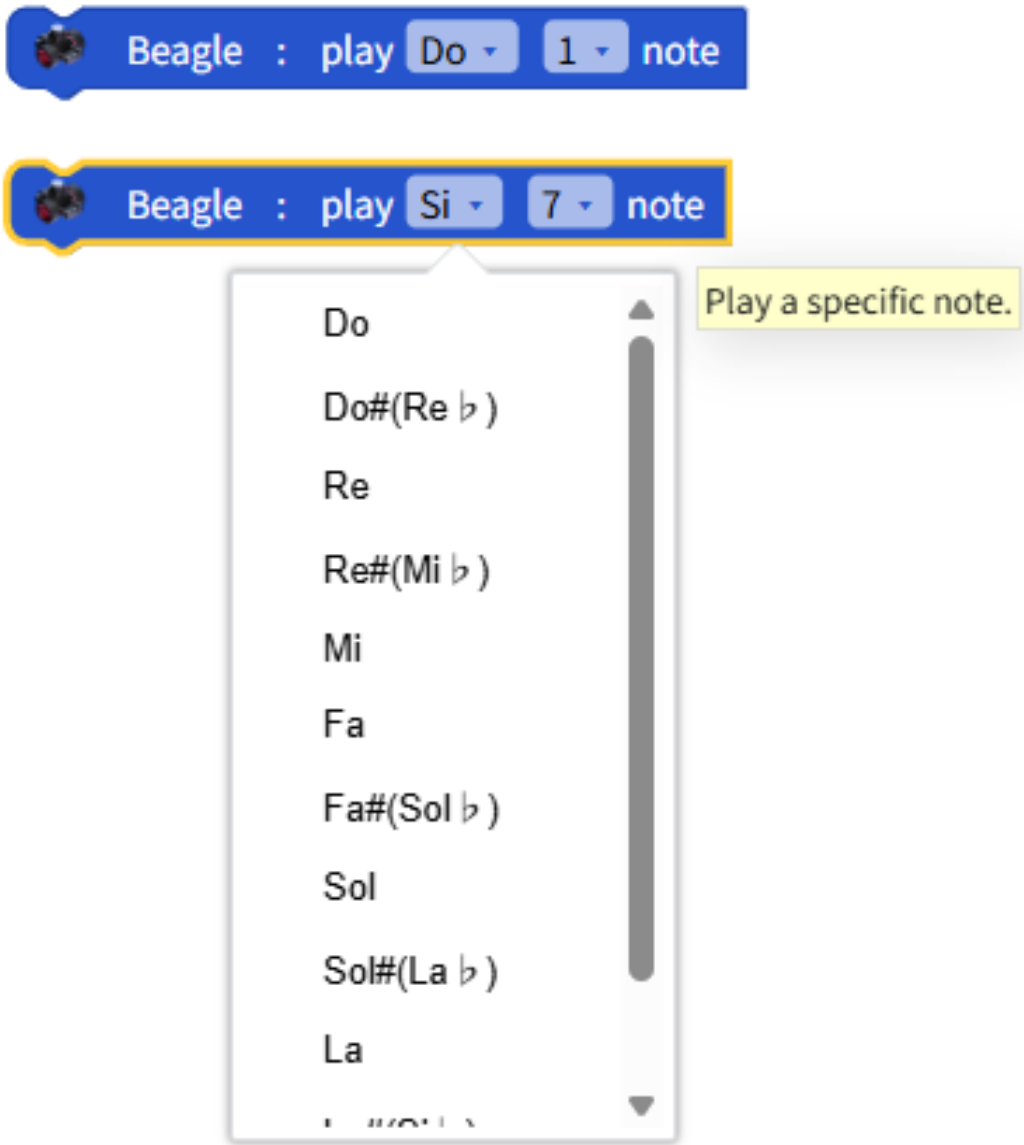

Dropdown Options and Input Values

Name	Type	Description	Range / Type
note	Dropdown Option	Note	Do, Do#, Re, Re#, Mi, Fa, Fa#, So, So#, La, La#, Si
octave	Dropdown Option	Octave	1 ~ 7

JavaScript Code

```
// Play Do in octave 1
__stopSound('Beagle*0');
```

```
$('Beagle*0:sound.note').d = 4;

// Play Re in octave 1
__stopSound('Beagle*0');
$('Beagle*0:sound.note').d = 6;

// Play Do in octave 2
__stopSound('Beagle*0');
$('Beagle*0:sound.note').d = 16;

// Play Si in octave 7
__stopSound('Beagle*0');
$('Beagle*0:sound.note').d = 87;
```

Python Code

```
# Play Do in octave 1
__stopSound('Beagle*0')
__('Beagle*0:sound.note').d = 4

# Play Re in octave 1
__stopSound('Beagle*0')
__('Beagle*0:sound.note').d = 6

# Play Do in octave 2
__stopSound('Beagle*0')
__('Beagle*0:sound.note').d = 16

# Play Si in octave 7
__stopSound('Beagle*0')
__('Beagle*0:sound.note').d = 87
```

Play Sound Clip

Plays a specific sound clip on the Beagle.

If wait is checked, it waits until playback is completed.

However, if wait is checked, it can only be used inside an async function.

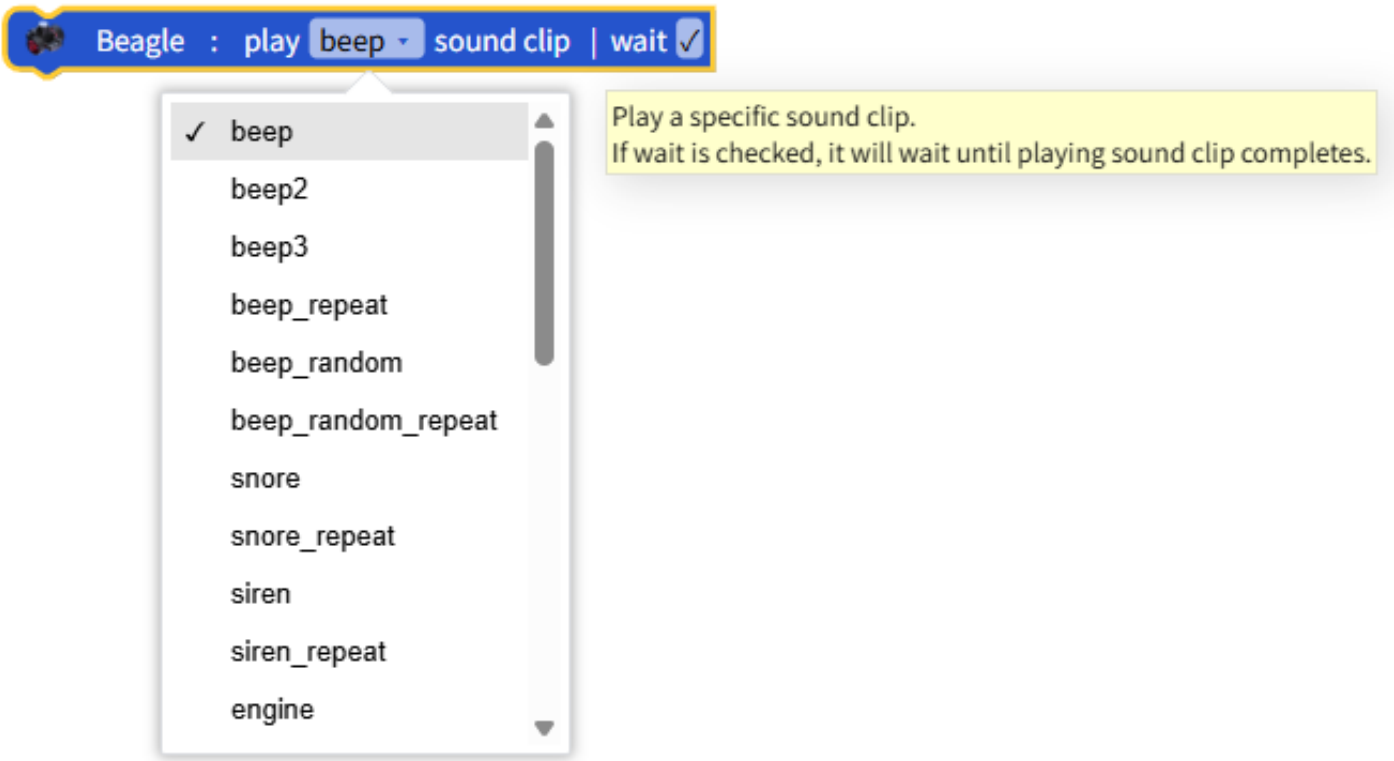

Dropdown Options and Input Values

Name	Type	Description	Range / Type
sound_clip	Dropdown Option	Sound clip	beep(1), beep2(2), beep3(3), beep_repeat(4), beep_random(5), beep_random_repeat(6), snore(7), snore_repeat(8), siren(9), siren_repeat(10), engine(11), engine_repeat(12), fart_a(13), fart_b(14), noise(15), noise_repeat(16), whistle(17), chop_chop(18), chop_chop_repeat(19), r2d2(32), dibidibidip(33), simple_melody(35), happy(48), angry(49), sad(50), sleep(51), march(52), birthday(53)

JavaScript Code

```
// Play dibidibidip | Wait O
__stopSound('Beagle*0');
$('Beagle*0:sound.clip').d = 33;
await $('Beagle*0:sound.!clip').w();

// Play happy | Wait X
__stopSound('Beagle*0');
```

```
$('Beagle*0:sound.clip').d = 48;
```

Python Code

```
# Play dibidibidip | Wait O
__stopSound('Beagle*0')
__('Beagle*0:sound.clip').d = 33
await __('Beagle*0:sound.!clip').w()

# Play happy | Wait X
__stopSound('Beagle*0')
__('Beagle*0:sound.clip').d = 48
```

Turn Off Sound

Turns off the Beagle's sound.

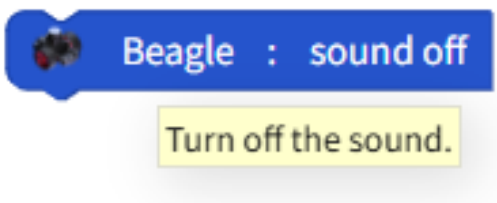

JavaScript Code

```
// Turn off Beagle sound
__stopSound('Beagle*0');
```

Python Code

```
# Turn off Beagle sound
__stopSound('Beagle*0')
```

Is Sound Playing?

Returns whether the Beagle's sound is currently playing as **True (1) / False (0)**.

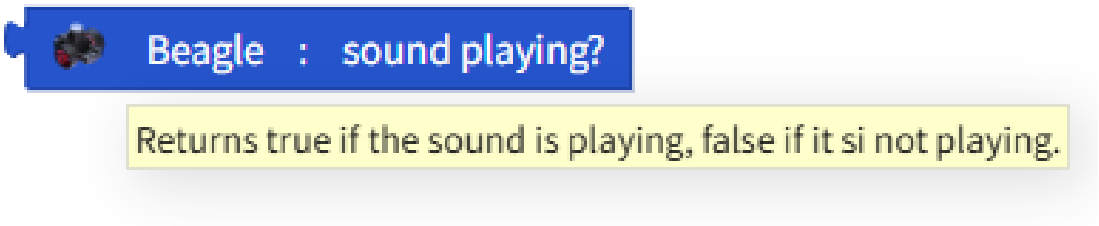

JavaScript Code

```
// Is Beagle sound playing? - true if playing, false otherwise
$('Beagle*0:sound.playing').d;
```

Python Code

```
# Is Beagle sound playing? - True if playing, False otherwise
__('Beagle*0:sound.playing').d
```

Wheel Speed Value

Gets the set wheel speed value of the Beagle.

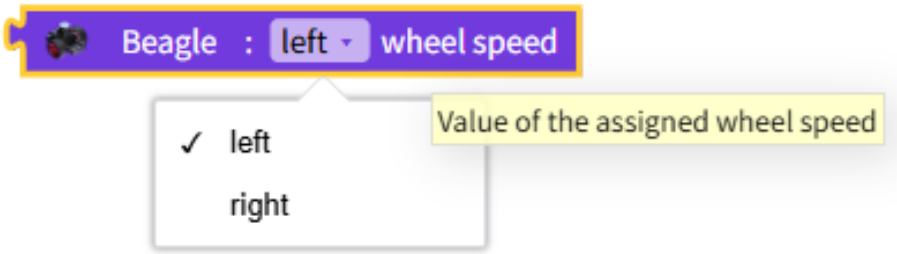

Dropdown Options and Input Values

Name	Type	Description	Range / Type
direction	Dropdown Option	Direction	left, right

JavaScript Code

```
// Left wheel speed
__getSpeedInput('Beagle*0', $('Beagle*0:wheel.speed.left').d);

// Right wheel speed
__getSpeedInput('Beagle*0', $('Beagle*0:wheel.speed.right').d);
```

Python Code

```
# Left wheel speed
__getSpeedInput('Beagle*0', __('Beagle*0:wheel.speed.left').d)

# Right wheel speed
__getSpeedInput('Beagle*0', __('Beagle*0:wheel.speed.right').d)
```

Encoder Value

Gets the encoder value of the specified Beagle wheel.

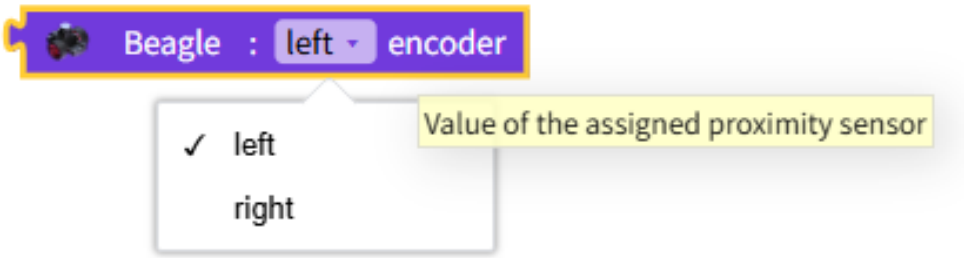

Dropdown Options and Input Values

Name	Type	Description	Range / Type
direction	Dropdown Option	Direction	left, right

JavaScript Code

```
// Left wheel encoder value
$('Beagle*0:encoder.left').d;

// Right wheel encoder value
$('Beagle*0:encoder.right').d;
```

Python Code

```
# Left wheel encoder value
__('Beagle*0:encoder.left').d

# Right wheel encoder value
__('Beagle*0:encoder.right').d
```

Gyroscope Value

Gets the gyroscope sensor value on a specific axis of the Beagle.

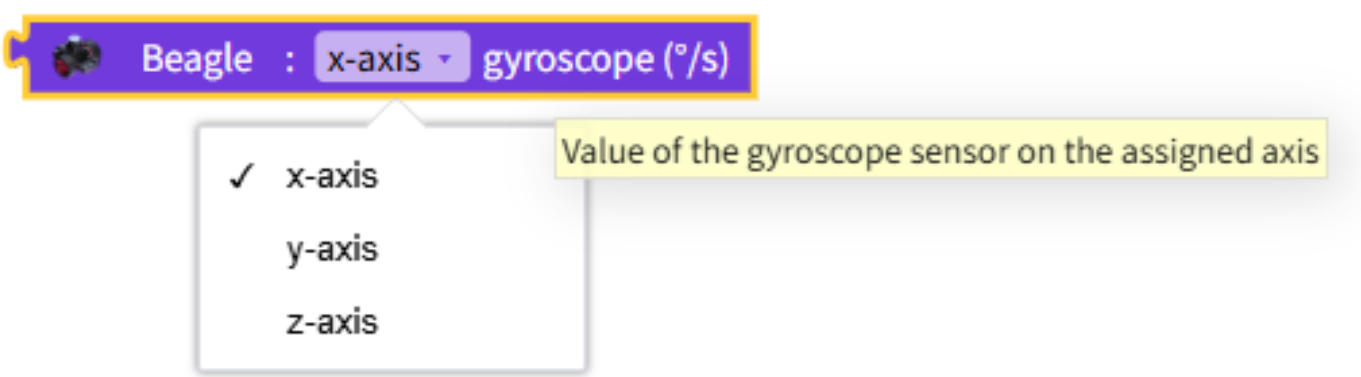

Dropdown Options and Input Values

Name	Type	Description	Range / Type
axis	Dropdown Option	Axis	x, y, z

JavaScript Code

```
// Gyroscope x-axis
$('Beagle*0:gyroscope.x').d;

// Gyroscope y-axis
$('Beagle*0:gyroscope.y').d;

// Gyroscope z-axis
$('Beagle*0:gyroscope.z').d;
```

Python Code

```
# Gyroscope x-axis
__('Beagle*0:gyroscope.x').d

# Gyroscope y-axis
__('Beagle*0:gyroscope.y').d

# Gyroscope z-axis
__('Beagle*0:gyroscope.z').d
```

Accelerometer Value

Gets the accelerometer sensor value on a specific axis of the Beagle.

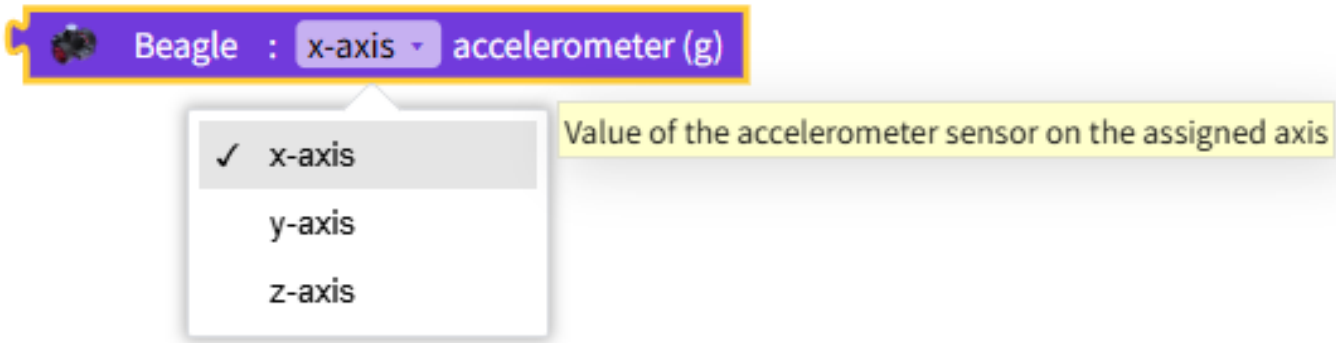

Dropdown Options and Input Values

Name	Type	Description	Range / Type
axis	Dropdown Option	Axis	x, y, z

JavaScript Code

```
// Accelerometer x-axis
$('Beagle*0:accelerometer.x').d;

// Accelerometer y-axis
$('Beagle*0:accelerometer.y').d;

// Accelerometer z-axis
$('Beagle*0:accelerometer.z').d;
```

Python Code

```
# Accelerometer x-axis
__('Beagle*0:accelerometer.x').d

# Accelerometer y-axis
__('Beagle*0:accelerometer.y').d

# Accelerometer z-axis
__('Beagle*0:accelerometer.z').d
```

Magnetometer Value

Gets the magnetometer sensor value on a specific axis of the Beagle.

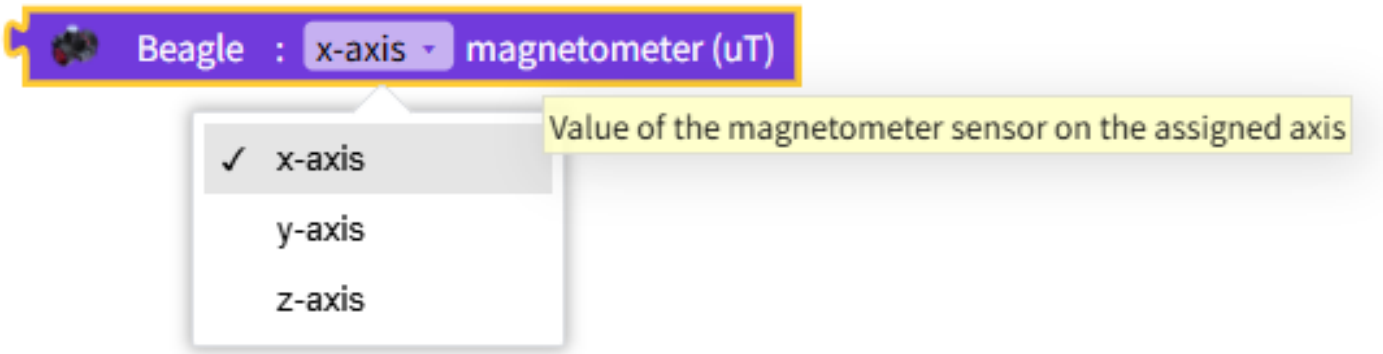

Dropdown Options and Input Values

Name	Type	Description	Range / Type
axis	Dropdown Option	Axis	x, y, z

JavaScript Code

```
// Magnetometer x-axis
$('Beagle*0:magnetometer.x').d;

// Magnetometer y-axis
$('Beagle*0:magnetometer.y').d;

// Magnetometer z-axis
$('Beagle*0:magnetometer.z').d;
```

Python Code

```
# Magnetometer x-axis
__('Beagle*0:magnetometer.x').d

# Magnetometer y-axis
__('Beagle*0:magnetometer.y').d

# Magnetometer z-axis
__('Beagle*0:magnetometer.z').d
```

Temperature Sensor Value

Gets the Beagle's temperature sensor value.

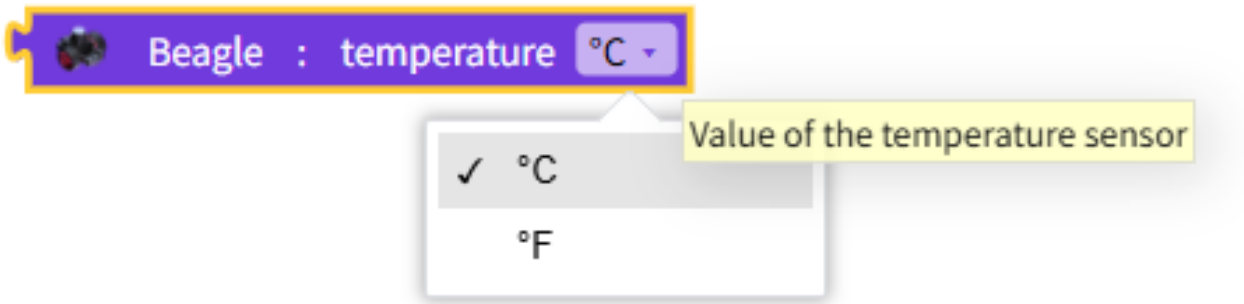

Dropdown Options and Input Values

Name	Type	Description	Range / Type
unit	Dropdown Option	Temperature unit	°C, °F

JavaScript Code

```
// Temperature sensor value in Celsius
__getTemperature($('Beagle*0:temperature').d, '°C');

// Temperature sensor value in Fahrenheit
__getTemperature($('Beagle*0:temperature').d, '°F');
```

Python Code

```
# Temperature sensor value in Celsius
__getTemperature(__('Beagle*0:temperature').d, '°C')

# Temperature sensor value in Fahrenheit
__getTemperature(__('Beagle*0:temperature').d, '°F')
```

Signal Strength Value

Gets the Beagle's signal strength value.

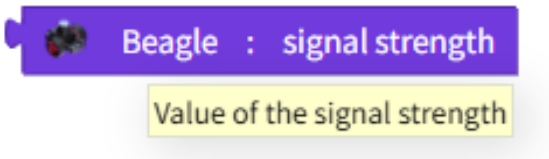

JavaScript Code

```
// Signal strength value
$('Beagle*0:signal_strength').d;
```

Python Code

```
# Signal strength value
__('Beagle*0:signal_strength').d
```

Battery Level Value

Gets the Beagle's battery level value.

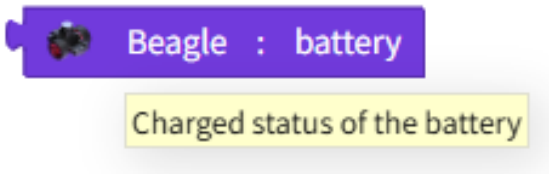

JavaScript Code

```
// Battery level value
$('Beagle*0:battery.level').d;
```

Python Code

```
# Battery level value
__('Beagle*0:battery.level').d
```

State Change Condition

Returns whether the Beagle's state condition is met as **True (1) / False (0)**.

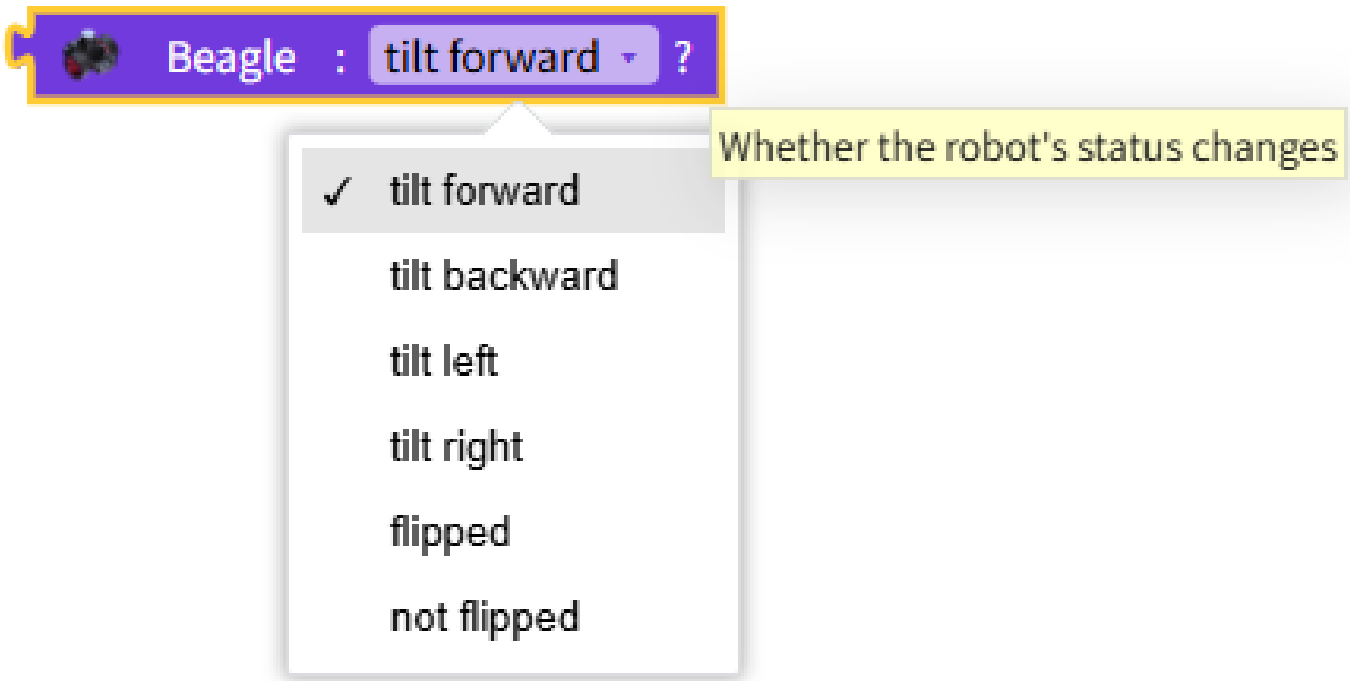

Dropdown Options and Input Values

Name	Type	Description	Range / Type
condition	Dropdown Option	Posture condition	tilt forward, tilt backward, tilt left, tilt right, Flipped, not flipped

JavaScript Code

```
// Is the Beagle tilted forward?
$('Beagle*0:accelerometer.x').d > 0.8;

// Is the Beagle tilted backward?
$('Beagle*0:accelerometer.x').d < -0.8;
```

```
// Is the Beagle tilted to the left?
$('Beagle*0:accelerometer.y').d > 0.8;

// Is the Beagle tilted to the right?
$('Beagle*0:accelerometer.y').d < -0.8;

// Is the Beagle flipped over?
$('Beagle*0:accelerometer.z').d > 0;

// Is the Beagle not flipped over?
$('Beagle*0:accelerometer.z').d < 0;
```

Python Code

```
# Is the Beagle tilted forward?
__('Beagle*0:accelerometer.x').d > 0.8

# Is the Beagle tilted backward?
__('Beagle*0:accelerometer.x').d < -0.8

# Is the Beagle tilted to the left?
__('Beagle*0:accelerometer.y').d > 0.8

# Is the Beagle tilted to the right?
__('Beagle*0:accelerometer.y').d < -0.8

# Is the Beagle flipped over?
__('Beagle*0:accelerometer.z').d > 0

# Is the Beagle not flipped over?
__('Beagle*0:accelerometer.z').d < 0
```

Set Servo Motor Speed

Sets the speed of the specified servo motor.

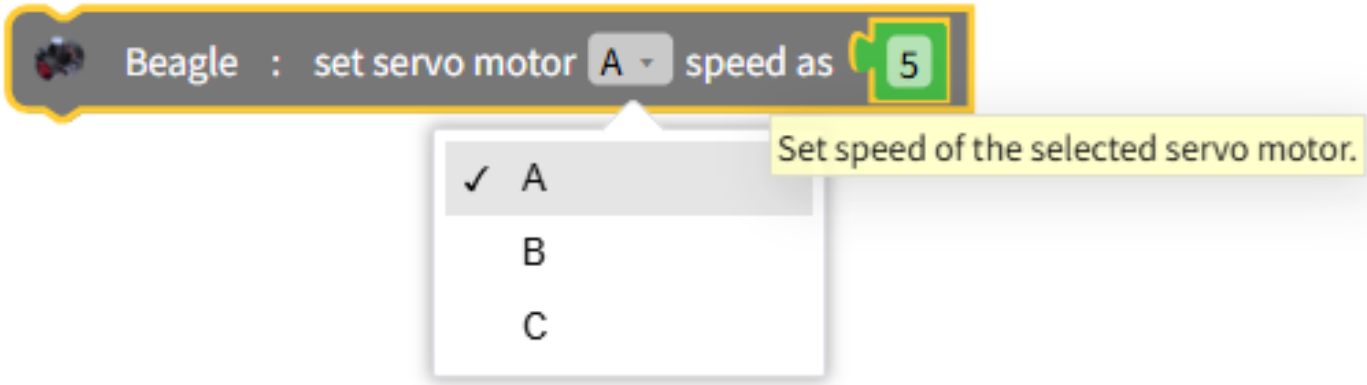

Dropdown Options and Input Values

Name	Type	Description	Range / Type
motor	Dropdown Option	Servo motor	A, B, C
speed	Input	Speed	Real number 0 ~ 10

JavaScript Code

```
// Set servo motor A speed to 1
$('Beagle*0:servo.a.speed').d = 1;

// Set servo motor B speed to 10
$('Beagle*0:servo.b.speed').d = 10;

// Set servo motor C speed to 5.5
$('Beagle*0:servo.c.speed').d = 5.5;
```

Python Code

```
# Set servo motor A speed to 1
__('Beagle*0:servo.a.speed').d = 1
```

```
# Set servo motor B speed to 10
__('Beagle*0:servo.b.speed').d = 10

# Set servo motor C speed to 5.5
__('Beagle*0:servo.c.speed').d = 5.5
```

Set Servo Motor Angle

Sets the angle of the specified servo motor.

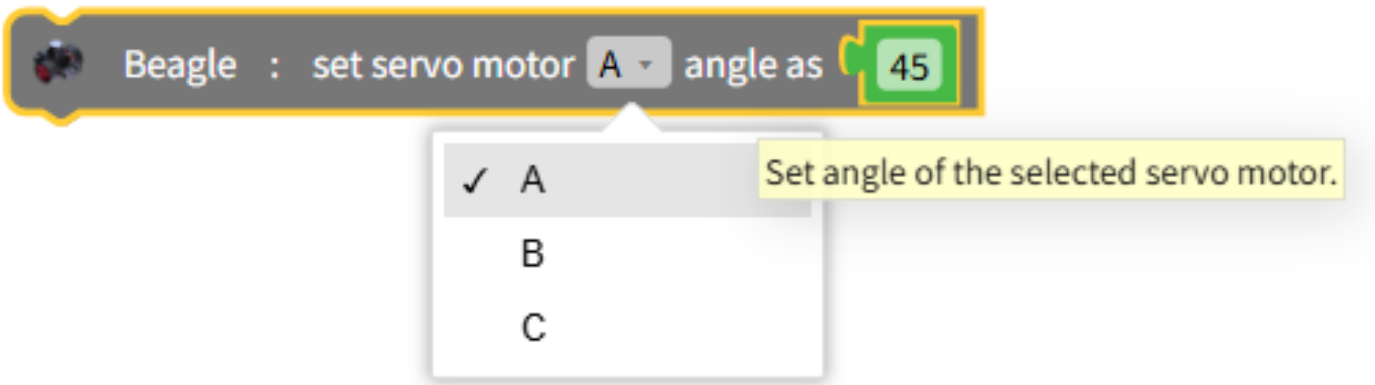

Dropdown Options and Input Values

Name	Type	Description	Range / Type
motor	Dropdown Option	Servo motor	A, B, C
angle	Input	Angle	Real number 0 ~ 180

JavaScript Code

```
// Set servo motor A angle to 0
$('Beagle*0:servo.a.angle').d = 0;

// Set servo motor B angle to 180
$('Beagle*0:servo.b.angle').d = 180;

// Set servo motor C angle to 90
$('Beagle*0:servo.c.angle').d = 90;
```

Python Code

```python
# Set servo motor A angle to 0
__('Beagle*0:servo.a.angle').d = 0

# Set servo motor B angle to 180
__('Beagle*0:servo.b.angle').d = 180

# Set servo motor C angle to 90
__('Beagle*0:servo.c.angle').d = 90
```

Change Servo Motor Angle

Changes the angle of the specified servo motor.

The new servo motor angle is the current angle plus the entered value.

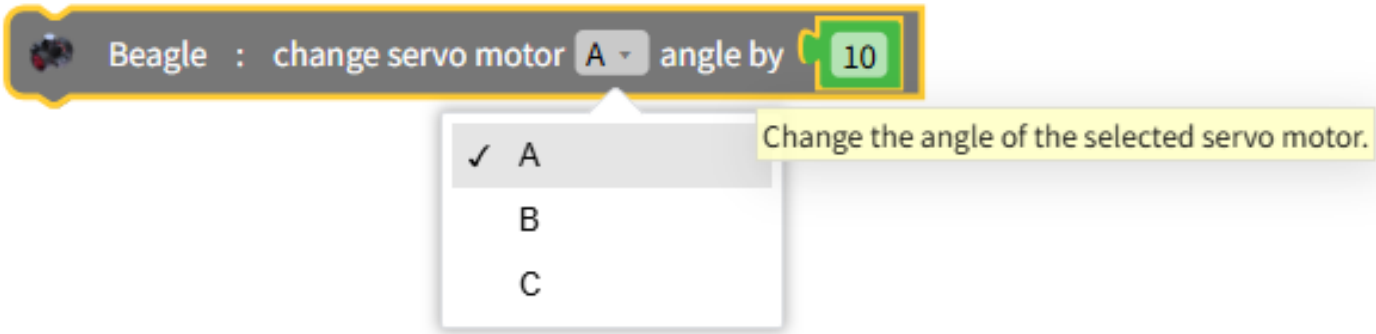

Dropdown Options and Input Values

Name	Type	Description	Range / Type
motor	Dropdown Option	Servo motor	A, B, C
angle	Input	Value to add to the current motor angle	Real number -180 ~ 180

JavaScript Code

```javascript
// Change servo motor A angle by -10
$('Beagle*0:servo.a.angle').d = $('Beagle*0:servo.a.angle').d + -10;
```

```
// Change servo motor B angle by 10
$('Beagle*0:servo.b.angle').d = $('Beagle*0:servo.b.angle').d + 10;

// Change servo motor C angle by 20
$('Beagle*0:servo.c.angle').d = $('Beagle*0:servo.c.angle').d + 20;
```

Python Code

```
# Change servo motor A angle by -10
__('Beagle*0:servo.a.angle').d = __('Beagle*0:servo.a.angle').d + -10

# Change servo motor B angle by 10
__('Beagle*0:servo.b.angle').d = __('Beagle*0:servo.b.angle').d + 10

# Change servo motor C angle by 20
__('Beagle*0:servo.c.angle').d = __('Beagle*0:servo.c.angle').d + 20
```

Turn Off Servo Motor

Turns off the power of the specified servo motor.

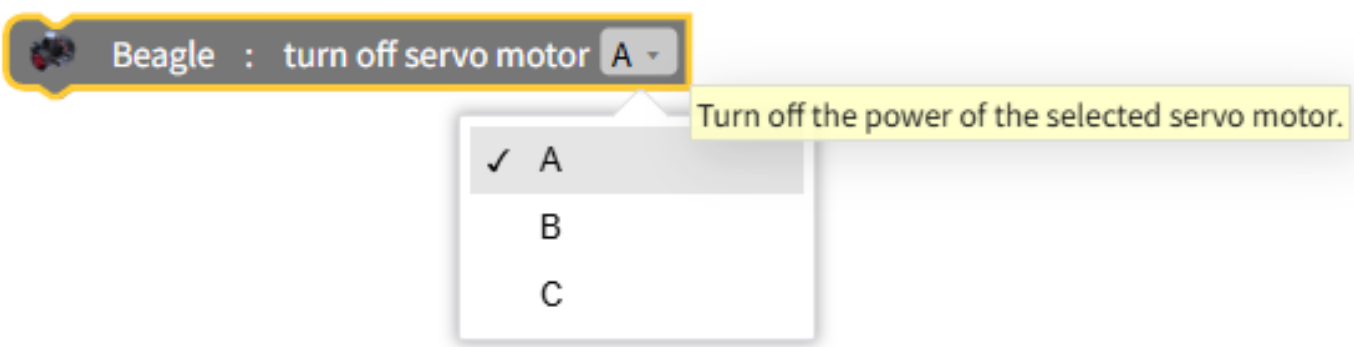

Dropdown Options and Input Values

Name	Type	Description	Range / Type
motor	Dropdown Option	Servo motor	A, B, C

JavaScript Code

```
// Turn off servo motor A
$('Beagle*0:servo.a.angle').d = 0;

// Turn off servo motor B
$('Beagle*0:servo.b.angle').d = 0;

// Turn off servo motor C
$('Beagle*0:servo.c.angle').d = 0;
```

Python Code

```
# Turn off servo motor A
__('Beagle*0:servo.a.angle').d = 0

# Turn off servo motor B
__('Beagle*0:servo.b.angle').d = 0

# Turn off servo motor C
__('Beagle*0:servo.c.angle').d = 0
```

Servo Motor Angle Value

Returns the current angle value of the specified servo motor.

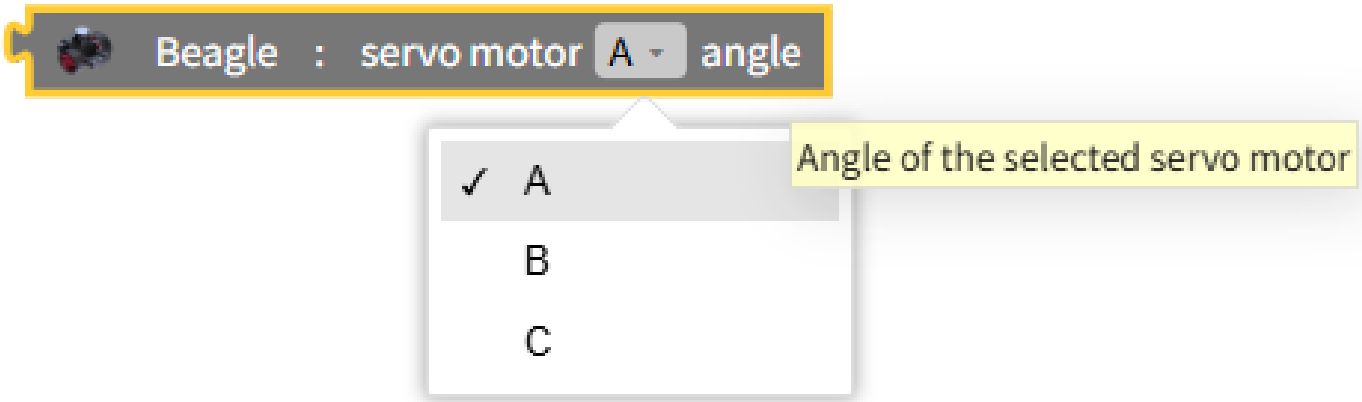

Dropdown Options and Input Values

Name	Type	Description	Range / Type
motor	Dropdown Option	Servo motor	A, B, C

JavaScript Code

```
// Servo motor A angle
$('Beagle*0:servo.a.angle').d;

// Servo motor B angle
$('Beagle*0:servo.b.angle').d;

// Servo motor C angle
$('Beagle*0:servo.c.angle').d;
```

Python Code

```
# Servo motor A angle
__('Beagle*0:servo.a.angle').d

# Servo motor B angle
__('Beagle*0:servo.b.angle').d

# Servo motor C angle
__('Beagle*0:servo.c.angle').d
```

Turn LiDAR On / Off

Enables or disables the LiDAR sensor.

Dropdown Options and Input Values

Name	Type	Description	Range / Type
toggle	Dropdown Option	LiDAR power	On (1), Off (0)

JavaScript Code

```
// Turn on LiDAR sensor
$('Beagle*0:lidar+connect').d = 1;

// Turn off LiDAR sensor
$('Beagle*0:lidar+connect').d = 0;
```

Python Code

```
# Turn on LiDAR sensor
__('Beagle*0:lidar+connect').d = 1

# Turn off LiDAR sensor
__('Beagle*0:lidar+connect').d = 0
```

Distance to the Nth Object (LiDAR)

Measures the distance to surrounding objects using the LiDAR sensor (mm).

Starting with the object in front of the Beagle as number 0, numbers are assigned counterclockwise in

order.

This then returns the distance between the Beagle and the object with the specified number.

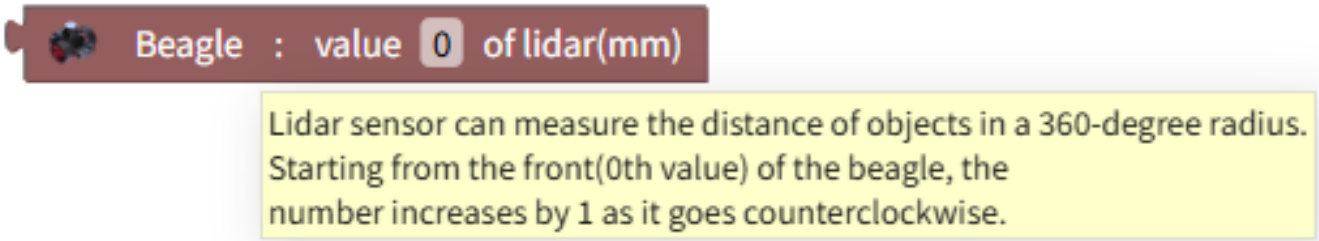

Dropdown Options and Input Values

Name	Type	Description	Range / Type
number	Input	Object index	Integer 0 ~ 359

JavaScript Code

```
// Distance between LiDAR and object 0 (mm)
$('Beagle*0:lidar+array').d[0];

// Distance between LiDAR and object 1 (mm)
$('Beagle*0:lidar+array').d[1];

// Distance between LiDAR and object 359 (mm)
$('Beagle*0:lidar+array').d[359];
```

Python Code

```
# Distance between LiDAR and object 0 (mm)
__('Beagle*0:lidar+array').d[0]

# Distance between LiDAR and object 1 (mm)
__('Beagle*0:lidar+array').d[1]
```

```
# Distance between LiDAR and object 359 (mm)
__('Beagle*0:lidar+array').d[359]
```

LiDAR Sensor Distance Values

Shows the distances measured by the LiDAR sensor in the front, back, sides, and diagonal directions (mm).

It outputs the average of the distance values within ±45 degrees around the corresponding direction.

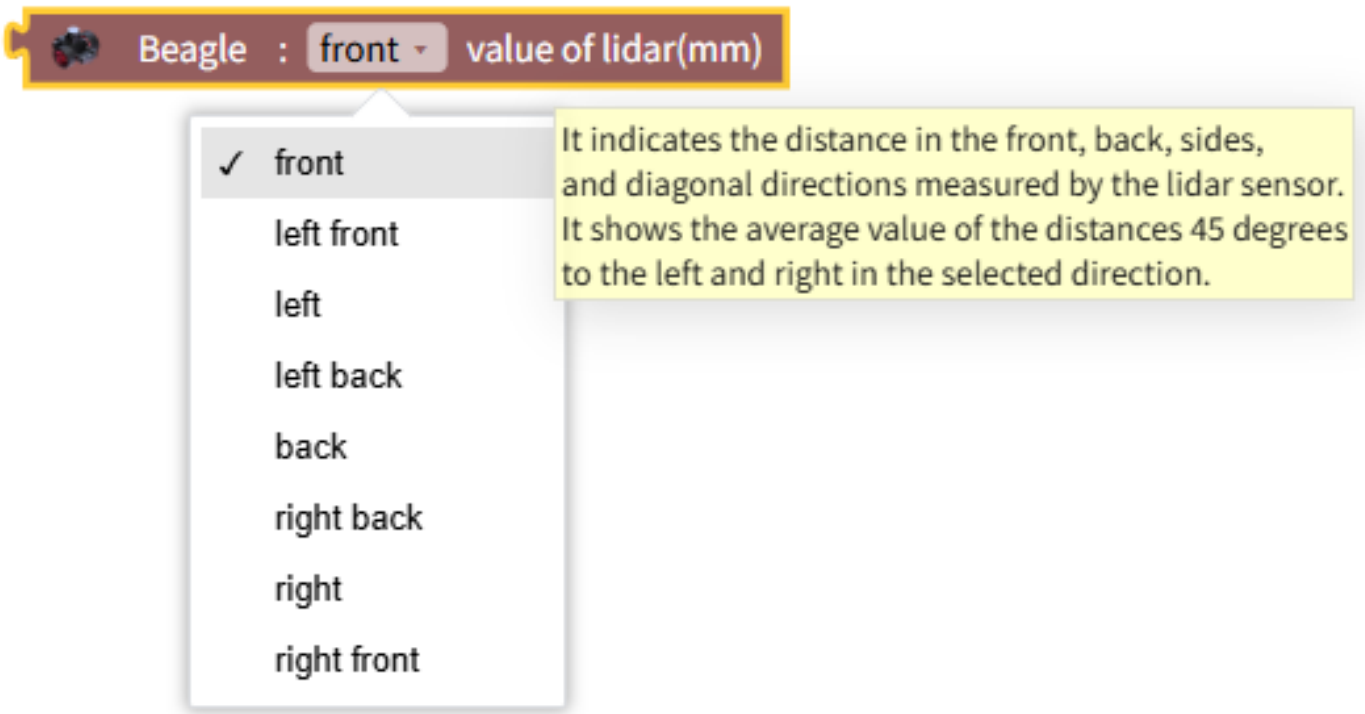

Dropdown Options and Input Values

Name	Type	Description	Range / Type
direction	Dropdown Option	Direction	front (0), front-left (1), left (2), back-left (3), back (4), back-right (5), right (6), front-right (7)

JavaScript Code

```javascript
// LiDAR front distance value (mm)
$('Beagle*0:lidar+directions').d[0];

// LiDAR front-left distance value (mm)
$('Beagle*0:lidar+directions').d[1];

// LiDAR left distance value (mm)
$('Beagle*0:lidar+directions').d[2];

// LiDAR back-left distance value (mm)
$('Beagle*0:lidar+directions').d[3];

// LiDAR back distance value (mm)
$('Beagle*0:lidar+directions').d[4];

// LiDAR back-right distance value (mm)
$('Beagle*0:lidar+directions').d[5];

// LiDAR right distance value (mm)
$('Beagle*0:lidar+directions').d[6];

// LiDAR front-right distance value (mm)
$('Beagle*0:lidar+directions').d[7];
```

Python Code

```python
# LiDAR front distance value (mm)
__('Beagle*0:lidar+directions').d[0]

# LiDAR front-left distance value (mm)
__('Beagle*0:lidar+directions').d[1]
```

```
# LiDAR left distance value (mm)
__('Beagle*0:lidar+directions').d[2]

# LiDAR back-left distance value (mm)
__('Beagle*0:lidar+directions').d[3]

# LiDAR back distance value (mm)
__('Beagle*0:lidar+directions').d[4]

# LiDAR back-right distance value (mm)
__('Beagle*0:lidar+directions').d[5]

# LiDAR right distance value (mm)
__('Beagle*0:lidar+directions').d[6]

# LiDAR front-right distance value (mm)
__('Beagle*0:lidar+directions').d[7]
```

Is LiDAR On?

Returns whether the LiDAR is turned on as **True (1) / False (0)**.

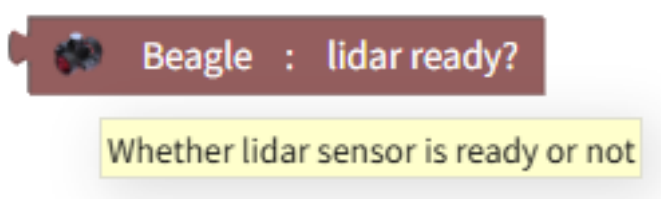

JavaScript Code

```
// Is LiDAR on?
$('Beagle*0:lidar+ready').d;
```

Python Code

```
# Is LiDAR on?
__('Beagle*0:lidar+ready').d
```