Computer Architecture Course code: 0521292B

09. Memory Hierarchy


Jianhua Li
College of Computer and Information
Hefei University of Technology



slides are adapted from CA course of wisc, princeton, mit, berkeley, etc.

The uses of the slides of this course are for educational purposes only and should be used only in conjunction with the textbook. Derivatives of the slides must acknowledge the copyright notices of this and the originals.


Memory (Programmer's View)

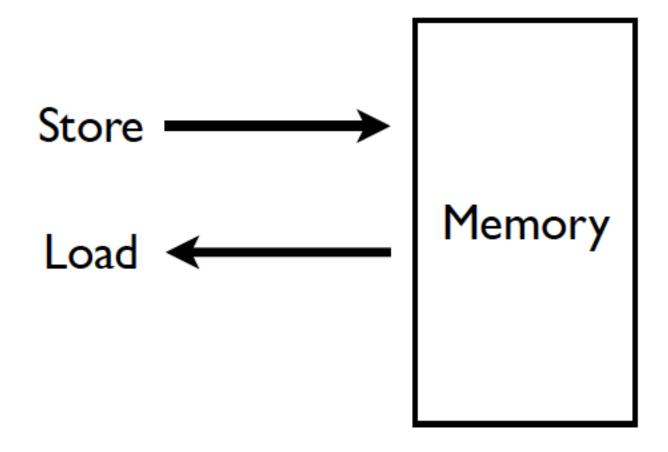

抽象: Virtual vs. Physical Memory

- Programmer sees virtual memory
 - Can assume the memory is "infinite"
- Reality: Physical memory size is much smaller than what the programmer assumes
- The system (software + hardware) maps virtual memory addresses are to physical memory
 - The system automatically manages the physical memory space transparently to the programmer
- 优点: Programmer does not need to know the physical size of memory nor manage it → A small physical memory can appear as a huge one to the programmer → Life is easier for the programmer
- 缺点: More complex system software and architecture

Idealism

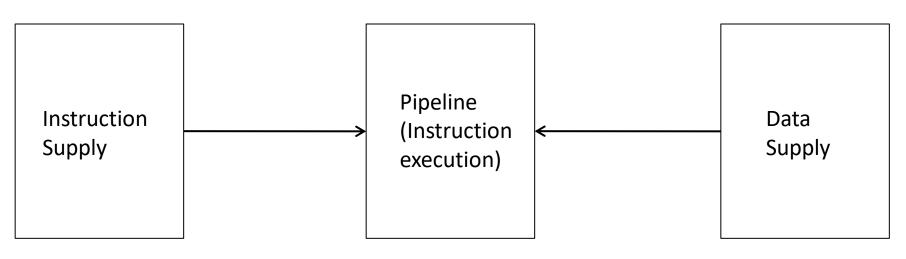


- Zero-cycle latency
- Infinite capacity
- Zero cost
- Perfect control flow

- No pipeline stalls
- -Perfect data flow (reg/memory dependencies)
- Zero-cycle interconnect (operand communication)
- Enough functional units
- Zero latency compute

- Zero-cycle latency
- Infinite capacity
- Infinite bandwidth
- Zero cost

Memory in a Modern System

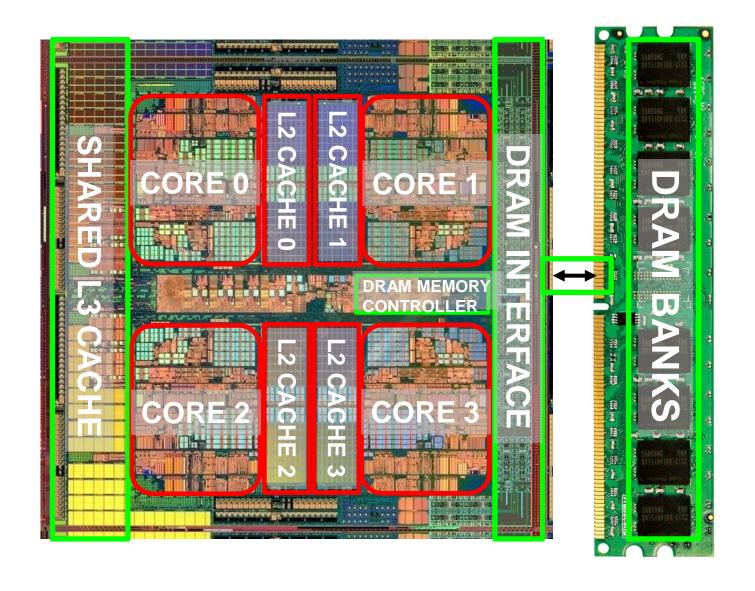

Ideal Memory

- Zero access time (latency)
- Infinite capacity
- Zero cost
- Infinite bandwidth (to support multiple accesses in parallel)

理想与现实

- Ideal memory's requirements oppose each other
- Bigger is slower
 - Bigger → Takes longer to determine the location
- Faster is more expensive
 - Memory technology: SRAM vs. DRAM vs. Disk vs.
 Tape
- Higher bandwidth is more expensive
 - Need more banks, more ports, higher frequency, or faster technology

存储技术: DRAM


- Dynamic random access memory
- Capacitor charge state indicates stored value
 - Whether the capacitor is charged or discharged indicates storage of 1 or 0
 - 1 capacitor
 - 1 access transistor
- Capacitor leaks through the RC path
 DRAM cell loses charge over time

row enable


DRAM cell needs to be refreshed

存储技术: SRAM

- Static random access memory
- Two cross coupled inverters store a single bit
 - Feedback path enables the stored value to persist in the "cell"
 - 4 transistors for storage

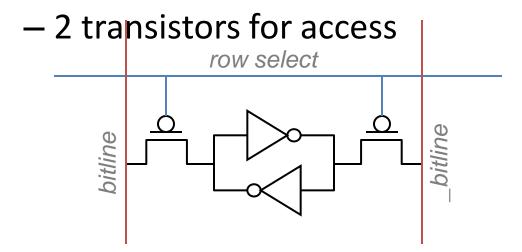



Bank Organization & Operation

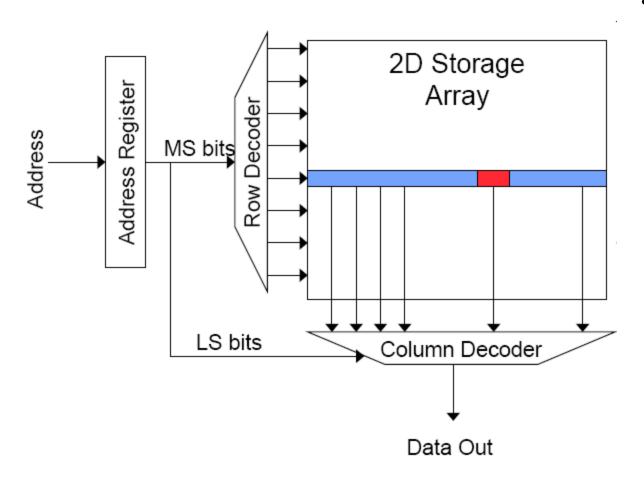

- Read access sequence:
 - 1. Decode row address & drive word-lines
 - 2. Selected bits drive bitlines
 - Entire row read
 - 3. Amplify row data
 - Decode column address
 select subset of row
 - Send to output
 - 5. Precharge bit-lines
 - For next access

Static Random Access Memory

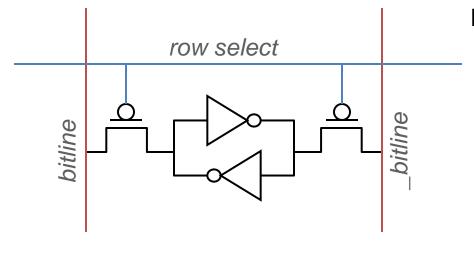

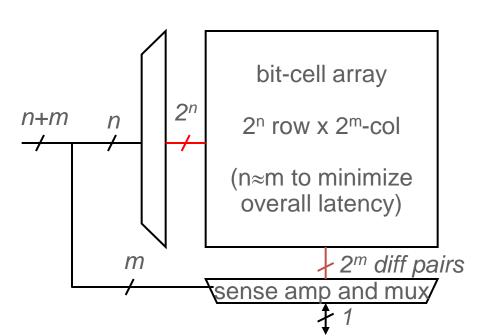


Read Sequence

- 1. address decode
- 2. drive row select
- 3. selected bit-cells drive bitlines (entire row is read together)
- 4. differential sensing and column select (data is ready)
- precharge all bitlines(for next read or write)

Access latency dominated by steps 2 and 3 Cycling time dominated by steps 2, 3 and 5

- step 2 proportional to 2^m
- step 3 and 5 proportional to 2ⁿ

Dynamic Random Access Memory

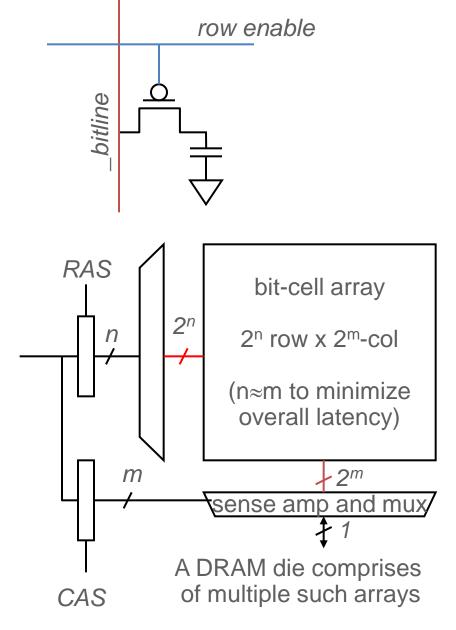

Bits stored as charges on node capacitance (non-restorative)

- bit cell loses charge when read
- bit cell loses charge over time

Read Sequence

- 1~3 same as SRAM
- 4. a "flip-flopping" sense amp amplifies and regenerates the bitline, data bit is mux'ed out
- 5. precharge all bitlines

Destructive reads

Charge loss over time

Refresh: A DRAM controller must periodically read each row within the allowed refresh time (10s of ms) such that charge is restored

DRAM vs. SRAM

DRAM

- Slower access (capacitor)
- Higher density (1T-1C cell)
- Lower cost
- Requires refresh (power, performance, circuitry)
- Manufacturing requires putting capacitor and logic together

SRAM

- Faster access (no capacitor)
- Lower density (6T cell)
- Higher cost
- No need for refresh
- Manufacturing compatible with logic process (no capacitor)

问题分析

- Bigger is slower
 - SRAM, 512 Bytes, sub-nanosec
 - SRAM, KByte~MByte, ~nanosec
 - DRAM, Gigabyte, ~50 nanosec
 - Hard Disk, Terabyte, ~10 millisec
- Faster is more expensive (dollars and chip area)
 - SRAM, < 10\$ per Megabyte
 - DRAM, < 1\$ per Megabyte
 - Hard Disk < 1\$ per Gigabyte
 - These sample values scale with time
- Other technologies have their place as well
 - Flash memory, PC-RAM, MRAM, RRAM (not mature yet)


Why Memory Hierarchy?

We want both fast and large

But we cannot achieve both with a single level of memory

Idea: Have multiple levels of storage
 (progressively bigger and slower as the levels are farther from the processor) and ensure most of the data the processor needs is kept in the fast(er) level(s)

The Memory Hierarchy

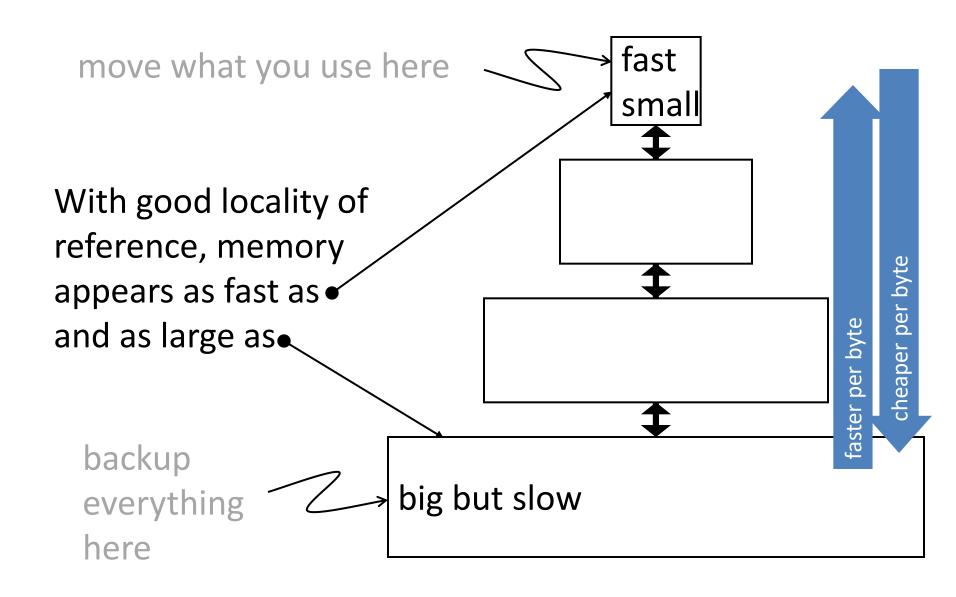


Memory Hierarchy

Fundamental tradeoff

Fast memory: small

Large memory: slow

Idea: Memory hierarchy

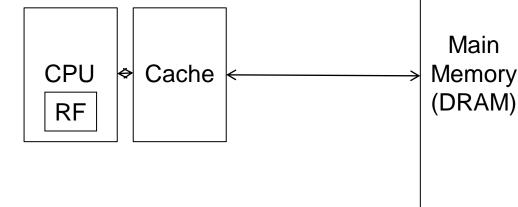

 Latency, cost, size, bandwidth Hard Disk

Locality

- One's recent past is a very good predictor of his/her near future.
- Temporal Locality: If you just did something, it is very likely that you will do the same thing again soon
 - since you are here today, there is a good chance you will be here again and again regularly
- Spatial Locality: If you did something, it is very likely you will do something similar/related (in space)
 - every time I find you in this room, you are probably sitting close to the same people

Memory Locality

- A "typical" program has a lot of locality in memory references
 - typical programs are composed of "loops"
- Temporal: A program tends to reference the same memory location many times and all within a small window of time
- Spatial: A program tends to reference a cluster of memory locations at a time
 - most notable examples:
 - instruction memory references
 - array/data structure references

Caching Basics

- Idea: Store recently accessed data in automatically managed fast memory (called cache)
- Anticipation: the data will be accessed again soon
- Temporal locality principle
 - Recently accessed data will be again accessed in the near future
 - This is what Maurice Wilkes had in mind:
 - Wilkes, "Slave Memories and Dynamic Storage Allocation," IEEE Trans. On Electronic Computers, 1965.
 - "The use is discussed of a fast core memory of, say 32000 words as a slave to a slower core memory of, say, one million words in such a way that in practical cases the effective access time is nearer that of the fast memory than that of the slow memory."


Caching Basics

- Idea: Store addresses adjacent to the recently accessed one in automatically managed fast memory
 - Logically divide memory into equal size blocks
 - Fetch to cache the accessed block in its entirety
- Anticipation: nearby data will be accessed soon
- Spatial locality principle
 - Nearby data in memory will be accessed in the near future
 - E.g., sequential instruction access, array traversal
 - This is what IBM 360/85 implemented
 - 16 Kbyte cache with 64 byte blocks
 - Liptay, "Structural aspects of the System/360 Model 85 II: the cache," IBM Systems Journal, 1968.

Caching in a Pipelined Design

- The cache needs to be tightly integrated into the pipeline
 - Ideally, access in 1-cycle, dependent operations do not stall
- High frequency pipeline


 Cannot make the cache large
 - But, we want a large cache AND a pipelined design

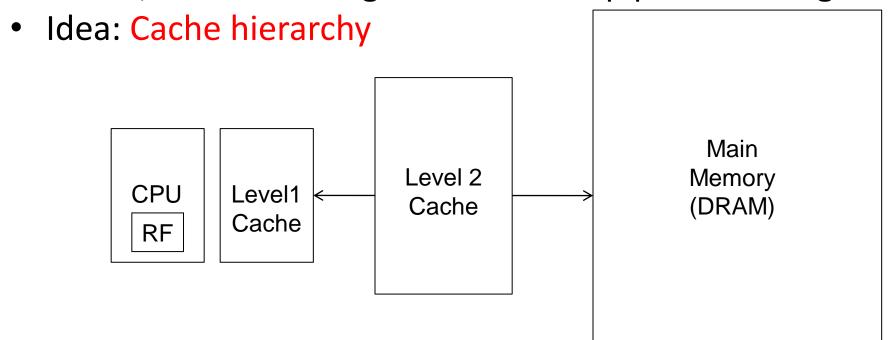

Manual vs. Automatic Management

- Manual: Programmer manages data movement across levels
 - —too painful for programmers on substantial programs
 - -"core" vs "drum" memory in the 50's
 - —still done in some embedded processors (on-chip scratch pad SRAM in lieu of a cache)
- Automatic: Hardware manages data movement across levels, transparently to the programmer
 - ++ programmer's life is easier
 - -the average programmer doesn't need to know about it
 - You don't need to know how big the cache is and how it works to write a "correct" program! (What if you want a "fast" program?)

Modern Memory Hierarchy

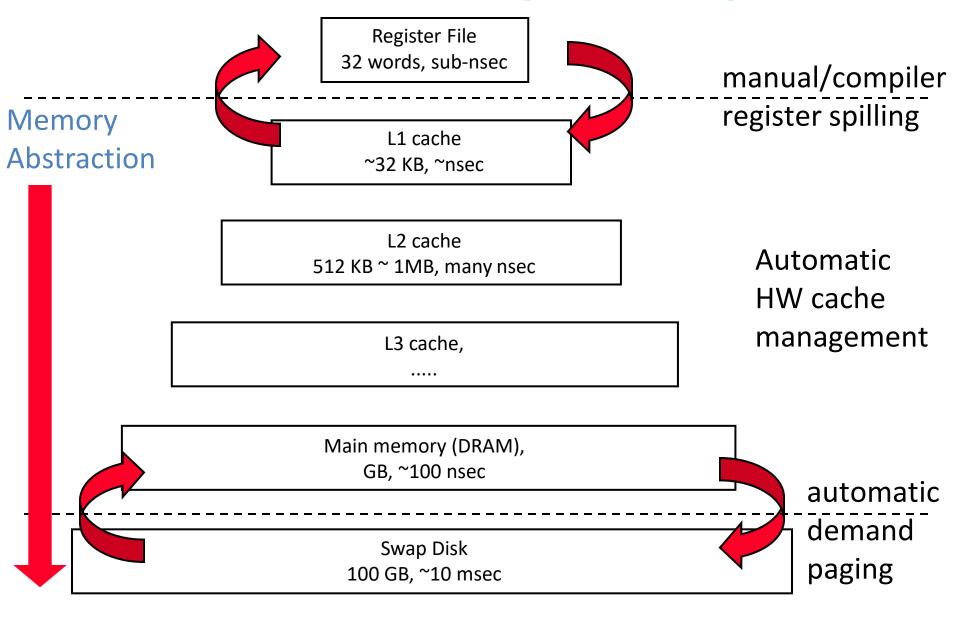

Hierarchical Latency Analysis

- For a given memory hierarchy level i it has a technology-intrinsic access time of t_i . The perceived access time T_i is longer than t_i
- Except for the outer-most hierarchy, when looking for a given address there is
 - a chance (hit-rate h_i) you "hit" and access time is t_i
 - a chance (miss-rate m_i) you "miss" and access time $t_i + T_{i+1}$
 - $-h_{i}+m_{i}=1$
- Thus

$$T_i = h_i \cdot t_i + m_i \cdot (t_i + T_{i+1})$$

$$T_i = t_i + m_i \cdot T_{i+1}$$

 h_i and m_i are defined to be the hit-rate and miss-rate of just the references that missed at L_{i-1}

Hierarchy Design Considerations

Recursive latency equation

$$T_i = t_i + m_i \cdot T_{i+1}$$

- The goal: achieve desired T₁ within allowed cost
- $T_i \approx t_i$ is desirable
- Keep m_i low
 - increasing capacity C_i lowers m_i, but beware of increasing t_i
 - lower m_i by smarter management (replacement::anticipate what you don't need, prefetching::anticipate what you will need)
- Keep T_{i+1} low
 - faster lower hierarchies, but beware of increasing cost
 - introduce intermediate hierarchies as a compromise

Cache Basics and Operation


Cache

- Generically, any structure that "memorizes" frequently used results to avoid repeating the long-latency operations required to reproduce the results from scratch, e.g. a web cache
- Most commonly in the on-die context: an automatically-managed memory hierarchy based on SRAM
 - memorize in SRAM the most frequently accessed DRAM memory locations to avoid repeatedly paying for the DRAM access latency

Caching Basics

- Block (line): Unit of storage in the cache
 - Memory is logically divided into cache blocks that map to locations in the cache
- When data referenced
 - HIT: If in cache, use cached data instead of accessing memory
 - MISS: If not in cache, bring block into cache
- Some important cache design decisions
 - Placement: where and how to place/find a block in cache?
 - Replacement: what data to remove to make room in cache?
 - Granularity of management: large, small, uniform blocks?
 - Write policy: what do we do about writes?
 - Instructions/data: Do we treat them separately?

Cache Abstraction and Metrics

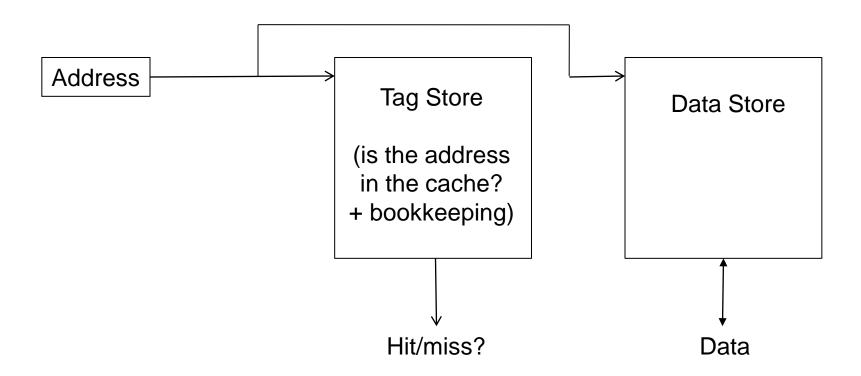

- Cache hit rate = (# hits) / (# hits + # misses) = (# hits) / (# accesses)
- Average memory access time (AMAT)= (hit-rate * hit-latency) + (miss-rate * miss-latency)
- Aside: Can reducing AMAT reduce performance?

Next Topic Cache Memory