





Required Components to build TrackerBot



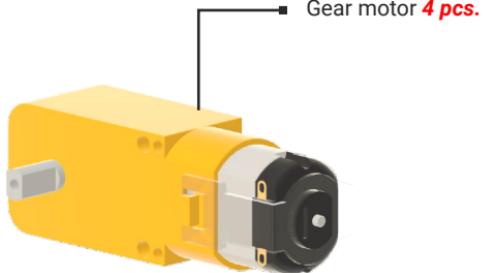




Gear motor wheel 4pcs.


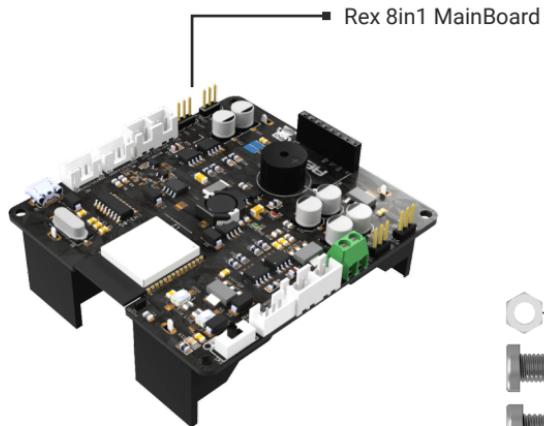


- M3 Nuts 8 pcs.
- M3 x 6mm screw 4 pcs.
- M3 x 8mm screw 16 pcs.
- M3 x 12mm screw 4 pcs.
- M3 x 30mm screw 8 pcs.
- M3 x 25mm female spacer 8 pcs.
- M3 x 25mm Female - male spacer 4 pcs.
- M3 x 6mm female - male spacer 4 pcs.



Required Parts

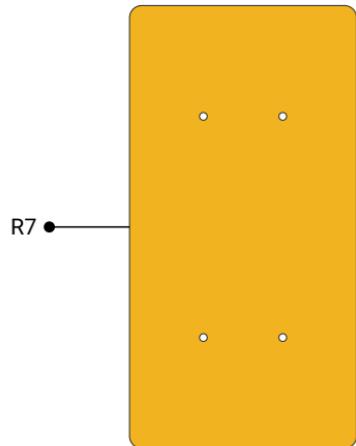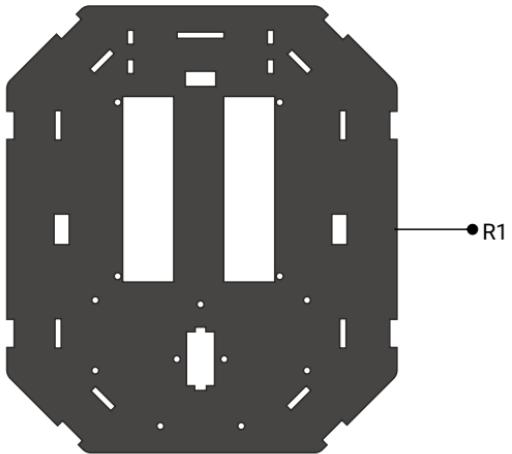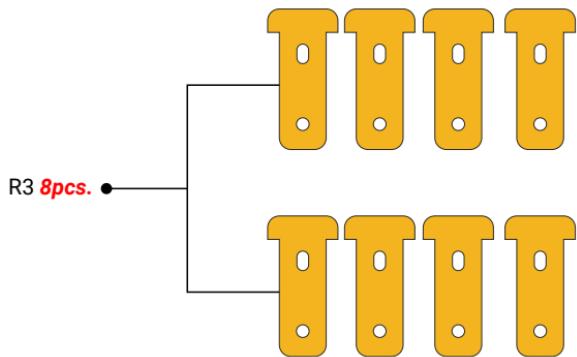

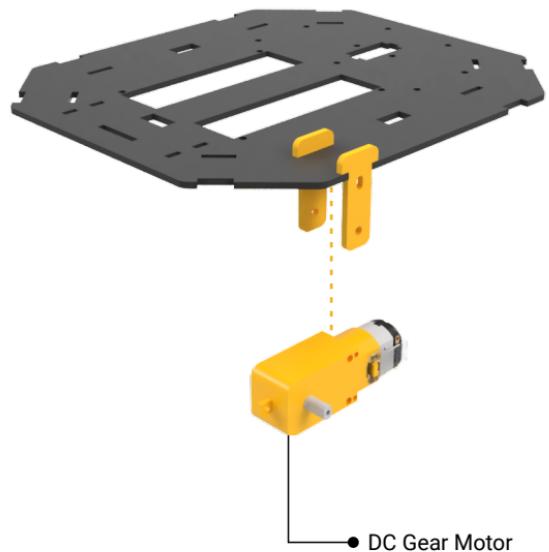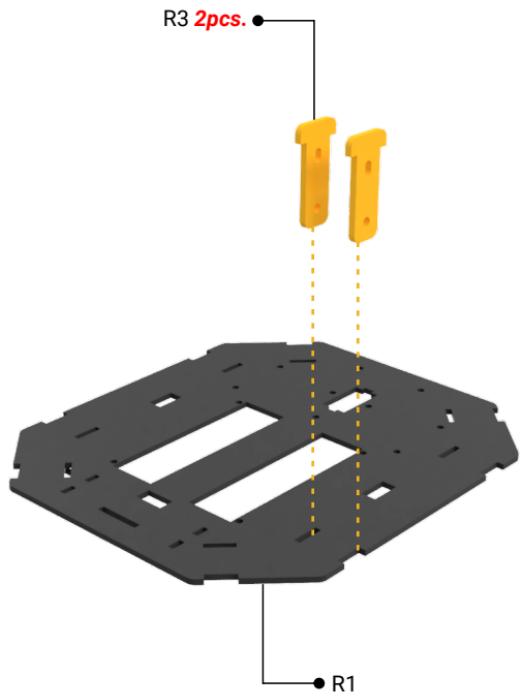

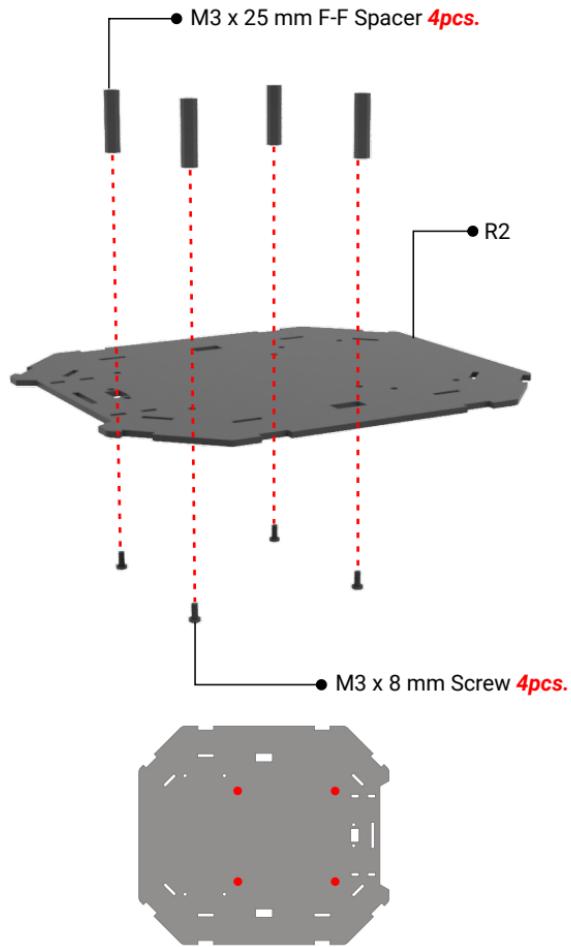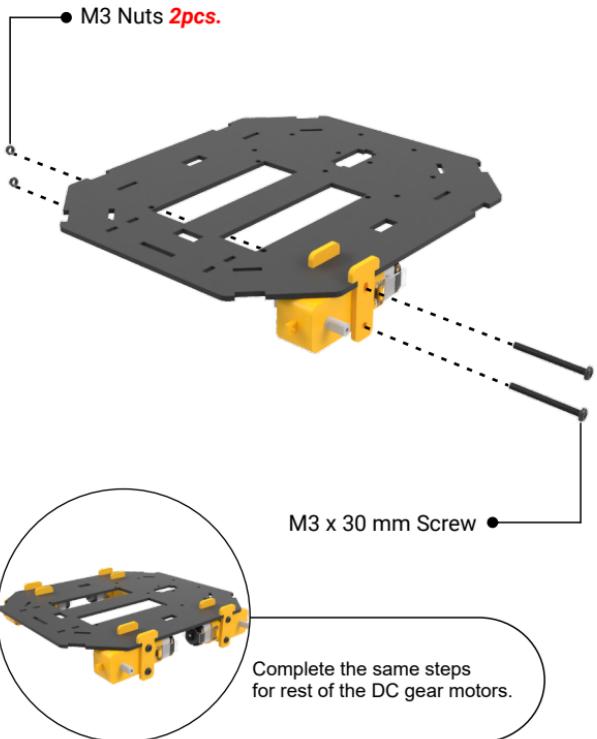

M3 x 25 mm F-F Spacer **4pcs.**

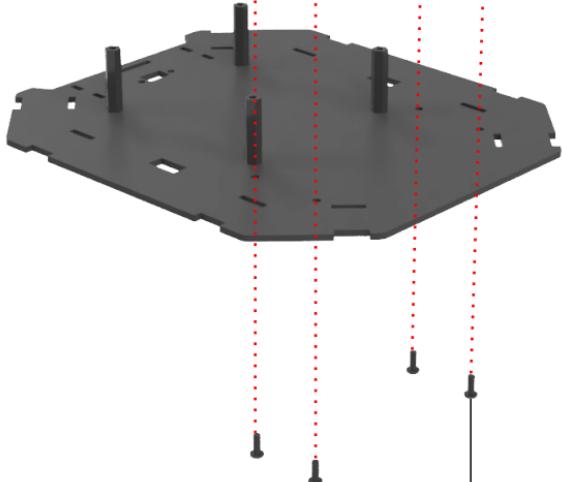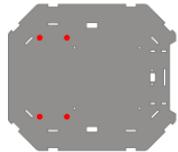

M3 x 8 mm Screw **4pcs.**

M3 x 8 mm Screw **4pcs.**

