

Included with your order

Installation guide

The complete manual to install your Zephyr shade sail, step by step — on a structure or stretched between anchor points.

UV-stabilised HDPE knit

304 stainless steel D-rings included

Carabiners included



WELCOME

Thank you for your trust

You are holding a Zephyr shade sail made of high-density polyethylene knit. Properly installed, it gives you a soft, durable shade for many seasons. This manual guides you from the first tape measure to the final tensioning — whatever your setup.

IN THIS MANUAL

01	Your sail in detail	p. 3
02	D-rings, strap & sizes	p. 4
03	Before you start	p. 5
04	Method A — On a structure	p. 6
05	Method B — Stretched between anchor points	p. 8
06	Tensioning your sail	p. 10
07	Care & durability	p. 11
08	Frequently asked questions	p. 12
09	Need help?	p. 13

INCLUDED WITH YOUR SAIL

Stainless steel D-rings

One stainless steel ring at each corner — 3 on triangles, 4 on squares and rectangles.

Carabiners

One carabiner per ring, to hook the sail to your anchor points.

Reinforced hem

A sewn hem, reinforced with a polyester strap all around the edge and doubled at each corner.

YOUR SAIL IN DETAIL

A technical knit, a lasting shade

100 % polyethylene

High-density HDPE

≈ 220 g/m²


Weight

6

Colours

Anti-UV

Built-in additive

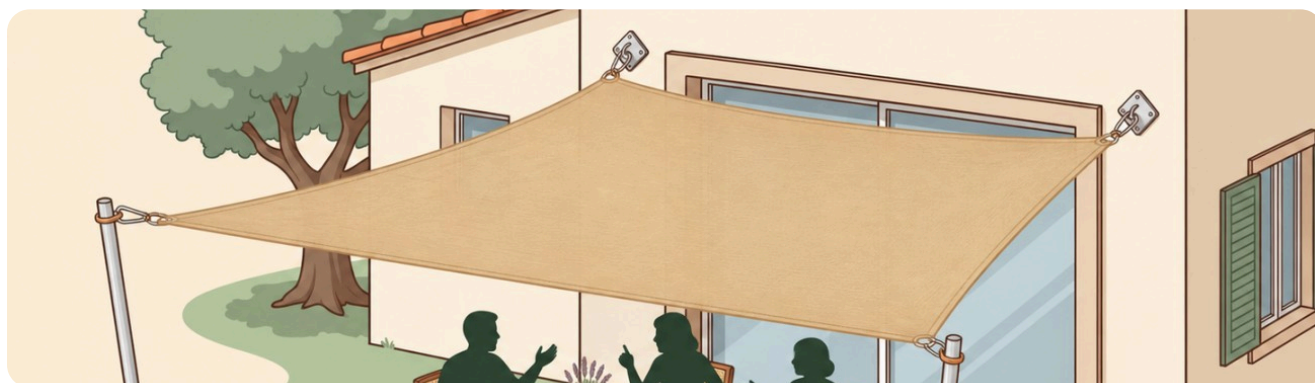
Micro-perforated knit

It lets air and part of the wind through, does not rot and resists moisture — a breathable shade.


UV-stabilised

An anti-UV additive is incorporated into the material. Colours may lighten slightly under UV over the seasons.

6 COLOURS AVAILABLE



Sand



Ivory



Anthracite



White



Burgundy



Taupe


D-RINGS, STRAP & SIZES

The key points of the fixing



The D-ring and the carabiner

A stainless steel D-ring is fixed at each corner, with its carabiner. Always attach the sail by the rings, never directly by the fabric.

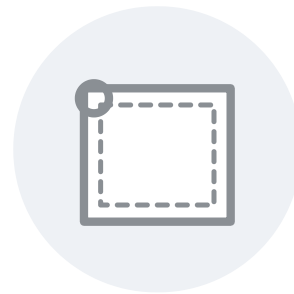

The reinforced hem

Sewn hem and polyester strap all around the edge, doubled at each corner: it spreads the tension towards the rings and protects the fabric.

SHAPES & SIZES

Dimensions measured from corner to corner — standard sizes only



TRIANGLE

2x2x2 · 3x3x3 · 4x4x4
5x5x5 · 3x4x5 · 4x4x5.7 m



SQUARE

3x3 m · 4x4 m



RECTANGLE

2x3 · 2x4 · 3x4
3x5 · 4x5 m

DEPENDENT ON YOUR SHAPE. 3 rings on triangles, 4 on squares and rectangles — one per corner, with its carabiner. Wall fixings, masts, ropes and tensioners are not supplied: choose them according to your support.

BEFORE YOU START

A few minutes of preparation

A successful installation mostly depends on two things: solid anchor points and a well thought-out slope. Take your time with this step, the rest will follow easily.

USEFUL EQUIPMENT

- ✓ A tape measure to measure the area and the diagonals.
- ✓ A stable stepladder for high fixings.
- ✓ Fixings suited to your support (wall plugs for a wall, hooks or rings for wood, a mast for a free point).
- ✓ Ropes or tensioners to connect and tension the sail.

CHOOSE YOUR METHOD

A — On a structure

Pergola, wooden structure or wall already in place.

→ [page 6](#)

B — Stretched between anchor points

Between 3 or 4 anchor points (wall, post, mast, solid tree).

→ [page 8](#)

THE GOLDEN RULE

A slope for the water

Install the sail with a slope of about 15 % ($\approx$ 45 cm height difference over 3 m) so that water runs off without pooling.

Gradual tension

Tension each corner a little at a time, evenly — never on one side only.


SAFETY. Check that each anchor point can really take the tension. This sail is not a toy: do not hang from it and do not let children play with the ropes and carabiners. Not flame-retardant — fusible material: keep away from any barbecue, fire pit or heat source. Stainless steel rings and carabiners can get hot in the sun: handle them with care.

Method A — On a structure

Pergola, wooden structure or wall

The most direct setup: you measure, you unfold, then you hook the rings to your anchor points.

1 Measure your location

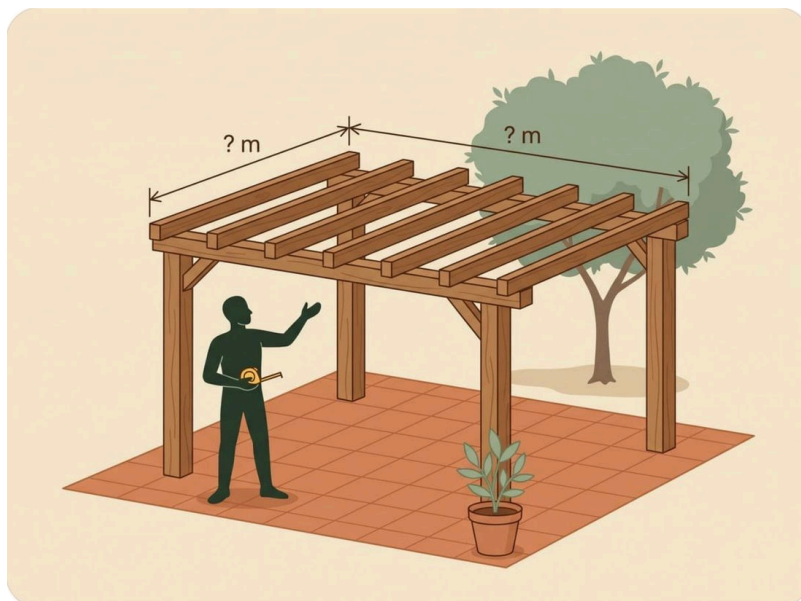

- 1 Measure the area to shade, length x width, at the height of your fixings (rafters, posts, wall).
- 2 Choose the sail size closest to your area among the standard sizes.
- 3 Leave 30 to 50 cm between each corner and its anchor point so you can tension it.

TIP. Unsure about the size? Our customer service will advise you before you order: contact@zephyrosc.com

GOOD HABIT. A sail slightly smaller than the area is better: the margin will be used to tension it properly.

2 Prepare the area and the sail



- 1 Unfold the sail flat and locate the corner D-rings.
- 2 Clip a carabiner into each ring.
- 3 Hold the sail under the structure and choose the high side and the low side: this is what creates the slope.



IMPORTANT. Plan a slope of about 15 % (≈ 45 cm over 3 m): the fabric is not waterproof, water must be able to run off.

TO CHECK. Each anchor point must be able to take the tension — test its strength before continuing.

Method A — On a structure

3 Hook up and tension



- 1 First hook the corners on the high side, then those on the low side, carabiner on anchor point (directly, or with a rope or tensioner).
- 2 Tension little by little, corner by corner, evenly.
- 3 Check the slope: water must run off and the fabric must stay even, with no pocket.

TIP. The greater the distance between the sail and the anchor, the more gently the tension is spread.


THERE YOU GO. Your sail is up. Enjoy the shade! See page 10 to perfect the tension.

Method B — Stretched between anchor points

Between 3 or 4 anchor points

No structure? Stretch your sail between three (triangle) or four (square, rectangle) solid supports — wall, post, mast or solid tree.

1 Identify your anchor points

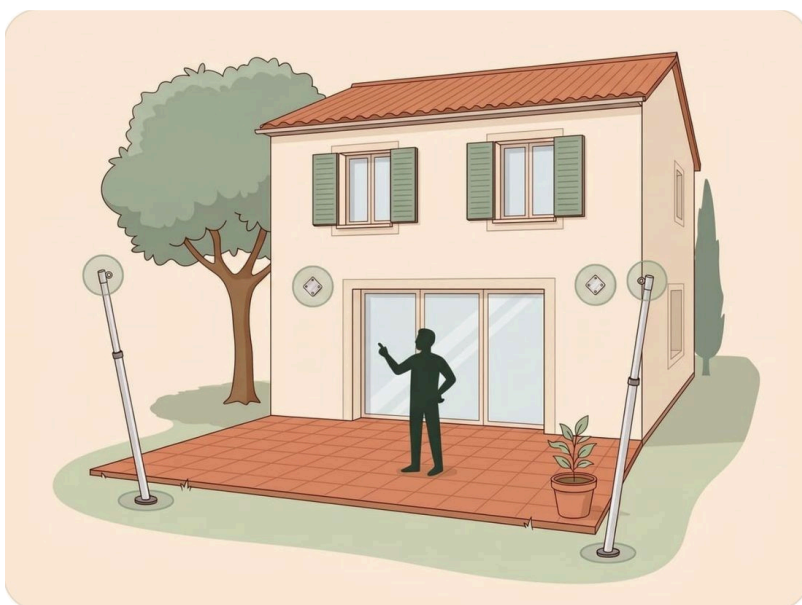

- 1 Wall or facade — often 2 points on the terrace side, with fixings suited to the support.
- 2 Post, mast, solid tree or railing — for the opposite points.

TO CHECK. Each anchor must take a strong tension. A mast must be well sealed in, a tree sturdy enough.

2 Measure and allow for margin




- 1 Measure the distance between your anchors and the diagonals.
- 2 Choose a sail slightly smaller than the area: 30 to 50 cm between each corner and its anchor for tensioning.
- 3 Place one side higher than the other: slope of about 15 %, i.e. ≈ 45 cm difference over 3 m.

TIP. A sail that is too large is hard to tension properly and may form a pocket in the middle.

RULE OF THUMB. If you hesitate between two sizes, choose the smaller one.

Method B — Stretched between anchor points

3 Hook up and tension

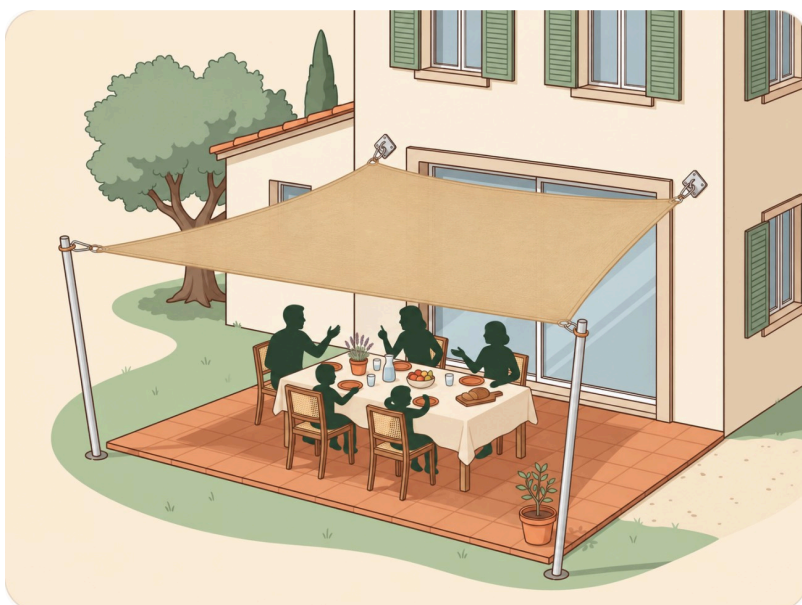

- 1 Hook each carabiner to its anchor, directly or with a rope or tensioner.
- 2 Start with a light tension on all corners, then adjust little by little.
- 3 The sail must be held firm without being pulled to the extreme, low side clear so the water can run off.

GOOD TO KNOW. The fabric may relax a little during the first weeks: re-tension slightly while it settles.

**And for a triangle?**

Three anchor points are enough: two on the wall and one mast. Each corner has its ring and carabiner; keep the same slope of about 15 % so the water runs off.

TENSIONING YOUR SAIL

The gesture that makes all the difference

A well-tensioned sail looks better, is more stable and lasts longer. Three simple principles are enough.

1. Always a slope

About 15 % ($\approx$ 45 cm height difference over 3 m). Water runs off, does not stagnate and does not form a pocket: the fabric stays healthy and light.

2. Even tension, corner by corner

Tension each corner a little at a time, rather than finishing one side before the other. The sail settles evenly, with no folds or slack areas.

3. Taut, but not to the extreme

The sail should be firm to the touch, without being pulled like a rope. A slight reserve absorbs humidity variations and gusts of wind.

IN STRONG WIND OR BAD WEATHER. A shade sail is not a windbreak. As soon as gusts, a storm, hail or snow are forecast, slacken or take down the sail to protect the installation and your anchor points.

CARE & DURABILITY

A resistant knit, easy to live with

The HDPE knit is designed for outdoor use. A few simple actions keep it looking good season after season.

The first weeks

The fabric may relax a little at the start. Gently re-tension the corners to stabilise it.

Not waterproof

Water passes through the knit: install the sail with a slope to avoid water pockets. It does not rot and resists moisture.

Gentle cleaning

Clear water, mild soap and a soft brush are enough. Avoid high-pressure washers, bleach, solvents, washing machines and tumble dryers. Let it dry completely before folding and storing.

Winter storage recommended

We recommend it: at the end of the season, take the sail down, let it dry, then store it in a sheltered place. You protect the knit and extend its life.

GOOD TO KNOW. Slight variations in size (a few cm) from one sail to another, and colours that may lighten slightly under UV: this is normal, not a defect.

Part of the light and UV passes through the fabric: it does not replace sun protection for the skin.

FREQUENTLY ASKED QUESTIONS

You may be wondering...

Q. My sail has slackened a little during the first weeks, is that normal?

Yes. The fabric may relax a little at the start. Re-tension the corners slightly: it then settles.

Q. Is the sail waterproof?

No. Water passes through the micro-perforated knit: install it with a slope of about 15 % so that water runs off, with no water pockets.

Q. Which size should I choose?

A sail slightly smaller than the area to cover, measured from corner to corner. The remaining margin allows you to tension it properly.

Q. Can I cut the sail to my size?

No. Cutting removes the reinforced hem and the rings, which are essential for it to hold. Choose the most suitable size instead.

Q. How many rings does my sail have?

3 on triangles, 4 on squares and rectangles: one per corner, each with its carabiner.

Q. Are the fixings supplied?

The stainless steel D-rings and the carabiners, yes. Wall fixings, masts, ropes and tensioners are chosen according to your support.

Q. Should I take it down in winter?

We strongly recommend it. Storing the sail clean and dry, in a sheltered place, extends its life.

Q. And in strong wind?

Slacken or take down the sail when gusts, a storm or snow are forecast: a shade sail is not designed to withstand strong wind.

A question that is not here? Write to us at contact@zephyrosc.com — we will be happy to answer.

NEED HELP?

We are by your side

Customer service

A question about installation or size? Write to us, an advisor will answer.

contact@zephyrosc.com

30-day satisfaction guarantee

A return is possible within 30 days, according to the shop conditions.

Tracked delivery

Shipped within 48 to 72 working hours, depending on the displayed lead times.

Sorting & recycling

End-of-life sail: donate it, or take it to a recycling centre after removing the stainless steel rings and carabiners. Packaging: sorting bin.

Enjoy the season under your sail!

Thank you for choosing a lasting, resistant shade.

zephyrosc.com · contact@zephyrosc.com



Scan to find this guide online, in your language

SAS ZEPHYR O.S.C · 5 rue Fénelon, 33000 Bordeaux, France · contact@zephyrosc.com