
IPU3 IOM Module SOP

Step 2. Exchange CTL_B for Master

Stop button of MTN

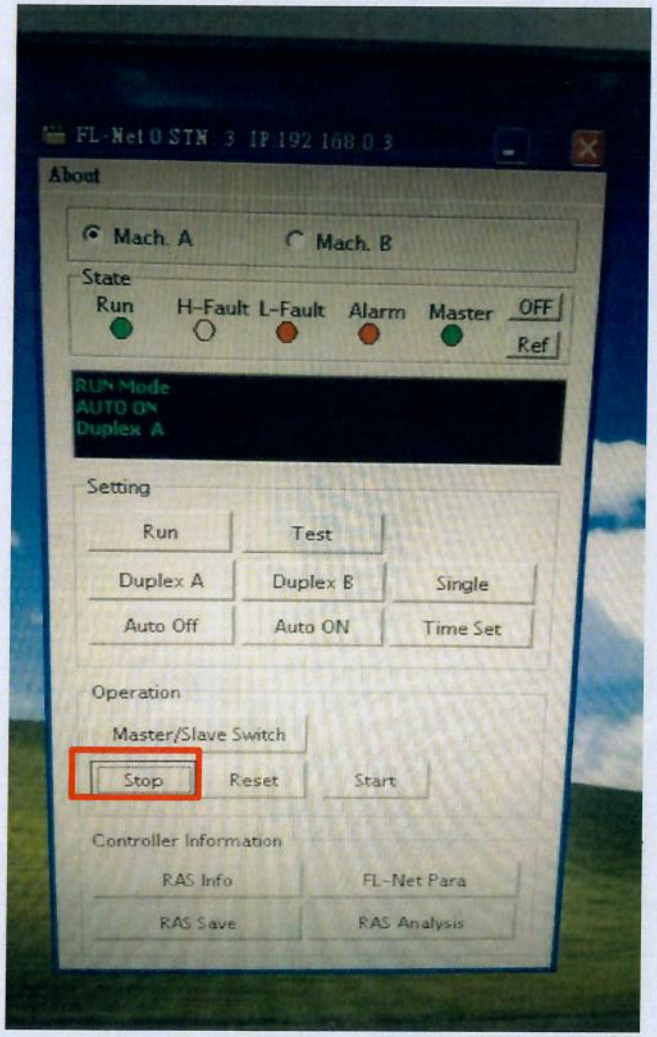

Step1.Comfirm all the program need the same of CTL_ A with CTL _B

Step2.Run the Stop button of MTN of CTL_A then CTL_B would exchange to Master.

*After Step 2 ,the operator must confirm the status of CTL_B and MCU_B Module.


1.Confirm the CTL_B change to Master.
   a. The Master of MTN is on
   b. The M/S LED of CTL's HW is on

2.Comfirm the communication of CTL_B with MCU_B
   a. DCS display of data that is the same the local instrument.
   b. The LED of MCU_B:
      RUN LED is on. ERR and ALM's LED are off.


3. The communication is error if the ERR's LED is on (or ALM is on, or LNK is off, or ACT is not flash). Please exchange the MCU_B.

Step 2. Confirm status of the New master

Master Status of MTN

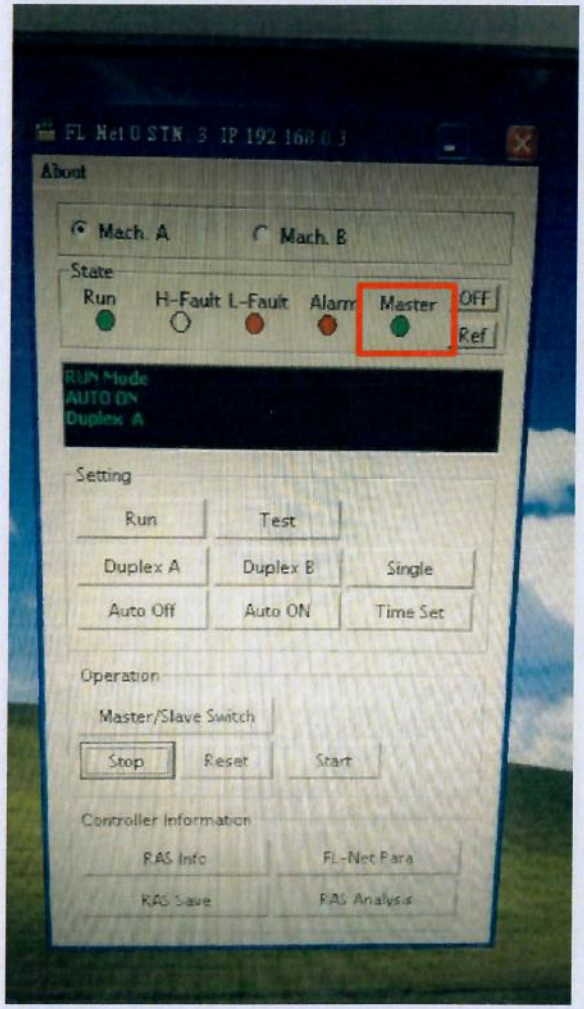


The M/S LED of HW of CTL

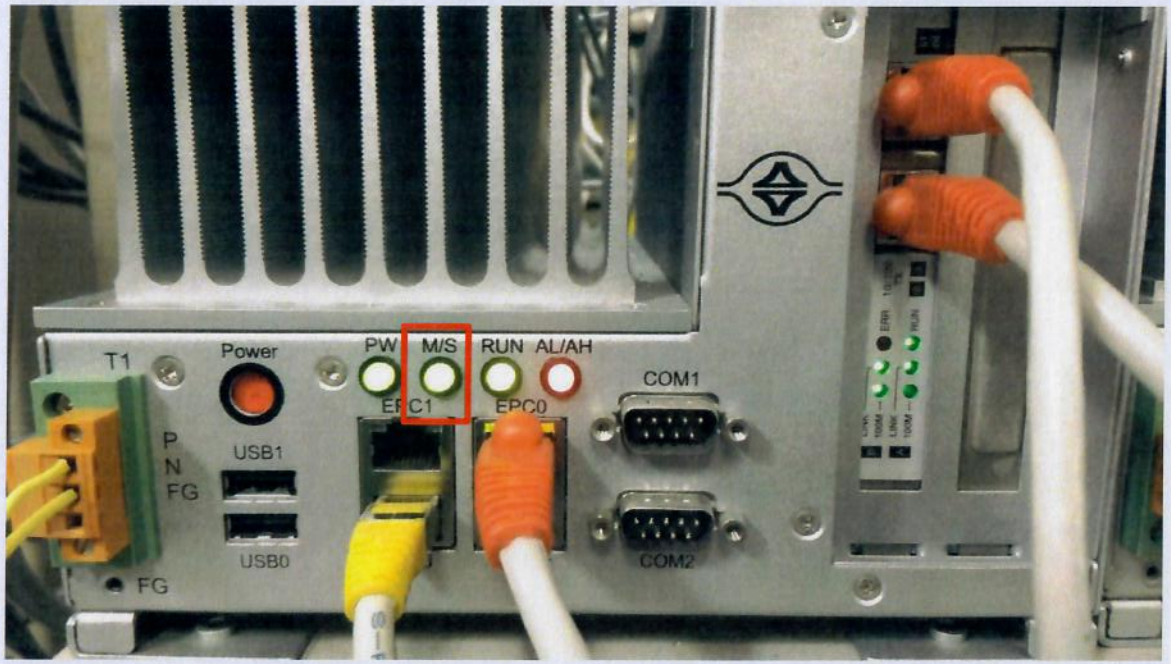

Step 3. Confirm status of MCU and IOM

The Status of CMCU-01's HW LED

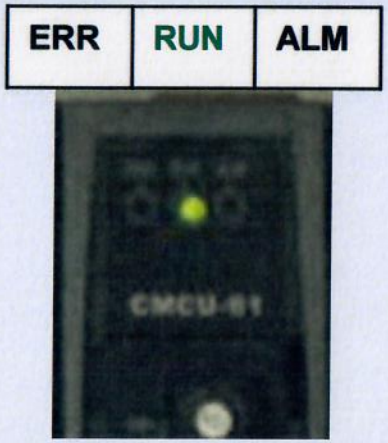

The Status of IOM's HW LED



Step3. Confirm the IOM's Status of this node.
Single IOM Module:

1.Confirm the RUN and ACT LEDs of IOM are on and DCS display of data that is the same the local instrument.

a. The RUN LED flash of IOM if the IOM fail. Please exchange the IOM.

b. The ACT LED is off if the IO definition of CTL is not the same or fail.

c. Or the ACT LED is off if the IO definition of IOM is not the same.

d. About the item b and c. Please run upload and download of IPU3 Utility again. And run transfer to CTL again.

Step 4. Exchange the MCU_A

Step4. Exchange the MCU_A after DCS display of data that is the same the local instrument.

After exchange the MCU_A, please confirm LEDs of MCU_A.


The LED of MCU_A: RUN LED is on. ERR and ALM LEDs are off.

Step5. Please confirm status and alarm's message of system of HMI.


Step6. The follow pictures is for take on/off module.

1. The power off for node


a.Confirm all module power off of this node.(The LEDs of IOM are off)

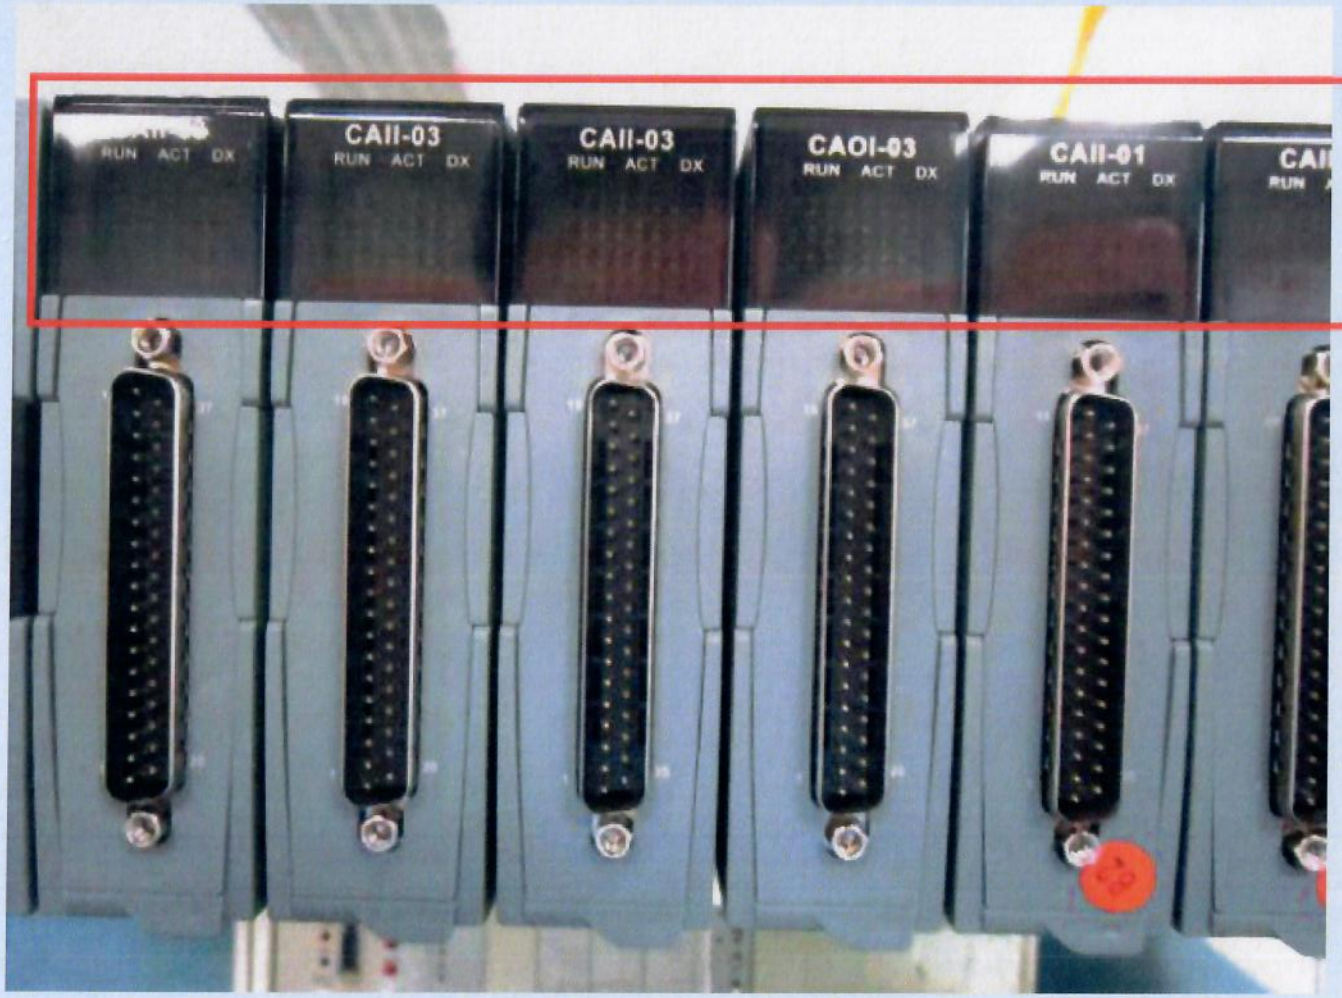

b.Confirm this IOM follow the track and take on for base board.

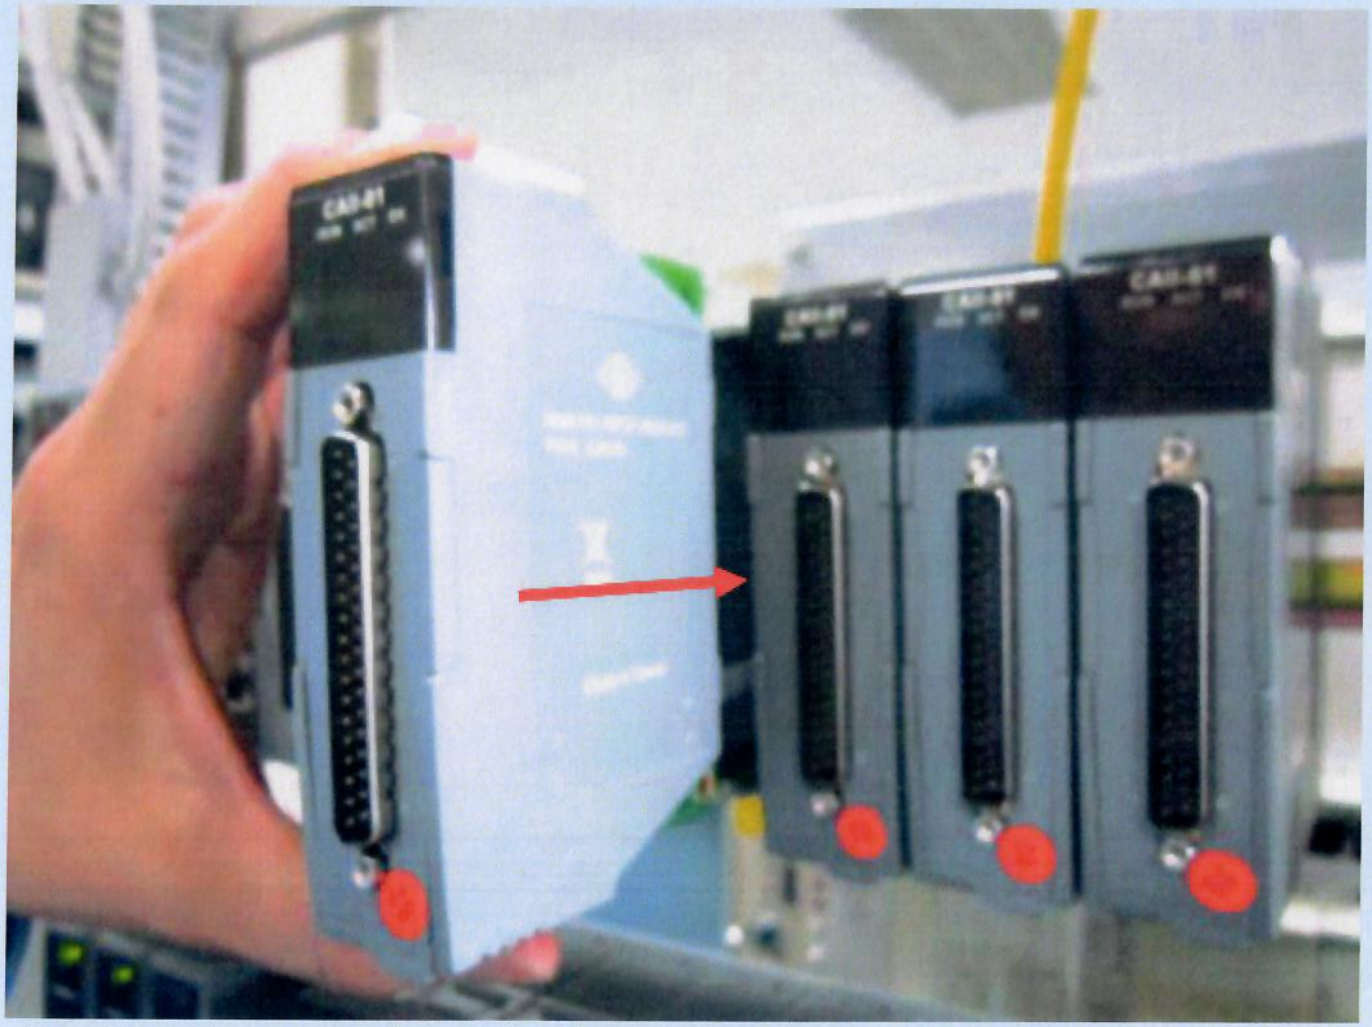

c.Confirm the lock(Orange color) of IOM is lock.

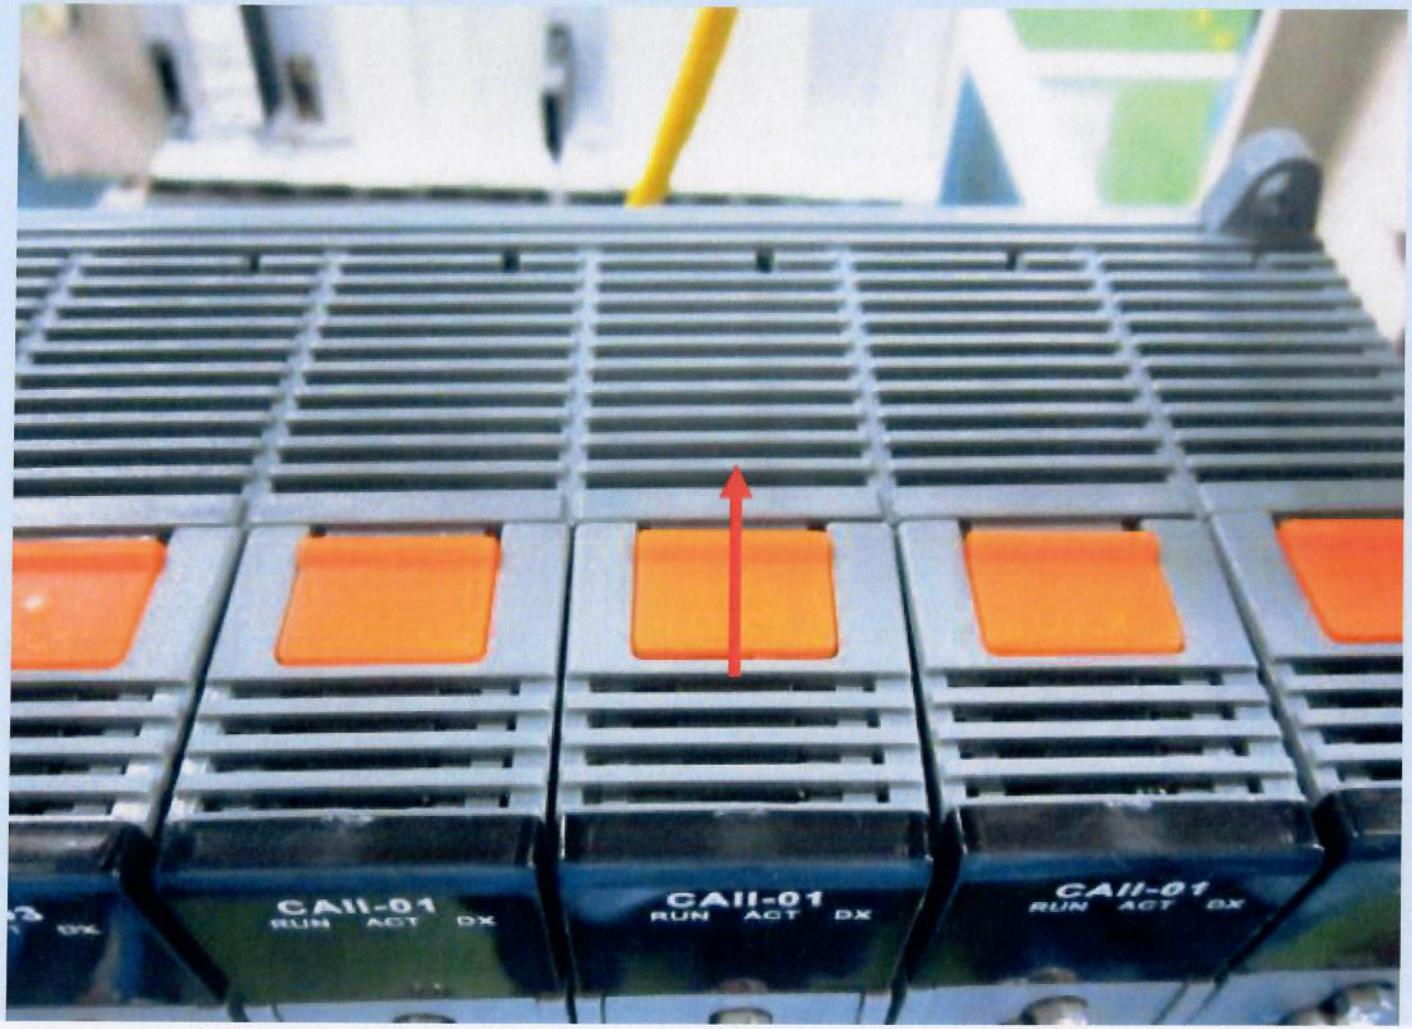

d.IOM mount the cable and power on for this node.




2.Power on for node


a.Confirm the LED is on.




b.First mount the cable with IOM.

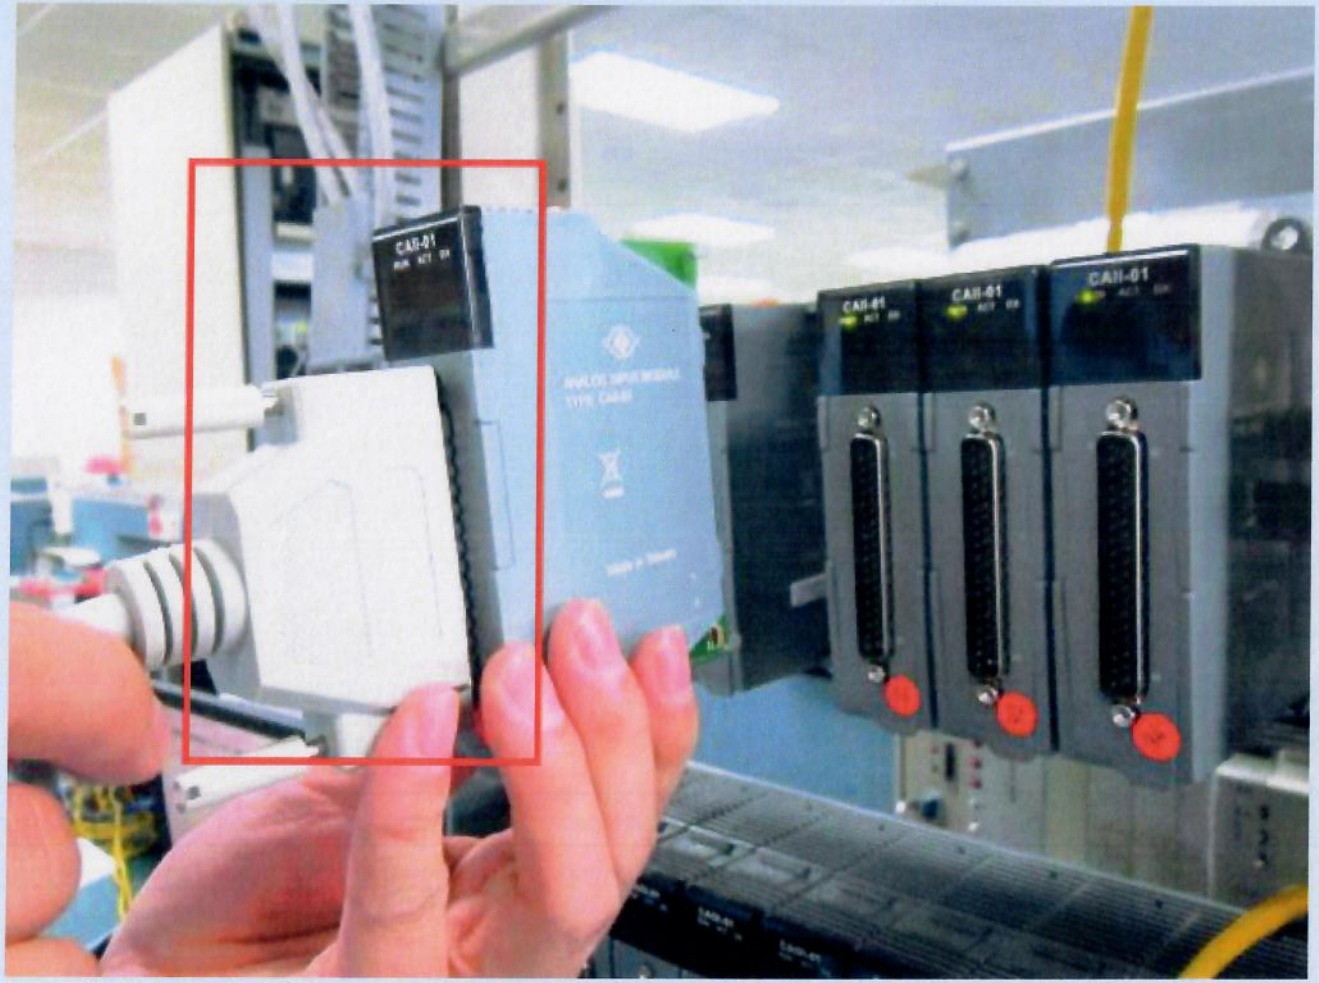

c.Follow the track and take on for base board.

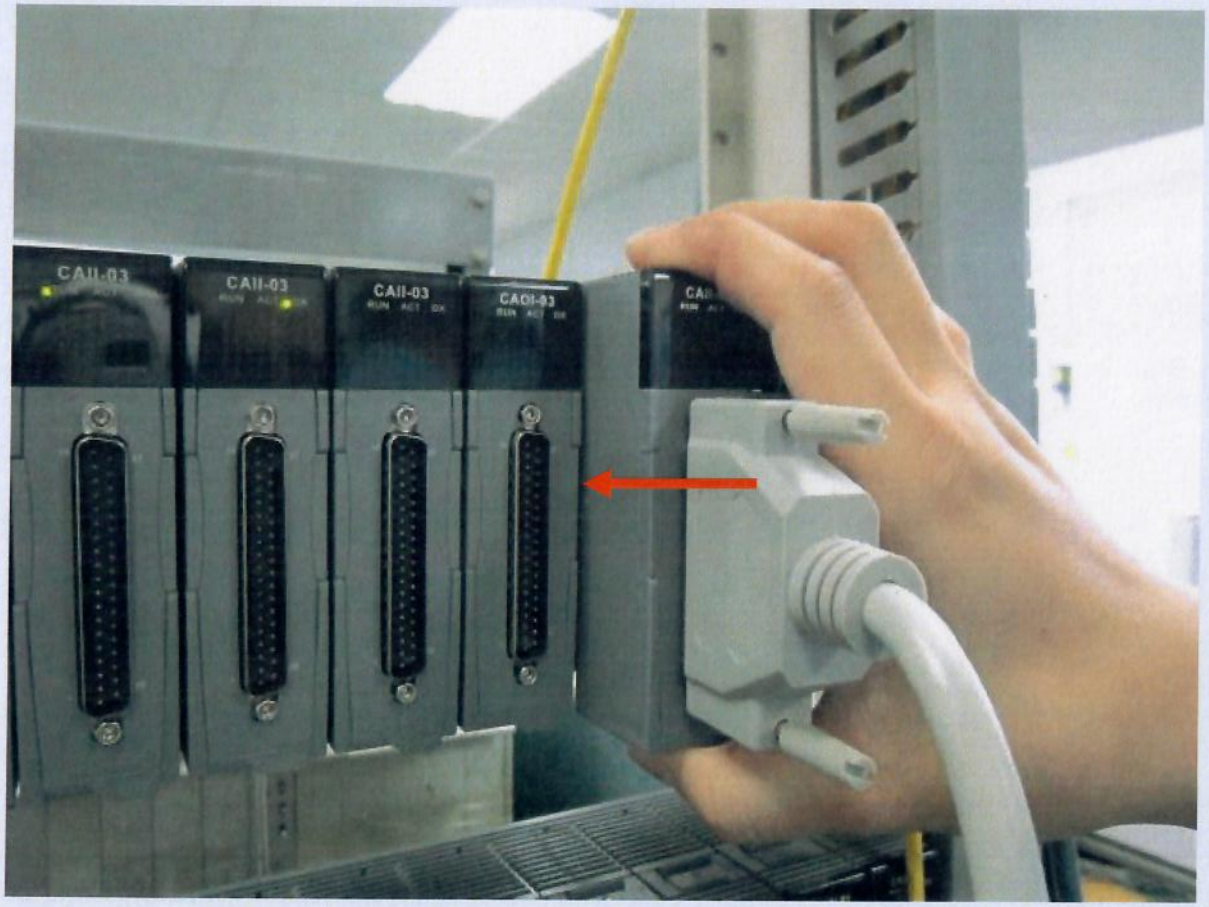


d. Confirm the lock(Orange color) of IOM is lock.

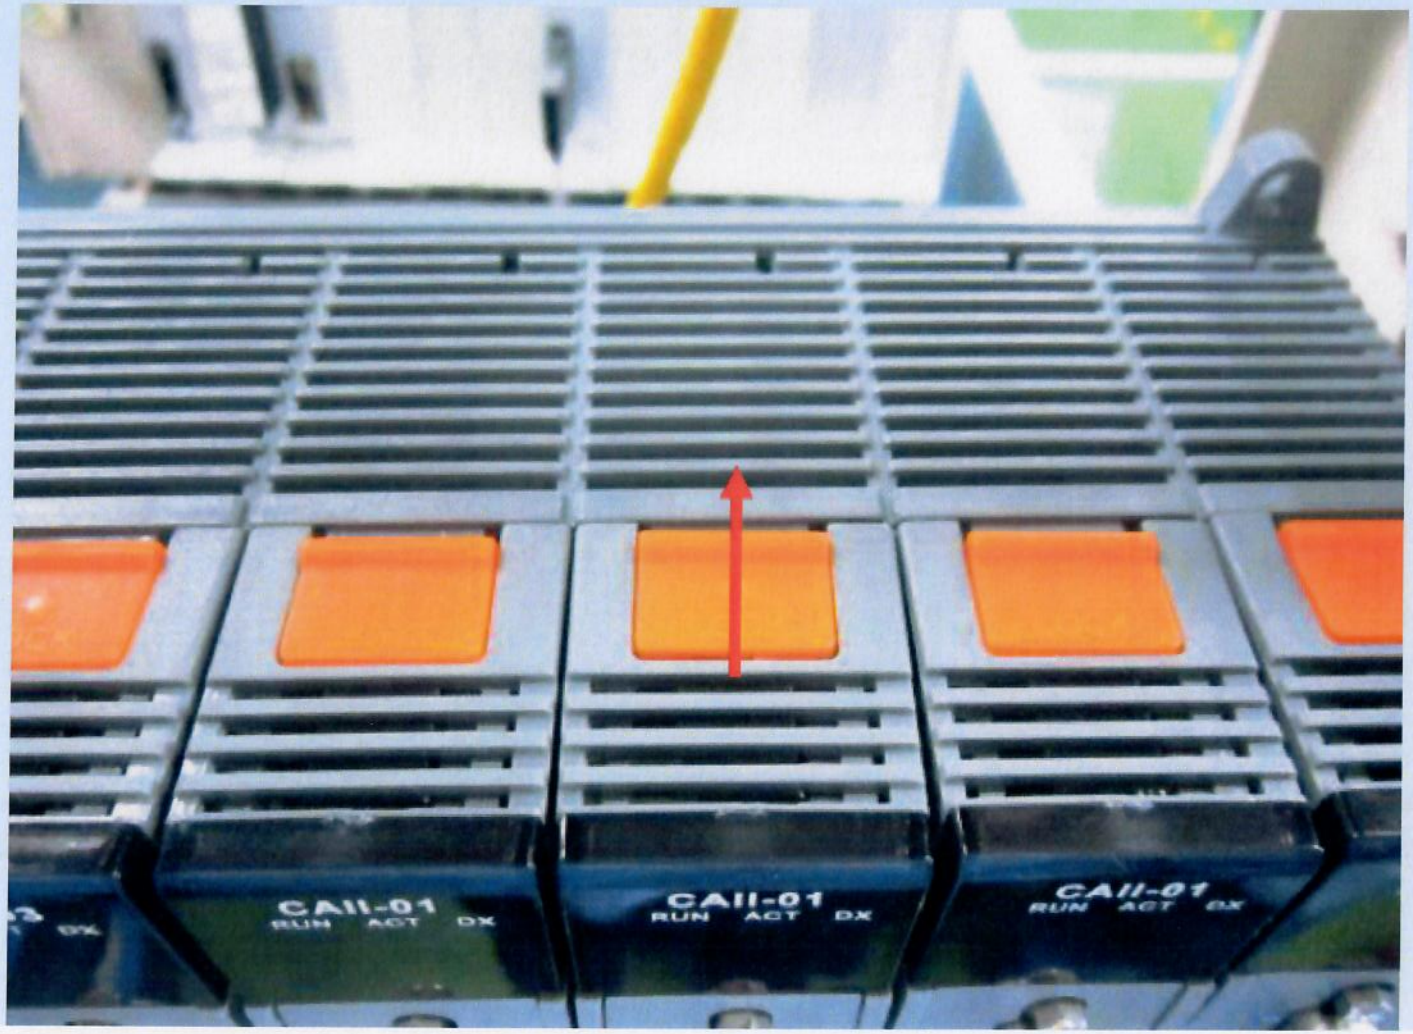


3.Take off Module

a.Comform the lock(Orange color) is un-lock.

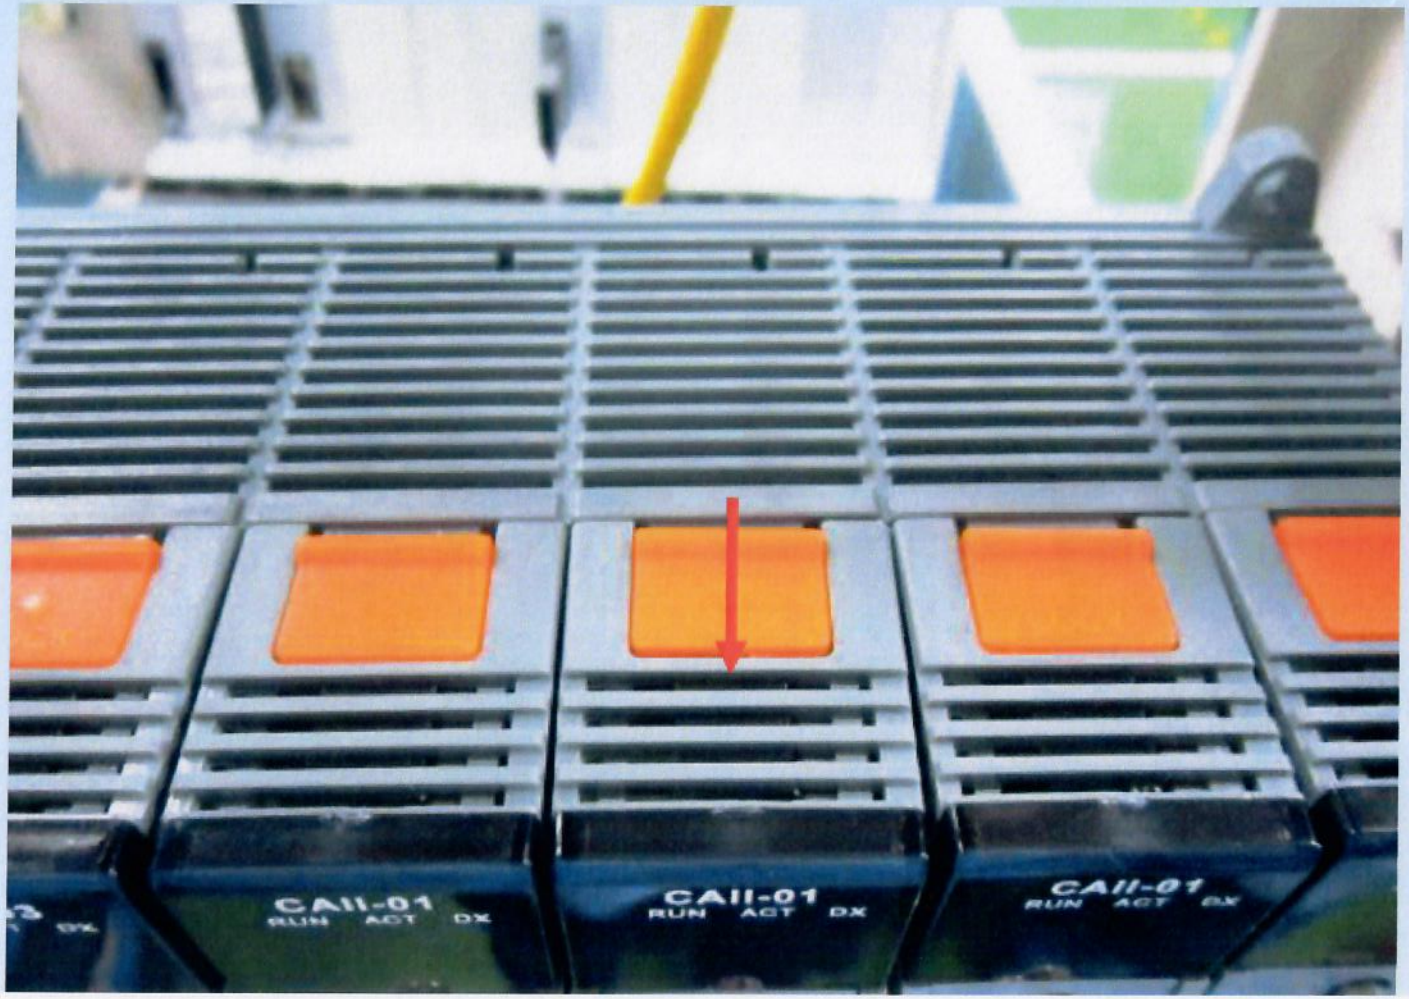

b.Follow the track and take off module.
Do not pull on the cable and take off the module.

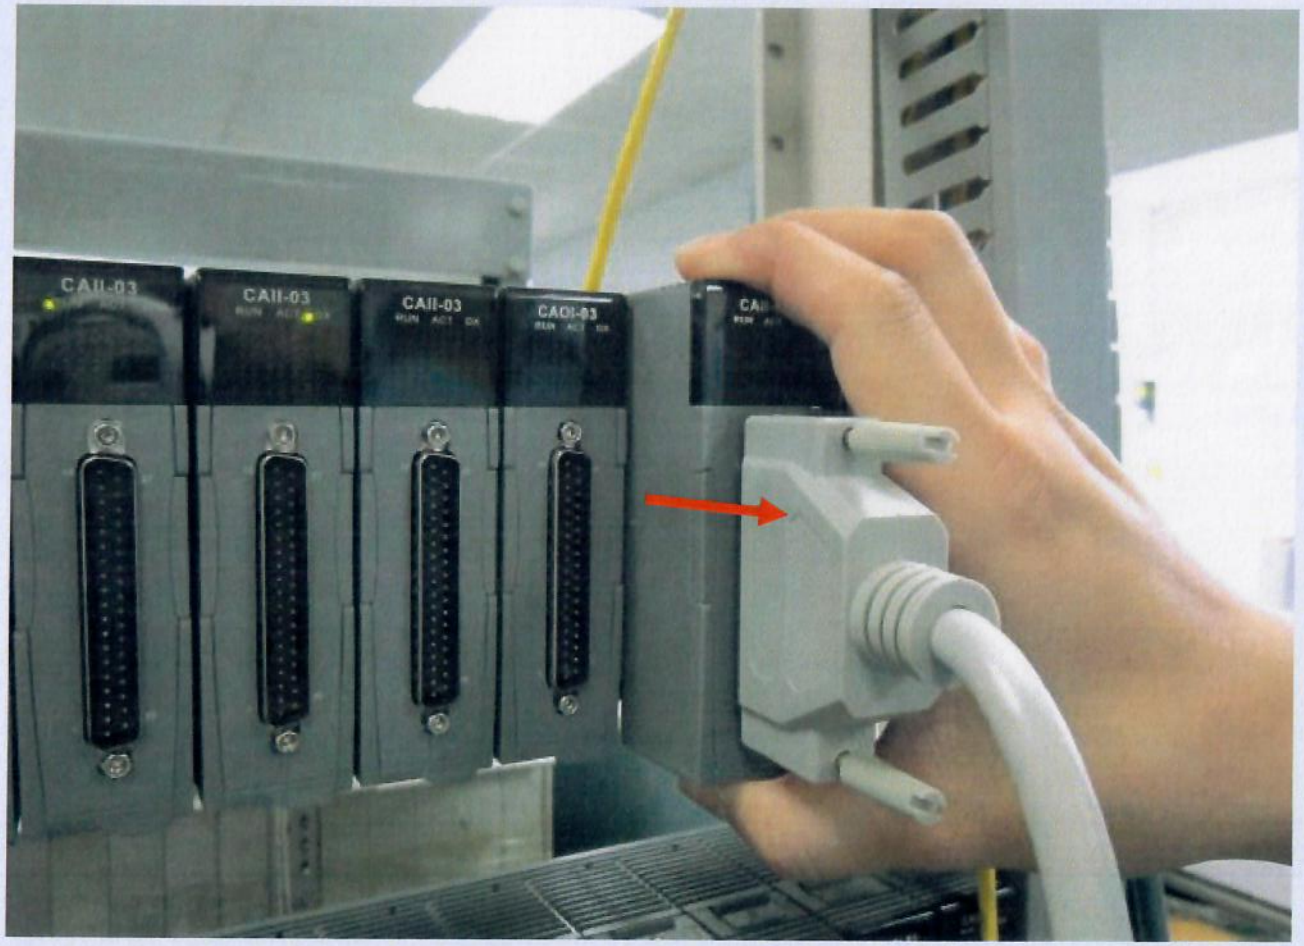

4.Caution

※ Do not pull on the cable and take off the module.

