

P00002 L60.12 : Jog Btn Enable (5 Circuit) - SC

19	32/73	<	[WLFQD]SrcA ML26332 [EQ][0] Chuck Y Origine Edge ~ Camera Cen-	[WLFQD]SrcB ML26334 [EQ][90] Chuc k Y Origine Ed ge ~ Camera-	SUB	[WLFQD]SrcA ML26332 [EQ][0] Chuck Y Origine Edge ~ Camera Cen-	[WLFQD]SrcB 10000	[WLFQD]Dest DL00024 ---	[DL00024] .../0091w	.../0093
20	34/84	>=	[WLFQD]SrcA ML26332 [EQ][0] Chuck Y Origine Edge ~ Camera Cen-	[WLFQD]SrcB ML26334 [EQ][90] Chuc k Y Origine Ed ge ~ Camera-	SUB	[WLFQD]SrcA ML26334 [EQ][90] Chuck Y Origine Edge ~ Camera Ce-	[WLFQD]SrcB 10000	[WLFQD]Dest DL00024 ---	[DL00024] .../0082w	.../0093
21	36/93				SUB	[WLFQD]SrcA DL00024 ---	[WLFQD]SrcB ML26324 [EQ]Chuck Y - Cutter X Interfe rence Avoid D-	[WLFQD]Dest DL00026 ---	[DL00026] .../0096	
22	37/95	>	[WLFQD]SrcA DL00026 ---	[WLFQD]SrcB 3CHY1~APC S SCHY1~Machi ne coordinate feedback posi-				MB901332 ○ ---		
23	39/99				SUB	[WLFQD]SrcA ML27810 [EQ]BKPBY O rigine Upper E dge ~ Camera-	[WLFQD]SrcB ML27824 [EQ]BKPBY ~ Cutter X Min In terference Dis-	[WLFQD]Dest DL00028 ---	[DL00028] .../0102	
24	40/102	>	[WLFQD]SrcA DL00028 ---	[WLFQD]SrcB BKPBY1~A POS BKPBY1~Mac hine coordinat e feedback p-				MB901333 ○ ---		
35 Axis (CZ) DL00030 ~ DL00038										
25	42/103		DB000000 ┌─┴─┐ ---					MB901340 ○ ---		
36 Axis (CS) DL00040 ~ DL00048										
26	44/107		MB045726 ┌─┴─┐ Manual Alignm ent Flag					MB901350 ○ ---		
37 Axis (SP) DL00050 ~ DL00058										
27	46/109		DB000000 ┌─┴─┐ ---					MB901360 ○ ---		
38 Axis (LCAMY) DL00060 ~ DL00068										
28	48/111		MB045726 ┌─┴─┐ Manual Alignm ent Flag					MB901370 ○ ---		
39 Axis (RCAMY) DL00070 ~ DL00078										
29	50/113		MB045726 ┌─┴─┐ Manual Alignm ent Flag					MB901380 ○ ---		
40 Axis (LCAMZ) DL00080 ~ DL00088										
30	52/115		DB000000 ┌─┴─┐ ---					MB901390 ○ ---		
41 Axis (RCAMZ) DL00090 ~ DL00098										
31	54/117		DB000000 ┌─┴─┐ ---					MB901400 ○ ---		
42 Axis (SP) DL00100 ~ DL00108										
32	56/119		DB000000 ┌─┴─┐ ---					MB901410 ○ ---		
43 Axis (SP) DL00110 ~ DL00118										
33	58/121		DB000000 ┌─┴─┐ ---					MB901420 ○ ---		
44 Axis (SP) DL00120 ~ DL00128										
34	60/123		DB000000 ┌─┴─┐ ---					MB901430 ○ ---		
45 Axis (SP) DL00130 ~ DL00138										
35	62/125		DB000000 ┌─┴─┐ ---					MB901440 ○ ---		
46 Axis (SP) DL00140 ~ DL00148										
36	64/127		DB000000 ┌─┴─┐ ---					MB901450 ○ ---		


47 Axis (SP)									
DL00150 ~ DL00158									
37	DB000000							MB901460	
48 Axis (SP)									
DL00160 ~ DL00168									
38	DB000000							MB901470	
Jog(+) Enable 조건									
33 Axis (CX)									
DL00210 ~ DL00218									
39				SUB	[WLFQD]SrcA AMX~APOS CAMX-Machine coordinate feedback Position	[WLFQD]SrcB CX~APOS CX-Machine coordinate feedback position -	[WLFQD]Dest DL00210 ---	[DL00210] .../0163	
40	<	[WLFQD]SrcA ML26332 [EQ][0] Chuck Y Origine Edge ~ Camera Center	[WLFQD]SrcB ML26334 [EQ][90] Chuck Y Origine Edge ~ Camera-	SUB	[WLFQD]SrcA ML26332 [EQ][0] Chuck Y Origine Edge ~ Camera Center	[WLFQD]SrcB 10000	[WLFQD]Dest DL00212 ---	[DL00212] .../0152w	.../0157
41	>=	[WLFQD]SrcA ML26332 [EQ][0] Chuck Y Origine Edge ~ Camera Center	[WLFQD]SrcB ML26334 [EQ][90] Chuck Y Origine Edge ~ Camera-	SUB	[WLFQD]SrcA ML26334 [EQ][90] Chuck Y Origine Edge ~ Camera Center	[WLFQD]SrcB 10000	[WLFQD]Dest DL00212 ---	[DL00212] .../0143w	.../0157
42				SUB	[WLFQD]SrcA ML27810 [EQ]BKPBY Origine Upper Edge ~ Camera-	[WLFQD]SrcB ML27824 [EQ]BKPBY ~ Cutter X Min Interference Dis-	[WLFQD]Dest DL00214 ---	[DL00214] .../0171	
43				SUB	[WLFQD]SrcA DL00212 ---	[WLFQD]SrcB ML26324 [EQ]Chuck Y - Cutter X Interference Avoid D-	[WLFQD]Dest DL00216 ---	[DL00216] .../0168	
44				SUB	[WLFQD]SrcA ML01156 Upper Left Alignment Position	[WLFQD]SrcB DL00050 ---	[WLFQD]Dest DL00218 ---	[DL00218] .../0174	
45	>	[WLFQD]SrcA DL00210 ---	[WLFQD]SrcB ML26344 [EQ]Left Upper Head ~ Right Upper Head -				MB902600		
46	MB045740						MB902601		
	All Cutter Z Wait Position								
47	>	[WLFQD]SrcA DL00216 ---	[WLFQD]SrcB SCHY1~APCS SCHY1-Machine coordinate feedback position				MB902602		
48	>	[WLFQD]SrcA DL00214 ---	[WLFQD]SrcB BKPBY1~APOS BKPBY1-Machine coordinate feedback position				MB902603		
49	<=	[WLFQD]SrcA DL00218 ---	[WLFQD]SrcB AMX~APOS CAMX-Machine coordinate feedback Position				MB902604		
	MB045726								
	Manual Alignment Flag								
34 Axis (CAMX)									
DL00220 ~ DL00228									
50				SUB	[WLFQD]SrcA AMX~APOS CAMX-Machine coordinate feedback Position	[WLFQD]SrcB CX~APOS CX-Machine coordinate feedback position -	[WLFQD]Dest DL00220 ---	[DL00220] .../0186	
51				SUB	[WLFQD]SrcA ML01158 Upper Right Alignment Position	[WLFQD]SrcB DL00050 ---	[WLFQD]Dest DL00222 ---	[DL00222] .../0192	
52	>	[WLFQD]SrcA DL00220 ---	[WLFQD]SrcB ML26344 [EQ]Left Upper Head ~ Right Upper Head -				MB902610		
	MB00000F								
	Debug								
53	<=	[WLFQD]SrcA DL00222 ---	[WLFQD]SrcB CX~APOS CX-Machine coordinate feedback position -				MB902611		
	MB045726								
	Manual Alignment Flag								
54	<	[WLFQD]SrcA ML26332 [EQ][0] Chuck Y Origine Edge ~ Camera Center	[WLFQD]SrcB ML26334 [EQ][90] Chuck Y Origine Edge ~ Camera-	SUB	[WLFQD]SrcA ML26332 [EQ][0] Chuck Y Origine Edge ~ Camera Center	[WLFQD]SrcB 10000	[WLFQD]Dest DL00224 ---	[DL00224] .../0214w	.../0216

L60.12 : Jog Btn Enable (5 Circuit) - SC

P00003

P00004 L60.12 : Jog Btn Enable (5 Circuit) - SC

55	10/2/2017	>=	[WLFQD]SrcA ML26332 [EQ][0] Chuck Y Origine Edge ~ Camera Cen-	[WLFQD]SrcB ML26334 [EQ][90] Chuc k Y Origine Ed ge ~ Camera-	SUB	[WLFQD]SrcA ML26334 [EQ][90] Chuck Y Origine Edge ~ Camera Ce-	[WLFQD]SrcB 10000	[WLFQD]Dest DL00224 ---	[DL00224] .../0205w	.../0216
56	10/12/16				SUB	[WLFQD]SrcA DL00224 ---	[WLFQD]SrcB ML26324 [EQ]Chuck Y - Cutter X Interfe rence Avoid D-	[WLFQD]Dest DL00226 ---	[DL00226] .../0219	
57	10/2/219	>	[WLFQD]SrcA DL00226 ---	[WLFQD]SrcB SCHY1~.APC S SCHY1~Machi ne coordinate feedback posi-				MB902612 ○ ---		
58	10/1/222				SUB	[WLFQD]SrcA ML27810 [EQ]BKPBY O rigine Upper E dge ~ Camera-	[WLFQD]SrcB ML27824 [EQ]BKPBY ~ Cutter X Min In terference Dis-	[WLFQD]Dest DL00228 ---	[DL00228] .../0225	
59	10/5/225	>	[WLFQD]SrcA DL00228 ---	[WLFQD]SrcB BKPBY1~.A POS BKPBY1~Mac hine coordinat e feedback p-				MB902613 ○ ---		
35 Axis (CZ) DL00230 ~ DL00238										
60	10/7/228		DB000000 ---					MB902620 ○ ---		
36 Axis (CS) DL00240 ~ DL00248										
61	10/9/230		MB045726 Manual Alignm ent Flag					MB902630 ○ ---		
37 Axis (SP) DL00250 ~ DL00258										
62	11/1/232		DB000000 ---					MB902640 ○ ---		
38 Axis (LCAMY) DL00260 ~ DL00268										
63	11/3/234		MB045726 Manual Alignm ent Flag					MB902650 ○ ---		
39 Axis (RCAMY) DL00270 ~ DL00278										
64	11/5/236		MB045726 Manual Alignm ent Flag					MB902660 ○ ---		
40 Axis (LCAMZ) DL00280 ~ DL00288										
65	11/7/238		DB000000 ---					MB902670 ○ ---		
41 Axis (RCAMZ) DL00290 ~ DL00298										
66	11/9/240		DB000000 ---					MB902680 ○ ---		
42 Axis (SP) DL00300 ~ DL00308										
67	12/1/242		DB000000 ---					MB902690 ○ ---		
43 Axis (SP) 43 Axis (LCTY1) DL00310 ~ DL00318										
68	12/3/244		DB000000 ---					MB902700 ○ ---		
44 Axis (SP) 44 Axis (LCTY2) DL00320 ~ DL00328										
69	12/5/246		DB000000 ---					MB902710 ○ ---		
45 Axis (SP) DL00330 ~ DL00338										
70	12/7/248		DB000000 ---					MB902720 ○ ---		
46 Axis (SP) DL00340 ~ DL00348										
71	12/9/250		DB000000 ---					MB902730 ○ ---		

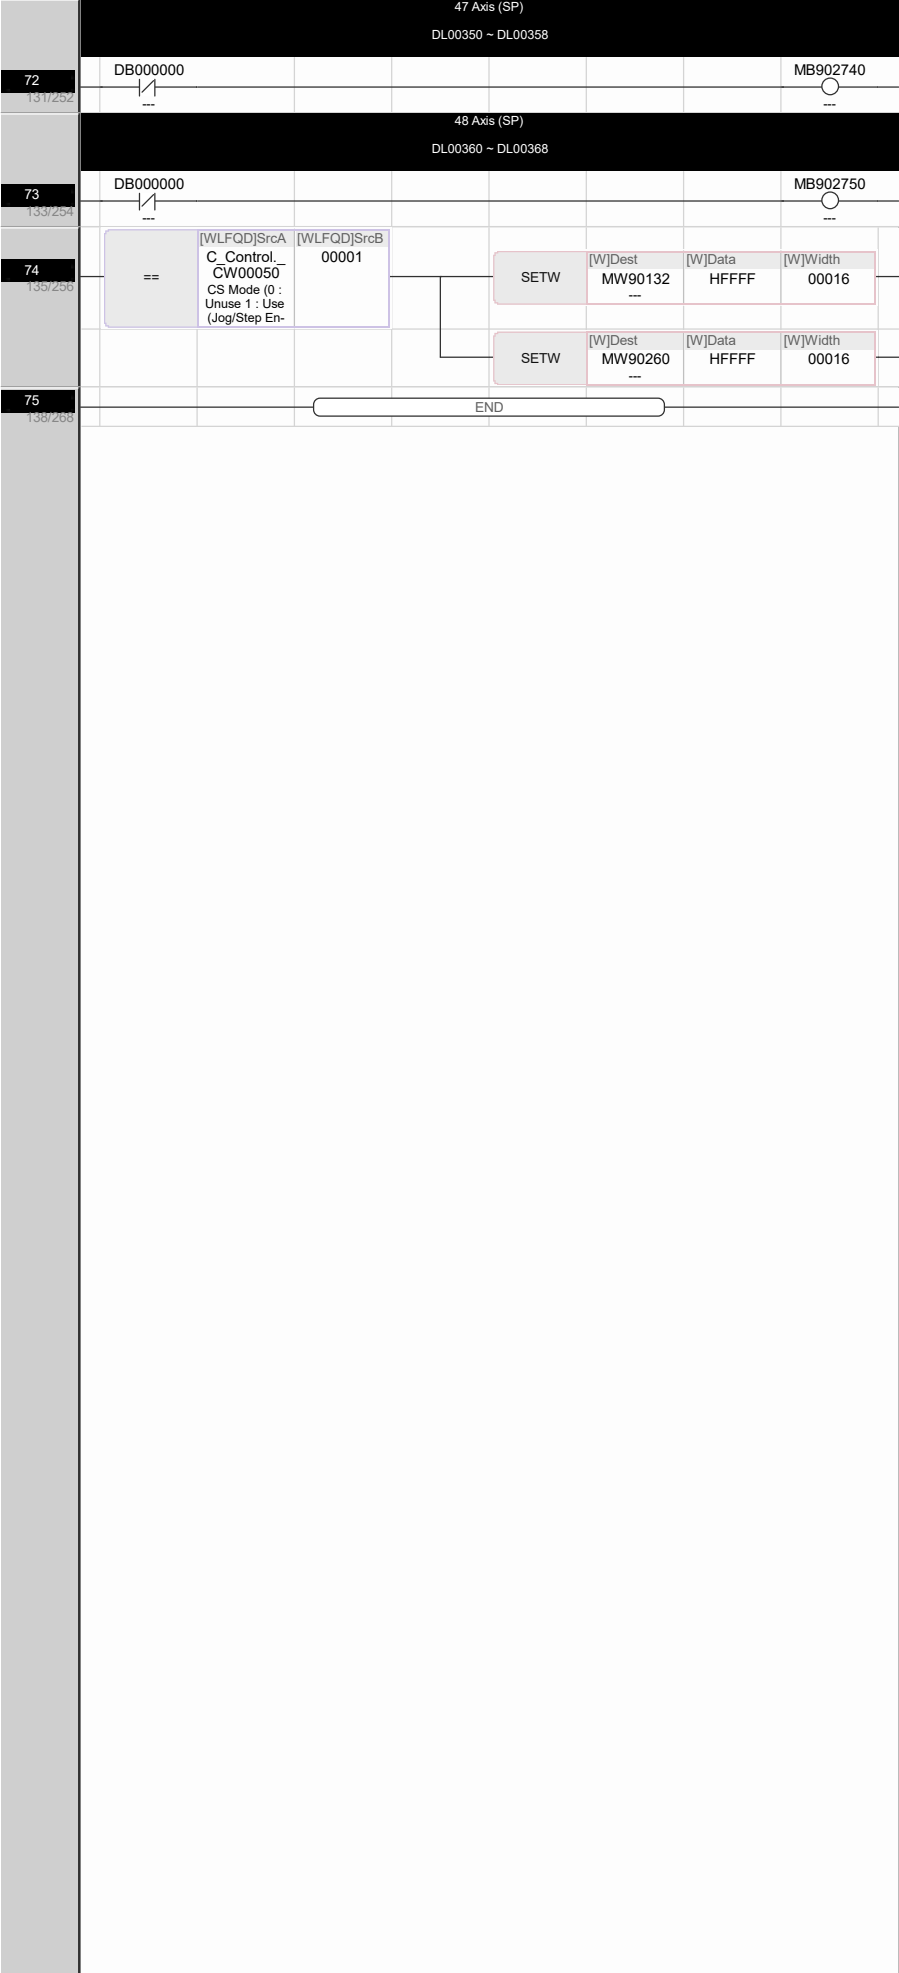

[MW90132]
.../0004w
[MW90260]
.../0007w

L40.40/0058i
L40.40/0135i