


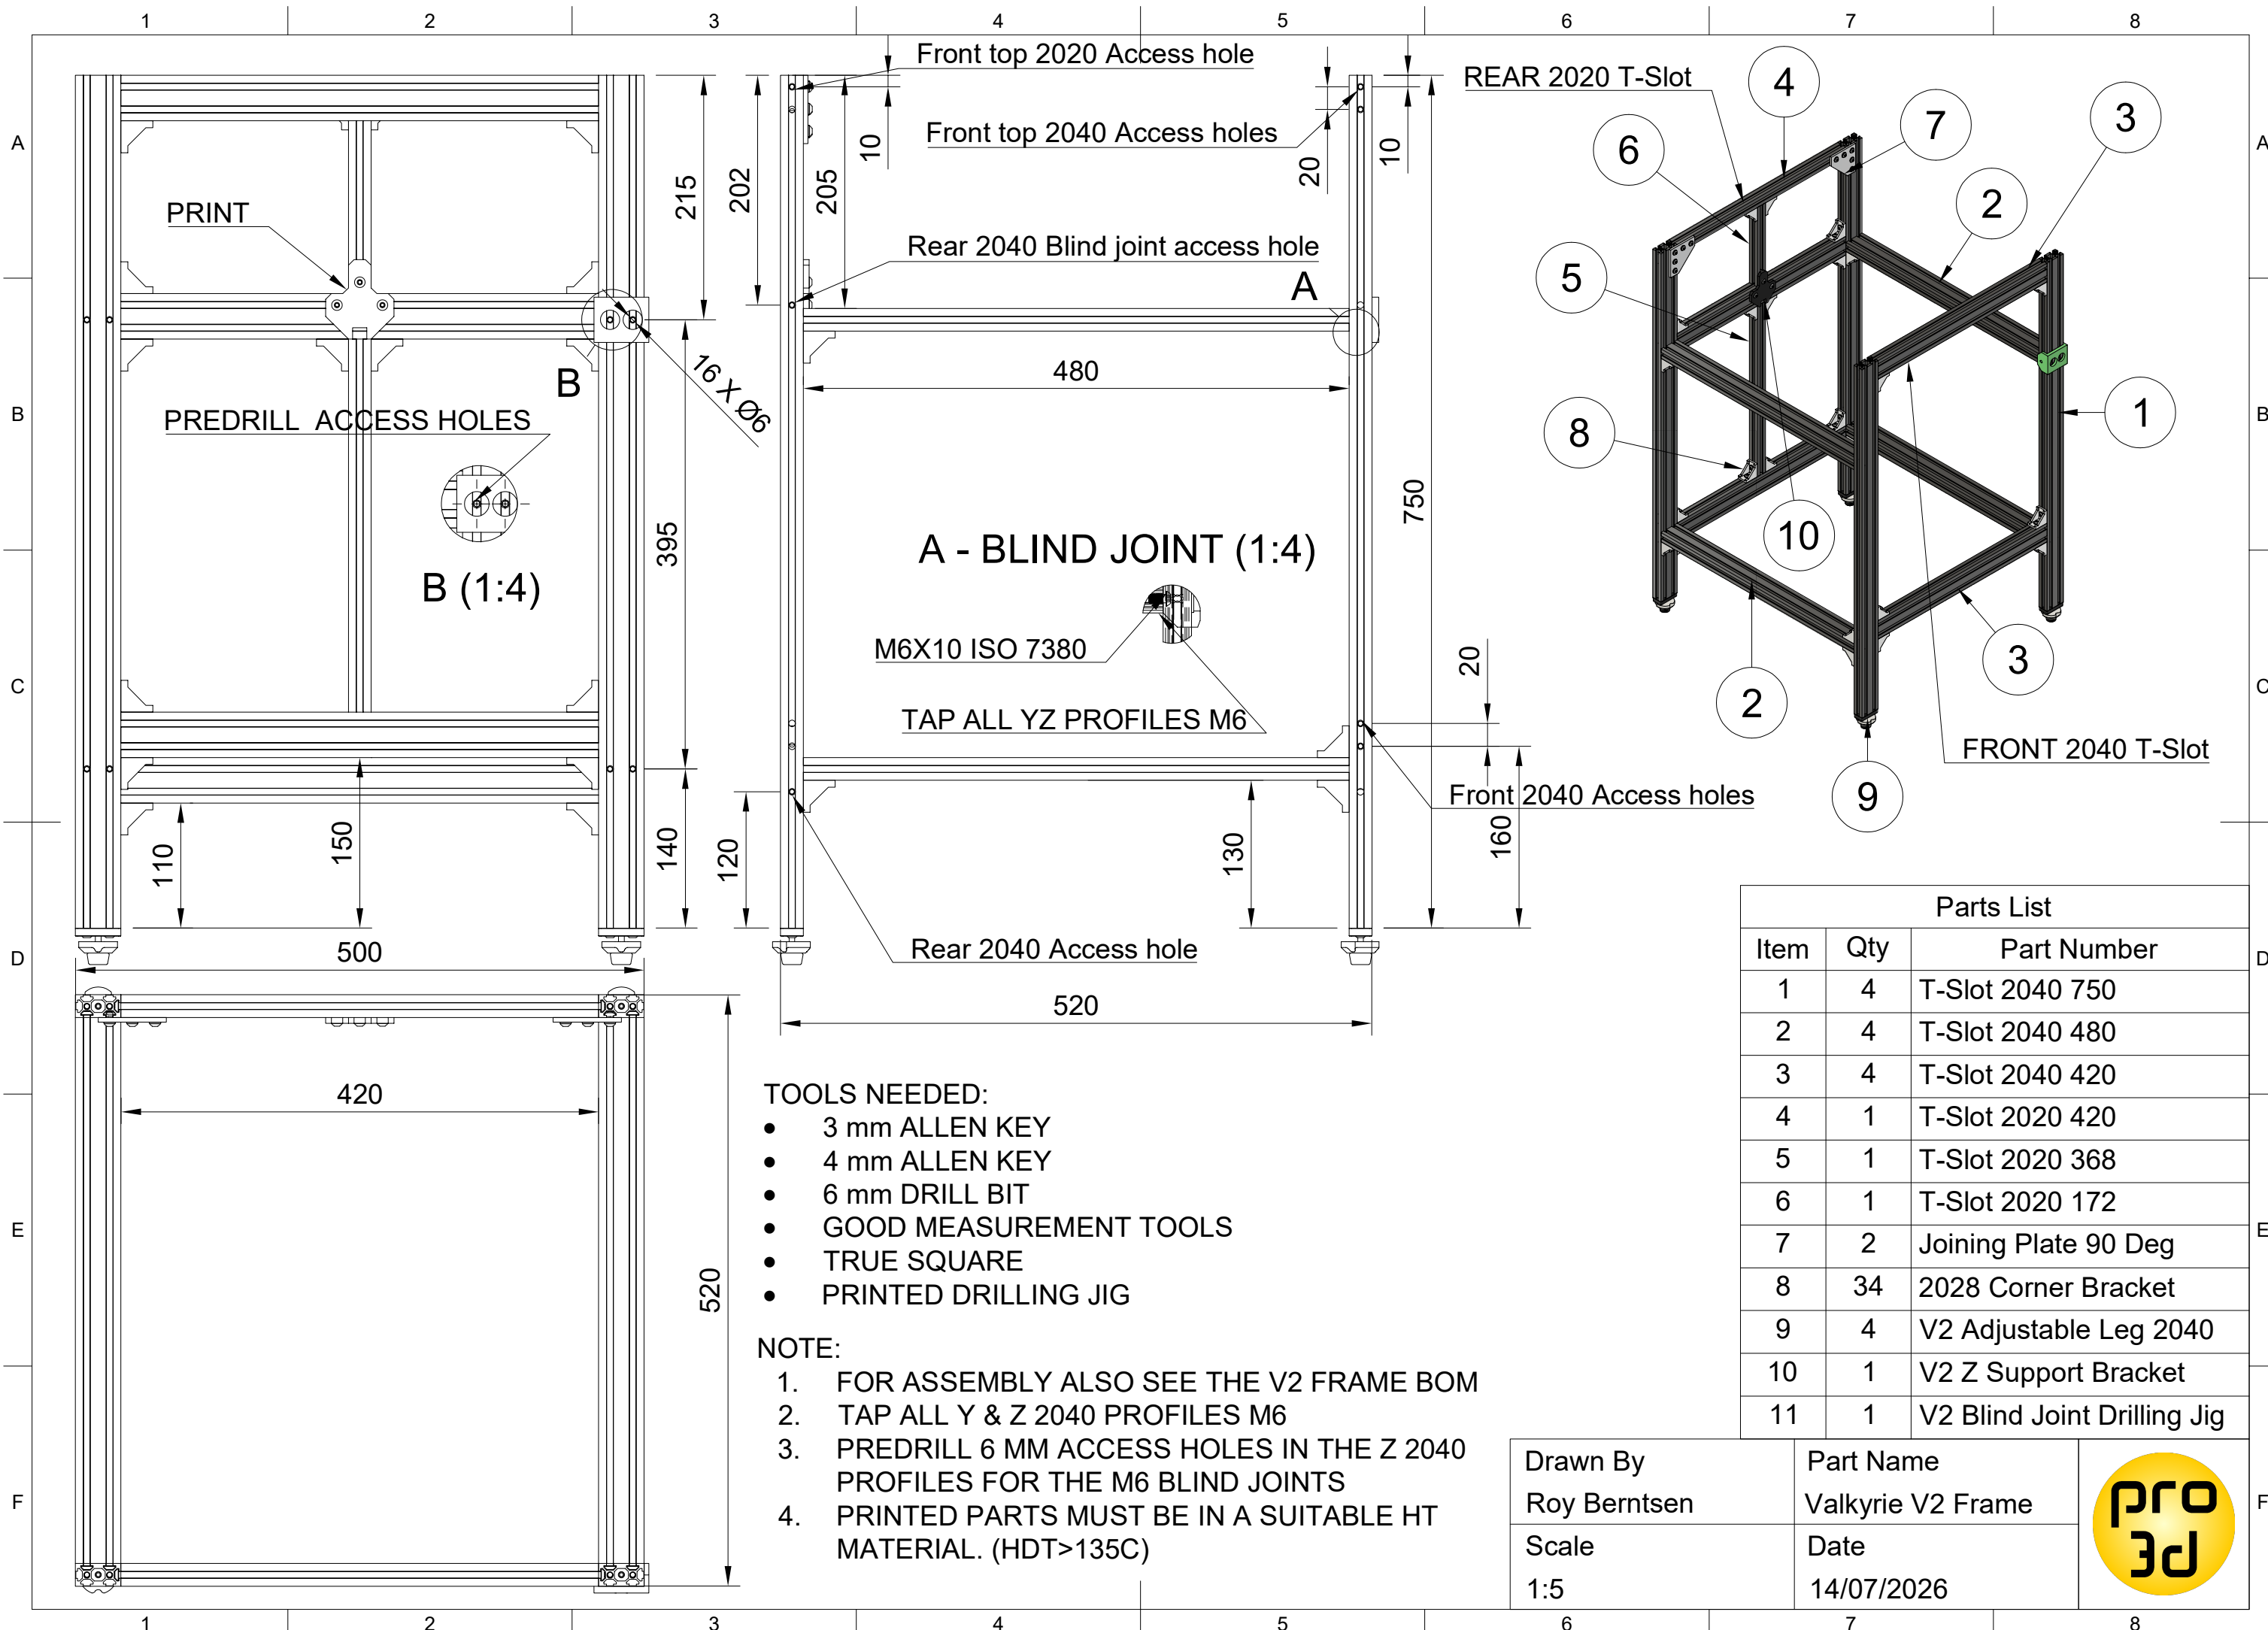

TOOLS NEEDED:

- 3 mm ALLEN KEY
- 4 mm ALLEN KEY
- 6 mm DRILL BIT
- GOOD MEASUREMENT TOOLS
- TRUE SQUARE
- PRINTED DRILLING JIG

NOTE:

1. FOR ASSEMBLY ALSO SEE THE V2 FRAME BOM
2. TAP ALL Y & Z 2040 PROFILES M6
3. PREDRILL 6 MM ACCESS HOLES IN THE Z 2040 PROFILES FOR THE M6 BLIND JOINTS
4. PRINTED PARTS MUST BE IN A SUITABLE HT MATERIAL. (HDT>135C)

Parts List		
Item	Qty	Part Number
1	4	T-Slot 2040 750
2	4	T-Slot 2040 480
3	4	T-Slot 2040 420
4	1	T-Slot 2020 420
5	1	T-Slot 2020 368
6	1	T-Slot 2020 172
7	2	Joining Plate 90 Deg
8	34	2028 Corner Bracket
9	4	V2 Adjustable Leg 2040
10	1	V2 Z Support Bracket
11	1	V2 Blind Joint Drilling Jig

Drawn By Roy Berntsen	Part Name Valkyrie V2 Frame	
Scale 1:5	Date 14/07/2026	