

Mains Connections

KEY wire colours and size

Live		Br 18 awg silicone
Neutral		BL 18 awg silicone
Earth		Gr 18 awg silicone

Bolt an earth wire to the aluminium frame of the printer!!

See dry Box wiring
Use the cable in the IEC



6p HDC1 connector
10P HDC3 connector

Mains Switch

Fuse holder

IEC Power In

12V DC 50W


24V DC 350W

10p HDC 3/P1

6p HDC1/P1



Aluminium mounting panel

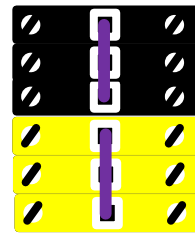

Bolt earth wire to plate


Connect to earth bolt on frame

Bolt earth wire to plate

Connect to earth bolt on frame

Notes:

Make sure the shorting bars (in Purple) across the terminals are only 3 units wide
Use ring crimps on the SSR connections (4mm id)
Use a small amount of heatsink compound between SSR and Aluminium plate
Sleeve mains cable

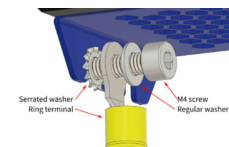

Earth connection to plates

