


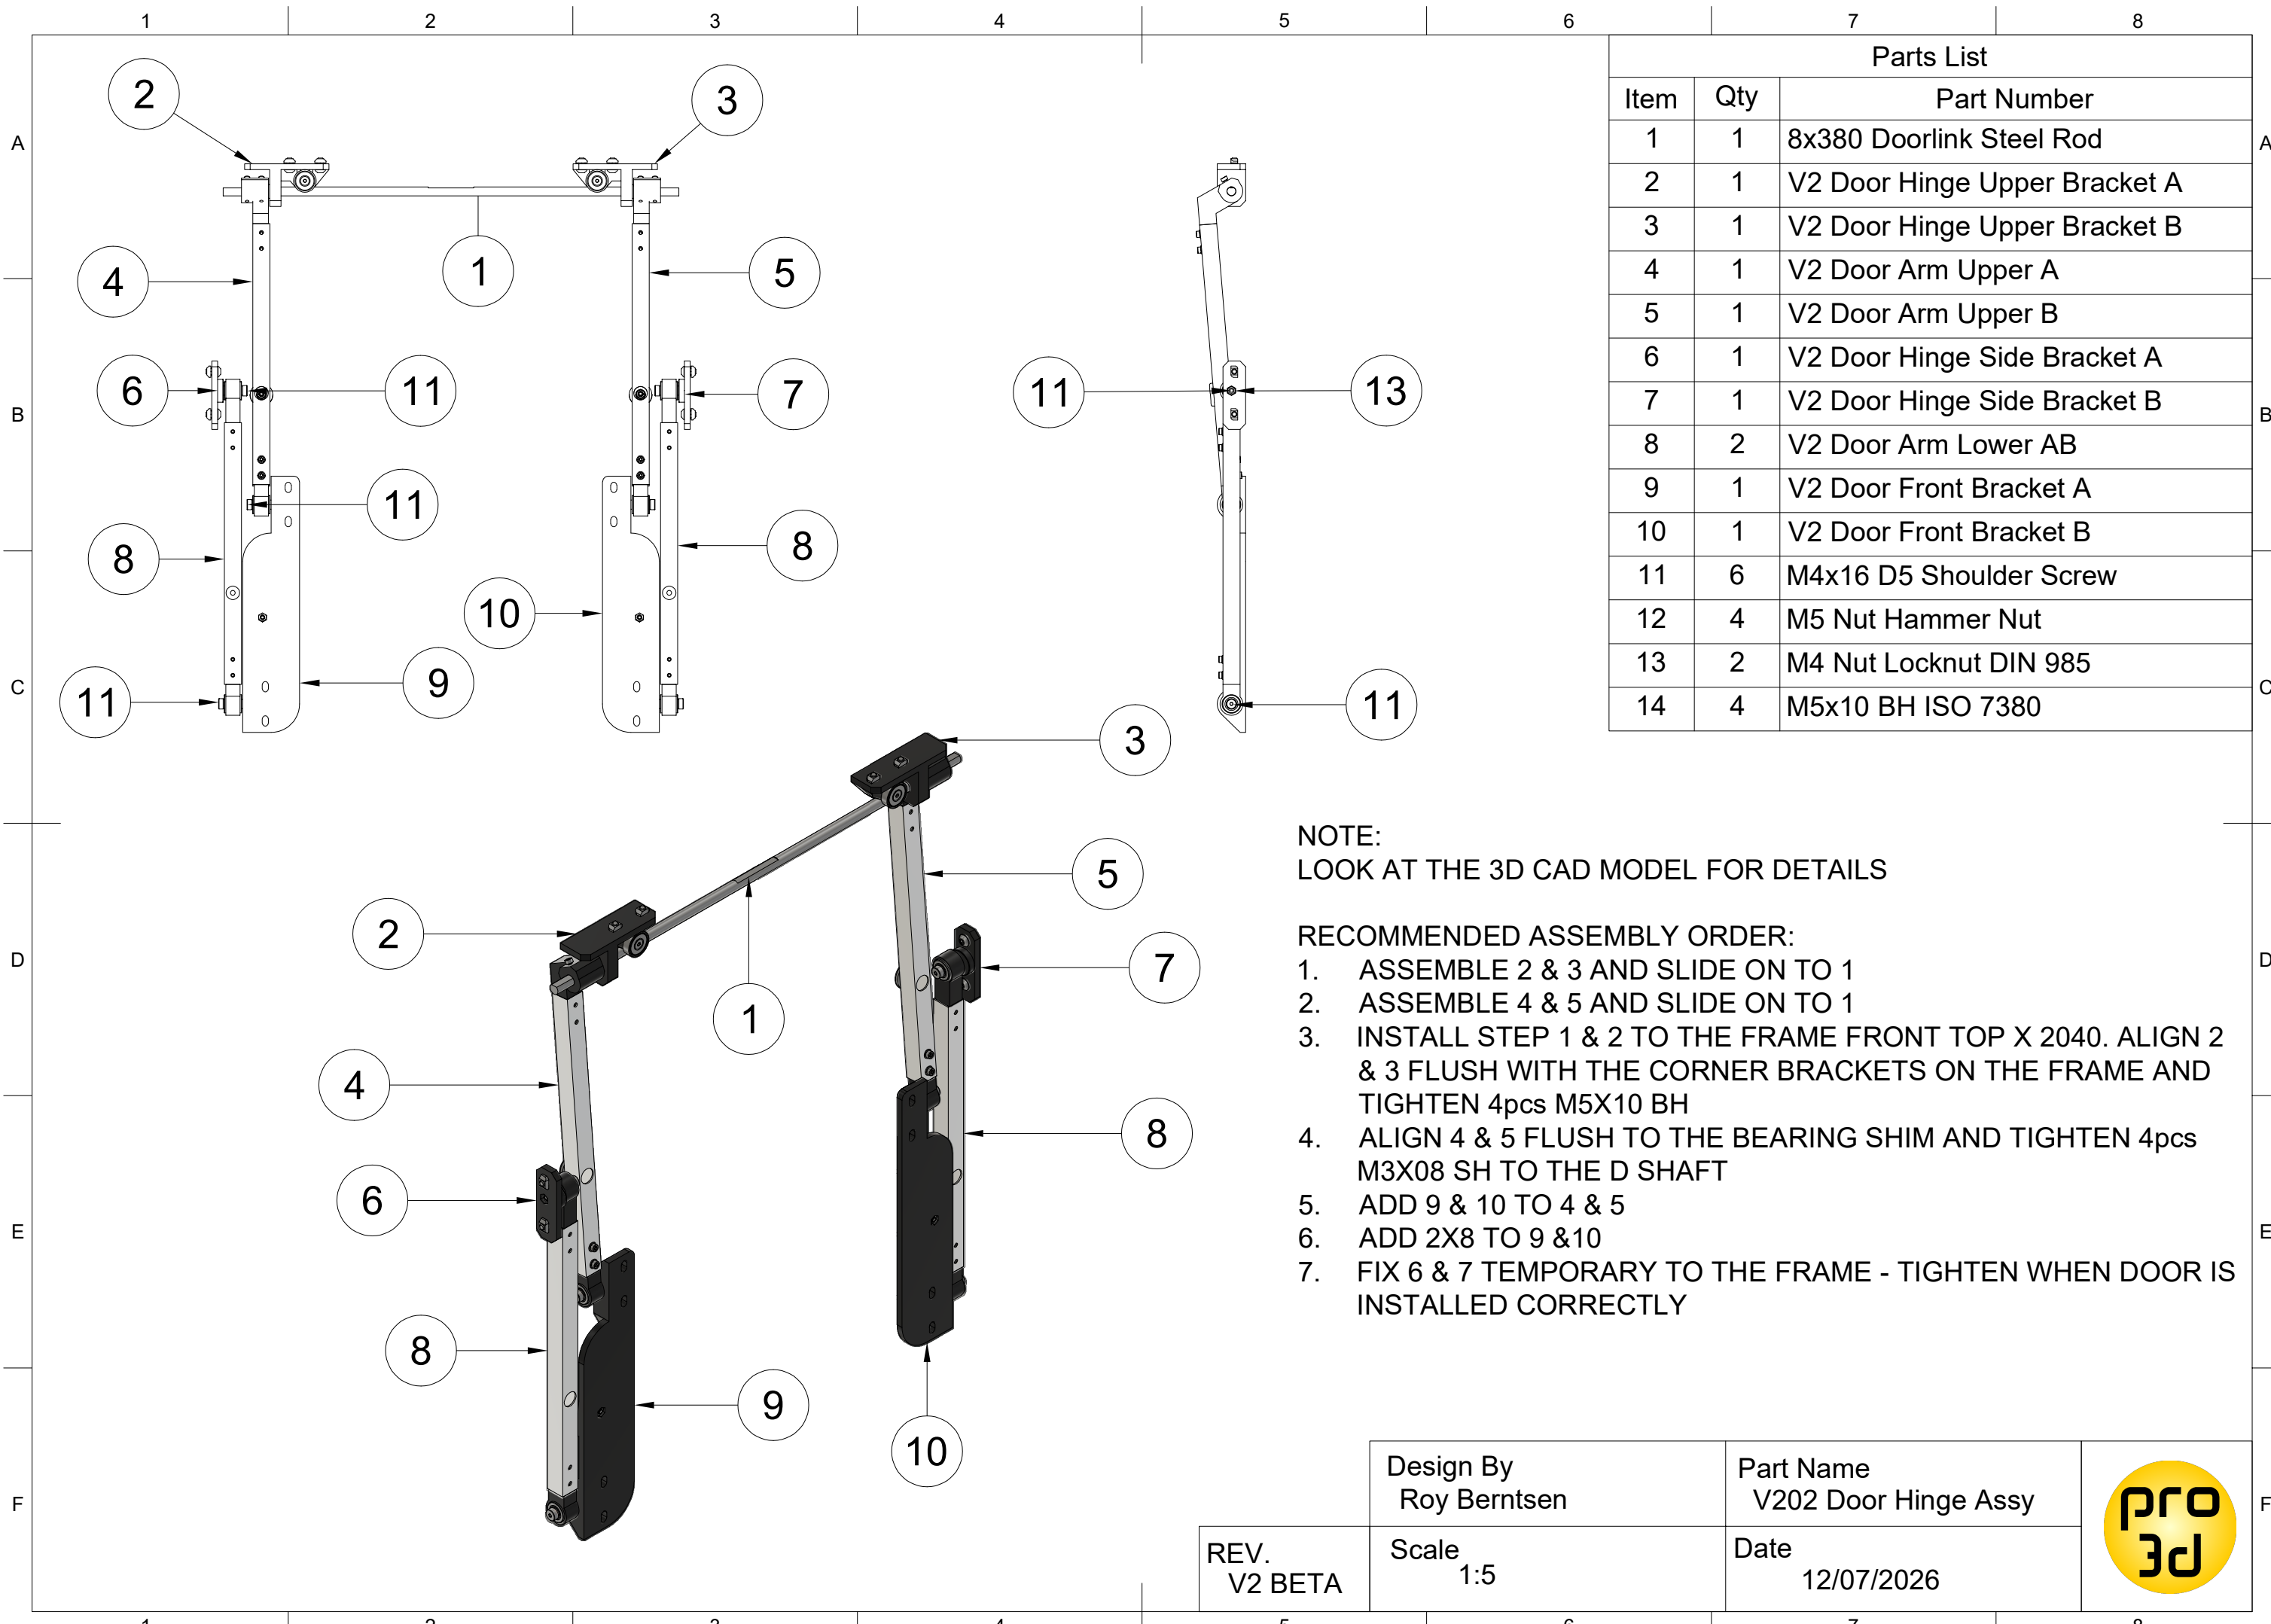

Parts List		
Item	Qty	Part Number
1	1	8x380 Doorlink Steel Rod
2	1	V2 Door Hinge Upper Bracket A
3	1	V2 Door Hinge Upper Bracket B
4	1	V2 Door Arm Upper A
5	1	V2 Door Arm Upper B
6	1	V2 Door Hinge Side Bracket A
7	1	V2 Door Hinge Side Bracket B
8	2	V2 Door Arm Lower AB
9	1	V2 Door Front Bracket A
10	1	V2 Door Front Bracket B
11	6	M4x16 D5 Shoulder Screw
12	4	M5 Nut Hammer Nut
13	2	M4 Nut Locknut DIN 985
14	4	M5x10 BH ISO 7380

NOTE:
LOOK AT THE 3D CAD MODEL FOR DETAILS

- RECOMMENDED ASSEMBLY ORDER:
1. ASSEMBLE 2 & 3 AND SLIDE ON TO 1
 2. ASSEMBLE 4 & 5 AND SLIDE ON TO 1
 3. INSTALL STEP 1 & 2 TO THE FRAME FRONT TOP X 2040. ALIGN 2 & 3 FLUSH WITH THE CORNER BRACKETS ON THE FRAME AND TIGHTEN 4pcs M5X10 BH
 4. ALIGN 4 & 5 FLUSH TO THE BEARING SHIM AND TIGHTEN 4pcs M3X08 SH TO THE D SHAFT
 5. ADD 9 & 10 TO 4 & 5
 6. ADD 2X8 TO 9 &10
 7. FIX 6 & 7 TEMPORARY TO THE FRAME - TIGHTEN WHEN DOOR IS INSTALLED CORRECTLY

REV. V2 BETA	Design By Roy Berntsen	Part Name V202 Door Hinge Assy	
	Scale 1:5	Date 12/07/2026	