Our project aims to engineer BtSULT to catalyze the sulfonation of lithocholic acid (LCA), potentially improving bile acid metabolism in individuals experiencing debilitating post-cholecystectomy syndrome (PCS). The goal of our in vitro trials was to express, quantify, purify, and evaluate the structural and functional properties of our target sulfotransferase enzyme.

The experimental workflow encompassed plasmid transformation, colony screening, protein expression, purification, and biochemical evaluation. Plasmid constructs were transformed into competent Escherichia coli (*E.Coli*) BL21 cells and screened using **Colony Polymerase Chain Reaction (PCR)** to identify colonies containing the desired construct. Positive colonies were subsequently cultured to establish larger-scale expression cultures:

> *Plasmid Vector and Insert Details: pET_28(+), Kan. R, T7 Primer, lacI operon*

Protein concentration was quantified using the **Bicinchoninic Acid (BCA) Assay**, while protein composition and apparent molecular weight were evaluated using Coomassie Brilliant Blue staining following sodium dodecyl sulfate–**Polyacrylamide Gel Electrophoresis (SDS-PAGE)**.

> *Avg. Purified Sample Concentration (under non-conflicting growth conditions):*
>
> *238.759µg/mL (σ = 32.558µg/mL) (Std. Curve $R^2 \cong 0.95$)*

Protein expression was induced using isopropyl β-D-1-thiogalactopyranoside (IPTG). Skim milk was also investigated as an alternative or supplementary expression-induction strategy deriving from necessity. Following expression, crude intracellular materials were harvested and lysed to recover the protein-containing fraction. The target protein was then isolated through His-tag affinity purification.

> *Cell lysis via B-PER™ Reagent(Non-ionic 20 mM Tris•HCl buffer at pH 7.5), Protein Purification via His-Spin Protein Miniprep Nickel-charged His-Affinity Gel [IMAC] (Zymo P2002)*

Wet Lab

Laboratory experimentation is an essential pillar in synthetic biology for testing the real-world behavior of designed biological parts and systems. Our wet lab workflow primarily involves completing robust assays to quantify LCA sulfation activity of the reengineered BtSULT enzyme.

Bacterial Transformation and Host Expression

Transforming BL21 Cells

BL21 E. coli cells acted as the host for re-engineered BtSULT transformation. We elected the pET_28a(+) backbone as a vector to hold our gene insert for convenience of the T7 promoter region. This promoter region is highly transcribed by abundant T7 RNA polymerase in BL21 cells, focusing the cells' resources on creating an abundance of recombinant protein. We also used the selective antibiotic *kanamycin* to limit streaked bacterial cultures and other contaminants from growing without the included resistance gene (Kan. R).

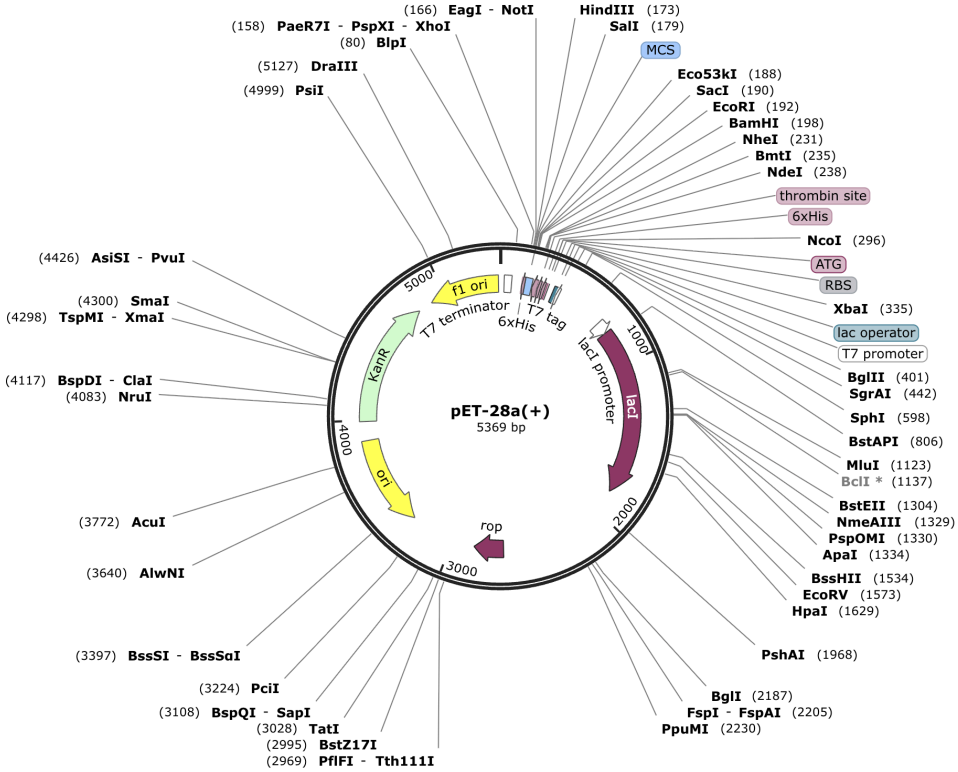

pET-28a(+) Plasmid Map from AddGene; *including: 6xHis, T7 Promoter, lacI promoter, and KanR*

Bacterial Transformation

Bacterial transformation is a process in which foreign DNA is introduced into bacterial cells, leading to new genetic traits being expressed by the bacteria host. By having E-coli BL21 bacterial cells uptake plasmid DNA, we were able to produce our desired protein.

A. Materials

- BtSULT Plasmid DNA
- SulFlux Plasmid DNA
- BL21 culture tubes
- 37°C Bacterial shaker, at 200 xg
- 42°C Water bath
- Microplate reader
- Super Optimal with Catabolite repression Broth (SOC)
- Microfuge tubes
- LB agar plates treated with Kanamycin
- 96-well plate (transparent)

B. Procedure

1. Thaw the BL-21 competent E. coli cells on wet ice
2. Pipette 100 uL of bacterial culture (at OD of ≥5) into a labelled microfuge tube (initials, BL21 + BtSULT, date)
3. Add 100 ng of plasmid DNA to each microfuge tube, and mix by gently flicking the tube. Do not resuspend or vortex, as it will lyse the cells.
4. Incubate the microfuge tubes of bacteria and plasmid on ice for at least 30 minutes.
5. Heat-shock the microfuge tube in a water bath at 42°C for 45 seconds, then immediately place the tube on ice for 2 minutes.
6. Add the cells to a bacteria culture tube with 900 uL of room temperature LB broth, closing the cap lightly to allow airflow (1:10 dilution)
7. Put the culture into the bacterial shaker, set to 200 XG, 37°C for 30-60 minutes.
8. Add 200 uL of the recovered cells to the LB agar plate treated with kanamycin.

i. 1,000 uL culture = 5 plates, containing 200 uL each

9. Use a sterile L-spreader to distribute the bacterial cells evenly.
10. Put the plate into the 37°C bacterial incubator for 24-48 hours.
11. Using a sterile loop, pick one large, well-isolated colony from each plate, and streak it onto a fresh plate
12. Put the fresh plate into the 37°C bacterial incubator for 24-48 hours
13. Using a sterile loop, pick up one large, well-isolated colony from the fresh plate and place it in a 15 mL conical tube. Then add 5 mL of LB broth + kanamycin.

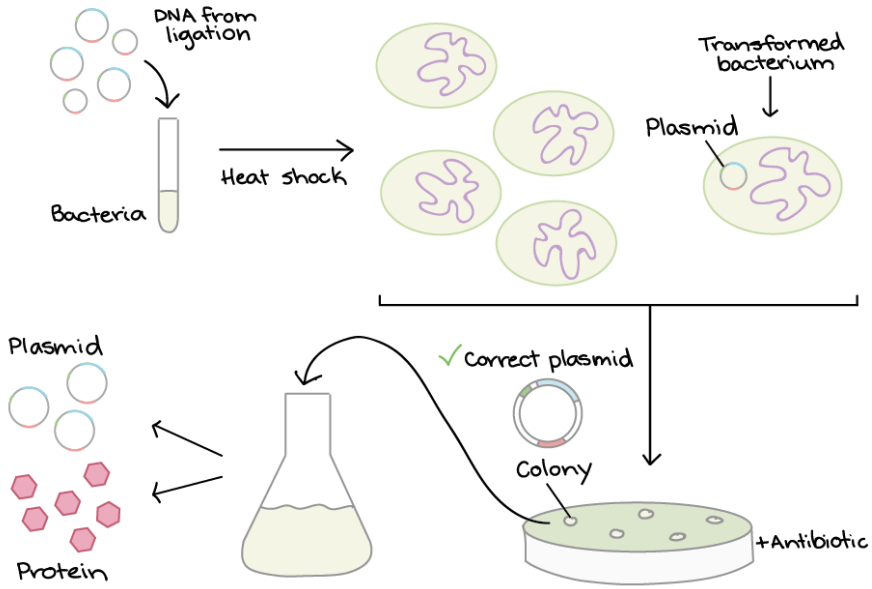

Credit Khan Academy, "Steps of bacterial transformation and selection"

Colony PCR

Grown cultures were then further screened for containing gene inserts by Colony PCR. Primers for the T7 promoter were used to identify the presence of the gene. Colonies were evaluated using band size relative to a 1kB ladder, since primers that sit in the vector backbone produce a baseline-sized DNA band if the gene insert is missing, and a larger band that includes the insert if cloning succeeded.

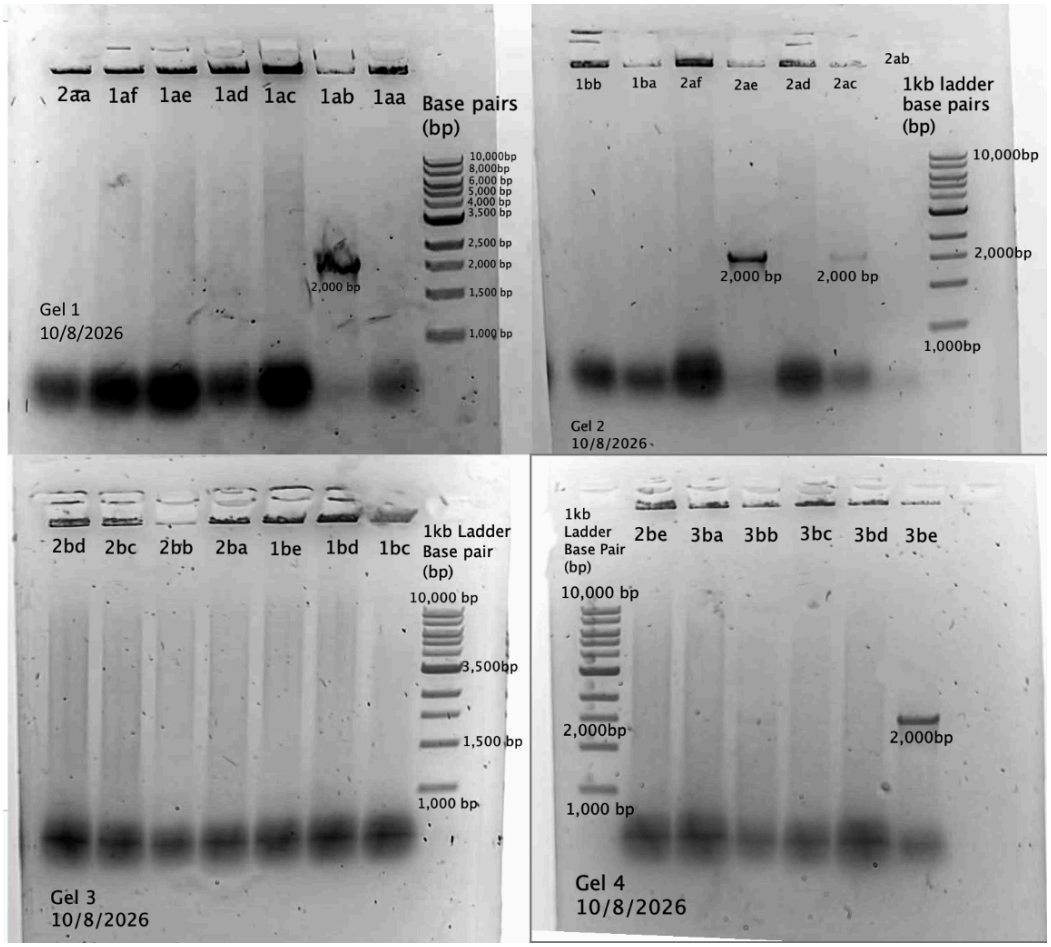

Colony PCR Gel Electrophoresis: *Sample labels denoted with a "1" contain genes for modification F147S_E144D, "2" encoding for modification F147S, and "3" encoding for WT BT0416. Letters are intermediates that act as labels for colonies or plates within the lab and are not indicative of the gene. Each experimental sample gene and control gene had at least one positive colony at 2kB. This is the expected result, representing the presence of both the Gene and MCS at the correct base pair amount.*

Purpose: Polymerase Chain Reaction replicating DNA samples from transformed BL21 colonies using temperature to separate DNA and control Taq polymerase activity. Includes denaturing DNA into two single strands, primer annealing, and taq DNA extension.

Materials

- DreamTaq 2X Master Mix
- T7 Primers
- nuclease-free water

- bacterial plates with colonies
- sterile pipette tips

Procedure:

1. Add 25 uL of DreamTaq 2X Master Mix solution to two 2 mL microfuge tubes each
2. Designate one microfuge tube as BtSULT and one as SULTFLUX
3. Add 2 uL of SulFlux T7 primers and reverse primers to each tube
4. Add enough nuclease-free water to each tube to bring the total volume to 40 uL (should be 11 uL).
5. Split each sample tube in half.
6. Using a sterile pipette tip or toothpick, pick up one well-isolated colony from the desired plate
7. Swirl the tip with bacteria into each respective PCR tube
    a. Optionally, streak a fresh plate using the same tip to create a replica culture.

8. Cycling temperatures should be at:
    a. 95C - 3 min, 1 cycle
    b. 95C - 30 sec, 32 cycle
    c. 55C - 30 sec, 32 cycle
    d. 72C - 1 min, 32 cycle
    e. 72C - 5 min, 1 cycle
    f. 12C - infinite, 1 cycle

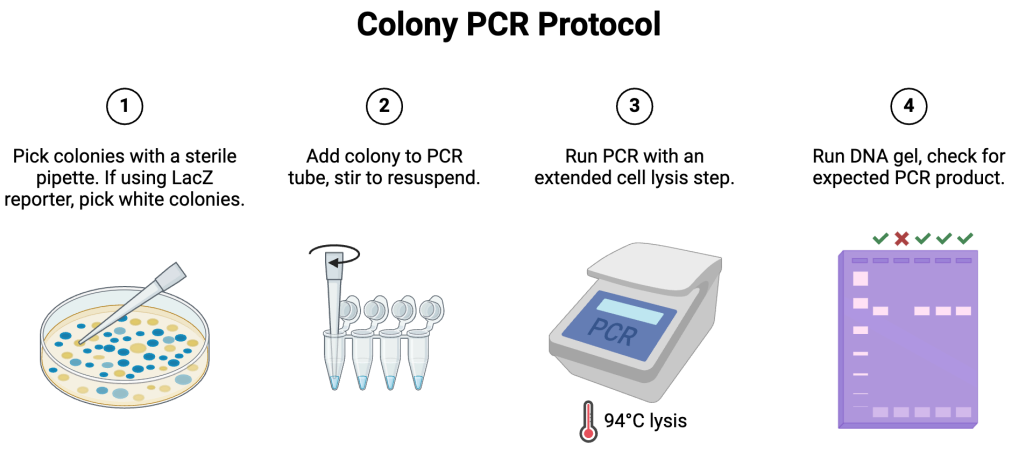

Credit Biorender, "Colony PCR Protocol"

Gel Electrophoresis

1. Making Agarose Gel

Purpose: creating gel mold for DNA samples from colony PCR to quantify DNA fragment size.

Procedure:

1) Determine powder amount for 1% (100 mL, 1g Agarose powder)
2) Tare the erlenmeyer & weight 1g powder
3) Using a graduated cylinder, measure out 100mL 1X TAE buffer, and pour into the erlenmeyer.
4) Swirl the flask and stop the opening with paper towels.
5) Microwave the flask in 30 sec increments, swirling with a heat-glove in between each increment. Continue until the solution is clear.
6) Allow solution to cool (not solidify), assemble gel mold and stoppers
7) Once cool to touch, add 10 uL (for 100 mL) SYBR safe-DNA dye
8) Pour into agarose mold, wait until completely firm

2. Running Gel Electrophoresis

Purpose: quantify colony PCR DNA fragment samples' size.

Procedure:

1) Pour TAE buffer into the gel mold before removing stoppers and comb
2) Gently slide the gel into the tank, with wells facing the negative cathode.
3) Add just enough 1X TAE buffer to cover the gel
4) Mix samples of DNA with the 6X loading dye, diluting it to 1X (sample volume/6X)
5) Slowly load 10ul sample mixture into the slots of the submerged gel
6) Close the lid and attach electrical leads to corresponding cathodes.
7) Apply a constant voltage of 50-120 V (used 80V, raised to 120V) for 10-40 minutes (ran for approx. 30 min).
8) Continue gel until bands migrate about 50-70% through the gel.
9) Slide gel onto visualizing bluegel transilluminator to visualize bands.

Gel Results (in order A,B,C)

Colony PCR of DBTL 1 Samples: Sulflux is our experimental plasmid, and BT0416 is the control. This PCR gel samples also account for recent and previously plated colonies: “su” colonies being the newly streaked Sulflux samples, “S” colonies being the old Sulflux samples. Respectively, “b” and “B” for the control BT0416. Multiple samples carried the expected result of 2kB, consistent with the sum of base pairs for: MCS present, the template gene, SUMO-tag, and His-tag.

Chart of Samples:

GEL A

1	2	3	4	5	6	7	8
DNA LADDER	B1	B2	B3	B4	B5	B6	B7

DNA LADDER	S1	S2	S3	S4	S5	S6	S7

Gel B

1	2	3	4	5	6	7	8
DNA Ladder	B8	B9	B10	b1	b2	b3	b4
DNA ladder	S8	S9	S10	Su1	Su2	su3	Su4

Gel C

1	2	3	4	5	6	7	8
DNA Ladder	b5	b6	b7	b8	su5	su6	su7

DNA Ladder	su8						

Bacterial Growth and Induction

Growth Conditions and IPTG/Allolactase

Gene-positive cultures of streaked bacteria were inoculated overnight at 350 rpm and 37°C, reaching an OD600 of 1.0 (cultures that overgrew were diluted to reach the density). These inoculations were spiked into larger liquid cultures at a ratio of 1:100 (v/v) and shaken at 150-200 rpm and 37°C, till cultures reached an OD600 of 0.4–0.8, indicating logarithmic phases of growth (usually within 2- 4 hours). At this phase, 0.7 mM isopropyl β-D-1-thiogalactopyranoside (IPTG) or 1% nonfat dry milk powder (cost-effective and resourceful allolactase supplement for insufficient IPTG) was added to disburden the lacI repressor and shift cell metabolism from growth to protein production. Flasks were shaken for 16-18 hours at 150 rpm at 15–20°C (it was frequently the case that external lab temperatures prevented the shaker from cooling below 25°C). Cultures were then centrifuged at 15,000 × g for 10 minutes, decanted, and frozen as naked pellets at –80°C.

OD600

OD600 measures the optical density and provides information on the growth of a liquid culture.

Materials

- Cell density measuring device (OD600)
- Bacteria sample
- Polystyrene cuvettes

Procedure

1. In a standard culture of 1:100 bacteria, it takes around 2-3 hours for optical density at 600nm (OD600) to reach between 0.4-0.8. Given that during the log-growth phase, doubling takes ~30 minutes, we will take time tags every 30 minutes.
2. NanoDrop2000C accommodates a minimum of 500µl for a cuvette reading.
3. Once your culture is in the designated broth, begin to take readings every 30 minutes starting ~2 hours.

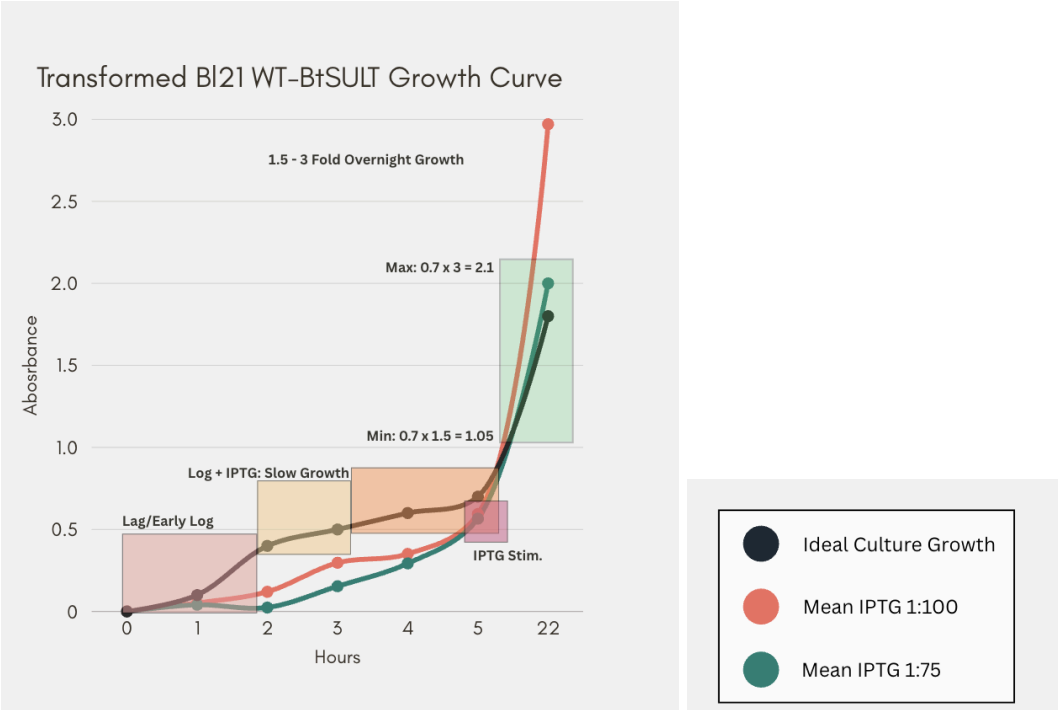

Growth curve of Wild Type BT0416 Transformed Cells using absorbance from OD600, DBTL1. *Colored zones represent expected growth patterns across literature, with an expected value of 0.4-0.8 from 2-3 hours, 0.4-0.9 from 4-5 hours, and 1.5-3 fold if overnight. We adjusted the RPM for the SulFlux culture using the 1:75 ratio and an OD600 of 0.56 was achieved in 3 hours.*

Transformed Bacterial Culture Concentrations

Purpose: Culturing BL21 cells with wildtype BT0416 plasmid DNA and transformed BL21 cells with SulFLUX plasmid DNA in TB broth for later IPTG stimulation.

Procedure:

1) Proceeding after bacterial transformation procedure. 3 ml of bacterial culture (wildtype and transformed), at 1-1.9 OD value.

2) Aliquot into three separate beakers at 1:100, 1:75, and 1:125 concentrations of culture to broth
    a) 1 mL culture : 75 mL broth 1:75
    b) 400 uL culture : 40 mL TB broth 1:100
    c) 1.6 mL culture : 125 mL broth 1:125
3) Repeat these concentrations for other 3ml sample tube of bacteria (wt/sf)
4) Set beakers in the shaker at 37C for 15 min, at 400 rpm.
5) Place in a 4C freezer afterwards.
6) OD at various 30 minute intervals until cells reach optimal logarithmic growth (OD value of 0.6+), continue to IPTG stimulation.

IPTG Stock Preparation

Purpose: preparation of IPTG stock to use in IPTG spike stimulation of bacterial cells (sf/wt).

Procedure:

1) Add 0.2383g IPTG stock powder to 10 mL of distilled water in a 15 mL conical tube (this is considered the stock soln)
2) Pipette 50 uL of stock solution into one of the 10 mL cultures.

IPTG Spike

Purpose: Spiking bacterial cells transformed with engineered plasmid with IPTG. IPTG acts as the lab-standard equivalent for chemical allolactose, which binds to lac repressor lacI to allow for production of T7 RNA polymerase, transcribing the target gene artificially at a high rate.

Procedure:

1) Transfer bacterial culture into 50 mL conicals
2) Keep IPTG stock tube on ice, waiting until it thaws to room temperature.
3) Add IPTG at calculated amounts to each sample conical.
4) Incubate at room temp with slight oxygen allowance
5) After overnight incubation, spin down, drain supernatant, and freeze to use later.

IPTG STIMULATION CONCENTRATIONS:

- 1:100 40 mL total
    - 12.5 mL sample, control
    - 12.5 mL sample, 0.3 mM = 3.75 uL stock IPTG
    - 12.5 mL sample, 0.7mM = 87.5 uL stock IPTG
- 1:75 75 mL total

- 23 mL sample, control
- 23 mL sample, 0.3 mM = 69 uL stock IPTG
- 23 mL sample, 0.7 mM = 161 uL stock IPTG

Sample Purification

Cell Lysis and His-Tag Purification

Cell lysis was performed on pelleted and thawed bacterial cells using non-ionic 20 mM Tris•HCl buffer at pH 7.5 (B-PER™ Bacterial Protein Extraction Reagent from Thermo Fisher #90084), including lysozyme, protease inhibitor tablets, and DNase. Lysed bacteria were then purified using Nickel-charged His-Affinity Gel [IMAC] (His-Spin Protein Miniprep Zymo Cat #P2002) and eluted using supplied elution buffer (8M urea, 250 mM imidazole, 0.1 M sodium phosphate monobasic, 0.01 M Tris, pH 4.5).

His-Pulldown

His-tag pulldown is a purification step utilizing the built in his-tag which is a short, negatively charged amino acid sequence that lets us pull our desired protein out of the cell, due to its attraction to a positively charged filter that separates it from other cellular proteins.

A. Materials
    - Tagged Bacterial Cells w/ Recombinant Protein
    - B-PER® Bacterial Protein Extraction Reagent
    - Lysozyme 50mg/mL
    - DNase I, 2500U/mL
    - Buffer Table Prepared
B. Procedure

Loading Buffer Requirements: The pH value of the loaded sample should be between 7.5 and 8.0. The sample should not contain higher concentrations of imidazole or histidine (OK up to 10 mM) and should be completely devoid of metal-chelating agents, such as EDTA or EGTA, and strong reducing agents such as DTT. If you are not sure what is in your sample, you can dilute

the starting material with one volume of the His-Binding Buffer before proceeding with the purification process.

a. Use cold buffers and work on ice for sensitive proteins.
b. Centrifugal steps are at 15,000xg

1. Use your P1000 tip to transfer 250 µl of yellow His-Affinity Gel to the Zymo-Spin P1 column and place the column into a collection tube.
2. Spin down for 5-10 seconds and ensure that the His-Affinity Gel is completely drained.
3. Add 150-300 µl of protein sample and resuspend the gel by shaking or tapping the column. Resuspend the gel a few more times during a two-minute incubation period.
    a. If adding over 200 µl, incubate for 2 additional minutes.
4. Centrifuge the column/collection tube for 5-10 seconds. Discard the flow-through and place the column back in the collection tube.
5. Add 250 µl of His-Wash Buffer and resuspend the gel.
6. Centrifuge for 5-10 seconds. Do NOT discard flow-through.
7. Repeat steps 5 & 6, then discard the collection tube.
8. Place the Zymo-Spin P1 column into a standard microcentrifuge tube. Add 150 µl of His-Elution Buffer to the column and resuspend.
9. Centrifuge for 5-10 seconds to elute the purified protein

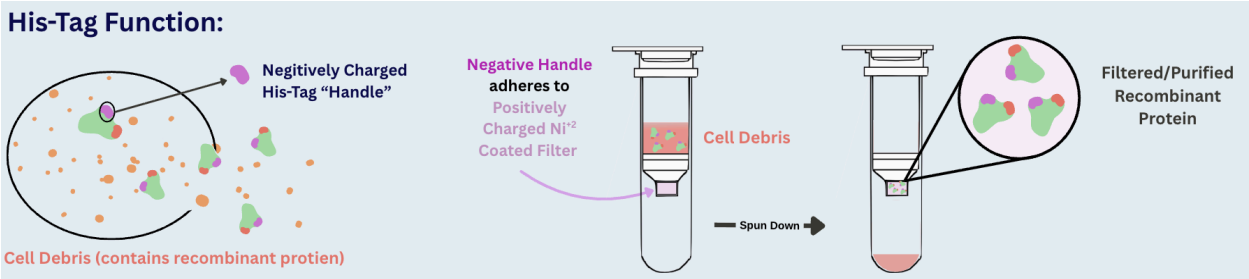

Histagged proteins, or the desired proteins, adhere to a positively charged filter, allowing us to isolate our desired protein.

Protein Quantification and Characterization

Bicinchoninic Acid Assay Quantification

Eluted protein and crude lysate samples were both quantified using BCA Quantification in a 96-well plate and read at 595 nm. Dilution curve wells were made with Bovine Serum Albumin (BSA), with 8 dilution-standardized samples ranging from 2000ug/mL to 15.625ug/mL of BSA. Standard wells were made in the buffers for each sample: elution buffer and lysis buffer, respectively. A working reagent containing Cu^{2+} ions is added to the samples, so that peptide bonds in the protein undergo chelation and form Cu^{+} in the alkaline environment. These ions react with bicinchoninic acid (BCA) to form a purple-colored complex that absorbs light around 562 nm and provides a means of quantification.

Samples were run in duplicate, where the absorbance was plotted against a standard curve of absorbance versus concentration (R^2 = 0.95) to determine sample concentration (ug/mL).

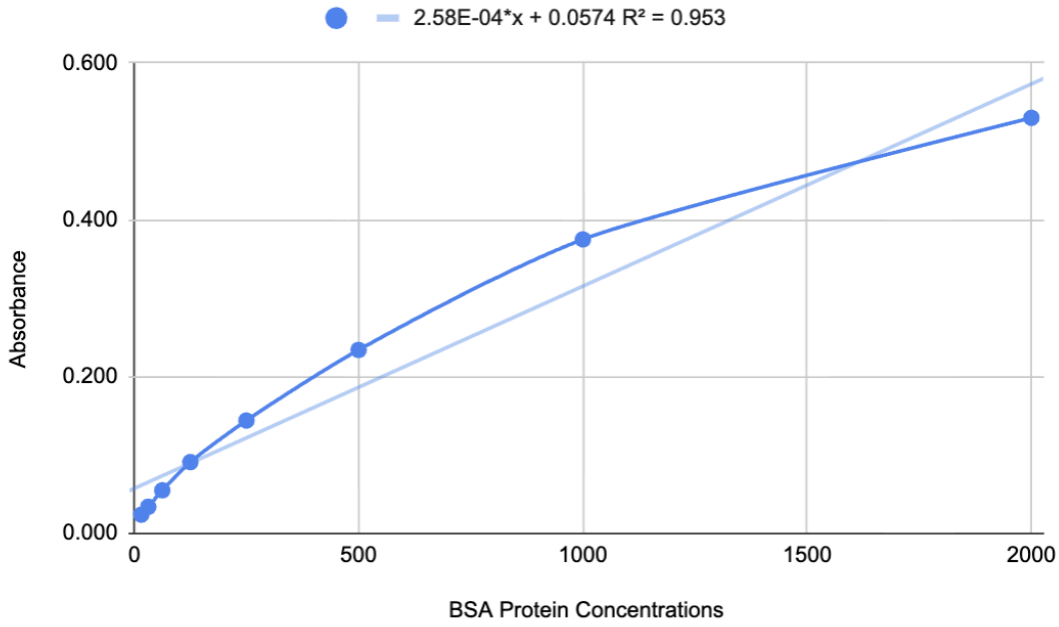

Plotted standard curve of dilutions for the BCA we used to quantify samples used in the SDS-PAGE trials.

BCA Quantification

Bicinchoninic quantification is a colorimetric method used to measure protein concentration,

where the binding of bicinchoninic acid to the electrons exposed by denatured proteins produces a color change quantified with a spectrophotometer.

Materials

- Microplate reader @480nm
- 96 well-plate microplate (transparent)
- Piece BCA Protein Assay Kit
    - Working Reagent A
    - Working Reagent B
- Bovine Serum Albumin (BSA) powder
- Protease inhibitor tablet
- B-PER solution
- PBS
- DNase
- Lysozyme
- Protein sample

Procedure

1. Make CBLB
    a. In 50 mL of B-PER solution
    b. Combine 2uL DNase, 2uL lysozyme, B-PER, protease inhibitor tablet
    c. 50mL B-PER 100 µL DNase and Lysozyme 1 PI Tablet
2. Create BBB
    a. In a 15mL conical combine 1mL of PBS and 1mL of CBLB
3. Make stock solution of BSA (40mg/mL)
    a. In a 15mL conical tubes, combine 0.5g of BSA powder and 12.5mL of PBS
4. Make working solution of BSA (2mg/mL)
    a. In a 2mL tube combined 50uL of BSA stock and 1mL CBLB
5. Get eight 2mL tubes and label them A-H
6. Create standards
    a. Add 200uL of BSA working solution into tube A
    b. Add 100uL of BBB to tubes B-H

   c. Take 100uL from tube A and add to tube B. Mix thoroughly.
   d. Take 100uL from tube B and add to tube C. Mix thoroughly. Continue serial dilutions until all standards are made (until tube H)
7. Map out plate layout on 96 well sheet paper
8. Load triplicates of every standard and sample into plate reader
9. Add 20uL of each standard to 3 wells in microplate
10. Add 20uL of each sample to 3 wells in microplate
11. Make Working Reagent (WR) within 15-30 minutes of use (due to light sensitivity and reactiveness)
    a. Use 50mL conical tube covered in foil or tube rack covered in foil to block out light
    b. 1:50 ratio of Reagent A to Reagent B, vortex to dissolve blue precipitate
    c. Cover plate with tinfoil to shield plate from light while working
12. Add 200uL of WR to every standard and sample well (not blank background wells)
13. Add 220uL of BBB buffer to 3 wells
14. Remove tinfoil and incubate plate at room temperature for 5 minutes. Read plate within 30 minutes
15. Measure the absorbance at 480nm on a plater reader.

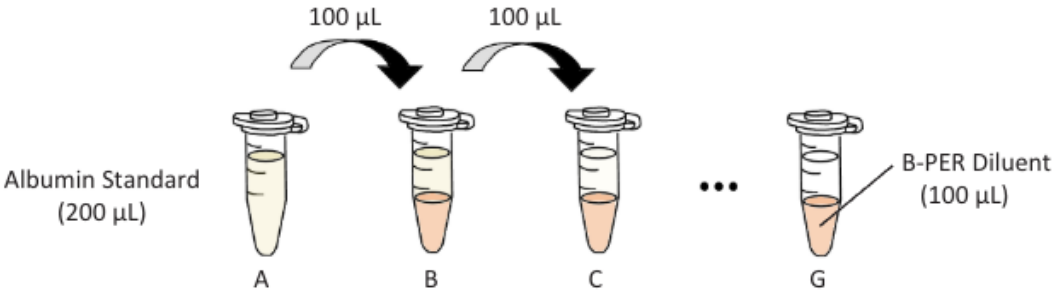

Credit University Lab Partners, "BCA Quantification"

BCA RESULTS: 8/6

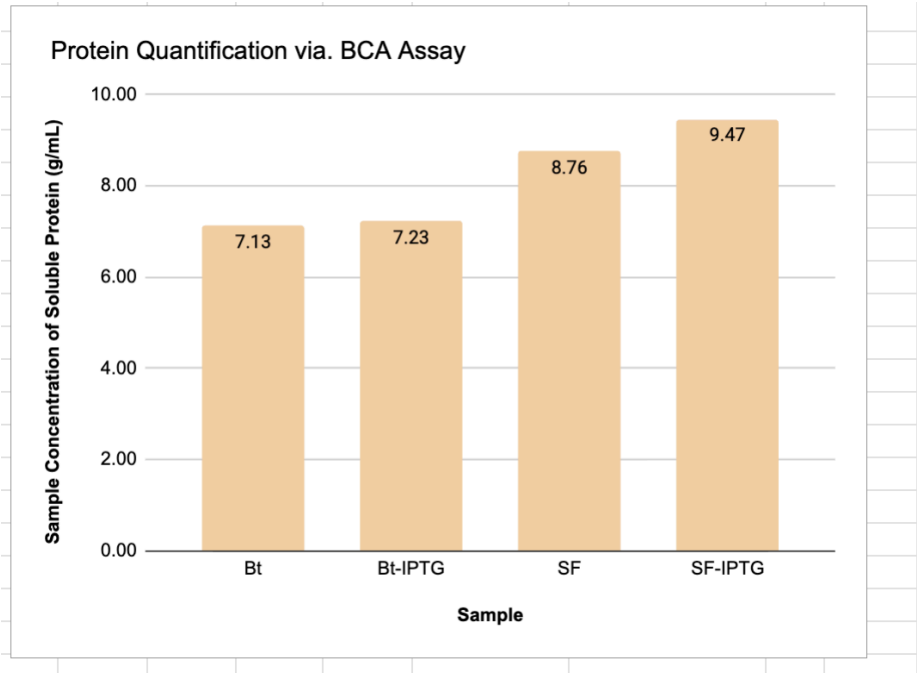

(Above: Protein Quantification vs BCA Assay) *Crude protein lysate of a large grown-up culture of our first cycle of DBTL proteins.*

Comparative Protein Sample Concentrations: 8/6

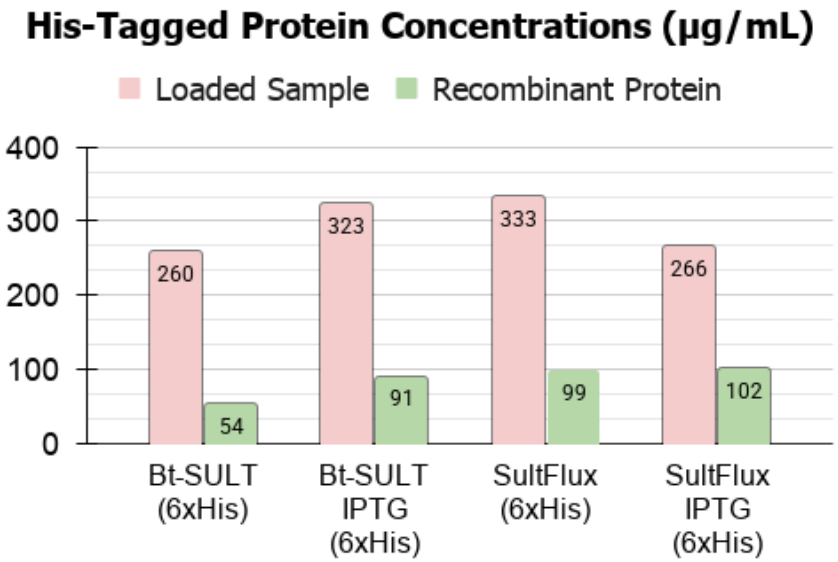

(**Above: His-Tagged Protein Concentrations ug/mL)** *Crude protein lysate concentration compared to purified protein concentrations shows that in the first DBTL cycle, purified proteins comprised 15- 20% of the mass of total cellular proteins.*

SDS-PAGE (Sodium Dodecyl Sulfate–Polyacrylamide Gel Electrophoresis)

Sodium Dodecyl Sulfate–Polyacrylamide Gel Electrophoresis (SDS-PAGE)

We used SDS-PAGE to compare a protein's migration distance against a known molecular weight ladder from 250 kilodaltons (kDa) to 10 kilodaltons (kDa).

Used to separate proteins primarily by molecular weight. When combined with Coomassie Blue staining, it allows visualization of protein bands to evaluate protein expression, estimate molecular weight, and assess relative purity before and after His-tag purification.

Materials

- Protein Samples
- Reducing Agent (β-mercaptoethanol, Dithiothreitol, Bolt)
- Chilled 1× Tris-Glycine-SDS Running Buffer
- mPAGE Precast SDS-PAGE Gel
- Laemmli Sample Loading Buffer (LDS Bolt)
- Unstained Protein Ladder
- Mini Gel Tank and Power Supply (BioRad)
- Coomassie Brilliant Blue R-250 Aqueous
- Coomassie Destaining Solution
- Deionized Water
- Microcentrifuge Tubes
- Micropipettes and Gel-Loading Tips
- Heat Block set @95^{o}C
- Ice Bucket
- Gel Staining Container
- Orbital Shaker

2. Procedure

1. Record the identity and order of every sample loaded into the gel.
2. Use the appropriate PPE when handling chemicals.
3. Follow the manufacturer's instructions for the precast gel and electrophoresis equipment.

Part I: Sample Preparation

Calculate 50-100ng of protein samples per well.

1. (**For 100ng) Add 10 µL of reducing agent and 25 µL of Laemmli sample loading buffer to a microcentrifuge tube.
2. Add estimated µL's of protein per sample tube.
3. Close the tube securely and heat the sample at 95°C for 5 minutes.

Part II: Gel Preparation

5. Open the precast gel packaging and remove the comb carefully. Make sure to remove straight out.
6. Remove the green tape and protective sealing tape from the bottom of the gel cassette.
7. Open the gel holder by pulling the green handles apart.
8. Insert the gel cassette into the holder, ensuring that the wells face inward.
9. If running a single gel, install the appropriate buffer dam on the opposite side. If running two gels, install the second gel cassette.
10. Place the assembled holder into the mini gel tank.
11. Add 1× Running Buffer to the inner chamber until the wells are covered. Ensure there's no leakage. Then fill the outer chamber appropriately.
12. Gently flush the wells with running buffer using a micropipette to remove residual storage solution and debris.

Part III: Sample Loading

14. Using a P10 micropipette with gel-loading tips, withdraw the prepared protein sample.
15. Carefully guide the tip into the appropriate well without puncturing the gel.
16. Slowly dispense the sample into the well.
17. Repeat for all samples, using the recorded loading order.
18. Load 50 µL of unstained protein ladder into the designated well.
19. Record the identity of each sample, control, and ladder position before running the gel.

RENATA Sample Layout:

HT - Hit-tag Purified Samples

W - Whole Protein

- Gel 1 — 10/17
    1. Protein Ladder
    2. SF3 HT (IPTG+)
    3. SF3 W (IPTG+)
    4. SF3 W (Milk Stim.)
    5. SF3 HT (Milk Stim.)
    6. SF2 W (IPTG+)
    7. SF2 HT (IPTG+)

8. SF2 W (Milk Stim.)
9. SF HT (Milk Stim.)

- Gel 2 — 10/17
    1. Protein Ladder
    2. BtSult HT (Milk Stim.)
    3. BtSult W (Milk Stim.)
    4. BtSult W (IPTG+)
    5. BtSult HT (IPTG+)
- Gel 3 — 10/19 **NEW HT Purified Samples**
    1. Protein Ladder
    2. 1AB (IPTG+)
    3. 1AB (Milk Stim.)
    4. — LDS Blank
    5. 2AE (IPTG+)
    6. 2AE (Milk Stim.)
    7. 3BE (IPTG+)
    8. — LDS Blank
    9. — LDS Blank
    10. — LDS Blank
- Gel 4 — 10/19 **OLD HT Purified Samples**
    1. Protein Ladder
    2. — LDS Blank
    3. 1AB (IPTG+)
    4. — LDS Blank
    5. 2AE (IPTG+)
    6. 2AE (Milk Stim.)
    7. 3BE (IPTG+)
    8. — LDS Blank
    9. — LDS Blank
    10. — LDS Blank

(Confirm that these sample identities and induction conditions match the samples actually prepared.)

Part IV: Running the Gel

20. Close the electrophoresis tank and connect it to the power supply.
21. Set the voltage, current, power, and duration according to the validated settings for the specific gel system.
22. Start the electrophoresis run.
23. Confirm that the system is operating and that bubbles are visible near the electrodes.
24. Monitor the migration of the tracking dye and stop the run when the dye has migrated sufficiently toward the bottom of the gel.

Original settings: 300 V, 75 mA, 25 W, and 30 minutes.

Slower settings: 100 V, 75 mA, 25 W, and 1-1.5 hours.

Part V: Coomassie Blue Staining

25. Carefully remove the gel from its cassette and transfer it into a suitable staining container.
26. Add approximately 55 mL of deionized water, or enough to cover the gel.
27. Gently agitate at approximately 40–50 rpm, then discard the rinse water.
28. Repeat the water rinse three times.
29. To prepare the staining solution, add 0.10 g of Brilliant Blue R-250 powder to a glass beaker containing 45 mL of methanol.
30. Stir until the powder has dissolved and no visible clumps remain.
31. Add 10 mL of glacial acetic acid, followed by 45 mL of deionized water, and stir for 1–2 minutes.
32. Filter the solution through Whatman No. 1 filter paper into a suitable, labeled storage bottle.
33. Add approximately 50–60 mL of staining solution to cover the gel completely.
34. Agitate gently and allow the gel to stain for 1–2 hours or overnight, as needed.

(Handle methanol and glacial acetic acid according to laboratory safety procedures and the relevant safety data sheets. Prepare and use the staining solution with appropriate ventilation and protective equipment.)

Part VI: Destaining

Destaining Solution: Methanol 200mL, Deionized Water 160 mL, Acetic Acid 40 mL

35. Transfer the stained gel into the appropriate destaining solution.
36. Agitate the gel at approximately 40–50 rpm for 30 minutes.
37. Replace the destaining solution as needed and continue destaining until the background becomes sufficiently clear to distinguish the protein bands.
38. Document the final gel image for analysis. (e.g. Odyssey CLx/White light)

3. Reading and Interpreting the Gel

1. Compare the migration distance of the sample bands with the protein ladder to estimate their molecular weights.
2. Identify bands near the expected molecular weight of the target protein.
3. Compare induced and uninduced samples to evaluate whether IPTG induction is associated with increased target-protein expression.
4. Examine the number and intensity of bands to assess the sample's apparent purity and relative protein abundance.

5. Look for smearing or unexpected bands that may indicate sample degradation, overloading, or the presence of additional proteins.
6. Save the gel image and document the observations for each sample.

Thin Layer Chromatography (TLC)

Thin-layer chromatography (TLC) is a fast, low-cost analytical technique used to separate non-volatile mixtures. It relies on a thin stationary phase (such as silica gel coated on a glass or plastic plate) and a liquid mobile phase (solvent) that travels up the plate via capillary action.

Thin-Layer Chromatography (TLC) Protocol

Materials

Lithocholic Acid (LCA) (1 mM), Thermo Fisher, Catalog No. 11-102-2967
PAPS, Thermo Fisher, Catalog No. 78243
HEPES (50 mM) reaction buffer
Silica TLC-Gypsum plates, MilliporeSigma, Catalog No. 1003900001
Phosphomolybdic acid (PMA) ***SUBSTITUTED FOR ACETIC ACID/UV VISUALIZATION***
SulFlux Protein Sample
BtSULT Protein Sample
Magnesium chloride ($MgCl_2$)
1× PBS (10mM)
Chloroform
Methanol
Acetic acid
Deionized Water
Ethanol
Beakers, Micropipettes and pipette tips, Pencil and ruler
Microfuge tubes

Part I: Preparation of Enzyme Reactions

Label the enzyme reaction tubes according to the reaction conditions.

His-pulldown	Absorbance Avg	Concentration ug/m	Original sample Concentration (ug/ul)
1AB IPTG	0.138	**312.40310**	0.3124031008
1AB Milk	0.109	**198.06202**	0.1980620155
2AE IPTG	0.109	**198.06202**	0.1980620155
2AE Milk	0.121	**246.51163**	0.2465116279
3BE IPTG	0.119	**238.75969**	0.2387596899
3BE Milk	0.103	**174.80620**	0.1748062016

ug/16.5uL	uL of 100uM PAPS	uL of 100uM LCA	uL of HEPES	uL of 100uM MgCl2
5.154651163	2.5	2.5	1.5	2.5
3.268023256	2.5	2.5	1.5	2.5
3.268023256	2.5	2.5	1.5	2.5
4.06744186	2.5	2.5	1.5	2.5
3.939534884	2.5	2.5	1.5	2.5
2.884302326	2.5	2.5	1.5	2.5

Practical Sample Setup for TLC: This table shows the setup of the reactions we used for each respective protein to maintain an appropriate amount of protein-to-substrate and buffer ratio.

Prepare the enzyme reaction mixtures using the appropriate combinations of enzyme, LCA, buffer (1× PBS or HEPES), $MgCl_2$, and PAPS, as indicated in the original protocol.

Part II: Solvent Preparation
Prepare the chloroform and methanol solvent mixture.

1. Add 115 mL's of chloroform (3.25 mL)
2. Add 42.5 mL's of methanol.
3. Add 26.5 mL of acetic acid to 16 mL of water and swirl.
4. Pour solvent in beaker to less than 1 cm in height-- must be shorter than pencil drawn line.

Pour the prepared developing solvent into a beaker to a depth of less than 1 cm, ensuring that the solvent level remains below the pencil line used for spotting the TLC plate.

Part III: Spotting the TLC Plate
Draw a pencil line approximately 1 cm from the bottom of the silica TLC plate.
Label each lane sequentially to keep track of the samples.

1. Spot with a micropipette 2uL's of each sample reaction onto the pencil line.
2. Allow each spot to dry completely.
3. Repeat the spotting process as needed to concentrate each sample, allowing the spots to dry between applications.

Part IV: Developing the TLC Plate
1. Place the spotted TLC plate into the developing chamber containing the solvent.
2. Ensure that the solvent level is below the pencil baseline and the sample spots.
3. Allow the solvent front to travel up most of the plate.
4. Remove the plate from the chamber and allow it to *dry completely.*

Part V: Staining and Quantifying Results
1. Prepare the phosphomolybdic acid (PMA) staining solution using PMA and ethanol, bringing the solution to the required final volume.
2. Briefly dip or spray the TLC plate with the staining solution.
3. Allow the plate to dry completely.
4. Examine the stained plate and quantify the results based on the observed spots.

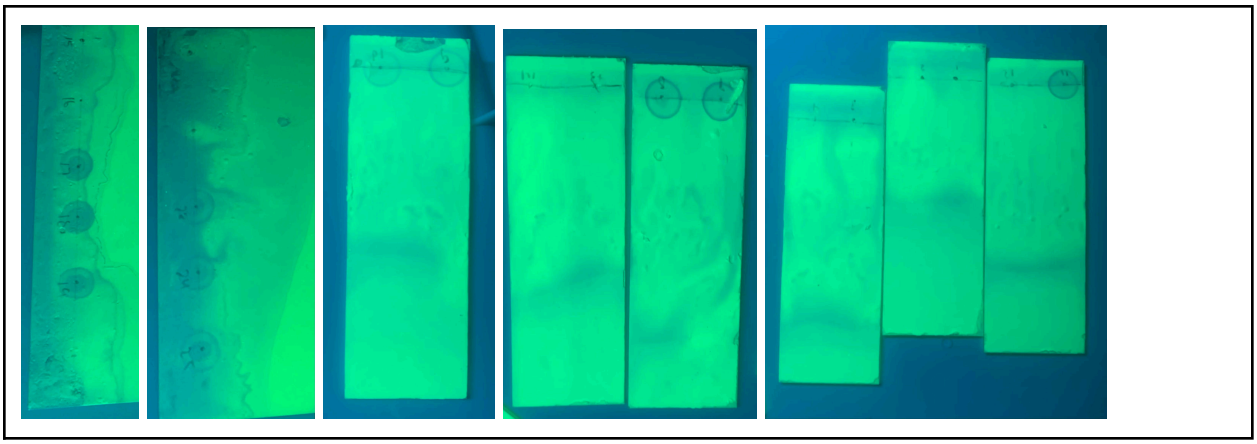

References

Adrianza, R. (2026). *Education | University Lab Partners*. University Lab Partners. https://www.universitylabpartners.org/education

Utilized procedures from ULP IMPOWERS laboratory manuals: Molecular Biology 1 and Molecular Biology 2

B-PER™ bacterial protein extraction reagent. (2026). Thermofisher.Com. https://www.thermofisher.com/order/catalog/product/90084

Cass, O.W, Cowen, A.E, Hofmann, A.F, & Coffin, S.B. (1975). Thin-layer chromatographic separation of sulfated and nonsulfated lithocholic acids and their glycine and taurine conjugates. *Journal of Lipid Research*, *16*(2), 159–160. https://doi.org/10.1016/S0022-2275(20)36743-2

GSL Biotech LLC. (2023). *pET-28a(+) sequence and map*. SnapGene. https://www.snapgene.com/plasmids/pet_and_duet_vectors_(novagen)/pET-28a(%2B)

His-Spin Protein Miniprep. (n.d.). Zymo Research.

https://www.zymoresearch.com/products/his-spin-protein-miniprep?srsltid=AU7gw4Um7__JHS7xZIZ9W_qgeMnm-ctZUkOm-A3Q_pEpMtA2YC2tZo1w

Shenekji, J. (2024). *Using skimmed milk as a low-cost alternative to IPTG in plasmid expression induction (LacZ promoter) V1*. https://doi.org/10.17504/protocols.io.j8nlk81z6l5r/v1

Zhao, X., Liu, Z., Sun, F., Yao, L., Yang, G., & Wang, K. (2022). Bile acid detection techniques and bile acid-related diseases. *Frontiers in Physiology*, *13*. https://doi.org/10.3389/fphys.2022.826740

Procedures/Protocols

Bacterial Transformation

Bacterial transformation is a process in which foreign DNA is introduced into bacterial cells, leading to new genetic traits being expressed by the bacteria host. By having E-coli BL21 bacterial cells uptake plasmid DNA, we were able to produce our desired protein.

A. Materials
    - BtSULT Plasmid DNA
    - SulFlux Plasmid DNA
    - BL21 culture tubes
    - 37°C Bacterial shaker, at 200 xg
    - 42°C Water bath
    - Microplate reader
    - Super Optimal with Catabolite repression Broth (SOC)
    - Microfuge tubes
    - LB agar plates treated with Kanamycin
    - 96-well plate (transparent)
B. Procedure
    1. Thaw the BL-21 competent E. coli cells on wet ice
    2. Pipette 100 uL of bacterial culture (at OD of ≥5) into a labelled microfuge tube (initials, BL21 + BtSULT, date)
    3. Add 100 ng of plasmid DNA to each microfuge tube, and mix by gently flicking the tube. Do not resuspend or vortex, as it will lyse the cells.
    4. Incubate the microfuge tubes of bacteria and plasmid on ice for at least 30 minutes.
    5. Heat-shock the microfuge tube in a water bath at 42°C for 45 seconds, then immediately place the tube on ice for 2 minutes.
    6. Add the cells to a bacteria culture tube with 900 uL of room temperature LB broth, closing the cap lightly to allow airflow (1:10 dilution)
    7. Put the culture into the bacterial shaker, set to 200 XG, 37°C for 30-60 minutes.
    8. Add 200 uL of the recovered cells to the LB agar plate treated with kanamycin.

i. 1,000 uL culture = 5 plates, containing 200 uL each

9. Use a sterile L-spreader to distribute the bacterial cells evenly.
10. Put the plate into the 37°C bacterial incubator for 24-48 hours.
11. Using a sterile loop, pick one large, well-isolated colony from each plate, and streak it onto a fresh plate
12. Put the fresh plate into the 37°C bacterial incubator for 24-48 hours
13. Using a sterile loop, pick up one large, well-isolated colony from the fresh plate and place it in a 15 mL conical tube. Then add 5 mL of LB broth + kanamycin.

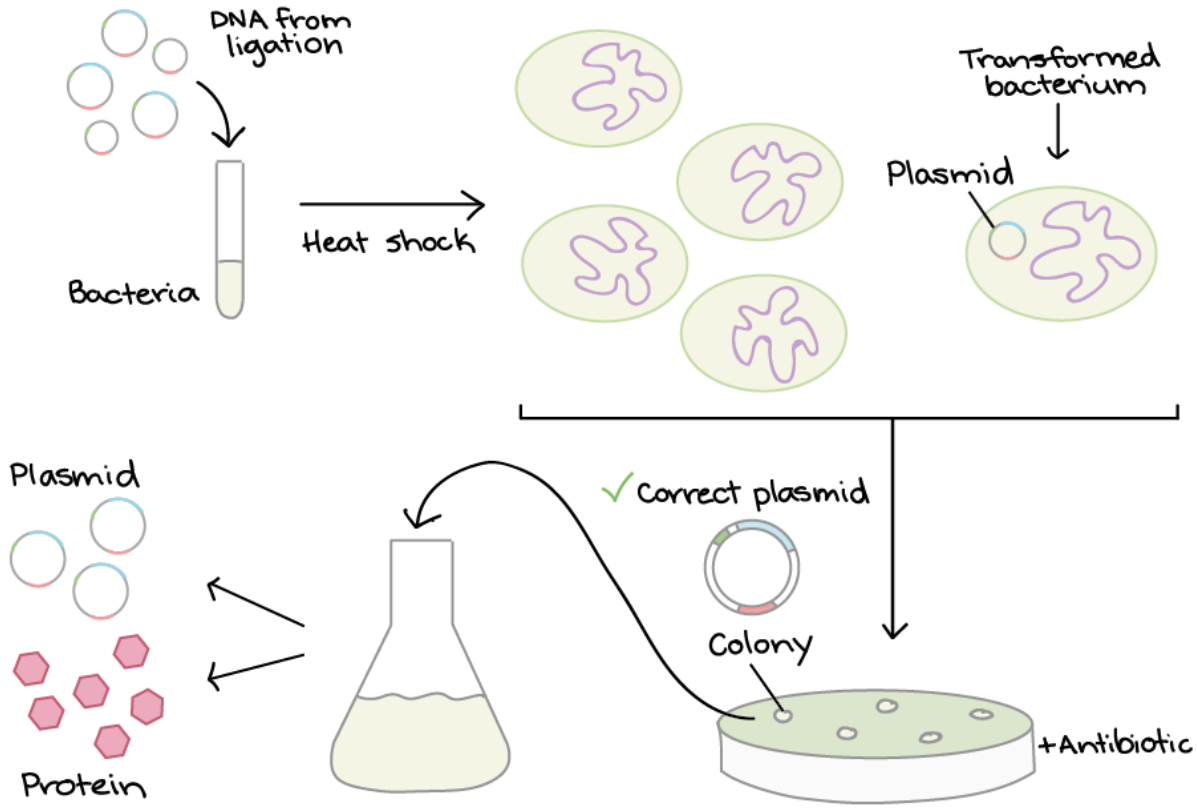

Credit fig.1 Khan Academy, “Steps of bacterial transformation and selection”

Colony PCR

Purpose: Polymerase Chain Reaction replicating DNA samples from transformed BL21 colonies using temperature to separate DNA and control Taq polymerase activity. Includes denaturing DNA into two single strands, primer annealing, and taq DNA extension.

Materials

- DreamTaq 2X Master Mix
- BtSULT forward & reverse primers
- SulFlux forward & reverse primers
- nuclease-free water
- bacterial plates with colonies
- sterile pipette tips

Procedure:

1. Add 25 uL of DreamTaq 2X Master Mix solution to two 2 mL microfuge tubes each
2. Designate one microfuge tube as BtSULT and one as SULTFLUX
3. Add 2 uL of BtSULT forward primers and reverse primers to the BtSULT tube
4. Add 2 uL of SulFlux forward primers and reverse primers to the SULTFLUX tube
5. Add enough nuclease-free water to each tube to bring the total volume to 40 uL (should be 11 uL).
6. Split each sample tube in half.
7. Using a sterile pipette tip or toothpick, pick up one well-isolated colony from the desired plate
8. Swirl the tip with bacteria into each respective PCR tube
    a. Optionally, streak a fresh plate using the same tip to create a replica culture.

9. Cycling temperatures should be at:
    a. 95C - 3 min, 1 cycle
    b. 95C - 30 sec, 32 cycle
    c. 55C - 30 sec, 32 cycle
    d. 72C - 1 min, 32 cycle
    e. 72C - 5 min, 1 cycle
    f. 12C - infinite, 1 cycle

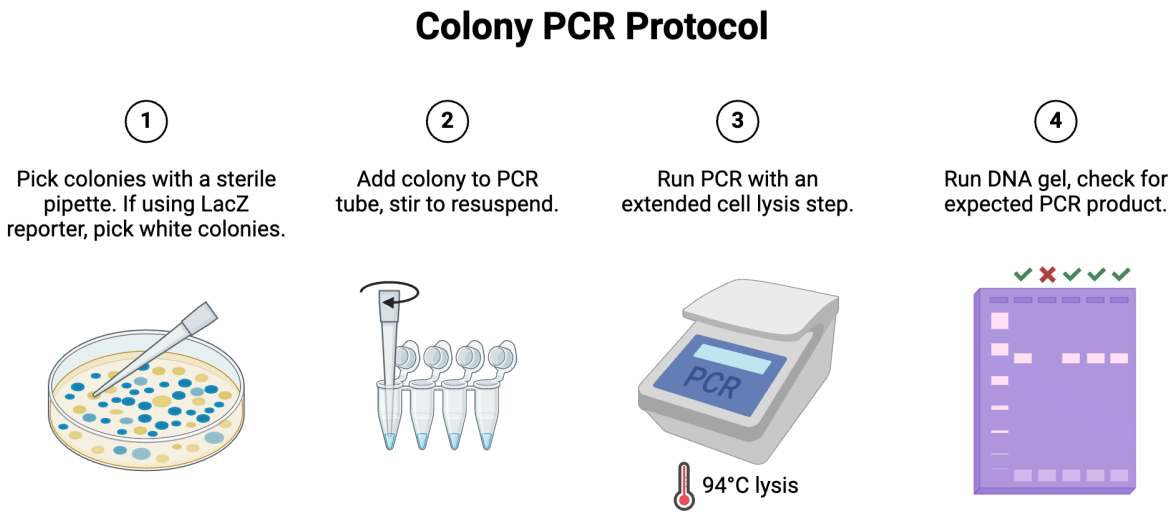

Credit fig.2 Biorender, “Colony PCR Protocol”

Gel Electrophoresis

1. Making Agarose Gel

Purpose: creating gel mold for DNA samples from colony PCR to quantify DNA fragment size.

Procedure:

1) Determine powder amount for 1% (100 mL, 1g Agarose powder)
2) Tare the erlenmeyer & weight 1g powder
3) Using a graduated cylinder, measure out 100mL 1X TAE buffer, and pour into the erlenmeyer.
4) Swirl the flask and stop the opening with paper towels.
5) Microwave the flask in 30 sec increments, swirling with a heat-glove in between each increment. Continue until the solution is clear.
6) Allow solution to cool (not solidify), assemble gel mold and stoppers
7) Once cool to touch, add 10 uL (for 100 mL) SYBR safe-DNA dye
8) Pour into agarose mold, wait until completely firm

2. Running Gel Electrophoresis

Purpose: quantify colony PCR DNA fragment samples' size.

Procedure:

1) Pour TAE buffer into the gel mold before removing stoppers and comb
2) Gently slide the gel into the tank, with wells facing the negative cathode.
3) Add just enough 1X TAE buffer to cover the gel
4) Mix samples of DNA with the 6X loading dye, diluting it to 1X (sample volume/6X)
5) Slowly load 10ul sample mixture into the slots of the submerged gel
6) Close the lid and attach electrical leads to corresponding cathodes.
7) Apply a constant voltage of 50-120 V (used 80V, raised to 120V) for 10-40 minutes (ran for approx. 30 min).
8) Continue gel until bands migrate about 50-70% through the gel.
9) Slide gel onto visualizing bluegel transilluminator to visualize bands.

Gel Results (in order A,B,C)

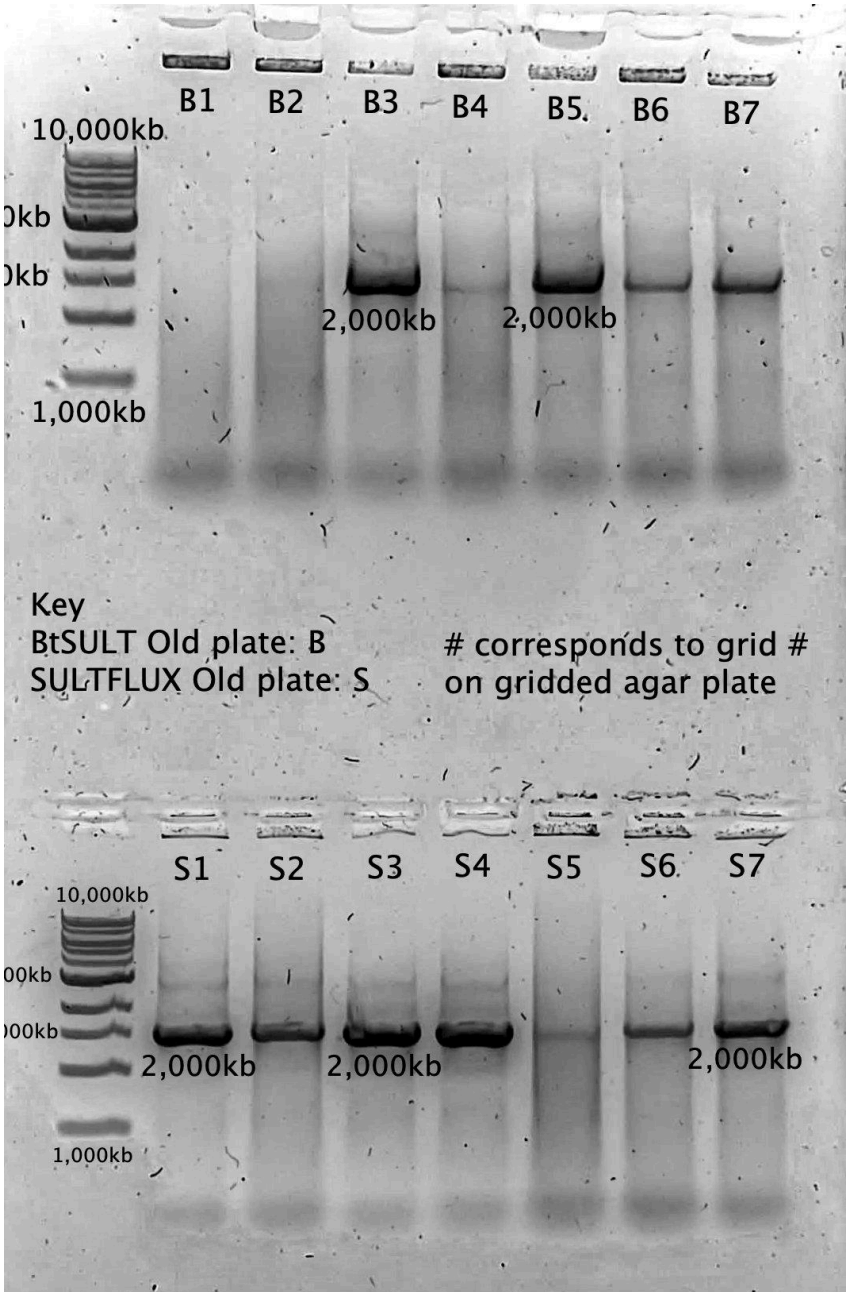
B1
B2
B3
B4
B5.
B6
B7
10,000kb
1,000kb
2,000kb
2,000kb
Key
BtSULT Old plate: B
SULTFLUX Old plate: S
corresponds to grid
on gridded agar plate
S1
S2
S3
S4
S5
S6
S7
10,000kb
1,000kb
2,000kb
2,000kb
2,000kb

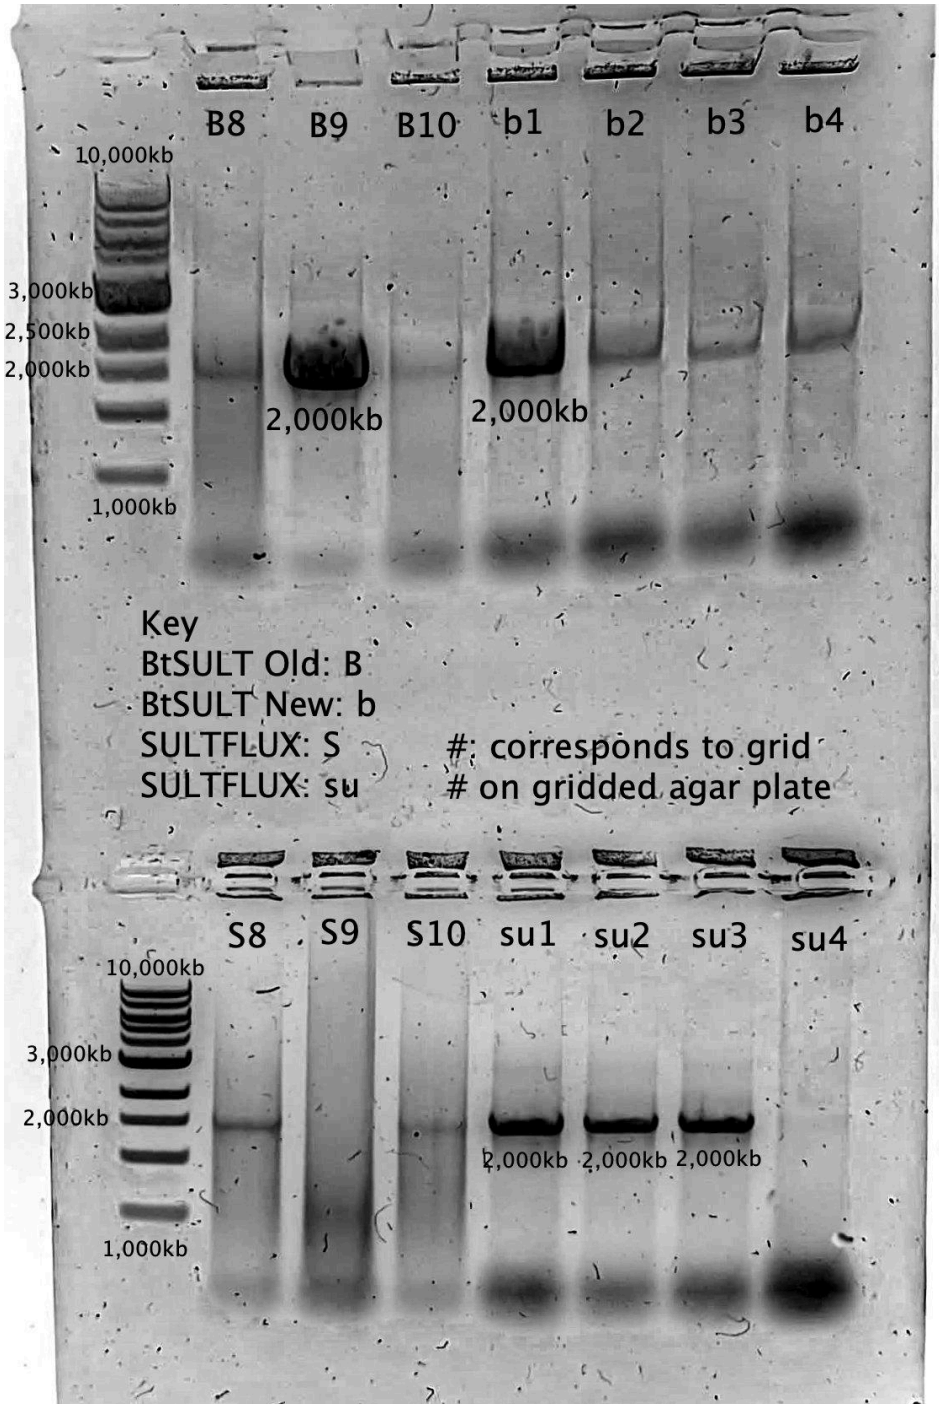
B8
B9
B10
b1
b2
b3
b4
10,000kb
3,000kb
2,500kb
2,000kb
1,000kb
2,000kb
2,000kb
Key
BtSULT Old: B
BtSULT New: b
SULTFLUX: S
SULTFLUX: su
#: corresponds to grid
on gridded agar plate
S8
S9
S10
su1
su2
su3
su4
10,000kb
3,000kb
2,000kb
1,000kb
2,000kb
2,000kb
2,000kb

b5
b6
b7
b8
su5
su6
su7
10,000kb
00kb
00kb
2,000kb
2,000kb
2,000kb
2,000kb
1,000kb
Key:
BtSULT New: b
SULTFLUX New: su
#: corresponds to
grid number on
gridded agar plate
su8
10,000kb
00kb
00kb
2,000kb
1,000kb

Chart of Samples:

GEL A

1	2	3	4	5	6	7	8
DNA LADDER	B1	B2	B3	B4	B5	B6	B7
DNA LADDER	S1	S2	S3	S4	S5	S6	S7

Gel B

1	2	3	4	5	6	7	8
DNA Ladder	B8	B9	B10	b1	b2	b3	b4
DNA ladder	S8	S9	S10	Su1	Su2	su3	Su4

Gel C

1	2	3	4	5	6	7	8
DNA Ladder	b5	b6	b7	b8	su5	su6	su7
DNA Ladder	su8						

OD600

OD600 measures the optical density and provides information on the growth of a liquid culture.

Materials

- Cell density measuring device (OD600)
- Bacteria sample
- Polystyrene cuvettes

Procedure

1. In a standard culture of 1:100 bacteria, it takes around 2-3 hours for optical density at 600nm (OD600) to reach between 0.4-0.8. Given that during the log-growth phase, doubling takes ~30 minutes, we will take time tags every 30 minutes.
2. NanoDrop2000C accommodates a minimum of 500µl for a cuvette reading.
3. Once your culture is in the designated broth, begin to take readings every 30 minutes starting ~2 hours.

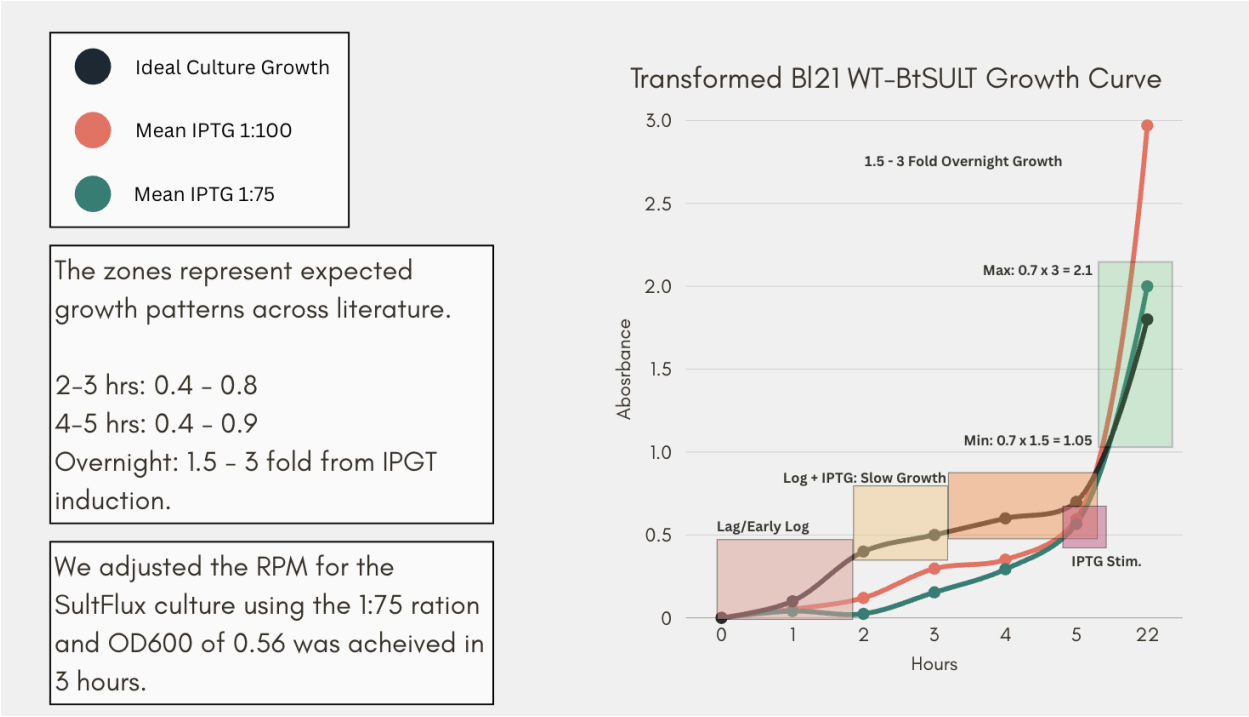

His-Pulldown

His-tag pulldown is a purification step utilizing the built in his-tag which is a short, negatively charged amino acid sequence that lets us pull our desired protein out of the cell, due to its attraction to a positively charged filter that separates it from other cellular proteins.

A. Materials
    - Tagged Bacterial Cells w/ Recombinant Protein
    - B-PER® Bacterial Protein Extraction Reagent
    - Lysozyme 50mg/mL
    - DNase I, 2500U/mL
    - Buffer Table Prepared
B. Procedure

Loading Buffer Requirements: The pH value of the loaded sample should be between 7.5 and 8.0. The sample should not contain higher concentrations of imidazole or histidine (OK up to 10 mM) and should be completely devoid of metal-chelating agents, such as EDTA or EGTA, and strong reducing agents such as DTT. If you are not sure what is in your sample, you can dilute the starting material with one volume of the His-Binding Buffer before proceeding with the purification process.

a. Use cold buffers and work on ice for sensitive proteins.
b. Centrifugal steps are at 15,000xg

1. Use your P1000 tip to transfer 250 µl of yellow His-Affinity Gel to the Zymo-Spin P1 column and place the column into a collection tube.
2. Spin down for 5-10 seconds and ensure that the His-Affinity Gel is completely drained.
3. Add 150-300 µl of protein sample and resuspend the gel by shaking or tapping the column. Resuspend the gel a few more times during a two-minute incubation period.
    a. If adding over 200 µl, incubate for 2 additional minutes.
4. Centrifuge the column/collection tube for 5-10 seconds. Discard the flow-through and place the column back in the collection tube.

5. Add 250 µl of His-Wash Buffer and resuspend the gel.
6. Centrifuge for 5-10 seconds. Do NOT discard flow-through.
7. Repeat steps 5 & 6, then discard the collection tube.
8. Place the Zymo-Spin P1 column into a standard microcentrifuge tube. Add 150 µl of His-Elution Buffer to the column and resuspend.
9. Centrifuge for 5-10 seconds to elute the purified protein

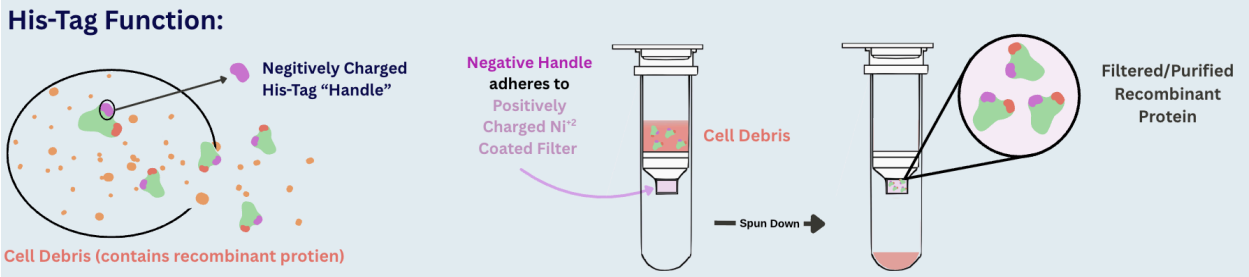

Transformed Bacterial Culture Concentrations

Purpose: Culturing BL21 cells with wildtype BT0416 plasmid DNA and transformed BL21 cells with SulFLUX plasmid DNA in TB broth for later IPTG stimulation.

Procedure:

1) Proceeding after bacterial transformation procedure. 3 ml of bacterial culture (wildtype and transformed), at 1-1.9 OD value.
2) Aliquot into three separate beakers at 1:100, 1:75, and 1:125 concentrations of culture to broth
    a) 1 mL culture : 75 mL broth 1:75
    b) 400 uL culture : 40 mL TB broth 1:100
    c) 1.6 mL culture : 125 mL broth 1:125
3) Repeat these concentrations for other 3ml sample tube of bacteria (wt/sf)
4) Set beakers in the shaker at 37C for 15 min, at 400 rpm.
5) Place in a 4C freezer afterwards.
6) OD at various 30 minute intervals until cells reach optimal logarithmic growth (OD value of 0.6+), continue to IPTG stimulation.

IPTG Stock Preparation

Purpose: preparation of IPTG stock to use in IPTG spike stimulation of bacterial cells (sf/wt).

Procedure:

1) Add 0.2383g IPTG stock powder to 10 mL of distilled water in a 15 mL conical tube (this is considered the stock soln)
2) Pipette 50 uL of stock solution into one of the 10 mL cultures.

IPTG Spike

Purpose: Spiking bacterial cells transformed with engineered plasmid with IPTG. IPTG acts as the lab-standard equivalent for chemical allolactose, which binds to lac repressor lacI to allow for production of T7 RNA polymerase, transcribing the target gene artificially at a high rate.

Procedure:

1) Transfer bacterial culture into 50 mL conicals
2) Keep IPTG stock tube on ice, waiting until it thaws to room temperature.
3) Add IPTG at calculated amounts to each sample conical.
4) Incubate at room temp with slight oxygen allowance
5) After overnight incubation, spin down, drain supernatant, and freeze to use later.

IPTG STIMULATION CONCENTRATIONS:

- 1:100 40 mL total
    - 12.5 mL sample, control
    - 12.5 mL sample, 0.3 mM = 3.75 uL stock IPTG
    - 12.5 mL sample, 0.7mM = 87.5 uL stock IPTG
- 1:75 75 mL total
    - 23 mL sample, control
    - 23 mL sample, 0.3 mM = 69 uL stock IPTG
    - 23 mL sample, 0.7 mM = 161 uL stock IPTG

BCA Quantification

Bicinchoninic quantification is a colorimetric method used to measure protein concentration, where the binding of bicinchoninic acid to the electrons exposed by denatured proteins produces a color change quantified with a spectrophotometer.

Materials

- Microplate reader @480nm
- 96 well-plate microplate (transparent)
- Piece BCA Protein Assay Kit
    - Working Reagent A
    - Working Reagent B
- Bovine Serum Albumin (BSA) powder
- Protease inhibitor tablet
- B-PER solution
- PBS
- DNase
- Lysozyme
- Protein sample

Procedure

1. Make CBLB
    a. In 50 mL of B-PER solution
    b. Combine 2uL DNase, 2uL lysozyme, B-PER, protease inhibitor tablet
    c. 50mL B-PER 100 µL DNase and Lysozyme 1 PI Tablet
2. Create BBB
    a. In a 15mL conical combine 1mL of PBS and 1mL of CBLB
3. Make stock solution of BSA (40mg/mL)
    a. In a 15mL conical tubes, combine 0.5g of BSA powder and 12.5mL of PBS
4. Make working solution of BSA (2mg/mL)
    a. In a 2mL tube combined 50uL of BSA stock and 1mL CBLB
5. Get eight 2mL tubes and label them A-H
6. Create standards

a. Add 200uL of BSA working solution into tube A
b. Add 100uL of BBB to tubes B-H
c. Take 100uL from tube A and add to tube B. Mix thoroughly.
d. Take 100uL from tube B and add to tube C. Mix thoroughly. Continue serial dilutions until all standards are made (until tube H)

7. Map out plate layout on 96 well sheet paper
8. Load triplicates of every standard and sample into plate reader
9. Add 20uL of each standard to 3 wells in microplate
10. Add 20uL of each sample to 3 wells in microplate
11. Make Working Reagent (WR) within 15-30 minutes of use (due to light sensitivity and reactiveness)
    a. Use 50mL conical tube covered in foil or tube rack covered in foil to block out light
    b. 1:50 ratio of Reagent A to Reagent B, vortex to dissolve blue precipitate
    c. Cover plate with tinfoil to shield plate from light while working
12. Add 200uL of WR to every standard and sample well (not blank background wells)
13. Add 220uL of BBB buffer to 3 wells
14. Remove tinfoil and incubate plate at room temperature for 5 minutes. Read plate within 30 minutes
15. Measure the absorbance at 480nm on a plater reader.

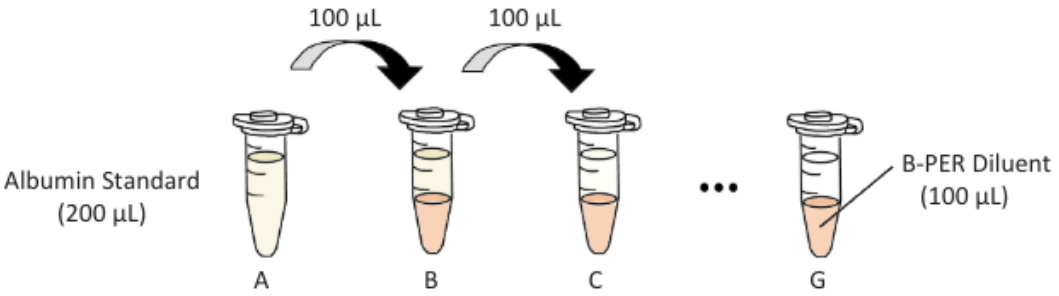

© University Lab Partners 2024, RENATA modified 2026

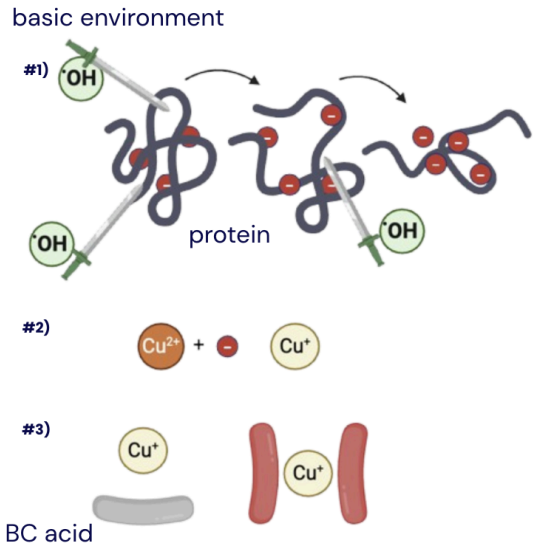

BCA RESULTS:

8/6

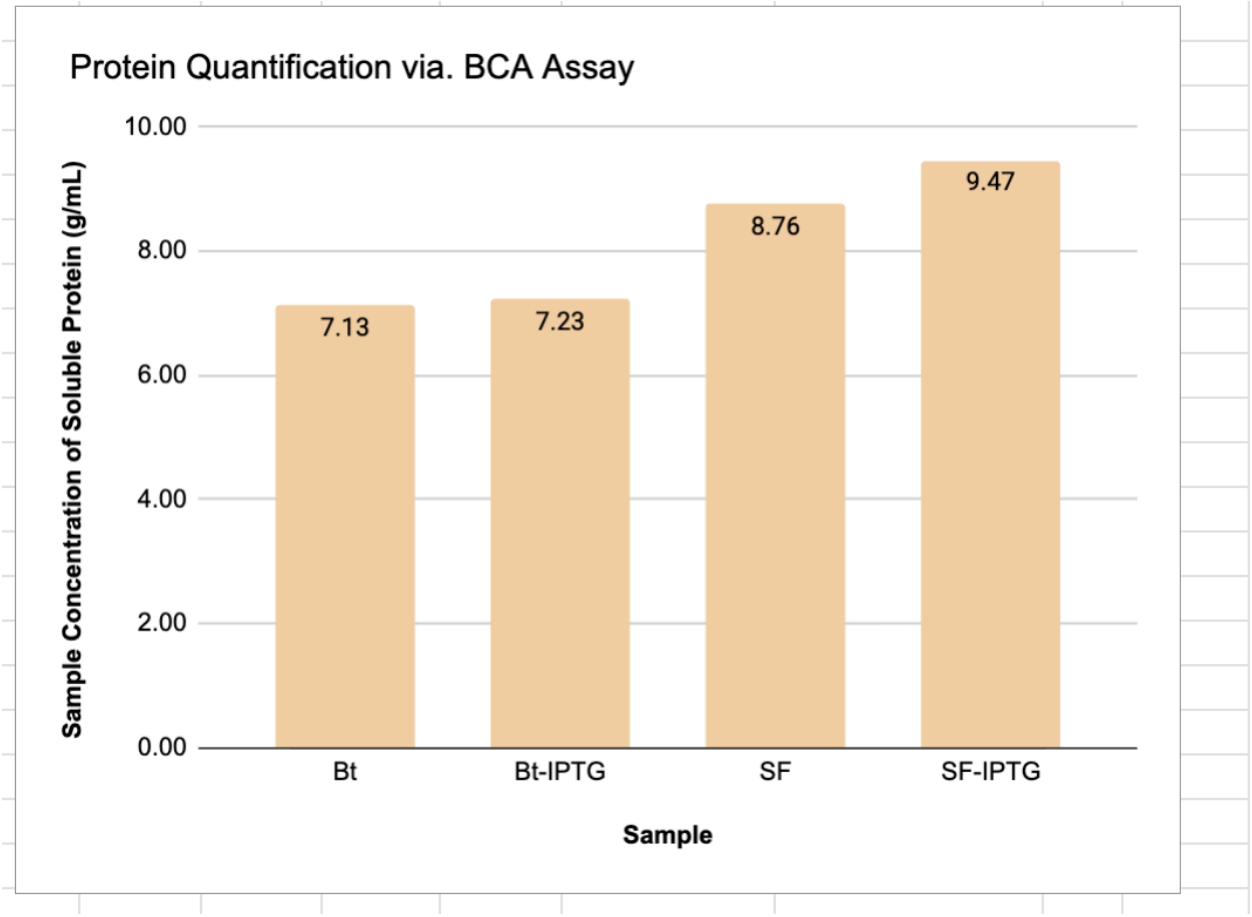

10/13 raw data, standards

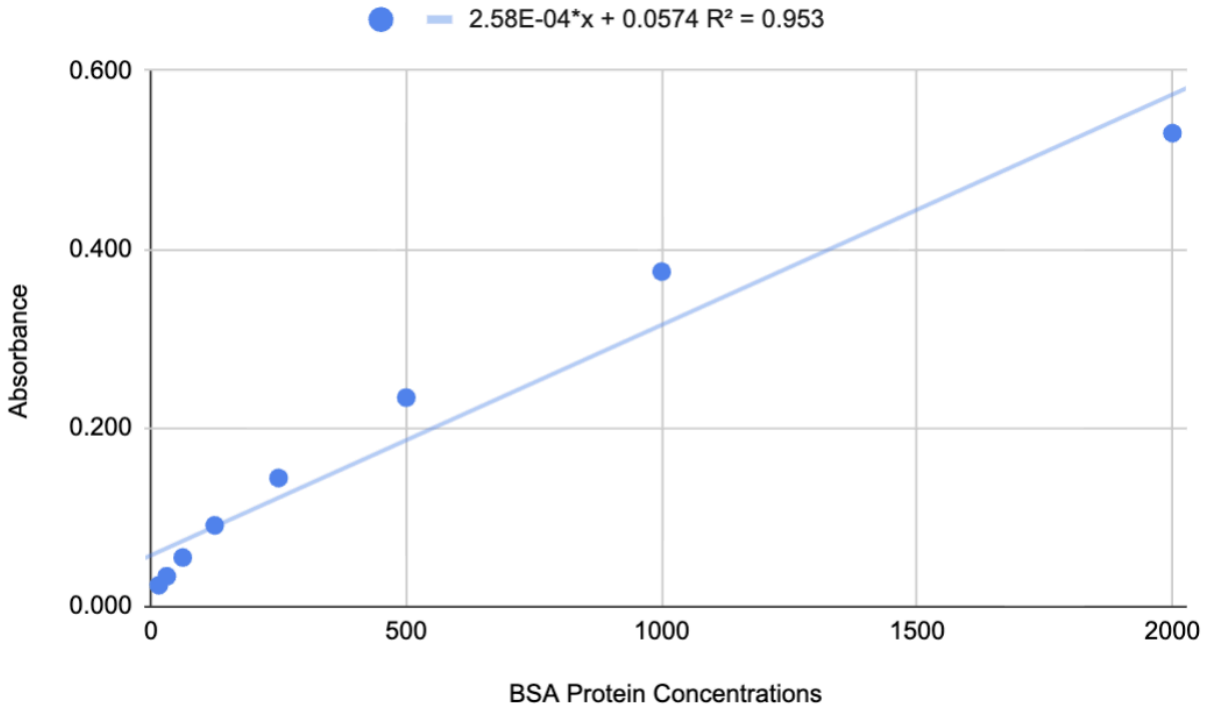
2.58E-04*x + 0.0574 R² = 0.953
0.600
0.400
0.200
0.000
Absorbance
0
500
1000
1500
2000
BSA Protein Concentrations

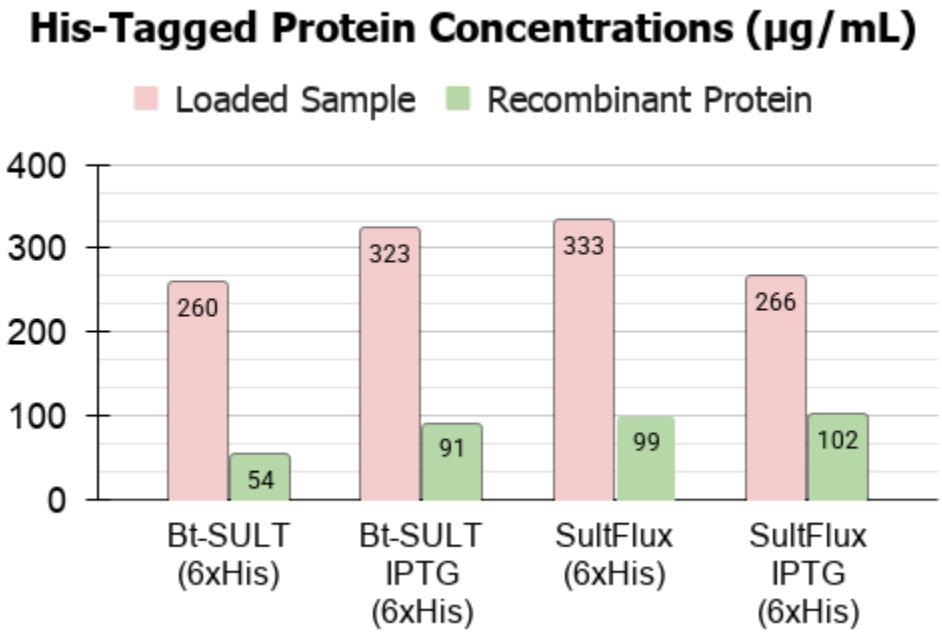
His-Tagged Protein Concentrations (µg/mL)
Loaded Sample
Recombinant Protein
400
300
200
100
0
260
54
323
91
333
99
266
102
Bt-SULT (6xHis)
Bt-SULT IPTG (6xHis)
SultFlux (6xHis)
SultFlux IPTG (6xHis)

SDS-PAGE (Sodium Dodecyl Sulfate–Polyacrylamide Gel Electrophoresis)

Used to separate proteins primarily by molecular weight. When combined with Coomassie Blue staining, it allows visualization of protein bands to evaluate protein expression, estimate molecular weight, and assess relative purity before and after His-tag purification.

Materials

- Protein Samples
- Reducing Agent (β-mercaptoethanol, Dithiothreitol, Bolt)
- Chilled 1× Tris-Glycine-SDS Running Buffer
- mPAGE Precast SDS-PAGE Gel
- Laemmli Sample Loading Buffer (LDS Bolt)
- Unstained Protein Ladder
- Mini Gel Tank and Power Supply (BioRad)
- Coomassie Brilliant Blue R-250 Aqueous
- Coomassie Destaining Solution
- Deionized Water
- Microcentrifuge Tubes
- Micropipettes and Gel-Loading Tips
- Heat Block set @95^{o}C
- Ice Bucket
- Gel Staining Container
- Orbital Shaker

2. Procedure

1. Record the identity and order of every sample loaded into the gel.
2. Use the appropriate PPE when handling chemicals.
3. Follow the manufacturer's instructions for the precast gel and electrophoresis equipment.

Part I: Sample Preparation

Calculate 50-100ng of protein samples per well.

1. (**For 100ng) Add 10 µL of reducing agent and 25 µL of Laemmli sample loading buffer to a microcentrifuge tube.
2. Add estimated µL's of protein per sample tube.
3. Close the tube securely and heat the sample at 95°C for 5 minutes.

Part II: Gel Preparation

5. Open the precast gel packaging and remove the comb carefully. Make sure to remove straight out.
6. Remove the green tape and protective sealing tape from the bottom of the gel cassette.
7. Open the gel holder by pulling the green handles apart.
8. Insert the gel cassette into the holder, ensuring that the wells face inward.
9. If running a single gel, install the appropriate buffer dam on the opposite side. If running two gels, install the second gel cassette.
10. Place the assembled holder into the mini gel tank.
11. Add 1× Running Buffer to the inner chamber until the wells are covered. Ensure there's no leakage. Then fill the outer chamber appropriately.
12. Gently flush the wells with running buffer using a micropipette to remove residual storage solution and debris.

Part III: Sample Loading

14. Using a P10 micropipette with gel-loading tips, withdraw the prepared protein sample.
15. Carefully guide the tip into the appropriate well without puncturing the gel.
16. Slowly dispense the sample into the well.
17. Repeat for all samples, using the recorded loading order.
18. Load 50 µL of unstained protein ladder into the designated well.
19. Record the identity of each sample, control, and ladder position before running the gel.

RENATA Sample Layout:

HT - Hit-tag Purified Samples

W - Whole Protein

- Gel 1 — 10/17
    1. Protein Ladder
    2. SF3 HT (IPTG+)
    3. SF3 W (IPTG+)
    4. SF3 W (Milk Stim.)
    5. SF3 HT (Milk Stim.)
    6. SF2 W (IPTG+)
    7. SF2 HT (IPTG+)
    8. SF2 W (Milk Stim.)
    9. SF HT (Milk Stim.)
- Gel 2 — 10/17
    1. Protein Ladder
    2. BtSult HT (Milk Stim.)
    3. BtSult W (Milk Stim.)
    4. BtSult W (IPTG+)
    5. BtSult HT (IPTG+)
- Gel 3 — 10/19 **NEW HT Purified Samples**

1. Protein Ladder
2. 1AB (IPTG+)
3. 1AB (Milk Stim.)
4. — LDS Blank
5. 2AE (IPTG+)
6. 2AE (Milk Stim.)
7. 3BE (IPTG+)
8. — LDS Blank
9. — LDS Blank
10. — LDS Blank

- Gel 4 — 10/19 **OLD HT Purified Samples**
    1. Protein Ladder
    2. — LDS Blank
    3. 1AB (IPTG+)
    4. — LDS Blank
    5. 2AE (IPTG+)
    6. 2AE (Milk Stim.)
    7. 3BE (IPTG+)
    8. — LDS Blank
    9. — LDS Blank
    10. — LDS Blank

(Confirm that these sample identities and induction conditions match the samples actually prepared.)

Part IV: Running the Gel

20. Close the electrophoresis tank and connect it to the power supply.
21. Set the voltage, current, power, and duration according to the validated settings for the specific gel system.
22. Start the electrophoresis run.
23. Confirm that the system is operating and that bubbles are visible near the electrodes.
24. Monitor the migration of the tracking dye and stop the run when the dye has migrated sufficiently toward the bottom of the gel.

Original settings: 300 V, 75 mA, 25 W, and 30 minutes.

Slower settings: 100 V, 75 mA, 25 W, and 1-1.5 hours.

Part V: Coomassie Blue Staining

25. Carefully remove the gel from its cassette and transfer it into a suitable staining container.
26. Add approximately 55 mL of deionized water, or enough to cover the gel.
27. Gently agitate at approximately 40–50 rpm, then discard the rinse water.

28. Repeat the water rinse three times.
29. To prepare the staining solution, add 0.10 g of Brilliant Blue R-250 powder to a glass beaker containing 45 mL of methanol.
30. Stir until the powder has dissolved and no visible clumps remain.
31. Add 10 mL of glacial acetic acid, followed by 45 mL of deionized water, and stir for 1–2 minutes.
32. Filter the solution through Whatman No. 1 filter paper into a suitable, labeled storage bottle.
33. Add approximately 50–60 mL of staining solution to cover the gel completely.
34. Agitate gently and allow the gel to stain for 1–2 hours or overnight, as needed.

(Handle methanol and glacial acetic acid according to laboratory safety procedures and the relevant safety data sheets. Prepare and use the staining solution with appropriate ventilation and protective equipment.)

Part VI: Destaining

Destaining Solution: Methanol 200mL, Deionized Water 160 mL, Acetic Acid 40 mL

35. Transfer the stained gel into the appropriate destaining solution.
36. Agitate the gel at approximately 40–50 rpm for 30 minutes.
37. Replace the destaining solution as needed and continue destaining until the background becomes sufficiently clear to distinguish the protein bands.
38. Document the final gel image for analysis. (e.g. Odyssey CLx/White light)

3. Reading and Interpreting the Gel

1. Compare the migration distance of the sample bands with the protein ladder to estimate their molecular weights.
2. Identify bands near the expected molecular weight of the target protein.
3. Compare induced and uninduced samples to evaluate whether IPTG induction is associated with increased target-protein expression.
4. Examine the number and intensity of bands to assess the sample's apparent purity and relative protein abundance.
5. Look for smearing or unexpected bands that may indicate sample degradation, overloading, or the presence of additional proteins.
6. Save the gel image and document the observations for each sample

Expected Results

- The SDS-PAGE analyses were conducted to access the successful recombinant protein, verify the intended weights for each construct, and evaluate protein purification following His-tag pulldown. The SulFlux-modified BtSULT construct was expected to show a heavier band (≈50 kDa) than our wild-type BtSULT protein (≈35 kDa). IPTG and Skim Milk stimulants were run in both SDS-PAGE's to compare induction conditions and

access conditions resulting in detectable recombinant protein production. The resulting banding patterns were also intended to help evaluate target-protein enrichment following purification.

Thin Layer Chromatography (TLC)

Thin-layer chromatography (TLC) is a fast, low-cost analytical technique used to separate non-volatile mixtures. It relies on a thin stationary phase (such as silica gel coated on a glass or plastic plate) and a liquid mobile phase (solvent) that travels up the plate via capillary action.

Thin-Layer Chromatography (TLC) Protocol

Materials

Lithocholic Acid (LCA) (1 mM), Thermo Fisher, Catalog No. 11-102-2967
PAPS, Thermo Fisher, Catalog No. 78243
HEPES (50 mM) reaction buffer
Silica TLC-Gypsum plates, MilliporeSigma, Catalog No. 1003900001
Phosphomolybdic acid (PMA) ***SUBSTITUTED FOR ACETIC ACID/UV VISUALIZATION***
SulFlux Protein Sample
BtSULT Protein Sample
Magnesium chloride ($MgCl_2$)
1× PBS (10mM)
Chloroform
Methanol
Acetic acid
Deionized Water
Ethanol
Beakers, Micropipettes and pipette tips, Pencil and ruler
Microfuge tubes

Part I: Preparation of Enzyme Reactions

Label the enzyme reaction tubes according to the reaction conditions.

His-pulldown	Absorbance Avg	Concentration ug/m	Original sample Concentration (ug/ul)
1AB IPTG	0.138	**312.40310**	0.3124031008
1AB Milk	0.109	**198.06202**	0.1980620155
2AE IPTG	0.109	**198.06202**	0.1980620155
2AE Milk	0.121	**246.51163**	0.2465116279
3BE IPTG	0.119	**238.75969**	0.2387596899
3BE Milk	0.103	**174.80620**	0.1748062016

ug/16.5uL	uL of 100uM PAPS	uL of 100uM LCA	uL of HEPES	uL of 100uM MgCl2
5.154651163	2.5	2.5	1.5	2.5
3.268023256	2.5	2.5	1.5	2.5
3.268023256	2.5	2.5	1.5	2.5
4.06744186	2.5	2.5	1.5	2.5
3.939534884	2.5	2.5	1.5	2.5
2.884302326	2.5	2.5	1.5	2.5

Practical Sample Setup for TLC: This table shows the setup of the reactions we used for each respective protein to maintain an appropriate amount of protein-to-substrate and buffer ratio.

Prepare the enzyme reaction mixtures using the appropriate combinations of enzyme, LCA, buffer (1× PBS or HEPES), $MgCl_2$, and PAPS, as indicated in the original protocol.

Part II: Solvent Preparation
Prepare the chloroform and methanol solvent mixture.

1. Add 115 mL's of chloroform (3.25 mL)
2. Add 42.5 mL's of methanol.
3. Add 26.5 mL of acetic acid to 16 mL of water and swirl.
4. Pour solvent in beaker to less than 1 cm in height-- must be shorter than pencil drawn line.

Pour the prepared developing solvent into a beaker to a depth of less than 1 cm, ensuring that the solvent level remains below the pencil line used for spotting the TLC plate.

Part III: Spotting the TLC Plate
Draw a pencil line approximately 1 cm from the bottom of the silica TLC plate.
Label each lane sequentially to keep track of the samples.

1. Spot with a micropipette 2uL's of each sample reaction onto the pencil line.
2. Allow each spot to dry completely.
3. Repeat the spotting process as needed to concentrate each sample, allowing the spots to dry between applications.

Part IV: Developing the TLC Plate
1. Place the spotted TLC plate into the developing chamber containing the solvent.
2. Ensure that the solvent level is below the pencil baseline and the sample spots.
3. Allow the solvent front to travel up most of the plate.
4. Remove the plate from the chamber and allow it to *dry completely.*

Part V: Staining and Quantifying Results
1. Prepare the phosphomolybdic acid (PMA) staining solution using PMA and ethanol, bringing the solution to the required final volume.
2. Briefly dip or spray the TLC plate with the staining solution.
3. Allow the plate to dry completely.
4. Examine the stained plate and quantify the results based on the observed spots.

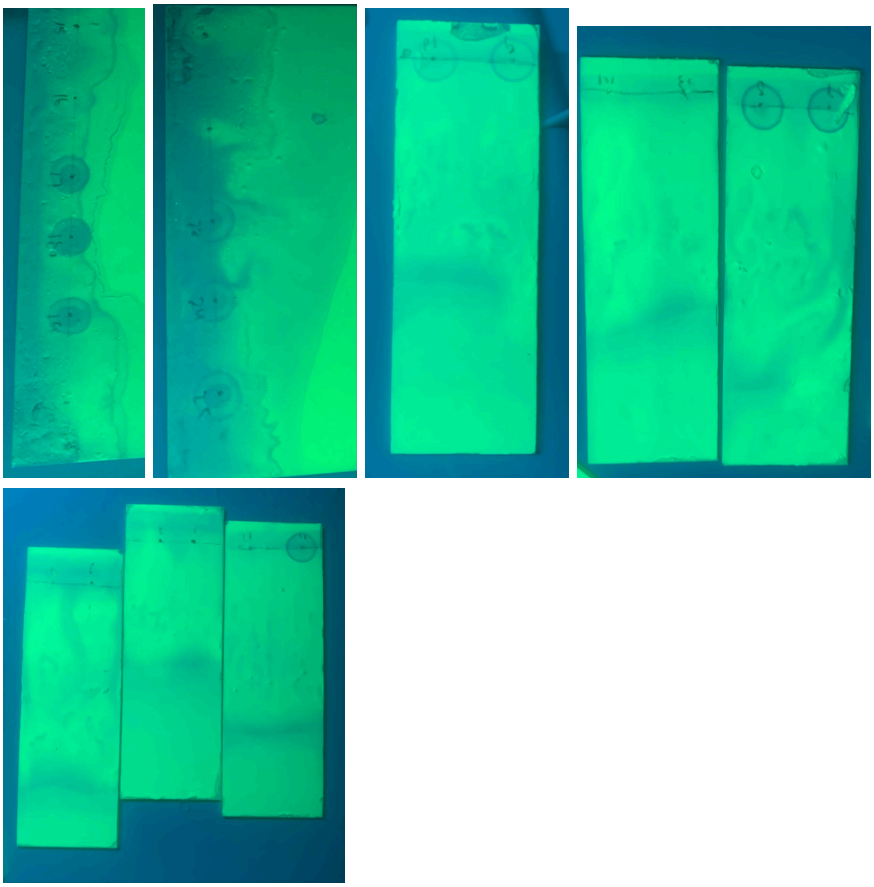

June

Week 1: (06/22-06/26) **Present: Hannah Bae, Ella Yu, Toni Densmore, Kavi Shrivastava**

Project Date	06/22	06/23	06/24	06/25	06/26
Experiments /Procedures	Alphafold practice Village project Incubating LB Broth	Village project Practice protocols (ELISA, Transformation)	-	-	-
Key Results	-	-	-	-	-

July

Week 2: (06/29-07/03) **Present: Hannah Bae, Ella Yu, Toni Densmore, Kavi Shrivastava**

Project Date	07/01	07/02	07/03
Experiments /Procedures	Outline Protocols: HIS-TAG, IPTG SPIKING, SULFOTRANSFERASE ASSAY, SDS-PAGE	Outline protocols and get them approved Prepared for SDS-PAGE (Destaining Solution, Methanol 200mL, Deionized Water 160 mL, Acetic Acid 40 mL, Staining solutions– Brilliant Blue R-250 10 mL's| 90 mL's Nanopure Water)	Researching the distribution Kit (Fluorescent receptor, Sumo)
Key Results	-	-	-

Week 3: (07/06-07/10) **Present: Hannah Bae, Ella Yu, Toni Densmore, Kavi Shrivastava**

Project Date	07/07	07/08	07/09
Experiments/ Procedures	Make TB Broth Calculating preparation for malachite green	Machinery research (Preparing lysis protocol, researching in-lab tank sonicator) Innoculating, streaked	Transformation

	Researching community autoclave usage Transformation Protocol Outline	plates for colony PCR OD600 Reading	
Key Results	Success	Success	Success

Date: (07/07)

Experiment	Notes	Results	Explanation
TB Broth	(400mL Nanopure water, 2 mL glycerol, 36.8g TB)	Successful	Made TB Broth

Date: (07/08)

Experiment	Notes	Results	Explanation
Innoculating	(50uL Culture + 5 uL kanamycin)	Success	Colonies appeared

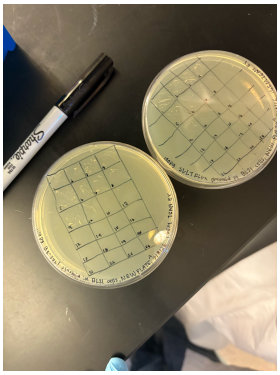

Date: (07/09)

Experiment	Notes	Results	Explanation
Transformation	SF plasmid	Successful colonies	Colonies appeared (1st round of DBTL)

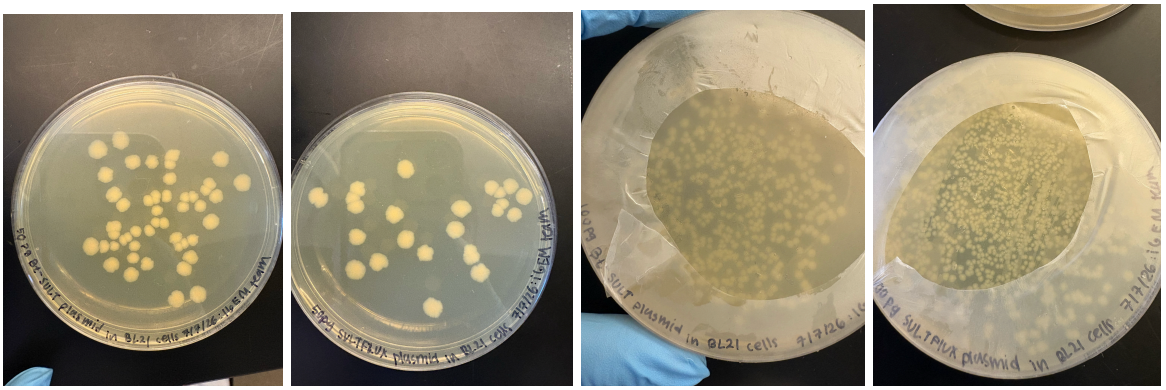

Week 4: (07/13-07/17)

Project Date	**07/13**	**07/14**	**07/15**	**07/16**
Experiments /Procedures	IPTG Stimulation	IPTG Stimulation	BCA	Colony PCR w/ Gel Electrophoresis Protein quantification of SulFlux 1.0 and BtSULT using the NanoDrop - 1:75 had a higher protein conc. (15.0<) compared to 1:100 (2.0>) according to the A280 values on the nanodrop. 1:75 yielded too high of a concentration due to lab constraint times leading to overgrowth. Our team decided to continue with 1:100 so its growth can be more predictable and manipulated.
Key Results	(Relatively) Successful	(Relatively) Successful	Successful	Successful

Date: (07/13)

Experiment	Notes	Results	Explanation
Spiking with IPTG	1:100 (S1), 1:75 (S2), 1:125 (S3) Concentration cultures Auto-cleaving materials Preparing shaker (ordering and measuring lab extensions for beaker/flask specific holders) - OD600 (1.30 hr Check, 2 hr check, 3.30 hr check)	Successful	Increased concentration (barely), evident because of OD600 reading (met ideal standard of 0.4-0.8)

Date: (07/14)

Experiment	Notes	Results	Explanation
IPTG Stimulation	Flasks: 1.) Ctrl (0mM IPTG) 2.) 0.3 mM IPTG 3.) 0.7mM IPTG (Did a ctrl, 1:75, 1:100 dilution)	Successful	Used to conduct a BCA, concentrations increased

Date: (07/15)

Experiment	Notes	Results	Explanation
BCA ASSAY + Data Analysis	(w/ Bpr Lysis, Creation of CBLB Lysis Buffer) | CBLB = B-PER + Lysozyme	Successful	Overall, the concentrations increased overtime. However, the

	+ DNAse		samples are *too concentrated and need to be aliquoted.

Results:

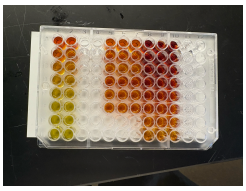

First run

	1	2	3	4	5	6	7	8	9	10	11	12	
A	2.65	2.65	0.03	0.03	2.14	2.22	2.18	*.***	*.***	*.***	0.06	0.06	PBS
B	1.87	1.84	0.05	0.04	2.43	2.22	2.34	*.***	*.***	*.***	0.04	0.04	CBLB
C	1.30	1.30	0.04	0.04	1.91	1.70	1.75	*.***	*.***	*.***	0.04	0.04	
D	1.07	1.07	0.04	0.04	2.96	2.92	3.01	*.***	*.***	*.***	0.04	0.04	
E	0.92	0.92	0.04	0.04	2.03	2.03	2.05	3.71	3.64	3.75	0.04	0.04	
F	0.87	0.85	0.04	0.04	2.11	2.08	2.16	2.56	2.52	2.60	0.04	0.04	
G	0.81	0.81	0.04	0.04	0.04	0.04	0.04	1.81	1.82	1.84	0.04	0.04	
H	0.80	0.80	0.04	0.04	0.04	0.04	0.04	1.40	1.38	1.37	0.04	0.04	

Second Run

	1	2	3	4	5	6	7	8	9	10	11	12
A	2.75	2.74	0.03	0.03	2.19	2.27	2.23	*.***	*.***	*.***	0.06	0.06
B	1.91	1.86	0.05	0.04	2.49	2.28	2.41	*.***	*.***	*.***	0.04	0.04
C	1.34	1.34	0.04	0.04	1.95	1.74	1.79	*.***	*.***	*.***	0.04	0.04
D	1.09	1.08	0.04	0.04	3.04	3.01	3.11	*.***	*.***	*.***	0.04	0.04
E	0.93	0.94	0.04	0.04	2.07	2.08	2.10	3.69	3.61	3.75	0.04	0.04
F	0.88	0.86	0.04	0.04	2.17	2.13	2.21	2.65	2.62	2.69	0.05	0.04
G	0.82	0.82	0.04	0.04	0.04	0.05	0.04	1.86	1.88	1.90	0.05	0.04
H	0.81	0.81	0.04	0.04	0.04	0.04	0.04	1.44	1.42	1.40	0.04	0.04

Date: (07/16)

Experiment	Notes	Results	Explanation
Colony PCR w/ Gel Electrophoresis	Wells labeled: A LADDER, B1-7 LADDER, S1-7 B LADDER, B8-B10, b1-b4 LADDER, S8-S10, su1-su4 C LADDER, b5-b7, su5-su7	SF 1-7 Performed well	Bands showing for S1-7, meaning that gene successfully integrated

Week 5: (07/20-07/24)

Project Date	**07/20**	**07/21**	**07/22**	**07/23**
Experiments/Procedures	Overnight inoculation	BCA 1:2 Dilution, SF + Bt-SULT	Weekly Meeting	HIS-TAG SUMO Pulldown TLC Procedure Outline (Finding concentrations and drafting reaction tubes) Weekly Meeting
Key Results	Successful	-	-	-

Week 6: (07/27-07/31) Start of DBTL2, Part 2

Project Date	**07/27**	**07/28**	**07/29**	**07/30**
Experiments/Procedures			BCA (testing w/ His-tag Binding Buffer) (2 BtSULT colonies, 2 SulFlux colonies)	HIS-TAG Pulldown + DNAse
Key Results	-	-	Successful	Successful

August

Week 7: (08/03-08/07)

Project Date	**08/03**	**08/04**	**08/05**	**08/06**
Experiments/Procedures	BCA ASSAY	BCA ASSAY (2) Protein Extraction HIS-TAG Presentation Prep	Weekly Meeting	HIS-TAG, BCA ASSAY
Key Results	Negative	BCA ASSAY I	-	

Date: 08/03

Experiment	Notes	Results	Explanation
BCA ASSAY	Moving forward with His-Tag pulldown procedure on DBTL1 Round1 protein isolation	BCA data analysis showed relatively low conc.	Possible Sonication procedure failed..?

Date: 08/04

Experiment	Notes	Results	Explanation
BCA ASSAY	Used NOT homogenous CBLB (lysozyme and SDS issue)—> from now on, we are going to add the lysozyme and DNase the day of using CBLB	BCA data analysis showed increasing protein concentration	

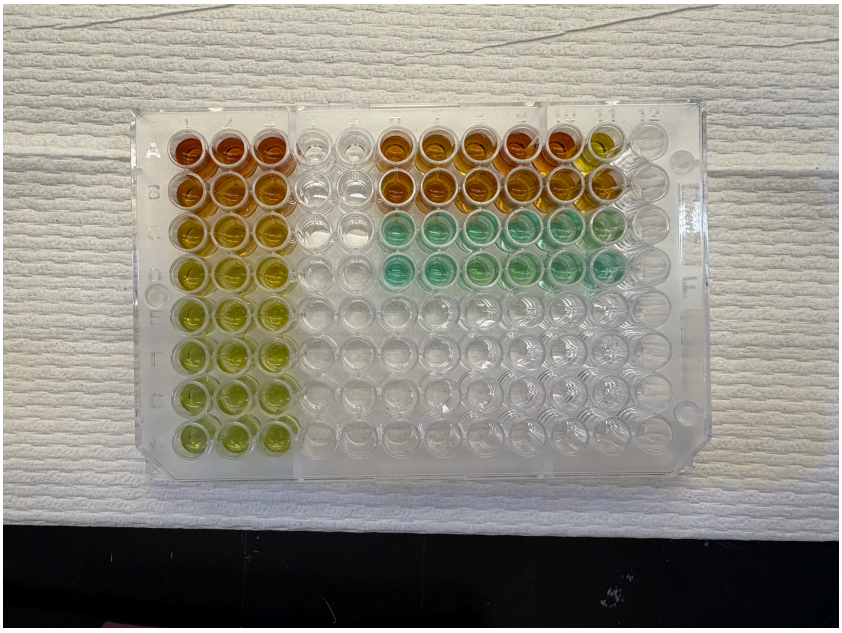

Date: (08/06) Present: Hannah Bae, Kavi Shrivastava, Dana Tran, Noah Chu, Lakshaya Gupta

Experiment	Notes	Results	Explanation
BCA ASSAY (his-tagged proteins)	-	Successful?	Protein conc. Increasing over time (good), however, it means cells are overcrowding and reaching over the 0.4-0.8 ideal figure. Need to aliquot and lower concentration.

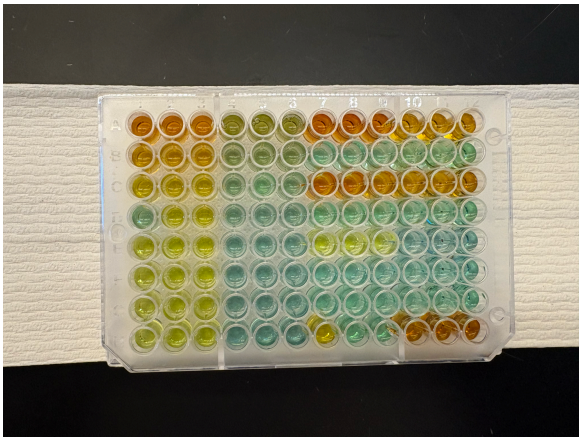

TABLE FOR PROTEIN IN ELUTION	
Concentration(ug/mL)	Avg Standards (nm)
2000	0.845
1000	0.584
500	0.456
250	0.370
125	0.328
62.5	0.328
31.25	0.324
15.625	0.304
7.8125	0.300

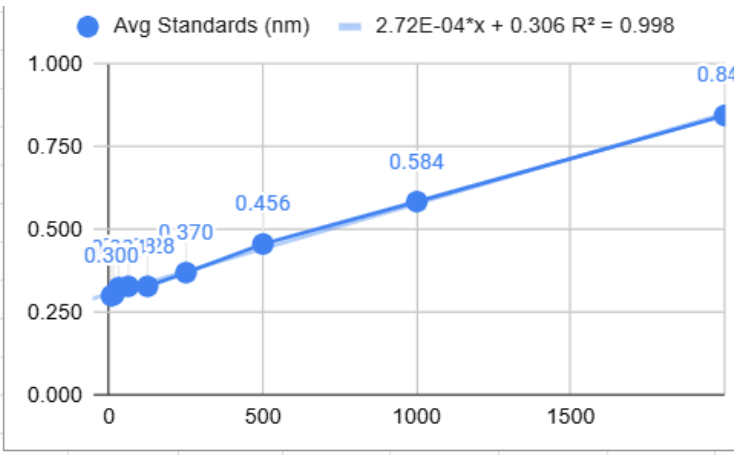

TABLE FOR PROTEIN IN BBB	
Concentration(ug/mL)	Avg Standards (nm)
2000	2.307
1000	1.762
500	1.236
250	0.897
125	0.697
62.5	0.697
31.25	0.595
15.625	0.531
7.8125	0.504

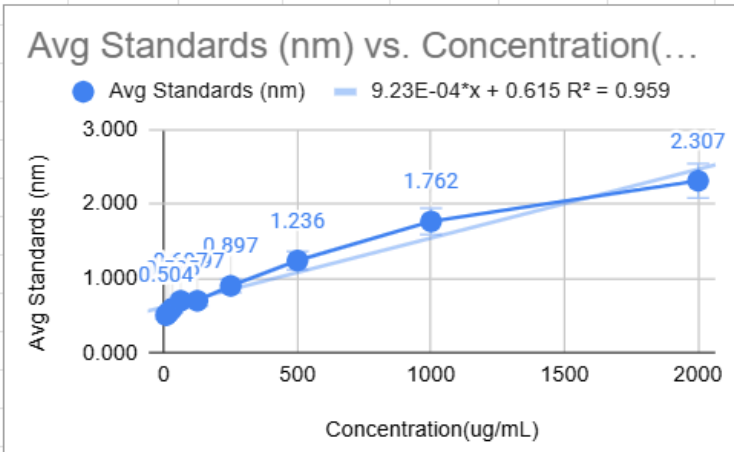

Week 8: (08/10-08/14) No data; no experiments run this week.

Project Date	-	-	-	-	-
Experiments /Procedures	-	-	-	-	-
Key Results	-	-	-	-	-

Week 9: (08/17-08/21) No data; no experiments run this week.

Project Date	-	-	-	-	-
Experiments /Procedures	-	-	-	-	-
Key Results	-	-	-	-	-

Week 10: (08/24-08/28)

Project Date	08/24	08/25	08/26	08/27	08/28
Experiments /Procedures	-	BCA ASSAY PREP	BCA ASSAY	Make TB Broth	-
Key Results	-	-	Low conc.	-	-

Date: 08/26 Present: Dana Tran, Kavi Shrivastava

Experiment	Notes	Results	Explanation
BCA ASSAY	-	Pretty negative/low	Intended range is 0.4-0.8, samples average .2-.3 when blanks are taken out

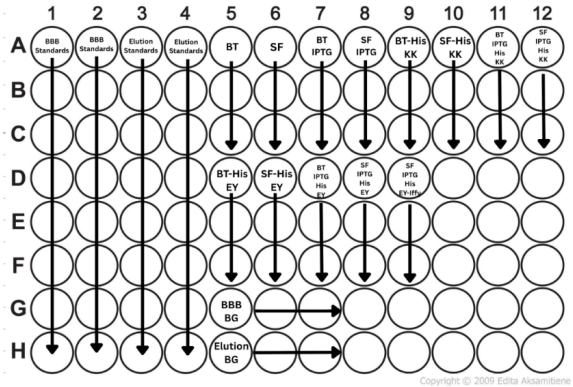

	1	2	3	4	5	6	7	8	9	10	11	12
A	1.474	0.079	-0.546	-0.581	0.580	0.645	-0.273	0.498	-1.132	-1.128	-1.134	-1.122
B	0.361	0.259	-0.816	-0.832	0.236	-0.683	0.202	0.692	-1.120	-1.126	-1.131	-1.125
C	-0.184	-0.248	-0.962	-0.942	0.303	0.566	-0.255	0.239	-1.115	-1.150	-1.160	-1.144
D	-0.545	-0.565	-1.030	-1.047	-1.100	-1.112	-1.102	-1.109	-1.108	-1.458	-1.462	-1.461
E	-0.743	-0.768	-1.070	-1.090	-1.111	-1.117	-1.107	-1.112	-1.110	-1.461	-1.470	-1.471
F	-0.854	-0.861	-1.082	-1.086	-1.121	-1.110	-1.119	-1.125	-1.109	-1.437	-1.460	-1.442
G	-0.918	-0.925	-1.112	-1.097	-1.450	-1.449	-1.457	-1.454	-1.452	-1.459	-1.453	0.492
H	-0.943	-0.954	-1.106	-1.111	-1.379	-1.425	-1.421	-1.460	-1.466	-1.468	-1.468	0.126

Date: 08/27 Present: Toni Densmore

Experiment	Notes	Results	Explanation
Making TB Broth	500mL TL 47g/1L nanopure water 4mL glycerol Autoclaved @121C for 15 min	Success	Made TB Broth

September

Week 11: (08/31-09/04)

Project Date	**08/31**	**09/01**	**09/02**	**09/03**	**09/04**
Experiments /Procedures	-	Transformation Prep	Transformation	Transformation	-
Key Results	-	-	Failed	Failed	-

Date: (09/02) Present: Dana Tran, Kavi Shrivastava

Experiment	Notes	Results	Explanation
Transformation	**SF2: F1475 **SF3: F1475_E144D SF2 @ 100pg/ul	Failed, no colonies	Too low of concentration?

Date: (09/03) Present: Dana Tran, Kavi Shrivastava

Experiment	Notes	Results	Explanation
Transformation	SF2 and SF3 @ 100pg/ul and 1 ng	Failed, no colonies	Too low of concentration?

Week 12: (09/07-09/11)

Project Date	**09/07**	**09/08**	**09/09**	**09/10**	**09/11**
Experiments /Procedures	-	-	Transformation	Transformation of DH5alpha (control)	Transformation (continued)
Key Results	-	-	Failed	Failed	Failed

Date: (09/09) Present: Kavi Shrivastava, Dana Tran, Toni Densmore

Experiment	Notes	Results	Explanation
Transformation	SF3, SF2, Bt-SULT (50pg/ul aliquots of DNA each) Old (ctrl): BTH52KK New: SFH52KK and BTH53KK	BTH52KK: Failed SFH52KK: Failed BTH53KK: Failed	Human error? Suspect that plasmids sent are malfunctioning.

	SF2/SF3 @ 100pg/uL		

Date: (09/10-09/11) Present: Dana Tran, Kavi Shrivastava

Experiment	Notes	Results	Explanation
Transformation Preparation	Multiple failed transformations; used PUC19 as ctrl to test if there were issues with Bt-SULT and SF plasmids DH5alpha + PUC19 DH5alpha + SF2 DH5alpha + SF3	Failed. No colonies formed.	May be human error, concentration of plasmid too low, so didn't transform? Will use PUC19 as a control to test issues with our plasmid.

Week 13: (09/14-09/18)

Project Date	**09/14**	**09/15**	**09/16**	**09/17**	**09/18**
Experiments /Procedures	-	-	Transformation	-	-
Key Results	-	-	Failed	-	-

Date: (09/16) Present: Toni Densmore

Experiment	Notes	Results	Explanation
Transformation	PUC19 CTRL	Failed.	-

Week 14: (09/21-09/25)

Project Date	**09/21**	**09/22**	**09/23**	**09/24**	**09/25**
Experiments /Procedures	-	Transformation	BCA ASSAY	-	-
Key Results	-	PUC19 CTRL, successful	Mostly negative	-	-

Date: 09/23 Present: Kavi Shrivastava, Dana Tran

Experiment	Notes	Results	Explanation

BCA ASSAY	Pooled all SF and BT samples (His-tagged) → BCA for final conc.	Very low, mostly negative	Our samples did not survive

October

Week 15: (09/28-10/03)

Project Date	**09/29**	**09/30**	**09/31**	**10/01**	**10/03**
Experiments/Procedures	-	Transformation	-	Colony Restreak	Colony PCR + Visualization
Key Results	-	Success	-	-	Bands for SF2 and SF3 Neg: 1AA, 2AA Pos: 1AB, 2AB, 3AA, 3AB

Date: 09/30-10/01 Present: Kavi Shrivastava, Dana Tran, Toni Densmore

Experiment	Notes	Results	Explanation
Transformation	1A: SF2 @ 1600pg/ul 2A: SF3 @ 1600pg/ul 3A: BtS @ 1600pg/ul 1B: SF2 @ 800pg/ul 2B: SF3 @ 800pg/ul 3B: BtS @ 800pg/ul	Successful 1A: 13 colonies 1B: 19 colonies 2A: 13 colonies 3A: 80-100 colonies 3B: 180-200 colonies	Spun down sample during transformation, aliquoted heavily condensed sample into bacterial tubes to shake and grow

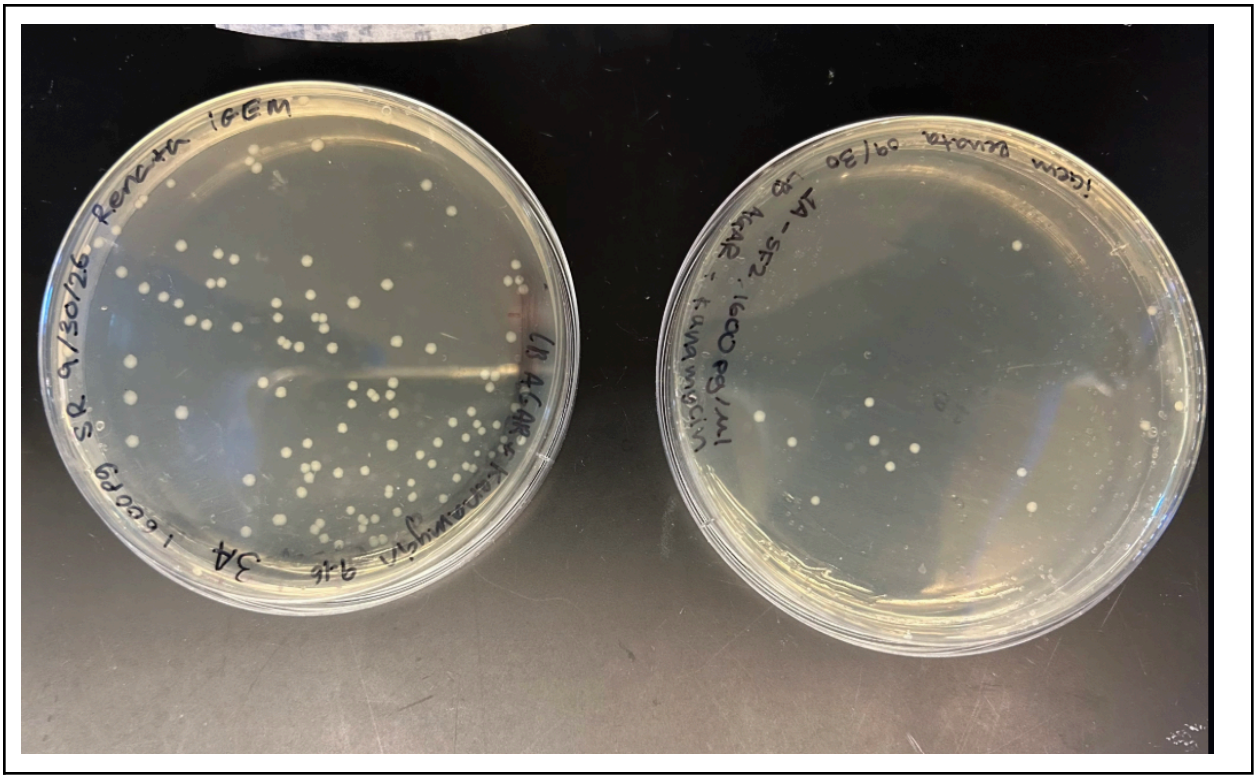

Date: 10/03 Present: Kavi Shrivastava, Dana Tran, Toni Densmore

Experiment	Notes	Results	Explanation
Colony PCR	-	1aa (SF2 @ 1600pg/ul), 2aa (SF3 @ 1600pg/ul)	Most of our samples did not show bands (negative). The only two positive results were 1aa and 1aa.
Colony PCR image:			

Week 16: (10/05-10/10)

Project Date	**10/05**	**10/06**	**10/07**	**10/08**	**10/10**
Experiments /Procedures	-	-	Restreak Colony PCR Prep	COLONY PCR TB Broth	IPTG Spike
Key Results	-	-	Success	Success	Success

Date: (10/08) Present: Toni Densmore, Kavi Shrivastava, Dana Tran

Experiment	Notes	Results	Explanation

Colony PCR	Ran 4 gels for: 1aa-af, 2aa-af	Mild banding	Some of our samples showed positive, others negative.
Colony PCR images: 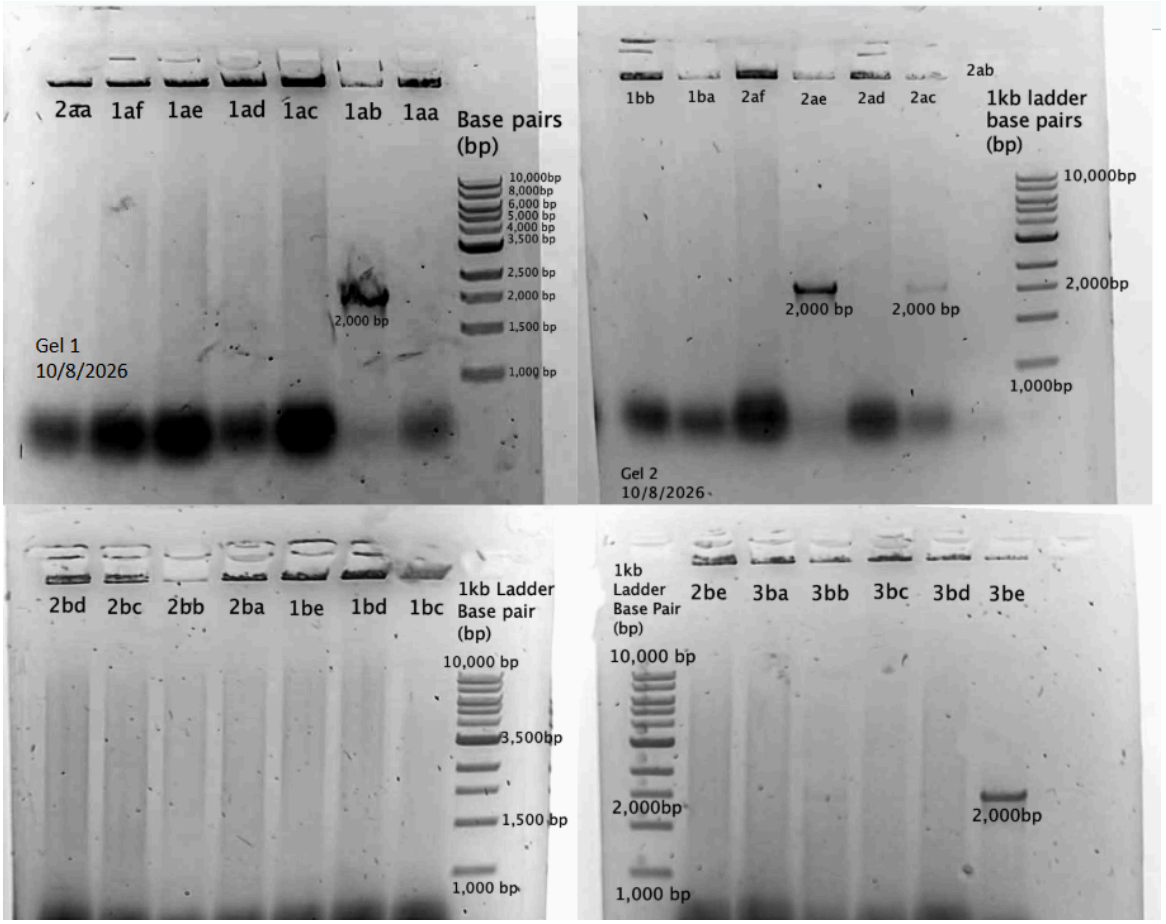			
TB Broth	-	-	-

Date: (10/10) Present: Kavi Shrivastava

Experiment	Notes	Results	Explanation
IPTG SPIKE	Spiked 1AB, 2AE, 3BE OD600 Reading (2hrs) 1AB: 0.7 2AE: 0.492 3BE: 0.717 Samples split into two	Spiked everything with IPTG	Increased the concentration of our samples

	flasks with IPTG, one with Milk		

Week 17: (10/11-10/17)

Project Date	**10/11**	**10/13**	**10/14**	**10/15**	**10/17**
Experiments /Procedures	Protein Extraction	SDS PAGE PREP BCA ASSAY	-	Calculations + Prep for SDS-PAGE and TLC	SDS-PAGE TLC
Key Results	Success	Success	-	-	SDS PAGE Failed TLC Failed

Date: (10/11) Present: Kavi Shrivastava, Toni Densmore

Experiment	Notes	Results	Explanation
Protein Extraction	CBLB made fresh 10-12 BSA Elution marks A-H	Successful	-

Date: (10/13) Present: Toni Densmore, Hannah Bae

Experiment	Notes/Images: Overall BSA ASSAY conc. increasing
BCA ASSAY	
Well Planner	

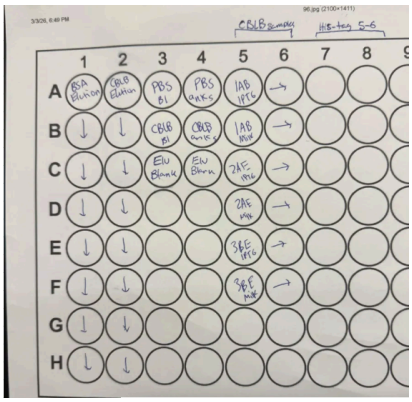

OD600 Reading	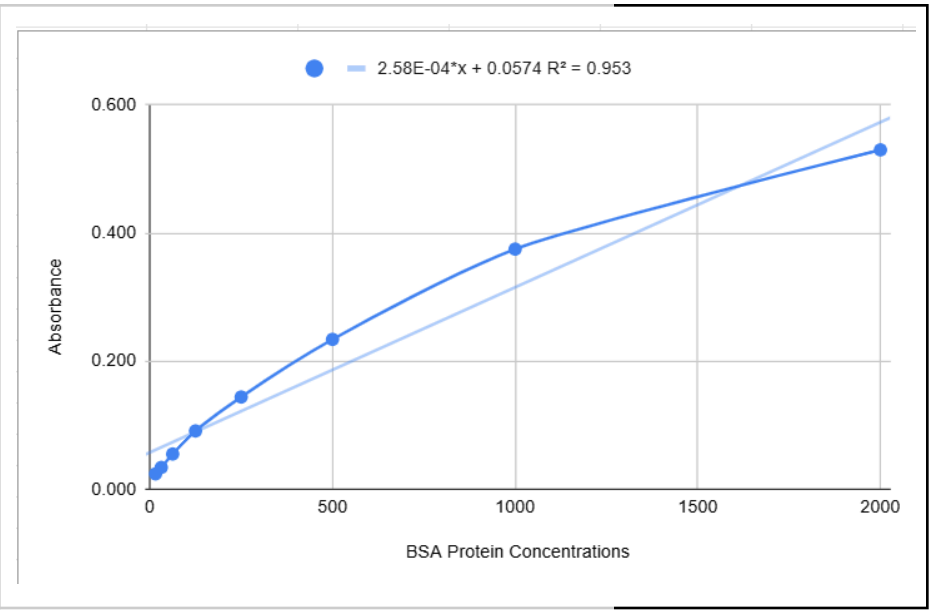

Date: 10/17 Present: Toni Densmore, Kavi Shrivastava, Dana Tran

Experiment	Notes	Results	Explanation
SDS PAGE	-	No Bands (Failed)	Possible Causes: Overloaded wells, did not refrigerate running buffer
SDS PAGE IMAGES:			
Thin Layer Chromatography (TLC)	Practice run for official TLC on 10/19 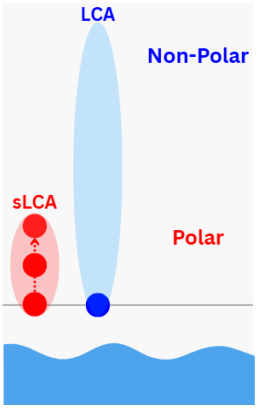	Inconclusive (Failed)	Gypsum deposits on TLC plates; gypsum serves as a binder and caused plates to no longer bind Possibility: did not dry plates well enough before use.

Week 18: (10/19-10/24)

Project Date	**10/19**	**-**	**-**	**-**	**-**
Experiments	SDS Page	-	-	-	-

/Procedures	TLC				
Key Results	SDS Page Success, TLC failed	-	-	-	-

Date: 10/19 Present: Kavi Shrivastava, Dana Tran, Toni Densmore

Experiment	Notes	Results	Explanation
SDS-PAGE	Had to use a stained ladder, visualized with Odyssey CLx. Refrigerated running buffer prior to use (better conduction) Empty wells were filled with LDS (loading buffer) as placeholders 50ul protein ladder (stained), 30ul per protein Ran for 1.5 hr, 100v, 25W	Bands (Success)	
Thin Layer Chromatography	Experimentation with the possibility of using acetic acid and UV fluorescence to quantify LCA reactions.	Inconclusive (Failed)	No standard visualization acid available