WORK INSTRUCTION FOR DEGREASING & PICKLING ROLL CHANGE

1.	**Responsibility**	Shift in charge , Fitter
2.	**Tools/ Equipment**:	• Spanner set • C hook/ roll changing trolley • Lifting belts/slings, D shackle • Packing blocks of wood/PP
3.	**PPEs**	Safety shoes, Safety helmet, Acid resistant apron, Nose mask, Acid resistant hand gloves, Safety goggles
4.	**No. of team members**	
5.	**Pre-Condition**	SCC to be taken from concerned agency
6.	**Isolation**	
7.	**Post-Condition**	Close the permit and handover it to concern agency

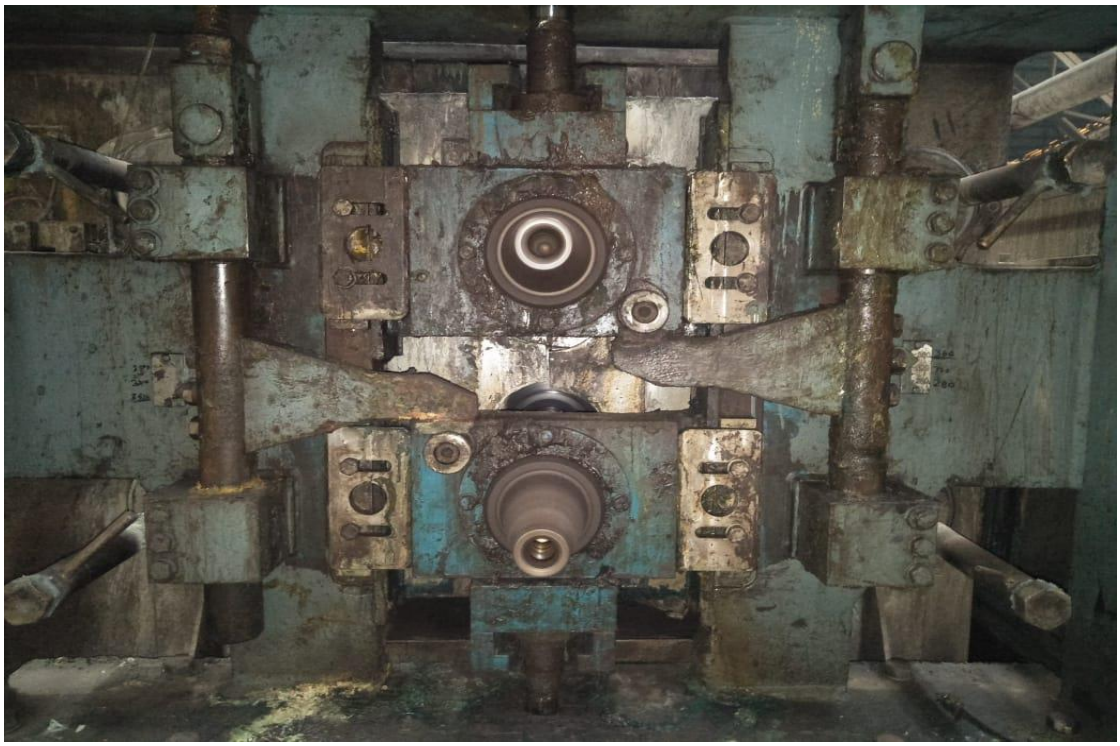

Serial Number	Sequence of Work(for squeeze roll & seal roll)	Responsibility	Safety
1.	Remove the top arm of the roll stand/ frame & side & top PP covers of the rolls.	Fitter	-do-
2.	Remove the coupling/cardan shaft of the rolls(for capl)	Fitter	-do-
3.	Loosen the o/s ss liner bolts & unlock the roll choke.	Fitter	-do-
4.	Hang the C hook on crane & fix it to the neck of the top roll with the locking wheel.	Fitter	-do-
5.	Move the crane CT & remove the roll.	Fitter	-do-
6.	To remove the bottom roll, put the packing block between the sheet & tank.	Fitter	-do-
7.	Again bring the C hook & fix with the roll neck & remove the roll.	Fitter	-do-
8.	Bring the new bottom roll by the C hook & insert it into the roll stand, lock the o/s choke by the liners & remove the C hook from the roll ,remove the packing blocks.	Fitter	-do-
9.	Bring the top roll by the C hook & insert it into the roll stand, put the packing block between bottom & top roll chokes & remove the C hook.	Fitter	-do-
10.	Fix the top arm of the roll stand with the top roll & remove the packing blocks.	Fitter	-do-
11.	Fix the coupling/cardan shafts to the rolls(for capl)	Fitter	-do-
12.	Put the side & top PP covers of the rolls.	Fitter	-do-
13.	Close the work permit.	Shift in charge.	