
Metal Dog Crate for Large Dogs · Assembly & User Instructions

Model: Large | Dimensions 48"L × 28.9"W × 31.1"H | Color:Black wood grain / Brown vintage grain + black metal wire frame

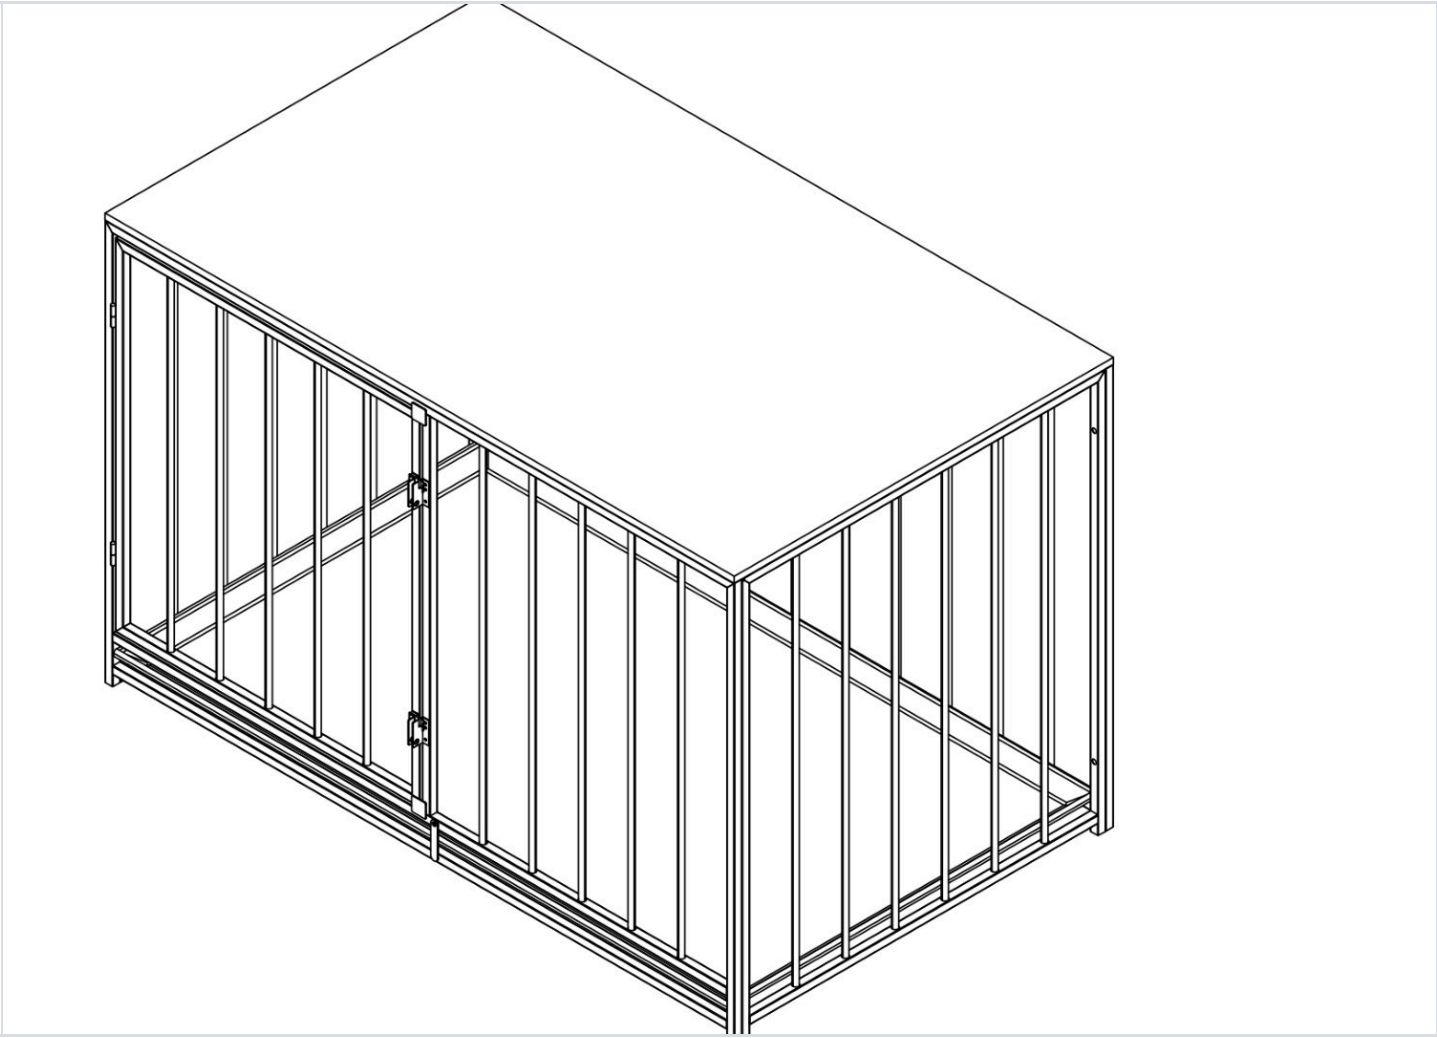

Assembled appearance (double front doors, wood-grain top panel, pull-out tray)


Product Specifications

Overall Size	Suitable For	Main Material	Top Panel	Door Type	Cleaning
approx. — (to be confirmed)	Large dogs	Metal square tube + wire mesh	Wood-grain veneer	Double front doors	Pull-out tray

Unpacking Checklist: After opening the box, first verify all components and fasteners against the "Parts & Hardware List" below. Confirm everything is complete, free of

deformation or sharp burrs before you begin. The letters (A–G) and numbers (①–⑥) shown in the diagrams match the labels on the actual parts.

1. Parts & Hardware List

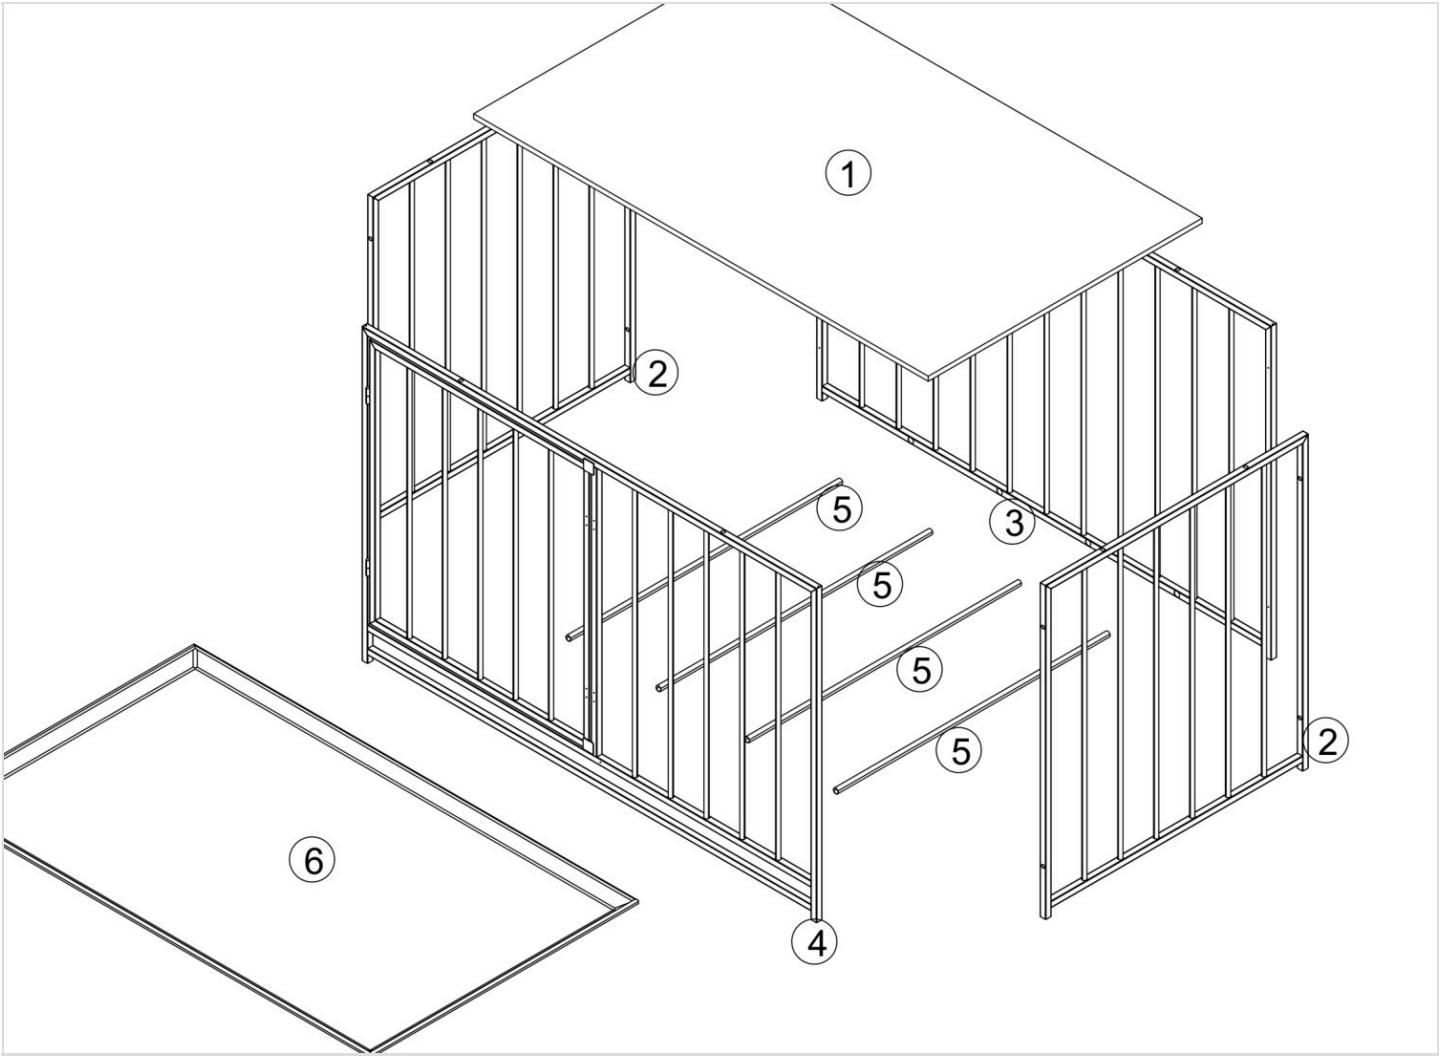


Exploded view: component names and assembly relationship

1.1 Main Components (No. ① – ⑥)

No.	Name	Qty	Description
①	Top panel (wood-grain veneer)	1	Covers the top of the crate; pre-drilled mounting holes on all sides
②	Side panel	2	One left, one right; vertical wire-mesh fencing
③	Back panel	1	Vertical wire-mesh panel on the rear of the crate

④	Front door assembly	1	Includes the left/right swing doors + bottom rail frame (one unit)
⑤	Bottom cross bars	3	Horizontal bottom beams supporting the tray
⑥	Pull-out tray	1	Removable base pan that slides out from the bottom

1.2 Hardware Accessories (No. A – G)

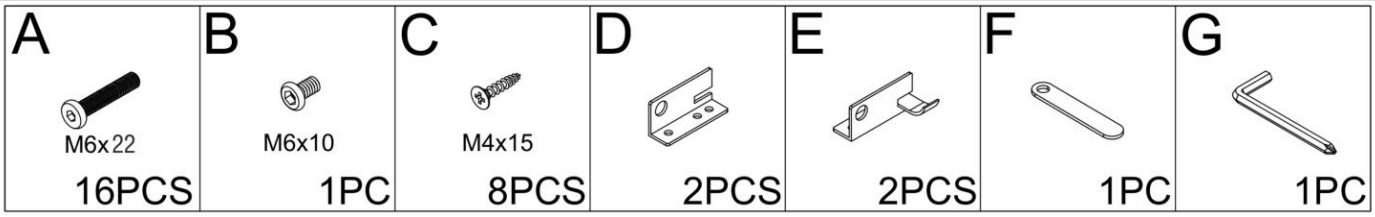

Hardware accessories overview

No.	Name	Spec.	Qty	Use
A	Hex bolt	M6×25	16	Joins panels, door frame and top panel (Steps 1–3)
B	Hex bolt	M6×10	1	Secures the door stop pin F (Step 6)
C	Self-tapping screw	M4×15	8	Secures hinge brackets D and door latches E (Step 4)
D	Hinge bracket	—	2	Door hinge / frame mounting seat
E	Door latch	—	2	Locking catch for the double doors
F	Door stop pin	—	1	Bottom anti-opening limiter pin
G	Hex wrench	—	1	The only tool needed to tighten bolts A and B

> Note: The quantity of fasteners is matched to assembly needs with a small surplus. Use them step by step and keep any leftovers for spares.

2. Before You Begin


- **Inventory & Inspection:** Check the 6 component types and 7 hardware types against

Section 1; inspect metal edges for smoothness, burrs or chipped coating.

- **Protect the Surface:** Lay cardboard or a soft cloth on a flat floor and place parts face down to avoid scratching the wire mesh and wood-grain top panel.
- **Tools Needed:** Only the included hex wrench G is required for all fastening—no extra tools needed.
- **"Loose First, Tighten Last" Principle:** In each step, finger-tighten bolts first and **do not fully tighten**; align the whole crate frame before final tightening to greatly reduce misalignment. Because this is a larger, heavier crate, get a second person to help hold panels steady.
- **Two-Person Recommended:** A large crate is heavy and unwieldy; two people are strongly recommended when fitting side panels and the top panel. One person can still complete it with care.

3. Step-by-Step Assembly

Step 1 | Assemble Rear & Side Panels

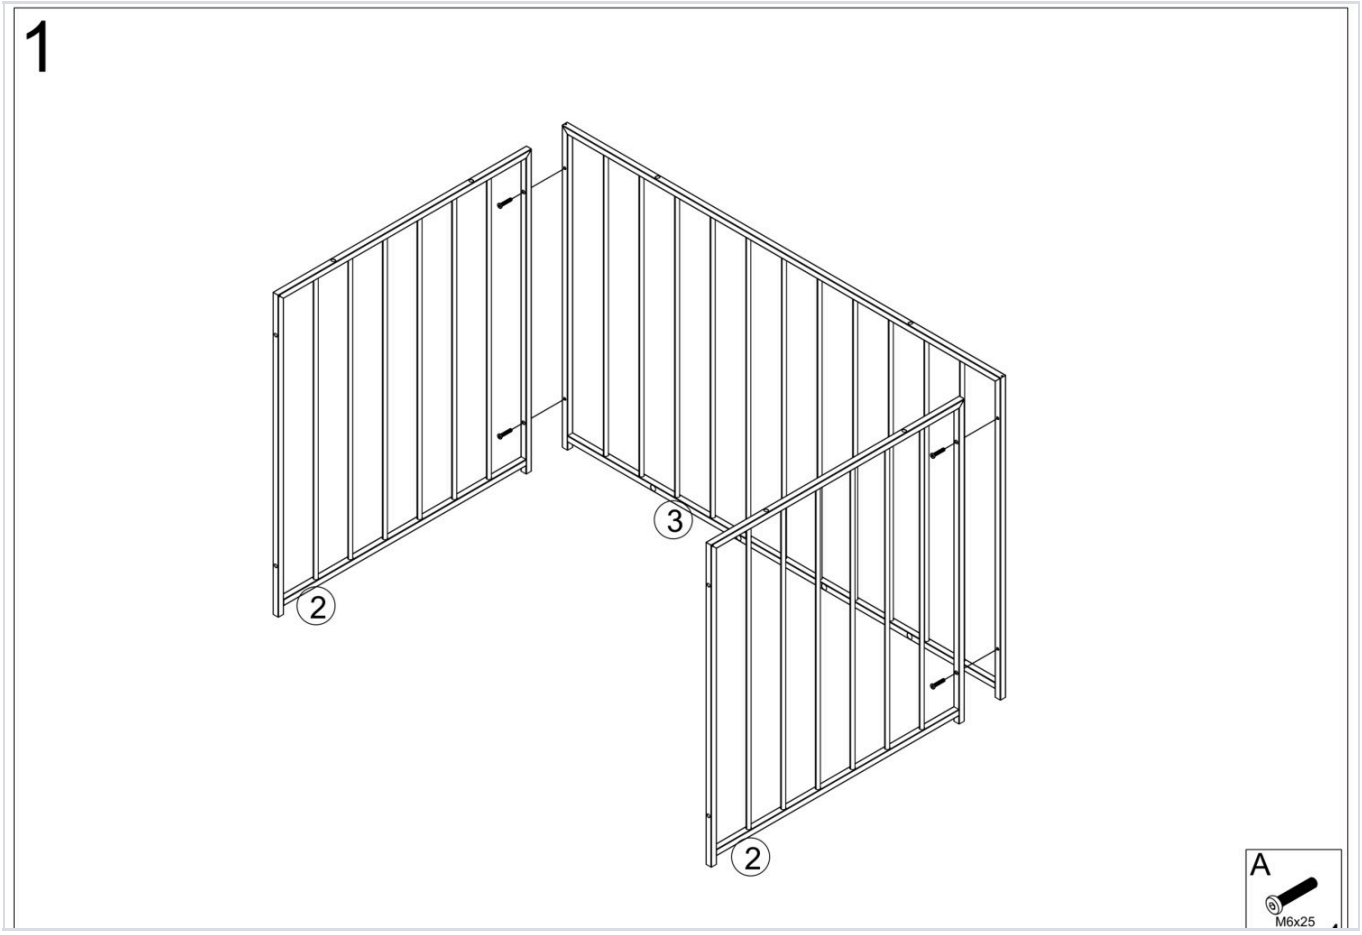


Step 1: side panels ② + back panel ③, 4× bolt A

- **Parts Needed:** Side panel ② ×2, back panel ③ ×1, hex bolt A (M6×25) ×4.

- **Procedure:** Arrange the two side panels ② and the back panel ③ into an inverted-U shape as shown. Insert 1 bolt A at top and bottom of each joint (dashed lines mark the seams)—4 connection points total.
- **Fastening:** Add nuts and lightly snug with hand / wrench G; **leave loose** so the structure can still be adjusted.

> Note: Keep the wire bars facing inward; bolt heads face out, nuts face in, to avoid scratching the pet. Mind the heavier panels—lift with care.

Step 2 | Install Front Door Assembly & Bottom Bars

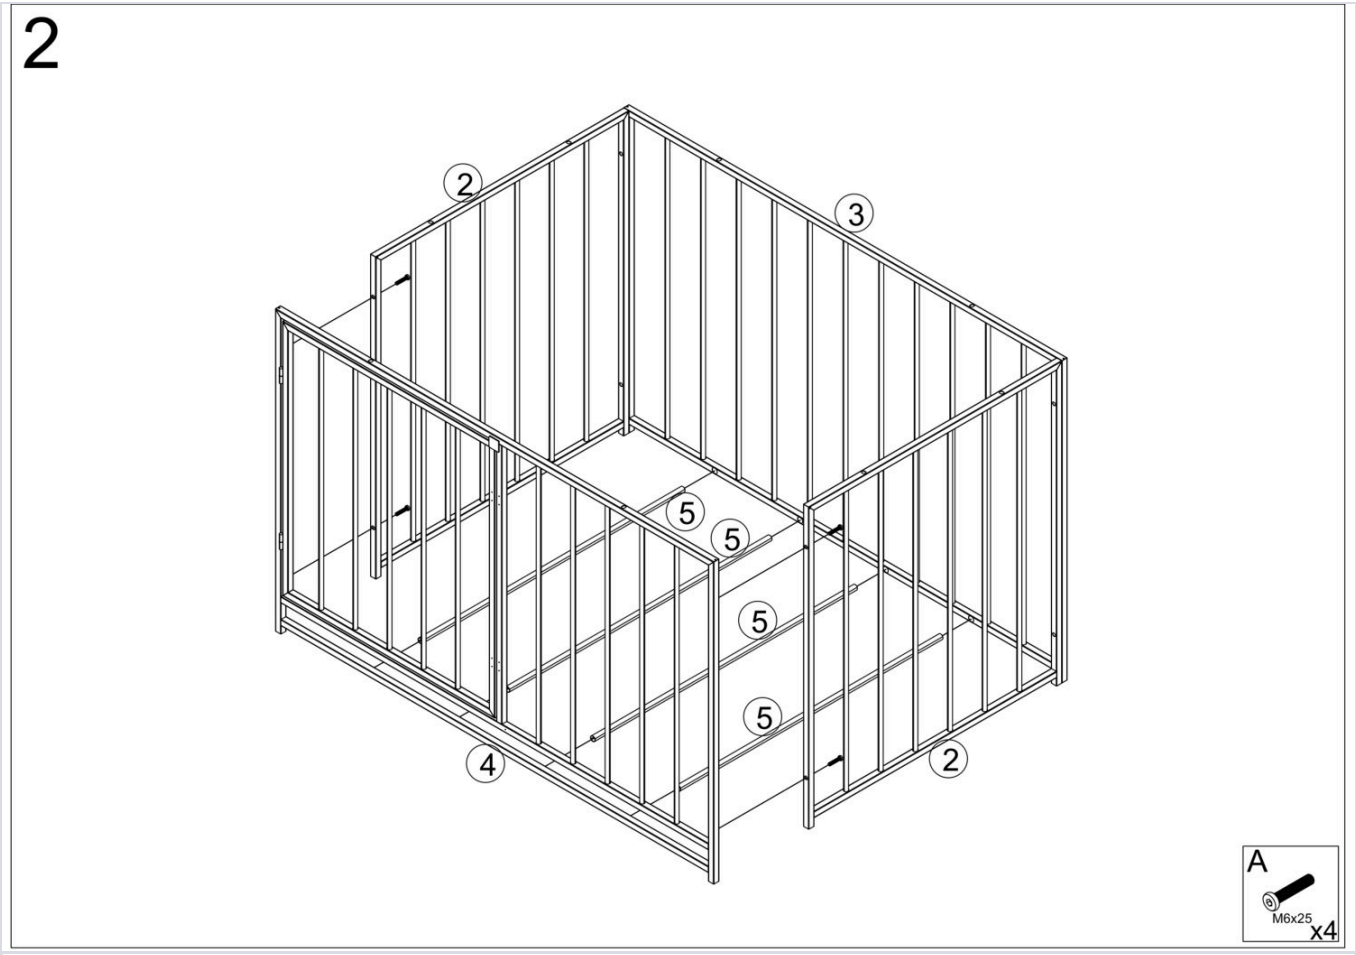


Step 2: front door assembly ④ + bottom cross bars ⑤×3, 4× bolt A

- **Parts Needed:** Front door assembly ④ ×1, bottom cross bars ⑤ ×3, hex bolt A ×4.
- **Procedure:** Place the front door assembly ④ at the front ends of the side panels. Fix both front corners top and bottom with 2 bolt A each (4 total), closing the frame with the rear/side panels from Step 1.
- **Fit the bars:** Snap both ends of the 3 bottom cross bars ⑤ into the slots of the front and rear bottom frames to support the tray later.

> Note: After snapping in, confirm the bars are fully seated, not floating. Keep bolts loose to ease top-panel alignment in Step 3.

Step 3 | Install Top Panel

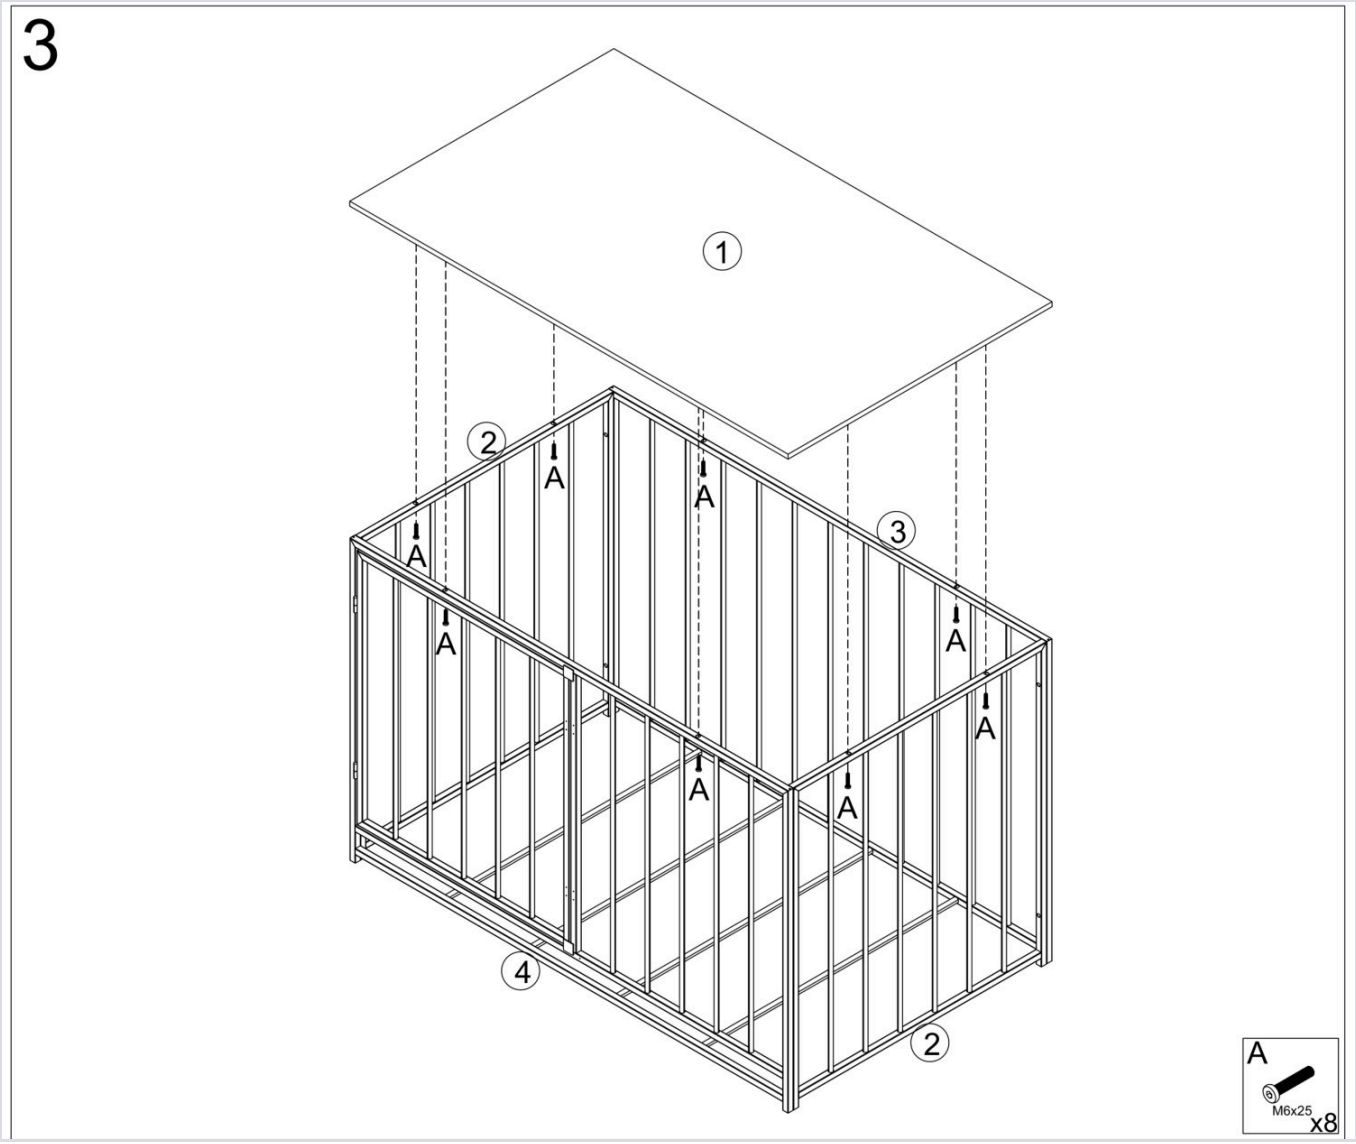


Step 3: top panel ①, 8× bolt A

- **Parts Needed:** Top panel ① ×1, hex bolt A ×8.
- **Procedure:** Lay the top panel ① flat on the top frame and align all sides. There are 8 holes at the four corners and midpoints of the four edges; insert 1 bolt A per hole (arrows show the bolt entering the tube hole from above).
- **Fastening:** Pre-tighten each bolt with wrench G, then tighten all 8 in a **diagonal sequence** for even load and no tilt. This is the heaviest single panel—have a helper support it.

> Note: Now is a good time to re-check all bolt A from Steps 1–2; fully tighten only

> after confirming the crate is square.

Step 4 | Install Door Latches & Hinge Brackets

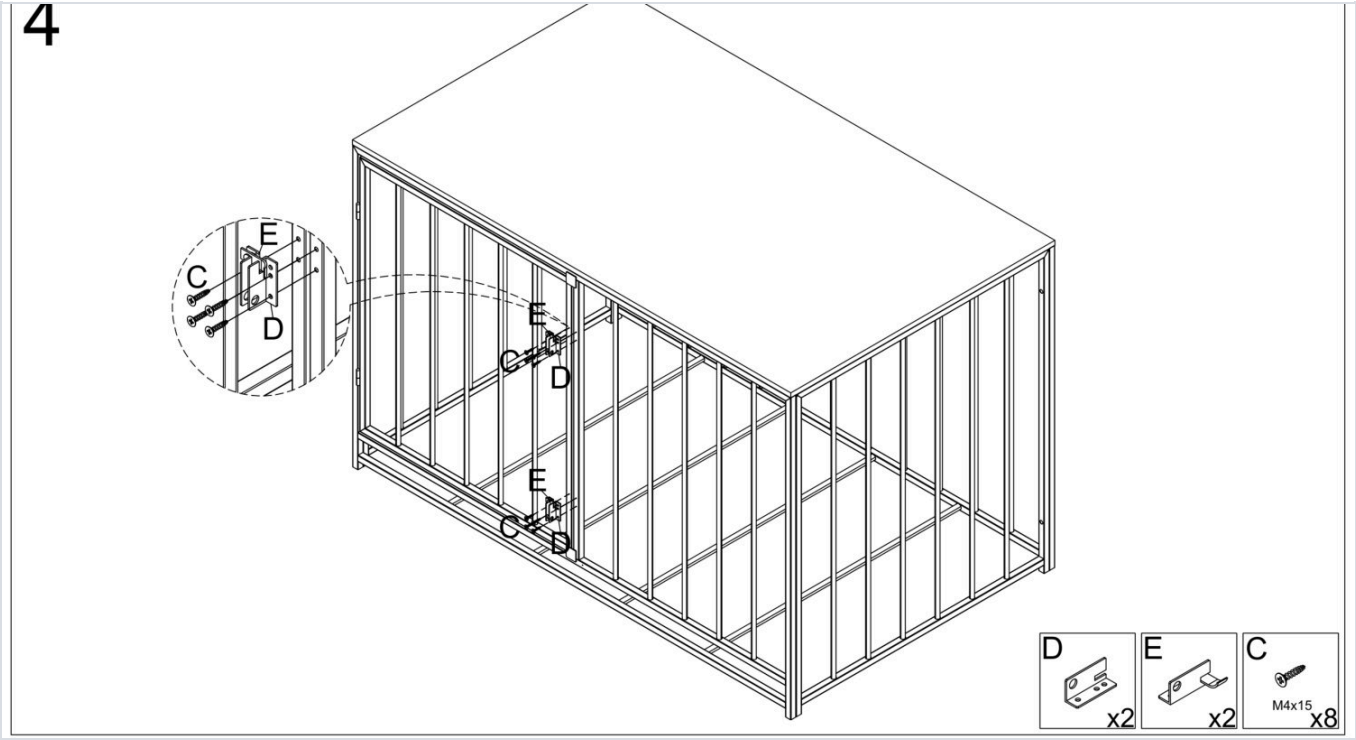


Step 4: hinge brackets D×2, door latches E×2, 8× screw C

- **Parts Needed:** Hinge bracket D ×2, door latch E ×2, self-tapping screw C (M4×15) ×8.
- **Procedure:** At the positions shown in the enlarged view, mount hinge brackets D on the corresponding door locations and door latches E on the outer door side; secure each with 2 screw C driven into the tube (C shows the screw entering).
- **Fastening:** Lightly snug first to align, then fully tighten all 8 after confirming the doors swing smoothly.

> Note: Latches and hinges are small precision parts—test open/close several times after installation; if stiff, loosen the relevant screw slightly to adjust.

Step 5 | Insert the Tray

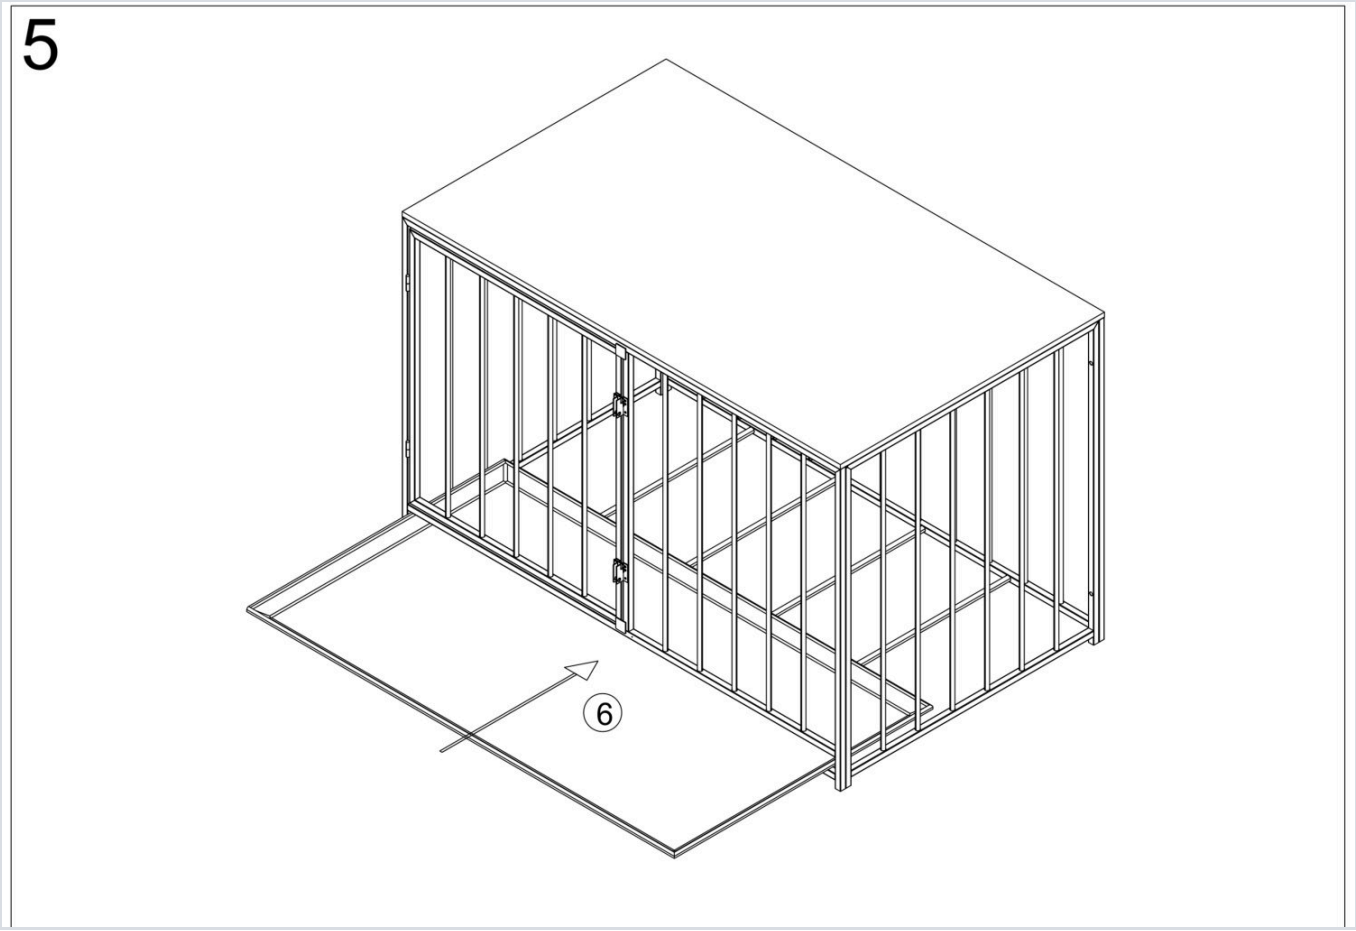


Step 5: tray ⑥ pushed in from the bottom

- **Parts Needed:** Pull-out tray ⑥ ×1.
- **Procedure:** Slide the tray ⑥ in smoothly from the lower front of the crate along the rail channel formed by the bottom cross bars ⑤, until fully seated and the base rests on the bars.

> Note: Keep the tray level while sliding to avoid one-sided jamming and deformation; it pulls out directly for daily cleaning.

Step 6 | Secure Door Stop Pin (Anti-Opening)

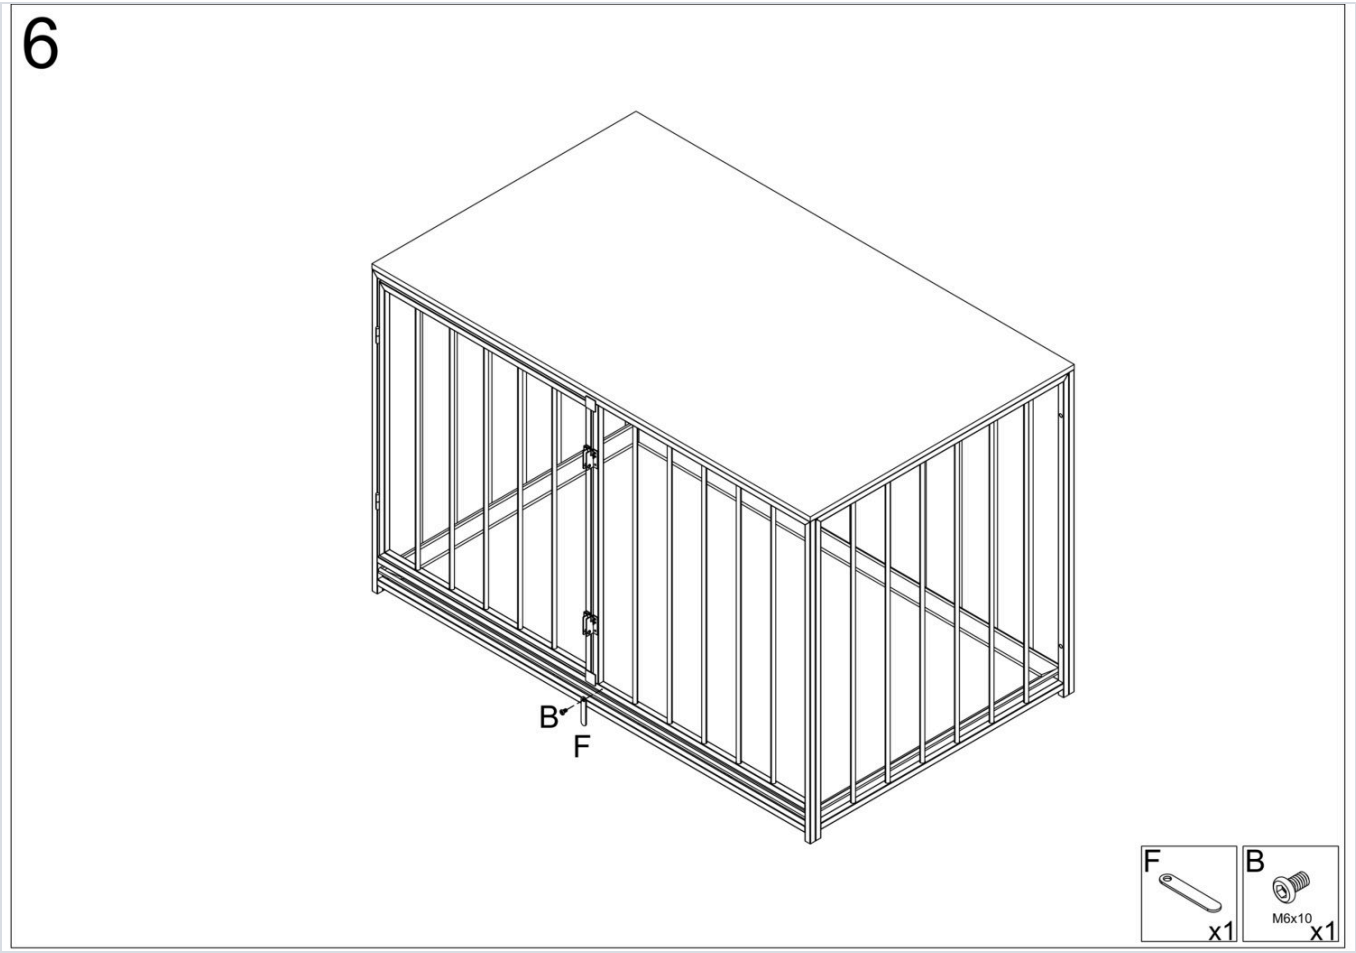

Step 6: door stop pin F×1 + bolt B×1

- **Parts Needed:** Door stop pin F ×1, hex bolt B (M6×10) ×1.
- **Procedure:** Use bolt B to fix pin F to the bottom beam below the left door frame as the bottom anti-opening limiter (B, F point to the mounting position).
- **Fastening:** Tighten bolt B with wrench G; with the door closed, insert the pin to prevent the pet from pushing the door open.

> Note: Align the pin hole with the door frame; insertion/removal should be smooth; periodically check the pin for looseness.

4. Post-Assembly Check

- Gently shake the crate; confirm no joint is loose or rattling and all bolt A are tightened in diagonal sequence.
- Open and close the double doors repeatedly; confirm latches E lock reliably and hinges D swing freely.
- Pull out / push in tray ⑥ several times; confirm the rail is smooth and the tray seats

without wobble.

- Door stop pin F inserts and removes normally and limits the door when closed.

5. Usage & Safety Tips

- **Stable Placement:** Place on a flat, dry surface; the wood-grain top has limited load—do not stand on or overload it.
- **Pinch Hazard:** Watch the pet's limbs and tail when opening/closing doors to avoid pinching.
- **Heavy Item:** A large crate is heavy—lift with a partner and keep clear of toes/feet when moving it.
- **Periodic Tightening:** After transport or long use, check bolts and latches for looseness about once a month.
- **Cleaning & Maintenance:** Tray ⑥ can be pulled out and washed; wipe the metal mesh with a damp cloth and dry promptly to prevent rust from moisture.
- **Environment:** Keep away from fire and prolonged direct sunlight; avoid prolonged soaking of the wood top.
- **Compatibility:** This manual covers the "Large" crate for large dogs. Its exact dimensions are not listed in the source file—please refer to the product label, or provide them and we will update this manual. Choose the matching model for other sizes.

> Note: This manual is compiled and expanded from the original structural assembly diagrams. Part and hardware numbers, quantities and specifications match the original drawings. Screw specifications follow the per-step callouts in the diagrams.