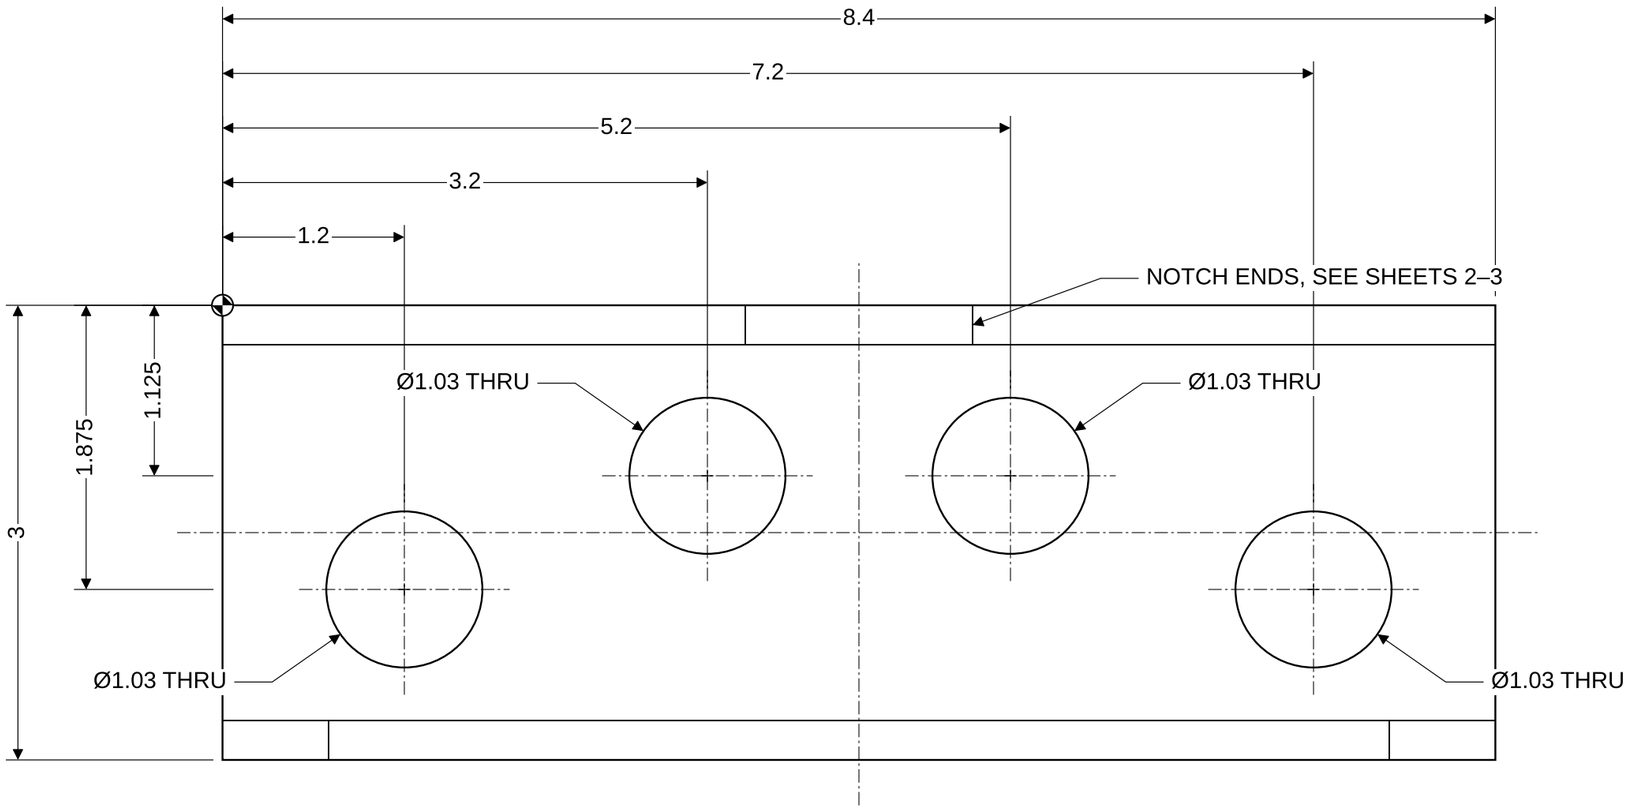

FRONT VIEW

SCALE 1:1

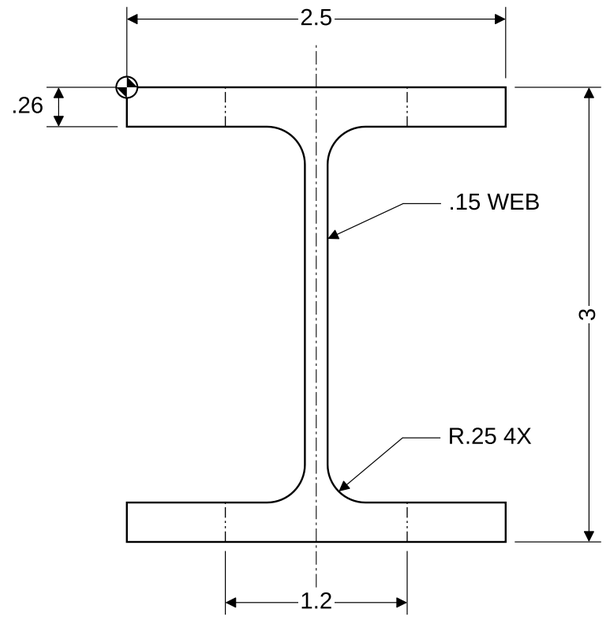

END VIEW (STOCK)

SCALE 1:1 · PHANTOM: NOTCHED WIDTH 1.2

NOTES

1. STOCK 1, AA I 3 × 2.03, 6061-T6. USE THE 8.40 RAW LENGTH AS SUPPLIED.
2. DRILL THE 8X Ø.50 RELIEF HOLES BEFORE ANY SAW CUT.
3. SAW EACH NOTCH TANGENT TO ITS RELIEF HOLE(S): ALL INSIDE CORNERS R.25 (NO SHARP CORNERS). CUT THE FLANGE ONLY.
4. Ø1.03 WEB HOLES: 1-1/32 DRILL, 4X.
5. BREAK ALL EDGES .02 MAX. DEBURR ALL HOLES AND CUTS.
6. FULL-WIDTH PADS (NO CUTS) UNDER THE TEST ROLLERS: TOP 3.45–4.95; BOTTOM 0–.70 AND 7.70–8.40.

ALL UNITS IN INCHES
ALL TOLERANCES ± 0.02

MATERIAL: 6061-T6 ALUMINUM
STOCK 1: AA I 3 × 2.03

PROJECT

EMCH 308 Semester Project

TITLE

I-Beam, Stock 1, Rev C

Rev C – web holes and stock section

APPROVED	SIZE	CODE	DWG NO		REV
CHECKED	B		USC06_MTC06_IBeam_RevC		C
DRAWN Ryan Bilock	SCALE 1:1		WEIGHT 0.914 lb	SHEET 1/3	

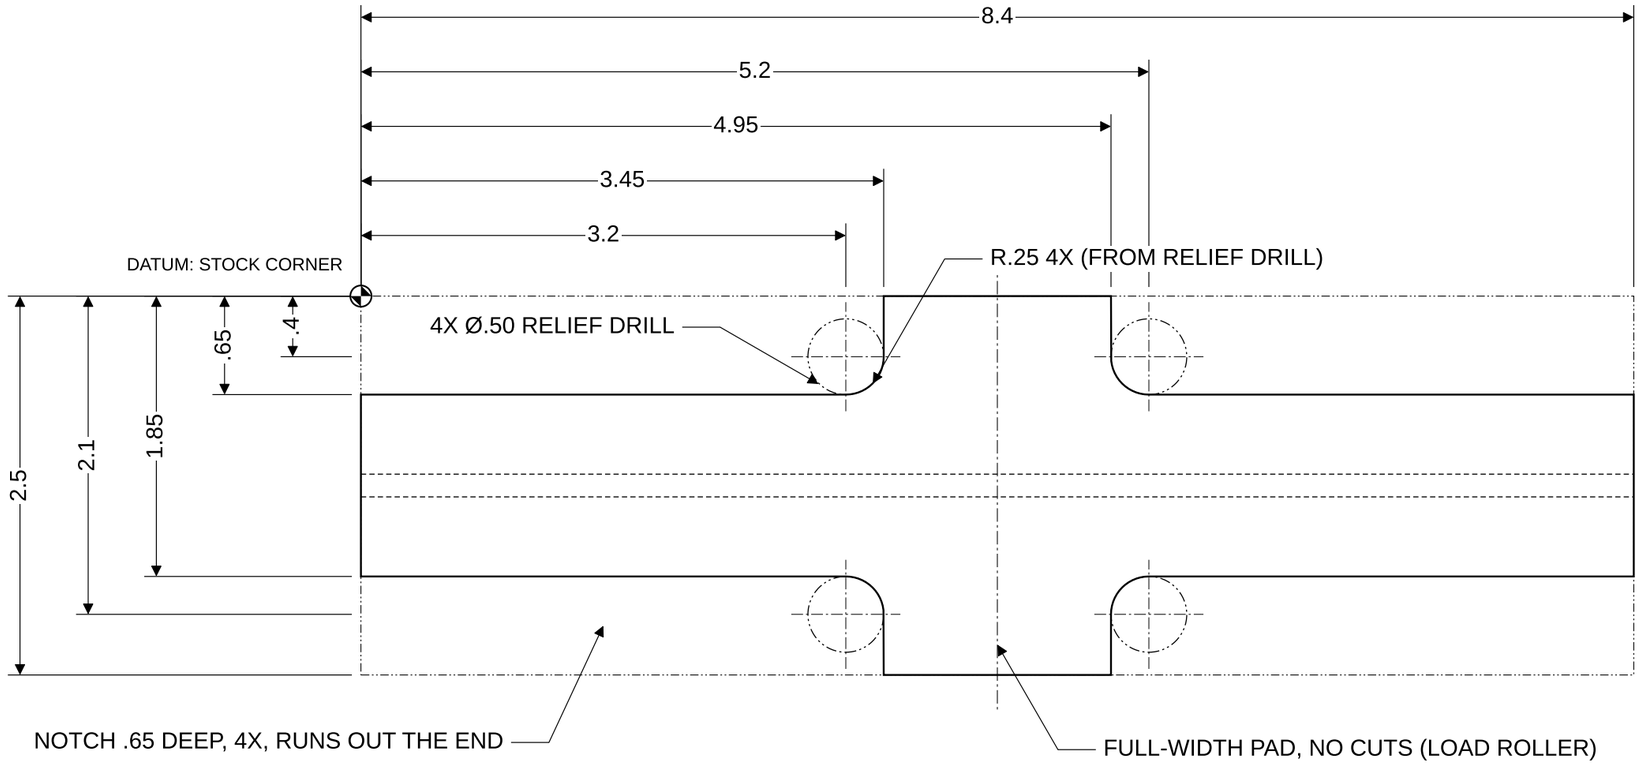

TOP FLANGE (VIEWED FROM ABOVE)

SCALE 1:1 · PHANTOM: STOCK OUTLINE AND Ø.50 RELIEF DRILLS · HIDDEN: WEB

NOTES

1. STOCK 1, AA I 3 × 2.03, 6061-T6. USE THE 8.40 RAW LENGTH AS SUPPLIED.
2. DRILL THE 8X Ø.50 RELIEF HOLES BEFORE ANY SAW CUT.
3. SAW EACH NOTCH TANGENT TO ITS RELIEF HOLE(S): ALL INSIDE CORNERS R.25 (NO SHARP CORNERS). CUT THE FLANGE ONLY.
4. Ø1.03 WEB HOLES: 1-1/32 DRILL, 4X.
5. BREAK ALL EDGES .02 MAX. DEBURR ALL HOLES AND CUTS.
6. FULL-WIDTH PADS (NO CUTS) UNDER THE TEST ROLLERS: TOP 3.45–4.95; BOTTOM 0–.70 AND 7.70–8.40.

ALL UNITS IN INCHES
ALL TOLERANCES ± 0.02

MATERIAL: 6061-T6 ALUMINUM
STOCK 1: AA I 3 × 2.03

PROJECT

EMCH 308 Semester Project

TITLE

I-Beam, Stock 1, Rev C

Rev C – top flange, load-roller pad

APPROVED	SIZE	CODE	DWG NO		REV
CHECKED	B		USC06_MTC06_IBeam_RevC		C
DRAWN Ryan Bilock	SCALE 1:1		WEIGHT 0.914 lb	SHEET 2/3	

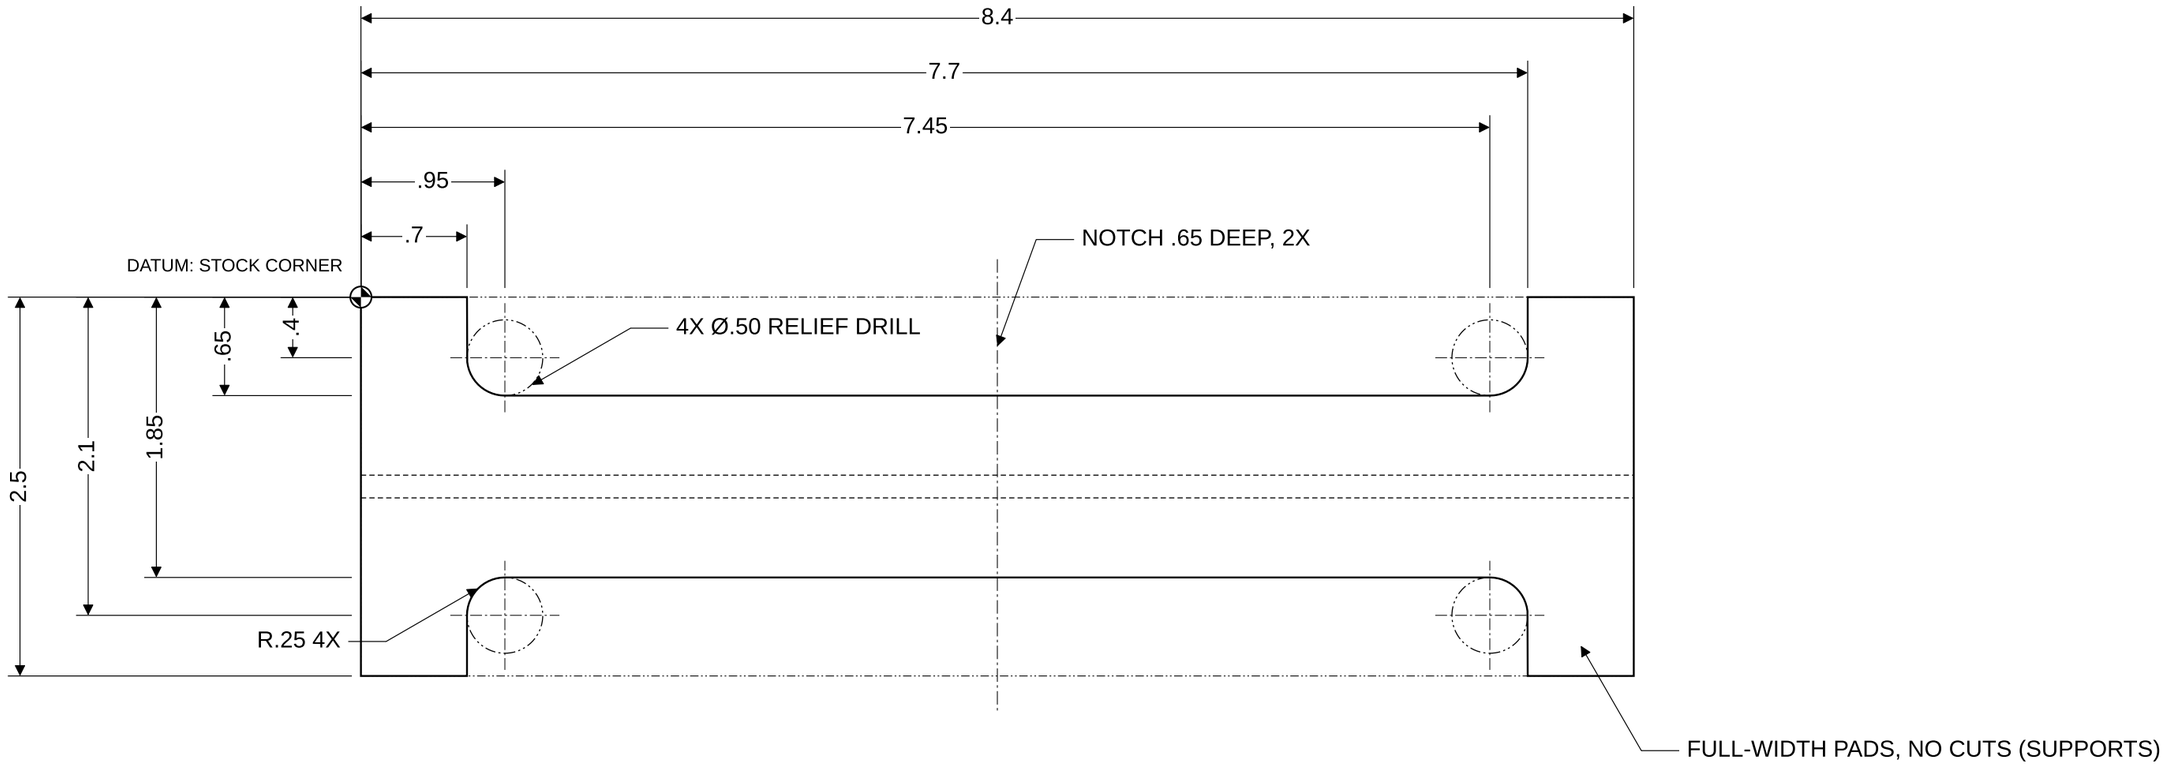

BOTTOM FLANGE (VIEWED FROM BELOW)

SCALE 1:1 · PHANTOM: STOCK OUTLINE AND Ø.50 RELIEF DRILLS · HIDDEN: WEB

NOTES

1. STOCK 1, AA I 3 × 2.03, 6061-T6. USE THE 8.40 RAW LENGTH AS SUPPLIED.
2. DRILL THE 8X Ø.50 RELIEF HOLES BEFORE ANY SAW CUT.
3. SAW EACH NOTCH TANGENT TO ITS RELIEF HOLE(S): ALL INSIDE CORNERS R.25 (NO SHARP CORNERS). CUT THE FLANGE ONLY.
4. Ø1.03 WEB HOLES: 1-1/32 DRILL, 4X.
5. BREAK ALL EDGES .02 MAX. DEBURR ALL HOLES AND CUTS.
6. FULL-WIDTH PADS (NO CUTS) UNDER THE TEST ROLLERS: TOP 3.45–4.95; BOTTOM 0–.70 AND 7.70–8.40.

ALL UNITS IN INCHES
ALL TOLERANCES ± 0.02

MATERIAL: 6061-T6 ALUMINUM
STOCK 1: AA I 3 × 2.03

PROJECT

EMCH 308 Semester Project

TITLE

I-Beam, Stock 1, Rev C

Rev C – bottom flange, support pads

APPROVED	SIZE	CODE	DWG NO		REV
CHECKED	B		USC06_MTC06_IBeam_RevC		C
DRAWN Ryan Bilock	SCALE 1:1	WEIGHT 0.914 lb	SHEET 3/3		