Lab 8: C programming with AVR Studio 4


The goal of this lab is to introduce you to "C" programming language. We will repeat the concepts from previous labs and use "C" instead of assembly programming. There are two parts to this lab. The first one introduces you to a blink program and the second one is the LCD display program. Submit lab8.c at the end of your lab.

PART1: LED blinking


I. Create a C project in AVR Studio 4

Start the AVR Studio 4.

• Select "New Project".

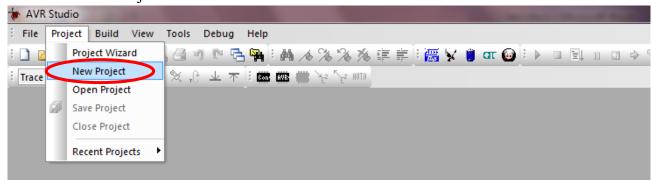


• Select "Project Type" → AVR GCC, name the project "lab8", click "..." button to choose a location (H drive)

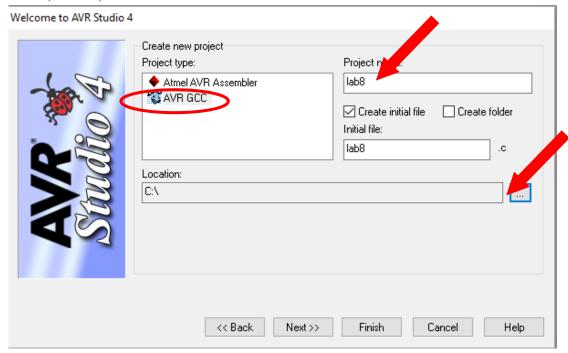

Go to → Next.

- Select a platform: Debug Platform → AVR Simulator 2
- Select a Device: Device → ATmega2560. Click the "Finish" button.

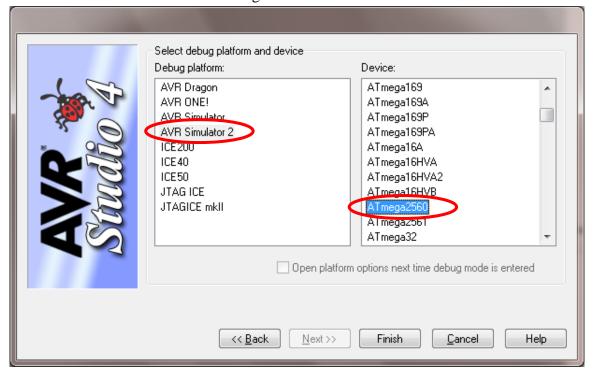


II. Compile C project

After creating a C project, it opens up the project space. There are issues with the avr-gcc compiler within the AVR Studio. Hence we need to replace this. **This step needs to be done for every project you create**.

- Go to Project → Configuration Options
- Go to the last item "Custom Options" in the left plane.
- Uncheck "Use AVR Toolchain" under External Tools at the bottom
- Select the button for "avr-gcc" to point to avr-gcc.exe in the folder "C:\WinAVR\bin\avr-gcc.exe"
- Select the button for "make" to point to make.exe in the folder
 "C:\WinAVR\utils\bin\make.exe"

CSC 230 Spring 2016

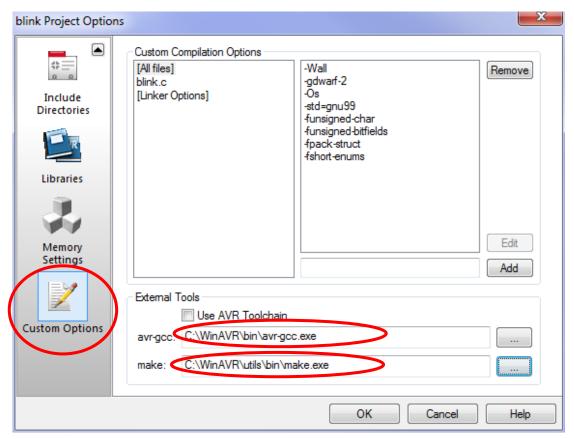

- Copy the contents of lab8.c provided to you in the Lab08 folder on connex
- Read the code and understand

```
#define F_CPU 16000000UL
                       2
                        3
                            #include <avr/io.h>
                        4
                            #include <util/delay.h>
                       5
                       6 □/*
                            * Our 6 LED strip occupies
                        8
                            * ardruino pins 42, 44, 46, 48, 50, 52
                       9
                            * and Gnd (ground)
                       10
                            * Pin 42 Port L: bit 7 (PL7)
                       11
                             * Pin 44 Port L: bit 5 (PL5)
                             * Pin 46 Port L: bit 3 (PL3)
                       12
                       13
                             * Pin 48 Port L: bit 1 (PL1)
                       14
                            * Pin 50 Port B: bit 3 (PB3)
                            * Pin 52 Port B: bit 1 (PB1)
                      15
                      16
Port L: bit 7 PL7
                      17 int main (void)
                      18 ₽{
Port L: bit 5 PL5
                      19
                              /* set PORTL and PORTB for output*/
                      20
                              DDRL = 0xFF;
Port L: bit 3 PL3
                      21
                              DDRB = 0xFF;
                      22
                              while (1)
Port L: bit 1 PL1
                      23
                                  /* set PORTL.7&3 high: 1000 1000
                      24
Port B: bit 3 PL3
                       25
                                  * set PORTB all low: 0000 0000
                       26
Port B: bit 1 PL1
                      27
                                  PORTL = 0x88;
                      28
                                  PORTB = 0 \times 00;
                      29
                      30
                                  _delay_ms(500);
                       31
                       32
                              return 1;
                      33
```

- Build the code (F7) or click on the Build
- See the build window below to see if there any possible errors
- If the program compiled with no errors it is time to load the binary hex file to the unit
 - Upload the lab8.hex file to the board by typing the following command at the command window:

"C:\Program Files (x86)\Arduino\hardware\tools\avr\bin\avrdude" -C "C:\Program Files (x86)\Arduino\hardware\tools\avr\etc\avrdude.conf" -p atmega2560 -c wiring -P COM4 -b 115200 -D -F -U flash:w:filename.hex

You may need to change the path and filename if the settings are different from this.

Or, download runbd.bat file to the debug folder in your lab9.c program folder. Open a command window get to the same directory where runbd.bat is stored, and type runbd.bat. "runbd.bat" is a batch file. It is another way to type a command. You need to change the file name if your project is not called lab9.hex.

III. Exercises:

Download lab8.c.

```
Realize the following Pseudo-code:
turn the frist led on;
1 second delay;
```

```
while(1)
{
   turn the current led off, turn the next led on; //wrap around when appropriate
   1 second delay;
}
```

Submit lab8.c at the end of your lab.

PART2: LCD Display

Following the steps similar to blink project, create an AVR-gcc project for display. Import the file main.c. For this purpose we have provided you complete LCD driver software. This driver is obtained online from http://www.avrfreaks.net.

- a. Create your avr-gcc project in the AVR Studio 4.
- b. Make sure you use WinAVR tools and not the AVR Toolchain as explained above
- c. Import the lcd_driver files (lcd_drv.h, main.h, mydefs.h, lcd_drv.c and main.c) into your project space.
- d. Our Lab LCD is a 2x16 (i.e., 2 line display with 16 characters on each line) display. Therefore the first thing you have to do is that make sure (i.e., uncomment the 2x16 line) the LCD is set to 2x16 in "main.h" and comment others in the "define wanted LCD type" section of main.h

CSC 230 Spring 2016

- e. Our LAB cpu uses a clock rate of 16MHz. Therefore you need to also make sure that the correct value for F_CPU in "main.h" file. Otherwise the timing used in the code will not work.
- f. The LCD is connected to the board through specific set of digital pins as outlined in the HD44780 tutorial. These are already defined under "define the LCD connections" section of "main.h" with the appropriate port pins.
- g. Study the simple "main.c" program. It initializes the LCD by calling lcd_init(); sets the cursor to position (0,0) (first character, first line) using lcd_xy() and puts a string "Welcome to" using lcd_puts(). Since ours is a two line display, it will continue with displaying the second line by setting the cursor to (0,1) (first character, second line) and writes a string "CSc 230".
- h. Compile your project and upload your hex file to the board by using "avrdude" program (see Lab4 slides on how to use this) if there are no errors.
- i. If everything goes well, you should see "Welcome to CSc 230" on the display.

Modify the code so that you display your name on the second line. Wait for 500ms, then erase it and display it again in a loop creating a flashing effect.