

TAYLOR DAMPED MOMENT FRAMETM

DAMPER DESIGN SIMPLIFIED

- Approval Through ICC-ES Process
- 30% Reduction In Steel
- ≥ 25% Reduction In Base Shear
- No Peer Review Required
- No Time-History Analysis
- **Shortened Design Time**



The New Taylor-ed Solution

Our new Taylor Damped Moment Frame™ (TDMF™) procedure simplifies the design process, eliminating the need for nonlinear time-history analysis and peer review. The prescriptive method decouples special steel moment frame design from the damper frame, allowing for easier analytical models, less guess work on damper properties, and smoothing coordination with Taylor Devices.



This procedure has approval* by ICC-ES through the rigorous AC494 procedure, including validation with over 80 archetype structures using the FEMA P-695 methodology.

* expected approval by October 2022

SYSTEM REQUIREMENTS


- At least 2 dampers in each principal direction at each floor
- Rigid diaphragm
- < 300'
- · No extreme torsional irregularity

PROCEDURE VALIDATION PROCESS

- ICC-ES: AC494 Qualification of Building Seismic Performance of Alt. Seismic Force-Resisting Systems
- Following FEMA P-695 methodology
- 80+ archetype structures designed by Englekirk Structural Engineers including SidePlate frames
- Analysis conducted by HB Risk and Jim Harris of J.R. Harris & Co.
- Peer reviewed by content experts
- Invested over 4,000 hours to develop and validate the procedure


SPECIAL STEEL MOMENT FRAME

DAMPED FRAME

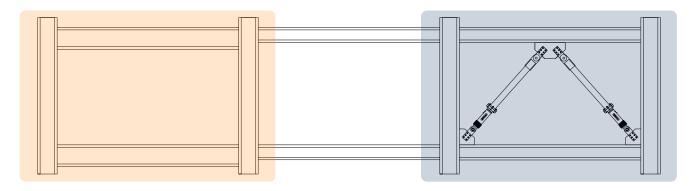

- Designed using Modal Response Spectrum Analysis
- Scale MRSA base shear to 75% of ELF base shear
- R = 8
- $C_d = 4.5$ (instead of 5.5)
- $\Omega = 3$
- Computer model does not include damper elements

- Damper behavior: $F = CV^{\alpha}$
- α (damper exponent) = 0.4
- C (damper constant) determined through prescriptive approach
- Damper frame designed with overstrength on damper force
- Provides 25% effective damping at DBE level

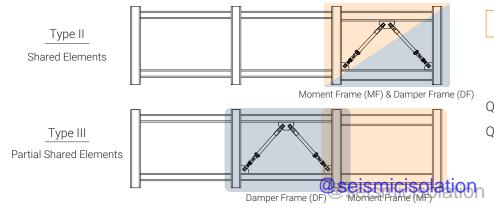

COMBINED LOAD EFFECTS

$$E_{h} = max(Q_{MD}, Q_{TD}, Q_{MD} \pm 0.7 Q_{TD})$$

 Q_{MD} = load effects from max. displacement stage

 Q_{TD} = load effect from Taylor damper