
• Polygons must be closed (see Figure 5)—The endpoints of line segments that form a polygon must be collocated and closed in the CAD program.

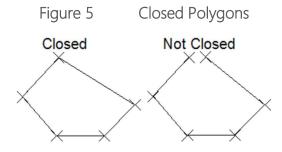

Source: FAA AC150/5300-18B, Change 1