Diagram 7 (Space Numbering Sequencing)

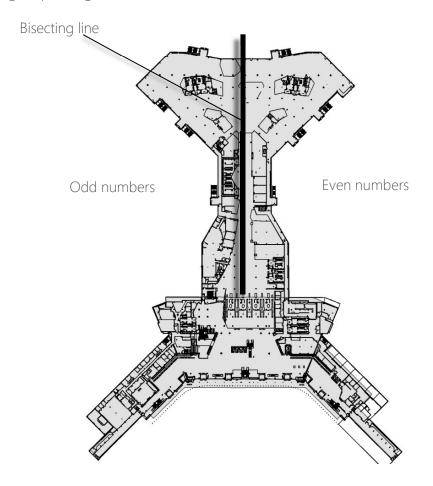


Diagram 7 (Note):

If the boarding area shape and room configuration allows, it is recommended that the building is bisected along its length or similar such that the boarding area spaces can be numbered in an even and odd fashion, within reason. A boarding area division should take place along its longest or main corridor. From the curb-side, facing the building, those spaces on the right side of the boarding area shall be even numbers and those on the left shall be odd. Within the terminal spaces, it is advised that if a corridor exists, space numbers shall be coordinated with even numbers on one side, odd on the other. In more complex building design, or where the availability of numbers is limited, the even-odd format may be abandoned if consecutive numbering results in a more logical scheme.