4 Highlight the destination bank (**C1** through **C4**) and press **MENU/OK**.
A confirmation dialog will be displayed.

COPY TO
CUSTOM 1
CUSTOM 2
CUSTOM 3
CUSTOM 4
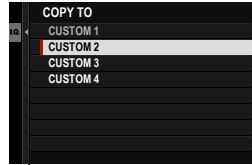
◇ Any changes to custom settings in the destination bank will be overwritten.

5 Highlight **OK** and press **MENU/OK**.
The selected settings will be copied to the destination bank, overwriting any existing settings.

COPY
CUSTOM 1
↓
CUSTOM 2
COPY OK?
OK
CANCEL