
## **HDMI Output**

Camera shooting and playback displays can be output to HDMI devices.

## Connecting to HDMI Devices

Connect the camera to TVs or other HDMI devices using a third-party HDMI cable.

- 1 Turn the camera off.
- **?** Connect the cable as shown below.

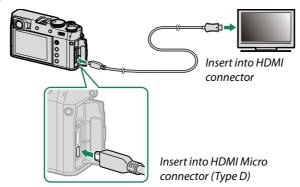

- 3 Configure the device for HDMI input as described in the documentation supplied with the device.
- 4 Turn the camera on. The contents of the camera display will be shown on the HDMI device. The camera display turns off in playback mode (1992) (1992).
- Making sure the connectors are fully inserted.
  - The USB cable cannot be used while an HDMI cable is connected.
  - Use an HDMI cable no more than 1.5 m (4.9 ft.) long.