
## Flash Settings

The following settings are available with the built-in flash.

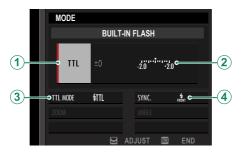

Setting	Description
1 Flash control mode	Choose from the following options:  • TTL:TTL mode. Adjust flash compensation (②) and choose a flash mode (③).  • M: The flash fires at the selected output (②) regardless of subject brightness or camera settings. Output is expressed in fractions of full power, from ⅓ to ⅙4. The desired results may not be achieved at low values if they exceed the limits of the flash control system; take a test shot and check the results.  • M€ (COMMANDER): Choose if the flash is being used to control remote synced flash units, for example as part of a studio flash system.  • ⑤OFF (OFF): The flash does not fire.
(2) Flash compensation/	Adjust flash level. The options available vary with the flash
output	control mode ((1)).