

ADFP 3.0 Connection Method

Modified Date: 2025/03/06

Modified by: Yueh-Feng Tsai (f12943014@ntu.edu.tw)


Important Note

- Please do not change the password
- Please do not occupy many resources on the workstation
- If you have any questions or problems, please contact f12943014@ntu.edu.tw
- Welcome to join the Discord to get the latest information and report bugs
  - https://discord.gg/ZPZqA2t6AF

1. Connect To The NTU VPN

a. First, you need to download the Ivanti Secure Access Client and set up the connection to NTU VPN. You can follow the NTU SSL VPN Service steps to set up the VPN connection.

b. Connect to the NTU VPN through your Ivanti Secure Access Client application

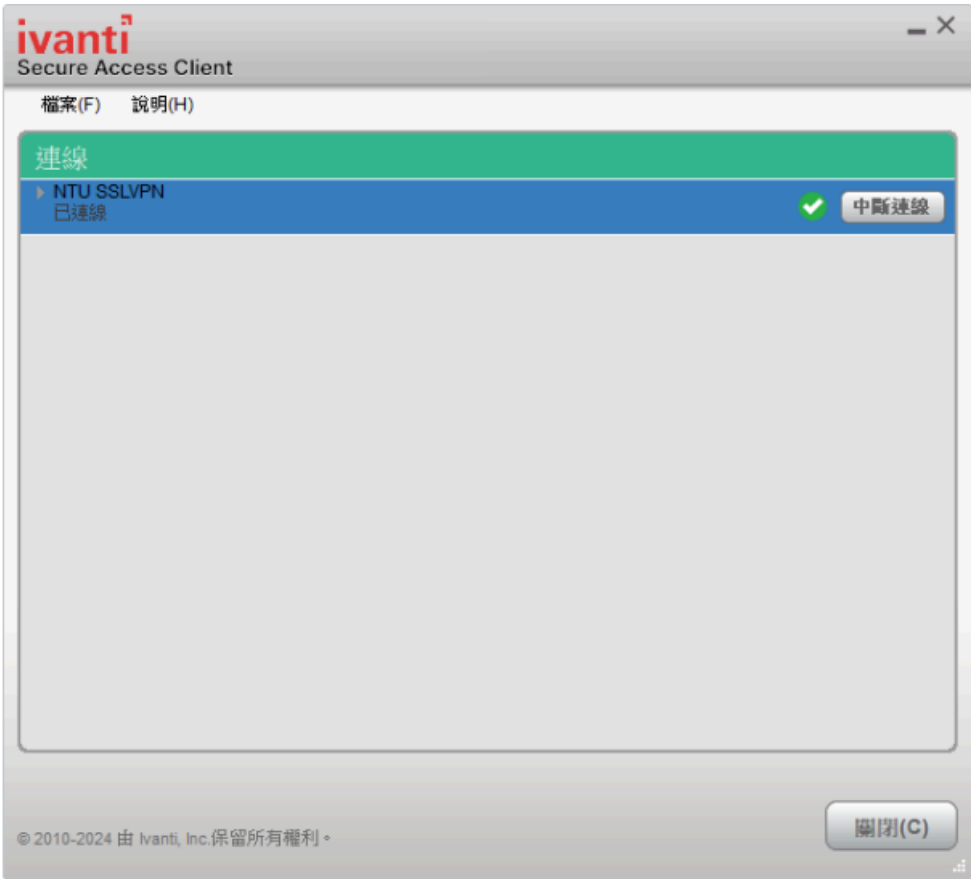

c. Please ensure you are connected to the NTU VPN at all times while using the workstation (uploading, computing, and submitting designs), even **if you are already on the NTU campus network.**


2. Connect to the ADFP Workstation

a. Open any browser and connect to 140.112.33.155

b. Fill in your account and your password (your password may start with a special character or number, like “=”)



1. A window like the one below will appear on your first login. Simply close it.

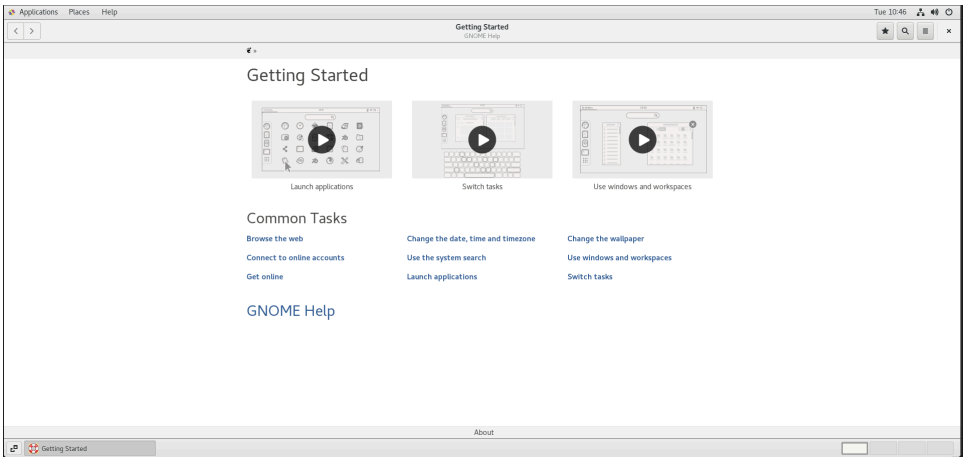


3. Upload Files to the ADFP Workstation


Method 1: Upload Through Control Panel

a. Open control panel by `CTRL+SHIFT+ALT`

b. Select `Devices`

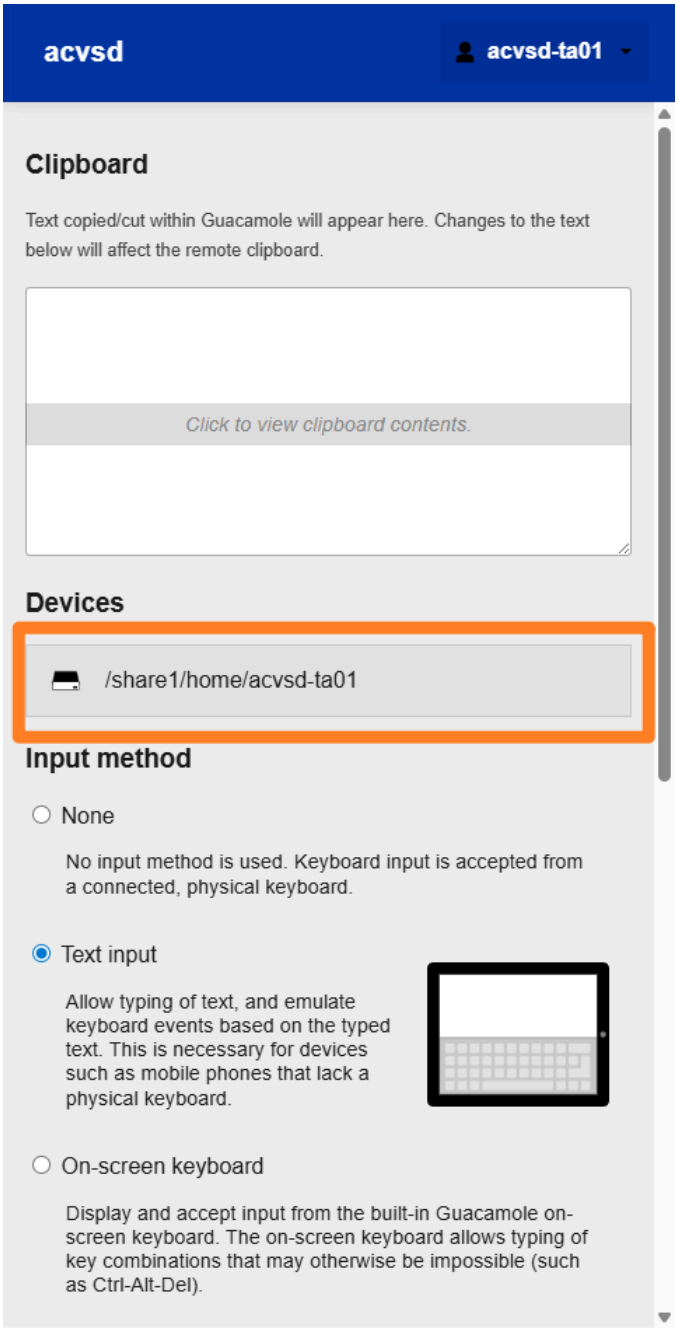

c. Select `Upload Files` and browse the files you want to upload. The files will be uploaded to your home directory `/share1/home/[username]`

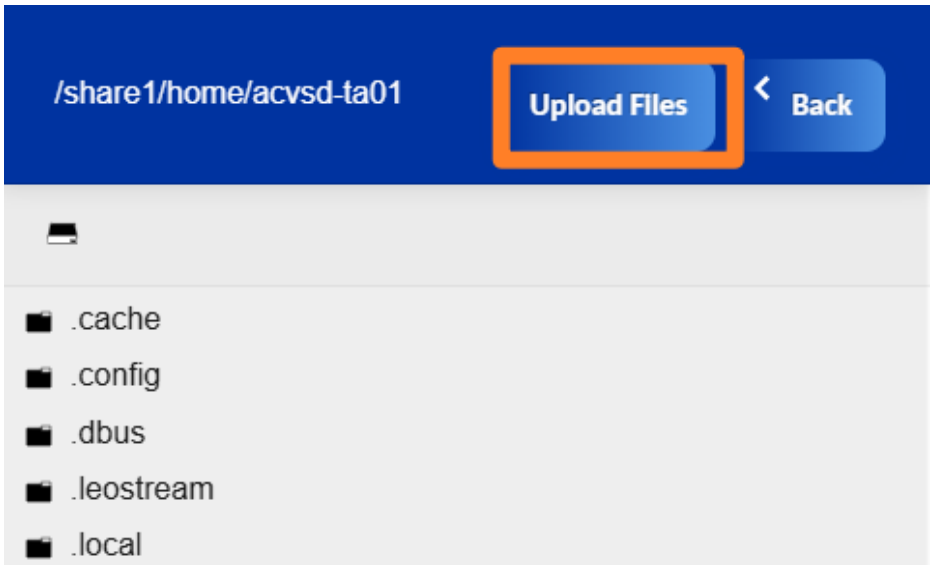

Method 2: Drag and Drop

Simply drag and drop your files onto the remote desktop, and the files will be uploaded to your home directory `/share1/home/[username]` (not the directory you currently have open).

---

4. Run the Cell-Based Design Flow

a. Open a new terminal

b. Source the CAD tools by typing `cb` in the terminal

```
> cb
```

c. Available Tool List

Tool Name	Version	Note
INNOVUS	20.15.000/ (default)	
ICADVM	18.10.130/ (default)	
PEGASUS	21.20.000/ (default)	
QUANTUS	21.11.000/ (default)	
SSV	21.12.000/ (default)	
SPECTRE	19.10.322/ (default)	

Tool Name	Version	Note
synthesis	2022.12-sp6/ (default)	
verdi	2022.06/ (default)	
vcs	2022.06 (default)	
lc	2022.12-sp6/ (default)	
primetime	2019.03-sp5-1/ (default)	
icc2	2022.12-sp6/ (default)	
icvalidator	2021.06-sp2/ (default)	
star-rcxt	2019.12-sp5-3/ (default)	
spyglass	2022.06/ (default)	

5. Run the Full Custom Design Flow

a. Open a new terminal

b. Source the CAD tools by typing `fc` in the terminal

```
> fc
```

c. Available Tool List

Tool Name	Version	Note
ICADVM	18.10.130/ (default)	
SPECTRE	19.10.322/ (default)	
hspice	2020.03-sp2-2/ (default)	
calibre	2019.2_26.18/ (default)	

6. Process Directory

a. The common directory of all technology processes

   `/share1/tech/[process name]`

b. The dedicated ADFP technology directory

   `/share1/tech/ADFP`