

7.2.3.10.d. replace central adjuster with button

Project: B103	Rev.: 04	Date: 2017-04-07 Final	Pages: 1 of 7	Saved: 07.04.2017	Sign:
Done by: HG	7.2.3.10.d Service instruction to replace iZi Modular central adjuster with button rev04 2017 04 07.docx				

Service to be done by Distributor / Importer


When do you need this manual:

1.	When the belt slips through the central adjuster when pulling the harness.	
2.	When the central adjuster cover is not worn out or damaged	

1. Execute safety check when you finish the service instruction.
2. Place seat on clean surface to prevent scratches.

7.2.3.10.d. replace central adjuster with button

Project: B103	Rev.: 04	Date: 2017-04-07 Final	Pages: 2 of 7	Saved: 07.04.2017	Sign:
Done by: HG	7.2.3.10.d Service instruction to replace iZi Modular central adjuster with button rev04 2017 04 07.docx				

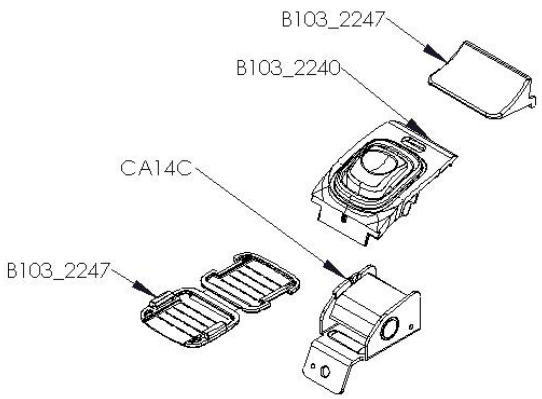Service to be done by ...		
What do you need:		
Service set (supplied by HTS BeSafe)	901508	
Tools	Hexagonal wrench M4	
	Scissor	
	Permanent marker	
Remarks about button		 Old version New version L2001237

7.2.3.10.d. replace central adjuster with button

Project: B103	Rev.: 04	Date: 2017-04-07 Final	Pages: 3 of 7	Saved: 07.04.2017	Sign:
Done by: HG	7.2.3.10.d Service instruction to replace iZi Modular central adjuster with button rev04 2017 04 07.docx				

1. Preparation

1.1. Cut the belt just above the strap



1.2. Partly remove fabric and foam




1.3. Remove M4 screw




1.4. Slide cover to the front



1.5. Rotate cover upwards.

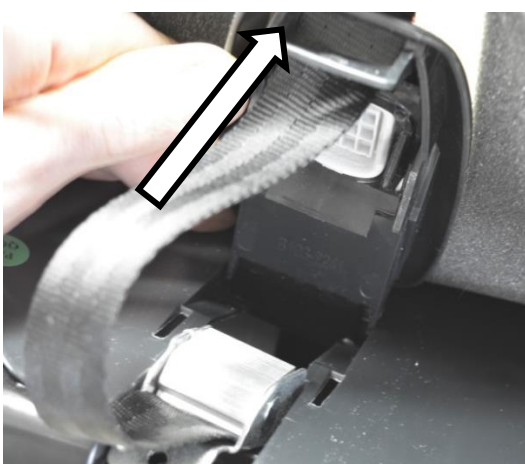

1.6. Mark used parts with marker in advance

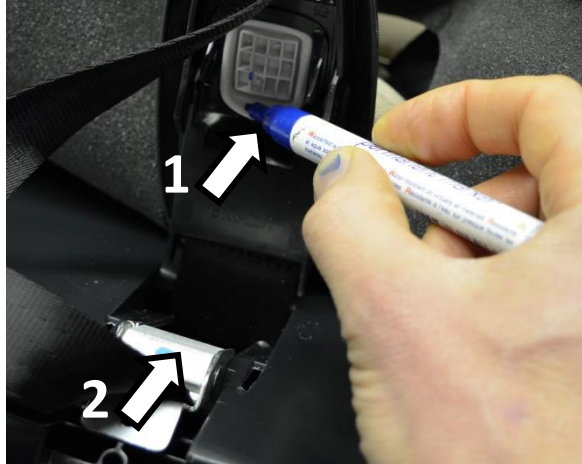

7.2.3.10.d. replace central adjuster with button

Project: B103	Rev.: 04	Date: 2017-04-07 Final	Pages: 4 of 7	Saved: 07.04.2017	Sign:
Done by: HG	7.2.3.10.d Service instruction to replace iZi Modular central adjuster with button rev04 2017 04 07.docx				

2. Replace central adjuster

2.1. Slide belt through hole



2.2. Slide belt through adjuster




2.3. Remove central adjuster.

Keep belt in hand!



2.4. Pull belt through new adjuster (press on lever).

Don't twist belt!

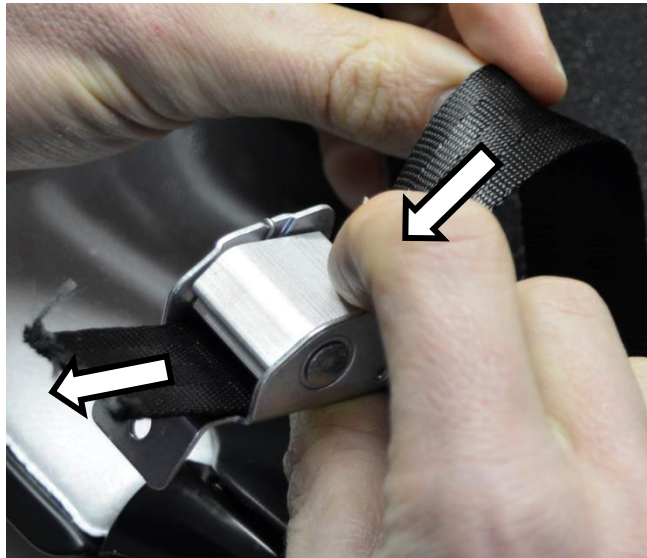

3. Replace button

3.1. Remove button



3.2. Place new button in good position



Check

correct position of the button



7.2.3.10.d. replace central adjuster with button

Project: B103	Rev.: 04	Date: 2017-04-07 Final	Pages: 5 of 7	Saved: 07.04.2017	Sign:
Done by: HG	7.2.3.10.d Service instruction to replace iZi Modular central adjuster with button rev04 2017 04 07.docx				

4. Fix parts

4.1. Place central adjuster in place



4.2. Pull belt through hole

Do not twist belt



4.3. Place cover: align cover with holes



4.4. Push cover in place till snap



4.5. Align all holes (push on button might help)



4.6. Fix bolt through both holes



7.2.3.10.d. replace central adjuster with button

BeSafe®

Project: B103	Rev.: 04	Date: 2017-04-07 Final	Pages: 6 of 7	Saved: 07.04.2017	Sign:
Done by: HG	7.2.3.10.d Service instruction to replace iZi Modular central adjuster with button rev04 2017 04 07.docx				

5. Safety check 1

5.1. Pull harness. No slip allowed.



5.2. Press button, must return in original position



5.3. Pull strap, harness can be tightened with little force




6. Replace fabric

6.1. Pull belt through fabric cover



6.2. Fit fabric around cover from rearside to frontside.

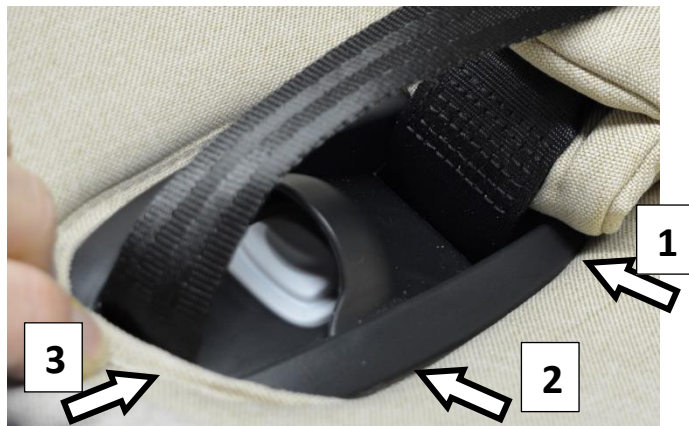

6.3. Push fabric in front gap



6.4. Push fabric in corner gaps (left and right)



6.5. Add webbing end clip to the belt

Align end to the edge



press to close




7.2.3.10.d. replace central adjuster with button

BeSafe®

Project: B103	Rev.: 04	Date: 2017-04-07 Final	Pages: 7 of 7	Saved: 07.04.2017	Sign:
Done by: HG	7.2.3.10.d Service instruction to replace iZi Modular central adjuster with button rev04 2017 04 07.docx				

7. Insert central adjuster clip

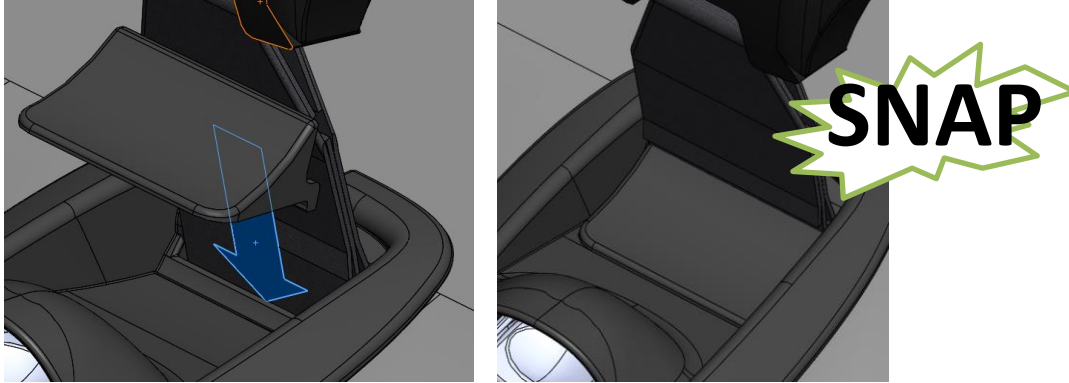

8. Final Safety check

8.1. Pull harness. No slip allowed



8.2. Press button, check if it returns in original state

