

BeSafe Repair instruction iZi Twist

Removal of headrest height adjustment stops



Project: iZi Twist	Rev.: 01	Date: 28/06/2019	Pages: 1 of 6	Saved: 14-06-2019	Sign:
Done by: HW	7.2.3.14b Repair manual iZi Twist headrest adjustment stops RevA 2019 06 14.docx				

7.2.3.14b Repair manual iZi Twist headrest adjustment stops

Service to be done by:	Service Center
------------------------	-----------------------

When do you need this manual:

When a consumer is complaining about the limited headrest height adjustment (bottom three positions not possible to use).
This manual explains how to remove the headrest height adjustment stops, that have been fitted to the first two batches of iZi Twist seats.



What do you need:

Service parts	No service parts needed.	
Tools	Torx T20 screwdriver	
Remarks	Headrest height adjustment stops only fitted to first two batches of iZi Twist seats! (SN: TE000001 – TE001004) Stops are not fitted to iZi Twist B seats.	

BeSafe Repair instruction iZi Twist

Removal of headrest height adjustment stops



Project: iZi Twist	Rev.: 01	Date: 28/06/2019	Pages: 2 of 6	Saved: 14-06-2019	Sign:
Done by: HW	7.2.3.14b Repair manual iZi Twist headrest adjustment stops RevA 2019 06 14.docx				

No.	Action	Picture
1.	Place the iZi Twist seat on a protective surface.	
2.	Release the harness buckle and remove the seat fabric cover. For more information about this step, see document '7.2.3.10.a Service instruction to replace iZi Modular fabric'.	
3.	Remove the lower EPS inserts.	


BeSafe Repair instruction iZi Twist

Removal of headrest height adjustment stops

BeSafe®

Project: iZi Twist	Rev.: 01	Date: 28/06/2019	Pages: 3 of 6	Saved: 14-06-2019	Sign:
Done by: HW	7.2.3.14b Repair manual iZi Twist headrest adjustment stops RevA 2019 06 14.docx				

- 4.** Remove the recline brackets.
Start with unscrewing the brackets (left and right).
Then, tilt the brackets and move them upward (left and right).

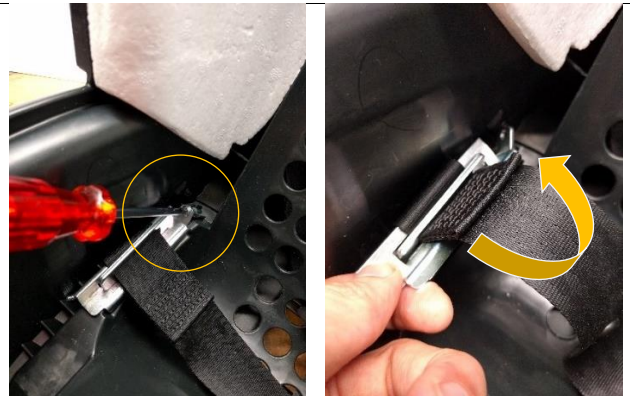

- 5.** Remove the belt from the bracket (left and right).
Then, remove the brackets from the belt (left and right).



- 6.** Remove the belt from the main bracket (left and right).



- 7.** Put the headrest in the highest position and unscrew the 2 screws that fasten the rear cover (left and right).



BeSafe Repair instruction iZi Twist

Removal of headrest height adjustment stops

BeSafe®

Project: iZi Twist	Rev.: 01	Date: 28/06/2019	Pages: 4 of 6	Saved: 14-06-2019	Sign:
Done by: HW	7.2.3.14b Repair manual iZi Twist headrest adjustment stops RevA 2019 06 14.docx				

8.	Gently lift the seat shell from the seat base, for about 5cm.	
9.	While holding the seat shell up, push the recline U-frame pins inside and out of the brackets that hold them (left and right) .	
10.	Rotate the seatshell upwards. You now have access to the headrest height adjustment stops. Remove both headrest height adjustment stops. Throw them away.	

BeSafe Repair instruction iZi Twist

Removal of headrest height adjustment stops



Project: iZi Twist	Rev.: 01	Date: 28/06/2019	Pages: 5 of 6	Saved: 14-06-2019	Sign:
Done by: HW	7.2.3.14b Repair manual iZi Twist headrest adjustment stops RevA 2019 06 14.docx				


- 11.** Rotate the seat shell back onto the seat base. Place it over the recline main brackets. Lower it to about 5cm before its end position.




- 12.** While holding the seat shell, move the pins on the recline U-frame back into their holes (left and right). Then, lower the seat shell until it rests on the seat base brackets.



- 13.** Reinstall the recline brackets. To start, guide the belt through the main bracket (left and right), as indicated in the picture.
- Note: Put the right side up, prevent a twisted belt!*

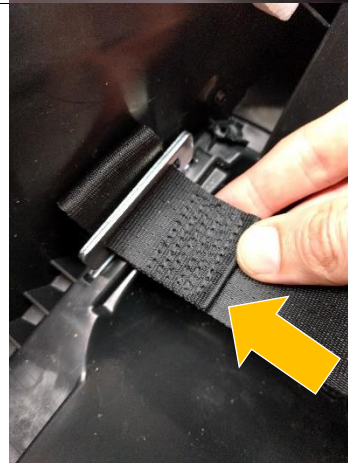

- 14.** Insert the brackets through the belt loops (left and right). Guide the belt through the opening in the bracket (left and right).

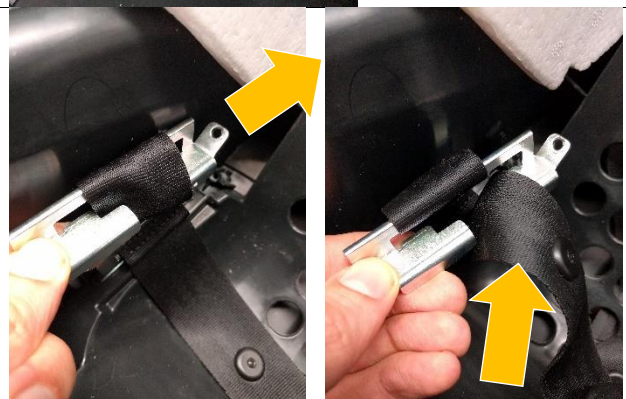


BeSafe Repair instruction iZi Twist

Removal of headrest height adjustment stops

BeSafe®

Project: iZi Twist	Rev.: 01	Date: 28/06/2019	Pages: 6 of 6	Saved: 14-06-2019	Sign:
Done by: HW	7.2.3.14b Repair manual iZi Twist headrest adjustment stops RevA 2019 06 14.docx				

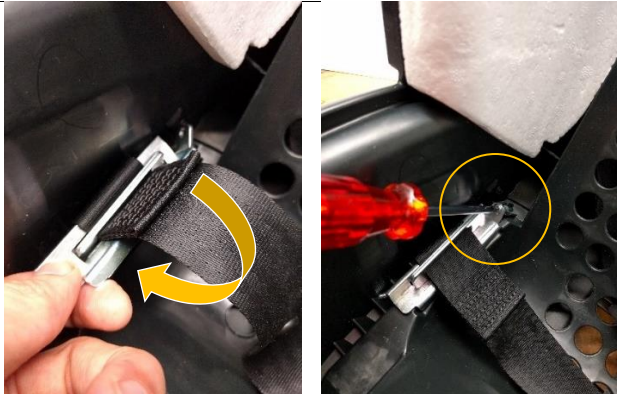15.	Lower the brackets over the seat bases' main brackets and tilt them inwards (left and right). Fasten the brackets with a screw, as indicated (left and right).	
16.	Install the EPS inserts.	
17.	Install the seat fabric cover. Fasten the buckle. For more information about this step, see document '<i>7.2.3.10.a Service instruction to replace iZi Modular fabric</i>'. <u>Test</u> if the seat's recline, headrest height adjustment and harness adjustment all work properly.	