Microprocessor and Assembly language [8086]

Presented by
Dr. Md. Abir Hossain
Dept. of ICT
MBSTU

Overview

First 16- bit processor released by INTEL in the year 1978

Originally HMOS, now manufactured using HMOS III technique

Approximately 29, 000 transistors, 40 pin DIP, 5V supply

Does not have internal clock; external asymmetric clock source with 33% duty cycle

20-bit address to access memory \Rightarrow can address up to $2^{20} = 1$ megabytes of memory space.


Addressable memory space is organized in to two banks of 512 kb each; Even (or lower) bank and Odd (or higher) bank. Address line A_0 is used to select even bank and control signal \overline{BHE} is used to access odd bank

Uses a separate 16 bit address for I/O mapped devices \Rightarrow can generate 2^{16} = 64 k addresses.

Operates in two modes: minimum mode and maximum mode, decided by the signal at MN and $\overline{\text{MX}}$ pins.

Generates control signals for internal and external operations of the microprocessor

Decodes instructions; sends information to the timing and control unit

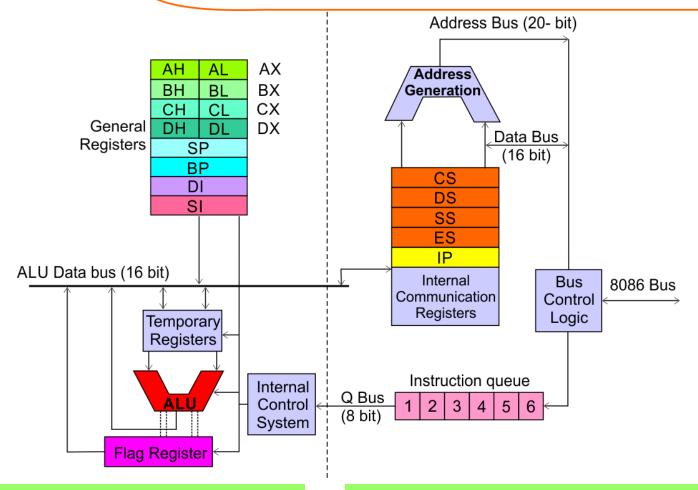


Execution Unit (EU)

EU executes instructions that have already been fetched by the BIU.

BIU and **EU** functions separately.


Bus Interface Unit (BIU)


BIU fetches instructions, reads data from memory and I/O ports, writes data to memory and I/O ports.

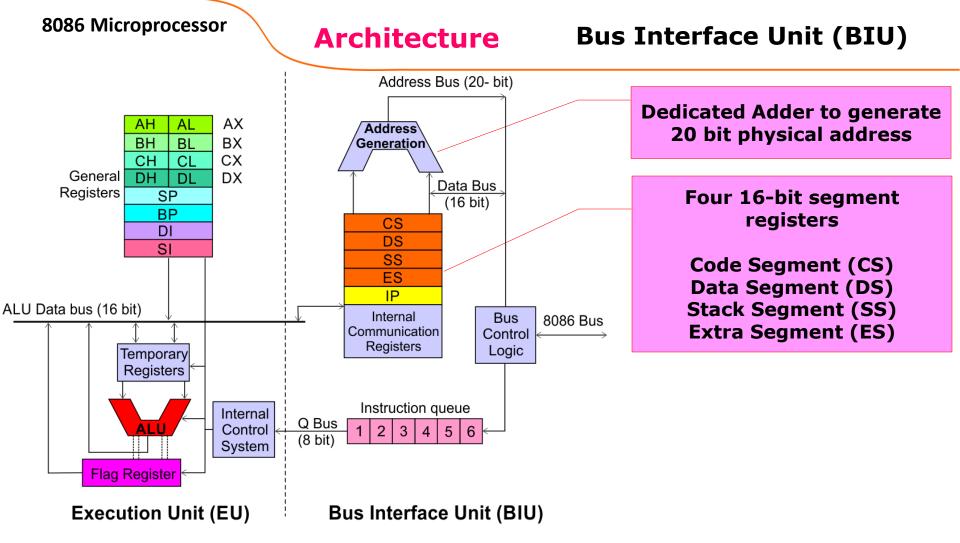

20 bit physical address= 4 bit left shift of segment address+ offset address Let, Segment address 348A h \rightarrow 4 bit left shift 348A0 h and offset 4214 h

Bus Interface Unit (BIU)

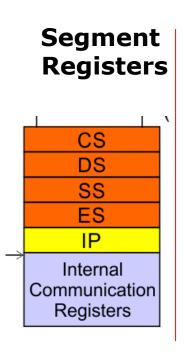


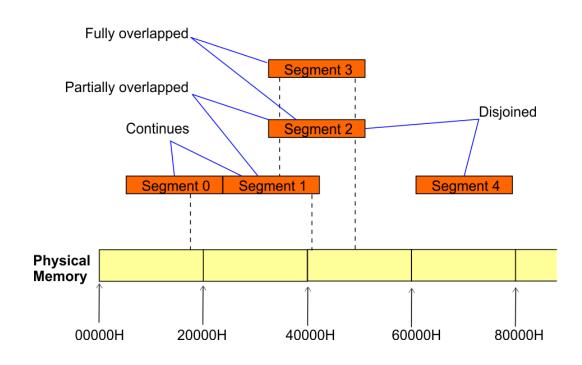

- 8086's 1-megabyte memory is divided into segments of up to 64K bytes each.
- The 8086 can directly address four segments (256 K bytes within the 1 M byte of memory) at a particular time.
- Programs obtain access to code and data in the segments by changing the segment register content to point to the desired segments.


Code Segment Register

- 16-bit
- CS contains the base or start of the current code segment; IP contains the distance or offset from this address to the next instruction byte to be fetched.
- BIU computes the 20-bit physical address by logically shifting the contents of CS 4-bits to the left and then adding the 16-bit contents of IP.
- That is, all instructions of a program are relative to the contents of the CS register and then offset is added provided by the IP.

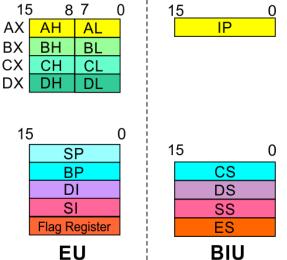


Data Segment Register

- 16-bit
- Points to the current data segment; operands(Data) for most instructions are fetched from this segment.
- The 16-bit contents of the Source Index (SI) or Destination Index (DI) or a 16-bit displacement are used as offset for computing the 20-bit physical address.

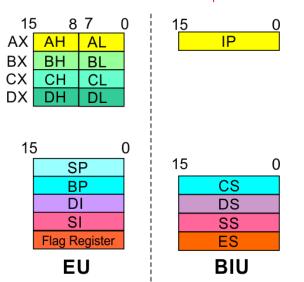


Stack Segment Register

- 16-bit
- Points to the current stack.
- The 20-bit physical stack address is calculated from the Stack Segment (SS) and the Stack Pointer (SP) for stack instructions such as PUSH and POP.
- In <u>based addressing mode</u>, the 20-bit physical stack address is calculated from the Stack segment (SS) and the Base Pointer (BP).

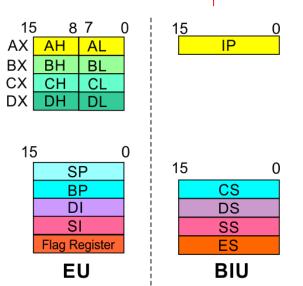


Extra Segment Register


- 16-bit
- Points to the extra segment in which data (in excess of 64K pointed to by the DS) is stored.
- String instructions use the ES and DI to determine the 20bit physical address for the destination.

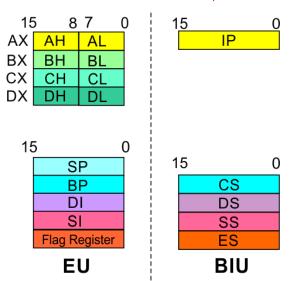

Instruction Pointer

- 16-bit
- Always points to the next instruction to be executed within the currently executing code segment.
- So, this register contains the 16-bit offset address pointing to the next instruction code within the 64Kb of the code segment area.
- Its content is automatically incremented as the execution of the next instruction takes place.

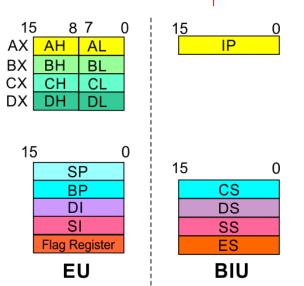

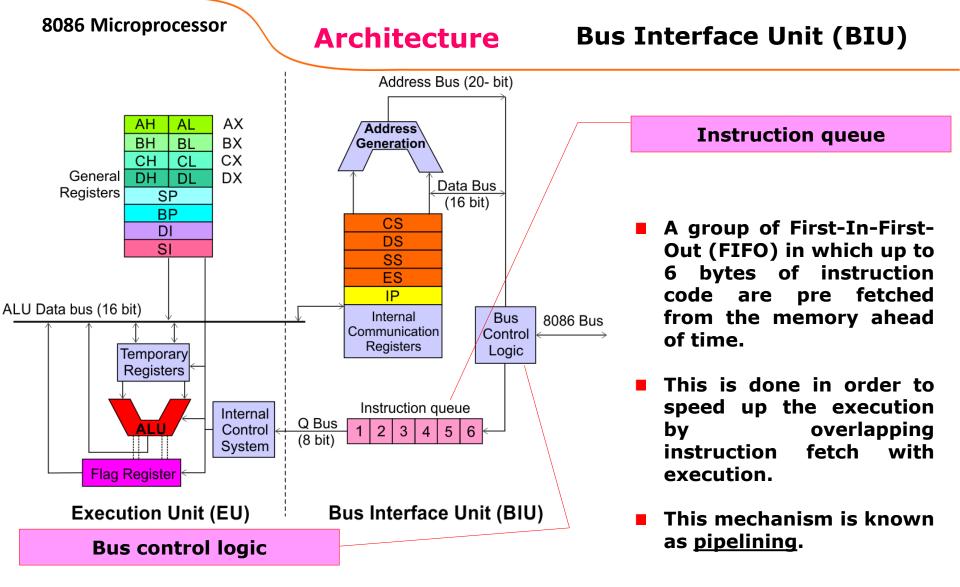

It generates all the bus control signals such as read and write signals for the memory and I/O. **EU** decodes and executes instructions.

A decoder in the EU control system translates instructions.


16-bit ALU for performing arithmetic and logic operation

Four general purpose registers(AX, BX, CX, DX);

Pointer registers (Stack Pointer, Base Pointer);

and

Index registers (Source Index, Destination Index) each of 16-bits

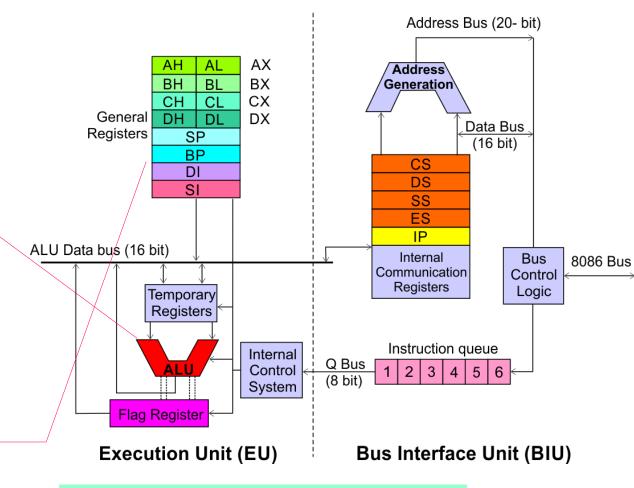


Some of the 16 bit registers can be used as two 8 bit registers as:

AX can be used as AH and AL BX can be used as BH and BL CX can be used as CH and CL DX can be used as DH and DL

Accumulator Register (AX)


- Consists of two 8-bit registers AL and AH, which can be combined together and used as a 16-bit register AX.
- AL in this case contains the low order byte of the word, and AH contains the high-order byte.
- The I/O instructions use the AX or AL for inputting / outputting 16 or 8 bit data to or from an I/O port.
- Multiplication and Division instructions also use the AX or AL.

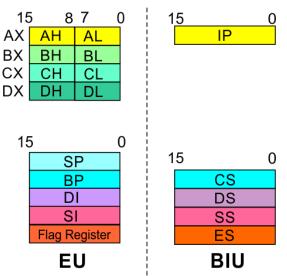

EU Registers

Base Register (BX)


- Consists of two 8-bit registers BL and BH, which can be combined together and used as a 16-bit register BX.
- BL in this case contains the low-order byte of the word, and BH contains the high-order byte.
- This is the only general purpose register whose contents can be used for addressing the 8086 memory.
- All memory references utilizing this register content for addressing and use DS as the default segment register.

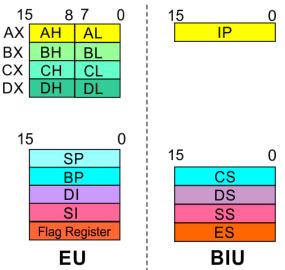

EU Registers

Counter Register (CX)

- Consists of two 8-bit registers CL and CH, which can be combined together and used as a 16-bit register CX.
- When combined, CL register contains the low order byte of the word, and CH contains the high-order byte.
- Instructions such as SHIFT, ROTATE and LOOP use the contents of CX as a counter.

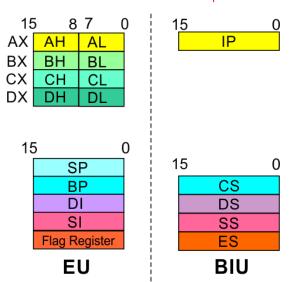


Example:

The instruction LOOP START automatically decrements CX by 1 without affecting flags and will check if [CX] = 0.

If it is zero, 8086 executes the next instruction; otherwise the 8086 branches to the label START and execute the instruction inside the LOOP.


Data Register (DX)

- Consists of two 8-bit registers DL and DH, which can be combined together and used as a 16-bit register DX.
- When combined, DL register contains the low order byte of the word, and DH contains the high-order byte.
- Used to hold the high 16-bit result (data) in 16 X 16 multiplication or the high 16-bit dividend (data) before a 32 ÷ 16 division and the 16-bit reminder after division.

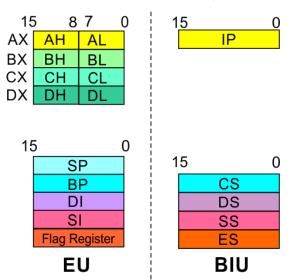

Stack Pointer (SP) and Base Pointer (BP)

- SP and BP are used to access data in the stack segment.
- SP is used as an offset from the current SS during execution of instructions that involve the stack segment in the external memory.
- SP contents are automatically updated (incremented/decremented) due to execution of a POP or PUSH instruction.
- BP contains an offset address in the current SS, which is used by instructions utilizing the based addressing mode.

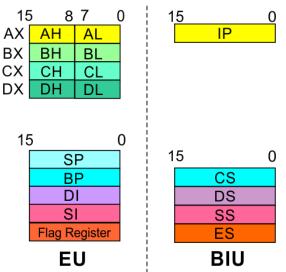


Source Index (SI) and Destination Index (DI)

- Used in indexed addressing.
- Instructions that process data strings use the SI and DI registers together with DS and ES respectively in order to distinguish between the source and destination addresses.

Internal Control system


A decoder used to control system of incoming instruction from instruction queue.

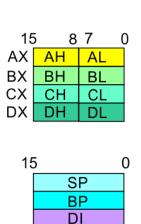

SI

Flag Register

EU



CS

DS

SS ES

BIU

15

■ Translate the instruction in the form of execution.

Temporary Register

- The temporary register holds the operands for the ALU and
- The individual bits of the FLAGS register which reflect the individual result of a computation.

Execution Unit (EU)

Flag Register

Auxiliary Carry Flag

This is set, if there is a carry from the low nibble(4-bit) into high nibble during addition, or a borrow from the high nibble to the low nibble during subtraction.

Carry Flag

This flag is set, when there is a carry out of MSB in case of addition or a borrow in case of subtraction.

Sign Flag

This flag is set, when the result of any computation is negative

Zero Flag


This flag is set, if the result of the computation or comparison performed by an instruction is zero

IF

This flag is set to 1, if the lower byte of the result contains even number of 1's; for odd number of 1's set to zero.

PF

Parity Flag



TF

SF

ZF

Over flow Flag

OF

DF

This flag is set, if an overflow occurs, i.e, if the result of a signed operation is large enough to accommodate in a destination register. The result is of more than 7-bits in size in case of 8-bit signed operation and more than 15-bits in size in case of 16-bit sign operations, then the overflow will be set.

Control bit flags

AF

Tarp Flag

CF

If this flag is set, the processor enters the single step execution mode by generating internal interrupts after the execution of each instruction


Direction Flag

This is used by string manipulation instructions. If this flag bit is '0', the string is processed beginning from the lowest address to the highest address, i.e., auto incrementing mode. Otherwise, the string is processed from the highest address towards the lowest address, i.e., auto decrementing mode.

Interrupt Flag

Causes the 8086 to recognize external mask interrupts; clearing IF disables these interrupts.



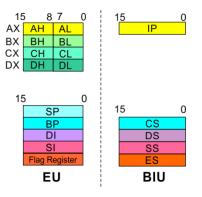

Sl.No.	Туре	Register width	Name of register
1	General purpose register	16 bit	AX, BX, CX, DX
		8 bit	AL, AH, BL, BH, CL, CH, DL, DH
2	Pointer register	16 bit	SP, BP
3	Index register	16 bit	SI, DI
4	Instruction Pointer	16 bit	IP
5	Segment register	16 bit	CS, DS, SS, ES
6	Flag (PSW)	16 bit	Flag register

15 14 13 12 11

10

DF

OF

9

IF

TF

SF

ZF

2

PF


CF

AF

Registers and Special Functions

Register	Name of the Register	Special Function
AX	16-bit Accumulator	Stores the 16-bit results of arithmetic and logic operations
AL	8-bit Accumulator	Stores the 8-bit results of arithmetic and logic operations
вх	Base register	Used to hold base value in base addressing mode to access memory data
СХ	Count Register	Used to hold the count value in SHIFT, ROTATE and LOOP instructions
DX	Data Register	Used to hold data for multiplication and division operations
SP	Stack Pointer	Used to hold the offset address of top stack memory
ВР	Base Pointer	Used to hold the base value in base addressing using SS register to access data from stack memory
SI	Source Index	Used to hold index value of source operand (data) for string instructions
DI	Data Index	Used to hold the index value of destination operand (data) for string operations

Pins and signals

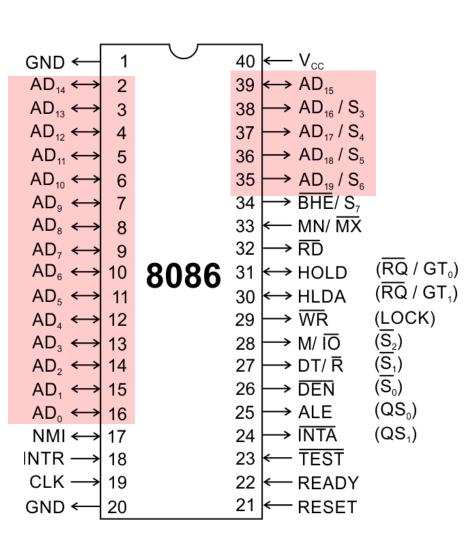

AD₀-AD₁₅ (Bidirectional)

Address/Data bus


Low order address bus; these are multiplexed with data.

When AD lines are used to transmit memory address the symbol A is used instead of AD, for example A_0 - A_{15} .

When data are transmitted over AD lines the symbol D is used in place of AD, for example D_0 - D_7 , D_8 - D_{15} or D_0 - D_{15} .

A_{16}/S_{3} , A_{17}/S_{4} , A_{18}/S_{5} , A_{19}/S_{6}

High order address bus. These are multiplexed with status signals

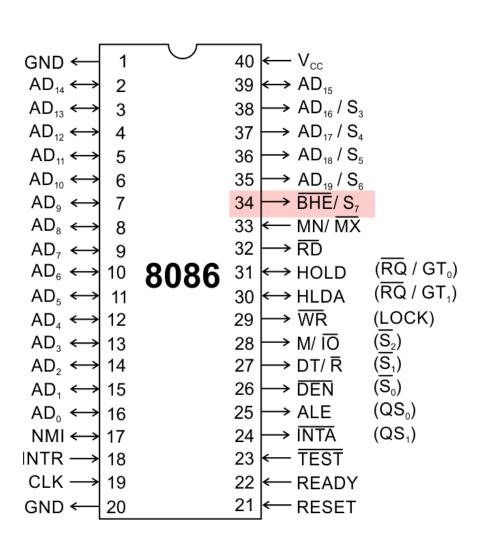

BHE (Active Low)/ S_7 (Output)

Bus High Enable/Status

It is used to enable data onto the most significant half of data bus, D_8 - D_{15} . 8-bit device connected to upper half of the data bus use BHE (Active Low) signal. It is multiplexed with status signal S_7 .

MN/ MX

MINIMUM / MAXIMUM


This pin signal indicates what mode the processor is to operate in.

RD (Read) (Active Low)

The signal is used for read operation.

It is an output signal.

It is active when low.

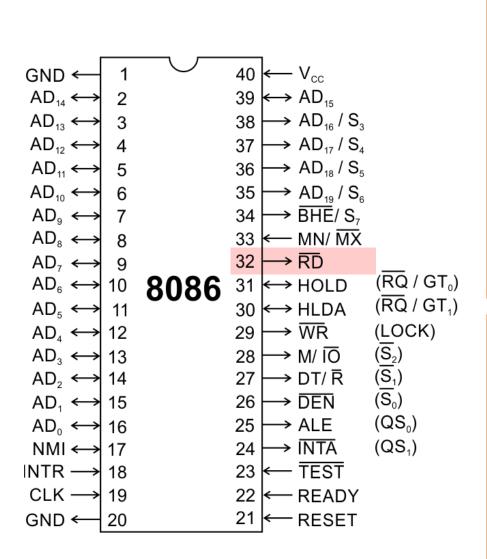

TEST

TEST input is tested by the **'WAIT'** instruction.

8086 will enter a wait state after execution of the WAIT instruction and will resume execution only when the TEST is made low by an active hardware.


This is used to synchronize an external activity to the processor internal operation.

READY

This is the acknowledgement from the slow device or memory that they have completed the data transfer.

The signal made available by the devices is synchronized by the 8284A clock generator to provide ready input to the 8086.

The signal is active high.

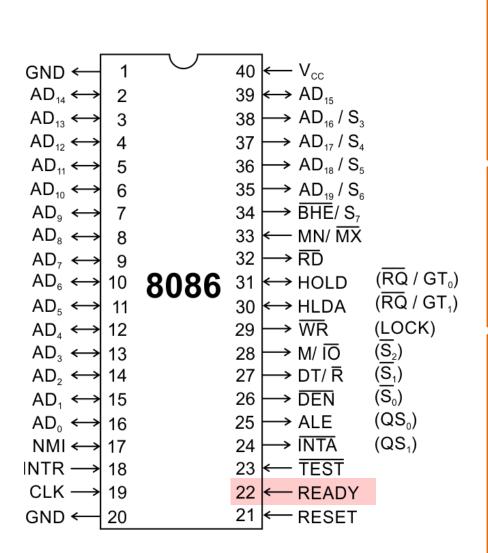

RESET (Input)

Causes the processor to immediately terminate its present activity.

The signal must be active HIGH for at least four clock cycles.


CLK

The clock input provides the basic timing for processor operation and bus control activity. Its an asymmetric square wave with 33% duty cycle.

INTR Interrupt Request

This is a triggered input. This is sampled during the last clock cycles of each instruction to determine the availability of the request. If any interrupt request is pending, the processor enters the interrupt acknowledge cycle.

This signal is active high and internally synchronized.

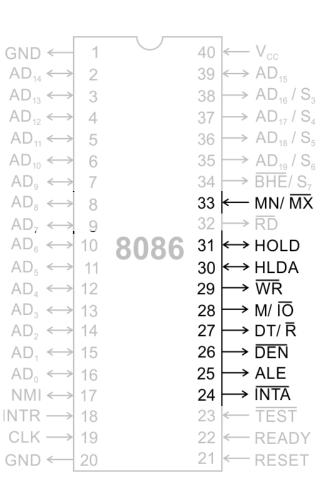


The 8086 microprocessor can work in two modes of operations: Minimum mode and Maximum mode.

In the <u>minimum mode</u> of operation the microprocessor <u>do not</u> associate with any co-processors and can not be used for multiprocessor systems.

In the <u>maximum mode</u> the 8086 <u>can work</u> in multi-processor or co-processor configuration.

Minimum or maximum mode operations are decided by the pin MN/ MX(Active low).

When this pin is <u>high</u> 8086 operates in <u>minimum mode</u> otherwise it operates in Maximum mode.



For minimum mode operation, the MN/ \overline{MX} is tied to VCC (logic high)

8086 itself generates all the bus control signals

GND ←	1	40 ← V _{cc}	0000	itself generates all the bus control signals
$AD_{14} \longleftrightarrow$	2	$39 \longleftrightarrow AD_{15}$		
$AD_{13} \longleftrightarrow$	3	$38 \longrightarrow AD_{16} / S_3$		
$AD_{12} \longleftrightarrow$	4	$37 \longrightarrow AD_{17} / S_4$	DT/\overline{R}	(Data Transmit/Receive) Output signal from the
$AD_{11} \longleftrightarrow$	5	$36 \longrightarrow AD_{18} / S_5$		processor to control the direction of data flow
$AD_{10} \longleftrightarrow$	6	$35 \longrightarrow AD_{19} / S_6$		through the data transceivers
$AD_9 \longleftrightarrow$	7	$34 \longrightarrow \overline{BHE}/S_7$	DEN	(Data Enable) Output signal from the processor
$AD_8 \longleftrightarrow$	8	33 ← MN/ MX	DEN	(Data Enable) Output signal from the processor used as out put enable for the transceivers
$AD_7 \longleftrightarrow$	9	$32 \longrightarrow \overline{RD}$		used as out put enable for the transceivers
$AD_6 \longleftrightarrow 1$	0 8086	31 ←→ HOLD		
$AD_5 \longleftrightarrow$		30 ←→ HLDA	ALE	(Address Latch Enable) Used to demultiplex the
$AD_4 \longleftrightarrow 1$	2	$29 \longrightarrow \overline{WR}$		address and data lines using external latches
$AD_3 \longleftrightarrow 1$	3	$28 \longrightarrow M/\overline{IO}$		
$AD_2 \longleftrightarrow 1$	4	$27 \longrightarrow DT/\bar{R}$	$M/\overline{10}$	Used to differentiate memory access and I/O
$AD_1 \longleftrightarrow 1$	5	26 → DEN		access. For memory reference instructions, it is
$AD_{\circ} \longleftrightarrow 1$	6	$25 \longrightarrow ALE$		high. For IN and OUT instructions, it is low.
$NMI \longleftrightarrow 1$	7	24 → ĪNTĀ	$\overline{\mathbf{W}}\mathbf{R}$	Write control signal; asserted low Whenever
$INTR \longrightarrow 1$	8	23 ← TEST	VVK	processor writes data to memory or I/O port
$CLK \longrightarrow 1$	9	22 ← READY		processor writes data to memory or 1/0 port
GND ← 2	0	21 ← RESET	INTA	(Interrupt Acknowledge) When the interrupt
				request is accepted by the processor, the output is low on this line.

Pins 24 -31

For minimum mode operation, the MN/ \overline{MX} is tied to VCC (logic high)

8086 itself generates all the bus control signals

HOLD


Input signal to the processor form the bus masters as a request to grant the control of the bus.

Usually used by the DMA controller to get the control of the bus.

HLDA


(Hold Acknowledge) Acknowledge signal by the processor to the bus master requesting the control of the bus through HOLD.

The acknowledge is asserted high, when the processor accepts HOLD.

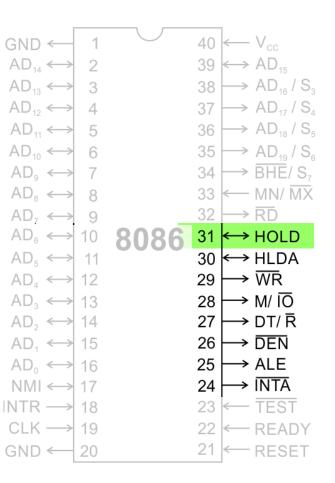

During maximum mode operation, the MN/ $\overline{\text{MX}}$ is grounded (logic low)

Pins 24 -31 are reassigned

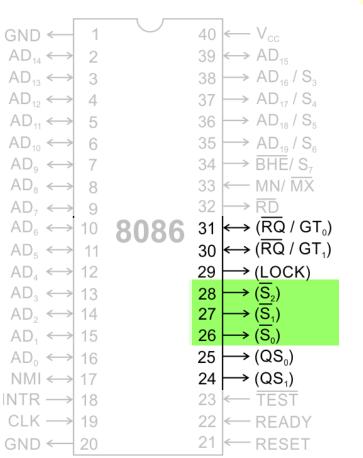


 $\overline{S_0}$, $\overline{S_1}$, $\overline{S_2}$

Status signals; used by the 8086 bus controller to generate bus timing and control signals. These are decoded as shown.

Status Signal		nal	Machine Cycle
$\overline{\mathbf{S}}_{2}$	$\overline{\mathbf{S}}_1$	\overline{S}_0	Machine Cycle
0	0	0,	Interrupt acknowledge
0	0	1	Read I/O port
0	1	0	Write I/O port
0	1	1	Halt
1	0	0	Code access
1	0,	1.	Read memory
1	1	0	Write memory
1	1	1	Passive/Inactive

During maximum mode operation, the MN/ $\overline{\text{MX}}$ is grounded (logic low)

Pins 24 -31 are reassigned

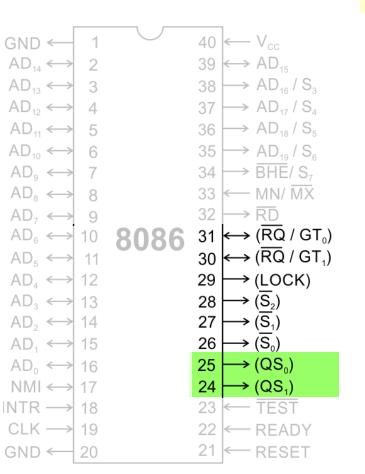

 $\overline{QS_0}$, $\overline{QS_1}$

(Queue Status) The processor provides the status of queue in these lines.


The queue status can be used by external device to track the internal status of the queue in 8086.

The output on QS₀ and QS₁ can be interpreted as shown in the table.

Queue status			
QS_1	QS_0	Queue operation	
0	0	No operation	
0	1	First byte of an opcode from queue	
1	0	Empty the queue	
1	1	Subsequent byte from queue	

During maximum mode operation, the MN/ $\overline{\text{MX}}$ is grounded (logic low)

Pins 24 -31 are reassigned

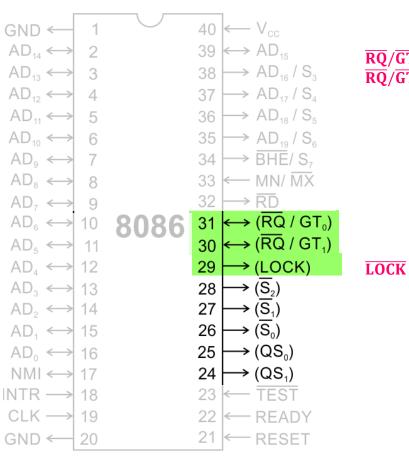

 $\overline{RQ}/\overline{GT_0}$ $\overline{RQ}/\overline{GT_1}$

(Bus Request/ Bus Grant) These requests are used by other local bus masters to force the processor to release the local bus at the end of the processor's current bus cycle.

These pins are bidirectional.

The request on $\overline{GT_0}$ will have higher priority than $\overline{GT_1}$

An output signal activated by the LOCK prefix instruction.

Remains active until the completion of the instruction prefixed by LOCK.

The 8086 output low on the \overline{LOCK} pin while executing an instruction prefixed by LOCK to prevent other bus masters from gaining control of the system bus.

ADDRESSING MODES & Instruction set

Introduction


```
:PROGRAM TO ADD TWO 16-BIT DATA (METHOD-1)
                      :Assembler directive
DATA SEGMENT
       ORG 1104H
                      :Assembler directive
                      :Assembler directive
       SUM DW 0
                      ·Assembler directive
       CARRY DB 0
                      :Assembler directive
DATA ENDS
CODE SEGMENT
                      :Assembler directive
       ASSUME CS: CODE ; Assembler directive
       ASSUME DS:DATA :Assembler directive
                      :Assembler directive
       ORG 1000H
       MOV AX, 205AH
                     ;Load the first data in AX register
       MOV BX, 40EDH
                     ;Load the second data in BX register
       MOV CL,00H
                      ;Clear the CL register for carry
       ADD AX, BX
                      ;Add the two data, sum will be in AX
                      ;Store the sum in memory location (1104H)
       MOV SUM.AX
       JNC AHEAD
                      ;Check the status of carry flag
                                                                      High Level
                      ; If carry flag is set, increment CL by one
       INC CL
AHEAD: MOV CARRY, CL
                      ;Store the carry in memory location (1106H)
       HI.T
                      :Assembler directive
CODE ENDS
                      ;Assembler directive
END
                                                       Machine Language
                                                       ■ Binary bits
```

Program

A set of instructions written to solve a problem.

Instruction

Directions which a microprocessor follows to execute a task or part of a task.

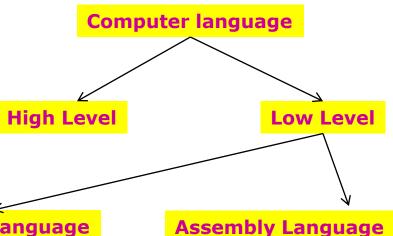

- **English Alphabets**
- 'Mnemonics'
- **Assembler** Mnemonics → Machine Language

ADDRESSING MODES

- Every instruction of a program has to operate on a data.
- The different ways in which a source operand is denoted in an instruction are known as addressing modes.

and the	_	A		
1	RPU	IICTAI	· Add	ressing
		13661	Auu	i Caaiiig

2. Immediate Addressing

Group I: Addressing modes for register and immediate data

Group II: Addressing modes for

memory data

I/O ports

- 3. Direct Addressing
- 4. Register Indirect Addressing
- 5. Based Addressing
- 6. Indexed Addressing
- 7. Based Index Addressing
- 8. String Addressing
- 9. Direct I/O port Addressing

10. Indirect I/O port Addressing

Group III : Addressing modes for

Crown IV - Dolotive Addressing mode

11. Relative Addressing Group IV: Relative Addressing mode

12. Implied Addressing Group V: Implied Addressing mode

- 1. Register Addressing
- 2. Immediate Addressing
- 3. Direct Addressing
- 4. Register Indirect Addressing
- 5. Based Addressing
- 6. Indexed Addressing
- 7. Based Index Addressing
- 8. String Addressing
- 9. Direct I/O port Addressing
- 10. Indirect I/O port Addressing
- 11. Relative Addressing
- 12. Implied Addressing


The instruction will specify the name of the register which holds the data to be operated by the instruction.

Example:


MOV CL, DH

The content of 8-bit register DH is moved to another 8-bit register CL

$$(CL) \leftarrow (DH)$$

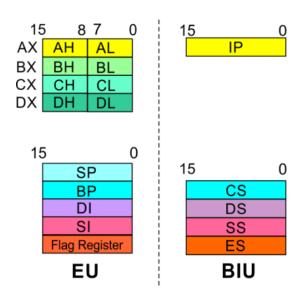

- 1. Register Addressing
- 2. Immediate Addressing
- 3. Direct Addressing
- 4. Register Indirect Addressing
- 5. Based Addressing
- 6. Indexed Addressing
- 7. Based Index Addressing
- 8. String Addressing
- 9. Direct I/O port Addressing
- 10. Indirect I/O port Addressing
- 11. Relative Addressing
- 12. Implied Addressing

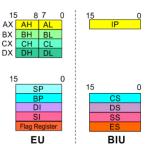

In immediate addressing mode, an 8-bit or 16-bit data is specified as part of the instruction

Example:

MOV DL, 08H

The 8-bit data (08_H) given in the instruction is moved to DL

$$(DL) \leftarrow 08_{H}$$


MOV AX, 0A9FH

The 16-bit data $(0A9F_H)$ given in the instruction is moved to AX register

$$(AX) \leftarrow 0A9F_H$$

Addressing Modes: Memory Access

- **20** Address lines \Rightarrow 8086 can address up to $2^{20} = 1M$ bytes of memory
- However, the largest register is only 16 bits
- Physical Address will have to be calculated Physical Address: Actual address of a byte in memory. i.e. the value which goes out onto the address bus.
- Memory Address represented in the form Seg: Offset (Eg - 89AB:F012)
- Each time the processor wants to access memory, it takes the contents of a segment register, shifts it one hexadecimal place to the left (same as multiplying by 16₁₀), then add the required offset to form the 20- bit address

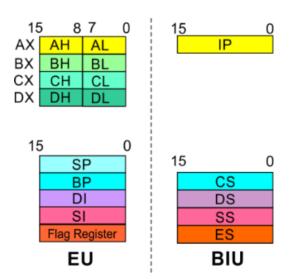

16 bytes of contiguous memory

```
89AB : F012 \rightarrow 89AB \rightarrow 89AB0 (Paragraph to byte \rightarrow 89AB x 10 = 89AB0)


F012 \rightarrow 0F012 (Offset is already in byte unit)

+ -------

98AC2 (The absolute address)
```

Group II : Addressing modes for memory data

- 1. Register Addressing
- 2. Immediate Addressing
- 3. Direct Addressing
- 4. Register Indirect Addressing
- 5. Based Addressing
- 6. Indexed Addressing
- 7. Based Index Addressing
- 8. String Addressing
- 9. Direct I/O port Addressing
- 10. Indirect I/O port Addressing
- 11. Relative Addressing
- 12. Implied Addressing

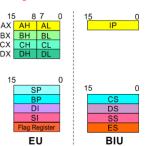

Here, the effective address of the memory location at which the data operand is stored is given in the instruction.

The effective address is just a 16-bit number written directly in the instruction.


Example:

MOV BX, [1354H] MOV BL, [0400H]

The square brackets around the 1354_H denotes the contents of the memory location. When executed, this instruction will copy the contents of the memory location into BX register.

This addressing mode is called direct because the displacement of the operand from the segment base is specified directly in the instruction.

- 1. Register Addressing
- 2. Immediate Addressing
- 3. Direct Addressing
- 4. Register Indirect Addressing
- 5. Based Addressing
- 6. Indexed Addressing
- 7. Based Index Addressing
- 8. String Addressing
- 9. Direct I/O port Addressing
- 10. Indirect I/O port Addressing
- 11. Relative Addressing
- 12. Implied Addressing

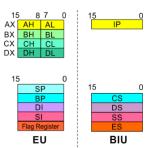

In Register indirect addressing, name of the register which holds the effective address (EA) will be specified in the instruction.

Registers used to hold EA are any of the following registers:

BX, BP, DI and SI.

Content of the DS register is used for base address calculation.

Example:

MOV CX, [BX]

Operations:

$$(CX) \leftarrow (MA)$$
 or,


$$(CL) \leftarrow (MA)$$

 $(CH) \leftarrow (MA + 1)$

Note: Register/ memory enclosed in brackets refer to content of register/ memory

Group II : Addressing modes for memory data

- 1. Register Addressing
- 2. Immediate Addressing
- 3. Direct Addressing
- 4. Register Indirect Addressing
- 5. Based Addressing
- 6. Indexed Addressing
- 7. Based Index Addressing
- 8. String Addressing
- 9. Direct I/O port Addressing
- 10. Indirect I/O port Addressing
- 11. Relative Addressing
- 12. Implied Addressing

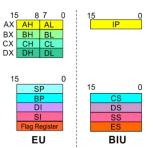

In Based Addressing, BX or BP is used to hold the base value for effective address and a signed 8-bit or unsigned 16-bit displacement will be specified in the instruction.

In case of 8-bit displacement, it is sign extended to 16-bit before adding to the base value.

When BX holds the base value of EA, 20-bit physical address is calculated from BX and DS.

When BP holds the base value of EA, BP and SS is used.

Example:


MOV AX, [BX + 08H]

Operations:

$$\begin{array}{l} 0008_{\text{H}} \leftarrow 08_{\text{H}} \; \text{(Sign extended)} \\ \text{EA} = (\text{BX}) + 0008_{\text{H}} \\ \text{BA} = (\text{DS}) \times 16_{10} \\ \text{MA} = \text{BA} + \text{EA} \\ \\ \text{(AX)} \leftarrow \text{(MA)} \quad \text{or,} \\ \\ \text{(AL)} \leftarrow \text{(MA)} \\ \text{(AH)} \leftarrow \text{(MA)} + 1) \end{array}$$

Group II : Addressing modes for memory data

- 1. Register Addressing
- 2. Immediate Addressing
- 3. Direct Addressing
- 4. Register Indirect Addressing
- 5. Based Addressing
- 6. Indexed Addressing
- 7. Based Index Addressing
- 8. String Addressing
- 9. Direct I/O port Addressing
- 10. Indirect I/O port Addressing
- 11. Relative Addressing
- 12. Implied Addressing

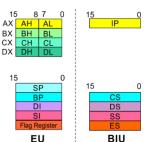

SI or DI register is used to hold an index value for memory data and a signed 8-bit or unsigned 16-bit displacement will be specified in the instruction.

Displacement is added to the index value in SI or DI register to obtain the EA.

In case of 8-bit displacement, it is sign extended to 16-bit before adding to the base value.

Example:

MOV CX, [SI + 0A2H]

Operations:

$$FFA2_H \leftarrow A2_H$$
 (Sign extended)

$$EA = (SI) + FFA2_{H}$$

$$BA = (DS) \times 16_{10}$$

 $MA = BA + EA$


$$(CX) \leftarrow (MA)$$
 or,

$$(CL) \leftarrow (MA)$$

$$(CH) \leftarrow (MA + 1)$$

Group II : Addressing modes for memory data

- 1. Register Addressing
- 2. Immediate Addressing
- 3. Direct Addressing
- 4. Register Indirect Addressing
- 5. Based Addressing
- 6. Indexed Addressing
- 7. Based Index Addressing
- 8. String Addressing
- 9. Direct I/O port Addressing
- 10. Indirect I/O port Addressing
- 11. Relative Addressing
- 12. Implied Addressing

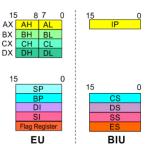

In Based Index Addressing, the effective address is computed from the sum of a base register (BX or BP), an index register (SI or DI) and a displacement.

Example:

$$MOV DX, [BX + SI + OAH]$$

Operations:

$$000A_H \leftarrow 0A_H$$
 (Sign extended)

$$EA = (BX) + (SI) + 000A_{H}$$

$$BA = (DS) \times 16_{10}$$

$$MA = BA + EA$$

$$(DX) \leftarrow (MA)$$
 or,

$$(DL) \leftarrow (MA)$$

$$(DH) \leftarrow (MA + 1)$$

Group II : Addressing modes for memory data

- 1. Register Addressing
- 2. Immediate Addressing
- 3. Direct Addressing
- 4. Register Indirect Addressing
- 5. Based Addressing
- 6. Indexed Addressing
- 7. Based Index Addressing
- 8. String Addressing
- 9. Direct I/O port Addressing
- 10. Indirect I/O port Addressing
- 11. Relative Addressing
- 12. Implied Addressing

Note: Effective address of the Extra segment register

Employed in string operations to operate on string data.

The effective address (EA) of source data is stored in SI register and the EA of destination is stored in DI register.

Segment register for calculating base address of source data is DS and that of the destination data is ES

Example: MOVS BYTE

Operations:

Calculation of source memory location:

$$EA = (SI)$$
 $BA = (DS) \times 16_{10}$ $MA = BA + EA$

Calculation of destination memory location:


$$EA_E = (DI)$$
 $BA_E = (ES) \times 16_{10}$ $MA_E = BA_E + EA_E$

$$(MAE) \leftarrow (MA)$$

If DF = 1, then (SI)
$$\leftarrow$$
 (SI) - 1 and (DI) = (DI) - 1
If DF = 0, then (SI) \leftarrow (SI) +1 and (DI) = (DI)₀+1

Group III : Addressing modes for I/O ports

- 1. Register Addressing
- 2. Immediate Addressing
- 3. Direct Addressing
- 4. Register Indirect Addressing
- 5. Based Addressing
- 6. Indexed Addressing
- 7. Based Index Addressing
- 8. String Addressing
- 9. Direct I/O port Addressing
- 10. Indirect I/O port Addressing
- 11. Relative Addressing
- 12. Implied Addressing

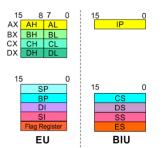

These addressing modes are used to access data from standard I/O mapped devices or ports.

In direct port addressing mode, an 8-bit port address is directly specified in the instruction.

Example: IN AL, [09H]

Operations: $PORT_{addr} = 09_{H}$ (AL) \leftarrow (PORT)

Content of port with address 09_H is moved to AL register


In indirect port addressing mode, the instruction will specify the name of the register which holds the port address. In 8086, the 16-bit port address is stored in the DX register.

Example: OUT [DX], AX

Operations: $PORT_{addr} = (DX)$ (PORT) \leftarrow (AX)

Content of AX is moved to port whose address is specified by DX register.

- 1. Register Addressing
- 2. Immediate Addressing
- 3. Direct Addressing
- 4. Register Indirect Addressing
- 5. Based Addressing
- 6. Indexed Addressing
- 7. Based Index Addressing
- 8. String Addressing
- 9. Direct I/O port Addressing
- 10. Indirect I/O port Addressing
- 11. Relative Addressing
- 12. Implied Addressing

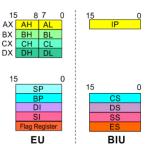

In this addressing mode, the effective address of a program instruction is specified relative to Instruction Pointer (IP) by an 8-bit signed displacement.

Example: JZ 0AH

Operations:

$$000A_H \leftarrow 0A_H$$
 (sign extend)

If
$$ZF = 1$$
, then

$$EA = (IP) + 000A_{H}$$


$$BA = (CS) \times 16_{10}$$

$$MA = BA + EA$$

If ZF = 1, then the program control jumps to new address calculated above.

If ZF = 0, then next instruction of the program is executed.

- 1. Register Addressing
- 2. Immediate Addressing
- 3. Direct Addressing
- 4. Register Indirect Addressing
- 5. Based Addressing
- 6. Indexed Addressing
- 7. Based Index Addressing
- 8. String Addressing
- 9. Direct I/O port Addressing
- 10. Indirect I/O port Addressing
- 11. Relative Addressing
- 12. Implied Addressing

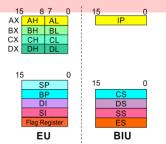

Instructions using this mode have no operands. The instruction itself will specify the data to be operated by the instruction.

Example: CLC

This clears the carry flag to zero.

INSTRUCTION SET

8086 supports 6 types of instructions.

- 1. Data Transfer Instructions
- 2. Arithmetic Instructions
- 3. Logical Instructions
- 4. String manipulation Instructions
- 5. Process Control Instructions
- 6. Control Transfer Instructions

1. Data Transfer Instructions

Instructions that are used to transfer data/ address in to registers, memory locations and I/O ports.

Generally involve two operands: Source operand and Destination operand of the same size.

Source: Register or a memory location or an immediate data **Destination**: Register or a memory location.

The size should be a either a byte or a word.

A 8-bit data can only be moved to 8-bit register/ memory and a 16-bit data can be moved to 16-bit register/ memory.

1. Data Transfer Instructions

Mnemonics: MOV, XCHG, PUSH, POP, IN, OUT ...

MOV reg2/ mem, reg1/ mem MOV reg2, reg1 MOV mem, reg1 MOV reg2, mem	<pre>(reg2) ← (reg1) (mem) ← (reg1) (reg2) ← (mem)</pre>
MOV reg/ mem, data MOV reg, data MOV mem, data	(reg) ← data (mem) ← data

XCHG reg2/ mem, reg1	
XCHG reg2, reg1	(reg2) ↔ (reg1)
XCHG mem, reg1	(mem) ↔ (reg1)

1. Data Transfer Instructions

Mnemonics: MOV, XCHG, PUSH, POP, IN, OUT ...

PUSH reg16/	mem
-------------	-----

PUSH reg16

$$(SP) \leftarrow (SP) - 2$$

 $MA_S = (SS) \times 16_{10} + SP$
 $(MA_S; MA_S + 1) \leftarrow (reg16)$

PUSH mem

$$(SP) \leftarrow (SP) - 2$$

 $MA_S = (SS) \times 16_{10} + SP$
 $(MA_S; MA_S + 1) \leftarrow (mem)$

POP reg16/ mem

POP reg16

MA_S = (SS) x
$$16_{10}$$
 + SP
(reg16) \leftarrow (MA_S; MA_S + 1)
(SP) \leftarrow (SP) + 2

POP mem

$$\begin{array}{l} \mathsf{MA}_{\,\mathsf{S}} \; = \; (\mathsf{SS}) \; \mathsf{x} \; \mathbf{16}_{10} \; + \; \mathsf{SP} \\ (\mathsf{mem}) \; \leftarrow \; (\mathsf{MA}_{\,\mathsf{S}} \; ; \; \mathsf{MA}_{\,\mathsf{S}} \; + \; \mathbf{1}) \\ (\mathsf{SP}) \; \leftarrow \; (\mathsf{SP}) \; + \; 2 \end{array}$$

1. Data Transfer Instructions

Mnemonics: MOV, XCHG, PUSH, POP, IN, OUT ...

IN A, [DX]		OUT [DX], A	
IN AL, [DX]	$PORT_{addr} = (DX)$ $(AL) \leftarrow (PORT)$	OUT [DX], AL	$PORT_{addr} = (DX)$ ($PORT$) \leftarrow (AL)
IN AX, [DX]	$PORT_{addr} = (DX)$ $(AX) \leftarrow (PORT)$	OUT [DX], AX	$PORT_{addr} = (DX)$ $(PORT) \leftarrow (AX)$
TN A. addr8		OUT addr8 A	
IN A, addr8		OUT addr8, A	
IN A, addr8 IN AL, addr8	(AL) ← (addr8)	OUT addr8, A OUT addr8, AL	(addr8) ← (AL)

2. Arithmetic Instructions

ADD reg2/ mem, reg1/mem ADD reg2, reg1 ADD reg2, mem ADD mem, reg1	<pre>(reg2) ← (reg1) + (reg2) (reg2) ← (reg2) + (mem) (mem) ← (mem)+(reg1)</pre>
ADD reg/mem, data ADD reg, data ADD mem, data	<pre>(reg) ← (reg)+ data (mem) ← (mem)+data</pre>
ADD A, data ADD AL, data8 ADD AX, data16	(AL) ← (AL) + data8 (AX) ← (AX) +data16

2. Arithmetic Instructions

ADC reg2/ mem, reg1/mem ADC reg2, reg1 ADC reg2, mem ADC mem, reg1	<pre>(reg2) ← (reg1) + (reg2)+CF (reg2) ← (reg2) + (mem)+CF (mem) ← (mem)+(reg1)+CF</pre>
ADC reg/mem, data ADC reg, data ADC mem, data	<pre>(reg) ← (reg)+ data+CF (mem) ← (mem)+data+CF</pre>
ADDC A, data ADD AL, data8 ADD AX, data16	(AL) ← (AL) + data8+CF (AX) ← (AX) +data16+CF

2. Arithmetic Instructions

SUB reg2/ mem, reg1/mem SUB reg2, reg1 SUB reg2, mem SUB mem, reg1	<pre>(reg2) ← (reg2) - (reg1) (reg2) ← (reg2) - (mem) (mem) ← (mem) - (reg1)</pre>
SUB reg/mem, data SUB reg, data SUB mem, data	(reg) ← (reg) - data (mem) ← (mem) - data
SUB AL, data8 SUB AX, data16	(AL) ← (AL) - data8 (AX) ← (AX) - data16

2. Arithmetic Instructions

SBB reg2/ mem, reg1/mem	
SBB reg2, reg1	(reg2) ← (reg1) - (reg2) - CF
SBB reg2, mem	(reg2) ← (reg2) - (mem)- CF
SBB mem, reg1	(mem) ← (mem) - (reg1) -CF
SBB reg/mem, data	
SBB reg, data	(reg) ← (reg) - data - CF
SBB mem, data	(mem) ← (mem) - data - CF
SBB A, data	
SBB AL, data8	(AL) ← (AL) - data8 - CF
SBB AX, data16	(AX) ← (AX) - data16 - CF

2. Arithmetic Instructions

INC reg/ mem	
INC reg8	(reg8) ← (reg8) + 1
INC reg16	(reg16) ← (reg16) + 1
INC mem	(mem) ← (mem) + 1
DEC word many	
DEC reg/ mem	
DEC reg8	(reg8) ← (reg8) - 1
DEC reg16	(reg16) ← (reg16) - 1
DEC mem	(mem) ← (mem) - 1

2. Arithmetic Instructions

MUL reg/ mem	
MUL reg	For byte: $(AX) \leftarrow (AL) \times (reg8)$ For word: $(DX)(AX) \leftarrow (AX) \times (reg16)$
MUL mem	For byte: $(AX) \leftarrow (AL) \times (mem8)$ For word: $(DX)(AX) \leftarrow (AX) \times (mem16)$
IMUL reg/ mem	
IMUL reg	For byte: $(AX) \leftarrow (AL) \times (reg8)$ For word: $(DX)(AX) \leftarrow (AX) \times (reg16)$
IMUL mem	For byte: $(AX) \leftarrow (AX) \times (mem8)$ For word: $(DX)(AX) \leftarrow (AX) \times (mem16)$

2. Arithmetic Instructions

DIV reg/ mem	
DIV reg	For 16-bit :- 8-bit : (AL) ← (AX) :- (reg8) Quotient (AH) ← (AX) MOD(reg8) Remainder For 32-bit :- 16-bit : (AX) ← (DX)(AX) :- (reg16) Quotient (DX) ← (DX)(AX) MOD(reg16) Remainder
DIV mem	For 16-bit :- 8-bit : (AL) ← (AX) :- (mem8) Quotient (AH) ← (AX) MOD(mem8) Remainder For 32-bit :- 16-bit : (AX) ← (DX)(AX) :- (mem16) Quotient (DX) ← (DX)(AX) MOD(mem16) Remainder

2. Arithmetic Instructions

IDIV reg/ mem	
IDIV reg	For 16-bit :- 8-bit : $(AL) \leftarrow (AX)$:- (reg8) Quotient $(AH) \leftarrow (AX)$ MOD(reg8) Remainder For 32-bit :- 16-bit : $(AX) \leftarrow (DX)(AX)$:- (reg16) Quotient $(DX) \leftarrow (DX)(AX)$ MOD(reg16) Remainder
IDIV mem	For 16-bit :- 8-bit : (AL) ← (AX) :- (mem8) Quotient (AH) ← (AX) MOD(mem8) Remainder For 32-bit :- 16-bit : (AX) ← (DX)(AX) :- (mem16) Quotient (DX) ← (DX)(AX) MOD(mem16) Remainder

2. Arithmetic Instructions

CMP reg2/mem, reg1/ mem	
CMP reg2, reg1	Modify flags ← (reg2) - (reg1)
	If (reg2) > (reg1) then CF=0, ZF=0, SF=0 If (reg2) < (reg1) then CF=1, ZF=0, SF=1 If (reg2) = (reg1) then CF=0, ZF=1, SF=0
CMP reg2, mem	Modify flags ← (reg2) - (mem)
	If (reg2) > (mem) then CF=0, ZF=0, SF=0 If (reg2) < (mem) then CF=1, ZF=0, SF=1 If (reg2) = (mem) then CF=0, ZF=1, SF=0
CMP mem, reg1	Modify flags ← (mem) - (reg1)
	If (mem) > (reg1) then CF=0, ZF=0, SF=0 If (mem) < (reg1) then CF=1, ZF=0, SF=1 If (mem) = (reg1) then CF=0, ZF=1, SF=0

2. Arithmetic Instructions

CMP reg/mem, data	
CMP reg, data	Modify flags ← (reg) - (data)
	If (reg) > data then CF=0, ZF=0, SF=0 If (reg) < data then CF=1, ZF=0, SF=1 If (reg) = data then CF=0, ZF=1, SF=0
CMP mem, data	Modify flags ← (mem) - (mem) If (mem) > data then CF=0, ZF=0, SF=0 If (mem) < data then CF=1, ZF=0, SF=1 If (mem) = data then CF=0, ZF=1, SF=0

2. Arithmetic Instructions

CMP A, data	
CMP AL, data8	Modify flags ← (AL) - data8
	If (AL) > data8 then CF=0, ZF=0, SF=0 If (AL) < data8 then CF=1, ZF=0, SF=1 If (AL) = data8 then CF=0, ZF=1, SF=0
CMP AX, data16	Modify flags ← (AX) - data16 If (AX) > data16

3. Logical Instructions

Mnemonics: AND, OR, XOR, TEST, SHR, SHL, RCR, RCL ...

AND A, data

AND AL, data8

 $(AL) \leftarrow (AL) \& data8$

AND AX, data16

 $(AX) \leftarrow (AX) \& data16$

AND reg/mem, data

AND reg, data

 $(reg) \leftarrow (reg) \& data$

AND mem, data

 $(mem) \leftarrow (mem) \& data$

3. Logical Instructions

Mnemonics: AND, OR, XOR, TEST, SHR, SHL, RCR, RCL ...

OR reg2/mem, reg1/mem OR reg2, reg1	$(reg2) \leftarrow (reg2) \mid (reg1)$
OR reg2, mem	$(reg2) \leftarrow (reg2) \mid (mem)$
OR mcm, reg1	(mem) ← (mem) (reg1)

OR reg/mem, data	
OR reg, data	$(reg) \leftarrow (reg) \mid data$
OR mem, data	(mem) ← (mem) data

OR A, data	
OR AL, data8	$(AL) \leftarrow (AL) \mid data8$
OR AX, data16	$(AX) \leftarrow (AX) \mid data16$
`	· ·

3. Logical Instructions

Mnemonics: AND, OR, XOR, TEST, SHR, SHL, RCR, RCL ...

XOR reg2/mem, reg1/mem

XOR reg2, reg1

XOR reg2, mem

XOR mem, reg1

 $(reg2) \leftarrow (reg2) \land (reg1)$

 $(reg2) \leftarrow (reg2) \land (mem)$

 $(mem) \leftarrow (mem) \land (reg1)$

XOR reg/mem, data

XOR reg, data

XOR mem, data

 $(reg) \leftarrow (reg) \wedge data$

 $(mem) \leftarrow (mem) \wedge data$

XOR A, data

XOR AL, data8

XOR AX, data16

 $(AL) \leftarrow (AL) \land data8$

 $(AX) \leftarrow (AX) \wedge data16$

3. Logical Instructions

Mnemonics: AND, OR, XOR, TEST, SHR, SHL, RCR, RCL ...

TEST reg2/mem,	reg1/	mem
----------------	-------	-----

TEST reg2, reg1

TEST reg2, mem

TEST mem, reg1

Modify flags \leftarrow (reg2) & (reg1)

Modify flags \leftarrow (reg2) & (mem)

Modify flags \leftarrow (mem) & (reg1)

TEST reg/mem, data

TEST reg, data

TEST mem, data

Modify flags \leftarrow (reg) & data

Modify flags \leftarrow (mem) & data

TEST A, data

TEST AL, data8

TEST AX, data16

Modify flags \leftarrow (AL) & data8

Modify flags \leftarrow (AX) & data16

3. Logical Instructions

Mnemonics: AND, OR, XOR, TEST, SHR, SHL, RCR, RCL ...


SHR reg/mem

SHR reg

- i) SHR reg, 1
- ii) SHR reg, CL

SHR mem

- i) SHR mem, 1
- ii) SHR mem, CL

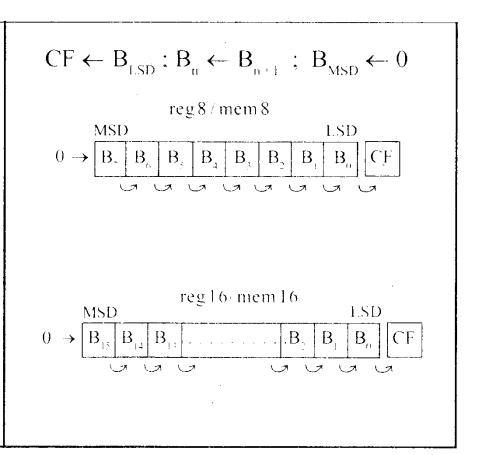

3. Logical Instructions


Mnemonics: AND, OR, XOR, TEST, SHR, SHL, RCR, RCL ...

SHL reg/mem or SAL reg/mem
SHL reg or SAL reg

- i) SHL reg, 1 or SAL reg, 1
- ii) SHL reg, CL or SAL reg, CL

SHL mem or SAL mem

- i) SHL mem, 1 or SAL mem, 1
- ii) SHL mem, CL or SAL mem, CL

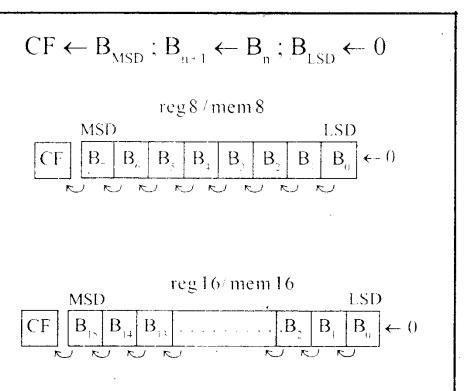

3. Logical Instructions

Mnemonics: AND, OR, XOR, TEST, SHR, SHL, RCR, RCL ...


RCR reg/mem

RCR reg

- i) RCR reg, 1
- ii) RCR reg, CL

RCR mem

- i) RCR mem, 1
- ii) RCR mem, CL

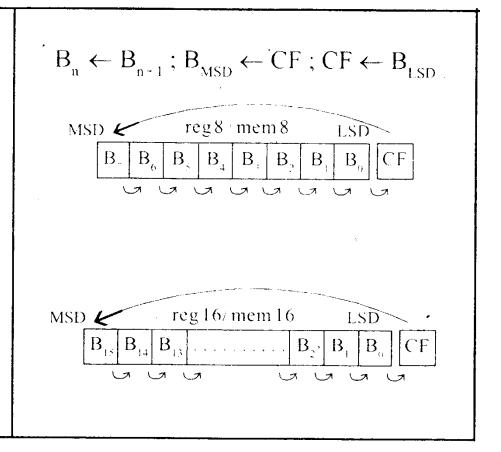

3. Logical Instructions

Mnemonics: AND, OR, XOR, TEST, SHR, SHL, RCR, RCL ...


ROL reg/mem


ROL reg


- i) ROL reg. 1
- ii) ROL reg, CL

ROL mem

- i) ROL mem, 1
- ii) ROL mem, CL







4. String Manipulation Instructions

String: Sequence of bytes or words
8086 instruction set includes instruction for string movement, comparison, scan, load and store.
REP instruction prefix: used to repeat execution of string instructions
String instructions end with S or SB or SW. S represents string, SB string byte and SW string word.
Offset or effective address of the source operand is stored in SI register and that of the destination operand is stored in DI register.
Depending on the status of DF, SI and DI registers are automatically updated.
DF = $0 \Rightarrow$ SI and DI are incremented by 1 for byte and 2 for word.
DF = $1 \Rightarrow$ SI and DI are decremented by 1 for byte and 2 for word.

4. String Manipulation Instructions

Mnemonics: REP, MOVS, CMPS, SCAS, LODS, STOS

REP

REPZ/ REPE(Repeat if zero/ repeat if equal)

(Repeat CMPS or SCAS until ZF = 0)

REPNZ/ REPNE (Repeat if not zero/ repeat if not equal)

(Repeat CMPS or SCAS until ZF = 1)

While $CX \neq 0$ and ZF = 1, repeat execution of string instruction and $(CX) \leftarrow (CX) - 1$

While $CX \neq 0$ and ZF = 0, repeat execution of string instruction and $(CX) \leftarrow (CX) - 1$

4. String Manipulation Instructions

Mnemonics: REP, MOVS, CMPS, SCAS, LODS, STOS

MOVS	
MOVSB	$MA = (DS) \times 16_{10} + (SI)$ $MA_E = (ES) \times 16_{10} + (DI)$
	$(MA_E) \leftarrow (MA)$
	If DF = 0, then (DI) \leftarrow (DI) + 1; (SI) \leftarrow (SI) + 1 If DF = 1, then (DI) \leftarrow (DI) - 1; (SI) \leftarrow (SI) - 1
MOVSW	$MA = (DS) \times 16_{10} + (SI)$ $MA_E = (ES) \times 16_{10} + (DI)$
	$(MA_E; MA_E + 1) \leftarrow (MA; MA + 1)$
	If DF = 0, then (DI) \leftarrow (DI) + 2; (SI) \leftarrow (SI) + 2 If DF = 1, then (DI) \leftarrow (DI) - 2; (SI) \leftarrow (SI) - 2

4. String Manipulation Instructions

Mnemonics: REP, MOVS, CMPS, SCAS, LODS, STOS

Compare two string byte or string word

CMPS	
CMPSB	$MA = (DS) \times 16_{10} + (SI)$ $MA_E = (ES) \times 16_{10} + (DI)$ $Modify flags \leftarrow (MA) - (MA_E)$
CMPSW	If $(MA) > (MA_E)$, then $CF = 0$; $ZF = 0$; $SF = 0$ If $(MA) < (MA_E)$, then $CF = 1$; $ZF = 0$; $SF = 1$ If $(MA) = (MA_E)$, then $CF = 0$; $ZF = 1$; $SF = 0$
	For byte operation If DF = 0, then (DI) \leftarrow (DI) + 1; (SI) \leftarrow (SI) + 1 If DF = 1, then (DI) \leftarrow (DI) - 1; (SI) \leftarrow (SI) - 1 For word operation If DF = 0, then (DI) \leftarrow (DI) + 2; (SI) \leftarrow (SI) + 2 If DF = 1, then (DI) \leftarrow (DI) - 2; (SI) \leftarrow (SI) - 2
	If DF = 0, then (DI) \leftarrow (DI) + 2; (SI) \leftarrow (SI) + 2

4. String Manipulation Instructions

Mnemonics: REP, MOVS, CMPS, SCAS, LODS, STOS

Scan (compare) a string byte or word with accumulator

SCAS	
SCASB	$MA_E = (ES) \times 16_{10} + (DI)$ Modify flags \leftarrow (AL) - (MA _E)
	If $(AL) > (MA_E)$, then $CF = 0$; $ZF = 0$; $SF = 0$ If $(AL) < (MA_E)$, then $CF = 1$; $ZF = 0$; $SF = 1$
	If $(AL) = (MA_E)$, then $CF = 0$; $ZF = 1$; $SF = 0$
	If DF = 0, then (DI) \leftarrow (DI) + 1
	If DF = 1, then (DI) ← (DI) – 1
SCASW	$MA_E = (ES) \times 16_{10} + (DI)$ Modify flags \leftarrow (AL) - (MA _E)
	If $(AX) > (MA_E; MA_E + 1)$, then $CF = 0$; $ZF = 0$; $SF = 0$
	If $(AX) < (MA_E; MA_E + 1)$, then $CF = 1$; $ZF = 0$; $SF = 1$
	If $(AX) = (MA_E; MA_E + 1)$, then $CF = 0$; $ZF = 1$; $SF = 0$
	If DF = 0, then (DI) ← (DI) + 2
	If DF = 1, then (DI) \leftarrow (DI) -2

4. String Manipulation Instructions

Mnemonics: REP, MOVS, CMPS, SCAS, LODS, STOS

Load string byte in to AL or string word in to AX

LODS	
LODSB	$MA = (DS) \times 16_{10} + (SI)$ (AL) \leftarrow (MA)
	If DF = 0, then (SI) \leftarrow (SI) + 1 If DF = 1, then (SI) \leftarrow (SI) - 1
LODSW	$MA = (DS) \times 16_{10} + (SI)$ (AX) \leftarrow (MA; MA + 1)
	If DF = 0, then (SI) \leftarrow (SI) + 2 If DF = 1, then (SI) \leftarrow (SI) - 2

4. String Manipulation Instructions

Mnemonics: REP, MOVS, CMPS, SCAS, LODS, STOS

Store byte from AL or word from AX in to string

STOS	
STOSB	$MA_{E} = (ES) \times 16_{10} + (DI)$ $(MA_{E}) \leftarrow (AL)$
	If DF = 0, then (DI) \leftarrow (DI) + 1 If DF = 1, then (DI) \leftarrow (DI) - 1
STOSW	$MA_E = (ES) \times 16_{10} + (DI)$ $(MA_E; MA_E + 1) \leftarrow (AX)$
	If DF = 0, then (DI) ← (DI) + 2 If DF = 1, then (DI) ← (DI) - 2

5. Processor Control Instructions

Mnemonics	Explanation
STC	Set CF ← 1
CLC	Clear CF ← 0
СМС	Complement carry CF ← CF′
STD	Set direction flag DF \leftarrow 1
CLD	Clear direction flag $DF \leftarrow 0$
STI	Set interrupt enable flag IF \leftarrow 1
CLI	Clear interrupt enable flag IF \leftarrow 0
NOP	No operation
HLT	Halt after interrupt is set
WAIT	Wait for TEST pin active
ESC opcode mem/ reg	Used to pass instruction to a coprocessor which shares the address and data bus with the 8086
LOCK	Lock bus during next instruction 8

6. Control Transfer Instructions

- **■** Transfer the control to a specific destination or target instruction
- Do not affect flags

■ 8086 Unconditional transfers

Mnemonics	Explanation
CALL reg/ mem/ disp16	Call subroutine
RET	Return from subroutine
JMP reg/ mem/ disp8/ disp16	Unconditional jump

6. Control Transfer Instructions

□ 8086 signed conditional branch instructions

□ 8086 unsigned conditional branch instructions

- Checks flags
- If conditions are true, the program control is transferred to the new memory location in the same segment by modifying the content of IP

6. Control Transfer Instructions

□ 8086 signed conditional branch instructions

Ш	8086 unsignea conditional	
	branch instructions	

Name	Alternate name
JE disp8 Jump if equal	JZ disp8 Jump if result is 0
JNE disp8 Jump if not equal	JNZ disp8 Jump if not zero
JG disp8 Jump if greater	JNLE disp8 Jump if not less or equal
JGE disp8 Jump if greater than or equal	JNL disp8 Jump if not less
JL disp8 Jump if less than	JNGE disp8 Jump if not greater than or equal
JLE disp8 Jump if less than or equal	JNG disp8 Jump if not greater

Name	Alternate name
JE disp8 Jump if equal	JZ disp8 Jump if result is 0
JNE disp8 Jump if not equal	JNZ disp8 Jump if not zero
JA disp8 Jump if above	JNBE disp8 Jump if not below or equal
JAE disp8 Jump if above or equal	JNB disp8 Jump if not below
JB disp8 Jump if below	JNAE disp8 Jump if not above or equal
JBE disp8 Jump if below or equal	JNA disp8 Jump if not above

6. Control Transfer Instructions

■ 8086 conditional branch instructions affecting individual flags

Mnemonics	Explanation
JC disp8	Jump if CF = 1
JNC disp8	Jump if CF = 0
JP disp8	Jump if PF = 1
JNP disp8	Jump if PF = 0
JO disp8	Jump if OF = 1
JNO disp8	Jump if OF = 0
JS disp8	Jump if SF = 1
JNS disp8	Jump if SF = 0
JZ disp8	Jump if result is zero, i.e, Z = 1
JNZ disp8	Jump if result is not zero, i.e, Z = 1

- Instructions to the Assembler regarding the program being executed.
- Control the generation of machine codes and organization of the program; but no machine codes are generated for assembler directives.
- Also called 'pseudo instructions'
- Used to:
 - > specify the start and end of a program
 - > attach value to variables
 - > allocate storage locations to input/ output data
 - > define start and end of segments, procedures, macros etc...

DB

DW

SEGMENT ENDS

ASSUME

ORG END EVEN EQU

PROC FAR NEAR ENDP

SHORT

MACRO ENDM

- Define Byte
- Define a byte type (8-bit) variable
- Reserves specific amount of memory locations to each variable
- Range: 00_H − FF_H for unsigned value;
 00_H − 7F_H for positive value and
 80_H − FF_H for negative value
- General form : variable DB value/ values

Example:

LIST DB 7FH, 42H, 35H

Three consecutive memory locations are reserved for the variable LIST and each data specified in the instruction are stored as initial value in the reserved memory location

DB

DW

SEGMENT ENDS

ASSUME

ORG END EVEN EQU

PROC FAR NEAR

ENDP

SHORT

MACRO ENDM

- Define Word
- Define a word type (16-bit) variable
- Reserves two consecutive memory locations to each variable
- Range : 0000_H FFFF_H for unsigned value; 0000_H - 7FFF_H for positive value and 8000_H - FFFF_H for negative value
- General form: variable DW value/ values

Example:

ALIST DW 6512H, 0F251H, 0CDE2H

Six consecutive memory locations are reserved for the variable ALIST and each 16-bit data specified in the instruction is stored in two consecutive memory location.

DB

DW

SEGMENT ENDS

ASSUME


ORG END EVEN EQU

PROC FAR NEAR ENDP

SHORT

MACRO ENDM

- SEGMENT: Used to indicate the beginning of a code/ data/ stack segment
- ENDS: Used to indicate the end of a code/ data/ stack segment
- General form:

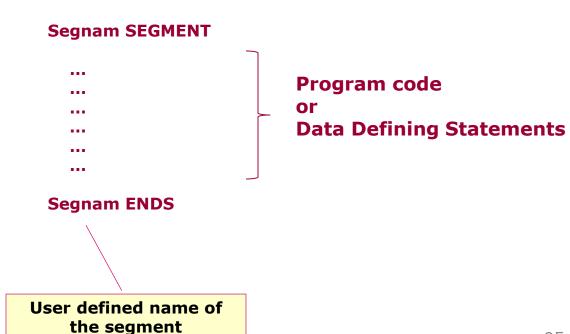

DB

DW

SEGMENT ENDS

ASSUME

ORG END EVEN EQU

PROC FAR NEAR

ENDP

SHORT

MACRO ENDM ■ Informs the assembler the name of the program/ data segment that should be used for a specific segment.

General form:

ASSUME segreg : segnam, .. , segreg : segnam

Segment Register

User defined name of the segment

Example:

ASSUME CS: ACODE, DS:ADATA

Tells the compiler that the instructions of the program are stored in the segment ACODE and data are stored in the segment ADATA

DB

DW

SEGMENT ENDS

ASSUME

ORG END EVEN EQU

PROC FAR NEAR ENDP

SHORT

MACRO ENDM

- ORG (Origin) is used to assign the starting address (Effective address) for a program/ data segment
- END is used to terminate a program; statements after END will be ignored
- EVEN: Informs the assembler to store program/ data segment starting from an even address
- **EQU** (Equate) is used to attach a value to a variable

Examples:

000 400011

ORG 1000H	Informs the assembler that the statements following ORG 1000H should be stored in memory starting with effective address $1000_{\rm H}$
LOOP EQU 10FEH	Value of variable LOOP is 10FE _H
_SDATA SEGMENT ORG 1200H A DB 4CH EVEN B DW 1052H _SDATA ENDS	In this data segment, effective address of memory location assigned to A will be $1200_{\rm H}$ and that of B will be $1202_{\rm H}$ and $1203_{\rm H}$.

DB

DW

SEGMENT ENDS

ASSUME

ORG END EVEN EQU

PROC ENDP FAR NEAR

SHORT

MACRO ENDM

- PROC Indicates the beginning of a procedure
- **ENDP End of procedure**
- FAR Intersegment call
- NEAR Intrasegment call

the procedure

General form

procname PROC[NEAR/ FAR]

...

Program statements of the procedure

Last statement of the procedure

procname ENDP

User defined name of

DB

DW

SEGMENT

ENDS

ASSUME

ORG END EVEN EQU

PROC ENDP FAR **NEAR**

SHORT

MACRO ENDM

Examples:

ADD64 PROC NEAR

RET ADD64 ENDP

CONVERT PROC FAR

RET CONVERT ENDP The subroutine/ procedure named ADD64 is declared as NEAR and so the assembler will code the CALL and RET instructions involved in this procedure as near call and return

The subroutine/ procedure named CONVERT is declared as FAR and so the assembler will code the CALL and RET instructions involved in this procedure as far call and return

DB

DW

SEGMENT ENDS

ASSUME

ORG END EVEN EQU

PROC ENDP FAR NEAR

SHORT

MACRO ENDM Reserves one memory location for 8-bit signed displacement in jump instructions

Example:

JMP SHORT AHEAD

The directive will reserve one memory location for 8-bit displacement named AHEAD

DB

DW

SEGMENT ENDS

ASSUME


ORG END EVEN EQU

PROC ENDP FAR NEAR

SHORT

MACRO ENDM

- **MACRO** Indicate the beginning of a macro
- **ENDM End of a macro**
- General form:

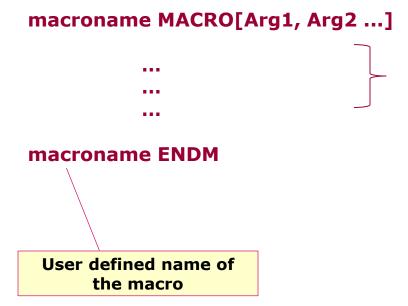

Program statements in the macro

8086 and 8088 comparison

Memory mapping	I/O mapping
20 bit address are provided for I/O devices	8-bit or 16-bit addresses are provided for I/O devices
The I/O ports or peripherals can be treated like memory locations and so all instructions related to memory can be used for data transmission between I/O device and processor	Only IN and OUT instructions can be used for data transfer between I/O device and processor
Data can be moved from any register to ports and vice versa	Data transfer takes place only between accumulator and ports
When memory mapping is used for I/O devices, full memory address space cannot be used for	Full memory space can be used for addressing memory.
addressing memory.	⇒ Suitable for systems which require large memory capacity
⇒ Useful only for small systems where memory requirement is less	require large memory capacity
For accessing the memory mapped devices, the processor executes memory read or write cycle.	For accessing the I/O mapped devices, the processor executes I/O read or write cycle.
\Rightarrow M / $\overline{10}$ is asserted high	\Rightarrow M / $\overline{10}$ is asserted low