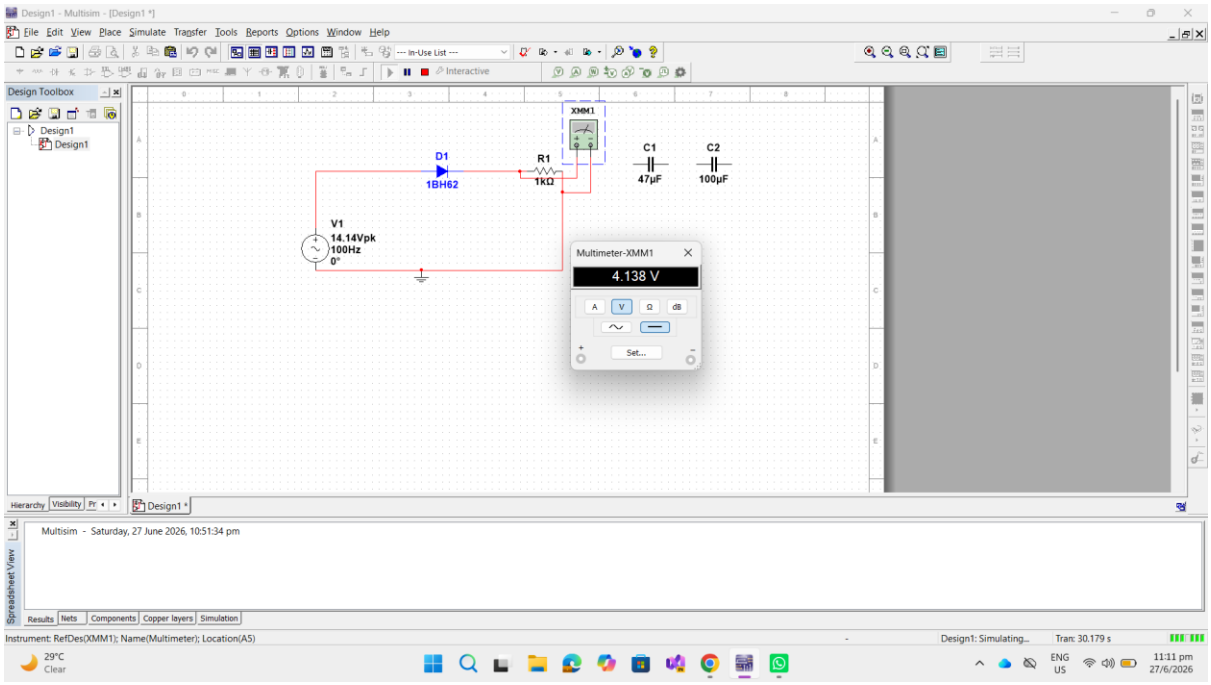
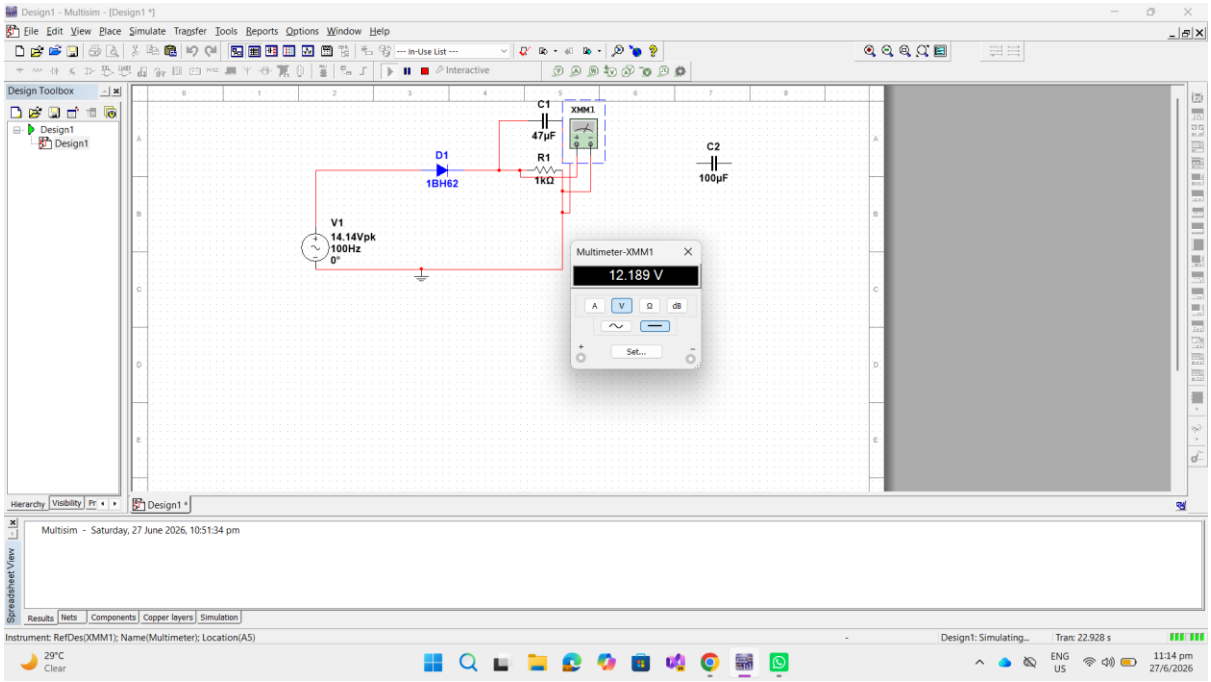
Table 1


Design1 - Multisim - [Design1 *]
File Edit View Place Simulate Transfer Tools Reports Options Window Help
Design Toolbox
Design1
Design1
XMM1
D1
1BH62
R1
1kΩ
C1
47µF
C2
100µF
V1
14.14Vpk
100Hz
0°
Multimeter-XMM1
4.138 V
A
V
Ω
dB
Set...
Design1 *
Multisim - Saturday, 27 June 2026, 10:51:34 pm
Spreadsheet View
Results
Nets
Components
Copper layers
Simulation
Instrument: RefDes(XMM1); Name(Multimeter); Location(A5)
Design1: Simulating...
Tran: 30.179 s
29°C
Clear
ENG
US
11:11 pm
27/6/2026


Design1 - Multisim - [Design1 *]
File Edit View Place Simulate Transfer Tools Reports Options Window Help
Design Toolbox
Design1
Design1
XMM1
C1
47µF
D1
1BH62
R1
1kΩ
C2
100µF
V1
14.14Vpk
100Hz
0°
Multimeter-XMM1
12.189 V
A
V
Ω
dB
Set...
Design1 *
Multisim - Saturday, 27 June 2026, 10:51:34 pm
Spreadsheet View
Results
Nets
Components
Copper layers
Simulation
Instrument: RefDes(XMM1); Name(Multimeter); Location(A5)
Design1: Simulating...
Tran: 22.928 s
29°C
Clear
ENG
US
11:14 pm
27/6/2026

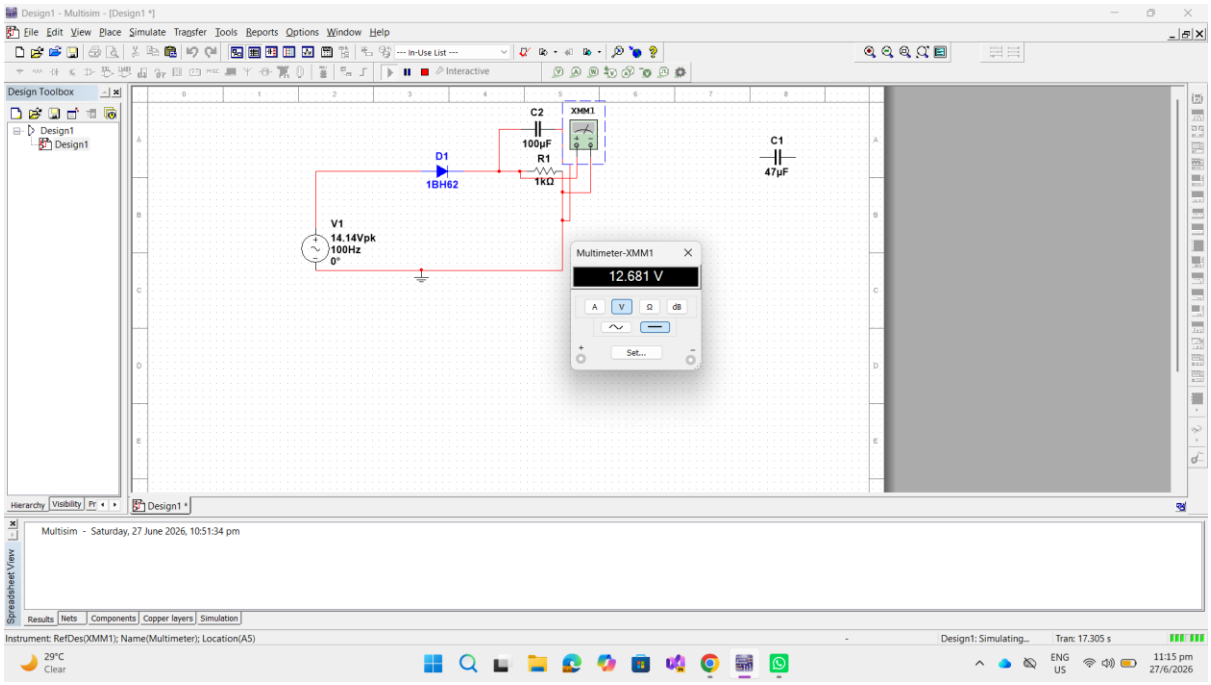
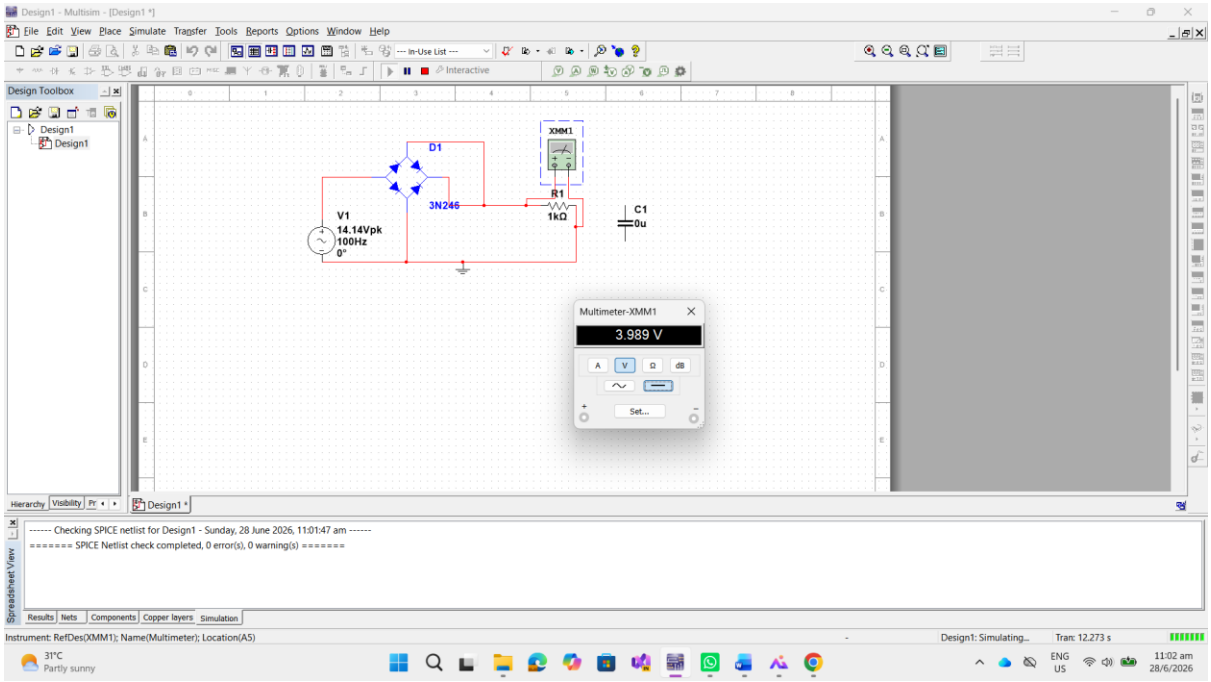
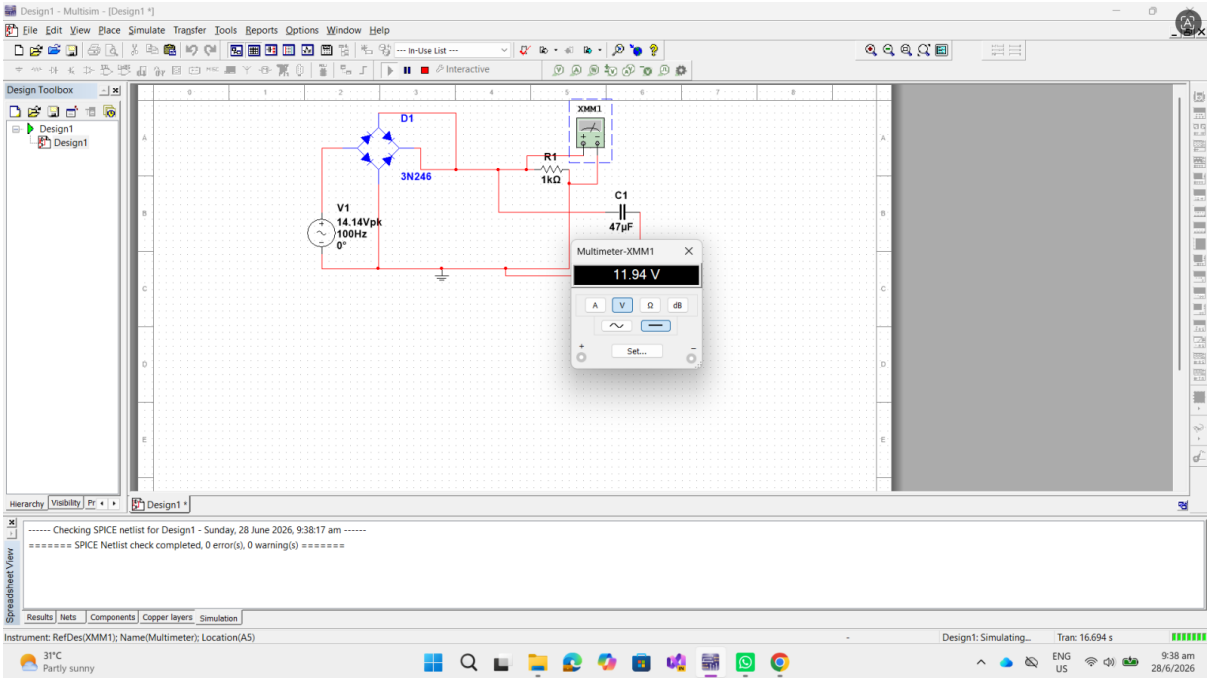

Design1 - Multisim - [Design1 *]
File Edit View Place Simulate Transfer Tools Reports Options Window Help
Design Toolbox
Design1
C2
100µF
XMM1
D1
1BH62
R1
1kΩ
C1
47µF
V1
14.14Vpk
100Hz
0°
Multimeter-XMM1
12.681 V
Set...
Design1 *
Multisim - Saturday, 27 June 2026, 10:51:34 pm
Results Nets Components Copper layers Simulation
Instrument: RefDes(XMM1); Name(Multimeter); Location(A5)
Design1: Simulating...
Tran: 17.305 s
29°C
Clear
ENG
US
11:15 pm
27/6/2026

Table 2


Design1 - Multisim - [Design1 *]
File Edit View Place Simulate Transfer Tools Reports Options Window Help
Design Toolbox
Design1
D1
3N246
XMM1
R1
1kΩ
C1
0u
V1
14.14Vpk
100Hz
0°
Multimeter-XMM1
3.989 V
Set...
Design1 *
------ Checking SPICE netlist for Design1 - Sunday, 28 June 2026, 11:01:47 am ------
======= SPICE Netlist check completed, 0 error(s), 0 warning(s) =======
Results Nets Components Copper layers Simulation
Instrument: RefDes(XMM1); Name(Multimeter); Location(A5)
Design1: Simulating...
Tran: 12.273 s
31°C
Partly sunny
ENG
US
11:02 am
28/6/2026


Design1 - Multisim - [Design1 *]
File Edit View Place Simulate Transfer Tools Reports Options Window Help
Design Toolbox
Design1
Design1
D1
3N246
XMM1
R1
1kΩ
C1
47µF
V1
14.14Vpk
100Hz
0°
Multimeter-XMM1
11.94 V
A V Ω dB
Set...
Design1 *
------ Checking SPICE netlist for Design1 - Sunday, 28 June 2026, 9:38:17 am ------
======= SPICE Netlist check completed, 0 error(s), 0 warning(s) =======
Results Nets Components Copper layers Simulation
Instrument: RefDes(XMM1); Name(Multimeter); Location(A5)
Design1: Simulating...
Tran: 16.694 s
31°C
Partly sunny
ENG
US
9:38 am
28/6/2026

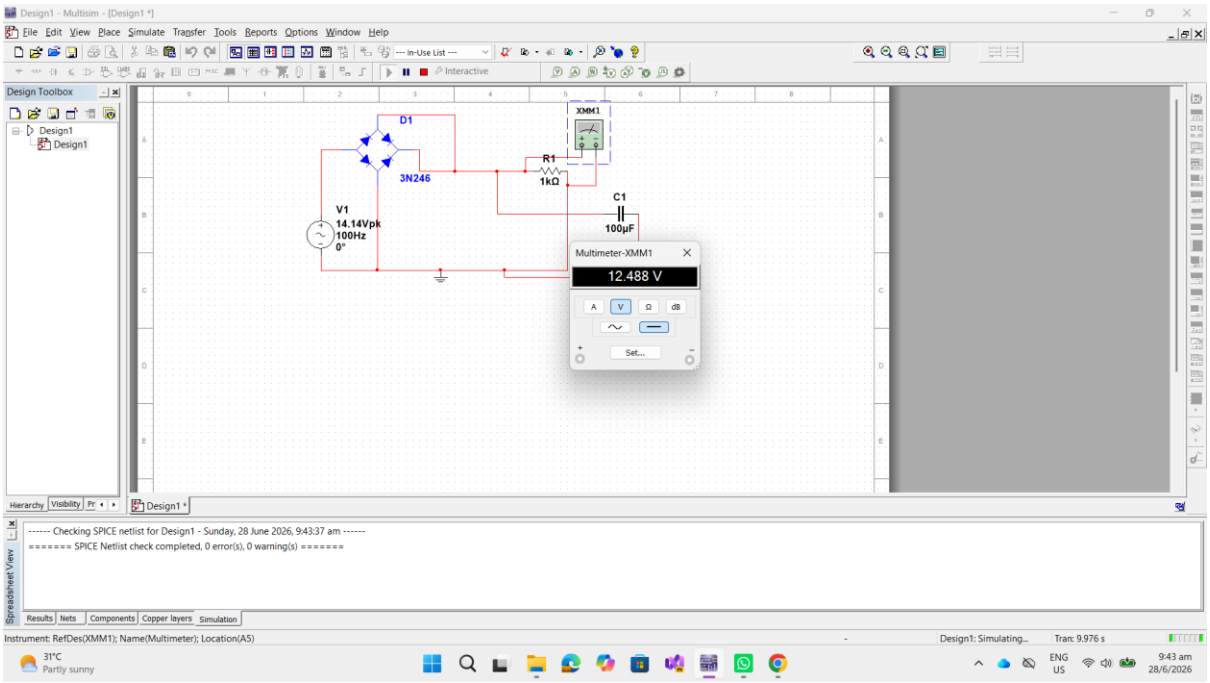
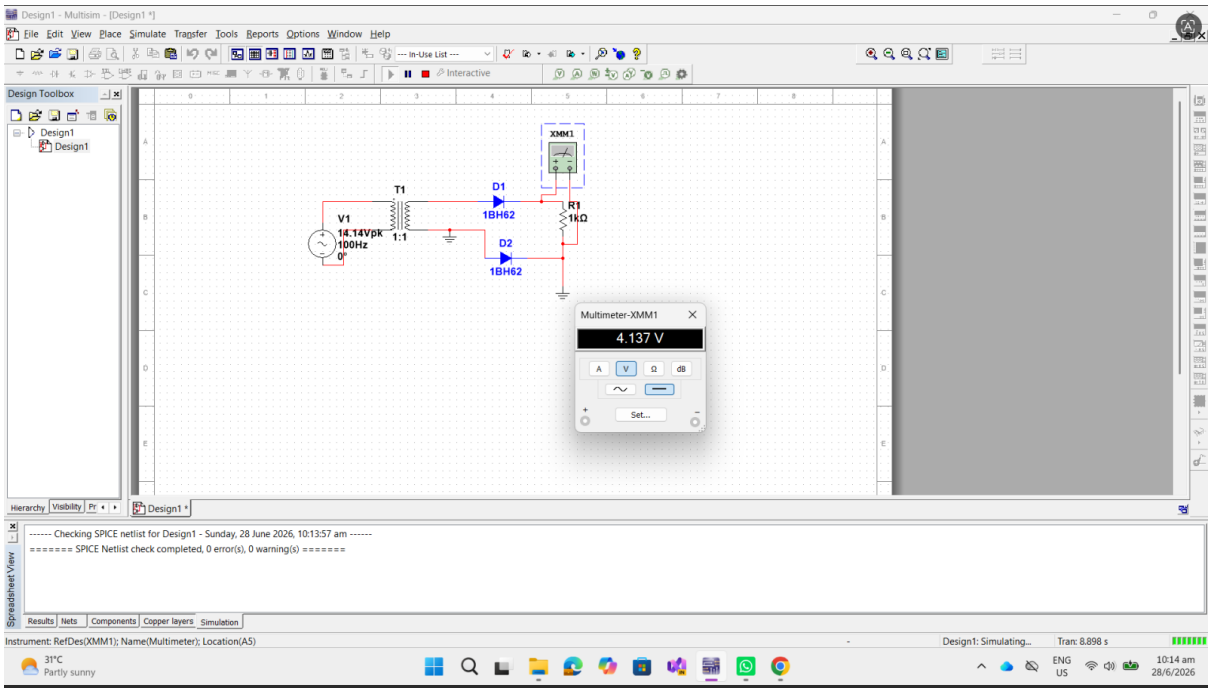
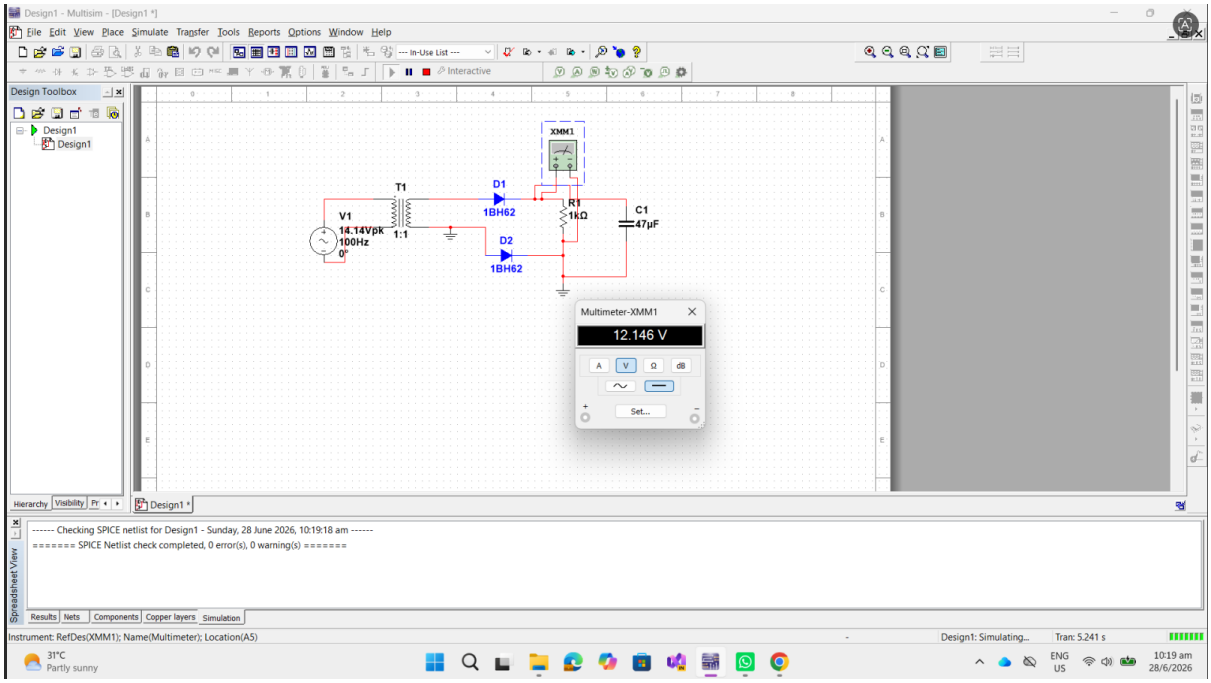
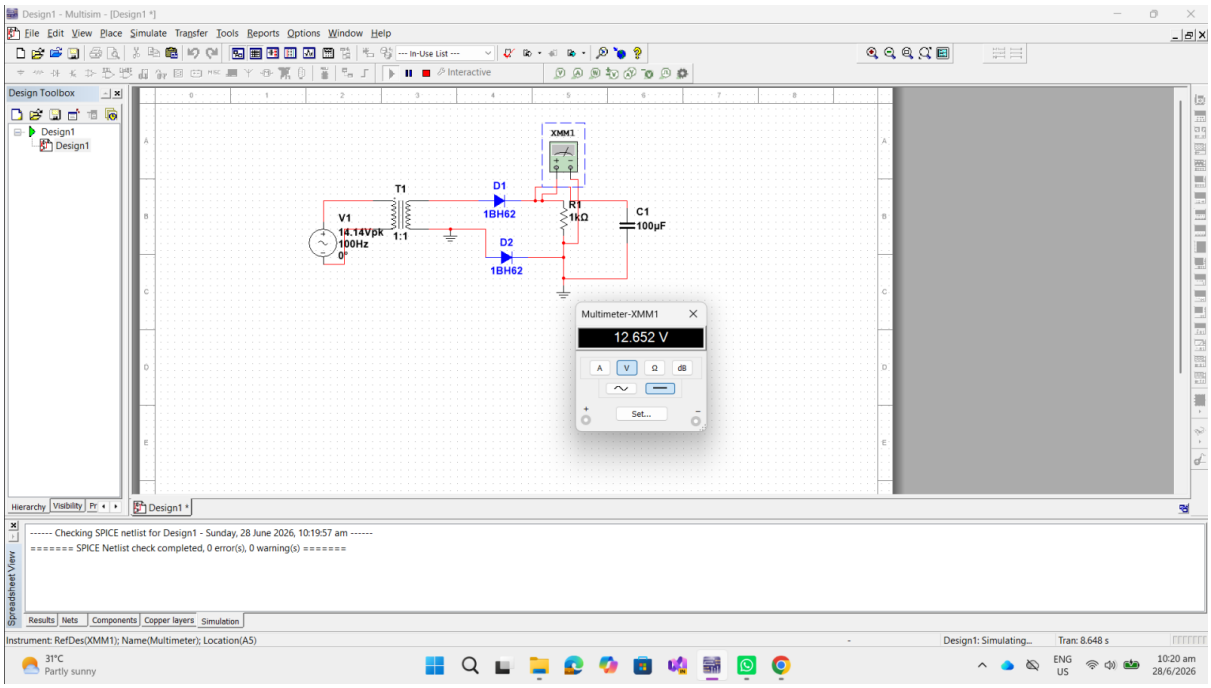

Design1 - Multisim - [Design1 *]
File Edit View Place Simulate Transfer Tools Reports Options Window Help
Design Toolbox
Design1
Design1
D1
3N246
XMM1
R1
1kΩ
C1
100µF
V1
14.14Vpk
100Hz
0°
Multimeter-XMM1
12.488 V
A V Ω dB
Set...
Design1 *
------ Checking SPICE netlist for Design1 - Sunday, 28 June 2026, 9:43:37 am ------
======= SPICE Netlist check completed, 0 error(s), 0 warning(s) =======
Results Nets Components Copper layers Simulation
Instrument: RefDes(XMM1); Name(Multimeter); Location(A5)
Design1: Simulating...
Tran: 9.976 s
31°C
Partly sunny
ENG
US
9:43 am
28/6/2026

Table 3


Design1 - Multisim - [Design1 *]
File Edit View Place Simulate Transfer Tools Reports Options Window Help
Design Toolbox
Design1
Design1
XMM1
T1
D1
1BH62
R1
1kΩ
V1
14.14Vpk
100Hz
0°
1:1
D2
1BH62
Multimeter-XMM1
4.137 V
A V Ω dB
Set...
Design1 *
------ Checking SPICE netlist for Design1 - Sunday, 28 June 2026, 10:13:57 am ------
======= SPICE Netlist check completed, 0 error(s), 0 warning(s) =======
Spreadsheet View
Results Nets Components Copper layers Simulation
Instrument: RefDes(XMM1); Name(Multimeter); Location(A5)
Design1: Simulating...
Tran: 8.898 s
31°C
Partly sunny
ENG
US
10:14 am
28/6/2026


Design1 - Multisim - [Design1 *]
File Edit View Place Simulate Transfer Tools Reports Options Window Help
Design Toolbox
Design1
Design1
XMM1
T1
D1
1BH62
R1
1kΩ
C1
47µF
V1
14.14Vpk
100Hz
0°
1:1
D2
1BH62
Multimeter-XMM1
12.146 V
A V Ω dB
Set...
Design1 *
------ Checking SPICE netlist for Design1 - Sunday, 28 June 2026, 10:19:18 am ------
======= SPICE Netlist check completed, 0 error(s), 0 warning(s) =======
Spreadsheet View
Results Nets Components Copper layers Simulation
Instrument: RefDes(XMM1); Name(Multimeter); Location(A5)
Design1: Simulating...
Tran: 5.241 s
31°C
Partly sunny
ENG
US
10:19 am
28/6/2026


Design1 - Multisim - [Design1 *]
File Edit View Place Simulate Transfer Tools Reports Options Window Help
Design Toolbox
Design1
Design1
XMM1
T1
D1
1BH62
R1
1kΩ
C1
100µF
V1
14.14Vpk
100Hz
0°
1:1
D2
1BH62
Multimeter-XMM1
12.652 V
A
V
Ω
dB
Set...
Design1 *
Hierarchy
Visibility
Pr
Spreadsheet View
------ Checking SPICE netlist for Design1 - Sunday, 28 June 2026, 10:19:57 am ------
======= SPICE Netlist check completed, 0 error(s), 0 warning(s) =======
Results
Nets
Components
Copper layers
Simulation
Instrument: RefDes(XMM1); Name(Multimeter); Location(A5)
Design1: Simulating...
Tran: 8.648 s
31°C
Partly sunny
ENG
US
10:20 am
28/6/2026