


Assembly Instruction

Heat Set Insert Tool

By Sadrita Neogi





A guide to assemble the -

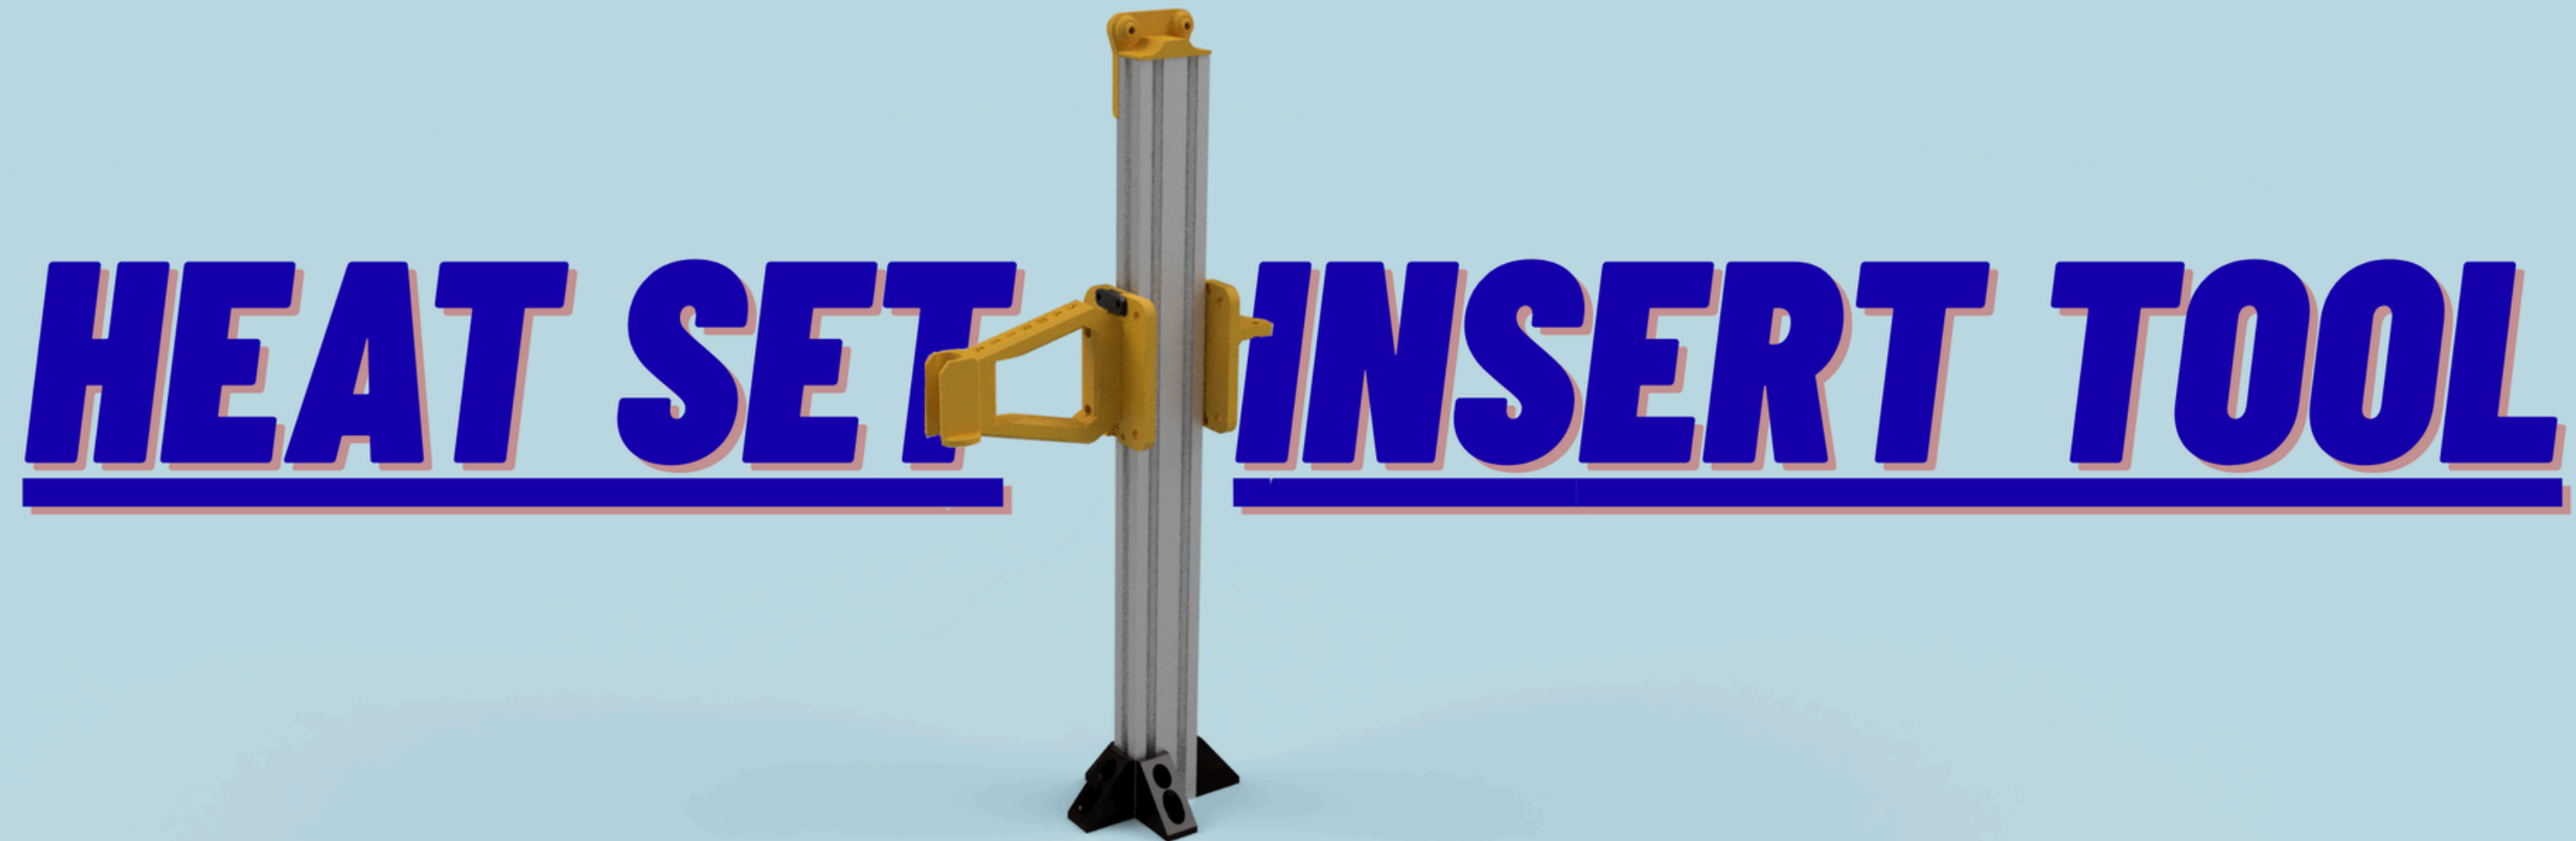


Step : 1

Take Take the best sleep and attach it to the extrusion rod.

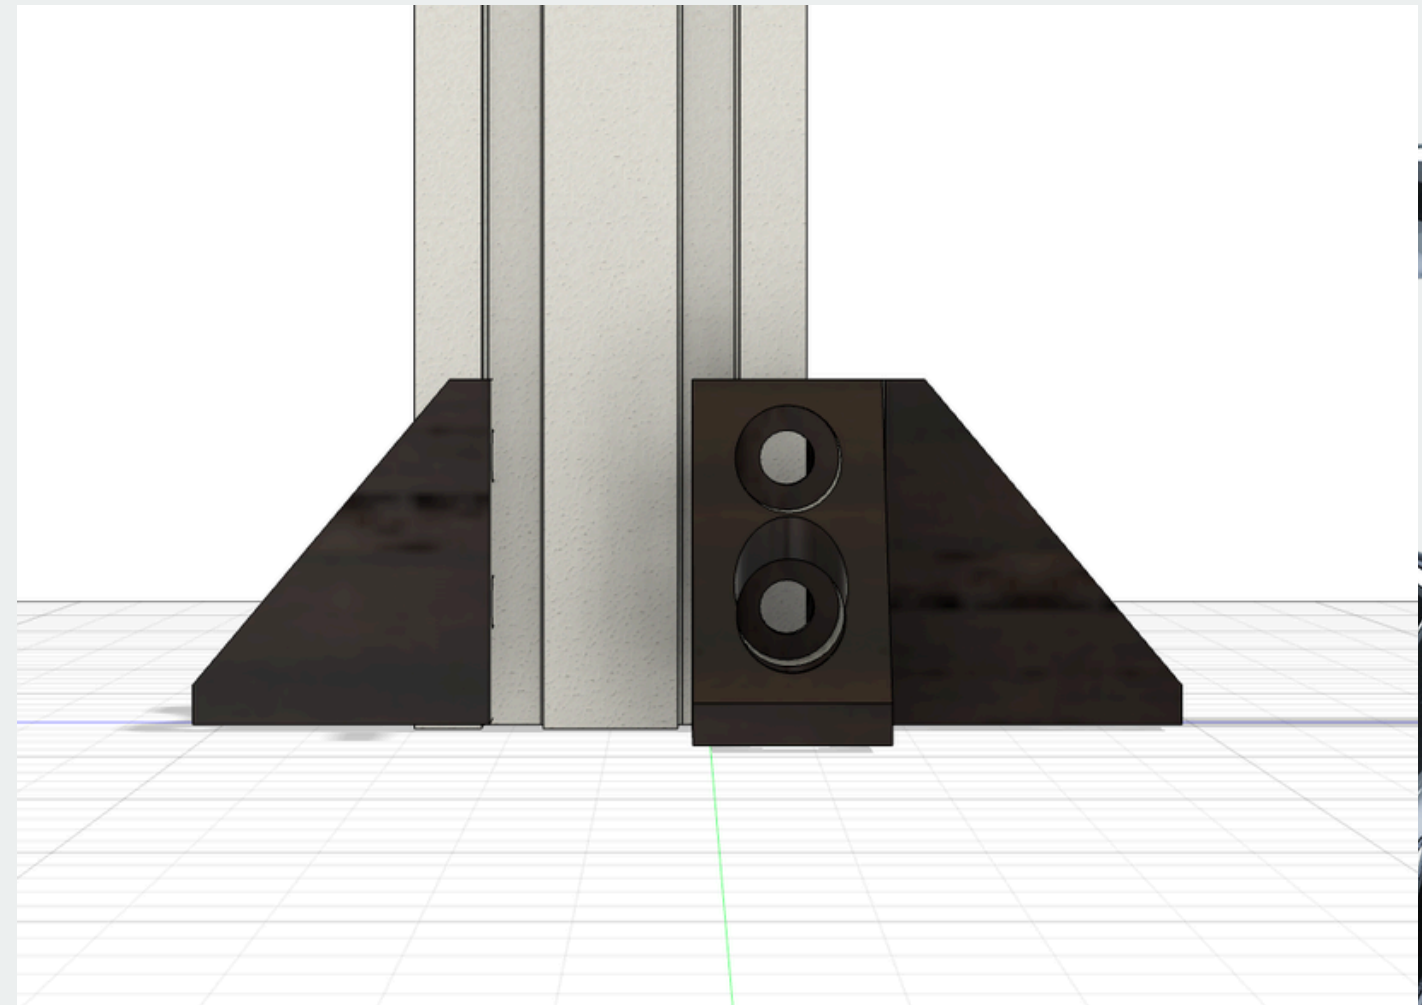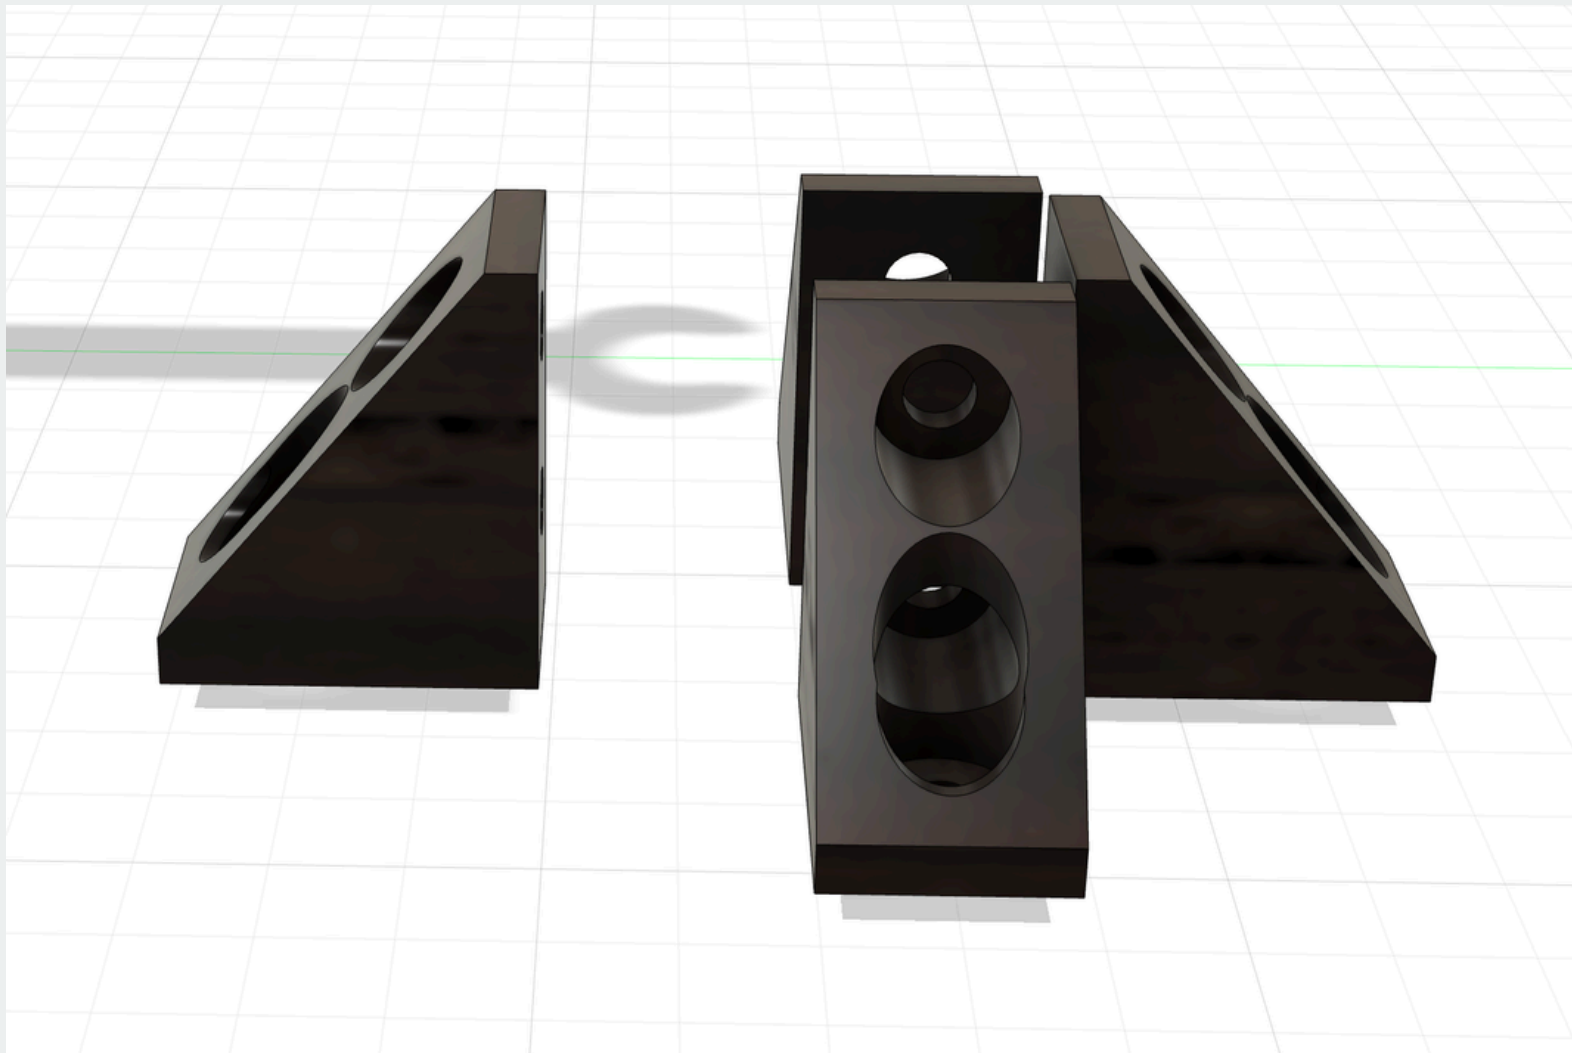

Step : 2

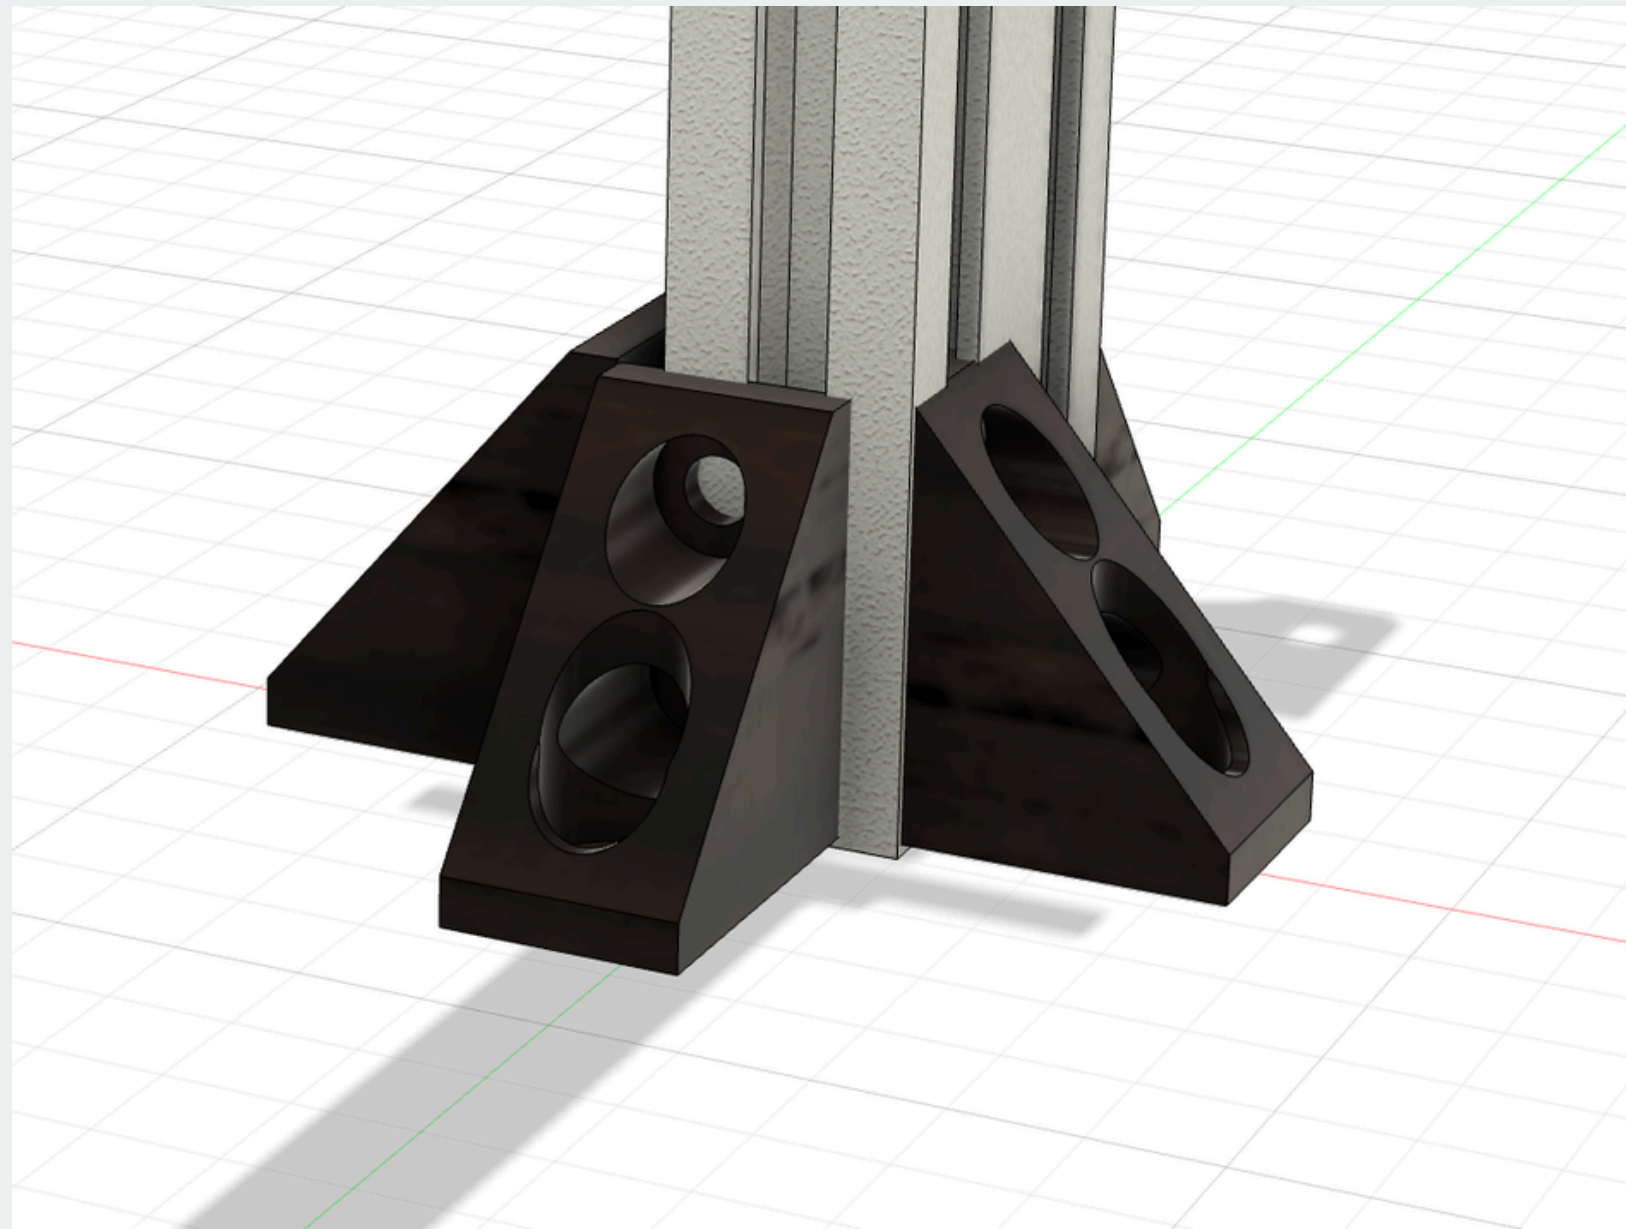




After the proper alignment of the base clip with exclusion rod attach it with the base using screws.



Step : 3

Take the Idler Plate M3 (3d Printed) and attach it with the extrusion rods top part with the M3 screw .



Also add the pulley to this Idler Plate .

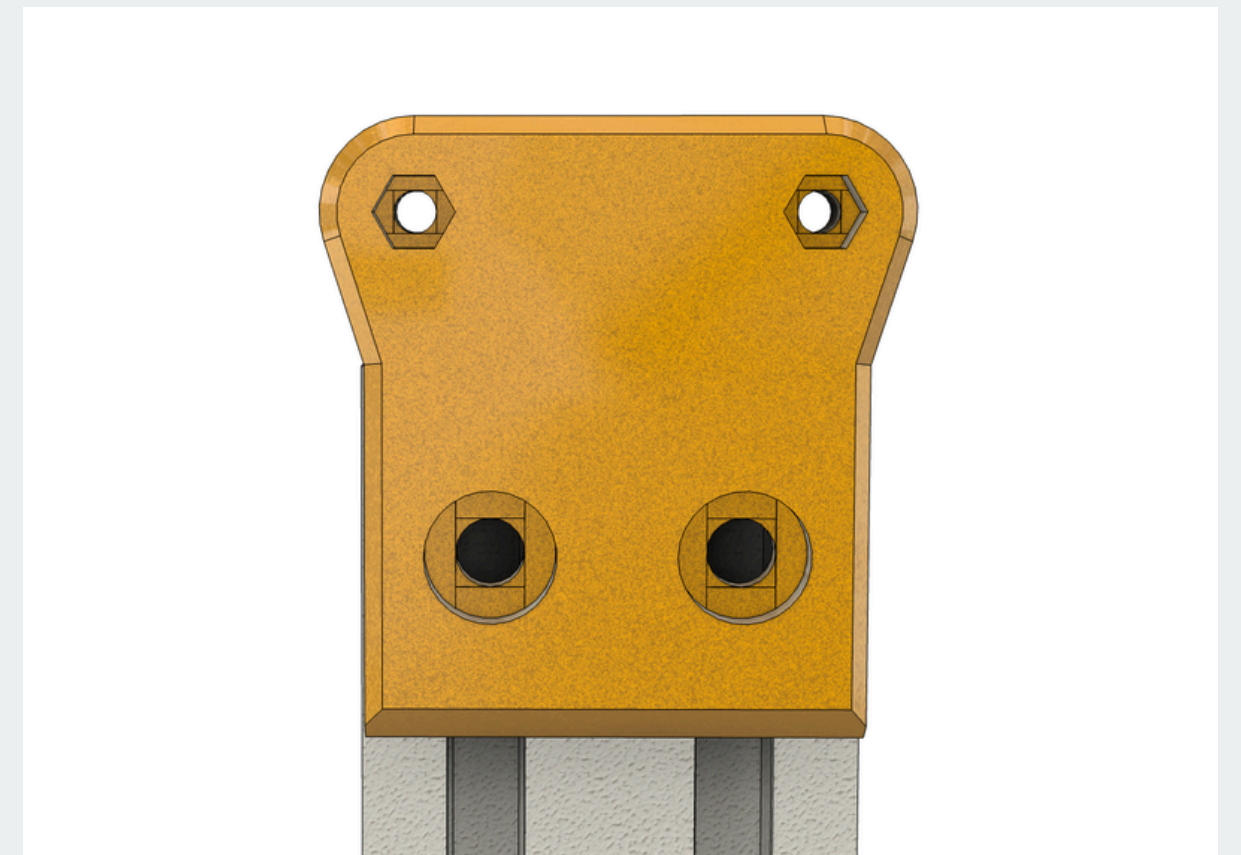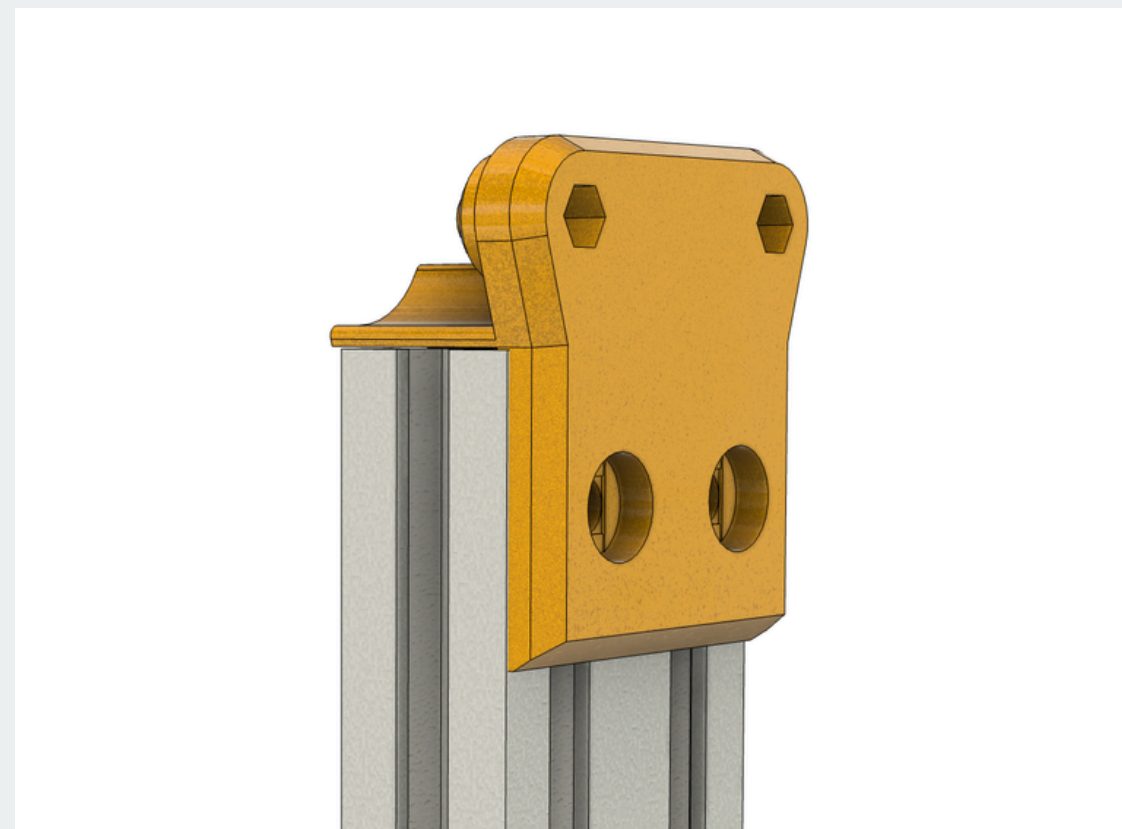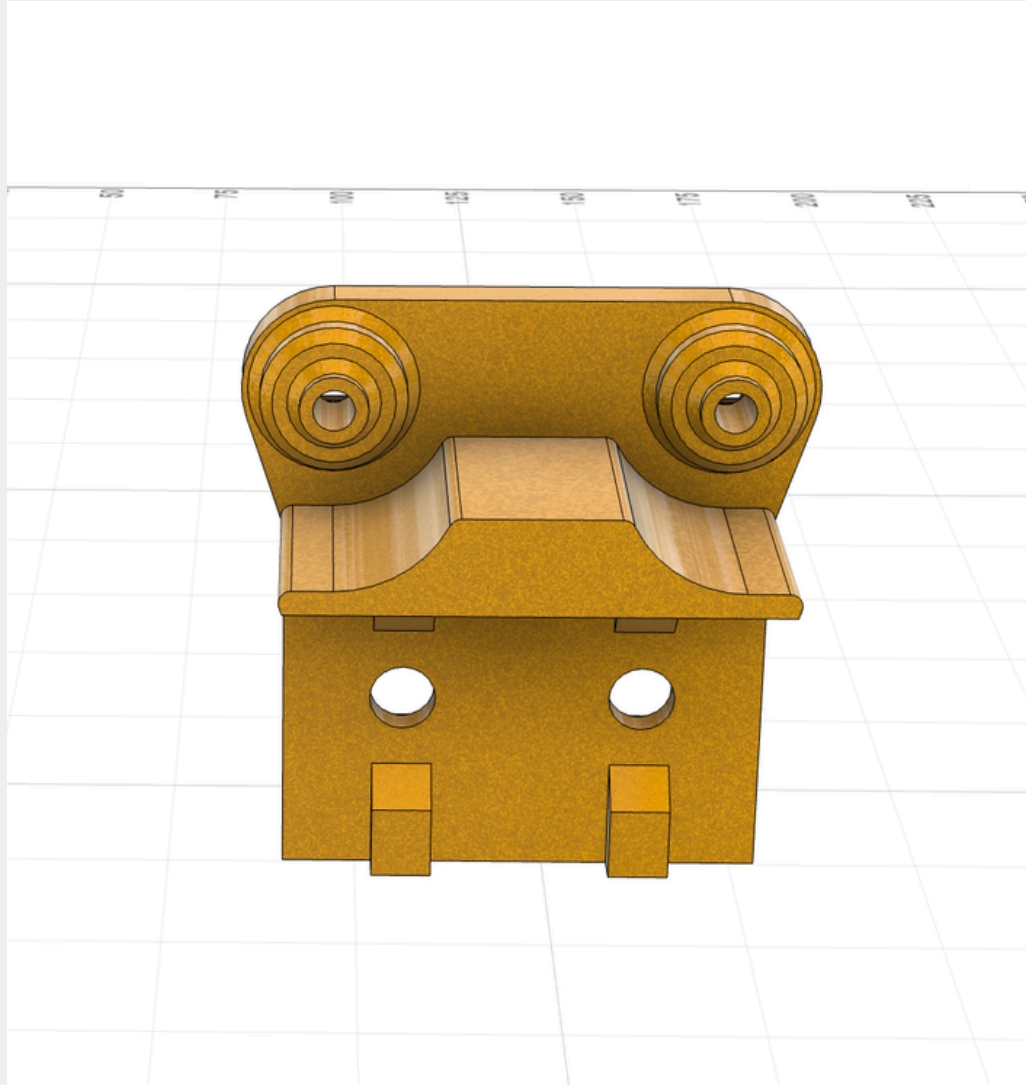

Step : 4

Take the Idler Rear Carriage (3d Printed) and attach it with the extrusion rod screw .



Also add the V Slot Wheels to this Rear Carriage and fix this with the Belt Clamp (3d Printed).

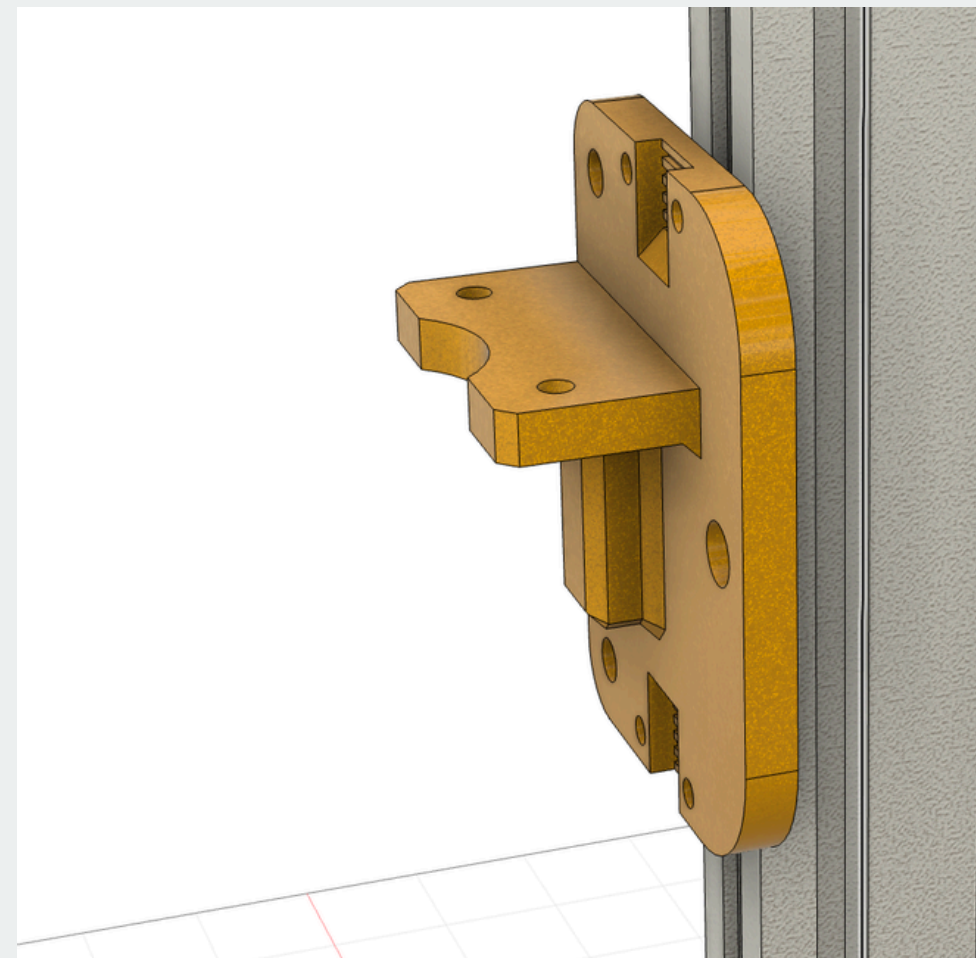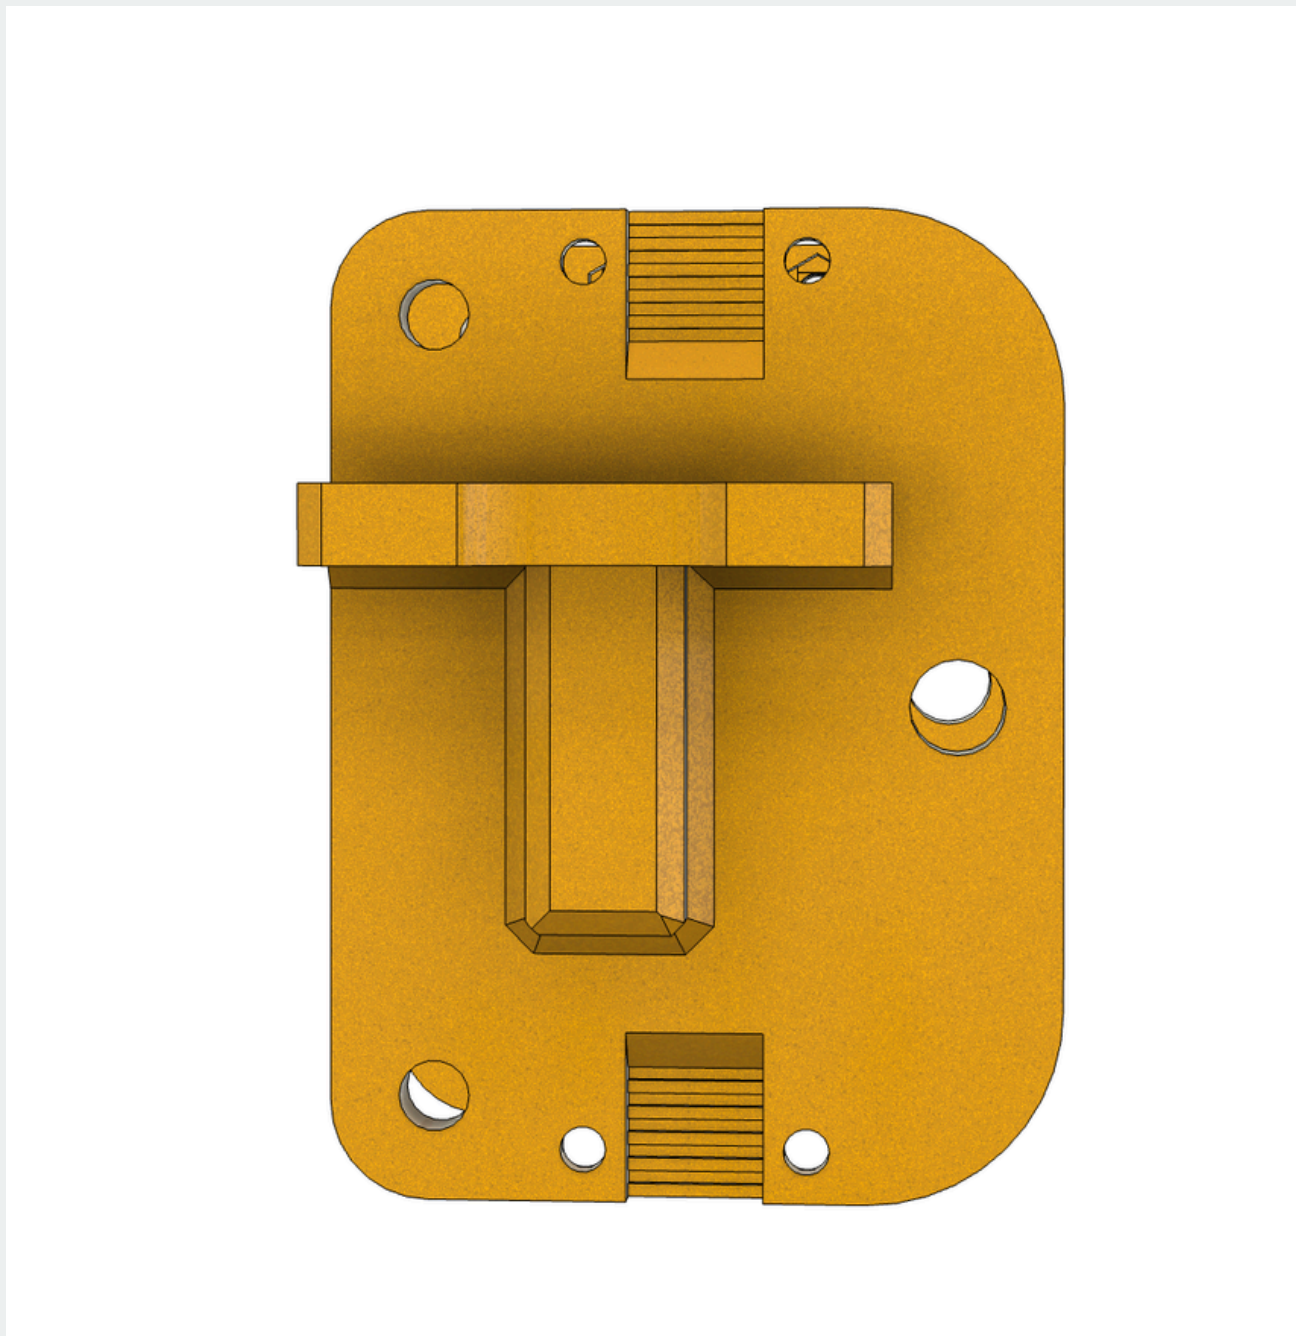

Step : 5

Take the Front Carriage (3d Printed) and attach it with the extrusion rod and fix the gt timing belt with it along with the screw.





Next add the V Slot Wheels with this Plate for smooth movement.

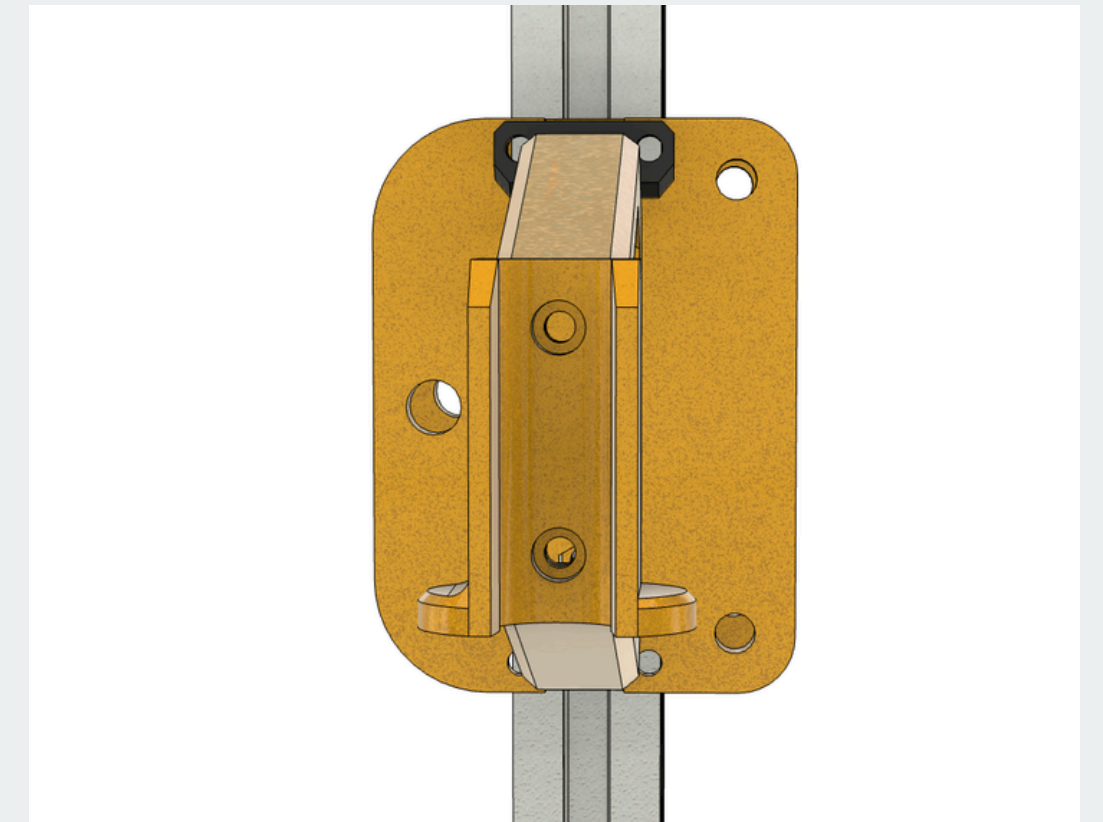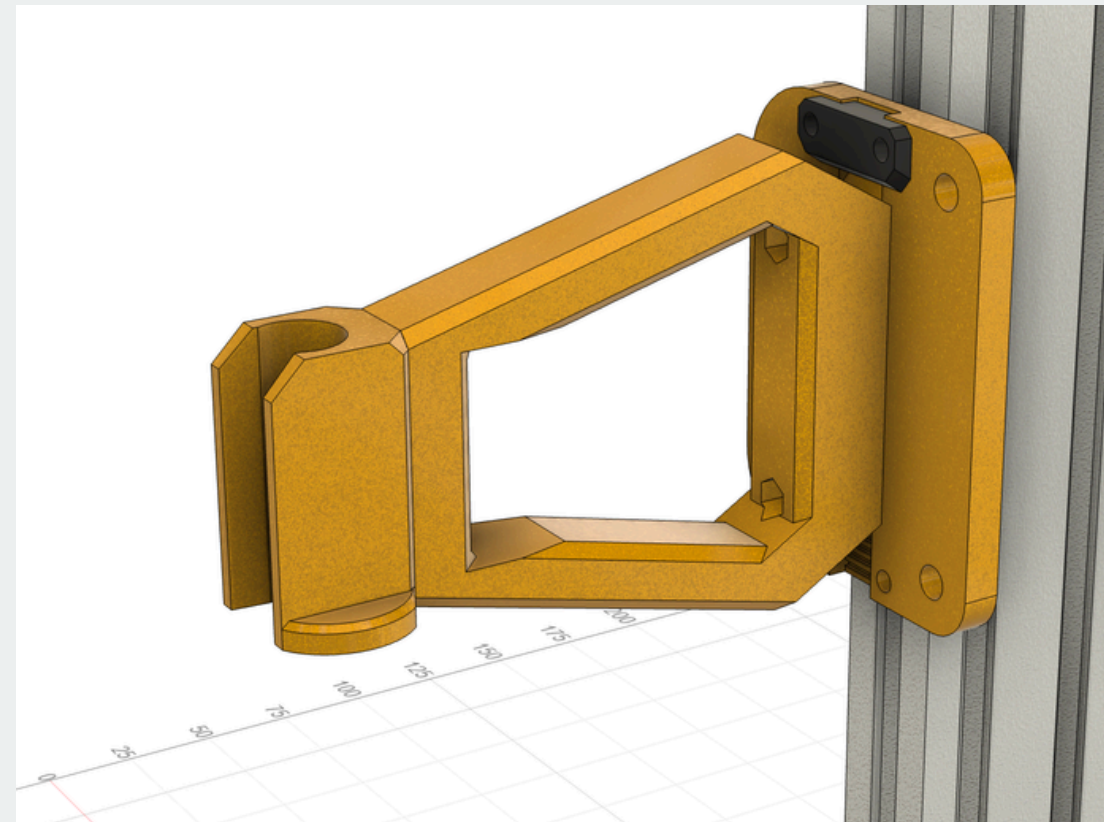


Step : 6

After following all the steps, the final model should look like this.


now, just attach your soldering iron to the holder and use it.

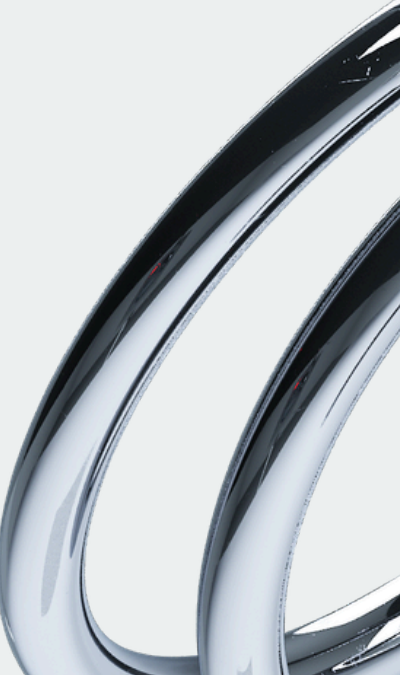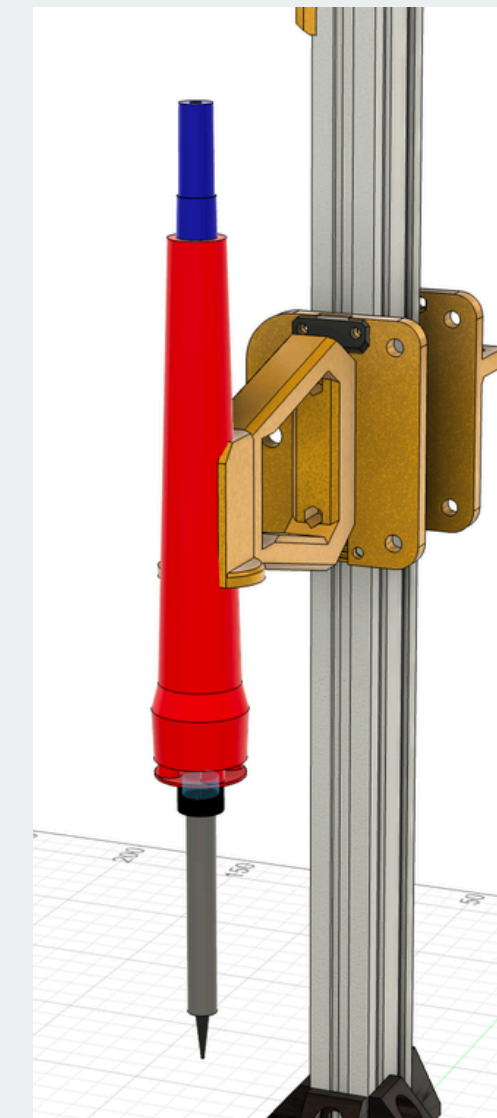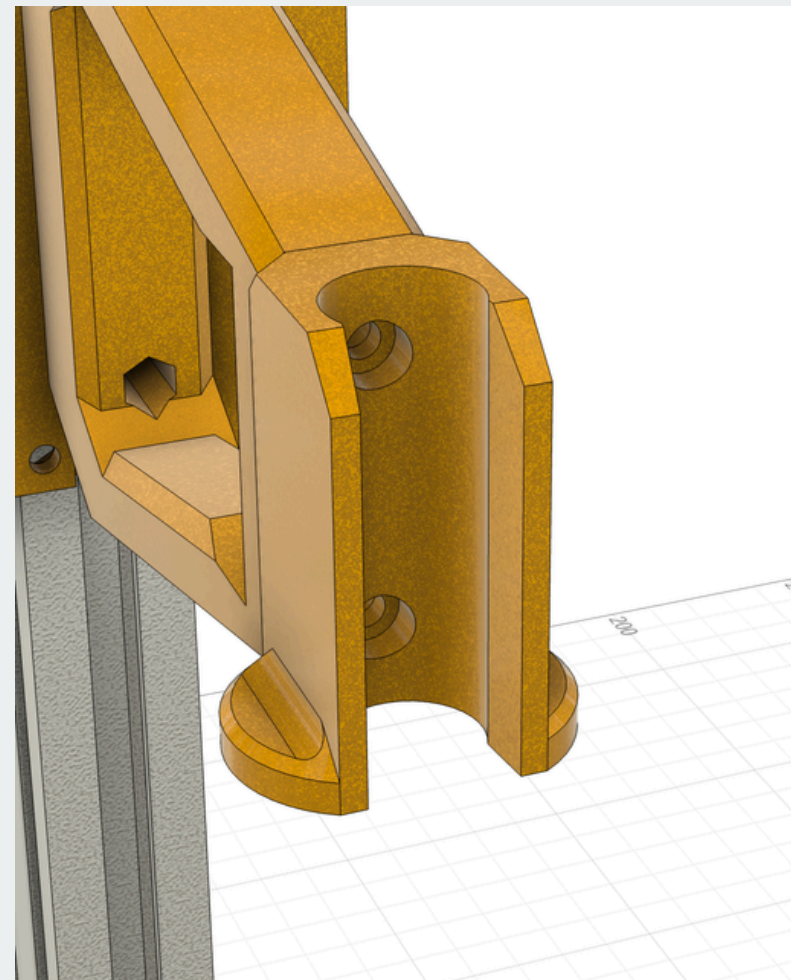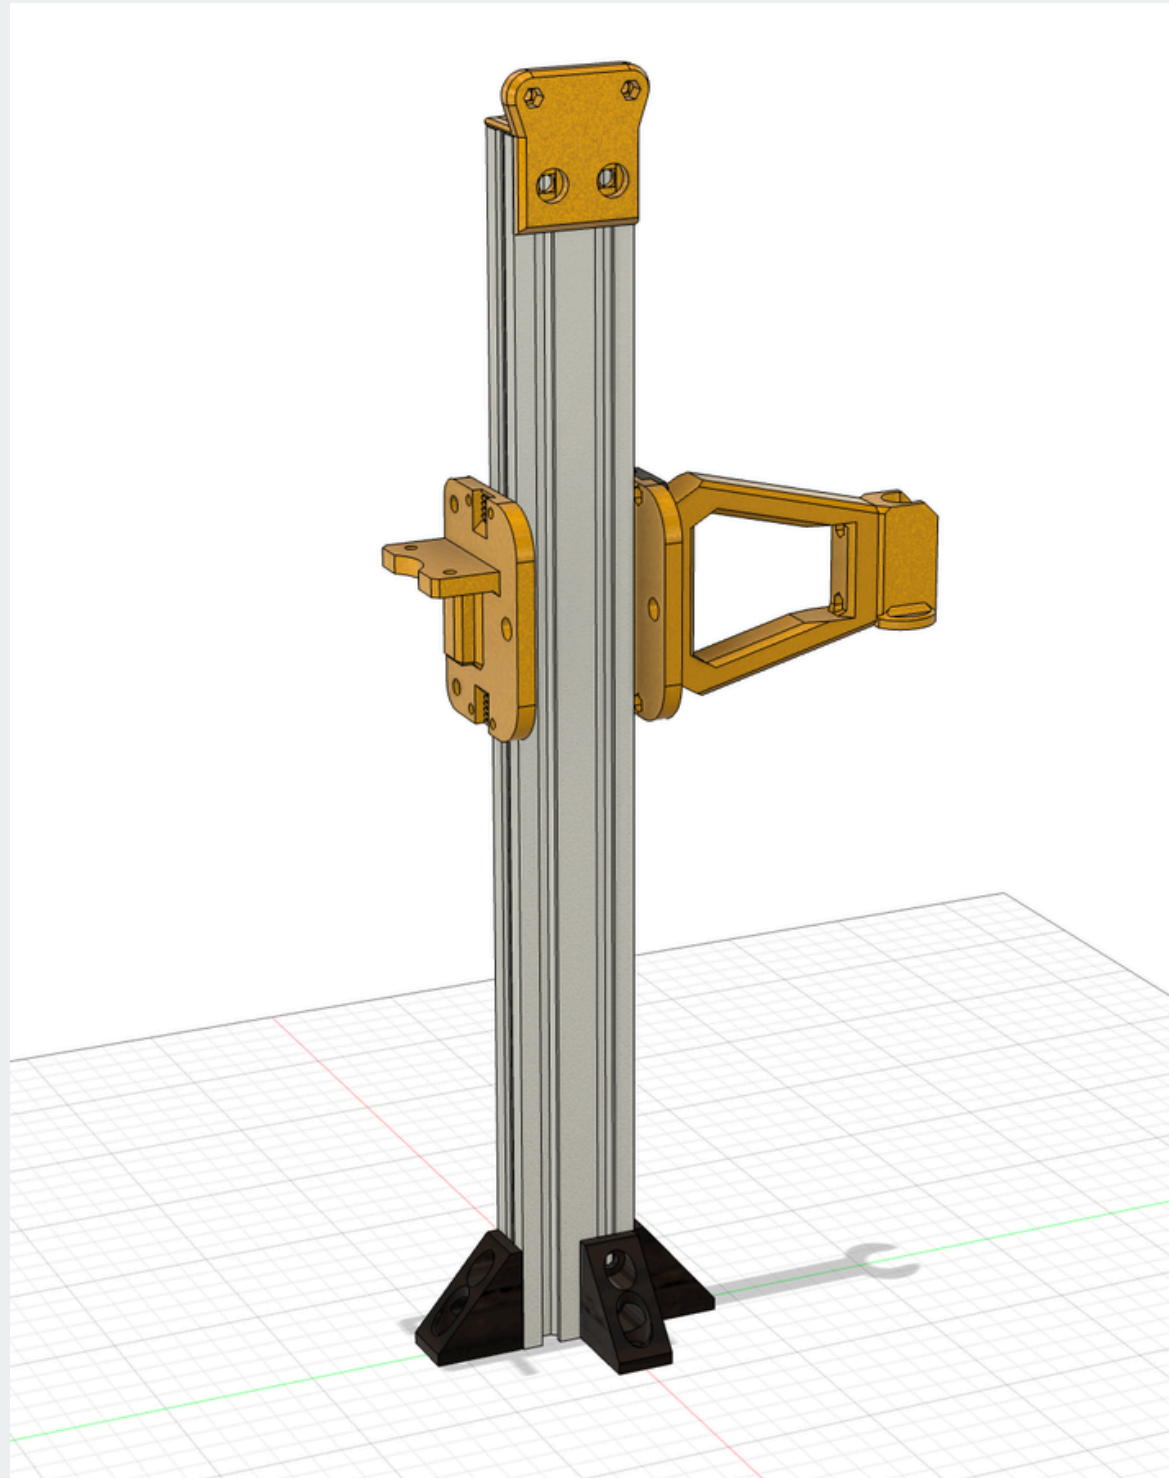

Step : 7

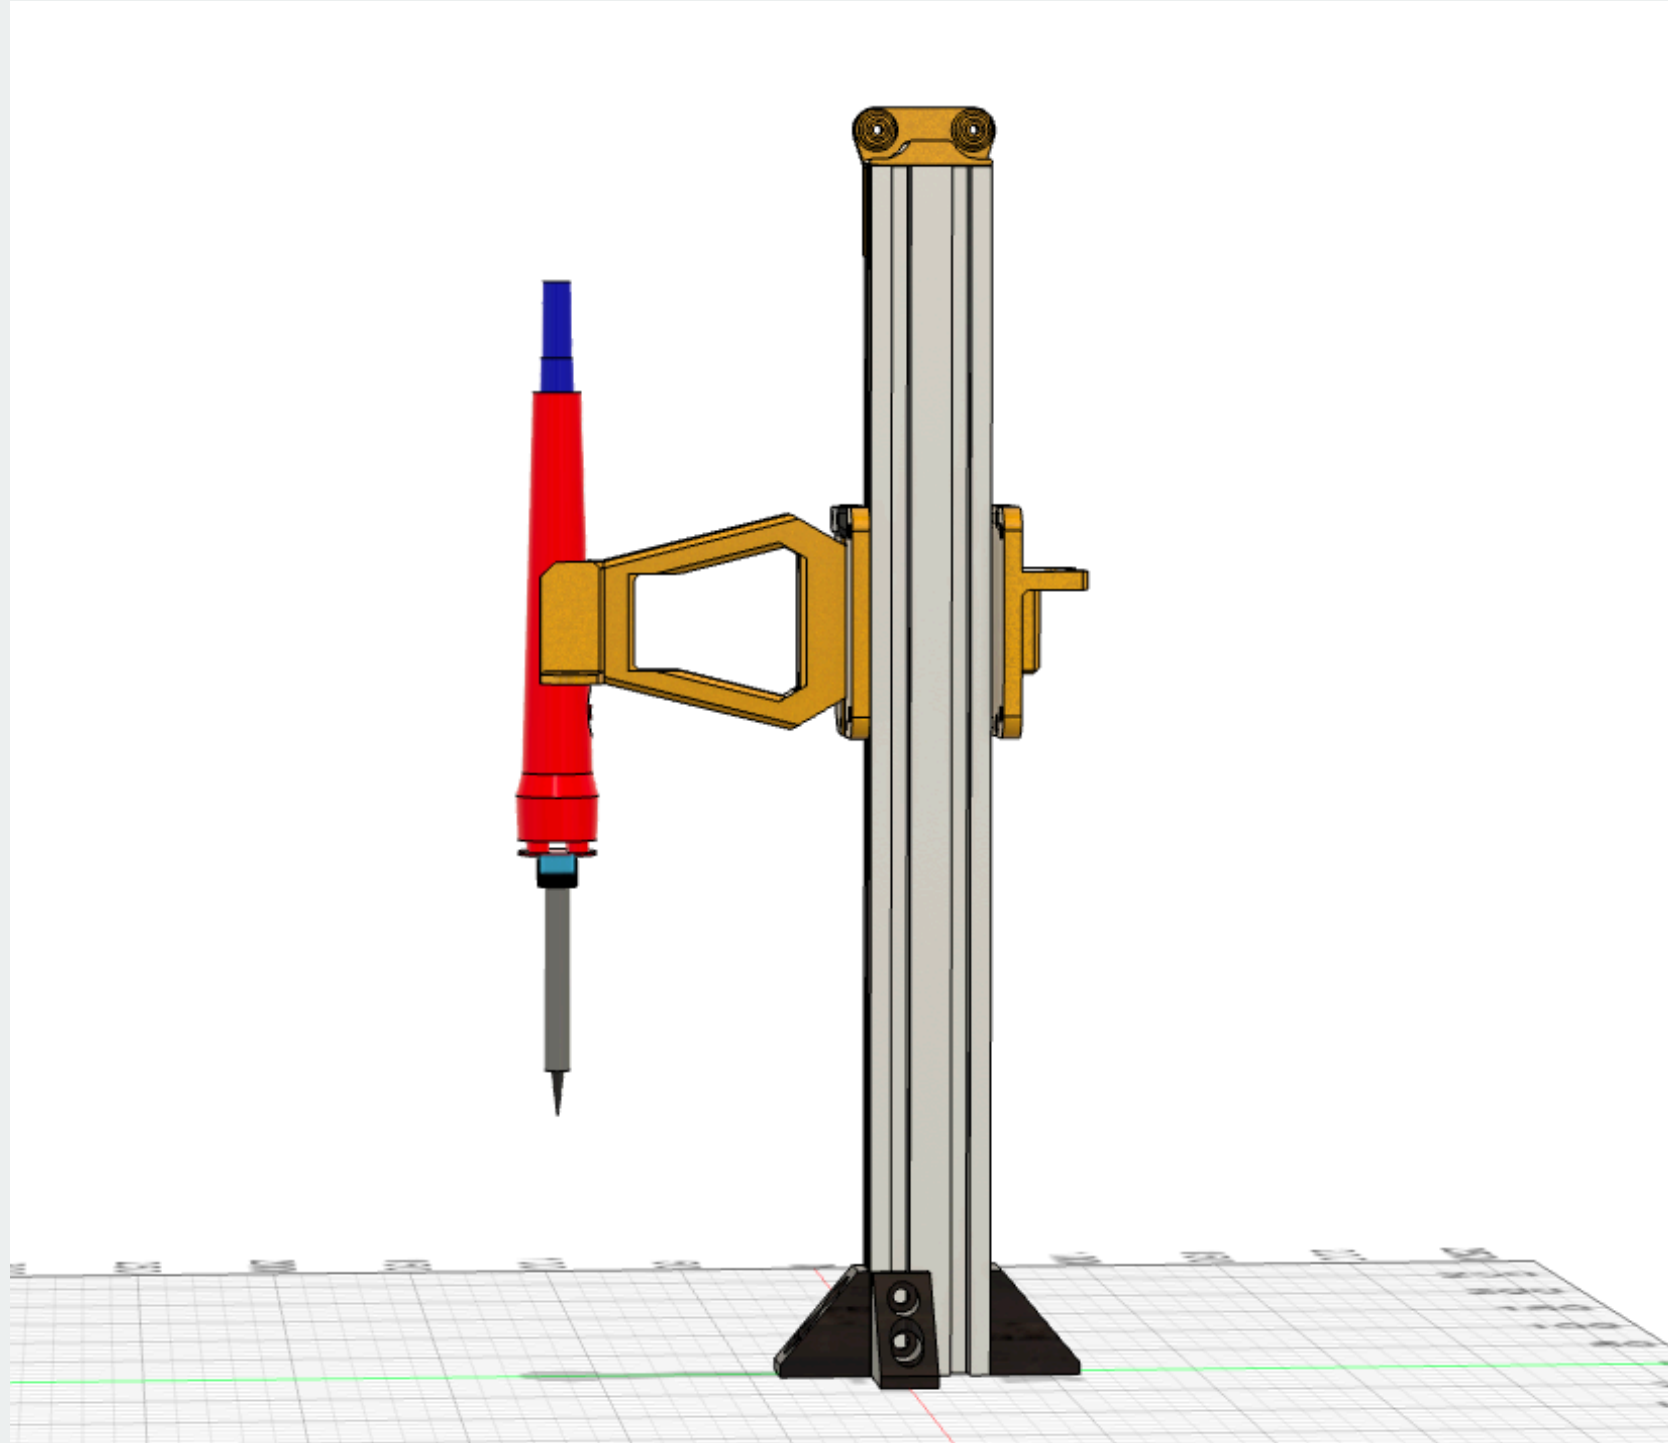

If you follow the steps correctly, now, the final model should look like this, and you are good to go to use the model

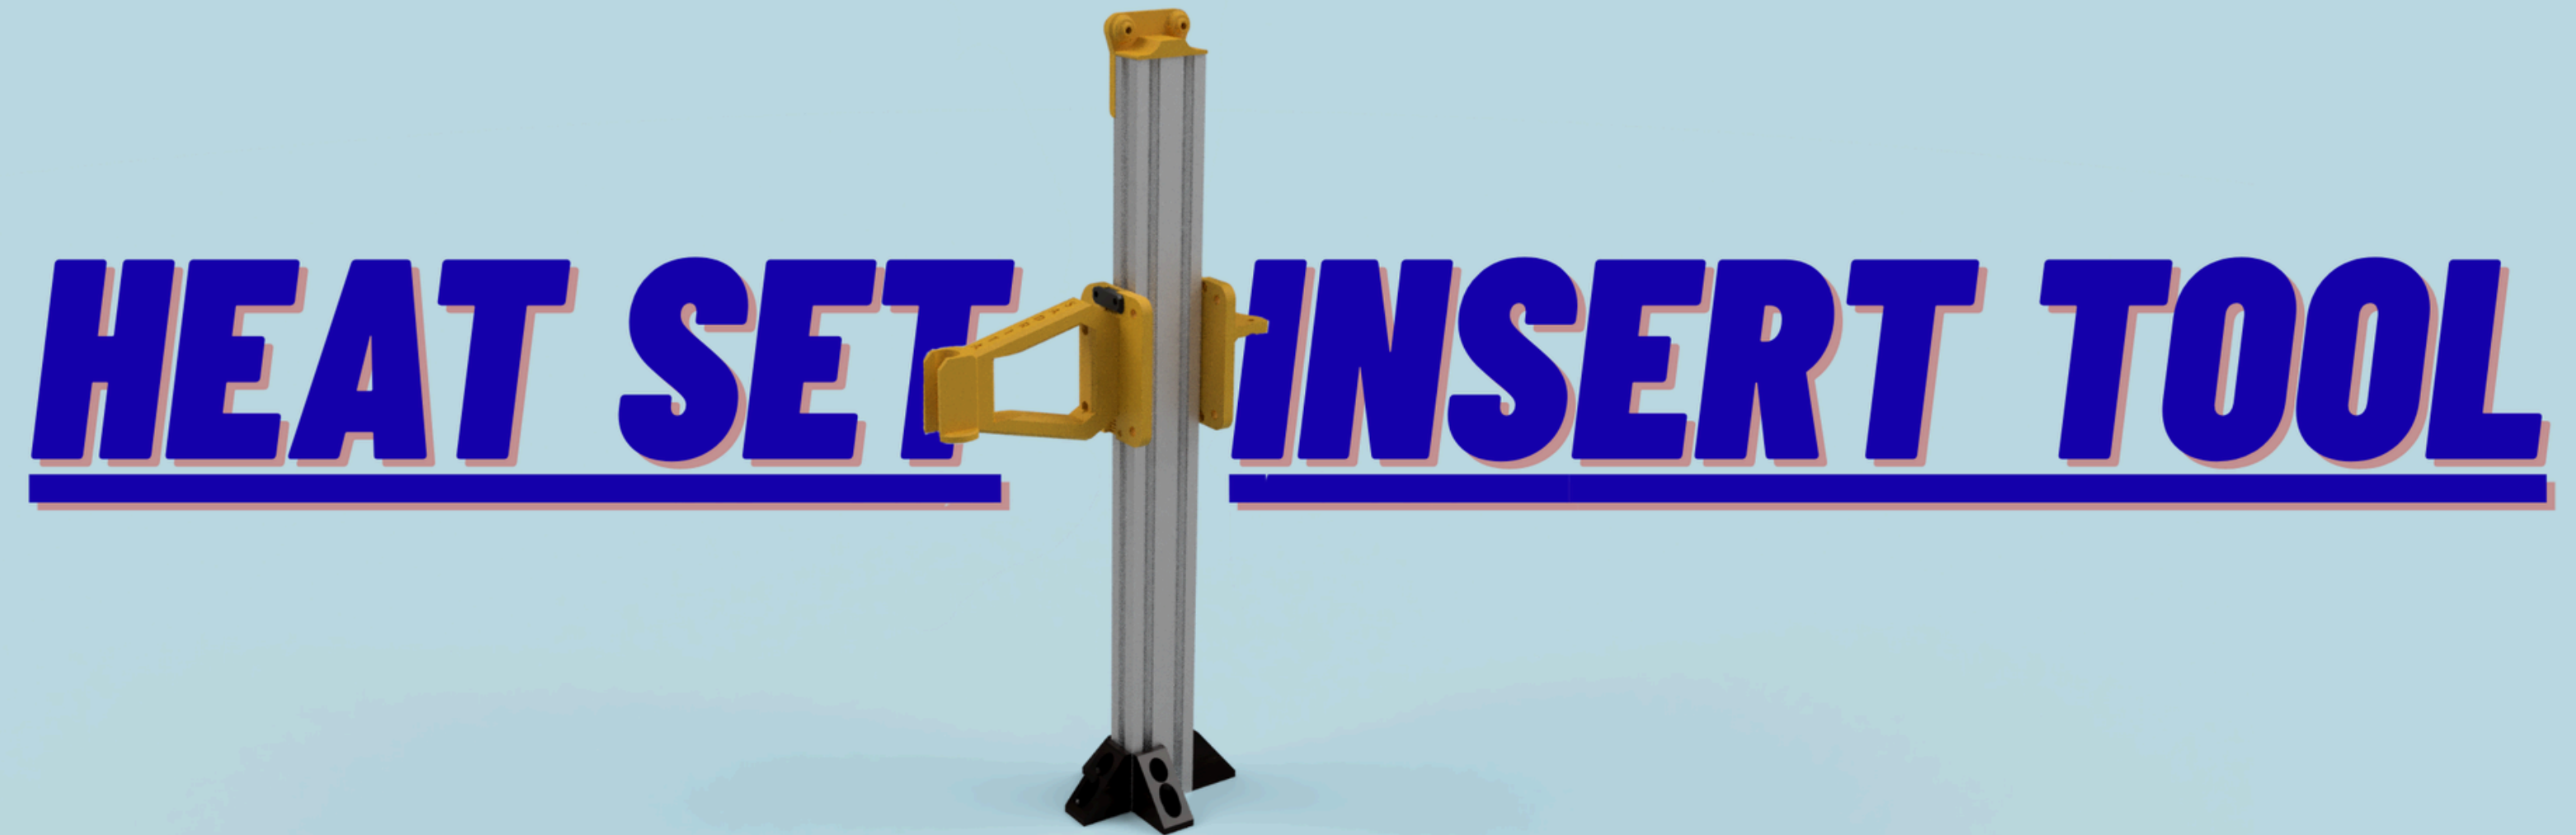

By Sadrita

Thank you
very much for
your attention!

