



# **SITE SPECIFIC SAFETY PLAN**

---

*Plan revised September 11, 2026.*

**1600 Mount Fee Road, Whistler, BC V8E 1P2**

---



## TABLE OF CONTENTS

|                                                         |    |
|---------------------------------------------------------|----|
| 1) REVISION HISTORY.....                                | 6  |
| 2) PROJECT SCOPE .....                                  | 7  |
| 2.1 Project contacts.....                               | 7  |
| 2.2 Project.....                                        | 7  |
| 3) CONSTRUCTION PLAN AND SITE ACCESS .....              | 8  |
| 4) SITE DRAWING PLANS.....                              | 9  |
| 5) HEALTH AND SAFETY POLICY .....                       | 10 |
| 6) LEGAL REQUIREMENTS .....                             | 11 |
| 6.1 Regulatory framework .....                          | 11 |
| 6.2 Owner's duties — WCA s.25.....                      | 11 |
| 6.3 Prime contractor's duties — WCA s.24 .....          | 11 |
| 6.4 Employer's duties — WCA s.21 .....                  | 11 |
| 6.5 WDC management's responsibilities.....              | 12 |
| 6.6 Superintendent's responsibilities .....             | 12 |
| 6.7 Contractor's responsibilities .....                 | 12 |
| 6.8 First aid attendant's responsibilities .....        | 13 |
| 7) SAFE WORK RULES .....                                | 14 |
| 7.1 Visitors and site access.....                       | 14 |
| 7.2 PPE and personal conduct.....                       | 14 |
| 7.3 Housekeeping, equipment and reporting .....         | 14 |
| 7.4 Violence, harassment and discrimination.....        | 15 |
| 7.5 Temporary buildings, sanitation and utilities ..... | 15 |
| 7.6 Cell phone use .....                                | 16 |
| 8) SAFE WORK PROCEDURES .....                           | 17 |
| 8.1 Access and egress.....                              | 17 |
| 8.2 Chain saws.....                                     | 17 |
| 8.3 Circular saws.....                                  | 17 |
| 8.4 Solvents and flammables .....                       | 17 |
| 8.5 Compressed air .....                                | 18 |
| 8.6 Cutting and coring concrete or decking.....         | 18 |

|      |                                                              |    |
|------|--------------------------------------------------------------|----|
| 8.7  | Defective tools .....                                        | 18 |
| 8.8  | Pneumatic, electric and cartridge-operated tools .....       | 18 |
| 8.9  | Propane and LPG.....                                         | 18 |
| 8.10 | Hot work — welding and cutting .....                         | 19 |
| 8.11 | WHMIS — hazardous products.....                              | 19 |
| 8.12 | Electrical work .....                                        | 20 |
| 8.13 | Limits of approach — overhead power lines .....              | 21 |
| 8.14 | GFCI — temporary power protection .....                      | 21 |
| 8.15 | Ground disturbance, mobile equipment and site transport..... | 21 |
| 8.16 | Cranes and rigging .....                                     | 22 |
| 8.17 | Elevating work platforms .....                               | 23 |
| 8.18 | Extension cords.....                                         | 23 |
| 8.19 | Forklifts.....                                               | 23 |
| 8.20 | Grinding.....                                                | 24 |
| 8.21 | Housekeeping .....                                           | 24 |
| 8.22 | Scaffolding.....                                             | 24 |
| 8.23 | Lockout and tagging .....                                    | 25 |
| 8.24 | Permit to work .....                                         | 25 |
| 8.25 | Fall protection program .....                                | 26 |
| 9)   | LADDERS — LADDER SAFETY PROGRAM .....                        | 27 |
| 9.1  | Fall protection with ladders.....                            | 27 |
| 9.2  | Responsibilities .....                                       | 27 |
| 9.3  | Access, loads and structure .....                            | 27 |
| 9.4  | Use.....                                                     | 27 |
| 9.5  | Placement .....                                              | 27 |
| 9.6  | Maintenance and training .....                               | 28 |
| 10)  | ORIENTATION AND TRAINING .....                               | 29 |
| 10.1 | Who must be oriented .....                                   | 29 |
| 10.2 | How it is done.....                                          | 29 |
| 10.3 | What the orientation covers.....                             | 29 |
| 10.4 | Training and certificates .....                              | 29 |
| 11)  | SITE-SPECIFIC HAZARDS AND CONTROLS .....                     | 30 |
| 12)  | WDC EMERGENCY RESPONSE PLAN.....                             | 31 |

|      |                                                                                                 |    |
|------|-------------------------------------------------------------------------------------------------|----|
| 12.1 | Alarm signals.....                                                                              | 31 |
| 12.2 | Fire .....                                                                                      | 31 |
| 12.3 | Injury.....                                                                                     | 31 |
| 12.4 | Site-wide evacuation .....                                                                      | 31 |
| 12.5 | Spill response.....                                                                             | 32 |
| 13)  | EMERGENCY CALL-OUT NUMBERS .....                                                                | 33 |
| 14)  | WATER INTRUSION PREVENTION AND RESPONSE PLAN .....                                              | 34 |
| 14.1 | Weather monitoring .....                                                                        | 34 |
| 14.2 | Temporary protection, by phase.....                                                             | 34 |
| 14.3 | Being ready to respond .....                                                                    | 34 |
| 14.4 | If it happens.....                                                                              | 35 |
| 15)  | CRITICAL LIFT PLAN.....                                                                         | 36 |
| 15.1 | Part A — Standard critical lifts.....                                                           | 36 |
| 15.2 | On-site plan (Phase 1) — every critical lift .....                                              | 36 |
| 15.3 | Formal written plan (Phase 2) — highly complex lifts .....                                      | 36 |
| 15.4 | Critical Lift Permit — completed by the Site Supervisor before any standard critical lift<br>36 |    |
| 15.5 | Part B — Critical lift for emergency rescue .....                                               | 37 |
| 15.6 | Step 1 — immediate response and the 911 call.....                                               | 37 |
| 15.7 | Step 2 — prepare the area and equipment.....                                                    | 38 |
| 15.8 | Step 3 — the huddle.....                                                                        | 38 |
| 15.9 | When fire or ambulance arrives .....                                                            | 38 |
| 16)  | WORKSAFEBC FIRST AID REQUIREMENTS .....                                                         | 39 |

## **1) REVISION HISTORY**

### **Rev. 1 — September 11, 2026**

First revision since the plan dated December 2024. 1475 Mount Fee Road removed — no longer an active WDC site. Site 1825 (Lot 6) split out into its own Site Specific Safety Plan. Contacts and emergency numbers updated to current. Legal citations updated to the Workers Compensation Act's current section numbers. Fire watch duration corrected to 60 minutes per CSA W117.2.

## **2) PROJECT SCOPE**

### **2.1 Project contacts**

- Prime Contractor — Whistler 2020 Development Corporation (WDC).
- Architect and design — Siegrist Architecture.
- Client — Whistler Housing Authority.
- Structural engineer — WHM Structural Engineers.
- Nemetz & Associates Ltd.
- Webster Engineering Ltd.
- Sureworks Engineering Ltd.
- Reinbolt Mechanical.
- Tom Barratt Architects Ltd.
- 4EA Building Science.

### **2.2 Project**

WDC is building Lot 3 Employee Housing (“The Walk”) in the Cheakamus Crossing subdivision, 1600 Mount Fee Road, Whistler, BC. Legal description: Lot 3, District Lot 8073, Group 1, New Westminster District, Plan EPP111931. Site area 91,244.80 sq ft (0.848 ha), site coverage 30.59%.

- Building 1 — a 5-storey wood-frame residential rental building, 105 units, over a 1-level below-grade parkade.
- Buildings 2, 3, 4 and 5 — four 2-storey wood-frame townhouse buildings, 5 units each — 20 townhomes in total.

This plan replaces the combined 1475/1600 plan used until 2026. 1475 Mount Fee Road was delivered in July 2026 and is no longer an active WDC site; it has been removed from this plan.

### **3) CONSTRUCTION PLAN AND SITE ACCESS**


1600 Mount Fee Road, Whistler, BC.

The site is secured per the posted site drawing, accessible only to authorized construction personnel who have completed the site orientation and are wearing the required PPE. Every life-safety procedure complies with the OHS Regulation and this Site Specific Safety Plan.

- Construction access is via Mount Fee Road.
- First aid room and site trailer are located at the WDC site trailer.
- Muster point: in front of the WDC site office.
- Fire extinguishers: two per level in Building 1, one per townhome, and in the parkade beside the stairwells and the main entrance.

The current site drawing, posted at the entrance and on the Safety Board, shows the boundary, access roads, parking, muster point, first aid station, washrooms, potable water, waste areas, and fire extinguisher locations. It is kept up to date as the site changes.

#### 4) SITE DRAWING PLANS

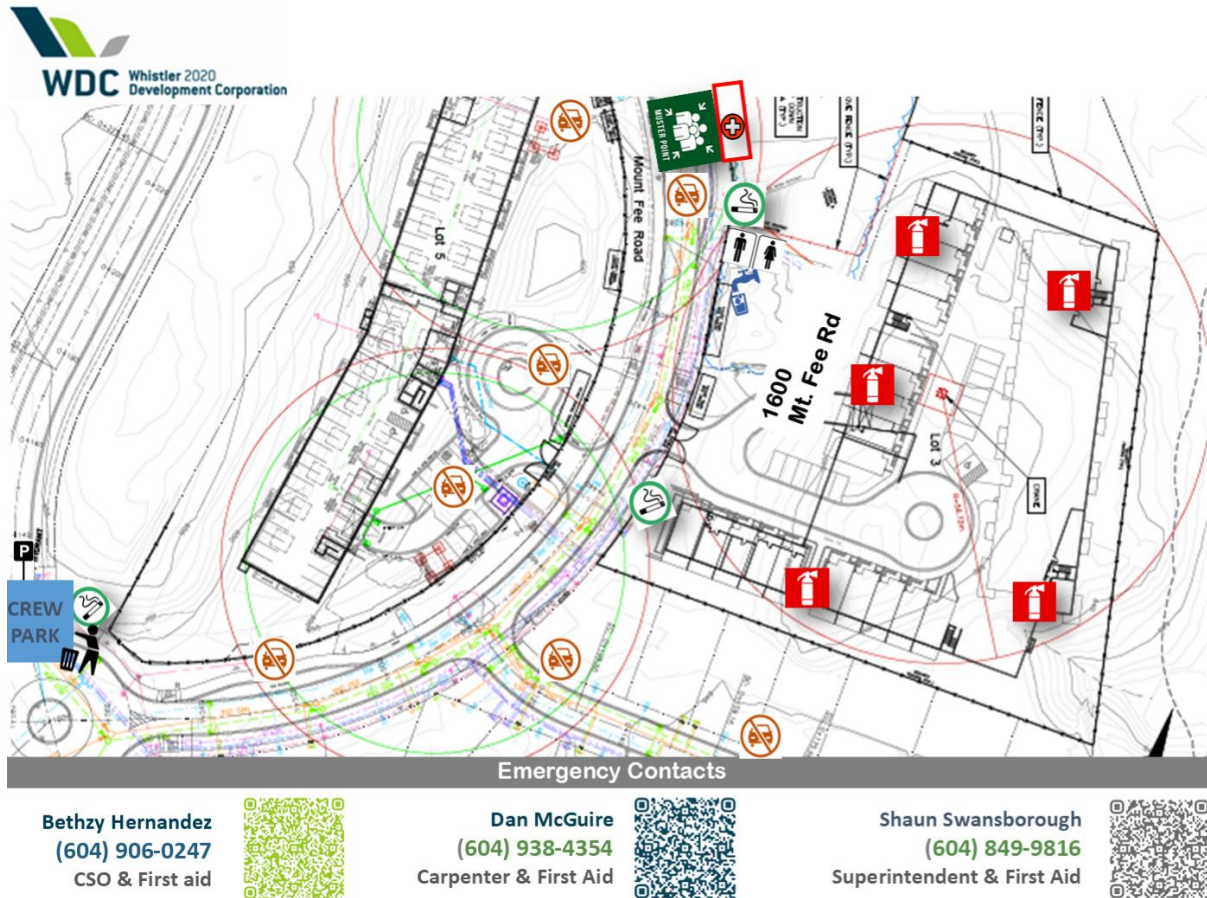

Site plan — Site 1600: muster point, first aid, fire extinguishers, no-parking zones, smoking areas and crew parking.

## **5) HEALTH AND SAFETY POLICY**

*Workers Compensation Act s.21*

Whistler 2020 Development Corporation (WDC) is committed to a safe and healthy workplace for its employees, its business partners, and everyone else who may be affected by its work. Our goal is simple: no one gets hurt and no one gets sick because of the work we do.

A safe project is a successful project. Management will make sure every reasonable precaution is taken to protect workers, in every situation.

Supervisors are accountable for the health and safety of the workers they supervise. At the same time, every worker must help protect their own health and safety and that of the people around them, by following the law, the regulations, and WDC's established practices. WDC commits to:

- Build awareness so employees actively help prevent incidents.
- Train employees so they have the tools and knowledge to work safely.
- Keep machinery and equipment safe, and require safe work practices for every piece of equipment.
- Aim for zero incidents and remove hazards before they cause harm.
- Comply with every applicable law and health and safety regulation, and keep raising our own standard.
- Work with our business partners to keep the workplace safe.

A safe workplace only happens through everyone's effort — every employee and every subcontractor. From the President to the newest worker, everyone shares this responsibility.

## **6) LEGAL REQUIREMENTS**

*Workers Compensation Act s.21-s.26 | OHS Regulation Part 5 (WHMIS)*

WDC must protect the health and safety of every employee, contractor and other person at the worksite. WDC must comply with the Workers Compensation Act, the WorkSafeBC Occupational Health and Safety (OHS) Regulation, and all other applicable provincial and federal law. WDC is legally responsible for carrying out this Health and Safety Program.

### **6.1 Regulatory framework**

- **Workers Compensation Act:** Sets up WorkSafeBC and governs occupational health and safety in BC. It applies to every employer and worker in the province, with limited exceptions.
- **OHS Regulation:** Sets the legal requirements every BC workplace must meet, to protect workers and anyone else present from work-related risk.
- **WHMIS 2015:** The federal system for any employer who imports, transports, uses, stores or produces controlled products. It has three parts: safety data sheets, labelling, and worker education.

### **6.2 Owner's duties — WCA s.25**

The owner of the workplace must keep it in a condition that protects the health and safety of everyone at or near it, and must give the employer or prime contractor everything the owner knows that is needed to identify and control hazards. Due diligence between owner and prime contractor covers: hazard identification and risk records, prime contractor orientation, Notice of Project requirements, health and safety requirements written into the contract, and inspections that confirm the prime contractor is meeting its legal duties.

### **6.3 Prime contractor's duties — WCA s.24**

As the prime contractor of a multiple-employer workplace, WDC must coordinate the health-and-safety activities of every contractor, worker and other person at the worksite, and must do everything reasonably practicable to keep the workplace in compliance with the Regulation. Every employer on site must give WDC the name of the person supervising their workers there.

### **6.4 Employer's duties — WCA s.21**

- Ensure the health and safety of its own workers and anyone else present where its work happens.
- Fix any hazardous condition without delay.
- Make sure workers know the hazards they are likely to face.
- Have health and safety policies and programs that meet the Regulation.
- Provide and maintain the required protective equipment.
- Give workers the information, instruction, training and supervision they need.
- Keep a copy of the Act and Regulation available on request, and post where to find it.
- Cooperate with the Joint Committee, the worker representative, WorkSafeBC, and its officers.

**6.5 WDC management's responsibilities**

- Build health and safety into project planning and budgeting.
- Provide the resources needed to meet health and safety goals.
- Tell contractors what WDC expects of them, in writing, before they start.
- Give contractors the applicable WorkSafeBC requirements and contract safety standards.
- Inspect projects regularly to confirm compliance.
- Review and improve the WDC Health and Safety Program on an ongoing basis.

**6.6 Superintendent's responsibilities**

The Superintendent takes the program from the office to the field. They:

- Run regular inspections, incident investigations and safety meetings, and see that corrective action actually gets taken.
- Supervise foremen and confirm they are taking immediate action on any safety deficiency.
- Coordinate the CSO's role with the foremen and the crews.
- Confirm every site-specific safe work procedure and emergency procedure is written, posted, and communicated.
- Coordinate the safety performance of every subcontractor and other person on site.
- Review every incident report for its real cause.

**6.7 Contractor's responsibilities**

Every contractor must have a health and safety program that meets or exceeds WDC's, and must:

- Show proof of current WorkSafeBC registration and good standing, before starting and before final payment.
- Take part in the pre-contract safety meeting and the site orientation.
- Keep audiometric tests, WHMIS training and certifications current for every employee.
- Run weekly toolbox meetings and give WDC the documentation.
- Come to the weekly site safety meeting.
- Provide their own PPE and safety devices.
- Provide their own site-specific safe work procedures and emergency procedures.
- Provide labels and SDS for any controlled product they bring, and give copies to the Superintendent or the CSO.
- Investigate any incident involving their employees and give WDC a copy of the investigation and the corrective actions.
- Tell WDC about any special hazardous work in advance, and cordon off the work area.

**6.8 First aid attendant's responsibilities**

WDC provides first aid services for this site during working hours. After hours, on weekends, on statutory holidays, and during the Christmas break, each contractor is responsible for its own workers' first aid coverage. The attendant:

- Holds a valid first aid certificate at the level the Regulation requires.
- Confirms first aid supplies and equipment meet the Regulation.
- Is available and easily reached on site. If off site, the Superintendent arranges coverage.
- Works with the CSO to keep first aid and transport procedures adequate, communicated and posted.
- Is in charge of an injured worker's care until relieved by someone more qualified.
- Keeps first aid treatment records and completes WorkSafeBC forms as needed.

## **7) SAFE WORK RULES**

*OHS Regulation Part 8 (PPE) | 4.19 impairment | 4.24-4.26 conduct | 4.27-4.31 violence | 4.39-4.42 housekeeping*

These rules give everyone on a WDC site clear direction for working safely. Following them is a condition of working on this site. Failure to follow them can mean corrective action, up to and including removal from site.

### **7.1 Visitors and site access**

- Only WDC employees, subcontracted workers, and people with genuine business on site may enter the work area. Minors are not permitted on site.
- The site boundary along vehicle and pedestrian routes is fenced to keep out unauthorized people.
- Visitors need a qualified escort and the right PPE. The host is responsible for the visitor and must make sure they know the site rules.
- Openings and other hazards are covered or clearly marked. Access and egress are safe, marked, and kept that way.

### **7.2 PPE and personal conduct**

- Report for work fit for duty — free of any impairment that could endanger yourself or others. No alcohol, no drugs, no impairment of any kind.
- Tell your supervisor if a medication could affect your ability to work safely.
- Wear CSA-approved protective footwear and headgear at all times.
- Wear hearing protection in posted areas; use it any time you want to.
- Wear eye protection appropriate to the task.
- Wear respiratory protection in posted areas or when the task requires it.
- Wear hand protection when the task requires it.
- Wear hi-vis clothing where required.
- Working 3 m (10 ft) or more above grade, or at a lower height with a higher risk of injury, requires the fall protection equipment and plan for that task.
- Working on, over or near water requires an approved flotation device.
- Wear clothing suited to the task. No loose or torn clothing, rings, watches, bracelets or dangling items near machinery. Long hair and beards must be restrained.
- Chainsaw work requires a face shield and chainsaw-rated leg protection.
- No horseplay, running or fighting.

### **7.3 Housekeeping, equipment and reporting**

- Keep your work area clean and help with site clean-up as directed.
- Only authorized, trained people operate mobile equipment, machinery, and power or hand tools.

- Operators of ROPS-equipped equipment wear the seat belt. Equipment is operated within its speed and load limits, with signals given, and no worker positions themselves between or under a load.
- Report every incident and injury, no matter how small, to your supervisor or the first aid attendant. Every incident is investigated.
- The first aid attendant has full authority over treatment of an injured worker.
- Report a discharged fire extinguisher immediately; it is recharged right away.
- Attend toolbox and safety meetings as required.
- Never remove or defeat a safety device, guard, barrier or sign unless the hazard it protects against has been eliminated.
- No working alone without an established check-in method, understood by both the worker and the person checking on them.
- Know the emergency signals and evacuation procedure for the site.
- Rigging is done only by a certified rigger.
- Scaffolding must meet OHS Regulation requirements for construction and materials.
- No repair work on machinery or equipment without proper lockout, unless the work is within an established safe practice.
- Identify, handle and store hazardous materials per WHMIS. Anyone handling a Transport of Dangerous Goods product needs the required certification.
- Gas cylinders are racked or secured upright, clearly labelled, and shut off at the tank at the end of the shift; welding hoses are drained before securing.
- No smoking except in the designated, posted area. No loud music on site.

#### **7.4 Violence, harassment and discrimination**

WDC has zero tolerance for improper conduct, violence, bullying, harassment or discrimination at the workplace or at any WDC event. Every worker, contractor and visitor shares the responsibility to keep the workplace free of it.

- If you feel safe doing so, address it directly: say the behaviour is unacceptable, stay calm, do not retaliate, and report it.
- If you are not comfortable stepping in, you must still report it — to your supervisor, the CSO, or the Superintendent.
- Report every incident and threat of violence, ongoing disturbing behaviour, and any physical condition connected to workplace violence.
- Every report is investigated. Anything that may be a criminal matter goes to the police.
- A worker injured or affected by a violent incident has the right to see a physician of their choice.

#### **7.5 Temporary buildings, sanitation and utilities**

- Temporary buildings, fencing and layout follow local permits and contractual requirements; drawings go to WDC management before erection.

- Buildings, water, sewer and electrical services are installed, grounded and maintained safely; heaters are indirect-fired or electric, properly installed and inspected.
- A fire extinguisher is installed at the entrance of every temporary building.
- Washrooms, change rooms and eating areas are cleaned daily; garbage is collected and removed.
- Potable water is tested at least twice a month.

#### **7.6 Cell phone use**

- Only authorized employees use cell phones during working hours, other than for emergencies.

## **8) SAFE WORK PROCEDURES**

A Safe Work Procedure (SWP) breaks a task into its steps to find the hazards and set out what prevents an incident: who provides what equipment, what happens if it isn't worn, and which rule or standard applies.

### **8.1 Access and egress**

- Areas of access and egress are well lit, kept clear of obstructions, snow, ice and slippery material, and sanded when needed.
- Overhead protection is provided where material could fall on a worker.
- Access above or below grade is by stairs, runway, ramp or ladder.
- Every shaft has access and egress by stairway, ladder or ladderway for its full depth, during construction and once complete.

### **8.2 Chain saws**

Chain saws were built for logging, so some construction workers find them unfamiliar. Anyone using one must be trained, at minimum, in:

- Wearing the PPE the manufacturer and the Regulation require: hard hat, gloves, face shield, chainsaw-rated leg protection, protective footwear.
- Fuelling in a well-ventilated area, with the saw off and cool, using an approved safety container with a spout or funnel.
- Starting, holding, carrying, storing and using the saw as the manufacturer directs, with the chain brake working and the chain sharp, tensioned and lubricated.
- Carrying with the bar guard on, the chain bar toward the back, and the motor off.
- Never cutting above shoulder height.
- Meeting CSA Standard Z62.1.
- Inspecting before use and tagging any defective saw "out of service".

### **8.3 Circular saws**

- Wear eye protection or a face shield; use respiratory protection where dust or vapour is created.
- Use the correct blade; disconnect power before adjusting or changing it.
- Confirm the retracting guard is fully down before setting the saw down.
- Use both hands. Keep cords clear of the cutting area.
- Check for obstructions that could cause kickback before cutting; secure stock when ripping.

### **8.4 Solvents and flammables**

- Use non-flammable solvents for general cleaning where possible.
- No hot work in an area where flammable liquids are in use.
- Store flammables and solvents in designated storage areas.

- Check the SDS for the specific hazard before use, and ventilate the area adequately.
- Wear the protective clothing and respiratory protection the task requires.
- Never leave solvent in an open tub — return it to a proper container.
- Anyone working with or near a controlled product must be WHMIS trained.

### **8.5 Compressed air**

- Never use compressed air to blow debris or clean clothing.
- Relieve the line pressure before disconnecting a hose or changing tools.
- Use quick-disconnect fittings with a safety chain or cable.
- Wear eye protection and a face shield; keep others clear of the area.
- Check hoses regularly for cuts, bulges or damage; repair or replace defective ones.
- Use a proper pressure regulator and relief device, and the correct hose for the tool.

### **8.6 Cutting and coring concrete or decking**

- A qualified person inspects the proposed work area before permission to cut or core is granted, checking for nearby electrical and mechanical services and reviewing the drawings.
- Identify the expected noise and vibration in advance and notify the area supervisors.
- Post a watchperson below the work area where possible, and clean up the area below and around the work immediately.
- Contain any water and protect equipment near or below the work.
- Make safe all work and floor openings when the task is done.

### **8.7 Defective tools**

Do not use a defective tool. Watch for: mushroomed chisel or wedge heads, split or cracked handles, chipped or broken bits, cracked or loose hammer heads, or bent, burred or rounded wrench jaws. Tag any defective tool "out of service" and report it.

### **8.8 Pneumatic, electric and cartridge-operated tools**

- **Pneumatic tools:** Check hose connections and pressure before use; secure the tool to the hose to prevent accidental disconnection.
- **Electric tools:** Double-insulated or properly grounded; inspect cords before use; use GFCI protection.
- **Cartridge-operated (powder-actuated) tools:** Trained and certified operators only, CSA-approved tool, opposite side of the work checked clear before firing, loaded just before use and never left loaded, a test shot fired in a safe zone, never pointed at anyone, stored in a locking box, never used in an explosive atmosphere, held at right angles to the surface, eye and hearing protection worn, and signs or barricades posted where the work is a hazard to others.

### **8.9 Propane and LPG**

- **Storage:** Cylinders upright, secured, clearly labelled, away from ignition sources.

- **Handling:** Choker-style nylon slings around the shell, never the lifting lugs; regulators removed before moving a tank; crane hooks fitted with a safety latch; a fire extinguisher on any vehicle or crane handling propane.
- **Leakages:** Shut off the source, ventilate, remove ignition sources, and evacuate if the leak cannot be controlled.
- **Transportation:** Upright, secured, ventilated vehicle.
- **Operation:** Never heat a tank to increase flow; use a proper regulator; hold containers upright when in use.
- **First aid:** Remove an affected person from the area, keep them warm and still; flush the eyes if liquid contacts them; get medical aid immediately.

### **8.10 Hot work — welding and cutting**

*OHS Regulation Part 12 | CSA W117.2 fire watch*

- Qualified, trained operators only.
- Clear flammable material from the area; keep an extinguisher on hand.
- Ventilate — welding produces fumes; use approved respirators when toxic gases can form from special alloys or coatings.
- Have all electrical welding equipment checked by a qualified person before use, and use protective screens where possible.
- For oxy-acetylene cutting: qualified, trained operator only; cylinders kept clear of the work and at least 5 m from open flame, stored upright; equipment fitted with flashback arresters or non-return valves; cylinders shut off at every break and at the end of the day; nothing lit left unattended.
- After hot work, thoroughly examine the area within a 5 m radius, including the other side of any wall or partition, for signs of fire.
- Fire watch is maintained during the work and for a minimum of 60 minutes after hot work stops, per CSA W117.2. No hot work is left unattended, including over a break.
- PPE for hot work: helmet, goggles, respirator and protective clothing as the task requires. Firefighting equipment and cooling water are kept near the work, and a second person acts as fire watch while the operator works.

### **8.11 WHMIS — hazardous products**

*OHS Regulation Part 5*

- Every employer must have a current safety data sheet (SDS) for every controlled product before workers handle it. If none is available yet, the product is held back until one is obtained; if it cannot be obtained, call the WorkSafeBC Prevention Information Line (604-276-3100).
- Train and educate workers so they understand the SDS and can work safely with the product.
- Keep SDS readily available on site — a file, binder or database every worker can access at any time. Reading one over the phone or radio does not count.

- No SDS may be more than three years old, or 90 days out of date after new hazard information appears.
- Every controlled product or its container must carry the proper supplier label at the time it enters the workplace. Labels are never removed, defaced or altered.
- A workplace label is applied when a product is decanted, when a supplier label is lost or illegible, or when WDC produces a controlled product on site. A workplace label states the product name, safe handling information, first aid, and where the SDS is kept.
- Every worker who works with or near a controlled product knows: the hazards of the product, how they are protected from them, what to do in an emergency involving it, and where to get more information.

| SDS section                 |
|-----------------------------|
| 1. Product Information      |
| 2. Hazardous Ingredients    |
| 3. Physical Data            |
| 4. Fire and Explosion Data  |
| 5. Reactivity Data          |
| 6. Toxicological Properties |
| 7. Preventive Measures      |
| 8. First Aid Measures       |
| 9. Preparation Information  |

| Class | Category                                                                                 |
|-------|------------------------------------------------------------------------------------------|
| A     | Compressed gas — aerosol cans, oxygen cylinders, fire extinguishers, propane containers  |
| B     | Flammable and combustible material — gasoline, solvents, methanol, diesel, paint thinner |
| C     | Oxidizing material — methyl ethyl ketone peroxide, benzoyl peroxide paste catalyst       |
| D-1   | Poisonous — immediate serious toxic effect (e.g. phenol solution, arsenic)               |
| D-2   | Poisonous — other toxic effects (e.g. styrene, fiberglass grinding dust)                 |
| D-3   | Biohazardous infectious material (e.g. blood, Hepatitis B)                               |
| E     | Corrosive — hydrochloric acid, sodium hydroxide, sulphuric acid                          |
| F     | Dangerously reactive — styrene resin, calcium carbide                                    |

- **Storage:** Keep incompatible materials apart — for example, oxidizers away from flammables — using distance, a physical barrier, or other non-reactive material.
- **Monitoring:** Exposure monitoring is required if control measures could fail with serious health risk, to confirm an exposure limit is not exceeded, or to check that a control is working.

## 8.12 Electrical work

### OHS Regulation Part 19

- Any alteration to a fixed electrical installation is done by a registered electrical worker.

- The Superintendent appoints a registered electrical worker to inspect and test any alteration or extension to the electrical system, and keeps a log of every inspection, test and repair.
- Portable and hand-held electric tools and temporary lighting run at their rated voltage.
- Distribution boards are securely locked, correctly connected, protected by earth leakage devices, and marked with warning signs.
- Flexible cables where they move in normal use; properly supported and never lying in water; armoured cable where damage is likely.
- Before installing or maintaining electrically driven machinery: pull the fuses or lock the isolating switch off, post a warning notice, and keep the means of reconnection with the supervisor doing the work. Post a spotter if the lockout could be defeated.
- Portable electric tools are logged and inspected by a qualified technician at least every 3 months.

### 8.13 Limits of approach — overhead power lines

*OHS Regulation 19.24.1, Table 19-1A*

Supervisors and workers must know the location of every electrical power source in the work area before starting, and the employer must confirm the voltage and the minimum approach distance with the power system owner. A pre-job (tailboard) meeting with a written record is required for work near energized high-voltage equipment.

| Voltage (phase to phase) | Minimum approach distance |
|--------------------------|---------------------------|
| Over 750 V to 75 kV      | 3 m (10 ft)               |
| Over 75 kV to 250 kV     | 4.5 m (15 ft)             |
| Over 250 kV to 550 kV    | 6 m (20 ft)               |

- The Superintendent notifies BC Hydro and obtains form 30M33 if the limit of approach cannot be maintained. A qualified watcher is required for work near a substation.

### 8.14 GFCI — temporary power protection

*OHS Regulation 19.15(1)*

- Portable electrical equipment and temporary lighting used outdoors, or in a wet or damp location, is protected by an approved Class A GFCI at the receptacle or on the circuit at the panel, unless another acceptable means of protection is used.
- A GFCI sits between the power source and any tool or device connected to it. Any tool not protected this way is tested and tagged instead.
- Supervisors provide the equipment (GFCI cords, adaptors, portable GFCIs, boxes, testers) and train workers on why and how it is used.

### 8.15 Ground disturbance, mobile equipment and site transport

- Spotters use the regulated WorkSafeBC signals and clear communication with equipment operators.

- Keep adequate lighting and good housekeeping around mobile equipment; stay clear of running lines and moving parts.
- Lock out equipment before performing maintenance.
- Material is not stacked or stored close to a slope edge or berm, and equipment is not operated near an edge where it could overstress the slope.
- Drivers and operators hold a current licence or certificate for the vehicle or plant they operate.
- Vehicles are maintained per the supplier's program; the driver or operator does basic daily checks, and a trained fitter handles regular service.
- Construction vehicles over 3 tonnes have a working reverse alarm, or a trained banksman directs them while reversing.
- No riding except in a proper passenger seat; seat belts are worn where fitted.
- Keep a 50 m following distance behind large vehicles like dump trucks.
- Wear hi-vis near roadside work; provide a barrier and a traffic control person.
- Use low gear on steep grades; shut off, gear-engage and brake unattended equipment; use wheel chocks on a slope; take extra care in wet weather.
- Cranes travel with the jib as low as possible, or stowed for road travel; a load travelling with the crane is tied back with the jib over the rear and the slew lock engaged.
- Keep site roads flat, clean, level and wide enough for vehicles to pass safely; plan routes around overhead lines, sloping ground and excavation edges; provide traffic control persons wherever site traffic crosses public roads or shares them with the public.

### **8.16 Cranes and rigging**

*OHS Regulation Part 14 (cranes), Part 15 (rigging)*

- Every crane on a WDC site meets the required safety standard, is well maintained, carries an identification number, and has a current test certificate available for inspection on request.
- Only a trained, certified operator runs a crane, and every lift is supervised. A mobile crane, tower crane or boom truck operator must hold a Board-approved operator certificate.
- Before lifting: walk around the crane for defects or obstructions, check overhead clearances, keep the cab clear, test the controls, and never exceed the rated load — add the weight of the rigging to the load.
- Confirm the ground under the outriggers is sound; try-lift before the full lift; lift gently, without a snatched start.
- If the operator does not have a clear view of the load throughout the lift, they act only on the signals of a qualified signaller.
- Rigging is in good condition, properly maintained and identified. All lifting gear except occasional-use gear is thoroughly examined every three months, and every chain, rope and item of lifting gear is marked with its safe working load. A wire rope with visible broken wires is not used.

- Only trained, competent workers rig or supervise lifting. A signaller and a tagline are used to control the load; nobody works or stands under a suspended load, or rides the hook or the load; a load is never left suspended unattended.
- If a crane collapses, overturns, or fails in any way, notify management immediately and treat it as a reportable dangerous occurrence — see Incident Reporting. Keep access and escape routes clear for emergency responders. Only experienced personnel plan the recovery, and rescue of a trapped person is supervised by emergency services.

### **8.17 Elevating work platforms**

- Only an operator trained and instructed on that specific machine may use it: its controls, daily inspection, working surface, rated load, alarms and emergency controls.
- A platform that is not working properly, or has damage to a critical component, is taken out of service until a qualified mechanic repairs it.
- Workers on the platform wear a harness and lanyard at all times.
- Never exceed the rated load; distribute it evenly; secure any material being lifted; never use a makeshift platform or bridge a gap with planking.
- Maintain three-point contact getting on or off the platform.
- Keep at least 3 m (10 ft) from overhead power lines unless the platform and the workers are qualified for live line work.
- Never drive in the raised position, and never move closer than 3 m (10 ft) to a hole, depression, trench or similar hazard while raised.
- Do not use in high winds, especially scissor lifts and boom-type devices; turn off power when parked in an enclosed area to prevent exhaust build-up.

### **8.18 Extension cords**

- Outdoor-rated, CSA-approved, 300 V, with an insulated ground conductor.
- Inspected before each use; protected from sharp edges, moving material and cutting flame.
- Routed so they are not a tripping or falling hazard.
- GFCI-protected in hazardous or damp locations.
- A defective cord is destroyed, or tagged and removed from site until repaired.

### **8.19 Forklifts**

- Operate only if trained; know the manufacturer's rated load and never exceed it.
- Inspect before use; keep forks low and speed down; forks flat when parked.
- Drive in reverse with bulky loads to avoid blind spots; keep forks seated and square when lifting; never move a damaged or improperly loaded pallet.
- No passengers, ever. Never leave the machine unattended with a raised load. Wear a seat belt.

**8.20 Grinding**

- Wear eye and hearing protection at all times.
- Keep the tool rest within 3 mm (1/8 in) of the wheel; replace the wheel if it cannot be kept that close, or if it is grooved or worn to an angle.
- Never exceed the manufacturer's rated speed for the wheel; the flange supporting it is no more than a third of its diameter.
- Grind on the face of the wheel, not the side. Do not stand directly in front of a wheel when it is first started.

**8.21 Housekeeping**

- Keep work areas clean and free of oil, grease and scrap.
- Clean up spills right away with the proper absorbent.
- Store oily rags in an approved fire-rated steel container.
- Keep walkways and stairs clear of snow, ice and obstacles.
- Watch for hazards such as nails and sharp scrap.
- Remove nails or sharp objects from lumber before it is stacked.
- Daily clean-up is assigned to everyone, not left to one person.
- Store material by size and type in neat, stable piles, clear of power lines. Bagged material is cross-piled and stacked no higher than roughly 10 units; barrels are stacked upright with platforms between layers; no one climbs on stacked material.
- Keep stockpiles clear of fire access, extinguishers and fire doors.
- Use cutters or snips to break metal bands, with care.

**8.22 Scaffolding**

*OHS Regulation Part 13 — figures carried over unchanged from the prior version of this plan*

- Erection and dismantling are supervised by a competent, experienced worker.
- A worker erecting or dismantling a scaffold over 2.4 m (8 ft) high is tied off with a full body harness and shock-absorbing lanyard.
- Scaffolds have every brace, pin, jack, base plate and fitting the manufacturer requires, are braced horizontally and vertically, and are tied into the building at intervals not exceeding three times the scaffold's shortest side, or guyed where they cannot be tied in.
- Guardrails — top rail, mid-rail and toe board — are fitted; platforms are at least 46 cm (18 in) wide and fully planked over 2.4 m (8 ft) high.
- Planks overhang their support by 15-30 cm (6-12 in), are securely fastened, and are sound — free of loose knots, splits or rot.
- Access is by a proper ladder; a vertical ladder over 3 m (10 ft) has stand-off brackets and a fall protection device or safety cage.
- A frame scaffold over 15 m (50 ft), or a tube-and-clamp scaffold over 10 m (30 ft), is engineered and built to that design.

- Remove ice, snow, oil and grease from the platform, and sand it.
- Rolling scaffold wheels have brakes and are securely pinned to the frame.

### **8.23 Lockout and tagging**

*OHS Regulation Part 10*

- Before any work, review the drawings of the system being de-energized to identify every switch, source, control and interlock that must be isolated, and confirm this with the client or owner if required.
- De-energize or de-activate the equipment by locking out, physically disconnecting, or otherwise making it inoperable, then test it with a CSA-rated potential test indicator, checking any interlocked or dependent system as well.
- Each worker places their own safety lock on the disconnect and keeps the key while the lock is in place. A lockout bar lets multiple workers or trades each add their own lock.
- Each lock carries a durable tag showing why the equipment was disconnected, who disconnected it and their employer, and the date.
- A de-energized electrical system is discharged and temporarily grounded until the work is complete.
- Keep a record of every device locked out, so everything can be reactivated once the work is done. Post signs stating the system is not to be energized and that the locks, tags and grounds are not to be touched.
- Anyone testing electrical equipment removes watches, rings and other conductive jewellery, and wears shock-resistant footwear and safety glasses.
- Locks and tags are removed only once the supervisor confirms the work is complete and it is safe to re-energize. On a shift change, the outgoing worker's lock is removed only after the incoming worker has placed their own.
- Where nearby equipment cannot be locked out but poses a hazard, a marked safety zone or physical barrier is set up instead.
- Locks and tags are checked daily, at minimum before work starts each day.

### **8.24 Permit to work**

A Permit-to-Work is required for hazardous work such as: entry into a confined space; work on plant or pipe that held flammable, toxic or corrosive material; work in a high fire-risk area; work on machinery or certain electrical equipment; or any work where an accidental operation of a control, switch or valve could endanger someone.

- The authorized person issues the permit: they run the area, confirm isolations, tests and access equipment are ready, and brief the qualified person receiving the permit.
- The qualified person receives the permit, takes charge of the work, and briefs everyone under them on its conditions. The person who issues a permit is never the same person who receives it.

## **8.25 Fall protection program**

*OHS Regulation 11.2 (fall protection from 3 m) and 11.3 (written plan from 7.5 m with no permanent guardrails)*

- **Guardrails:** Top rail at about 1.07 m (42 in), mid-rail at about half that height, and a toe board where tools or material could fall through. If a guardrail must be removed temporarily, another fall protection system takes its place until it is put back.
- **Fall restraint:** A full body harness, life-line and rope grab that keeps the worker from reaching the edge, used when a guardrail is not practicable. Anchor points provide at least 3.5 kN (800 lb). Workers are trained and fit-tested, equipment is inspected before each shift, and the life-line reaches within 3 m (10 ft) of the ground or landing.
- **Fall arrest:** Used when restraint is not practicable. Requires a written, site-specific Fall Protection Work Plan covering the fall hazard, the system used, the anchor point (rated at least 22 kN / 5,000 lb), the assembly/inspection/use/disassembly procedure, the training required, and the rescue procedure. Anchor points are chosen to reduce free-fall distance, avoid swinging into a structure, and keep the fall path clear.
- **Control zone:** Used only when guardrails, restraint and arrest are all impracticable, the surface slope is under 4:12, the work is not on a skeletal structure or scaffold erection/removal, and a safety monitor is provided. The zone is at least 2 m (6.5 ft) from the edge, marked with stanchions and flagging between 1.0 and 1.15 m (40-45 in) high. The safety monitor is trained for the role, present at all times, has full authority over fall prevention, has no other duties, keeps a clear view and voice contact with the crew, is easily identified (hi-vis vest), and watches no more than 8 workers by name.
- **Rescue:** Every fall protection plan includes a rescue procedure, since a worker suspended in a harness needs help fast. Where a worker performing fall-protected work is alone, another contractor or the building owner's crew checks on them regularly, an air horn is used to signal an emergency, or a second person works alongside them.
- A copy of the Fall Protection Work Plan for the task stays on site for workers to review.

## **9) LADDERS — LADDER SAFETY PROGRAM**

*OHS Regulation 13.3 (inspection), 13.5(2) (placement), 13.6(2) (loads)*

Ladder misuse causes a large share of construction injuries. WDC maintains a Ladder Safety Program because of that risk.

### **9.1 Fall protection with ladders**

Fall protection is not mandatory just for using a ladder. The exception is an extension ladder where three-point contact cannot be kept — in that case, use a harness and tie off. Use fall protection any time the situation calls for it.

### **9.2 Responsibilities**

- Supervisors run monthly ladder-safety toolbox training, train new employees, and provide the right ladder for the job.
- Employees use the ladder provided, inspect it for structural defects, and tag a defective ladder "DO NOT USE" and report it.
- Superintendents are told right away if the correct ladder is not available — the ladder is never altered to make do.

### **9.3 Access, loads and structure**

- A break in elevation of 48 cm (19 in) or more, without a ramp, runway or slope, requires a ladder or stairway. The only point of access between levels is kept clear.
- A ladder must not be loaded beyond the manufacturer's rated capacity.
- A stepladder has a working spreader or locking device to hold it open. Wood ladders are not coated, other than labels and light marking paint. A ladder used near exposed energized equipment has non-conductive rails. A defective ladder is tagged "DO NOT USE" and removed from service immediately — single-rail ladders are never used.

### **9.4 Use**

- Maintain three-point contact — both feet and one hand — at all times on an extension ladder.
- Use a ladder for access; use a platform, scaffold or lift to do the actual work where one is available.
- Use a ladder only for its designed purpose. Never climb the rear cross-braces of a stepladder, and never stand on its top two steps.
- Face the ladder going up or down; never carry a load that could throw off your balance.
- Never tie two ladders together to make a longer one, unless designed for it.

### **9.5 Placement**

- Place on a stable, level surface, or secure it. On a slippery surface, secure it or fit slip-resistant feet, and take extra care regardless.
- Set the base out one-quarter of the ladder's working height from the wall — an angle of about 75° from horizontal (roughly a 4:1 ratio).

- In a passageway, doorway or driveway, secure the ladder or barricade it against traffic.
- An extension ladder extends at least 1 m (3 ft) above the landing, and is tied off and secured there.

#### **9.6 Maintenance and training**

- Keep ladders free of oil, grease or other slip hazards; inspect regularly and after anything that could affect safe use.
- WDC does not repair ladders on site — a defective one goes to a certified service provider.
- Keep the area at the top and bottom of a ladder clear.
- Monthly toolbox training covers: fall hazards in the work area, correct construction/use/placement/handling, what is never done on a ladder, and the ladder's maximum rated load.

## **10) ORIENTATION AND TRAINING**

*OHS Regulation 3.22-3.25 young and new workers | Part 5 WHMIS*

No one works on this site without a WDC site orientation — this applies even to a worker who already has their own company's orientation.

### **10.1 Who must be oriented**

- Every new worker, before starting work.
- Every worker returning after the hazards or the site have changed.
- Every worker moving to an area with different hazards.
- Every visitor, with the shorter visitor orientation.

### **10.2 How it is done**

- Orientation is available in digital format and in paper format.
- Every orientation is recorded and kept in the WDC daily log. The worker or visitor gets the current site sticker (black background, Site 1600) for their hard hat before starting work.

### **10.3 What the orientation covers**

- Who to contact — the CSO, the Superintendent, and the worker's own supervisor.
- The worker's right to know, to participate, and to refuse unsafe work.
- Site rules, PPE, and the hazards specific to this site.
- Where first aid is and how to call the attendant.
- The WDC Emergency Response Plan — alarm signals, evacuation and muster point.
- The permits used on this site — Hot Work, Fall Protection, Silica — and when each is required.
- WHMIS — labels and how to find an SDS.

### **10.4 Training and certificates**

Every employer must be able to show, on request, the current certificates for the work its crew does — fall protection, aerial and elevating platforms, forklift and telehandler, crane and rigging, first aid, and WHMIS. WDC keeps a log of the tickets seen.

## 11) SITE-SPECIFIC HAZARDS AND CONTROLS

*Workers Compensation Act s.21 | OHS Regulation 3.5-3.9*

Hazards specific to this site, in addition to the Safe Work Rules and Safe Work Procedures above.

- **Falling from height** Guardrails stay up. If you have to take one down, you tie off first and you put it back. From 10 ft up you need fall protection. A written plan only if you could fall 25 ft or more and there are no permanent guardrails.
- **Something falling on you** Tape off the area below overhead work and put up a sign. Look down before you start. Use tool lanyards. Never leave windows, doors or drywall leaning — strap them or lay them flat.
- **Fire** No hot work without a Hot Work Permit. Clear or cover the combustibles. Keep a hose or extinguisher right there. Fire watch during the work and 60 minutes after. Before any break: propane off, torch on its stand, hand the fire watch to a person — never just walk away.
- **Crane and mobile equipment** Certified operators only. Check the machine before the shift. Make eye contact with the operator before you get close. No load passes over anyone. Where two cranes or pumps share a zone, the daily Overlapping Zone form gets signed.
- **Dust and silica** Score and snap drywall by hand. Power tools only with HEPA extraction. Never dry sweep and never use compressed air. Wet clean at the end of the shift. P100 respirator and safety glasses.
- **Chemicals** Every container needs its label. The SDS is on the QR code at the Safety Board and the Lock Room. Do not use a product you have not been trained on.
- **Electrical** GFCI on all temporary power. Cords out of the water and out of the walkway. Keep panels clear. Lock out before working on anything live.
- **Trips and mess** Stairs, hallways, exits and extinguishers stay clear. Clean as you go. Delivery rooms are drop-off only — move the material to the suite the same day, two hours maximum.
- **Wildlife and weather** Food waste goes in the food waste bin in the Crew Parkade (Lot 6). Everything else you take with you. The sprinklers by the forest run morning and end of day. Clear snow and ice from the walkways.

## 12) WDC EMERGENCY RESPONSE PLAN

*OHS Regulation 4.13-4.16*

This section is the WDC Emergency Response Plan for this site — it does not sit in a separate document. It matches the WDC Emergency Procedures poster posted at the site entrance and on the Safety Board, and the poster that was provided to WorkSafeBC.

### 12.1 Alarm signals

| Signal                                  | Means             |
|-----------------------------------------|-------------------|
| One (1) long blast, at least 10 seconds | EVACUATE the site |
| Three (3) short blasts                  | FIRST AID NEEDED  |

Do not shorten the alarm signal.

### 12.2 Fire

- Evacuate the site. Leave tools and work in place — do not stop to collect belongings. Supervisors check toilets and other confined areas for stragglers — ensure no danger.
- Sound the alarm — one long blast, minimum 10 seconds.
- Call 911. Give the address (1600 Mount Fee Road, Whistler, BC), your name, and the nature of the fire.
- Go to the muster point: in front of the WDC site office. Report to your supervisor for a head count.
- Wait for the all clear. Do not re-enter the evacuated area until directed by the Superintendent or the Fire Department.
- Do not use a portable extinguisher or fire suppression equipment unless you are trained, it is safe to do so, and the fire is small enough to be controlled without personal risk.

### 12.3 Injury

- Call the first aid attendant — three short blasts.
- Make the area safe. Do not put yourself in danger.
- Get the first aid attendant. The attendant assesses the scene and the worker's condition, then treats the worker per standard protocol.
- Call 911 if the injury is serious. Give: the address (1600 Mount Fee Road, Whistler, BC), the worker's gender, age, present condition, and the nature of the injury if known.
- Guide emergency services. A helper goes to the site entrance to direct the ambulance to the worker's location. Once the attendant arrives, the worker is transferred to their care.
- An authorized WDC employee notifies the owner's representative of the event.

### 12.4 Site-wide evacuation

For a fire, earthquake, forest fire, structural collapse, or any other event requiring the whole site to evacuate:

- Direct everyone to evacuate the work area immediately.
- Sound the alarm — one long blast.
- Go to the muster point and complete a head count. Report anyone not accounted for to the Superintendent.
- The Superintendent decides immediately whether outside assistance is needed, and if so, has a helper call 911 with: WDC's name, the site address, where a guide will meet the ambulance, and the nature and number of injuries.
- Do not re-enter the evacuated area until the Superintendent says it is safe.

### **12.5 Spill response**

- Ensure safety first — do not put yourself at risk.
- Stop the flow, where it is safe to do so.
- Contain the spill.
- Report it to the CSO or Superintendent.
- Secure the area and clean it up.
- Report externally where required — see the reporting table below. If there is any doubt about whether a spill must be reported, report it.

| Substance                | Amount                             | Reportable externally                             |
|--------------------------|------------------------------------|---------------------------------------------------|
| Oils                     | Over 100 L, or any amount in water | Provincial Emergency Program (PEP) 1-800-663-3456 |
| Special wastes           | Any amount                         | Report internally to the Superintendent           |
| Oil with over 50 ppm PCB | Over 1 L                           | PEP                                               |
| Corrosives               | Over 5 kg                          | PEP                                               |
| Hazardous material       | Over 5 L                           | PEP                                               |

### 13) EMERGENCY CALL-OUT NUMBERS

Contractors provide WDC with business and after-hours contact numbers for their key personnel, kept current, including subcontractors.

When the CSO is off site, Shaun Swansborough covers new-worker site orientations, safety walks, and the daily headcount. The daily headcount also asks each foreman whether a new worker is on site that day.

| Name               | Role                                                                   | Phone        |
|--------------------|------------------------------------------------------------------------|--------------|
| Bethzy Hernandez   | CSO & First Aid Attendant                                              | 604-906-0247 |
| Shaun Swansborough | Superintendent & First Aid Attendant                                   | 604-849-9816 |
| Dan McGuire        | Carpenter, First Aid Attendant & Worker Health & Safety Representative | 604-938-4354 |
| Robert Laslett     | VP Construction                                                        | 604-938-4278 |

| Contact                                | Detail                                | Phone          |
|----------------------------------------|---------------------------------------|----------------|
| Emergency                              | Fire / Police / Ambulance             | 911            |
| Whistler Health Care Centre            | 4380 Lorimer Rd, Whistler, BC V8E 1A7 | 604-932-4911   |
| Squamish General Hospital              | 38140 Behrner Dr, Squamish, BC        | 604-892-5211   |
| WorkSafeBC                             | Report a serious incident (24 hours)  | 1-888-621-7233 |
| WorkSafeBC Prevention Information Line |                                       | 604-276-3100   |
| BC Hydro                               | Power outages and emergencies         | 1-888-769-3766 |
| FortisBC                               | Gas leaks and odours                  | 1-800-663-9911 |
| Provincial Emergency Program (PEP)     | Spill reporting                       | 1-800-663-3456 |
| Department of Fisheries and Oceans     |                                       | 604-666-3500   |
| Environment Canada                     | Oil or chemical spill reporting       | 604-666-6100   |
| Poison Control Centre (BC)             |                                       | 1-800-567-8911 |
| Call Before You Dig                    |                                       | 1-800-474-6886 |
| Forest Fire Reporting                  |                                       | 1-800-663-5555 |
| Conservation Officer Service           | Wildlife on site                      | 1-877-952-7277 |

## **14) WATER INTRUSION PREVENTION AND RESPONSE PLAN**

This is WDC's plan to prevent water intrusion during construction and to respond quickly when it happens, to protect the building and reduce the risk of mould. Every water intrusion event is different and is assessed on its own.

- Report every water intrusion and every sign of mould to site supervision as soon as it is found.
- WDC's project management team — Robert Laslett (VP Construction) and Shaun Swansborough (Superintendent) — is responsible for this plan. Direct questions to them.

### **14.1 Weather monitoring**

The weather forecast is watched to plan deliveries and construction activity around it. Before forecast bad weather, including weekends and holidays, a member of the project team walks the site to confirm temporary protection is in place and enough people are arranged to respond. After bad weather, the Superintendent or a designate inspects the site for water intrusion or damage. Any intrusion found is documented, tracked until resolved, and the project team is told immediately.

### **14.2 Temporary protection, by phase**

- **Phase 1** — Excavation and shoring: dewatering pumps and silt bags move standing water into the municipal storm system per the approved stormwater management plan; the excavation is sloped to a controlled drainage point away from the work area.
- **Phase 2** — Main floor slab and parkade: snow is cleared so melt runs off site or into the storm system; the slab is graded to design slope; temporary pumps or drains remove water until floor drains are in.
- **Phase 3** — Superstructure and interior fit-out: moisture-sensitive material is sequenced to avoid long storage on site, inspected on delivery, protected from weather, and elevated and covered when stored; interior partitions are checked for moisture and mould before they are closed in; building penetrations near stored material are sealed at the end of the day; wet porous material is dried and inspected before it is installed; sub-floors are cleaned and dried before flooring goes down.
- **Phase 4** — Mechanical and electrical systems: rough-ins are inspected and signed off before pressure testing; the testing contractor keeps shop vacuums and brooms on hand; hoses are inspected, kept clear of traffic, and free of sharp bends; sump pumps, floor and roof drains are made operational as early as possible and marked on a plan; supervisors are shown the main shut-off valves; flow and tamper alarms are installed as soon as practical; water is shut off at the end of every shift where possible.

### **14.3 Being ready to respond**

Water intrusion equipment — wet shop vacuum, brooms, squeegees, rags, puddle pumps — is kept on site. Each contractor is expected to have its own water-rated equipment to clean up its own spills.

**14.4 If it happens**

- Stop the source of the water as quickly as possible.
- Restrict access to the affected area.
- Assess the category and extent of the intrusion, and document it — the structure, the systems, and the contents affected.
- Check adjoining rooms and equipment that may need extra protection.
- Notify the owner and any affected subtrade.
- Start clean-up. Use only GFCI-protected electrical equipment.
- Move furnishings or salvageable material out of the affected area.
- Set up drying equipment (fans, dehumidifiers, forced ventilation vented outside — never a combustion heater for drying) and confirm it is working.

Wet material is dried before it is installed or covered. Even material dried within 48 hours may already have mould growth — professional testing can be arranged at WDC's discretion before the area is closed in.

## 15) CRITICAL LIFT PLAN

This is the procedure for every critical lift on this site. Part A covers planned lifts of materials and equipment. Part B covers the extreme emergency of assisting first responders to rescue an injured worker. Safety is everyone's job. No exceptions.

### 15.1 Part A — Standard critical lifts

A lift is CRITICAL if it meets any of these:

- The load is over 80% of the crane's or telehandler's rated capacity.
- The lift path crosses an active work area, a public road, or an occupied building.
- It is a tandem lift — two or more cranes or telehandlers lifting one load.
- It lifts personnel in a man basket.
- The rigging is complex, or has multiple attachment points.
- Conditions are poor — high winds or low visibility.
- The Site Supervisor or the operator judges the lift complex.

### 15.2 On-site plan (Phase 1) — every critical lift

- **Pre-lift meeting:** Pre-lift meeting: the whole lift team — Supervisor, Operator, Rigger, Signaller — meets to go over the plan, the hazards, and the emergency actions.
- **Inspection:** Inspection: the operator inspects the crane or telehandler; the rigger inspects all rigging hardware.
- **Secure the area:** Secure the area: mark a No-Go Zone under the entire lift path.
- **The lift:** The lift: a test lift, check the rigging, then proceed slowly with clear communication.
- **After the lift:** After the lift: land the load safely and hold a post-lift review.

### 15.3 Formal written plan (Phase 2) — highly complex lifts

A formal written lift plan, prepared in advance by a qualified person (e.g. an engineer), is required when:

- The load exceeds 90% of the crane's capacity.
- It is a tandem lift with two or more cranes.
- The lift crosses critical structures or energized power lines.

This written plan includes detailed drawings, calculations, and a step-by-step sequence, and the whole team reviews it before the lift.

### 15.4 Critical Lift Permit — completed by the Site Supervisor before any standard critical lift

| Field         | Detail |
|---------------|--------|
| Date          |        |
| Lift location |        |

| Field                 | Detail |
|-----------------------|--------|
| Description of load   |        |
| Load weight (lbs/kg)  |        |
| Equipment to be used  |        |
| Lift path — from / to |        |

| Safety checklist                                   | Confirmed |
|----------------------------------------------------|-----------|
| Pre-lift meeting completed                         |           |
| Formal Lift Plan (Phase 2) reviewed, if it applies |           |
| All team members identified                        |           |
| Crane / telehandler inspected                      |           |
| All rigging inspected                              |           |
| Load chart reviewed and capacity confirmed         |           |
| No-Go Zone secured                                 |           |
| Communication signals reviewed                     |           |
| Weather conditions acceptable                      |           |

| Role            | Name | Signature |
|-----------------|------|-----------|
| Site Supervisor |      |           |
| Operator        |      |           |
| Rigger          |      |           |
| Signaller       |      |           |

### 15.5 Part B — Critical lift for emergency rescue

This part covers preparing for, and assisting emergency services with, rescuing an injured worker from a hard-to-reach location using a crane. WDC's role is to support emergency services, not replace them — we prepare the patient and the equipment so that trained first responders can perform a safe, rapid rescue.

### 15.6 Step 1 — immediate response and the 911 call

- **First aid attendant:** First aid attendant: reach the patient, assess, and give first aid — focus on keeping them stable in the position they were found.
- **Site Supervisor:** Site Supervisor: call 911. State your name and the address (1600 Mount Fee Road). Report a serious injury and that a crane-assisted rescue may be needed.

### **15.7 Step 2 — prepare the area and equipment**

- **Clear the area:** Clear a large, safe landing zone for the rescue and a clear path for paramedics.
- **Prepare the litter:** The rigger brings the rescue litter and rigging to the scene, ready for inspection by the fire crew.
- **Position the crane:** The operator moves the crane or telehandler to a safe standby position — not yet connected to the litter.

### **15.8 Step 3 — the huddle**

The team huddles to plan the potential lift path. This information goes to the Fire Captain when they arrive.

### **15.9 When fire or ambulance arrives**

- **Transfer of command:** The Site Supervisor hands control of the scene to the arriving Fire Captain or lead Paramedic.
- **Briefing:** The Site Supervisor and first aid attendant brief the Fire Captain on the patient's condition and the preparations made.
- **Packaging the patient:** The first aid attendant assists the professional rescuers with securing the patient in the rescue litter, under their direction.
- **Performing the lift:** The lift happens only under the direct command of the Emergency Services lead — the crane operator takes instructions from their designated signaller.

## **16) WORKSAFEBC FIRST AID REQUIREMENTS**

*OHS Regulation 3.14-3.21 occupational first aid | 3.16 assessment and prompt transport | 3.17 written procedures | 3.19 records (3 years) | Schedule 3-A*

Every BC employer must prepare a written first aid assessment for each of its workplaces. WDC's assessment for this site sets the number and level of first aid attendants, the equipment required, and how an injured worker gets to medical treatment. It is reviewed at least every 12 months, or sooner if the number of workers, the hazards, or access to the site changes.

The assessment is based on: the number of workers on the largest shift, the hazard rating of the work, and whether the site is remote or less accessible to BC Emergency Health Services. It is kept on file with this plan and is available to WorkSafeBC, to every employer on site, and to any worker who asks.

- Transportation to medical treatment may be a taxi, a company vehicle, or an ambulance, depending on the worker's condition. The written first aid procedures for this site say exactly how a call for help is made, who meets the ambulance, and the route to the nearest hospital.