

NCR 5XXX SSB Manual

BASE24-atm[®]



© 2007 by ACI Worldwide, Inc. All rights reserved.

All information contained in this documentation, as well as the software described in it, is confidential and proprietary to ACI Worldwide, Inc., or one of its subsidiaries, is subject to a license agreement, and may be used or copied only in accordance with the terms of such license. Except as permitted by such license, no part of this documentation may be reproduced, stored in a retrieval system, or transmitted in any form or by electronic, mechanical, recording, or any other means, without the prior written permission of ACI Worldwide, Inc., or one of its subsidiaries.

ACI, ACI Worldwide, and the ACI product names used in this documentation are trademarks or registered trademarks of ACI Worldwide, Inc., or one of its subsidiaries.

Other companies' trademarks, service marks, or registered trademarks and service marks are trademarks, service marks, or registered trademarks and service marks of their respective companies.

Contents

Conventions Used in this Manual	ix
Preface	xiii
1: Introduction	1-1
NCR Hardware Options	1-2
Wincor Nixdorf Hardware Options	1-4
SSB Product Modules	1-6
SSB Device Handler Extension	1-7
Additional Transaction Support	1-8
Check Imaging	1-8
Configurable Zone Verification	1-9
Courtesy Amount Verification	1-9
MICR Processing	1-9
Coin Dispensing	1-9
Document Bin Sorting	1-10
Check Proof Listing	1-10
Check Processing Module	1-10
Bunch Note Acceptor	1-10
SSB Enhanced ATM Application	1-11
Transaction Time Windows	1-11
Split Deposit Transaction	1-11
Configurable Bill Dispensing	1-12
Configurable Depository Print	1-12
Statement Print Host Communications	1-13
Super Teller	1-13
SSB Enhanced Check Processing Application	1-14
Enhanced Check Authorization	1-14
Enhanced MICR Processing and Manipulation	1-15
Check-Cashing Cards	1-15

SSB Enhanced Check Processing Application <i>continued</i>	
Registered Check Processing	1-15
Stop Payment Verification	1-16
Preapproved and Predeclined Check Processing	1-16
Enhanced Document Bin Sorting	1-16
2: BASE24-atm SSB Device Handler Extension	2-1
Additional Transaction Support	2-2
Envelope Deposit with Cash Back Transaction	2-2
Check Deposit with Cash Back Transaction	2-3
Check Cashing Transaction	2-4
Check Deposit Transaction	2-4
Check Imaging	2-5
Configurable Zone Verification	2-6
Courtesy Amount Verification	2-7
MICR Processing	2-8
Coin Dispensing	2-9
Document Bin Sorting	2-10
Check Proof Listing	2-11
SSB Device Handler Extension Configuration	2-13
Modifying the Acquirer Processing Code File	2-15
Modifying the BASE24-atm Terminal Data Files	2-16
Modifying the Logical Network Configuration File	2-30
Modifying the N50NAMS File	2-31
Modifying the Receipt File	2-33
Modifying the SSDHNAMS File	2-47
Modifying the Terminal Receipt File	2-48
Modifying the Token File	2-50
3: BASE24-atm SSB Enhanced ATM Application	3-1
Transaction Time Windows	3-2
Split Deposit Transaction	3-5

BASE24-atm SSB Enhanced ATM Application *continued*

Configurable Bill Dispensing	3-6
Least Bills Method	3-6
Configurable Dispense Algorithm Method.	3-6
Thresholds Method	3-7
Configurable Depository Print	3-13
Statement Print Host Communications.	3-15
Super Teller.	3-16
Super Teller Card Differences	3-16
Super Teller Transaction Flow	3-18
Super Teller State Path	3-19
SSB Enhanced ATM Application Configuration	3-21
Modifying the Acquirer Processing Code File	3-24
Modifying the BASE24-atm Terminal Data Files	3-25
Modifying the Card Prefix File.	3-33
Modifying the Cardholder Authorization File	3-36
Modifying the Host Configuration File	3-41
Modifying the Enhanced Interchange Configuration File	3-44
Modifying the Institution Definition File	3-45
Modifying the Issuer Processing Code File	3-46
Modifying the Logical Network Configuration File.	3-47
Modifying the Negative Card File	3-48
Modifying the Terminal Receipt File	3-50
Modifying the Receipt File.	3-52
Modifying the SSDHNAMS File	3-60
Modifying the Token File.	3-61
 4: BASE24-atm SSB Enhanced Check Processing Application	 4-1
Enhanced Check Authorization	4-2
Check Transaction Limits and Totals	4-3
Negative Authorization with Usage Accumulation Method.	4-8
Positive and Positive Balance Authorization Methods.	4-12
Super Teller Card Impacts	4-18
Enhanced MICR Processing and Manipulation	4-19
Processing MICR Information	4-19
Manipulating MICR Information	4-20

Enhanced MICR Processing and Manipulation <i>continued</i>	
Formatting MICR Information	4-21
Using MICR Information	4-21
Check-Cashing Cards	4-22
Registered Check Processing	4-23
Stop Payment Verification	4-24
Preapproved and Predeclined Check Processing	4-25
Enhanced Document Bin Sorting	4-27
Check-Related Transaction Response	4-27
Device Handler Processing Overview	4-28
SSB Enhanced Check Processing Application Configuration	4-29
Modifying the Account Routing File	4-31
Modifying the BASE24-atm Terminal Data Files (ATD)	4-34
Modifying the Bin Sort File	4-38
Modifying the Card Prefix File	4-41
Modifying the Cardholder Authorization File	4-52
Modifying the Check Status File	4-64
Modifying the Corporate Check File	4-68
Modifying the Institution Definition File	4-71
Modifying the Logical Network Configuration File	4-76
Modifying the Negative Card File	4-77
Modifying the Receipt File	4-79
Modifying the Stop Payment File	4-89
Modifying the Terminal Receipt File	4-91
Modifying the Token File	4-91
Viewing the Usage Accumulation File	4-93
UAF Screen 1	4-93
UAF Screen 4	4-94
UAF Screen 10	4-95
5: Configuring NCR-Specific Files	5-1
Document Definition File and Image Feature File	5-2
Image Zones	5-2
Read Zones	5-3
CAV Zone	5-3

Document Definition File and Image Feature File <i>continued</i>	
Verify Zones	5-3
Write or Write and Confirm Zones	5-4
NCR 5XXX Configuration File (CNFG5070)	5-5
NCR 5XXX Configuration File Menu	5-5
Enhanced Configuration Parameters Screen	5-8
State Table Data Menu	5-9
Screen Data Format Screen	5-48
Financial Institution Table Screen	5-48
6: Daily Operations	6-1
Servicing the Terminal	6-2
Performing a Check Proof List Transaction Using the DCT	6-3
Performing a Check Proof List Transaction Using the Terminal	6-3
DCT Balancing	6-5
Viewing the Transaction Log File	6-6
TLF Balancing Detail Records—Hopper Overlays (for hoppers 7 and 8)	6-7
TLF Balancing Detail Records—SSB Deposit Overlays	6-10
Process Commands	6-11
Corporate Check File	6-11
Bin Sort File	6-11
File Refreshing	6-12
Viewing the Status of the Terminal	6-13
A: SSB Reports	A-1
SSB Report Data	A-2
Daily Terminal Detail Transaction Log	A-3
Daily Institution Detail Transaction Log	A-9
Daily Terminal Depository Report	A-13
Transaction Detail Report	A-17
Index	Index-1
Index by Field Name	Index-7
Index by Data Name	Index-13

ACI Worldwide, Inc.

Conventions Used in this Manual

This section explains how fields are documented in this manual.

Field Descriptions

Each field appearing on a files maintenance screen is listed by name and then described. Field descriptions briefly summarize the contents, purpose, and permissible values, as shown in the following example taken from BASE24-atm Terminal Data files (ATD) NCR 5XXX screen 11.

Example

MAX BILLS — The maximum number of bills from each hopper of the corresponding denomination that can be used in any one bill dispensing operation. The values in these fields are used to determine the bills to be dispensed. Refer to the topic “Thresholds Method” previously described in this section for more information on how this field is used.

Field Length:	1–4 numeric characters
Required Field:	Yes, if the value in the DISPENSE ALGORITHM field is 1.
Default Value:	0
Data Name:	ATDS1.[atds1-dev-info-ncr-5xxx].BILL-MIX.MAX-BILLS
SSB Feature:	Configurable bill dispensing

Explanation

Each field description is completed by one or more of the following items of information:

Item	Description
Field Length	Specifies the size of the field and the type of characters that can be entered. This length refers to the field and valid values for the files maintenance screen, not the field in the DDLs. Possible values are alphabetic, alphanumeric, hexadecimal, and numeric. The term <i>alphanumeric</i> includes all alphabetic, numeric, and special characters that can be entered from a keyboard without using a control sequence. The term <i>hexadecimal</i> includes all numbers and the letters A through F. When a field value cannot be modified by the operator, the field length is <i>System protected</i>.
Required Field	Specifies whether a value has to be entered in the field. Possible values are Yes and No. Some fields are required only under certain conditions. In this case, the entry is Yes, followed by the conditions that determine when the field is required.
Default Value	Specifies the value that is automatically placed in the field when the screen is first displayed or when the F8 key is pressed to clear the screen.
Data Name	Provides the DDL name associated with the field appearing on the screen. Data names are included in the documentation to assist in communicating screen and field issues to your technical staff. Note that screen data is not always stored in the BASE24 database as it appears on the screen or as it is described in the field description. If you need information on how screen data is actually stored, consult the DDLs.
SSB Feature	Indicates one or more features in the SSB product that require this field to be modified for a proper configuration of the features.

Unlabeled Fields on Screens and Reports

Angle brackets (< >) indicate an unlabeled field on a screen or report. An unlabeled field is a field that is present on a screen or report but is not preceded by an identifying literal label. For the purposes of documenting the field, a label has been assigned and appears inside the angle brackets.

In the field descriptions for the screen or report, the unlabeled field appears according to its place on the screen or report and is identified by the same label.

Unlabeled fields are not included in the index by field name; they appear by subject in the main index.

ACI Worldwide, Inc.

Preface

The ***BASE24-atm NCR 5XXX SSB Manual*** provides users of the BASE24-atm self-service banking (SSB) add-on product for NCR ATMs with a product overview and explanation of features. In addition, this manual contains instructions for configuration and day-to-day operational activities, as well as examples of the BASE24-atm reports provided with the SSB product. To make full use of the SSB product, an NCR terminal must be in the 56XX- or 58XX-series, be equipped with the Check Processing Module (CPM), and use the BASE24-atm NCR 5XXX-series Device Handler process. Most of the features in the SSB Enhanced ATM Application do not require the CPM hardware to be installed, and can be used on all 5XXX-series ATMs.

Audience

ACI prepared this publication for institution personnel responsible for configuring and maintaining the BASE24-atm self-service banking product for use with the NCR 5XXX-series ATMs.

Prerequisites

The information in this manual assumes that the reader has knowledge of the BASE24 user access system, BASE24 files maintenance, BASE24 reports, BASE24-atm transaction processing, the NCR 5XXX-series ATM Configuration File, and how to perform device control functions and network control performed from the BASE24 Device Control Terminal (DCT) and a network control facility. This manual is not intended as a substitute for the vendor literature relating to NCR 5XXX-series ATMs. ACI recommends that individuals making decisions on BASE24-atm NCR 5XXX-series ATM processing be familiar with the vendor literature available for the type of NCR 5XXX-series ATM they are using.

Additional Documentation

The BASE24 documentation set is arranged so that each BASE24 manual presents a topic or group of related topics in detail. When one manual presents a topic that has already been covered in detail in another manual, the topic is summarized and the reader is directed to the other manual for additional information. Information has been arranged in this manner to be more efficient for readers who do not need the additional detail and at the same time provide the source for readers who require the additional information.

This manual contains references to the following BASE24 publications:

- The ***BASE24-atm NCR 5XXX Device Support Manual*** describes how to configure the NCR 5XXX Device Handler process.
- The ***BASE24-atm Files Maintenance Manual*** describes the data files specific to the BASE24-atm product, and the screens used to maintain these files.
- The ***BASE24 Base Files Maintenance Manual*** describes the data files used by all BASE24 products, and the screens used to maintain these files.
- The ***BASE24 Logical Network Configuration File Manual*** describes the Logical Network Configuration File (LCONF), which determines various system parameters and file locations at the logical network level, and the data entry screens used to maintain this file.
- The ***BASE24 Device Control Manual*** includes instructions for such actions as downloading information to the terminal and displaying information about the terminal.
- The ***BASE24-atm Transaction Processing Manual*** describes the transactions allowed by the BASE24-atm product, and the Standard Internal Message (STM) used by BASE24-atm product to send messages to and from the ATM.
- The ***BASE24 Tokens Manual*** describes the tokens added to the STM to carry additional information.
- The ***BASE24-atm Settlement and Reporting Manual*** describes the reports that BASE24-atm product generates.
- The ***BASE24 Text Command Reference Manual*** describes the network control commands that can be given to the network or to the NCR 5XXX Device Handler process.
- The ***BASE24 Refresh and Extract Operators Manual*** describes how to perform file refreshes.

In addition to BASE24 publications, the manual contains references to the following NCR publications:

- The *NCR 56XX Document Processing Application Development Guidelines* summarizes NCR's software and hardware support for self-service banking terminals.
- The *NCR D-Scribe User Guide* describes how to use NCR's proprietary program D-Scribe to maintain the Document Definition File (DDF) and Image Feature File (IFF).
- The *NCR NDC+ Programmer's Reference Manual* discusses terminal operation, and describes the CNFG5070 configuration file, that contains the ATM states, screens, financial institution tables, message formats, and other parameters specific to NCR terminals.

This manual also references the ISO 4217 standard, *Codes for the Representation of Currencies and Funds*.

Software

This manual documents standard processing as of its publication date. Software that is not current and custom software modifications (CSMs) may result in processing that differs from the material presented in this manual. The customer is responsible for identifying and noting these changes.

Manual Summary

The following is a summary of the contents of this manual.

“Conventions Used in this Manual” follows this preface and describes notation and documentation conventions necessary to understand the information in the manual.

Section 1, “Introduction,” provides an overview of the three modules in the BASE24-atm NCR 5XXX-series self-service banking (SSB) product, an overview of the features of each module, and the requirements needed to install each of the three modules.

Section 2, “BASE24-atm SSB Device Handler Extension,” describes the features of the SSB Device Handler Extension and how it is configured.

Section 3, “BASE24-atm SSB Enhanced ATM Application,” describes the features of the SSB Enhanced ATM Application and how it is configured.

Section 4, “BASE24-atm SSB Enhanced Check Processing Application,” describes the features of the SSB Enhanced Check Processing Application and how it is configured.

Section 5, “Configuring NCR-Specific Files,” provides basic information on the changes that need to be made in the files that are specific to NCR terminals.

Section 6, “Daily Operations,” describes procedures that operators should be familiar with in daily maintenance of the SSB product.

Appendix A, “SSB Reports,” provides examples of the modified BASE24-atm reports that are available with the self-service banking product.

Readers can use the index by field name to locate information about a particular screen field and the index by data name to locate information about a particular field from a file or record structure.

Publication Identification

Three entries appearing at the bottom of each page uniquely identify this BASE24 publication. The publication number (for example, AT-DA033-01 for the ***BASE24-atm NCR 5XXX SSB Manual***) appears on every page to assist readers in identifying the manual from which a page of information was printed. The publication date (for example, Nov-2007 for November, 2007) indicates the issue of the manual. The software release information (for example, R6.0v8 for release 6.0, version 8) specifies the software that the manual describes. This information matches the document information on the copyright page of the manual.

1: Introduction

This section provides an overview of the BASE24-atm self-service banking (SSB) add-on product and the features that this product provides for NCR 5XXX-series terminals.

Self-service banking is a series of three modules that can be added to the BASE24-atm product: SSB Device Handler Extension, SSB Enhanced ATM Application, and SSB Enhanced Check Processing Application. These modules allow financial institutions to expand their automated financial services to include banking functions previously available only through human tellers or personal bankers.

SSB provides a wide range of self-service banking options designed to take advantage of increased consumer acceptance of ATM financial services as well as the latest technology in ATM terminals. SSB can be implemented using an institution's existing ATM network and, as such, leverages and enhances the value of that investment.

SSB features can be implemented by terminal, by transaction, and by service. This provides a great deal of flexibility in deploying self-service banking services. SSB services can be implemented at specific ATM locations for target marketing purposes. Then, after an initial implementation phase with a single application or a single terminal, the financial institution can implement additional services or expand SSB services throughout the entire network.

NCR Hardware Options

The BASE24-atm SSB add-on product features and functions can vary depending on the capabilities of the terminals with which they are used, and the additional hardware and software that can be added.

Most features in the SSB Enhanced ATM Application can be configured using either NCR 50XX-series terminals (all but model 5080) or all 56XX- and 58XX-series terminals. The 50XX-series terminals must have NCR's NDC Release 8.0 software installed, while the 56XX-and 58XX-series terminals must have NCR's NDC+ Release 5.0 or greater software installed. Additional hardware equipment such as the Check Processing Module (CPM) and the Coin Dispenser Module (CDM) are optional for the SSB Enhanced ATM Application, and are only available for 56XX-and 58XX-series terminals.

One transaction type supported by the SSB Device Handler Extension, the envelope deposit with cash back, can also be performed by the 5XXX terminals, with or without the CPM and CDM.

All other features in the SSB Device Handler Extension and all of the features in the SSB Enhanced Check Processing Application require NCR 56XX or 58XX terminals fitted with NCR's Check Processing Module (CPM), running NCR's NDC+ Release 5.0 software, and fitted with an image recognition board. Note that all three of these items (available from NCR) must be installed in the terminal for these two SSB modules to be properly configured. The models supported by these two SSB modules are the NCR 5665, 5675, 5685, 5688, and PersonaS terminals. (Other models in the 56XX series cannot be equipped with the CPM.) The CPM provides the terminal with hardware that recognizes documents inserted into the terminal without an envelope.

Two types of deposit bins are included in the CPM for sorting items inserted into the terminal: check pockets and envelope/reject bins. Each terminal has two check pockets (except for the NCR 5665 terminal, which has three check pockets), and one envelope/reject bin (except for the NCR 5665 terminal, which has a reject bin only).

The CPM adds a magnetic ink detection sensor, which performs an initial evaluation on documents inserted into the terminal. If the document is deposited as a check but there is no magnetic ink, the document is rejected.

The CPM adds one or two imaging cameras to the terminal; these cameras scan a digital image of the document. If one camera is used, it scans the front of the document only. Two cameras can scan both the front and the rear of the document. The front image is displayed to the customer at the terminal for verification, and

either or both images can also be archived on a hard drive in the terminal for later use by the institution. Additionally, portions of the image can be “read” and converted to characters. (The digital image is merely a series of dots and white spaces that the computer does not recognize as representing anything specific. The conversion process looks at the dots and attempts to match them up with known patterns of characters, or fonts.) Fonts that are recognized in the image: Magnetic Ink Character Recognition (MICR), barcode, and Optical Character Recognition (OCR). Additional recognition fonts can be installed, including handwriting recognition.

The CPM also adds several options for printing on the document. The first option uses the MICR encoder printer and the encode font on the front of the document only. The second option is a dot-matrix printer that can either print on the front of the document or on the rear of the document, or both front and rear. The dot-matrix printer can use the barcode font or the OCR font. Additional print fonts for the dot-matrix printer can be installed.

In addition to the CPM hardware, you can optionally install the Coin Dispenser Module (CDM) hardware. The CDM adds four coin dispensers to the terminal. With the coin dispensers plus the standard bill dispensers, the customer can request a withdrawal amount which requires coin dispensing, or they can cash a check and receive the exact amount of the check.

Wincor Nixdorf Hardware Options

The BASE24-atm NCR 5XXX Device Handler process uses bindable extensions to support bunch note acceptor (BNA) functionality in Wincor Nixdorf ATMs loaded with firmware that conforms to the Shared NDC+ CashIn specification.

Wincor Nixdorf calls its BNA module the CashIn module, enabling customers to deposit a stack of bills (notes) or number of coins into a secured part of the ATM without using an envelope. The ATM validates and counts notes and coins, rejects any invalid or unrecognizable notes or coins, and sends the transaction to the Shared NDC+ BNA extension of the BASE24-atm Device Handler process. The notes and coins can be of different denominations as well as up to four different currencies that are supported by the ATM. The BNA can be present in Wincor Nixdorf model CRS, CCDM or RM2 ATMs.

While the Wincor ATMs can be configured to support recycling of notes, BASE24 does not support recycling of notes at the ATM.

The ATM is configured with signature files. Each of these files provides the ATM with the information needed to recognize a particular denomination of note. The ATM is also configured with a Note ID List that determines which denomination of a particular currency it can accept. Valid signature files must exist for particular note denominations before they are configured in the Note ID List, and the Note ID List must contain details of all note denominations for which signature files exist, although certain note denominations can be set as not being accepted.

BASE24 also maintains a Note ID File, detailing the denominations of the notes that can be accepted at the ATM, and BASE24 uses this file to determine the transaction amount deposited at the ATM. The customer must ensure that the ATM's Note ID List and the BASE24-atm Note ID File are kept in sync. Failure to do so will result in the cardholder being credited for an amount different from the amount of money that was deposited at the ATM. See the ***BASE24-atm Files Maintenance Manual*** for additional information on configuring the BASE24-atm Note ID File.

BASE24 builds the Note ID File into a new extended memory table, the NIDFEMT, which is accessed by the NCR 5XXX Device Handler process. If changes are made to the Note ID File, the NIDFEMT must be rebuilt, and any processes with the NIDFEMT open must be warmbooted in order to pick up these changes.

Two bindable extensions for the BASE24-atm NCR 5XXX Device Handler process support bunch note acceptor (BNA) functionality in Wincor Nixdorf ATMs. The Shared BNA extension supports CashIn deposits, accepting deposits

made in any of the denominations of the terminal's currency, configured in the Note ID file as being accepted at the particular ATM. The BNA Multiple Currency extension is required if any ATM accepts more than just the terminal's currency. In this case the Note ID file contains details of denominations in a maximum of four different currencies that can be accepted by the ATM.

The Device Control Terminal (DCT) allows the customer to inquire as to the ATM's detailed configuration for accepting notes, change whether a particular note denomination is accepted or rejected, warmboot processes using the NIDFEMT, and collect count information from the CashIn device.

SSB Product Modules

The BASE24-atm SSB product consists of three separate software extensions or applications that can be purchased in a modular fashion to provide the range of features needed for your installation. The three modules are as follows:

- SSB Device Handler Extension
- SSB Enhanced ATM Application
- SSB Enhanced Check Processing Application

The SSB Device Handler Extension can be implemented as a stand-alone application, or can be added to the SSB Enhanced ATM Application to further expand SSB functionality for NCR 56XX and 58XX terminals. Similarly, the SSB Enhanced Check Processing Application can be added to the SSB Device Handler Extension and SSB Enhanced ATM Application to extend SSB functionality to its full range. Note that the SSB Enhanced Check Processing Application must have both the SSB Device Handler Extension and SSB Enhanced ATM Application installed.

Each extension or application provides the financial institution with a series of features that can be used alone or in conjunction with one another. The features implemented in each module are determined by your configuration of the BASE24-atm screens and the NCR-specific files, which is the subject of this manual.

Note: The ISO-based BASE24 Host Interface process or the ISO-based BIC Interface process must be used to send data needed for many of the features in the SSB product to a host or co-processor. The external messages used by the ANSI-based BASE24 Host Interface process and the ANSI-based BIC Interface process do not carry this data.

SSB Device Handler Extension

The SSB Device Handler Extension provides check-related transactions, currency acceptor-related transactions, and time-saving features for the institution. This module can be used separately or in conjunction with the SSB Enhanced ATM Application. If you want to use the SSB Enhanced Check Processing Application, you must have the SSB Device Handler Extension and the SSB Enhanced ATM Application configured as well.

The SSB Device Handler Extension supports the following features for NCR terminals:

- Additional transaction support
 - Envelope deposit with cash back
 - Check deposit with cash back
 - Check cashing
 - Check deposit
- Check imaging
- Configurable zone verification
- Courtesy amount verification (CAV) which requires the Document Processing Module (DPM)
- MICR processing
- Coin dispensing
- Document bin sorting
- Check proof listing
- Bunch note acceptor (BNA)

Each feature is summarized below. The envelope deposit with cash back transaction feature does not require additional hardware in the terminal, and can be performed on NCR 5XXX terminals. All other features in the SSB Device Handler Extension require the use of the NCR 56XX-series or 58XX-series terminals and also require that the Check Processing Module (CPM) is installed and configured. The coin dispensing feature requires that the Coin Dispenser Module (CDM) be installed in the terminal.

Refer to section 2 for additional descriptions of the features and information on how to configure the SSB Device Handler Extension.

Additional Transaction Support

The SSB Device Handler Extension provides support for the following five additional transactions at the ATM:

- Cash deposit of a stack of currency
- Envelope deposit with cash back
- Check deposit with cash back
- Check cashing
- Check deposit

Check Imaging

The check imaging feature is used with check-related transactions when the check is inserted in the terminal without first being placed in an envelope. The CPM scans an image of the check, front or back as defined by the financial institution, and displays the image on the terminal screen. The ATM cardholder can then verify the check amount entered against a picture of the check. The customer, by seeing the check on the screen, is reassured that the terminal has received the check. The CPM must be installed for this feature.

Images can also be archived (saved) by the terminal for later retrieval by service personnel. Images can be archived based on transaction completion status (for example, approved over a given amount, denied by the Authorization process, or rejected by the Device Handler process).

Configurable Zone Verification

Verify zones are used as part of the document imaging and handling functions of the terminal, and allow specific areas on a given type of document to be verified to make sure they contain data or are blank. Configurable zone verification allows you to specify how the verify zones defined for the documents are to be handled. Verify zones are defined for each document using proprietary NCR files and software, and then configured in the SSB Device Handler Extension as to whether the zone should have data, or should be blank. The SSB Device Handler Extension denies transactions based on the verification. The CPM must be installed for this feature.

Courtesy Amount Verification

For checks entered in the terminal without an envelope, the Document Processing Module (DPM) takes the scanned image of the courtesy amount field, and translates the written or typed amount into numbers that the computer can understand. This translated amount is then compared to the amount that the cardholder entered on the screen. The SSB Device Handler Extension denies transactions after a variable number of attempts based on this verification. The DPM must be installed for this feature.

MICR Processing

MICR (Magnetic Ink Character Recognition) data read from the image of the check is placed in the MICR token and sent in the transaction request to the BASE24 system. Note that no data conversion is performed if you are using the SSB Enhanced Check Processing Application; the data is put in the token in native format. The CPM must be installed for this feature.

Coin Dispensing

NCR terminals can contain four coin dispensers and can dispense coins to allow cardholders to cash checks or request withdrawals for amounts that cannot be dispensed by bills alone. The CPM and CDM must be installed for this feature. The 5665 model cannot use this feature because this model does not dispense coins.

Document Bin Sorting

The document bin sorting feature allows the terminal owner or financial institution to configure the way checks are sorted into check pockets at the terminal by amount thresholds. This feature supports sorting for two check pockets, in addition to the envelope/reject bin. The expanded sorting of depository items feature is intended to assist in back-office check handling and reconciliation functions. The CPM must be installed for this feature.

Note: The SSB Enhanced Check Processing Application adds support for a third check pocket for NCR 5665 terminals that can be used for sorting checks. It also supports institution-defined check sorting amounts.

Check Proof Listing

The check proof listing feature enables the BASE24-atm product to track the checks cashed and deposited at each terminal and to provide this information back to terminals for printing proof lists. These proof listings can be printed on the ATM audit or customer printer. Check proof listings are intended to facilitate balancing and reconciling check-related transactions by institution personnel. Check proof lists contain details of check activity by terminal bin and include the MICR information read from the check. The CPM must be installed for this feature.

Check Processing Module

The Check Processing Module (CPM) feature accepts checks and returns those which are physically unacceptable or have the incorrect orientation when they are deposited. In addition, the check processing module scans the currency, reads the MICR (Magnetic Ink Character Recognition) data before sending in the transaction request to the BASE24 system, and ensures that any currency is placed in the correct deposit bins in the ATM.

Bunch Note Acceptor

The Bunch Note Acceptor (BNA) feature enables customers to deposit a stack of bills and/or coins in any denomination as well as different currencies into the ATM without using an envelope based on the type of firmware running the ATM. The bills are then validated and counted.

SSB Enhanced ATM Application

The SSB Enhanced ATM Application provides various additional capabilities to the BASE24-atm product and can be purchased in conjunction with the SSB Device Handler Extension and the SSB Enhanced Check Processing Application. The SSB Enhanced ATM Application supports the following features for NCR 5XXX terminals:

- Transaction time windows
- Split deposit transaction
- Super Teller
- Configurable bill dispensing
- Configurable depository print
- Statement print host communications

Each of these features is summarized below. Refer to section 3 for additional descriptions of the features and information on how to configure the SSB Enhanced ATM Application.

Transaction Time Windows

Transaction time windows enable you to control the types of transactions performed at the terminal during specific times of the day and days of the week. Using this feature, you can restrict time-consuming transactions to off-peak time periods.

For example, statement print transactions take a significant amount of time to complete and can impact the availability of the terminal. Thus, you may want to limit the availability of these transactions during peak terminal usage time periods.

Split Deposit Transaction

With a split deposit transaction, an ATM customer can make a deposit into two accounts in a single transaction. For example, a customer can deposit \$100 (U.S. dollars) to a checking account and \$200 to a savings account from a \$300 deposit.

A deposit can be split between a maximum of two accounts. The following options are available:

- Two checking accounts (checking/checking)
- Two savings accounts (savings/savings)
- One checking account and one savings account (checking/savings)

You can control which of these split deposit transactions are available to your customers. The authorization method used by an institution affects which split deposit transactions can be offered.

Configurable Bill Dispensing

The configurable bill dispensing feature gives you the flexibility to determine, by terminal, which noncurrency items, nonvalue items, or cash of any denomination or value within multiple hoppers are dispensed during a transaction. This feature supports the use of larger denominations required for the check cashing function and ensures that the terminal can accommodate enough currency for check cashing and withdrawal functions until the next replenishment by operations personnel.

Configurable Depository Print

To facilitate the back-office depository settlement process, you can configure depository print data by terminal-owning institution and transaction type, eliminating the need to verify the envelope total against the journal. You determine what information you want to have printed on the deposit envelope.

If you have purchased the SSB Device Handler Extension and you have the CPM installed on an NCR 56XX or 58XX terminal, you can also configure the depository print by deposit media (that is, envelope or check). For example, you can print endorsement information on checks that were inserted directly in the terminal. Zones are defined using the NCR package D-Scribe, and allow the terminal to print (and verify if configured to do so) information in specific areas of a given type of document. These printable areas may be on the front or rear of the document, or both sides. The BASE24-atm product can be set up to send the information to be printed in these zones.

Statement Print Host Communications

Statement print transactions contain more lines of information than other types of ATM transactions. As a result, these transactions take longer to send and place a heavier burden on processing. The SSB Enhanced ATM Application provides for improved communications efficiency for statement print transactions by allowing for a separate connection to the host that can be defined solely for use with statement print transactions. This feature separates statement print transaction messages from live transactions sent to the host.

Super Teller

Super Teller cards are special ATM cards that institutions can issue to institution personnel for the purpose of demonstrating ATM services to customers or assisting in performing ATM transactions. Using the Super Teller cards, institution personnel can assist consumers in a variety of circumstances, from those who do not have their ATM card with them, to those who cannot remember their PINs. Using a Super Teller card, institution employees can perform transactions that would typically have been performed at the teller window.

Super Teller cards can perform any transaction allowed by the BASE24-atm product, and their limits and usages are configurable. The card has a unique prefix with configurable limits and usage accumulations. Super Teller cards can be used only at specific terminals (up to a maximum of ten) that are defined by the card-issuing institution as Super Teller terminals. Transactions performed with the Super Teller card are uniquely identified within the BASE24-atm system and logged as Super Teller transactions for settlement, audit, and tracking purposes.

SSB Enhanced Check Processing Application

The SSB Enhanced Check Processing Application expands the check cashing and processing features of the SSB Enhanced ATM Application and the SSB Device Handler Extension to provide the financial institution with the full capabilities of the SSB features. The SSB Enhanced Check Processing Application supports the following features for NCR 56XX and 58XX terminals:

- Enhanced check authorization
- Enhanced MICR processing and manipulation
- Check-cashing cards
- Registered check processing
- Stop payment verification
- Preapproved and predeclined check processing
- Enhanced document bin sorting

Each of these features is summarized below. The SSB Enhanced Check Processing Application requires the use of an NCR 56XX-and 58XX-series terminal. All features require that the CPM be installed and configured. Both the SSB Device Handler Extension and the SSB Enhanced ATM Application must be installed to use the SSB Enhanced Check Processing Application.

Refer to section 4 for additional descriptions of the features and information on how to configure the SSB Enhanced Check Processing Application.

Enhanced Check Authorization

The SSB Enhanced Check Processing Application allows for establishing enhanced authorization controls and prescreening for check-related transactions, based on the institution that issued the check rather than on the cardholder performing the check transaction. The SSB Enhanced Check Processing Application also supports check cashing limits and usages for the individual cardholder such as aggregate limits, cash advance limits, and cash withdrawal limits.

Enhanced MICR Processing and Manipulation

With the SSB Enhanced Check Processing Application, the BASE24 product has the ability to interpret the Magnetic Ink Character Recognition (MICR) information sent from the terminal on check-related transactions. By interpreting the MICR information, the BASE24 product can determine the routing and transit number of the institution that issued the check as well as the account number associated with that routing and transit number. This means that the BASE24 product can authorize check-related transactions based on the institution and account number of the check-issuing institution and can facilitate the settlement process by sorting checks according to the institution that issued them. This information can be sent to the host for additional processing or captured by the BASE24 system for later processing and reconciliation purposes.

Check-Cashing Cards

The check-cashing cards feature makes it possible for an institution to issue special-use check-cashing cards to noncustomers—individuals who do not have an account at the institution—for the purpose of cashing checks at the institution's ATM. The objective is to divert check-related cash disbursement transactions from the teller lines to the ATM.

With this feature, the authorizing institution can establish a relationship with the business issuing the checks in order to allow that business' employees to cash checks at the institution whether or not the employee has an account with the institution. In this case, the institution is relying on the credibility of the check-issuing business rather than the cardholder. The check-cashing cards contain a unique prefix and can be used for check-cashing purposes only.

Registered Check Processing

The registered check processing feature allows cardholders to cash recurring checks, such as payroll checks or dividend checks, at an ATM at their own convenience. Registered check processing enables an individual cardholder to register checks that he or she receives at predictable intervals with the financial institution (for example, dividend checks or payroll checks). The institution can then establish check cashing limits for these registered checks. These limits and usages can be tested in conjunction with the base aggregate and withdrawal limits specified for the standard BASE24-atm product.

Approval for the check-cashing transaction is based on the cardholder's primary account number (PAN), special check-related transaction limits, the routing and transit number of the check-issuing institution, and the account number of the check writer.

Stop Payment Verification

Stop payment processing allows for stop payment verification on check-related transactions. Under this feature, the BASE24-atm product verifies the transaction against its stop payments based on financial institution identifier (FIID), account, and check number. If a stop payment is located, the check-related transaction is denied and the check is retained by the terminal. Stop payments can be defined for a single check number or for a range of check numbers.

Preapproved and Predeclined Check Processing

Preapproved check processing allows an institution to preapprove a certain category or class of checks based on the specific institution that issues the check. For example, with this feature, an institution may decide to preapprove all Social Security check-related transactions for all of its cardholders. The institution can establish check cashing limits and usages at the prefix and cardholder level for preapproved checks. These limits and usages are tested in addition to or instead of the base limits and usages specified for the standard BASE24-atm product.

The authorizing institution can also define predeclined checks. Predeclined checks are those denoted as unacceptable for processing for all cardholders (for example, checks issued by an institution whose assets have been frozen).

Enhanced Document Bin Sorting

Enhanced bin sorting expands the check pocket sorting feature provided in the SSB Device Handler Extension. The terminal owner can configure pocket sorts based on the institution that issued the check and the amount of the check. Enhanced bin sorting also expands the number of check pockets to three pockets for NCR 5665 terminals.

2: BASE24-atm SSB Device Handler Extension

The BASE24-atm self-service banking (SSB) Device Handler Extension is one of three add-on modules that make up the BASE24-atm self-service banking product.

The first half of this section describes the processing enhancements that each feature of the SSB Device Handler Extension provides. The following topics describe the files and fields that must be modified to properly configure the SSB Device Handler Extension. Information on the files and fields required for individual features is also included if you want to configure only certain features.

The SSB Device Handler Extension supports the following features for NCR terminals:

- Additional transaction support
 - Envelope deposit with cash back
 - Check deposit with cash back
 - Check cashing
 - Check deposit
- Check imaging
- Configurable zone verification
- Courtesy amount verification (CAV)
- MICR processing
- Coin dispensing
- Document bin sorting
- Check proof listing

Additional Transaction Support

The SSB Device Handler Extension supports three types of new transactions—cash check, check deposit, and check deposit with cash back—that allow the terminal to accept checks directly without being placed in an envelope. A fourth new transaction allows deposit with cash back on checks inserted into the terminal in an envelope. Checks accepted without an envelope are inserted in the terminal before the transaction is passed to the BASE24 system, while checks in an envelope are not inserted in the terminal until after the BASE24 Authorization process approves the transaction.

If you are using NCR 56XX or 58XX terminals, you have purchased both the SSB Device Handler Extension and the SSB Enhanced ATM Application, and you have the Check Processing Module (CPM) installed, the configurable depository print feature in the SSB Enhanced ATM Application has extended capabilities. The cash check, check deposit, and check deposit with cash back transactions are affected. Refer to section 3 of this manual for more information on the configurable depository print feature.

The split deposit transaction, which permits deposits to be split between different accounts, is a feature of the SSB Enhanced ATM Application and is described in section 3 of this manual.

Refer to the *BASE24-atm Transaction Processing Manual* for the transaction codes used by these additional transactions.

Envelope Deposit with Cash Back Transaction

The envelope deposit with cash back transaction enables the cardholder to insert one or more checks in an envelope, and in one transaction, specify that a portion of the amount is credited to a single account (checking or savings) and the remainder of the amount is returned to the customer in cash. Note that this additional transaction does not require that the terminal be upgraded with the CPM and Coin Dispenser Module (CDM), and can be performed on NCR 5XXX-series terminals. However, if the CDM is installed the customer can receive coins as part of the cash back amount.

The BASE24-atm NCR 5XXX Device Handler process updates the terminal activity in the BASE24-atm Terminal Data Dynamic File—general data (ATDD1) as follows:

1. Adds 1 to the deposit count total.
2. Adds the total check amount to the deposit amount total.
3. Adds the total check amount to the terminal debits total.
4. Adjusts the hopper totals for the amount of cash dispensed.
5. Adds cash back amount to the terminal credits total.
6. Adds the total check amount to the on-us credits total for on-us transactions only.
7. Adds the cash back amount to the on-us debits total for on-us transactions only.

Check Deposit with Cash Back Transaction

The check deposit with cash back transaction enables the cardholder to insert a check into the terminal without an envelope. In one transaction, the cardholder can specify that a portion of the check is credited to a single account (checking or savings) and the remainder of the check amount is returned to the customer in cash. If the CDM is installed, the customer can receive coins as part of the cash back amount.

The Device Handler process updates the terminal activity in the ATDD1 as follows:

1. Adds 1 to the check count total.
2. Adds the check amount to the check amount total.
3. Adds the check amount to the terminal debits total.
4. Adjusts the hopper totals for the amount of cash dispensed.
5. Adds the cash back amount to the terminal credits total.
6. Adds the check amount to the on-us credits total for on-us transactions only.
7. Adds the cash back amount to the on-us debits total for on-us transactions only.

Check Cashing Transaction

The cash check transaction provides the cardholder with full cash payment for the amount of the check inserted into the terminal without an envelope. If you want the cardholder to be able to receive exact cash back, including coins, the CDM must be installed in the terminal, and the coin dispensing feature must be configured. If the cardholder attempts to cash a check that requires coins and the CDM is not installed, the transaction is denied.

The Device Handler process updates the terminal activity in the ATDD1 as follows:

1. Adds 1 to the check count total.
2. Adds the check amount to the check amount total.
3. Adds the check amount to the terminal credits total.
4. Adjusts the hopper totals for the amount of cash dispensed.
5. Adds the check amount to the on-us debits total for on-us transactions only.

Check Deposit Transaction

The check deposit transaction enables the cardholder to insert a check into the terminal without an envelope. The cardholder can deposit the entire amount of the check to a single account.

The Device Handler process updates the terminal activity in the ATDD1 as follows:

1. Adds 1 to the check count total.
2. Adds the check amount to the check amount total.
3. Adds the check amount to the terminal debits total.
4. Adds the check amount to the on-us credits total for on-us transactions only.

Check Imaging

NCR terminals equipped with the CPM can scan checks (or lift the image of the check) that are deposited without an envelope. The Document Definition File (DDF) and the Image Feature File (IFF) are NCR-provided files that configure how the check imaging is done. Refer to section 5 of this manual for information on using the NCR D-Scribe program that updates these files. The scanned image of the check is used for the following purposes in the SSB Device Handler Extension:

- The terminal screen displays an image of the check to assist the cardholder in verifying that the correct amount was entered for the transaction.
- The image recognition board uses the scanned image to determine if the document is indeed a check, by comparing preprinted information on the check to stored images of acceptable checks in the IFF.
- The image can be saved to a hard drive in the terminal, called archiving the image. You can determine in the BASE24-atm Terminal Data files (ATD) when archiving is to take place. For instance, you can archive images of checks that fail device handler authorization, which typically happens when the check does not find a match in the IFF. Later you can evaluate if these images are of valid checks that need to be added to the DDF and IFF.

The options you have for scanning the image are as follows:

- Entire full-scale front of document in greys at 100 dots per inch (dpi)
- Entire two-thirds reduced front of document in greys at 100 dpi
- Entire full-scale front of document in binary (black and white) at 200 dpi
- Entire full-scale rear of document in greys at 100 dpi
- Entire two-thirds reduced rear of document in greys at 100 dpi
- Entire full-scale rear of document in binary at 200 dpi
- Any one of ten partial areas on the document as defined in the DDF (discussed in more detail in the topic “Configurable Zone Verification” below)

Configurable Zone Verification

Verify zones are used as part of the document imaging and handling functions of the terminal and allow specific areas on a given type of document to be verified to make sure they contain data or are blank. For instance, you can verify that the signature line on the check has been filled in, and you can verify that the bank endorsement space on the back of the check has been left blank.

Configurable zone verification allows you to specify how the verify zones defined for the documents are to be handled. You can define up to ten verify zones for each document type (front and back) inserted into the terminal using the NCR-provided DDF and D-Scribe program. Then you configure the BASE24 SSDHNAMS File as to whether the zone should have data, or should be blank. (Refer to section 5 of this manual for more information on updating the DDF.) The Device Handler process can deny transactions based on the verification zone.

Courtesy Amount Verification

The CPM performs a courtesy amount verification (CAV) on checks inserted in the terminal without an envelope. The courtesy amount area on the check is where the check amount is written in numeric form, as opposed to the legal amount area, where the amount is spelled out. The CAV feature of the terminal converts the scanned image of the handwritten or typewritten amount in the courtesy amount area into a numeric value. The terminal sends that value to the SSB Device Handler Extension, which compares that value with the value that the customer entered. If there is any difference in the values, or if the courtesy amount cannot be accurately converted, the transaction is denied by the SSB Device Handler Extension. You can set a limit in the ATD as to how many times the CAV feature can be retried before the transaction is denied. The CAV zone is defined in the DDF, which is described in section 5 of this manual.

MICR Processing

NCR terminals use the read zones configured in the DDF to read the Magnetic Ink Character Recognition (MICR) information on the bottom of a check. The Device Handler process places this information in the MICR Data token without changing any of the characters.

The MICR information can be used to identify the financial institution against which the check is written and the account number of the person who wrote the check. The detailed description of each check on the check proof list contains the first 43 bytes of the check MICR information. This data can also be printed on the journal and the daily reports.

The characters 0 through 9, blanks, and the nonnumeric separators listed below represent valid MICR information.

- d = Transit symbol
- b = Amount symbol
- c = On-us symbol
- = Dash symbol

The transaction is denied if there is an unrecognizable character in the MICR information.

The READ ZONE #1 field in the DDF must be configured to read the MICR information on the check. Refer to section 5 of this manual for more information on updating this file.

Note: The ISO-based BASE24 Host Interface process or the ISO-based BIC Interface process must be used to send this data to a host or co-processor. The external messages used by the ANSI-based BASE24 Host Interface process and the ANSI-based BIC Interface process do not carry the data needed for MICR processing.

Coin Dispensing

Check cashing and cash withdrawals can include both bills and coins. The coin dispensing feature requires that you install the Coin Dispenser Module (CDM) in the terminal. Without the CDM installed, the device can only dispense amounts that can be handled by bills.

The bill dispensers (two to four) are in the first hoppers of the terminal. Four coin dispensers can be configured after the bill hoppers. NCR requires that these coin hoppers be filled by coin weight with the heaviest coin in the first coin hopper and the lightest coin in the last coin hopper, rather than by the face value of the coin. However, the Device Handler process is expecting the hoppers to be filled by face value, with the lowest coin value in the first ATD coin hopper, and the highest coin value in the last ATD coin hopper.

The 56XX CDM HOPPER ORDER field on ATD NCR 5XXX screen 10 has four values that map the ATD hoppers to the physical coin hoppers in the terminal. For example, the United States coins that could be put in a terminal and their face values are: penny (.01), nickel (.05), dime (.10) and quarter (.25). However, the lightest US coin in weight is the dime, so the first three columns in the following table indicate one possible way the hoppers could be filled (this example assumes that all four bill hoppers are being used):

Coin Hopper Order in ATM	Face Value	ATD Hopper Number	56XX CDM HOPPER ORDER Field
1	.25	8	4
2	.05	6	2
3	.01	5	1
4	.10	7	3

The four values in the 56XX CDM HOPPER ORDER field are in the order of the physical coin hoppers, and you enter values from one to four indicating the order that the coin hoppers are stored in the ATD. For example, the first row in the table above shows that the totals for the first coin hopper in the terminal are stored in the fourth ATD coin hopper, or hopper eight.

Document Bin Sorting

The SSB Device Handler Extension supports check bin sorting for two check pockets at the terminal, in addition to the envelope pocket. Checks can be sorted according to a check amount specified at the logical network level. Checks that are under a specific amount are placed in check pocket A (logical bin 1). Checks that equal or exceed that amount are placed in check pocket B (logical bin 2). Checks can also be placed in the envelope/reject bin (logical bin number 0) when errors (for example, bin full) occur with the other check pockets. The Check Proof List File (CPLF) is available to keep track of the checks accepted at the terminal.

Note: The SSB Enhanced Check Processing Application adds a third check pocket (logical bin number 3) that can be used for sorting checks. This third pocket is only available on NCR model 5665. Refer to section 4 for additional information about the SSB Enhanced Check Processing Application.

Check Proof Listing

To keep track of the checks accepted at the terminal, the SSB Device Handler Extension stores information in the Check Proof List File (CPLF). Contents of the file can be printed at the terminal using an administrative check proof list transaction at the terminal or using a command from the Device Control Terminal (DCT). CPLF records can also be deleted. The steps for printing the CPLF are described in section 6 of this manual.

The CPLF report can make the reconciliation process faster. If you use MICR processing (described earlier in this section) and configurable depository print (described in section 3) to place an endorsement stamp on the check, and bundle the checks with the appropriate CPLF report, you have in effect replaced the single pocket proofing process.

The CPLF contains a record for each check accepted at the terminal using the check/envelope depository. A record is written to the CPLF for each approved check transaction performed at the terminal. A record is also written to the CPLF for each denied transaction where the check cannot be returned to the cardholder.

When a dispenser fault occurs during a cash check or deposit with cash back transaction and the check is returned to the cardholder, the check record is deleted from the CPLF. If the customer does not take the check before the terminal times out, the terminal places the check in the envelope/reject bin (bin 0) and a record is written to the CPLF for the envelope/reject bin.

Check data is kept in the file until it is printed out using the check proof list administrative transaction or a DCT command. When a DCT command is used to print the check proof list, the CPLF records are automatically deleted after the list is printed. When an administrative transaction at the terminal is used to print the check proof list, the service person must specifically indicate that CPLF records should be deleted.

The CPLF contains the following information for each check transaction:

- The terminal number of the terminal that accepted the check.
- The number of the pocket where the check is retained.
- The four-digit BASE24 sequence number assigned to the check transaction. Each transaction is assigned a sequence number by the NCR Device Handler process. This number remains unchanged through the life of the transaction.
- The first 43 bytes of Magnetic Ink Character Recognition (MICR) data on the check.

- The transaction amount.
- The status used to identify suspect checks (0 = OK or 1 = unapproved check retained). This status is assigned by the NCR Device Handler process. The unapproved check is presented to the cardholder, and if the check is not taken by the cardholder before the Eject Document timer (timer 94) expires, the terminal recaptures the check and sends a status message to the Device Handler process. The value of the Eject Document timer is set in the Enhanced Configuration Parameters screen in the CNFG5070, which is described in section 5.

The CPLF receipt has additional information printed on it when you have the SSB Enhanced Check Processing Application installed and the enhanced document bin sorting feature configured. Refer to section 4 for an example of the CPLF under these circumstances.

SSB Device Handler Extension Configuration

The envelope deposit with cash back transaction in the SSB Device Handler Extension can be used on both NCR 50XX-series (with NCR's NDC Release 8.0 software) and 56XX- and 58XX-series (with NCR's NDC+ Release 5.0 or greater software) terminals. The Check Processing Module (CPM) and the Coin Dispenser Module (CDM) are optional for this transaction.

All other features in the SSB Device Handler Extension require NCR 56XX- or 58XX-series terminals that are using the NCR 5XXX-series Device Handler process, using the NDC+ Release 5.0 or greater software, fitted with a CPM and an image recognition board, and are optionally equipped with a CDM. In addition, the NCR Document Definition File (DDF) and the Image Feature File (IFF) need to be configured by the NCR-provided D-Scribe application.

Before you can configure the SSB Device Handler Extension, the application must be properly installed and the BASE24-atm network must be up and available for files maintenance.

The ISO-based BASE24 Host Interface process or the ISO-based BIC Interface process must be used to send data for the MICR processing feature to a host or co-processor. The external messages used by the ANSI-based BASE24 Host Interface process and the ANSI-based BIC Interface process do not carry the data needed for this feature.

The following table lists the features of the SSB Device Handler Extension, and the BASE24 and NCR-specific screens and files needed to configure each feature. This table gives an overview of the modifications needed, and allows you to configure those features from this module that you want to offer to your customers. The following pages describe these screens and files. Note that security access must be given to the operator modifying the BASE24 screens.

If a screen or file is described in another manual in the BASE24 manual set, only those fields that have specific SSB requirements are listed. If a screen is not described elsewhere, this section includes an illustration of the screen and descriptions of all fields on the screen. Note that the NCR-specific files CNFG5070, DDF, and IFF are described in section 5 of this manual.

Screen or File	Additional Transaction Support	Check Imaging	Configurable Zone Verification	Courtesy Amount Verification (CAV)	MICR Processing	Coin Dispenser	Document Bin Sorting	Check Proof Listing
CNFG5070 (NCR File)	✓	✓	✓	✓	✓	✓	✓	✓
DDF and IFF (NCR Files)		✓	✓	✓	✓			
Acquirer Processing Code File (APCF)	✓							
BASE24-atm Terminal Data files (ATD) screen 1	✓	✓	✓	✓	✓	✓	✓	✓
ATD screen 2	✓							
ATD screen 4						✓		
ATD screen 5						✓		
ATD NCR 5XXX screen 7	✓	✓	✓	✓	✓	✓	✓	✓
ATD NCR 5XXX screen 8	✓							
ATD NCR 5XXX screen 10						✓		
ATD NCR 5XXX screen 12		✓		✓				
Logical Network Configuration File (LCONF)							✓	✓
N50NAMS	✓							
Receipt File (RCPT)	✓							✓
SSDHNAMS	✓		✓	✓				

Screen or File	Additional Transaction Support	Check Imaging	Configurable Zone Verification	Courtesy Amount Verification (CAV)	MICR Processing	Coin Dispenser	Document Bin Sorting	Check Proof Listing
Terminal Receipt File (TRF)	✓							
Token File (TKN)					✓	✓		

Modifying the Acquirer Processing Code File

Institutions can specify the transactions allowed at its terminals in the Acquirer Processing Code File (APCF).

BASE24 terminal owners can specify ISO processing codes for transactions allowed by individual terminals or by groups of terminals. The Device Handler process passes all transaction codes to the Authorization process. The Authorization process checks the TRANSACTION ALLOWED field on APCF screen 2 when the transaction is a not-on-us transaction. The following transaction codes are used with the deposit with cash back and check cashing transactions:

Transaction	Transaction Code	To Account Type	From Account Type
Deposit to Checking with Cash Back	24	00	01
Deposit to Savings with Cash Back	24	00	11
Deposit to Other with Cash Back	24	00	60
Cash Check	11	00	00

Refer to the ***BASE24 Base Files Maintenance Manual*** for more information about the APCF screens. Refer to the ***BASE24-atm Transaction Processing Manual*** for more information about how the NCR 5XXX Device Handler process uses the APCF.

Modifying the BASE24-atm Terminal Data Files

The BASE-24-atm Terminal Data files (ATD) contain configuration information for each individual terminal in your institution's network. The fields described below have specific SSB requirements. The ATD is described in the ***BASE24-atm Files Maintenance Manual***.

ATD Screen 1

ATD screen 1 enables you to identify the terminal type.

DEVICE TYPE — Indicates the model and manufacturer of the terminal. You must enter a value of 22 for NCR 5XXX terminals.

SSB Feature: All SSB Device Handler Extension features

ATD Screen 2

Entries on ATD screen 2 define the acquirer transaction profile for NCR 5XXX terminals.

ACQUIRER TXN PROFILE — A code identifying the BASE24-atm transaction processing codes supported at this terminal. The acquirer transaction profile allows one or more acquirers to share processing code definitions and transactions allowed information. The value in this field is part of the key used to read the Acquirer Processing Code File (APCF) and it overrides the acquirer transaction profile defined at the institution level in the IDF. The value entered in this field must match a transaction profile named in the APCF.

SSB Feature: Additional transaction support

ATD Screens 4 and 5

ATD screens 4, 5, and 10 allow you to assign the contents and bill value of each hopper. Screen 4 contains information on hoppers 1, 2, and 3; screen 5 contains hoppers 4, 5, and 6; and screen 10 contains hoppers 7 and 8. Depending on the hoppers to be used for coins, access either screen 4, 5, or 10. ATD NCR 5XXX screen 10 is an SSB-specific screen and is described later in this section.

The terminal can be set up to have from two to four bill hoppers and up to four coin hoppers in use; however, the coin hoppers must be the last hoppers listed in the ATD. The hoppers must be consecutive. No blank hoppers (that is, bill value equal to zero) can be placed between the last bill hopper and the coin hopper. If these conditions are not met, an error message is displayed on the screen and the ATD record cannot be added or updated. If coins are required for a transaction and the terminal coin dispenser is unavailable, the transaction is denied.

Refer to the topic “Coin Dispensing” previously described in this section for additional discussion about the coin hoppers and the order that they are filled in the terminal versus the order that they appear in the ATD.

CONTENTS — A code specifying the contents of each hopper. Valid values are as follows:

00	=	Cash
01	=	Coin
02	=	Travelers checks
03–10	=	Cash value or nonvalue items

SSB Feature: Coin dispensing

BILL VAL — Indicates the denomination of contents of the hopper. If the value in the CONTENTS field is 01 through 10, the BILL VAL field can contain decimal values. If the value in the CONTENTS field is 03 through 10, this field can contain a zero value. For example, for a system using U.S. currency, a value of 5 indicates that the hopper contains \$5.00 bills, a value of .25 indicates that the hopper contains quarters (\$0.25), and a value of 0 indicates that the hopper contains nonvalue items.

Hopper 1 always contains the bills with the lowest denomination, with each successive hopper containing higher bill denominations. If the terminal has two dispensers with the same denomination, the ATD can have one hopper defined for that denomination with the totals for both dispensers

SSB Feature: Coin dispensing

STD BEG CASH — The standard amount of money used to replenish cartridge cash dispensers. The standard amount of money must be divisible by the value entered in the BILL VAL field.

SSB Feature: Coin dispensing

BEG CASH — The amount of money in the hopper at the start of the current balancing period. The amount of money must be divisible by the value entered in the BILL VAL field.

SSB Feature: Coin dispensing

END CASH — The amount of money in this hopper.

SSB Feature: Coin dispensing

ATD NCR 5XXX Screen 7

ATD NCR 5XXX screen 7 is a device-specific screen. The screen display for each device is dependent on the setting in the DEVICE TYPE field on ATD screen 1, which must be 22 for NCR 5XXX terminals. ATD NCR 5XXX screen 7 indicates whether the message size should be increased, and the terminal load group to which this terminal belongs.

LARGE MESSAGE MODE — Indicates whether the maximum message size and print data size should be increased to 2048 bytes. Increasing the message size allows fewer messages to be sent between the BASE24 system and the terminal for such tasks as downloading states and screens. This increased message size is not available for NCR 50XX-series terminals or 56XX-series terminals running NDC+ Release 4.0 or less, and this field must be set to a value of N. If you have the Check Processing Module (CPM) attached to a 56XX-or 58XX-series terminal,

this field must be set to a value of Y. If you have a 56XX- or 58XX-series terminal without the CPM, the large message mode is optional, but ACI recommends that you set this field to a value of Y. Valid values are as follows:

Y = Yes, increase the maximum message size.

N = No, do not increase the maximum message size.

Note: If you set this field to a value of Y, the terminal must be configured to handle large messages, and the XPNET device definition for the terminal type must specify a value of 2048 for both the XMITLEN and RECLLEN attributes.

SSB Feature: All SSB Device Handler Extension features

TERMINAL GROUP — A code indicating the terminal load group to which this terminal belongs. This code indicates the SSB states and screens that are to be loaded to this terminal when a download command is sent from the Device Control Terminal (DCT). The following table lists the terminal groups used by the SSB Device Handler Extension.

- 106 = Basic check depository support group
- 107 = Fast cash plus terminal group 106
- 108 = Statement print plus terminal group 106
- 109 = Fast cash plus statement print plus terminal group 106
- 110 = Split deposit transaction merge group
- 111 = Super Teller merge group
- 113 = Check cashing card merge group
- 706 = NCR Bunch Note Acceptor (BNA) group
- 710 = NCR Base Check Processing Module (CPM) group plus terminal groups 110 and 706
- 711 = NCR Base Check Processing Module (CPM) group
- 800 = Shared BNA cash deposit group
- 801 = Shared CPM check processing group
- 802 = Shared BNA cash deposit and check processing group
- 803 = Shared CPM Optical Character Recognition (OCR) group
- 810 = Shared CPM split deposit group

Additional groups used by the SSB Enhanced ATM Application and the SSB Enhanced Check Processing Application are designed to be merged with these groups to create the actual groups to be sent to the terminal. Refer to section 5 for a complete list of terminal groups used by the SSB product.

SSB Feature: All SSB Device Handler Extension features

ATD NCR 5XXX Screen 8

ATD NCR 5XXX screen 8 specifies the terminal receipt profile. The terminal receipt profile is used to determine whether the institution deems that a receipt should be printed for the cash check, deposit, and deposit with cash back transactions (both check and envelope), and to which printers the receipt is sent. Note that the optional receipts feature can override these values. Refer to the ***BASE24-atm NCR 5XXX Device Support Manual*** for more information on terminal receipt profiles and optional receipts.

ATD NCR 5XXX screen 8 is a device-specific screen. Screen display for each device is dependent on the setting in the DEVICE TYPE field on ATD screen 1, which must be 22 for NCR 5XXX terminals.

TERMINAL RECEIPT PROFILE — The terminal receipt profile for the terminal that initiated the transaction. The terminal receipt profile allows one or more terminals to share receipt options for approved and denied transactions. The value entered in this field must match a terminal receipt profile named in the Terminal Receipt File (TRF).

SSB Feature: Additional transaction support

ATD NCR 5XXX Screen 10

ATD NCR 5XXX screen 10 for the NCR 5XXX device is shown below, followed by descriptions of the fields related to the SSB Device Handler extension. ATD NCR 5XXX screen 10 displays the hopper contents of the two additional hoppers that can contain coins. This screen also clarifies the order in which the coin hoppers are stored, since the Coin Dispenser Module (CDM) in the terminal expects the hoppers to be loaded in one order, and the ATD expects the hoppers to be loaded in a different order. Refer to the topic “Coin Dispensing” previously described in this section for additional discussion about the coin hoppers and the order that they are filled in the terminal versus the order that they appear in the ATD.

ATD NCR 5XXX screen 10 is a device-specific screen. Screen display for each device is dependent on the setting in the DEVICE TYPE field on ATD screen 1, which must be 22 for NCR 5XXX terminals.

```

BASE24-ATM  TERMINAL DATA          LLLL  YY/MM/DD  HH:MM  10 OF 13
TERM ID:                FIID:        REGION:  BRANCH:    LN: LLLL

                HOPPER CONTENTS

                HOPPER 7              HOPPER 8
                01 (COIN)             01 (COIN)

                CONTENTS:
                BILL VAL:
STD BEG CASH:
                BEG CASH:
                CASH INCR:
                CASH DECR:
                CASH OUT:
                END CASH:
                CURRENCY CODE:        840 (US)        840 (US)

                56XX CDM HOPPER ORDER    3  2  4  1

***** BASE24 *****
NEW PAGE:                FILE DESTINATION:  NEW LOGICAL NETWORK ID:
                        F12-HELP

```

TERM ID — An identifier (terminal ID) for the terminal associated with this record. This field is entered on ATD screen 1.

FIID — The FIID of the financial institution that owns the terminal. This field is entered on ATD screen 1.

REGION — The region ID for the region in which this terminal is located. This field is entered on ATD screen 1.

BRANCH — The branch ID for the branch in which this terminal is located. This field is entered on ATD screen 1.

LN — The name of the logical network to which the terminal owner belongs. This field is entered on ATD screen 1.

CONTENTS — A code specifying the contents of each hopper. The only valid value for hoppers 7 and 8 is 01 for coins.

Field Length: 2 numeric characters
Required Field: Yes
Default Value: 01
Data Name: ATDD1.[atdd1-dev-info-ncr-5xxx].HOPR-CPM.CNTNTS
SSB Feature: Coin dispensing

BILL VAL — A value identifying the denomination of coins in the hopper. For example, for a system using U.S. currency, a value of .25 indicates that the hopper contains quarters (\$0.25).

Field Length 1–7 numeric characters
Required Field: No
Default Value: No default value
Data Name: ATDD1.[atdd1-dev-info-ncr-5xxx].HOPR-CPM.BILL-VALUE
SSB Feature: Coin dispensing

STD BEG CASH — The standard amount of money used to replenish cartridge cash dispensers. The standard amount of money must be divisible by the value entered in the BILL VAL field. For example, for a system using U.S. currency, a value of 5000 indicates that the hopper contains \$5,000.00. If this hopper contains coins, the value can contain a decimal point, for example 250.50.

This field is only used to balance terminals which utilize cartridge cash dispensers. With these types of dispensers, a new cartridge, which contains the standard amount of money, is inserted in the hopper to replace the previous cartridge.

Field Length: 1–15 numeric characters
Required Field: No
Default Value: No default value
Data Name: ATDD1.[atdd1-dev-info-ncr-5xxx].HOPR-CPM.STD-BEG-CSH
SSB Feature: Coin dispensing

BEG CASH — The amount of money in the hopper at the start of the current balancing period. The amount of money must be divisible by the value entered in the BILL VAL field. For example, for a system using U.S. currency, a value of 5000 indicates that the hopper contains \$5,000.00. If this hopper contains coins, the value can contain a decimal point, for example 250.50.

This field is used when balancing the terminal to current cash. It can differ each time the terminal is balanced. You enter the first amount in this field. Thereafter, the BASE24 product automatically maintains these amounts.

Field Length: 1–15 numeric characters
Required Field: No
Default Value: No default value
Data Name: ATDD1.[atdd1-dev-info-ncr-5xxx].HOPR-CPM.BEG-CSH
SSB Feature: Coin dispensing

CASH INCR — The amount of money added to the hopper through administrative midpoint adjustment transactions since the last balancing transaction. The amount of money must be divisible by the value entered in the BILL VAL field. For example, for a system using U.S. currency, a value of 6000 indicates that \$6,000.00 has been added to the hopper. If this hopper contains coins, the value can contain a decimal point, for example 250.50.

If balancing with standard beginning cash, an amount is entered in this field initially using this screen. Thereafter, the BASE24 product automatically maintains this field in conjunction with administrative transactions.

When balancing with either current cash or standard beginning cash, the CASH INCR field is reset to zero.

Field Length: 1–15 numeric characters
Required Field: No
Default Value: No default value
Data Name: ATDD1.[atdd1-dev-info-ncr-5xxx].HOPR-CPM.CASH-INCR
SSB Feature: Coin dispensing

CASH DECR — The amount of money removed from the hopper through administrative midpoint adjustment transactions since the last balancing transaction. The amount of money must be divisible by the value entered in the

BILL VAL field. For example, for a system using U.S. currency, a value of 89 indicates that \$89.00 has been removed from the hopper. If this hopper contains coins, the value can contain a decimal point, for example 250.50.

If balancing with standard beginning cash, an amount is entered in this field initially using this screen. Thereafter, the BASE24 product automatically maintains this field in conjunction with administrative transactions.

When balancing with either current cash or standard beginning cash, the CASH DECR field is reset to zero.

Field Length:	1–15 numeric characters
Required Field:	No
Default Value:	No default value
Data Name:	ATDD1.[atdd1-dev-info-ncr-5xxx].HOPR-CPM.CASH-DECR
SSB Feature:	Coin dispensing

CASH OUT — The amount of money dispensed from the hopper through cardholder withdrawals between terminal balancing procedures. For example, for a system using U.S. currency, a value of 240 indicates that \$240.00 has been dispensed from the hopper. If this hopper contains coins, the value can contain a decimal point, for example 250.50. The BASE24 product automatically maintains this field. When balancing with either current cash or standard beginning cash, the CASH OUT field is reset to zero.

Field Length:	1–15 numeric characters
Required Field:	No
Default Value:	No default value
Data Name:	ATDD1.[atdd1-dev-info-ncr-5xxx].HOPR-CPM.CASH-OUT
SSB Feature:	Coin dispensing

END CASH — The amount of money in this hopper. For example, for a system using U.S. currency, a value of 45000 indicates that \$45,000.00 is in the hopper. If this hopper contains coins, the value can contain a decimal point, for example 250.50. The amount in the END CASH field is entered initially using this screen. Thereafter, the BASE24 product automatically maintains the current cash amount in this field. When balancing with the current cash method, the amount in the

END CASH field is moved to the BEG CASH field (but is not cleared). When balancing with the standard beginning cash method, the amount in the STD BEG CASH field is moved to the BEG CASH and END CASH fields.

Field Length: 1–15 numeric characters
Required Field: No
Default Value: No default value
Data Name: ATDD1.[atdd1-dev-info-ncr-5xxx].HOPR-CPM.END-CASH
SSB Feature: Coin dispensing

CURRENCY CODE — Indicates the currency in the hopper, using ISO standard codes. Valid values are listed in the ISO 4217 standard, *Codes for the Representation of Currencies and Funds*.

Field Length: 1–3 numeric characters
Required Field: Yes
Default Value: The default value depends upon configuration variables.
Data Name: ATDD1.[atdd1-dev-info-ncr-5xxx].HOPR-CPM.CRNCY-CDE
SSB Feature: Coin dispensing

56XX CDM HOPPER ORDER — Four values that map the ATD hoppers to the physical coin hoppers in the terminal. NCR requires that the coin hoppers be filled by coin weight with the heaviest coin in the first coin hopper and the lightest coin in the last coin hopper, rather than by the face value of the coin. However, the Device Handler process is expecting the hoppers to be filled by face value, with the lowest coin value in the first ATD coin hopper, and the highest coin value in the last ATD coin hopper. The four values in this field are in the order of the physical coin hoppers, and you enter values from 1 to 4 indicating the order that the coin hoppers are stored in the ATD. An example of the 56XX CDM HOPPER ORDER field is described in the topic “Coin Dispensing” provided previously in this section.

Field Length: 1 numeric character in each of four fields
Required Field: No
Default Values: 3, 2, 4, and 1
Data Name: ATDS1.[atds1-dev-info-ncr-5xxx].CDM-HOPR-ORDR
SSB Feature: Coin dispensing

ATD NCR 5XXX Screen 12

ATD NCR 5XXX screen 12 configures the check scanning or imaging process in the CPM. ATD NCR 5XXX screen 12 is shown below, followed by field descriptions specific to check imaging and courtesy amount verification. These fields are highlighted. ATD NCR 5XXX screen 12 is a device-specific screen. The screen display for each device is dependent on the setting in the DEVICE TYPE field on ATD screen 1, which must be 22 for NCR 5XXX terminals. Refer to section 4 for descriptions of the remaining fields on the screen.

BASE24-ATM	TERMINAL DATA	LLLL	YY/MM/DD	HH:MM	12 OF 13
TERM ID:	FIID:	REGION:	BRANCH:	LN:	LLLL
NCR 5XXX SELF SERVICE BANKING CHECK					
CHECK SUPPORT:	TERMINAL BIN GROUP:	DEFAULT DEPOSITORY BIN:			
DEPOSITORY BIN #	COUNT	AMOUNT			
0	0	.00			
1	0	.00			
2	0	.00			
3	0	.00			
NCR 56XX CPM IMAGE CONTROL					
APPRVD TXN:	FULL BITMAP:	LIFT IMAGE LIST:	CHECK THRESHOLD:		
DH DENIED TXN:	FULL BITMAP:	LIFT IMAGE LIST:			
AUTH DENIED TXN:	FULL BITMAP:	LIFT IMAGE LIST:			
COURTESY AMT VERIFICATION RETRIES:					
ACCEPT CHECKS WHEN IMAGE ARCHIVAL FULL:					
***** BASE24 *****					
NEW PAGE:	FILE DESTINATION:	NEW LOGICAL NETWORK ID:			
	F12-HELP				

TERM ID — An identifier (terminal ID) for the terminal associated with this record. This field is entered on ATD screen 1.

FIID — The FIID of the financial institution that owns the terminal. This field is entered on ATD screen 1.

REGION — The region ID for the region in which this terminal is located. This field is entered on ATD screen 1.

BRANCH — The branch ID for the branch in which this terminal is located. This field is entered on ATD screen 1.

LN — The name of the logical network to which the terminal owner belongs. This field is entered on ATD screen 1.

NCR 56XX CPM IMAGE CONTROL

The following fields are used to specify CPM image archival for differing transaction dispositions. Currently, not all transactions may be archived because there is limited archival space available on the hard drive in the terminal.

APPRVD TXN

The following three fields specify the image control fields sent to the device if the transaction is approved by the authorization process.

FULL BITMAP — The full image scan and archive bit map to send to the device to control the scanning and archival of full document images. Refer to the *NCR NDC+ Programmer's Reference Manual* for possible values.

Field Length:	2 alphanumeric characters
Required Field:	No
Default Value:	00
Data Name:	ATDS1.[atds1-dev-info-ncr-5xxx].CPM.TXN-APPRV. FULL-IMAGE-BITMAP
SSB Feature:	Check imaging

LIFT IMAGE LIST — A flag indicating if the image zones defined in the DDF should be scanned. Valid values are as follows:

0 = Do not scan zones
1 = Scan zones

Field Length:	1 alphanumeric character
Required Field:	No
Default Value:	0
Data Name:	ATDS1.[atds1-dev-info-ncr-5xxx].CPM.TXN-APPRV. IMAGE-LIST-FLG
SSB Feature:	Check imaging

CHECK THRESHOLD — The amount of the check must be greater than or equal to this value for an image of this check to be scanned and archived.

Field Length: 1–8 numeric characters
Required Field: No
Default Value: 0
Data Name: ATDS1.[atds1-dev-info-ncr-5xxx].CPM.TXN-APPRV.CHK-THRSHLD
SSB Feature: Check imaging

DH DENIED TXN

The following two fields specify the image control fields sent to the device if the transaction is denied by the Device Handler process.

FULL BITMAP — The full image scan and archive bit map to send to the device to control the scanning and archival of full document images. Refer to the *NCR NDC+ Programmer's Reference Manual* for possible values.

Field Length: 2 alphanumeric characters
Required Field: No
Default Value: 00
Data Name: ATDS1.[atds1-dev-info-ncr-5xxx].CPM.TXN-RJCTD.FULL-IMAGE-BITMAP
SSB Feature: Check imaging

LIFT IMAGE LIST — A flag indicating if the image zones defined in the DDF should be scanned. Valid values are as follows:

0 = Do not scan zones
1 = Scan zones

Field Length: 1 alphanumeric character
Required Field: No
Default Value: 0
Data Name: ATDS1.[atds1-dev-info-ncr-5xxx].CPM.TXN-RJCTD.IMAGE-LIST-FLG
SSB Feature: Check imaging

AUTH DENIED TXN

The following two fields specify the image control fields sent to the device if the transaction is denied by the authorization process.

FULL BITMAP — The full image scan and archive bit map to send to the device to control the scanning and archival of full document images. Refer to the *NCR NDC+ Programmer's Reference Manual* for possible values.

Field Length: 2 alphanumeric characters
Required Field: No
Default Value: 00
Data Name: ATDS1.[atds1-dev-info-ncr-5xxx].CPM.TXN-DENIED.
FULL-IMAGE-BITMAP
SSB Feature: Check imaging

LIFT IMAGE LIST — A flag indicating if the image zones defined in the DDF should be scanned. Valid values are as follows:

0 = Do not scan zones
1 = Scan zones

Field Length: 1 alphanumeric character
Required Field: No
Default Value: 0
Data Name: ATDS1.[atds1-dev-info-ncr-5xxx].CPM.TXN-DENIED.
IMAGE-LIST-FLG
SSB Feature: Check imaging

COURTESY AMT VERIFICATION RETRIES — The number of retries the cardholder is allowed if courtesy amount verification (CAV) fails. Valid values are 0–9.

Field Length: 1 alphanumeric character
Required Field: No
Default Value: 0
Data Name: ATDS1.[atds1-dev-info-ncr-5xxx].CPM.CAV-RETRIES
SSB Feature: Configurable zone verification

ACCEPT CHECKS WHEN IMAGE ARCHIVAL FULL — A flag indicating if check transactions should still be accepted when the image archive space at the terminal is full. Valid values are as follows:

Y = Continue to allow check transactions when archive is full.

N = Do not allow check transactions when archive is full.

Field Length: 1 alphanumeric character

Required Field: No

Default Value: N

Data Name: ATDS1.[atds1-dev-info-ncr-5xxx].CPM.IMAGE-ARCHIVE-FULL-FLG

SSB Feature: Check imaging

Note: The other fields on this screen are configured only if you are using the SSB Enhanced Check Processing Application. Refer to the topic “Modifying the BASE24-atm Terminal Data Files” in section 4 for a description of these fields.

Modifying the Logical Network Configuration File

The Logical Network Configuration File (LCONF) enables you to define the locations of files and processes, and to define processing parameters. The LCONF is described in the *BASE24 Logical Network Configuration File Manual*. The following assign in the LCONF is used to locate the appropriate file.

ATM-DH-N50-CPLF — The fully qualified file name of the Check Proof List File (CPLF) for NCR 56XX-and 58XX-series terminals (for example, \B24.\$DATA.PRO1DATA.CPLFN50). Each Device Handler process can have a separate CPLF, or the logical network can have a single CPLF.

SSB Feature: Check proof listing

The following params in the LCONF are used for setting processing values at the logical network level.

ATM-DH-CHK-BIN-THRHLD — A value indicating the threshold of the first check pocket. Check amounts that equal or exceed this threshold value are retained in the second check pocket. All others are retained in the first pocket. Valid values include any whole amount from 0 through 9999999999. A value of 0 indicates sorting is not performed, and all checks are retained in the second pocket. The default value is 0.

Note: This param is not necessary if you have installed the SSB Enhanced Check Processing Application and are using the Bin Sort File (BSF). The default value is N

SSB Feature: Document bin sorting

ATM-DH-N50-CPLF-REQ — A code specifying whether the CPLF is required for processing. If the value in this param indicates that the CPLF is required, and the ATM-DH-N50-CPLF assign is not present, the Device Handler process abends. Valid values are as follows:

Y = Yes, the CPLF is required.

N = No, the CPLF is not required.

SSB Feature: Check proof listing

Modifying the N50NAMS File

The N50NAMS File is an edit file that contains a series of tables used by the SSB Device Handler Extension. You can edit these tables to customize specific types of information displayed on ATM receipts or screens. At the time the SSB Device Handler Extension is compiled, the information in the N50NAMS File is incorporated into the SSB Device Handler Extension object file. Therefore, you must either make the changes to this file during the SSB installation procedures before the code is compiled, or if you need to make changes after the installation is complete, you must recompile the code.

Transaction Naming Table

The transaction naming table (ncr_tran_tbl) in the N50NAMS File supports the check deposit and deposit with cash back transactions. The transaction naming table provided by ACI includes the additional transactions supported by the SSB Device Handler Extension. You are not required to make any changes to this table to support the SSB product. However, you can modify the default text.

The text is assigned according to the BASE24-atm transaction codes carried in the BASE24-atm Standard Internal Message (STM). Each of the entries in this list has one text entry. The entries in the N50NAMS File include text for three languages.

10 = WITHDRAWAL
20 = DEPOSIT
30 = INQUIRY
40 = TRANSFER
50 = PAYMENT
51 = PAYMT ENCL
60 = MSG ENCL
61 = LOGONLY
70 = STMT PRNT
81 = PIN CHANGE
99 = ADMIN

Response Code Text Table

The response code text table (ncr_response_text) in the N50NAMS File is used in conjunction with the #RT (response text) receipt type when that field is used in a receipt template for denied financial transactions. The response code text table provides additional receipt text for denied transaction receipts. This text gives the cardholder an explanation for the denied transaction and is in addition to the text provided in the receipt template. This table includes six values (140, 141, 142, 144, 147, and 178) and corresponding text for the additional transactions supported by the SSB Device Handler Extension.

The response codes in the response code text table are used internally by the Device Handler process and do not match the BASE24-atm response codes carried in the BASE24-atm Standard Internal Message (STM). For example, response code 142 in the response code text table is mapped to BASE24-atm response code 67 (invalid cash back amount).

The response code text table entries used for denied transactions with the NCR 56XX- and 58XX-series terminals are listed below with one text entry. The entries in the N50NAMS File include text for three languages. You are not required to make any changes to this table to support the SSB product. However, you can modify the default text.

1 = INVALID PIN
2 = PIN TRIES EXCEEDED
3 = ENTER LESSER AMOUNT
4 = UNABLE TO PROCESS

8	=	TRANSACTION NOT ALLOWED
9	=	UNABLE TO PROCESS
10	=	INVALID TRAN OR ACCOUNT
11	=	UNAUTHORIZED CARD USAGE
12	=	EXPIRED CARD
13	=	INVALID CARD
15	=	INVALID CREDIT CARD AMT
16	=	USES LIMIT EXCEEDED
17	=	INSUFFICIENT FUNDS
19	=	NO MATCHING SHARING GRP
20	=	CONTACT BANK
21	=	INSUFFICIENT FUNDS
24	=	UNABLE TO PROCESS
29	=	NO STATEMENT INFO
31	=	UNABLE TO DISPENSE
32	=	UNABLE TO DEPOSIT
33	=	STATEMENT INFO NOT AVAIL
34	=	DAILY WD LIMIT REACHED
38	=	UNABLE TO PROCESS
140	=	UNABLE TO ACCEPT CHECKS
141	=	UNABLE TO DISPENSE COINS
142	=	DEP MUST EXCEED CASH
144	=	NO CHECK ENTERED
147	=	UNABLE TO CASH CHECK
175	=	COURTESY AMT MISMATCH
176	=	COURTESY AMT READ ERROR
177	=	INVALID DOCUMENT
178	=	ZONE VERIFY FAILURE
179	=	RETRY COURTESY AMOUNT
180	=	TRAN COMPL DESPITE ERR
181	=	INVALID COIN AMOUNT
182	=	TRAN COMPL DOCUMENT JAM
200	=	SVC SIGNATURE CHK FAILED

Modifying the Receipt File

Customer receipts can be configured through a series of receipt templates in the RCPT. The BASE24-atm configurable receipt feature provides you with the ability to establish ATM receipt formats that are unique to the terminal. Receipt templates are used to determine the actual receipt text and format to be printed on a receipt. If you have configured the optional receipt feature, it will affect the cash check and deposit with cash back transactions. This feature allows the cardholder to determine if a receipt should be printed for a transaction.

For a complete description of the configurable receipt feature, the optional receipt feature, receipt templates, and examples of receipt templates for transactions performed at the NCR ATMs, refer to the ***BASE24-atm NCR 5XXX Device Support Manual***. For a complete description of the RCPT, refer to the ***BASE24-atm Files Maintenance Manual***.

The SSB Device Handler Extension adds configurable customer receipt support for cash check and deposit with cash back transactions to the configurable receipts available with the NCR Device Handler process.

Because each additional transaction has two customer receipts, depending on whether the proper cash amount can be dispensed, ACI has established the following receipt templates in the RCPT:

- Cash check
- Partial cash check
- Deposit with cash back
- Partial deposit with cash back

These customer receipt templates use the field type codes shown below. The data is retrieved from the BASE24-atm Standard Internal Message (STM) and the BASE24-atm Terminal Data files (ATD). Data names are included in parentheses after each field type code description. Refer to the ***BASE24-atm Transaction Processing Manual*** for further explanation of the STM data names.

Field Type Code Descriptions

The following table describes the standardized field type codes that are used in the default receipt templates provided for the SSB Device Handler Extension. You can modify these receipt templates to use the additional field type codes described in the ***BASE24-atm NCR 5XXX Device Support Manual***.

Code	Description	Length
A1	The first transaction amount (STM.RQST.AMT-1). For instance, in a partial deposit with cash back, this amount is the check total.	15 bytes
A2	The transaction amount (STM.RQST.AMT-2). For instance, in a partial deposit with cash back, this amount is the cash requested.	15 bytes

Code	Description	Length
A3	The transaction amount (STM.RQST.AMT-3). For instance, in a partial deposit with cash back, this amount is the cash received.	15 bytes
BN	The bin number 0–2 generated by the Device Handler process (ATM.NCR.SSB-INFO.CPLF-SAVE.BIN-PROC).	1 byte
CQ	The transaction sequence number (CPLF.CPLF-KEY.SEQ-NUM). This code is allowed only for CPLF records.	4 bytes
E ^x	Space compression code. This code places spaces on the receipt. The value <i>x</i> is the number of spaces in hexadecimal, and must be in the range of 1–F.	
KA	The total amount of checks (ATM.NCR.SSB-INFO.CPLF-SAVE.AMT-CHK-DEP). The totals line is generated by the Device Handler process.	16 bytes
KN	The total number of checks (ATM.NCR.SSB-INFO.CPLF-SAVE.NUM-CHK-DEP). The totals line is generated by the Device Handler process.	4 bytes
MD	The MICR information from the check (CPLF.CPLF-KEY.MICR). This code is allowed only for CPLF records.	43 bytes
MI	Print the MICR information from the MICR Data token in the STM (MICR-DATA-TKN.MICR-DATA). One possible use is for printing the MICR information on the journal for check related transactions.	40 bytes
ND	The net deposit amount (STM.RQST.AMT-1 minus STM.RQST.AMT-2).	15 bytes
NP	The net deposit amount for a partial dispense transaction (STM.RQST.AMT-1 minus STM.RQST.AMT-3).	15 bytes
PA	The amount of the check (CPLF.AMT). This code is allowed only for CPLF records.	15 bytes
PN	The page number (generated by the Device Handler process).	4 bytes

Code	Description	Length
PS	The status of the check (CPLF.STAT). This code is allowed only for CPLF records.	1 byte
RC	The response code (STM.RQST.RESP).	2 bytes
RT	The response text (located in the N50NAMS File, in the ncr_response_text table). This code is used with denied transaction receipts. The printed receipt text depends on the value of ATM.NCR.TXN-RESP-CDE.	24 bytes
SQ	The four-digit BASE24 sequence number assigned to the transaction (ATDD1.ATDD1-CORE.TXN-SEQ-NUM).	4 bytes
TO _{l,r,c}	The <i>to</i> account number (STM.RQST.TO-ACCT). If the STM.RQST.TO-ACCT field is all blanks or zeros, the Device Handler process uses the account description from the ncr_appl_tbl table in the N50NAMS File. The value of the STM.RQST.TO-ACCT-TYP field and the language indicator determine which table entry is used. The three variables (<i>l</i> for characters starting from the left, <i>r</i> for characters starting from the right, and <i>c</i> for the character code) are used to control the truncation of the card number. If the variables are not present, the account number is printed in its entirety. Refer to the <i>BASE24-atm NCR 5XXX Device Support Manual</i> for additional information about how these variables are used in account number truncation.	19 bytes
TT	The transaction type (located in the ncr_tran_tbl table in the N50NAMS File). The transaction code printed depends on the value in the STM.TXN-CDE field. The Device Handler process searches the ncr_tran_tbl table in the N50NAMS File to find a match on the transaction code. The corresponding text is then moved to the print buffer.	10 bytes
VZ	Print the verify zone error text. This code uses the appropriate entries from the zone_vrfy_err_txt table in the SSDHNAMS File. This code should be the only one on the RCPT line (except for leading spacing) and should not be followed by the new line code ('>').	40 bytes

Cash Check Receipt

The receipt type CACK is used for a cash check transaction. No account is associated with cash check transactions. The NCR 56XX-and 58XX-series ATM default receipt template defined in the RCPT is shown below, followed by a graphic example of the default receipt for a cash check transaction.

```
#E^4@RECORD NO.#E^F    #SQ>
#E^4@CASH CHECK#E^7#A1$>>
```

1	CUSTOMER LOGO SCREEN		
2			
3	DATE	TIME	TERM
4	YY/MM/DD	HH:MM	S1A10000
5			
6	1234567890123456789-000		
7			
8	330 SOUTH 108TH AVE		
9			
10	RECORD NO.	838	
11	CASH CHECK	\$27.35	
12			
13			
14			
15			
16			
17			
18			
19			
20			
21			

1
2
3

123456789012345678901234567890

Deposit With Cash Back Receipt

The receipt type DPCB is used for a deposit with cash back transaction, where the deposit is made either by envelope or by inserting the check directly into the terminal. The NCR 56XX-and 58XX-series ATM default receipt template defined in the RCPT is shown below, followed by a graphic example of the default receipt for a check deposit with cash back transaction.

```
#E^4@RECORD NO.#E^F    #SQ>
#E^4@DEPOSIT AMOUNT    #A1$>
#E^4@LESS CASH BACK    #A2$>
#E^4@NET DEPOSIT#E^6#ND$>>
#E^4@TO#E^5#TO>>
```

1	CUSTOMER LOGO SCREEN		
2			
3	DATE	TIME	TERM
4	YY/MM/DD	HH:MM	S1A10000
5			
6	1234567890123456789-000		
7			
8	330 SOUTH 108TH AVE		
9			
10	RECORD NO.	840	
11	DEPOSIT AMOUNT	\$1000.00	
12	LESS CASH BACK	\$400.00	
13	NET DEPOSIT	\$600.00	
14			
15	TO SAVINGS		
16			
17			
18			
19			
20			
21			

1
2
3

123456789012345678901234567890

Partial Cash Check Receipt

The receipt type PCCK is used for a cash check transaction when the full amount cannot be dispensed. No account is associated with cash check transactions; therefore the amount not dispensed is not credited to the cardholder. The NCR 56XX- and 58XX-series ATM default receipt template defined in the RCPT is shown below, followed by a graphic example of the default receipt for a partial cash check transaction.

```
#E^4@RECORD NO.#E^F    #SQ>
#E^4@CASH CHECK#E^7#A1$>
#E^4@CASH RECEIVED#E^4#A2$>>
```

1	CUSTOMER LOGO SCREEN		
2			
3	DATE	TIME	TERM
4	YY/MM/DD	HH:MM	S1A10000
5			
6	1234567890123456789-000		
7			
8	330 SOUTH 108TH AVE		
9			
10	RECORD NO.	838	
11	CASH CHECK	\$40.00	
12	CASH RECEIVED	\$20.00	
13			
14			
15			
16			
17			
18			
19			
20			
21			

1	2	3
123456789012345678901234567890		

Partial Deposit with Cash Back Receipt

The receipt type PDPC is used for a deposit with cash back transaction, in which only a partial amount of the requested cash back is dispensed. The deposit can be made either by envelope or by inserting the check directly into the terminal. The NCR 56XX- and 58XX-series ATM default receipt template defined in the RCPT is shown below, followed by a graphic example of the default receipt for a partial deposit with cash back.

```
#E^4@RECORD NO.#E^F#E^3#SQ>
#E^4#TT@AMT#A1$>
#E^4@CASH REQUESTED#E^3#A2$>
#E^4@CASH RECEIVED#E^4#A3$>
#E^4@NET DEPOSIT#E^6#NP$>>
#E^4@TO#E^5#TO>>
```

1	CUSTOMER LOGO SCREEN		
2			
3	DATE	TIME	TERM
4	YY/MM/DD	HH:MM	S1A10000
5			
6	123456789123456789-000		
7			
8	330 SOUTH 108TH AVE		
9			
10	RECORD NO.	840	
11	AMT	\$1000.00	
12	CASH REQUESTED	\$400.00	
13	CASH RECEIVED	\$200.00	
14	NET DEPOSIT	\$800.00	
15			
16	TO SAVINGS		
17			
18			
19			
20			
21			

1 2 3
123456789012345678901234567890

Denied Transaction Receipt

The receipt type DENY can be used to inform the cardholder why a transaction was denied. In addition to the response code and response text, one or more lines can be printed describing the verify zones that had information in them when they should not, or no information when they should. The VZ code must not have a line feed code (>) after it, because the Device Handler process determines if the VZ text is more than one line. The NCR 56XX- and 58XX-series ATM default receipt template defined in the RCPT is shown below, followed by a graphic example of the default receipt for a denied transaction.

```
#E^4@RECORD NO.#E^A#SQ>
#E^4#TT>>
#E^4@TRANSACTION DECLINED>
#E^4#RC>
#E^4#RT>
#E^4#VZ
```

1	CUSTOMER LOGO SCREEN		
2			
3	DATE	TIME	TERM
4	YY/MM/DD	HH:MM	S1A10000
5			
6	1234567890123456789-000		
7			
8	330 SOUTH 108TH AVE		
9			
10	RECORD NO.	908	
11	CASH CHECK		
12			
13	TRANSACTION DECLINED		
14	0		
15	UNABLE TO ACCEPT CHECKS		
16			

1
2
3

123456789012345678901234567890

Check Proof List Administrative Receipt

The check proof list administrative receipt consists of three parts: header, check information, and totals. Each part has its own template in the Receipt File (RCPT).

Header Template. The header contains the number of the bin being processed and the page number. The check proof list for each check bin is kept separate and is preceded by the standard transaction header. On the first page of the check proof list, the bin number is printed on the line preceding the list of transactions. On subsequent pages, the number of the bin being processed and the page number are printed at the top of the page. The following is the default template for the check proof list header (receipt type CPLH):

```
@BIN #BN #PN>
```

Detail Template. The detailed description for each check contains the check MICR information (first 43 bytes), a BASE24-atm sequence number, and the check amount. The check amounts are formatted with the number of decimal places configured for the system. A maximum of 43 bytes of MICR information are printed. The MICR information is allowed to wrap to the next line if it exceeds 35 characters. The * appears just after the sequence number for checks that are suspect (for example, unapproved check retained status). A line feed and carriage return are included at the end of each receipt line.

The MICR information contains two symbols to separate the sequential check number, the transit field and the account field; however, these symbols are lower case letters and the default font for the terminal does not have a lower case alphabet, so they appear as other characters. Note that the transit and on-us symbols used in the MICR information will change if you have the SSB Enhanced Check Processing Application. Refer to the topic “Processing MICR Information” in section 4 for additional discussion about the symbol translation.

Original NCR MICR Symbol	Printed on Receipt with SSB Device Handler Extension	Printed on Receipt with SSB Enhanced Check Processing Application
c	Å	*
d	Ä	T

The following is the default template for the check proof list check information (receipt type CPLC):

```
#MD @SEQ#CQ#PS #PA$>
```

Subtotal Template. A subtotal line is printed after each bin. The subtotal line is preceded by a blank line and followed by a form feed to break the page. This line includes the bin number in parentheses, the number of checks in the bin, and the total amount of the checks in the bin. The following is the default template for the check proof list totals information (receipt type CPLT):

```
>@TOTALS (#BN@) :    NO .                #KN>
                   @AMOUNT    #KA$>>
```

Sample Check Proof List Administrative Receipt. An example of an NCR 56XX-and 58XX-series ATM receipt for an administrative check proof list transaction for bin #1 (pocket A) is shown below. Note that this example shows the receipt with only the SSB Device Handler Extension installed, **not** with the SSB Enhanced Check Processing Application installed.

1	CUSTOMER LOGO SCREEN		
2			
3	DATE	TIME	STATION
4	YY/MM/DD	HH:MM	S1A10035
5			
6			
7	CARD NUMBER		
8	1234567890123456789-000		
9			
10	LOCATION		
11	330 SOUTH 108TH AVE		
12			
13			
14	BIN #1		
15	Å001020Å	Å043000096Å	00000000Å
16		SEQ 0777	\$10.00
17	Å001026Å	Å043000096Å	00000000Å
18		SEQ 0779	\$12.50
19	Å001021Å	Å043000096Å	00000000Å
20		SEQ 0780	\$22.00
21	Å001024Å	Å043000096Å	00000000Å
22		SEQ 0789	\$20.00
23	Å001017Å	Å043000096Å	00000000Å
24		SEQ 0791	\$22.22
25	Å001027Å	Å043000096Å	00000000Å
26		SEQ 0824	\$35.00
27	Å001027Å	Å043000096Å	00000000Å
28		SEQ 0833	\$35.00
29	Å001017Å	Å043000096Å	00000000Å
30		SEQ 0860	\$10.00

1	2	3
12345678901234567890123456789012345		

1	BIN #1	PAGE 02
2	Ä043000096Ä	0137Ä10000004Ä
3	SEQ 0877	\$20.00
4		
5	TOTALS (1) : NO.	09
6	AMOUNT	\$186.72

1 2 3
12345678901234567890123456789012345

Administrative Subtotals Receipt. The following page provides an example of NCR 56XX-and 58XX-series ATM default receipts for an administrative subtotal transaction. The administrative subtotal transaction includes two receipt formats—hopper information (receipt type ADHO) and totals information (receipt type ADTO). The coin and check totals are highlighted. The check total is the total number of checks accepted at the terminal. Separate totals are provided for each check bin. If no coin hopper exists, the coin totals are not included on the receipt. The TOT item is the total number of envelope deposits, commercial deposits, payments enclosed, messages enclosed, and checks.

```
1      CUSTOMER LOGO SCREEN
2
3      DATE      TIME      STATION
4      YY/MM/DD  HH:MM     S1A10035
5
6      CARD NUMBER
7      1234567890123456789-000
8
9      LOCATION
10     330 SOUTH 108TH AVE
11
12     C1 STR    $10000
13     C1 INC      $0    C1 DEC      $0
14     C1 OUT     $15    C1 END     $9985
15     C2 STR    $10000
16     C2 INC      $0    C2 DEC      $0
17     C2 OUT     $110   C2 END     $9890
18     C3 STR    $10000
19     C3 INC      $0    C3 DEC      $0
20     C3 OUT     $320   C3 END     $9680
21     C4 STR    $10000
22     C4 INC      $0    C4 DEC      $0
23     C4 OUT     $80    C4 END     $9920
24     C5 STR $1000.00
25     C5 INC  $2.25  C5 DEC  $10.25
26     C5 OUT  $0.25  C5 END $991.75
27     C6 STR $400.00
28     C6 INC  $0.00  C6 DEC  $0.00
29     C6 OUT  $0.05  C6 END $399.95
30     C7 STR $200.00
31     C7 INC  $0.00  C7 DEC  $0.00
32     C7 OUT  $0.01  C7 END $199.99
33     C8 STR $400.00
34     C8 INC  $10.10  C8 DEC  $0.10
35     C8 OUT  $0.10  C8 END $409.90
36     DEP0 00 DEP1 00 CHK 00
37     MSG 00 PAY 00
38     TOT 00 CRD 00 SUB
```

```
1      2      3
123456789012345678901234567890
```

Journal Receipt

The receipt type CHKJ is used for check related transactions journal data. Typically, you would use this template if you want the MICR information to be printed on the journal with the journal receipt. The information is printed in 40 character lines; if there are more than 40 characters in the MICR information, additional lines are printed.

#MI

Modifying the SSDHNAMS File

The SSDHNAMS File is an edit file that contains a series of tables that are used by the SSB Device Handler Extension. You can edit these tables to customize specific types of information displayed on ATM receipts or screens. At the time the SSB Device Handler Extension is compiled, the information in the SSDHNAMS File is incorporated into the SSB Device Handler Extension object file. Therefore, you must either make the changes to this file during the SSB installation procedures before the code is compiled, or if you need to make changes after the installation is complete, you must recompile the code.

SSB Transaction Text Tables

The following tables are set up so you can determine the exact text to be used on receipts and screens. Note that the order and length within each table is essential and should not be altered. Only the text can be changed, **not** the order or length of the table.

The ncr_ssb_dh_tran_tbl table used for SSB transactions with the NCR 56XX-and 58XX-series terminals are listed below with one text entry. The entries in the SSDHNAMS File include text for three languages. You are not required to make any changes to this table to support the SSB product. However, you can modify the default text. The ncr_ssb_dh_tran_tbl table includes the following transactions:

11 = CASH CHECK
20 = DEPOSIT
24 = DP CSH BCK

The ncr_check_verbage table contains the text CHK, which is added to the front of the above three transactions if the check is inserted directly into the terminal without an envelope.

Zone Verification Table

The zone verification table (ncr_dpm_zone_verify_tbl_chk) in the SSDHNAMS File contains a mask used by the SSB Device Handler Extension to validate the zone verification field in the native mode transaction request message. This particular mask is used for additional transactions (note that the document entered by the cardholder must be a check). The Zone Verification field in the transaction request indicates if the particular VERIFY_ZONE_*x* field is blank or contains a mark of some kind. Refer to the *NCR NDC+ Programmer's Reference Manual* for additional information on configurable zone verification. Customers can change the values contained in quotation marks in this table; but **must not** change the table size. The text following the exclamation points (!) are comments that are not used in processing, and that you can edit for your clarification.

```
?section ncr_dpm_zone_verify_tbl_chk
  literal zone_verify_tbl_chk_lgth = 10;
  string  zone_verify_tbl_chk = 'p' := [
    " ",      ! Verify_Zone_1
    " ",      ! Verify_Zone_2
    " ",      ! Verify_Zone_3
    " ",      ! Verify_Zone_4
    " ",      ! Verify_Zone_5
    " ",      ! Verify_Zone_6
    " ",      ! Verify_Zone_7
    " ",      ! Verify_Zone_8
    " ",      ! Verify_Zone_9
    " " ];    ! Verify_Zone_10
```

You can enter the following valid values between the quotation marks in this table:

B = The zone must be blank.

M = The zone must be marked (that is, nonblank).

b = Do not check the zone (where *b* is a space).

Modifying the Terminal Receipt File

Receipt requirements for approved and denied transactions are defined in the Terminal Receipt File (TRF). Transactions are designated by an ISO processing code consisting of the transaction code, *from* account type, and *to* account type.

The following transaction codes are used with the deposit with cash back and check cashing transactions:

Transaction	Transaction Code	To Account Type	From Account Type
Deposit to Checking with Cash Back	24	00	01
Deposit to Savings with Cash Back	24	00	11
Deposit to Other with Cash Back	24	00	60
Cash Check	11	00	00

Refer to the *BASE24-atm Files Maintenance Manual* for more information about the TRF screens. Refer to the *BASE24-atm Transaction Processing Manual* for more information about how the NCR 5XXX Device Handler process uses the TRF.

Modifying the Token File

The SSB Device Handler Extension uses the Token File (TKN) to configure data tokens that carry additional information in internal messages. These tokens are logged to various files, are extracted, or are sent to the host. The TKN specifies the following information:

- The tokens that get logged to the BASE24-atm Transaction Log File (TLF) and the Interchange Log File (ILF).
- The tokens that get extracted from the transaction log files by the Super Extract process. Extracting allows the token information to be processed by the host.
- The tokens that get sent to the host with each transaction in the ISO-based external message.

The SSB Device Handler Extension uses the MICR Data token (token ID 12) to carry the Magnetic Ink Character Recognition (MICR) data. This token is used by the MICR processing feature.

The SSB Device Handler Extension also uses the Additional Hopper token (token ID 22) to contain totals for hoppers 7 and 8. This token is used by the coin dispensing feature for administrative transactions, such as balancing the terminal.

The TKN must be modified to ensure that these tokens get logged to the appropriate transaction log files, to ensure that these tokens are extracted from the TLF, and to ensure that these tokens get sent from the BASE24 system to the ISO-based BASE24 Host Interface process or the ISO-based BIC Interface process in the external message.

Refer to the ***BASE24 Tokens Manual*** for complete information on the MICR Data and Coin Hoppers tokens and on using the TKN to specify tokens to be sent in the external message. Refer to the ***BASE24 Base Files Maintenance Manual*** for detailed field descriptions for the TKN screen.

3: BASE24-atm SSB Enhanced ATM Application

The BASE24-atm self-service banking (SSB) Enhanced ATM Application is one of three add-on applications that make up the BASE24-atm self-service banking product.

The first half of this section describes the processing enhancements that each feature of the SSB Enhanced ATM Application provides. The following topics describe the files and fields that must be modified to properly configure the SSB Enhanced ATM Application. Information in the fields and files required for individual features is also included if you want to configure only certain features.

The SSB Enhanced ATM Application supports the following features in conjunction with NCR 5XXX terminals:

- Transaction time windows
- Split deposit transaction
- Configurable bill dispensing
- Configurable depository print
- Statement print host communications
- Super Teller

Transaction Time Windows

Transaction time windows enable you to control the types of transactions performed at the ATM during specific times during the day and days of the week. Using this feature, you can restrict time consuming transactions to off-peak time periods.

For example, statement print transactions take a significant amount of time to complete and can impact the availability of the terminal. You can specify that these transactions take place only during a low volume transaction traffic period.

When the NCR 5XXX Device Handler process is initialized, it reads the ATM-DH-PEAK-LEAD-TIME param in the LCONF. It then reads the transaction window information from the PEAK WINDOW LOAD GROUP, STANDARD WINDOW LOAD GROUP, PEAK TIME START, and PEAK TIME END fields in the BASE24-atm Terminal Data files (ATD) record of each terminal to determine which terminals are using the transaction time window feature. Two load groups must be configured and at least one pair of the transaction peak time start and end fields in the ATD must contain nonzero values for a terminal to use the transaction time window feature.

Values in the following LCONF param and fields on ATD NCR 5XXX screen 11 determine when to load the transaction load group specified for the peak transaction period:

- PEAK WINDOW LOAD GROUP and STANDARD WINDOW LOAD GROUP fields on ATD NCR 5XXX screen 11.

If the values in these fields are equal or if the value in either field is 0, the NCR 5XXX Device Handler process does not perform peak window timing.

When these fields contain nonzero values that are unequal, the NCR 5XXX Device Handler process uses the groups specified in the PEAK WINDOW LOAD GROUP and STANDARD WINDOW LOAD GROUP fields as the transaction load groups.

- WORKDAY PEAK TIME START and WEEKEND/HOLIDAY PEAK TIME START field settings on ATD NCR 5XXX screen 11 indicate when the transaction load group specified in the PEAK WINDOW LOAD GROUP field is loaded.
- WORKDAY PEAK TIME END and WEEKEND/HOLIDAY PEAK TIME END field settings on ATD NCR 5XXX screen 11 indicate when the transaction load group specified in the STANDARD WINDOW LOAD GROUP field is loaded.

- The ATM-DH-PEAK-LEAD-TIME param in the LCONF indicates how many minutes prior to the time in the PEAK TIME START field the download of the transaction load group specified in the PEAK WINDOW LOAD GROUP field should begin. Valid values are 0 through 1440 minutes.

If the transaction time window feature has not been specified, the NCR 5XXX Device Handler process uses the load group specified in the TERMINAL GROUP field on ATD NCR 5XXX screen 7 and the steps described here are not performed. Note that the NCR 5XXX Device Handler process must wait until ATMs using the NCR 5XXX Dial-Up Device Handler extension are connected before performing these steps.

For each terminal that is up, open, and has the time window feature specified (and is dialed in, if necessary), the NCR 5XXX Device Handler process performs the following steps:

1. Determines whether the current day is a weekend or holiday by using the holiday table in the Institution Definition File (IDF). This enables the NCR 5XXX Device Handler process to determine whether to use the WORKDAY PEAK TIME START field or the WEEKEND/HOLIDAY PEAK TIME START field in the ATD (screen 11) to calculate the initial peak transaction load time.
2. Calculates the load time for the peak period load group by subtracting the time specified in the ATM-DH-PEAK-LEAD-TIME param from the initial time in either the WORKDAY PEAK TIME START field or the WEEKEND/HOLIDAY PEAK TIME START field.
3. Compares the current system time, adjusted by the value in the TIME OFFSET field on ATD screen 1, with the peak transaction load time from step 2 to determine if the current day's peak period start time has already passed.

If the current day's peak period start time has not passed, the NCR 5XXX Device Handler process sets a timer for the current day's peak period start time. When this timer expires, processing continues with step 4.

If the current day's peak period start time has passed, the NCR 5XXX Device Handler process performs steps 1 and 2 for the next day instead of the current day, then sets a timer for the next day's peak period start time. When this timer expires, processing continues with step 4.

The peak period transaction load group is not used for the current day when the NCR 5XXX Device Handler process is initialized or reloaded after the current day's peak period start time has passed, even if the peak period end time has not yet been reached.

4. Performs the load group request in the same manner as if it had received a load group request using the Device Control Terminal (DCT) except it uses the value in the PEAK WINDOW LOAD GROUP field OF the ATD rather than the value in the TERMINAL GROUP field of the ATD.
5. Sets an end peak timer based on the time in either the WORKDAY PEAK TIME END field or the WEEKEND/HOLIDAY PEAK TIME END field. When this timer expires, processing continues with step 6.
6. Performs the load group request in the same manner as if it had received a load group request using the Device Control Terminal (DCT) except it uses the value in the STANDARD WINDOW LOAD GROUP field of the ATD rather than the value in the TERMINAL GROUP field of the ATD.
7. Sets a timer for the peak transaction load time for the next day. The NCR 5XXX Device Handler process determines whether the next day is a weekend or holiday by using the holiday table in the IDF. The process then goes through the same processing as outlined above.

The NCR 5XXX Device Handler process has either a start peak window timer or an end peak window timer set at all times for each terminal that is using the transaction time window feature.

Note: Care must be taken in the timing of operator-initiated loads to avoid overriding the special transaction load groups defined with the SSB Enhanced ATM Application.

System performance is impacted by the additional load sequence prior to and following the specified peak window period. Therefore, you should consider using small peak window and standard window load groups. Ideally, these load groups contain only menu screens and states.

Split Deposit Transaction

With a split deposit transaction, an ATM customer can deposit money into two accounts in a single transaction. For example, a customer can deposit \$100 (U.S. dollars) to a checking account and \$200 to a savings account from a \$300 deposit. If the terminal is not equipped with a Check Processing Module (CPM), the deposit can only be made by envelope; if the terminal is equipped with a CPM and you have purchased the SSB Device Handler Extension, the deposit can be made either by envelope or by inserting the check directly into the terminal.

A deposit can be split between a maximum of two accounts. The following options are available:

- Two checking accounts (checking/checking)
- Two savings accounts (savings/savings)
- One checking account and one savings account (checking/savings)

You can control which of these split deposit transactions are available to your customers. Each transaction type has its own flag in the Institution Definition File (IDF). Refer to the ***BASE24-atm Transaction Processing Manual*** for the transaction codes used by the split deposit transaction.

The authorization method affects which split deposit transactions can be offered. All three of the split deposit transactions can be offered with the Positive Authorization and Positive Balance Authorization methods because the BASE24 database contains individual account numbers in the Cardholder Authorization File (CAF). Having account numbers available permits the BASE24-atm Authorization process to distinguish between two accounts of the same type (two checking accounts or two savings accounts).

Only the checking/savings split deposit transaction can be offered with the Negative Authorization with Usage Accumulation, Negative Authorization without Usage Accumulation, or host authorization methods. These methods do not use the CAF; therefore they do not have account numbers available. As a result, the BASE24-atm Authorization process must use the account type to distinguish between two accounts.

Note: The ISO-based BASE24 Host Interface process or the ISO-based BIC Interface process must be used to send this data to a host or co-processor. The external messages used by the ANSI-based BASE24 Host Interface process and the ANSI-based BIC Interface process do not carry the data needed for split deposit transactions.

Configurable Bill Dispensing

The configurable bill dispensing feature gives you the flexibility to determine, by terminal, which bill denominations are dispensed during a transaction. This flexibility provides you with more terminal servicing controls. The method used to dispense bills from the terminal is selected on ATD NCR 5XXX screen 7. The thresholds method is further defined on ATD NCR 5XXX screen 11 and the configurable dispense algorithm method is further defined on ATD NCR 5XXX screen 13.

The following methods are provided for dispensing bills:

- Least bills method
- Configurable dispense algorithm method
- Thresholds method

Least Bills Method

The DISPENSE ALGORITHM must be set to zero to use the least bills method of bill dispensing. When the least bills method is used, the NCR 5XXX Device Handler process calculates the hopper bill counts from high to low bill denomination for the bill dispensing. For a withdrawal of \$422 (U.S. dollars), for example, a terminal that contains \$1, \$5, \$20, and \$50 bills will determine the number of bills to be dispensed by dispensing as many \$50 bills as possible (8 bills), then when the amount left to be dispensed is below \$50, one \$20 bill and two \$1 bills will be dispensed, for a total of 11 bills. This method is the same as that used with the BASE24-atm standard product and is used if you enter zero in the DISPENSE ALGORITHM field on ATD screen 7. For more information on the least bills method of bill dispensing, see the *BASE24-atm NCR 5XXX Device Support Manual*.

Configurable Dispense Algorithm Method

To use the configurable dispense algorithm method of bill dispensing, the DISPENSE ALGORITHM field on ATD screen 7 must be set to a value of 2, and three values on ATD screen 13 need to be defined in the following fields: the START DISPENSE AMT, STOP DISPENSE AMT, and MAX BILLS. The algorithm uses the start and stop amounts with the maximum number of bills allowed to calculate the correct number of bills to dispense.

The START DISPENSE AMT field contains a monetary value at which the hopper begins to dispense bills. This field is optional. For example, if a hopper contains \$50 (U.S. dollars) bills and the value in this field is set to 200, the terminal would only dispense \$50 bills if the amount to be dispensed is \$200 or more.

The STOP DISPENSE AMT field establishes the amount at which the terminal stops dispensing from that hopper. This field is required. For example, if a hopper contains \$50 bills and the value in this field is set to 100, the terminal would dispense \$50 bills until the amount remaining to be dispensed is less than \$100. Using the start dispense scenario described above and a \$200 transaction, the terminal would dispense \$100 from the \$50 bill hopper and the remaining amount from the hopper with the next highest bill value.

The MAX BILLS field determines the maximum number of bills to be dispensed from a particular hopper for any transaction.

For more information on the configurable dispense algorithm method of bill dispensing, see the *BASE24-atm NCR 5XXX Device Support Manual*.

Thresholds Method

The thresholds method (i.e., the DISPENSE ALGORITHM on ATD NCR 5XXX screen 7 is set to a value of 1) enables you to have more control over the bills that are dispensed. To use the thresholds method, you define two values on ATD NCR 5XXX screen 11 at the terminal hopper level: THRESHOLD and MAX BILLS. These values are used in combination to determine the monetary amount and the number of bills dispensed from each hopper for a given transaction.

The value of the MAX BILLS field establishes the maximum number of bills of a particular denomination that can be dispensed from a particular hopper on any given transaction. This value allows you to limit the number of bills of one value to be dispensed (for example, to conserve the amount of currency in the hopper).

The value of the THRESHOLD field establishes a lower limit for the currency amount that can be dispensed from a particular hopper. This value allows you to limit the amount of currency dispensed in one bill type for the customer's convenience. For example, if a terminal is dispensing U.S. dollars and the threshold for a particular hopper is set at 200, then only an amount greater than or equal to \$200 can be dispensed from that hopper on any given transaction.

The transaction amount is compared to the value of the THRESHOLD field for the hopper containing the highest bill value. If the transaction amount is greater than or equal to the threshold, a bill is dispensed; otherwise, the next highest hopper is

checked by the same comparison. After each bill is dispensed, the NCR 5XXX Device Handler process checks that the amount remaining to be dispensed is greater than or equal to the threshold value. Also, it checks that the number of bills already dispensed is less than or equal to the value of the MAX BILLS field. At the time the transaction dispensing fails to meet either of these criteria, the hopper with the next highest denomination is used to dispense the currency; otherwise, another bill is dispensed from the same hopper.

The following is an example of how a terminal hopper could be configured in the ATD fields:

Hopper	BILL VAL	THRESHOLD	MAX BILLS
1	50 (\$)	200	50

In this example, the hopper is configured for \$50 bills and any amount over \$200 can be dispensed from this hopper for any individual transaction up to a maximum number of 50 bills.

The following examples are provided if you want to implement the thresholds method. Example 1 includes a table illustrating the step-by-step calculations performed as each bill is dispensed. In all three of these examples, the terminals are configured to dispense U.S. dollars.

Example 1

The following example gives an example of how the ATD fields could be configured for each hopper.

ATD Field	Hopper 1	Hopper 2	Hopper 3	Hopper 4
BILL VAL	1	5	20	50
THRESHOLD	1	5	20	200
MAX BILLS	5	15	50	50

Using the above example, for a transaction amount of \$422, the bills are dispensed as follows:

Denomination	Number Dispensed	Amount Dispensed
\$50	5 bills	\$250
\$20	8 bills	\$160
\$5	2 bills	\$10
\$1	2 bills	\$2
Total	17 bills	\$422

The amount remaining to be dispensed and the number of bills already dispensed determine whether additional bills of a currency can be dispensed. Both of these calculations are made after each bill is dispensed. A total of 17 bills were dispensed in example 1.

In the following table, each step shows the calculations made before dispensing each bill. The amount remaining to be dispensed and the value of the THRESHOLD field are compared to determine the hopper, then the number of bills and the value of the MAX BILLS field are compared to determine whether another bill can be dispensed from the selected hopper. The hopper number changes in steps 6, 14, and 16. In step 6, a \$20 bill is dispensed instead of another \$50 bill, even though the amount remaining to be dispensed is greater than \$50, because the amount remaining to be dispensed at this point (\$172) is below the \$200 threshold that is set for \$50 bills. The maximum number of bills is not a factor in this example.

Step	Amount Remaining to be Dispensed	THRESHOLD	Hopper	BILL VAL	Number of Bills Dispensed	MAX BILLS	Total Amount Dispensed
							0
1	\$422	\$200	4	\$50	1	50	\$50

Step	Amount Remaining to be Dispensed	THRESHOLD	Hopper	BILL VAL	Number of Bills Dispensed	MAX BILLS	Total Amount Dispensed
2	\$372	\$200	4	\$50	2	50	\$100
3	\$322	\$200	4	\$50	3	50	\$150
4	\$272	\$200	4	\$50	4	50	\$200
5	\$222	\$200	4	\$50	5	50	\$250
6	\$172	\$20	3	\$20	1	50	\$270
7	\$152	\$20	3	\$20	2	50	\$290
8	\$132	\$20	3	\$20	3	50	\$310
9	\$112	\$20	3	\$20	4	50	\$330
10	\$92	\$20	3	\$20	5	50	\$350
11	\$72	\$20	3	\$20	6	50	\$370
12	\$52	\$20	3	\$20	7	50	\$390
13	\$32	\$20	3	\$20	8	50	\$410
14	\$12	\$5	2	\$5	1	15	\$415
15	\$7	\$5	2	\$5	2	15	\$420
16	\$2	\$1	1	\$1	1	5	\$421
17	\$1	\$1	1	\$1	2	5	\$422
	0						

Example 2

The following example shows a different ATD configuration than that used in example 1:

ATD Field	Hopper 1	Hopper 2	Hopper 3	Hopper 4
BILL VAL	1	5	20	50
THRESHOLD	1	1	1	1
MAX BILLS	5	20	50	6

Using the above example, for a transaction amount of \$422, the bills are dispensed as follows:

Denomination	Number Dispensed	Amount Dispensed
\$50	6 bills	\$300
\$20	6 bills	\$120
\$5	0 bills	0
\$1	2 bills	\$2
Total	14 bills	\$422

Example 3

The following example shows a different ATD configuration than was shown for examples 1 or 2:

ATD Field	Hopper 1	Hopper 2	Hopper 3	Hopper 4
BILL VAL	1	5	20	50
THRESHOLD	1	10	20	200
MAX BILLS	5	15	50	50

Using the above example, for a transaction amount of \$29, the transaction is declined because there is no bill combination defined that adds up to \$9.

To correct this situation, you could increase the \$1 max bills to 9 resulting in the following bill breakdown:

Denomination	Number Dispensed	Amount Dispensed
\$50	0 bills	0
\$20	1 bill	\$20
\$5	0 bills	0
\$1	9 bills	\$9
Total	10 bills	\$29

Or, you could lower the \$5 threshold amount to 5 resulting in the following bill breakdown:

Denomination	Number Dispensed	Amount Dispensed
\$50	0 bills	0
\$20	1 bill	\$20
\$5	1 bill	\$5
\$1	4 bills	\$4
Total	6 bills	\$29

Configurable Depository Print

To facilitate the back-office depository settlement process, you can configure depository print data by terminal-owning institution and transaction type. With the SSB Enhanced ATM Application installed, the NCR 5XXX Device Handler process can format configurable depository print data using the same concept used to format configurable receipt data. The NCR 5XXX Device Handler process converts the information in the depository print template in the same manner that it converts the information in the receipt templates that support formatting ATM receipts.

A depository print template determines the information printed on documents placed in the terminal depository. The BASE24-atm Receipt File (RCPT) contains one default depository print template (receipt type DPPR) that is used for the following transactions:

- Envelope deposit
- Envelope split deposit
- Message enclosed
- Payment enclosed
- Envelope deposit with cash back (if you also have purchased the SSB Device Handler Extension)

The terminal-owning institution can configure its own depository print format based on the default depository print template. The depository print data template uses one standard marker and its own set of data codes. If an invalid code is found when scanning the depository print template, the NCR 5XXX Device Handler process generates a log message and continues to scan the template. The NCR 5XXX Device Handler process reads each of the depository print data codes and fills in the Deposit Print Data buffer with the corresponding information until the maximum of 80 characters has been reached.

If you are using NCR 56XX or 58XX terminals, you have purchased both the SSB Device Handler Extension and the SSB Enhanced ATM Application, and you have the Check Processing Module (CPM) installed, the configurable depository print feature has extended capabilities. The following additional transactions are affected:

- Check cashing
- Check deposit
- Check deposit with cash back

Refer to section 2 of this manual for additional discussion about these transactions. The three check transactions configured in the SSB Device Handler Extension use up to thirteen additional areas or zones to print directly on the check. These printable areas can be on the front or rear of the document, or both sides. Write zones and write and confirm zones are defined for each terminal using the Document Definition File (DDF). The DDF is a proprietary NCR file that is modified by the program D-Scribe, which is described in more detail in section 5 of this manual. Write zones are areas on the document in which the terminal is to print prescribed data. Write and confirm zones are areas in which the terminal is to print prescribed data and then verify that data was actually printed.

Although write zones and write and confirm zones are defined using proprietary vendor software, the BASE24 product can be set up to send the information to be printed in these zones. Up to thirteen zones can be defined in the DDF, (for example, `WRITE_ZONE_1`, `WRITE_ZONE_2`). You can name these zones anything you want in the DDF. Also defined in the DDF are the fonts to use when printing, which printer to use, and where the zones are printed. The encode font is used to print MICR information on the front of the document on the MICR encoding line using the MICR encoding printer. The dot-matrix printer can also use the barcode font or the OCR font, and can print anywhere on the front or back of the document. Additional print fonts for the dot-matrix printer can be installed.

Thirteen receipt templates can be configured in the RCPT to print these thirteen zones, and are named CPMA, CPMB, CPMC, etc. through CPMM. A zone defines where the printing occurs, and the receipt template defines what is printed in that zone. Note that the zone name and the template used are not connected; that is, `WRITE_ZONE_1` does not have to be used in CPMA.

Statement Print Host Communications

To achieve communications efficiency, the statement print host communications feature allows you the option of separating statement print transaction messages from live transactions sent to the host. A separate link to the host can be defined to be used only for statement print transactions. The ISO Host Interface routes the statement print transaction to the dedicated send/receive station connection. This feature does not affect BASE24 performance, but can increase the host's efficiency in processing financial transactions because these transactions are not waiting for the lengthy statement print transaction messages to be sent.

Note: The ISO-based BASE24 Host Interface process must be used to send this data to the host. The ANSI-based BASE24 Host Interface process and the ANSI-based BIC Interface process do not have the routing capability needed for statement print host communications.

Super Teller

The Super Teller function allows you to issue an ATM card to bank personnel for the specific purpose of demonstrating ATM services or assisting customers with performing transactions at the ATM. These customers may be those who do not own debit or check cashing cards, who do not have their personal ATM cards in their possession, or who cannot remember their PINs.

The Super Teller card is valid only at a maximum of ten specific terminals. The card can perform any transaction allowed by the BASE24-atm product, and its limits and usages are configurable. Transactions performed with Super Teller cards are logged as Super Teller transactions for settlement and tracking purposes.

The Super Teller feature requires configuration changes to the Card Prefix File (CPF). It also requires changes to the Cardholder Authorization File (CAF) or to the Negative Card File (NEG), depending on the authorization method used by the institution. You can differentiate the routing of Super Teller transactions by establishing a unique record in the Institution Definition File (IDF) or a unique CPF routing group.

In addition to configuring the CPF, CAF, and NEG, additional states and screens and an FIT entry are required in the NCR configuration file (CNFG5070) and must be downloaded to the terminal. These changes are described later in section 5 of this manual.

For complete information on the CPF, the CAF, the NEG, and the IDF, refer to the *BASE24 Base Files Maintenance Manual*.

Note: The ISO-based BASE24 Host Interface process or the ISO-based BIC Interface process must be used to send this data to a host or co-processor. The external messages used by the ANSI-based BASE24 Host Interface process and the ANSI-based BIC Interface process do not carry the data needed for Super Teller support.

Super Teller Card Differences

Several important differences exist between a Super Teller card and a card issued to a customer. A Super Teller card is issued to a financial institution employee or representative instead of a customer. The individual with a Super Teller card can assist persons using an ATM for services that otherwise are available only at the financial institution teller window. Because of this arrangement, Super Teller

cards have card-level activity limits and totals, but have no accounts or balances associated with them. The following are the differences between a Super Teller card and a card issued to a customer:

- Super Teller cards cannot make PIN changes to the account that is being accessed.
- The card-level activity limits and totals are tracked based on the card usage by the employee rather than by the customers that the employee serves.
- Super Teller cards do not have accounts or balances of their own, and there is no online posting to the account balances or usages of the customer served.

The latter two differences are described in more detail below.

Activity Limits and Totals

Like limits for any other BASE24-atm card, the activity limits and totals are established at the card level with the AGGR, CASH WDL, and CASH ADV fields on screen 1 of the CPF or CAF and the CASH WDL and CASH ADV fields on screen 4 of the CPF or screen 8 of the CAF. The important difference is that, because these cards are used by employees or representatives throughout a business day to assist multiple customers, these limits will probably be set much higher for Super Teller cards than for cards held by customers. Limits should still be considered for Super Teller cards in case of loss, theft, or misuse, just like any other ATM card.

Note: If you also have configured the SSB Enhanced Check Processing Application, be aware that the limits for Super Teller cards are affected by the enhanced check authorization feature. Refer to the topic “Super Teller Card Impacts” in section 4 for more information.

Account Balances and Usages

With the Positive Authorization method, the BASE24-atm product uses the CAF (screens 3 and 4) to associate customer accounts with a typical ATM card. With the Positive Balance Authorization method, the BASE24-atm Authorization process uses the CAF to associate customer accounts with a typical ATM card and uses the Positive Balance File (PBF) to maintain balances for the accounts.

CAF records for Super Teller cards do not contain any account information on CAF screens 3 and 4 or have any associated PBF records. Transactions performed with a Super Teller card involve accounts and balances that belong to the customer


instead of the Super Teller cardholder so the BASE24-atm system cannot access the customer's accounts or balances. As a result, if a customer's account balances must be updated, they can be individually adjusted by the employee following completion of the Super Teller transaction or in a batch mode using the Transaction Log File (TLF) extract followed by a refresh of the CAF, PBF, or both, depending on the authorization method used.

Super Teller Transaction Flow

Specific types of Super Teller transactions cause performance impacts to the system. All two amount and two account Super Teller transactions (for example, a split deposit transaction initiated with a Super Teller card) cause additional transaction message traffic between the NCR 5XXX Device Handler process and the terminal.

Two-amount and two-account Super Teller transactions require that transaction request information be transmitted to the NCR 5XXX Device Handler process in two separate messages.

The diagram below represents the message flow for a two-account/two-amount Super Teller transaction.

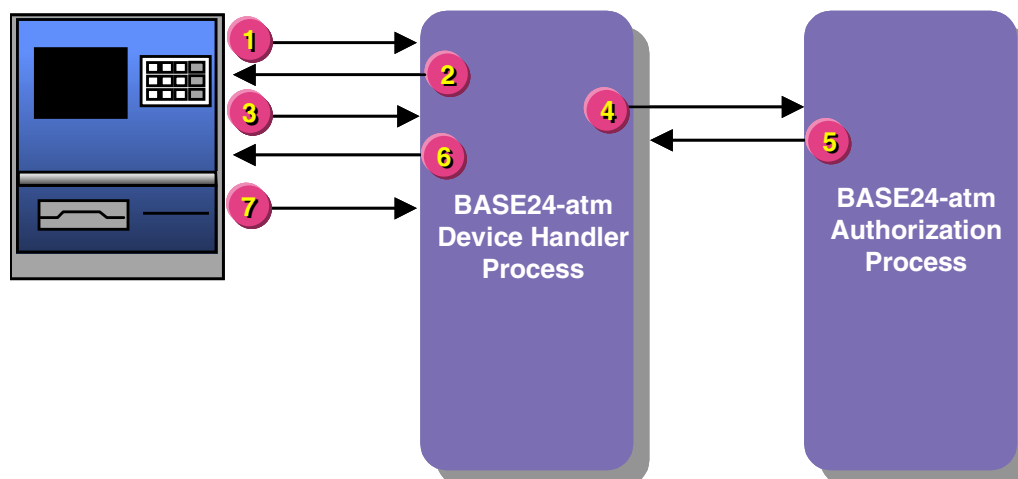


1. The ATM sends an initial request to the NCR 5XXX Device Handler process for a two-account and two-amount Super Teller transaction. This transaction request contains two account numbers and the first transaction amount.
2. The NCR 5XXX Device Handler process sends a response to the terminal to retrieve the second transaction amount.

3. The ATM sends a request to the NCR 5XXX Device Handler process containing the second transaction amount.
4. The NCR 5XXX Device Handler process forwards the BASE24-atm Standard Internal Message (STM), message type 0200, to the Authorization process.
5. The Authorization process returns the BASE24-atm Standard Internal Message (STM), message type 0210, to the NCR 5XXX Device Handler process.
6. The NCR 5XXX Device Handler process sends a response to the terminal defining the outcome of the transaction.
7. The terminal sends a completion message to the NCR 5XXX Device Handler process.

Super Teller State Path

The following diagram illustrates the differences between a sample state path for a typical withdrawal transaction initiated by a cardholder and a sample state path for a withdrawal transaction initiated for a customer by an employee with a Super Teller card. The states are sequential instructions which provide the terminal with the information to perform customer and administrative transactions. Each state typically has a screen number and the next state to perform, as well as other parameters.

Two additional steps are performed when the Super Teller card is used. The state numbers from the configuration file (CNFG5070) as distributed with SSB are also shown. Refer to section 5 for more information on the CNFG5070. Byte 6 of the operation key buffer is preset to a value of D whenever the terminal reads a Super Teller card. The NCR 5XXX Device Handler process looks for the customer account number in the native message if the transaction is a Super Teller transaction, which is indicated by byte 6.

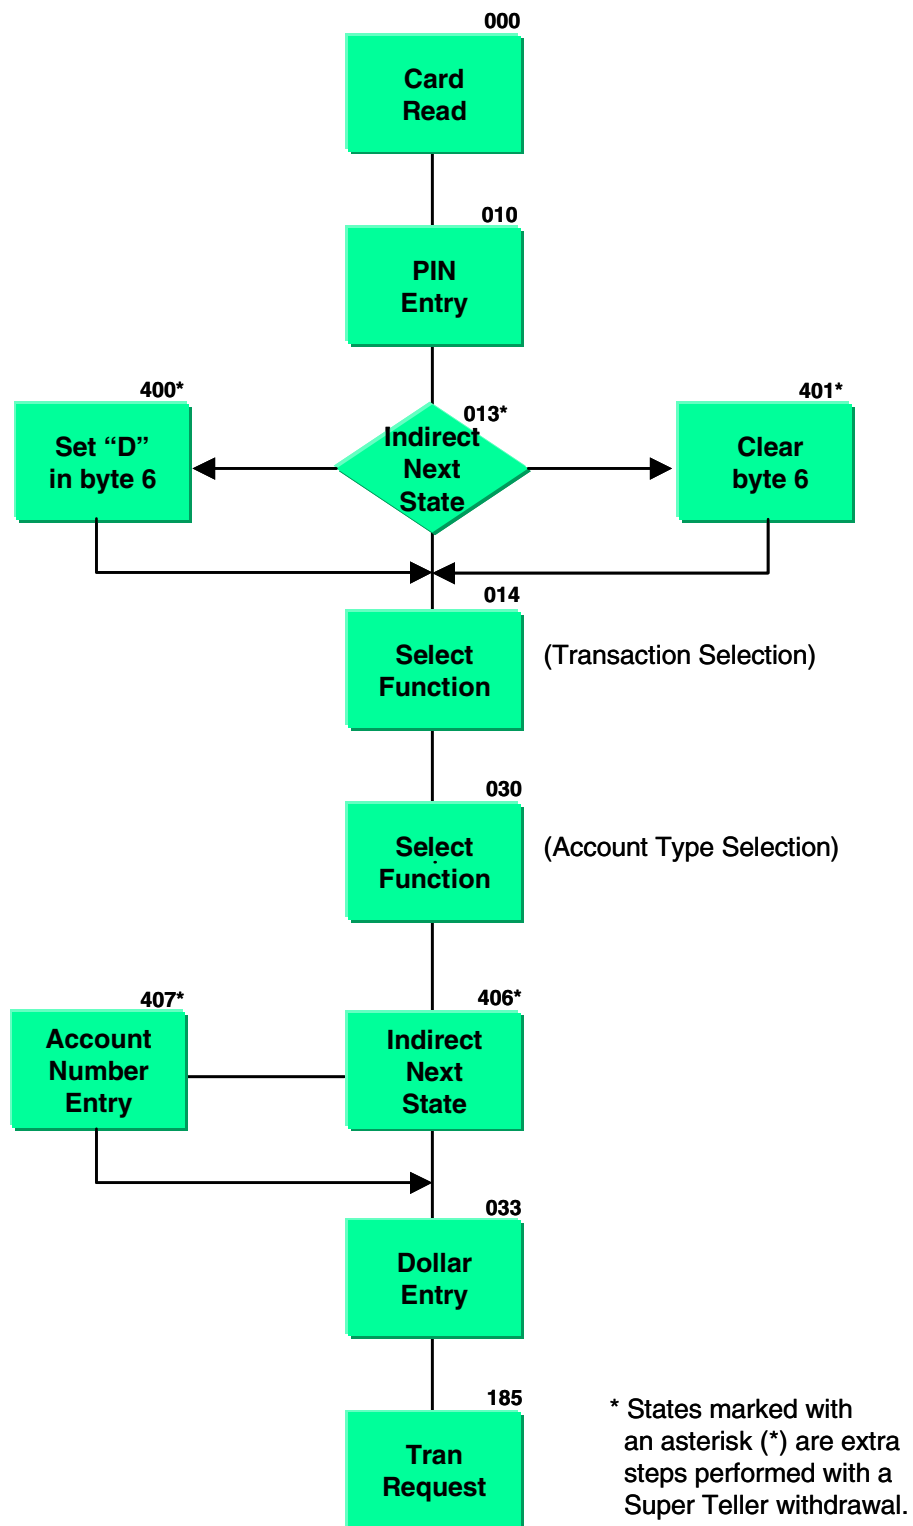

SSB Enhanced ATM Application Configuration

The SSB Enhanced ATM Application requires NCR 5XXX-series terminals with the BASE24-atm NCR 5XXX Device Handler process installed. The 50XX-series terminals must have NCR's NDC Release 8.0 software installed, while the 56XX-and 58XX-series terminals must have NCR's NDC+ Release 5.0 or greater software. The basic functions that are found in the SSB Enhanced ATM Application do not require additional hardware in the terminal. The NCR 56XX-and 58XX-series terminals can optionally be fitted with the Check Processing Modules (CPM). If you have purchased the SSB Device Handler Extension and have the CPM installed, the configurable depository print feature in the SSB Enhanced ATM Application has additional capabilities. You must configure the Data Definition File (DDF) in order to use these additional capabilities.

Before you can configure the SSB Enhanced ATM Application, the application must be properly installed and the BASE24-atm network must be up and available for files maintenance.

The ISO-based BASE24 Host Interface process or the ISO-based BIC Interface process must be used to send data to a host or co-processor for split deposit transactions, the Super Teller card, and statement print host communications. The external messages used by the ANSI-based BASE24 Host Interface process and the ANSI-based BIC Interface process do not carry the data needed for these features.

The following table lists the features of the SSB Enhanced ATM Application, and the BASE24 and NCR-specific screens and files needed to configure each feature. This table gives an overview of the modifications needed, and allows you to select those features from this module that you want to offer to your customers. The following pages describe these screens and files. Note that security access must be given to the operator modifying the BASE24 screens.

If a screen or file is described in another manual in the BASE24 manual set, only those fields that have specific SSB requirements are listed. If a screen is not described elsewhere, this section includes an illustration of the screen and descriptions of all fields on the screen. The NCR-provided DDF is described in section 5.

Screen or File	Transaction Time Windows	Split Deposit Transaction	Configurable Bill Dispensing	Configurable Depository Print	Statement Print Host Communications	Super Teller
Acquirer Processing Code File (APCF)		✓				
BASE24-atm Terminal Data files (ATD) screen 1	✓	✓	✓	✓	✓	✓
ATD screen 2		✓				
ATD NCR 5XXX screen 7	✓	✓	✓	✓	✓	✓
ATD NCR 5XXX screen 11	✓		✓			
Card Prefix File (CPF) screen 1						✓
CPF screen 2						✓
CPF screen 4						✓
Cardholder Authorization File (CAF) screen 1						✓
CAF screen 2						✓
CAF screen 8						✓
CAF screen 14						✓
DDF (NCR File)				✓		
Host Configuration File (HCF) screen 2					✓	
HCF screen 20					✓	

Screen or File	Transaction Time Windows	Split Deposit Transaction	Configurable Bill Dispensing	Configurable Depository Print	Statement Print Host Communications	Super Teller
Enhanced Interchange Configuration File (ICFE) Screen 8		✓				
Institution Definition File (IDF) screens 5 and 6		✓			✓	✓
IDF screen 9		✓				
Issuer Processing Code File (IPCF)		✓				
Logical Network Configuration File (LCONF)	✓					
Negative Card File (NEG) screen 1						✓
NEG screen 3						✓
Terminal Receipt File (TRF)		✓				
Receipt File (RCPT)		✓		✓		
SSDHNAMS		✓				
Token File (TKN)		✓				✓

Modifying the Acquirer Processing Code File

Institutions can specify the transactions supported at its terminals in the Acquirer Processing Code File (APCF).

BASE24 terminal owners can specify ISO processing codes for transactions allowed by individual terminals or by groups of terminals. The following transaction codes are used with the split deposit transaction:

Transaction	Transaction Code	To Account Type	From Account Type
Split Deposit—Two Checking Accounts	20	01	01
Split Deposit—Checking and Savings Accounts	20	01	11
Split Deposit—Checking and Other Accounts	20	01	60
Split Deposit—Savings and Checking Accounts	20	11	01
Split Deposit—Two Savings Accounts	20	11	11
Split Deposit—Savings and Other Accounts	20	11	60
Split Deposit—Other and Checking Accounts	20	60	01
Split Deposit—Other and Savings Accounts	20	60	11
Split Deposit—Two Other Accounts	20	60	60

Refer to the ***BASE24 Base Files Maintenance Manual*** for more information about the APCF screens. Refer to the ***BASE24-atm Transaction Processing Manual*** for more information about how the NCR 5XXX Device Handler process uses the APCF.

Modifying the BASE24-atm Terminal Data Files

The BASE24-atm Terminal Data files (ATD) contain configuration information for each individual terminal in your institution's network. The SSB Enhanced ATM Application requires settings in the ATD to indicate whether you offer transaction processing for the SSB Enhanced ATM Application. Four ATD screens require settings: screen 1, screen 2, screen 7, and screen 11. Other BASE24 screens used to access the ATD are not used to support the SSB Enhanced ATM Application. The fields described below have specific SSB requirements. Refer to the *BASE24-atm Files Maintenance Manual* for more information on the ATD.

ATD Screen 1

ATD screen 1 enables you to identify whether a terminal supports multiple account selection. This screen is required for split deposits between like accounts.

DEVICE TYPE — Indicates the model and manufacturer of the terminal. You must enter 22 for NCR 5XXX terminals.

SSB Feature: All SSB Enhanced ATM Application features

MULTIPLE ACCT SELECT — Indicates whether this terminal is capable of supporting multiple account selections. You must set this field to Y to allow a split deposit transaction to two accounts of the same type (for example, the cardholder wants to deposit a check into two different savings accounts).

SSB Feature: Split deposit transaction

ATD Screen 2

Entries on ATD screen 2 define the acquirer transaction profile for NCR 5XXX terminals.

ACQUIRER TXN PROFILE — The transaction profile for the acquirer whose customer initiated the transaction. The acquirer transaction profile allows one or more acquirers to share processing code definitions and transactions allowed

information. The value in this field overrides the acquirer transaction profile defined at the institution level in the IDF. The value entered in this field must match a transaction profile named in the Acquirer Processing Code File (APCF).

SSB Feature: Additional transaction support

ATD NCR 5XXX Screen 7

ATD NCR 5XXX screen 7 is a device-specific screen. The screen display for each device is dependent on the setting in the DEVICE TYPE field on ATD screen 1, which must be 22 for NCR 5XXX-series terminals.

LARGE MESSAGE MODE — Indicates whether the maximum message size and print data size should be increased to 2048 bytes. Increasing the message size allows fewer messages to be sent between the BASE24 system and the terminal for such tasks as downloading states and screens. This increased message size is not available for NCR 50XX-series terminals or 56XX- and 58XX-series terminals running NDC+ Release 4.0 or less, and this field must be set to N. If you have the Check Processing Module (CPM) attached to a 56XX-or 58XX-series terminal, this field must be set to Y. If you have a 56XX-or 58XX-series terminal without the CPM, the large message mode is optional, but ACI recommends that you set this field to Y. Valid values are as follows:

Y = Yes, increase the maximum message size.

N = No, do not increase the maximum message size.

Note: If you set this field to Y, the terminal must be configured to handle large messages, and the XPNET device definition for the terminal type must specify a value of 2048 for both the XMITLEN and RECVLEN attributes.

SSB Feature: All SSB Enhanced ATM Application features

TERMINAL GROUP — Indicates the terminal load group to which this terminal belongs. This code indicates the SSB states and screens that are to be loaded to this terminal when a download command is sent from the Device Control Terminal (DCT). Terminal group 110 (split deposit merge group) and terminal group 111 (Super Teller merge group) are specific to the SSB Enhanced ATM Application, and are designed to be merged with one of the following terminal groups: 106, 107, 108, or 109. Refer to section 5 for a complete list of terminal groups used by the SSB product.

SSB Feature: Split deposit transaction, Super Teller

DISPENSE ALGORITHM — Indicates which dispense algorithm is to be used at the terminal. Valid values are as follows:

- 0 = Use the least number of bills algorithm.
- 1 = Use threshold amounts for self-service banking.
- 2 = Use start and stop amounts for the configurable dispense algorithm.

Refer to the topic “Configurable Bill Dispensing” previously described in this section for a description of these methods.

SSB Feature: Configurable bill dispensing

ATD NCR 5XXX Screen 11

ATD NCR 5XXX screen 11 must be updated to support the transaction time windows and configurable bill dispensing features in the SSB Enhanced ATM Application. Changes to ATD NCR 5XXX screen 11 are necessary to accomplish the following:

- Determine the combination of bills dispensed at the terminal.
- Specify inactivity timer information used in conjunction with the transaction time window feature.
- Specify the transaction load group to be used for the peak transaction time period and the load group to be used when the peak transaction time period ends. With the SSB Enhanced ATM Application, the NCR 5XXX Device Handler process uses these fields to control the types of transactions a customer can perform at a terminal during peak and nonpeak periods. The NCR 5XXX Device Handler process automatically alternates between two transaction load groups at the specified times.

ATD NCR 5XXX screen 11 is shown below, followed by its field descriptions. This screen is a device-specific screen. Screen display for each device is dependent on the setting in the DEVICE TYPE field on ATD screen 1, which must be 22 for NCR terminals. ATD NCR 5XXX screen 11 is specific to the SSB Enhanced ATM Application.

```
BASE24-ATM   TERMINAL DATA           LLLL           YY/MM/DD  HH:MM  11 OF 21
TERM ID:                FIID:           REGION:         BRANCH:         LN: LLLL

                                NCR 5085 SELF SERVICE BANKING BASE

                                BILL MIX INFORMATION
                                HOPPER 1      HOPPER 2      HOPPER 3      HOPPER 4
                                BILL VAL:
                                THRESHOLD:
                                MAX BILLS:
DISPENSE ALGORITHM:

                                TRANSACTION TIME WINDOW INFORMATION
WORKDAY PEAK TIME 00:00 TO 00:00      WEEKEND/HOLIDAY PEAK TIME 00:00 TO 00:00
    PEAK WINDOW LOAD GROUP:              STANDARD WINDOW LOAD GROUP:

***** BASE24 *****
NEW PAGE:                FILE DESTINATION:              NEW LOGICAL NETWORK ID:
                                F12-HELP
```

TERM ID — An identifier (terminal ID) for the terminal associated with this record. This field is entered on ATD screen 1.

FIID — The FIID of the financial institution that owns the terminal. This field is entered on ATD screen 1.

REGION — The region ID for the region in which this terminal is located. This field is entered on ATD screen 1.

BRANCH — The branch ID for the branch in which this terminal is located. This field is entered on ATD screen 1.

LN — The name of the logical network to which the terminal owner belongs. This field is entered on ATD screen 1.

NCR 5085 SELF SERVICE BANKING BASE

All fields on this screen are specific to the SSB Enhanced ATM Application.

BILL MIX INFORMATION

The following four fields are used to specify how bill denominations are dispensed at the terminal.

BILL VAL — This display-only field contains the bill denominations associated with hoppers 1 through 4.

The values displayed in these fields are obtained from the BILL VAL fields on ATD screens 4 and 5, not directly from the ATD record. If the BILL VAL fields on ATD screens 4 and 5 are changed and ATD NCR 5XXX screen 11 is displayed before the record is updated, the BILL VAL fields on ATD NCR 5XXX screen 11 contain values from ATD screens 4 and 5 instead of the ATD record.

Field Length:	System protected
Data Name:	Not applicable
SSB Feature:	Configurable bill dispensing

THRESHOLD — A value specifying the threshold value for each hopper. The threshold values are used to determine the bills to be dispensed. Refer to the topic “Thresholds Method” previously described in this section for more information about how this field is used. Valid values are 1–99999999.

Field Length:	1–8 numeric characters
Required Field:	Yes, if the value in the DISPENSE ALGORITHM field is 1.
Default Value:	0
Data Name:	ATDS1.[atds1-dev-info-ncr-5xxx].BILL-MIX.HOPR-THRSHLDS
SSB Feature:	Configurable bill dispensing

MAX BILLS — The maximum number of bills from each hopper of the corresponding denomination that can be used in any one bill dispensing operation. The values in these fields are used to determine the bills to be dispensed. Refer to the topic “Thresholds Method” provided previously in this section for more information on how this field is used.

Field Length: 1–4 numeric characters
Required Field: Yes, if the value in the DISPENSE ALGORITHM field is 1.
Default Value: 0
Data Name: ATDS1.[atds1-dev-info-ncr-5xxx].BILL-MIX.MAX-BILLS
SSB Feature: Configurable bill dispensing

DISPENSE ALGORITHM — A value that specifies which algorithm the NCR 5XXX Device Handler process uses during a bill dispensing operation. The value in this field is entered on ATD screen 7. Valid values are as follows:

- 0 = Use the least number of bills algorithm.
- 1 = Use threshold amounts when self-service banking is enabled.
- 2 = Use start and stop amounts for the configurable dispense algorithm.

Refer to the topic “Configurable Bill Dispensing” previously described in this section for a description of these methods.

Field Length: System protected
Data Name: ATDS1.[atds1-dev-info-ncr-5xxx].DISP-ALGO
SSB Feature: Configurable bill dispensing

TRANSACTION TIME WINDOW INFORMATION

The following fields are used to define peak and nonpeak processing periods and specify the transaction load group that is used for each period.

WORKDAY PEAK TIME START — The time when the transaction load group specified in the PEAK WINDOW LOAD GROUP field should be downloaded to the terminal. If either the WORKDAY PEAK TIME START field or the WORKDAY PEAK TIME END field is set to 0000, no download will occur. Valid values are 0000–2359.

Field Length: 4 numeric characters
Required Field: Yes

Default Value: 0000
Data Name: ATDS1.[atds1-dev-info-ncr-5xxx].WRKDAY-STRT-PEAK-LOAD-WINDOW
SSB Feature: Transaction time windows

WORKDAY PEAK TIME END — The time when the transaction load group specified in the STANDARD WINDOW LOAD GROUP field should be downloaded to the terminal. If either the WORKDAY PEAK TIME START field or the WORKDAY PEAK TIME END field is set to 0000, no download will occur. Valid values are 0000–2359.

Field Length: 4 numeric characters
Required Field: Yes
Default Value: 0000
Data Name: ATDS1.[atds1-dev-info-ncr-5xxx].WRKDAY-END-PEAK-LOAD-WINDOW
SSB Feature: Transaction time windows

WEEKEND/HOLIDAY PEAK TIME START — The time on weekends and holidays when the transaction load group specified in the PEAK WINDOW LOAD GROUP field should be downloaded to the terminal. The NCR 5XXX Device Handler process uses the holiday table from the Institution Definition File (IDF) record (screen 4) when setting load group timers for holiday periods. If either the WEEKEND/HOLIDAY PEAK TIME START field or the WEEKEND/HOLIDAY PEAK TIME END field is set to 0000, no download will occur. Valid values are 0000–2359.

Field Length: 4 numeric characters
Required Field: Yes
Default Value: 0000
Data Name: ATDS1.[atds1-dev-info-ncr-5xxx].WKND-STRT-PEAK-LOAD-WINDOW
SSB Feature: Transaction time windows

WEEKEND/HOLIDAY PEAK TIME END — The time on weekends and holidays when the transaction load group specified in the STANDARD WINDOW LOAD GROUP field should be downloaded to the terminal. The NCR 5XXX Device Handler process uses the holiday table from the Institution Definition File (IDF) record (screen 4) when setting load group timers for holiday periods. If

either the WEEKEND/HOLIDAY PEAK TIME START field or the WEEKEND/HOLIDAY PEAK TIME END field is set to 0000, no download will occur. Valid values are 0000–2359.

Field Length: 4 numeric characters
Required Field: Yes
Default Value: 0000
Data Name: ATDS1.[atds1-dev-info-ncr-5xxx].WKND-END-PEAK-LOAD-WINDOW
SSB Feature: Transaction time windows

PEAK WINDOW LOAD GROUP — The device configuration load group that is loaded at the beginning of the peak-period window. This load group typically contains a limited transaction set.

Field Length: 1–4 numeric characters
Required Field: Yes
Default Value: 0
Data Name: ATDS1.[atds1-dev-info-ncr-5xxx].PEAK-WINDOW-LOAD-GRP
SSB Feature: Transaction time windows

STANDARD WINDOW LOAD GROUP — The device configuration load group that is loaded at the end of the peak-period window. This load group typically contains a limited transaction set that overwrites the changes made by the load group specified in the PEAK WINDOW LOAD GROUP field.

Field Length: 1–4 numeric characters
Required Field: Yes
Default Value: 0
Data Name: ATDS1.[atds1-dev-info-ncr-5xxx].STD-WINDOW-LOAD-GRP
SSB Feature: Transaction time windows

Modifying the Card Prefix File

The Card Prefix File (CPF) defines the characteristics of each card prefix that can be processed within a BASE24 logical network. The CPF also contains prefix-specific parameters that allow you to define portions of the authorization processing that can be controlled at the prefix level. One record must exist in the CPF for each card prefix to be processed.

You must configure CPF screens 1, 2, and 4 for each card prefix used for Super Teller cards. The card's specialized use should be considered when establishing the values for the ACTIVITY LIMITS fields on CPF screens 1 and 4. Otherwise, all fields on CPF screens 1, 2, and 4 should be completed according to your institution's standard procedure for establishing a new card prefix. The fields described below have specific SSB requirements. Refer to the ***BASE24 Base Files Maintenance Manual*** for screen samples and field descriptions for these screens.

CPF Screen 1

CPF screen 1 contains general information about card prefixes.

CARD TYPE — A code identifying the type of card associated with the prefix. Enter the value ST in the CARD TYPE field to indicate that the card is a Super Teller card.

SSB Feature: Super Teller

ACTIVITY LIMITS

The values in the following fields limit the transaction activity allowed by the BASE24-atm and BASE24-pos products combined for this card prefix during a single usage accumulation period. The transactions controlled by these limits are cash disbursements against credit and noncredit accounts and purchases made against noncredit accounts. Credit card purchases are not governed by these limits.

TOTAL CASH WDL — The maximum amount of purchases and cash withdrawals allowed against noncredit accounts. Take into consideration the special use of the Super Teller card in setting this value.

SSB Feature: Super Teller

OFFLINE CASH WDL — The maximum amount of purchases and cash withdrawals allowed offline against noncredit accounts. Take into consideration the special use of the Super Teller card in setting this value.

SSB Feature: Super Teller

TOTAL CASH ADV — The maximum amount of cash advances allowed against credit accounts. Take into consideration the special use of the Super Teller card in setting this value.

SSB Feature: Super Teller

OFFLINE CASH ADV — The maximum amount of cash advances allowed offline against credit accounts. Take into consideration the special use of the Super Teller card in setting this value.

SSB Feature: Super Teller

TOTAL AGGR — The maximum aggregate amount of cash disbursements allowed against credit and noncredit accounts and purchases allowed against noncredit accounts. Take into consideration the special use of the Super Teller card in setting this value.

SSB Feature: Super Teller

OFFLINE AGGR — The maximum aggregate amount of cash disbursements allowed offline against credit and noncredit accounts and purchases allowed offline against noncredit accounts. Take into consideration the special use of the Super Teller card in setting this value.

SSB Feature: Super Teller

CPF Screen 4

CPF screen 4 contains BASE24-atm authorization information, including activity limits for the BASE24-atm product during one usage accumulation period, and deposit credit information.

ACTIVITY LIMITS

The values in the following fields limit the transaction activity allowed by the BASE24-atm product for this card prefix during a single usage accumulation period. The transactions controlled by these limits are cash disbursements against credit and noncredit accounts.

TOTAL CASH WDL — The maximum amount of cash withdrawals allowed against noncredit accounts using the BASE24-atm product. Take into consideration the special use of the Super Teller card in setting this value.

SSB Feature: Super Teller

OFFLINE CASH WDL — The maximum amount of cash withdrawals allowed offline against noncredit accounts using the BASE24-atm product. Take into consideration the special use of the Super Teller card in setting this value.

SSB Feature: Super Teller

TOTAL CASH ADV — The maximum amount of cash advances allowed against credit accounts using the BASE24-atm product. Take into consideration the special use of the Super Teller card in setting this value.

SSB Feature: Super Teller

OFFLINE CASH ADV — The maximum amount of cash advances allowed offline against credit accounts using the BASE24-atm product. Take into consideration the special use of the Super Teller card in setting this value.

SSB Feature: Super Teller

TOTAL AGGR — The amount entered in the TOTAL AGGR field on CPF screen 1. The value in this field is intended for informational purposes only.

Field Length: System protected

OFFLINE AGGR — The amount entered in the OFFLINE AGGR field on CPF screen 1. The value in this field is intended for informational purposes only.

Field Length: System protected

Modifying the Cardholder Authorization File

The Cardholder Authorization File (CAF) contains authorization parameters and usage accumulation information for the card issuer's cardholders and are used in authorizing transaction requests. You must configure CAF screens 1, 2, 8, and 14 to define each Super Teller card when the institution is using the Positive Authorization or the Positive Balance Authorization methods. All fields on CAF screens 1, 2, and 8 should be completed according to your institution's standard procedure for establishing a new CAF record, including the option of using CPF limits instead of CAF limits by setting the value in the TOTAL AGGR field on CAF screen 1 to 0. The fields described below have specific SSB requirements. Refer to the ***BASE24 Base Files Maintenance Manual*** for screen samples and field descriptions for these screens.

Note: The requirement for at least one account number on CAF screen 3 is not applicable when the CARD TYPE field on CAF screen 1 contains the value ST.

CAF Screen 1

CAF screen 1 contains general information about the card.

CARD TYPE — A code identifying the type of card associated with the primary account number (PAN). Enter the value ST in the CARD TYPE field to indicate that the card is a Super Teller card.

SSB Feature: Super Teller

ACTIVITY LIMITS

The values in the following fields limit the transaction activity allowed by both the BASE24-atm and BASE24-pos products for this cardholder during a single usage accumulation period. When the value in the TOTAL AGGR field is set to something other than zero, these limits override the corresponding group of limits on CPF screen 1. The transactions controlled by these limits are cash disbursements made against credit and noncredit accounts and purchases made against noncredit accounts. Credit purchases are not governed by these limits.

TOTAL CASH WDL — The maximum amount of purchases and cash withdrawals allowed against noncredit accounts. Take into consideration the special use of the Super Teller card in setting this value.

SSB Feature: Super Teller

OFFLINE CASH WDL — The maximum amount of purchases and cash withdrawals allowed offline against noncredit accounts. Take into consideration the special use of the Super Teller card in setting this value.

SSB Feature: Super Teller

TOTAL CASH ADV — The maximum amount of cash advances allowed against credit accounts. The value in this field is for informational purposes only.

Field Length: System protected

OFFLINE CASH ADV — The maximum amount of cash advances allowed offline against credit accounts. The value in this field is for informational purposes only.

Field Length: System protected

TOTAL AGGR — The maximum aggregate amount of cash disbursements allowed against credit and noncredit accounts, plus purchases allowed against noncredit accounts. Take into consideration the special use of the Super Teller card in setting this value.

SSB Feature: Super Teller

OFFLINE AGGR — The maximum aggregate amount of cash disbursements allowed offline against credit and noncredit accounts and purchases allowed offline against noncredit accounts. Take into consideration the special use of the Super Teller card in setting this value.

SSB Feature: Super Teller

CAF Screen 8

CAF screen 8 enables you to establish BASE24-atm cardholder limits for a single usage accumulation period.

ACTIVITY LIMITS

The values in the following fields limit the transaction activity allowed by the BASE24-atm product for this cardholder during a single usage accumulation period. When the value in the TOTAL AGGR field on CAF screen 1 is set to something other than zero, these limits override the corresponding group of limits on CPF screen 4. The transactions controlled by these limits are cash disbursements against credit and noncredit accounts.

TOTAL CASH WDL — The maximum amount of cash withdrawals allowed against noncredit accounts using the BASE24-atm product. Take into consideration the special use of the Super Teller card in setting this value.

SSB Feature: Super Teller

OFFLINE CASH WDL — The maximum amount of cash withdrawals allowed offline against noncredit accounts using the BASE24-atm product. Take into consideration the special use of the Super Teller card in setting this value.

SSB Feature: Super Teller

TOTAL CASH ADV — The maximum amount of cash advances allowed against credit accounts using the BASE24-atm product. Take into consideration the special use of the Super Teller card in setting this value.

SSB Feature: Super Teller

OFFLINE CASH ADV — The maximum amount of cash advances allowed offline against credit accounts using the BASE24-atm product. Take into consideration the special use of the Super Teller card in setting this value.

SSB Feature: Super Teller

TOTAL AGGR — The amount entered in the TOTAL AGGR field on CAF screen 1. This field is intended for informational purposes only.

Field Length: System protected

OFFLINE AGGR — The amount entered in the OFFLINE AGGR field on CAF screen 1. This field is intended for informational purposes only.

Field Length: System protected

CAF Screen 14

CAF screen 14 enables you to associate a Super Teller card with up to 10 terminals. CAF screen 14 is shown below, followed by a description of the SUPER TELLER TERMINAL ID field.

```
BASE24-SSBB  CARDHOLDER FILE          LLLL          YY/MM/DD  HH:MM  14 OF 20

      PAN:                                     MEMBER: 000      FIID:

                        ATM SELF SERVICE BANKING BASE

      SUPER TELLER TERMINAL ID:

***** BASE24 *****
NEW PAGE:          FILE DESTINATION:          NEW LOGICAL NETWORK ID:
                        F12 - HELP
```

PAN — The card number or primary account number (PAN) identifying the card. This field is entered on CAF screen 1.

MEMBER — The member number for the card. When multiple cards are issued with the same card number, the value in this field distinguishes among the cards. This field is entered on CAF screen1.

FIID — The FIID of the financial institution that issued the card. This field is entered on CAF screen 1.

ATM SELF SERVICE BANKING BASE

The following field is specific to the SSB Enhanced ATM Application.

SUPER TELLER TERMINAL ID — This field associates a Super Teller card with up to 10 terminals. If this Super Teller card is used at any other terminals, the transaction is denied.

Field Length:	16 alphanumeric characters
Occurs:	Up to 10 times
Required Field:	Yes, at least one terminal is required if the CARD TYPE field on CAF screen 1 is set to a value of ST
Default Value:	No default value
Data Name:	CAF.SUPER-TLR-TERM-ID
SSB Feature:	Super Teller

Modifying the Host Configuration File

The Host Configuration File (HCF) defines BASE24-to-host communication links for transaction message traffic routed to a host authorization system. Its coordination of BASE24-to-host activity ensures that the host receives requests from the BASE24 system and that the BASE24 processes respond properly to the requests from the host. The HCF contains one record for each unique Data Processing Center (DPC) and Host Interface process pair in the logical network.

The statement print host communications feature of the SSB Enhanced ATM Application allows you to establish a separate physical link to the host for the sole purpose of processing statement print transactions. This separate link for statement print transactions enables the terminal to segregate statement print transaction traffic from live transactions sent to the host. Isolating statement print traffic results in greater communications efficiencies.

The SSB Enhanced ATM Application requires settings in the HCF to establish processing for the statement print host communications feature. Two HCF screens require settings: screen 2 and screen 20. Other BASE24 screens used to access the HCF are not used to support the SSB Enhanced ATM Application. The fields described below have specific SSB requirements. For additional information about the HCF, refer to the *BASE24 Base Files Maintenance Manual*.

HCF Screen 2

HCF screen 2 enables you to define the stations associated with each Data Processing Center (DPC). Up to 32 entries can be made on screen 2. This screen allows you to define a separate send/receive station that is used only for statement print transactions.

STATION — A symbolic name identifying the station associated with this DPC. The entry in the STATION field for the station that is dedicated to statement print transactions must match a symbolic station name configured in the XPNET system and be unique within the logical network.

SSB Feature: Statement print host communications

TYPE — A code defining the type of station named in the STATION field on the same line of the table. Enter a value of 2 to indicate a send/receive station dedicated to only statement print transactions.

SSB Feature: Statement print host communications

HCF Screen 20

Once a statement print send/receive station has been established on HCF screen 2, an additional setting is required in the HCF to specify whether a host wants to divert statement print transactions to another station if the designated statement print send/receive station is unavailable. This alternate routing of statement print transactions is specified using HCF screen 20, which is specific to the SSB Enhanced ATM Application.

The Host Configuration File (HCF) screen 20 is shown below, followed by a description of the STATEMENT PRINT ALTERNATE ROUTE field.

```
BASE24-SSBB  HOST CONFIGURATION      LLLL      YY/MM/DD  HH:MM  20 OF 25
              DPC NUMBER:              HISF NAME:

              ATM SELF SERVICE BANKING BASE

              STATEMENT PRINT ALTERNATE ROUTE:

*****
NEW PAGE:          FILE DESTINATION:          NEW LOGICAL NETWORK ID:
                  F12-HELP
```

DPC NUMBER — The number of the institution's Data Processing Center (DPC), that is the host computer that processes messages received from the BASE24 system. This field is entered on HCF screen 1.

HISF NAME — The symbolic name of the BASE24 Host Interface process that communicates with the specified DPC. This field is entered on HCF screen 1.

ATM SELF SERVICE BANKING BASE

The following field is specific to the SSB Enhanced ATM Application.

STATEMENT PRINT ALTERNATE ROUTE — Specifies whether the Host Interface process should divert statement print transactions to another station when the statement print station is unavailable. Valid values are as follows:

- Y = The Host Interface process routes statement print transactions to the host using an alternate send/receive station when the statement print connection is unavailable.
- N = The Host Interface process denies all statement print transactions until such time that the statement print send/receive station connection has been reestablished.

Field Length:	1 alphabetic character
Required Field:	Yes
Default Value:	Y
Data Name:	HCF.STMT-PRNT-ALT-RTE
SSB Feature:	Statement print host communications

Modifying the Enhanced Interchange Configuration File

The Enhanced Interchange Configuration File (ICFE) contains parameters for interchange transaction processing. The split deposit feature of the SSB Enhanced ATM Application requires configuration changes to ICFE screen 8 to accomplish the following:

- Allow a split deposit transaction to be received from an interchange
- Allow a split deposit transaction request to be sent to an interchange

There is one ICFE record for each Interchange Interface process. Other BASE24 screens used to access the ICFE are not used to support the SSB Enhanced ATM Application. The fields described below have specific SSB requirements. See the *BASE24 Base Files Maintenance Manual* for more information on the ICFE.

ICFE Screen 8

ICFE screen 8 specifies the acquirer transaction profile and the issuer transaction profile used to define BASE24-atm allowable transactions. The acquirer transaction profile is part of the key to the Acquirer Processing Code File (APCF). The issuer transaction profile is part of the key to the Issuer Processing Code File (IPCF).

ACQUIRER TXN PROFILE — A code identifying a group of BASE24-atm transaction processing codes allowed from this interchange. The value of this field is part of the key used to read the Acquirer Processing Code File (APCF).

SSB Feature: Split deposit transaction

ISSUER TXN PROFILE — A code identifying a group of BASE24-atm transaction processing codes allowed to be sent to this interchange. The value of this field is part of the key used to read the issuer Processing Code File (IPCF).

SSB Feature: Split deposit transaction

Refer to the *BASE24-atm Transaction Processing Manual* for more information about how the Interchange Interface process uses the issuer transaction profile. Refer the *BASE24 Base Files Maintenance Manual* for more information about ICFE screen 8 and the IPCF.

Modifying the Institution Definition File

The Institution Definition File (IDF) defines processing for each institution participating on the logical network. Each institution has one record in the IDF. Three IDF screens require settings for the SSB Enhanced ATM Application: screens 5 and 6 and screen 9. Other BASE24 screens used to access the IDF are not needed to support the SSB Enhanced ATM Application. The fields described below have specific SSB requirements. Refer to the ***BASE24 Base Files Maintenance Manual*** for more information on the IDF.

IDF Screens 5 and 6

IDF screens 5 and 6 contain flags identifying which segments used by the Authorization process can be included in the file belonging to this institution. IDF screens 5 and 6 allow you to set the flag for the SSB Enhanced ATM Application. You must turn on the flag for the SSB Enhanced ATM Application in the Product Indicator Table File (PITABLE) before you can set the flag at the institution level.

SSB BASE — The SSB BASE flag permits each institution to specify whether its authorization files should carry the information needed for the SSB Enhanced ATM Application. Set the flag to Y. (The flag for the ATM segment must also be set to Y, if it has not already been changed to that value.)

SSB Feature: Split deposit transaction, Super Teller, and statement print host communications

IDF Screen 9

IDF screen 9 contains a field that identifies a group of BASE24-atm transaction codes allowed at ATMs owned by this institution. You can use the following field to specify an acquirer transaction profile for the split deposit transaction.

ACQUIRER TXN PROFILE — A code identifying a group of default BASE24-atm transaction processing codes allowed at ATMs owned by this institution. The value of this field is part of the key used to read the Acquirer Processing Code File (APCF).

SSB Feature: Split deposit transaction

Modifying the Issuer Processing Code File

A card-issuing institution can specify which transaction types are allowed for its cardholders at its ATMs and at other institutions' ATMs using the Issuer Processing Code File (IPCF).

Card-issuing institutions can specify by cardholder, prefix, institution, groups of prefixes, or groups of institutions which transactions are allowed. The following transaction codes are used with the split deposit transaction:

Transaction	Transaction Code	To Account Type	From Account Type
Split Deposit—Two Checking Accounts	20	01	01
Split Deposit—Checking and Savings Accounts	20	01	11
Split Deposit—Checking and Other Accounts	20	01	60
Split Deposit—Savings and Checking Accounts	20	11	01
Split Deposit—Two Savings Accounts	20	11	11
Split Deposit—Savings and Other Accounts	20	11	60
Split Deposit—Other and Checking Accounts	20	60	01
Split Deposit—Other and Savings Accounts	20	60	11
Split Deposit—Two Other Accounts	20	60	60

Refer to the ***BASE24 Base Files Maintenance Manual*** for more information about the IPCF screens. Refer to the ***BASE24-atm Transaction Processing Manual*** for more information about how the BASE24 system uses the IPCF.

Modifying the Logical Network Configuration File

The Logical Network Configuration File (LCONF) enables you to define the locations of files and processes, and to define processing parameters. The LCONF is described in the *BASE24 Logical Network Configuration File Manual*. The following params in the LCONF is used for setting a processing value at the logical network level:

ATM-DH-PEAK-LEAD-TIME — Specifies the lead time (in minutes) before the peak-period transaction load group is to be downloaded to the terminal. This param is used in conjunction with the peak time windows defined on ATD NCR 5XXX screen 11. The BASE24 product uses a default value of 10 minutes if this param is missing or contains an invalid value. Valid values are 0–1440.

SSB Feature: Transaction time windows

Modifying the Negative Card File

The Negative Card File (NEG) is used to flag cards that require some type of special processing. The Authorization process checks this file to determine if a transaction request should be approved and, if not, what action should be taken with the card. You must configure NEG screens 1 and 3 to define Super Teller terminals for each card when the institution is using the Negative Authorization without Usage Accumulation or Negative Authorization with Usage Accumulation methods. A new NEG record is required, so NEG screen 1 must be configured according to normal institution procedures before NEG screen 3 can be completed. The fields described below have specific SSB requirements. Refer to the ***BASE24 Base Files Maintenance Manual*** for more information on the NEG.

NEG Screen 1

NEG screen 1 gives you the ability to identify certain cards for special processing, retain specific cards when they are used in the system, and deny transactions attempted with certain cards for a set time.

CARD TYPE — A code identifying the type of card associated with the PAN. Enter the value ST in the CARD TYPE field to indicate that the card is a Super Teller card.

SSB Feature: Super Teller

REASON ON FILE — The reason the card is in the NEG. Enter the value 0 (account open) for Super Teller cards.

SSB Feature: Super Teller

NEG Screen 3

NEG screen 3 is shown below, followed by the description of the field that is used by the SSB Enhanced ATM Application.

```
BASE24-SSBB  NEGATIVE FILE          LLLL          YY/MM/DD  HH:MM  03 OF 04

PAN:                               MEMBER: 000      FIID:

                        ATM SELF SERVICE BANKING BASE

SUPER TELLER TERMINAL ID:
```

```
***** BASE24 *****
NEW PAGE:          FILE DESTINATION:          NEW LOGICAL NETWORK ID:
                        F12-HELP
```

PAN — The card number or primary account number (PAN) identifying the card. This field is entered on NEG screen 1.

MEMBER — The member number for the card. When multiple cards are issued with the same card number, the value in this field distinguishes among the cards. This field is entered on NEG screen 1.

FIID — The FIID of the financial institution that issued the card. This field is entered on NEG screen 1.

ATM SELF SERVICE BANKING BASE

The following field is specific to the SSB Enhanced ATM Application.

SUPER TELLER TERMINAL ID — This field associates a Super Teller card with up to 10 terminals. If a Super Teller card is used at any other terminal, the transaction is denied.

Field Length: 16 alphanumeric characters, occurring up to 10 times
Required Field: Yes, at least one terminal is required if the CARD TYPE field on NEG screen 1 is ST
Default Value: No default value
Data Name: NEG.SUPER-TLR-TERM-ID
SSB Feature: Super Teller

Modifying the Terminal Receipt File

Receipt requirements for approved and denied transactions are defined in the Terminal Receipt File (TRF). Transactions are designated by an ISO processing code consisting of the transaction code, *from* account type, and *to* account type.

The following transaction codes are used with the split deposit transaction:

Transaction	Transaction Code	To Account Type	From Account Type
Split Deposit—Two Checking Accounts	20	01	01
Split Deposit—Checking and Savings Accounts	20	01	11
Split Deposit—Checking and Other Accounts	20	01	60
Split Deposit—Savings and Checking Accounts	20	11	01
Split Deposit—Two Savings Accounts	20	11	11
Split Deposit—Savings and Other Accounts	20	11	60
Split Deposit—Other and Checking Accounts	20	60	01

Transaction	Transaction Code	To Account Type	From Account Type
Split Deposit—Other and Savings Accounts	20	60	11
Split Deposit—Two Other Accounts	20	60	60

Refer to the *BASE24-atm Files Maintenance Manual* for more information about the TRF screens. Refer to the *BASE24-atm Transaction Processing Manual* for more information about how the NCR 5XXX Device Handler process uses the TRF.

Modifying the Receipt File

The SSB Enhanced ATM Application adds configurable customer receipt support for split deposit transactions and configurable depository print to the configurable receipts available with the NCR 5XXX Device Handler process. ACI has established receipt templates for split deposit transactions and depository print in the Receipt File (RCPT). The configurable depository print feature allows printing on the outside of a deposited envelope, or if the CPM is in use, printing directly on the check. If you have configured the optional receipt feature, it will affect the split deposit transaction. This feature allows the cardholder to determine if a receipt should be printed for a transaction.

For a complete description of the configurable receipt feature, the optional receipt feature, receipt templates, and examples of templates for transactions performed at the NCR terminals, refer to the ***BASE24-atm NCR 5XXX Device Support Manual***. For a complete description of the RCPT, refer to the ***BASE24-atm Files Maintenance Manual***.

The split deposit transaction customer receipt template and the configurable depository print templates use the field type codes shown below. The data is retrieved from the BASE24-atm Standard Internal Message (STM) and the BASE24-atm Terminal Data files (ATD). Data names are included in parentheses after each field type code description. Refer to the ***BASE24-atm Transaction Processing Manual*** for further explanation of the STM data names.

Field lengths are included with each description. The maximum number of bytes that can be printed on configurable depository print is 80. This is a limitation of the NCR 5XXX terminal.

Field Type Code Descriptions

The following table describes the standardized field type codes that are used in the default receipt templates provided for the SSB Enhanced ATM Application. You can modify these receipt templates to use the additional field type codes described in the ***BASE24-atm NCR 5XXX Device Support Manual***.

Code	Description	Length
A1	The first deposit amount in a split deposit (STM.RQST.AMT-1).	14 bytes

Code	Description	Length
A2	The second deposit amount in a split deposit (STM.RQST.AMT-2).	14 bytes
AM	The transaction amount (STM.RQST.AMT-1 + STM.RQST.AMT-2 for split deposit transactions, STM.RQST.AMT-1 for other transactions).	14 bytes
CN	The card number from the ATM card (ATM.N50.CRD-NUM) and the member number from the ATM card (3 bytes) (STM.RQST.MBR-NUM).	19 bytes
CX <i>l,r,c</i>	The card number from the ATM card (ATM.N50.CRD-NUM). This data code does not include the member number. The three variables (<i>l</i> for characters starting from the left, <i>r</i> for characters starting from the right, and <i>c</i> for the character code) are used to control the truncation of the card number. If the variables are not present, the account number is printed in its entirety. Refer to the <i>BASE24-atm NCR 5XXX Device Support Manual</i> for additional information about how these variables are used in account number truncation.	19 bytes
DA	The transaction date (STM.TRAN-DAT—MM/DD/YY or DD/MM/YY). The format printed (MM/DD or DD/MM) is dependent on the value specified in the DATE-DISPLAY-TYPE param in the Logical Network Configuration File (LCONF).	4 bytes
E1	Encode Amount 1 prints the MICR amount symbol and STM.RQST.AMT-1. This code assumes that the font for the write zone in the DDF is an encode font using the MICR encoding printer, and that the write zone has room for 10 digits plus a leading and trailing MICR amount symbol.	12 bytes
E2	Encode Amount 2 prints the MICR amount symbol and STM.RQST.AMT-2. This code assumes that the font for the write zone in the DDF is an encode font using the MICR encoding printer, and that the write zone has room for 10 digits plus a leading and trailing MICR amount symbol.	12 bytes

Code	Description	Length
EM	Encode Transaction Amount prints the MICR amount symbol and the transaction amount. The transaction amount is STM.RQST.AMT-1 or for split deposits (STM.RQST.AMT-1 + STM.RQST.AMT-2). This code assumes the font for the write zone in the DDF is an encode font using the MICR encoding printer, and that the write zone has room for 10 digits plus a leading and trailing MICR amount symbol.	12 bytes
E ^x	Space compression code. This code places spaces on the receipt. The value <i>x</i> is the number of spaces in hexadecimal, and must be in the range of 1–F.	
FR _{l,r,c}	The <i>from</i> account number of the first account (STM.RQST.FROM-ACCT or STM.STMT-INFO.FROM-ACCT). If the STM.RQST.FROM-ACCT is all blanks or zeros, the NCR 5XXX Device Handler process uses the account description from the ncr_appl_bl table in the N50NAMS File. The value of STM.RQST.FROM-ACCT-TYP and the language indicator determine which table entry is used. The three variables (<i>l</i> for characters starting from the left, <i>r</i> for characters starting from the right, and <i>c</i> for the character code) are used to control the truncation of the card number. If the variables are not present, the account number is printed in its entirety. Refer to the <i>BASE24-atm NCR 5XXX Device Support Manual</i> for additional information about how these variables are used in account number truncation.	19 bytes
MB	The member number from the ATM card (STM.RQST.MBR-NUM).	3 bytes
NS	No space.	
SP	Inserts a space before the next field (default).	
SQ	The BASE24 sequence number assigned to the transaction (ATDD1.ATDD1-CORE.TRAN-SEQ-NUM).	4 bytes

Code	Description	Length
TA	The <i>to</i> account type (located in ncr_appl_tbl table in the N50NAMS File) printed on the depository envelope. The account type printed depends on the language indicator and the value of STM.TO-ACCT-TYP. The NCR 5XXX Device Handler process matches account type numbers to a two-character account type description in the ACCT-TYP-TBL table in the N50NAMS File.	11 bytes
TE	All 16 bytes of the terminal ID (STM.TERM-ID).	16 bytes
TI	The time the transaction took place (STM.TRAN-TIM). Time is displayed in a 12-hour format as opposed to the 24-hour format. If the time is less than 1200, the time appears as HH:MM <i>xx</i> . If the time is greater than or equal to 1200, the time appears as HH:MM <i>yy</i> where HH has valid values of 1 through 12. <i>xx</i> and <i>yy</i> are the configurable variable length symbols for a.m. and p.m., respectively. The format of this field type code is TI <i>xx/yy</i> with a space before <i>xx</i> and <i>yy</i> .	4 bytes
TM	The first 8 bytes of the terminal ID (STM.TERM-ID).	8 bytes
TO <i>l,r,c</i>	The <i>to</i> account number of the second account (STM.RQST.TO-ACCT). If the STM.RQST.TO-ACCT is all blanks or zeros, the NCR 5XXX Device Handler process uses the account description from the ncr_appl_tbl table in the N50NAMS File. The value of STM.RQST.TO-ACCT-TYP and the language indicator determine which table entry is used. The three variables (<i>l</i> for characters starting from the left, <i>r</i> for characters starting from the right, and <i>c</i> for the character code) are used to control the truncation of the card number. If the variables are not present, the account number is printed in its entirety. Refer to the <i>BASE24-atm NCR 5XXX Device Support Manual</i> for additional information about how these variables are used in account number truncation.	19 bytes

Code	Description	Length
TT	The transaction type (located in the ncr_tran_tbl table in the N50NAMS File). The transaction text printed depends on the value in the STM.TRAN-CDE field. The NCR 5XXX Device Handler process searches the ncr_tran_tbl table in the N50NAMS File to find a match on the transaction code. The corresponding text is then moved to the print buffer.	10 bytes

Split Deposit Receipt

The receipt type SDP is used for a split deposit transaction. The NCR ATM default receipt template defined in the RCPT is shown below, followed by a graphic example of the default receipt for a split deposit transaction.

```
#E^4@RECORD NO.#E^F    #SQ>
#E^4#TT>
#E^4@FIRST AMOUNT#E^5#A1$>
#E^4@TO#E^5#FR>
#E^4@SECOND AMOUNT#E^4#A2$>
#E^4@TO#E^5#TO>>
```

```

1          CUSTOMER LOGO SCREEN
2
3          DATE      TIME      TERM
4          YY/MM/DD  HH:MM    S1A10000
5
6          1234567890123456789-000
7
8          330 SOUTH 108TH STREET
9
10         RECORD NO.              776
11         CHK SPLIT DEP
12         FIRST AMOUNT            $50.00
13         TO  3301101
14
15         SECOND AMOUNT           $100.00
16         TO  3311102
17
18
19
20
21
```

```

1          2          3
123456789012345678901234567890
```

Sample Configurable Depository Print Template

The receipt type DPPR is used for printing depository information on envelopes. The order in which the depository data codes appear in the template is the order in which they are printed on the envelope. If a spacing identifier (that is, SP or NS) is the first entry in the template, then either one space before each field or no spaces is used for the entire template. Spacing can be altered field by field with the use of this identifier. If no spacing identifier is specified, a default of one space is used before each field.

The NCR ATM default receipt template for the depository print template as defined in the RCPT is shown below.

```
#NS#TM#SQ#AM$#CN#TA#DA#TI#TT
```

The following is an example of the DPPR receipt:

```
S1A100000776$50.001234567890123456789-000SAVINGSMM/DDHH:MM AMDEPOSIT
```

Document Processing Module Receipts

If you are using NCR 56XX or 58XX terminals and have purchased the SSB Device Handler Extension and have the CPM installed, the configurable depository print feature has extended capabilities to print information directly on the check. Up to thirteen write zones can be defined in NCR's Document Definition File (DDF) (for example, WRITE_ZONE_1, WRITE_ZONE_2). You can name these zones anything you want in the DDF. Thirteen receipt templates can be configured in the RCPT to print these zones, and are named CPMA, CPMB, CPMC, etc. through CPMM. Note that the zone name and the template used are not connected; WRITE_ZONE_1 does not have to be used in CPMA, for instance.

The first example of a CPM template (shown below) shows writing to WRITE_ZONE_1 (defined in the DDF). In this example, the zone is a write zone with no confirmation. The card number, transaction date and time, and terminal ID will be written in the zone. The second example shows writing to the ENCODE_ZONE (defined in the DDF). In this example, the zone is a write and confirm zone. The encoded transaction amount will be written in the zone.

Within these RCPT records, the first field must be a text field in the following format:

Format

@ vx

@ — The RCPT configurator character indicating the start of a text field.

v — The write verification indicator. Valid values are as follows:

 ; = Write (no confirmation)

 < = Write and confirm

x — The write or write and confirm zone name defined in the DDF.

Examples

@;WRITE_ZONE_1#CN#DA#NS#TI#TM

@<ENCODE_ZONE#NS#EM

Modifying the SSDHNAMS File

The SSDHNAMS File is an edit file that contains a series of tables that are used by the SSB Enhanced ATM Application. You can edit these tables to customize specific types of information displayed on ATM receipts or screens. At the time the SSB Enhanced ATM Application is compiled, the information in the SSDHNAMS File is incorporated into the SSB Enhanced ATM Application object file. Therefore, you must either make the changes to this file during the SSB installation procedures before the code is compiled, or if you need to make changes after the installation is complete, you must recompile the code.

SSB Transaction Text Tables

The following tables are set up so you can determine the exact text to be used on receipts and screens for the NCR SSB modules. Note that the order and length within each table is essential and should not be altered. Only the text can be changed, **not** the order or length of the table. You are not required to make any changes to this table to support the SSB product. However, you can modify the default text. Three languages are included in the tables.

The `ncr_ssb_base_tran_tbl` table sets up the text for the split deposit transaction. The default text for this transaction is as follows:

20 = SPLIT DEP

The `ncr_ssb_base_oar_txt` table contains the text that appears with the two accounts if they are the same type. The default text is “1 ST” for the first account, and “2 ND” for the second account. This default text is combined with the account type, for instance 1 ST CHK or 1 ST SAV.

Modifying the Token File

The SSB Enhanced ATM Application uses the Token File (TKN) to configure data tokens that carry additional information in internal messages. These tokens are logged to various files, are extracted, or are sent to the host. The TKN specifies the following information:

- The tokens that get logged to the BASE24-atm Transaction Log File (TLF) and the Interchange Log Files (ILFs).
- The tokens that get extracted from the transaction log files by the Super Extract process. Extracting allows the token information to be processed by the host.
- The tokens that get sent to the host with each transaction in the ISO-based external message.

The SSB Enhanced ATM Application uses the Self-Service Banking Base token (token ID 07) to carry information about two of the features: split deposit and Super Teller. For split deposit, the token contains a field for the second account's deposit balance credit. For Super Teller, the token contains a flag indicating whether this transaction was initiated by a Super Teller card.

The TKN must be modified to ensure that this token gets logged to the appropriate transaction log files, to ensure that this token is extracted from the TLF, and to ensure that this token gets sent from the BASE24 system to the ISO-based BASE24 Host Interface process or the ISO-based BIC Interface process in the external message.

Refer to the ***BASE24 Tokens Manual*** for complete information on the Self Service Banking Base token and on using the TKN to specify tokens to be sent in the external message. Refer to the ***BASE24 Base Files Maintenance Manual*** for detailed field descriptions for the TKN screen.

ACI Worldwide, Inc.

4: BASE24-atm SSB Enhanced Check Processing Application

The BASE24-atm self-service banking (SSB) Enhanced Check Processing Application is one of three add-on applications that make up the BASE24-atm self-service banking product. In order to use this application, you must have the SSB Device Handler Extension and the SSB Enhanced ATM Application installed.

The first half of this section describes the processing enhancements that each feature of the SSB Enhanced Check Processing Application provides. The following topics describe the files and fields that must be modified to properly configure the SSB Enhanced Check Processing Application. Information on the fields and files required for individual features is also included if you want to configure only certain features.

The SSB Enhanced Check Processing Application supports the following features for NCR terminals:

- Enhanced check authorization
- Enhanced MICR processing and manipulation
- Check-cashing cards
- Registered check processing
- Stop payment verification
- Preapproved and predeclined check processing
- Enhanced document bin sorting

Enhanced Check Authorization

Authorization controls can be established for check-related transactions based on the institution that issued the check rather than on the cardholder performing the check transaction. The SSB Enhanced Check Processing Application also supports check cashing limits and usages for the individual cardholder and check disposition options.

The SSB Enhanced Check Processing Application requires a number of file settings that affect transaction authorization for check-related transactions. The BASE24-atm Authorization process is responsible for reading several standard BASE24-atm files as well as several application-specific files during check-related transaction processing.

Authorization controls must be defined to support the following:

- Check-related cash disbursement transaction limits and usages
- Prescreening checks

In addition, authorization controls impact the following SSB features, and are described along with those features:

- Enhanced MICR processing and manipulation
- Check-cashing cards
- Registered check processing
- Stop payment verification
- Preapproved and predeclined check processing

The Super Teller feature in the SSB Enhanced ATM Application can also be affected by the authorization controls set in the SSB Enhanced Check Processing Application. These impacts are described below under the topic “Super Teller Card Impacts.”

With the SSB Enhanced Check Processing Application, the BASE24-atm Authorization process is able to parse the MICR check data from the MICR Data token to determine the routing and transit number, the account number, and the check number. The ability to read the MICR information and determine the institution that issued the check and the account number of the check enables the BASE24-atm product to support check authorization parameters based on a

specific check issuer and a specific account. Check-related cash disbursement transactions can be approved or declined for checks issued by specific institutions or for a specific account from a specific institution.

The NCR Device Handler process initially interprets the MICR information at the time the check-related transaction request message is received from the terminal. The Device Handler process then forwards the MICR information to the Authorization process in the MICR Data token as part of the transaction request. The Authorization process uses the MICR information to access the SSB Enhanced Check Processing Application files to determine the authorization parameters defined by the institution based on the authorization method used by the institution.

Check Transaction Limits and Totals

Before approving a transaction, the BASE24-atm Authorization process maintains totals and compares these values with limits established by each institution. The SSB Enhanced Check Processing Application makes additional limits and totals available. The limits and totals available depend on the authorization method used, as summarized on the following pages. Transaction limits and totals are not affected by transactions that do not involve cash disbursements (for example, deposit without cash back).

Impact of the SSB Enhanced Check Processing Application

Without the SSB Enhanced Check Processing Application, the BASE24-atm product uses transaction totals located in the Usage Accumulation File (UAF) and limits located in the Card Prefix File (CPF) for the Negative Authorization with Usage Accumulation method. The BASE24-atm product uses transaction totals located in the Cardholder Authorization File (CAF) and limits located in the CAF or CPF for the Positive and Positive Balance Authorization methods.

With the SSB Enhanced Check Processing Application, BASE24-atm processes still uses the CAF, CPF, and UAF. However, an SSB Check (SSBC) segment is added to each of these files. Without the SSB Enhanced Check Processing Application, check-related transactions (cash check and check deposit with cash back) use BASE24-atm withdrawal limits. With the SSB Enhanced Check Processing Application, these two transactions can use check limits in the SSBC segment. Cash disbursement transactions that do not involve checks use BASE24-atm withdrawal limits with or without the SSB Enhanced Check Processing Application.

Definition of Transaction Amount

In the following summaries, the transaction amount used to perform each of the tests depends on the transaction performed.

For withdrawal and cash check transactions, the transaction amount is contained in the AMT-1 field of the BASE24-atm Standard Internal Message (STM). For check deposit with cash back transactions, the transaction amount is the cash back portion contained in the AMT-2 field of the STM.

Types of Cash Disbursement Limits

The BASE24 product maintains the following sets of limits in the CAF and CPF for cash disbursements that occur during a usage accumulation period:

- Aggregate limits specify the maximum aggregate amount of cash disbursements permitted against credit and noncredit accounts and purchases permitted against noncredit accounts. (Purchases are BASE24-pos transactions.)
- Cash advance limits specify the maximum amount of cash advances permitted against credit accounts. These limits can be maintained at the base level and at product-specific levels.
- Cash withdrawal limits specify the maximum amount of purchases and cash withdrawals permitted against noncredit accounts. These limits can be maintained at the base level and at product-specific levels. These limits are called check usage limits at the SSB level. SSB-level check usage limits are tested instead of terminal-level cash withdrawal limits for cash check and check deposit with cash back transactions.

The BASE24-atm Authorization process tests a cash disbursement transaction against the aggregate limits before it tests the transaction against any base or product level limits. This includes transactions initiated with a check-cashing card (card type SP) or Super Teller card (card type ST).

The BASE24-atm Authorization process maintains a total for each base and product level cash disbursement limit. However, instead of maintaining an aggregate total, the BASE24-atm Authorization process uses the base cash advance and cash withdrawal totals with the aggregate limit.

Cash disbursement limits and totals for check-related transactions are optional at the SSB level and the base level. Therefore, you must take care and ensure that limits are set at one level or the other for each account. One or both of these limits

must be configured in order to have usage accumulation period limits for check-related cash disbursement transactions. Omitting the cash disbursement limits and totals at both levels results in having only per-transaction limits for check-related cash disbursement transactions.

There are two types of SSB limits for check-related cash disbursement transactions. One SSB limit is for transactions that match a record in the Check Status File (CSF). The second SSB limit is for other transactions. Each SSB limit includes an amount and a flag identifying whether the base limits are tested. The following examples do not distinguish between the two SSB limit types, and are shown in U.S. dollars.

The following examples demonstrate the processing possibilities for check-related cash disbursement limits with and without the SSB and base limits. The accumulation that exceeds the limit is shown in bold. All four examples use the same combination of chained transactions.

Example 1. The following example uses both the SSB and base limits to authorize transactions.

Aggregate limit: \$700
 Base limit: \$700
 ATM limit: \$300
 SSB limit: **\$300**
 Base limit tests: Yes

The accumulations for each transaction are shown below.

Transaction Description	Total Accumulation		
	Base	ATM	SSB
1. \$200 cash withdrawal	\$200	\$200	\$0
2. \$300 cash check	\$500	\$200	\$300
3. Check deposit with \$200 cash back	\$700	\$200	\$300

In this example, transaction number 3 is declined because the base accumulation passes the aggregate and base limit tests, but the SSB accumulation would exceed the SSB limit.

Example 2. The following example uses the base limit without the SSB limit to authorize transactions.

Aggregate limit: \$700
Base limit: \$700
ATM limit: \$300
SSB limit: \$0 (SSB test is not performed)
Base limit tests: Yes

The accumulations for each transaction are shown below.

Transaction Description	Total Accumulation		
	Base	ATM	SSB
1. \$200 cash withdrawal	\$200	\$200	
2. \$300 cash check	\$500	\$200	
3. Check deposit with \$200 cash back	\$700	\$200	

All three transactions are approved because the SSB limit that caused transaction number 3 to be declined in example 1 is not used in this example.

Example 3. The following example uses the SSB limit without testing the base limit to authorize transactions.

Aggregate limit: \$700
Base limit: \$700
ATM limit: \$300
SSB limit: **\$300**
Base limit tests: No

The accumulations for each transaction are shown below.

Transaction Description	Total Accumulation		
	Base	ATM	SSB
1. \$200 cash withdrawal	\$200	\$200	\$0
2. \$300 cash check	\$200	\$200	\$300

Transaction Description	Total Accumulation		
	Base	ATM	SSB
3. Check deposit with \$200 cash back	\$200	\$200	\$300

Transaction number 3 is declined because the SSB accumulation would exceed the SSB limit. Transaction numbers 2 and 3 do not affect the base total accumulation because the base limit tests are not being performed.

Example 4. The following example does not use either the base limit or the SSB limit to authorize transactions.

Aggregate limit: \$700
 Base limit: \$700
 ATM limit: \$300
 SSB limit: \$0 (SSB test is not performed)
 Base limit tests: No

The accumulations for each transaction are shown below.

Transaction Description	Total Accumulation		
	Base	ATM	SSB
1. \$200 cash withdrawal	\$200	\$200	
2. \$300 cash check	\$200	\$200	
3. Check deposit with \$200 cash back	\$200	\$200	

All three transactions (as well as any additional cash check or check deposit with cash back transactions) are approved because cash check and check deposit with cash back transactions are not tested against SSB, base, or aggregate limits. Check transactions can be tested on a per transaction basis using information in the Check Status File (CSF) or Corporate Check File (CCF), but cannot be tested on a usage accumulation period basis.

Negative Authorization with Usage Accumulation Method

The BASE24-atm Authorization process can test limits and update totals in four different combinations for check transactions involving cash disbursements with the Negative Authorization with Usage Accumulation method.

Without the SSBC Segment

Without the SSB Enhanced Check Processing Application, the SSBC segment is not present, so the BASE24-atm Authorization process performs the following steps:

1. Determines the number of card uses, including check-related cash disbursement transactions.

The values of the following fields are used in determining the number of card uses.

TIMES USED PER PERIOD LIMIT	CPF screen 4
TIMES USED THIS PERIOD	UAF screen 4

2. Determines the total amount of aggregate cash disbursement activity, including check-related cash disbursement transactions.

The values of the following fields are used in determining the total amount of aggregate cash disbursement activity.

AGGR ACTIVITY LIMITS	CPF screen 1
CASH WDL ACTIVITY THIS PERIOD	UAF screen 1
CASH ADV ACTIVITY THIS PERIOD	UAF screen 1

3. Determines the total amount of base withdrawal activity, including check-related cash disbursement transactions.

The values of the following fields are used in determining the total amount of base withdrawal activity.

CASH WDL ACTIVITY LIMITS	CPF screen 1
CASH WDL ACTIVITY THIS PERIOD	UAF screen 1

4. Determines the total amount of terminal withdrawals, including check-related cash disbursement transactions.

The values of the following fields are used in determining the total amount of terminal withdrawals.

CASH WDL ACTIVITY LIMITS	CPF screen 4
CASH WDL ACTIVITY THIS PERIOD	UAF screen 4

With the SSBC Segment and a Check-Cashing Card

When a customer uses a check-cashing card (card type SP), the BASE24-atm Authorization process must find a match for the transaction in the Corporate Check File (CCF) or the transaction is declined. With the SSBC segment and a CCF match, the BASE24-atm Authorization process performs the following steps.

Note: Steps 2 and 3 are not performed if the PROCESS CHECK TRANSACTIONS USING BASE LIMITS/USAGES field on CPF screen 14 is set to a value of N.

1. Determines the number of card uses.

The values of the following fields are used in determining the number of card uses.

TIMES USED PER PERIOD LIMIT	CPF screen 4
TIMES USED THIS PERIOD	UAF screen 4

2. Determines the total amount of aggregate cash disbursement activity if the PROCESS CHECK TRANSACTIONS USING BASE LIMITS/USAGES field on CPF screen 14 is set to a value of Y.

The values of the following fields are used in determining the total amount of aggregate cash disbursement activity.

AGGR ACTIVITY LIMITS	CPF screen 1
CASH WDL ACTIVITY THIS PERIOD	UAF screen 1
CASH ADV ACTIVITY THIS PERIOD	UAF screen 1

3. Determines the total amount of base cash disbursement activity if the PROCESS CHECK TRANSACTIONS USING BASE LIMITS/USAGES field on CPF screen 14 is set to a value of Y.

The values of the following fields are used in determining the total amount of base cash disbursement activity.

CASH WDL ACTIVITY LIMITS	CPF screen 1
CASH WDL ACTIVITY THIS PERIOD	UAF screen 1

4. Determines the total amount of transactions.

The values of the following fields are used in determining the total amount of transactions.

CHECK ACTIVITY LIMITS	CPF screen 14
CHECK ACTIVITY THIS PERIOD	UAF screen 10

5. Determines the amount of each transaction.

The value of the following field is used in determining the amount of each transaction.

MAXIMUM AMOUNT CCF screen 1

6. Determines the amount of cash dispensed with each transaction.

The value of the following field is used in determining the amount of cash dispensed with each transaction.

MINIMUM DISPENSE AMOUNT CPF screen 14

With the SSBC Segment and Check Status File Match

When a customer uses a card other than a check-cashing card, the BASE24-atm Authorization process searches the Check Status File (CSF) for a record that matches the transaction. With the SSBC segment and a CSF match, the BASE24-atm Authorization process performs the following steps.

Note: Steps 2 and 3 are not performed if the PROCESS CHECK TRANSACTIONS USING BASE LIMITS/USAGES field on CPF screen 14 is set to a value of N. Step 4 is not performed if the CSF CHECK ACTIVITY LIMITS fields on CPF screen 14 are set to a value of 0.

1. Determines the number of checks accepted.

The values of the following fields are used in determining the number of checks accepted.

CSF CHECKS ALLOWED PER PERIOD CPF screen 14
CSF CHECKS ACCEPTED THIS PERIOD UAF screen 10

2. Determines the total amount of aggregate cash disbursement activity if the PROCESS CHECK TRANSACTIONS USING BASE LIMITS/USAGES field on CPF screen 14 is set to a value of Y.

The values of the following fields are used in determining the total amount of aggregate cash disbursement activity.

AGGR ACTIVITY LIMITS CPF screen 1
CASH WDL ACTIVITY THIS PERIOD UAF screen 1
CASH ADV ACTIVITY THIS PERIOD UAF screen 1

3. Determines the total amount of base cash disbursement activity if the PROCESS CSF CHECK TRANSACTIONS USING BASE LIMITS/USAGES field on CPF screen 14 is set to Y.

The values of the following fields are used in determining the total amount of base cash disbursement activity.

CASH WDL ACTIVITY LIMITS	CPF screen 1
CASH WDL ACTIVITY THIS PERIOD	UAF screen 1

4. Determines the total amount of check-related cash disbursement transactions if the CSF CHECK ACTIVITY LIMITS fields on CPF screen 14 contain values other than 0.

The values of the following fields are used in determining the total amount of check-related cash disbursement transactions.

CSF CHECK ACTIVITY LIMITS	CPF screen 14
CSF CHECK ACTIVITY THIS PERIOD	UAF screen 10

5. Determines the amount of individual check-related cash disbursement transactions.

The value of the following field is used in determining the amount of individual check-related cash disbursement transactions.

CHECK LIMIT	CSF screen 1
-------------	--------------

6. Determines the amount of cash dispensed with individual check-related cash disbursement transactions.

The value of the following field is used in determining the amount of cash dispensed with individual check-related cash disbursement transactions.

MINIMUM DISPENSE AMOUNT	CPF screen 14
-------------------------	---------------

With SSBC Segment and no Check Status File Match

When a customer uses a card other than a check-cashing card, the BASE24-atm Authorization process searches the Check Status File (CSF) for a record that matches the transaction. With the SSBC segment and no CSF match, the BASE24-atm Authorization process performs the following steps.

Note: Steps 2 and 3 are not performed if the PROCESS CHECK TRANSACTIONS USING BASE LIMITS/USAGES field on CPF screen 14 is set to a value of N.

1. Determines the number of card uses, including check-related cash disbursement transactions.

The values of the following fields are used in determining the number of card uses.

TIMES USED PER PERIOD LIMIT	CPF screen 4
TIMES USED THIS PERIOD	UAF screen 4

2. Determines the total amount of aggregate cash disbursement activity if the PROCESS CSF CHECK TRANSACTIONS USING BASE LIMITS/USAGES field on CPF screen 14 is set to a value of Y.

The values of the following fields are used in determining the total amount of aggregate cash disbursement activity.

AGGR ACTIVITY LIMITS	CPF screen 1
CASH WDL ACTIVITY THIS PERIOD	UAF screen 1
CASH ADV ACTIVITY THIS PERIOD	UAF screen 1

3. Determines the total amount of base cash disbursement activity if the PROCESS CHECK TRANSACTIONS USING BASE LIMITS/USAGES field on CPF screen 14 is set to a value of Y.

The values of the following fields are used in determining the total amount of base cash disbursement activity.

CASH WDL ACTIVITY LIMITS	CPF screen 1
CASH WDL ACTIVITY THIS PERIOD	UAF screen 1

4. Determines the total amount of check-related cash disbursement transactions.

The values of the following fields are used in determining the total amount of check-related cash disbursement transactions.

CHECK ACTIVITY LIMITS	CPF screen 14
CHECK ACTIVITY THIS PERIOD	UAF screen 10

5. Determines the amount of cash dispensed with each check-related cash disbursement transaction.

The value of the following field is used in determining the amount of cash dispensed with each check-related cash disbursement transaction.

MINIMUM DISPENSE AMOUNT	CPF screen 14
-------------------------	---------------

Positive and Positive Balance Authorization Methods

The BASE24-atm Authorization process can test limits and update totals for check-related cash disbursement transactions in four different combinations with the Positive and Positive Balance Authorization methods. With both of these methods, the limits can be established at the card prefix level in the CPF or at the

individual card level in the CAF. The value in the TOTAL AGGR ACTIVITY LIMIT field on CAF screen 1 controls whether CAF or CPF limits are used for a particular account.

Without the SSBC Segment

Without the SSB Enhanced Check Processing Application, the SSBC segment is not present, so the BASE24-atm Authorization process performs the following steps:

1. Determines the number of card uses, including check-related cash disbursement transactions.

The values of the following fields are used in determining the number of card uses.

TIMES USED PER PERIOD LIMIT	CPF screen 4 or CAF screen 8
TIMES USED THIS PERIOD	CAF screen 8

2. Determines the total amount of aggregate cash disbursement activity, including check-related cash disbursement transactions.

The values of the following fields are used in determining the total amount of aggregate cash disbursement activity.

AGGR ACTIVITY LIMITS	CPF screen 1 or CAF screen 1
CASH WDL ACTIVITY THIS PERIOD	CAF screen 1
CASH ADV ACTIVITY THIS PERIOD	CAF screen 1

3. Determines the total amount of base cash disbursement activity, including check-related cash disbursement transactions.

The values of the following fields are used in determining the total amount of base cash disbursement activity.

CASH WDL ACTIVITY LIMITS	CPF screen 1 or CAF screen 1
CASH WDL ACTIVITY THIS PERIOD	CAF screen 1

4. Determines the total amount of terminal withdrawals, including check-related cash disbursement transactions.

The values of the following fields are used in determining the total amount of terminal withdrawals.

CASH WDL ACTIVITY LIMITS	CPF screen 4 or CAF screen 8
CASH WDL ACTIVITY THIS PERIOD	CAF screen 8

With the SSBC Segment and a Check-Cashing Card

When a customer uses a check-cashing card (card type SP), the BASE24-atm Authorization process must find a match for the transaction in the Corporate Check File (CCF) or the transaction is declined. With the SSBC segment and a CCF match, the BASE24-atm Authorization process performs the following steps.

Note: Steps 2 and 3 are not performed if the PROCESS CHECK TRANSACTIONS USING BASE LIMITS/USAGES field on either CPF screen 14 or CAF screen 15 is set to a value of N.

1. Determines the number of card uses.

The values of the following fields are used in determining the number of card uses.

TIMES USED PER PERIOD LIMIT	CPF screen 4 or CAF screen 8
TIMES USED THIS PERIOD	CAF screen 8

2. Determines the total amount of aggregate cash disbursement activity if the PROCESS CHECK TRANSACTIONS USING BASE LIMITS/USAGES field on either CPF screen 14 or CAF screen 15 is set to a value of Y.

The values of the following fields are used in determining the total amount of aggregate cash disbursement activity.

AGGR ACTIVITY LIMITS	CPF screen 1 or CAF screen 1
CASH WDL ACTIVITY THIS PERIOD	CAF screen 1
CASH ADV ACTIVITY THIS PERIOD	CAF screen 1

3. Determines the total amount of base cash disbursement activity if the PROCESS CHECK TRANSACTIONS USING BASE LIMITS/USAGES field on either CPF screen 14 or CAF screen 15 is set to a value of Y.

The values of the following fields are used in determining the total amount of base cash disbursement activity.

CASH WDL ACTIVITY LIMITS	CPF screen 1 or CAF screen 1
CASH WDL ACTIVITY THIS PERIOD	CAF screen 1

4. Determines the total amount of transactions.

The values of the following fields are used in determining the total amount of transactions.

CHECK ACTIVITY LIMITS	CPF screen 14 or CAF screen 15
CHECK ACTIVITY THIS PERIOD	CAF screen 15

5. Determines the amount of each transaction.

The value of the following field is used in determining the amount of each transaction.

MAXIMUM AMOUNT CCF screen 1

6. Determines the amount of cash dispensed with each transaction.

The value of the following field is used in determining the amount of cash dispensed with each transaction.

MINIMUM DISPENSE AMOUNT CPF screen 14

With the SSBC Segment and Check Status File Match

When a customer uses a card other than a check-cashing card, the BASE24-atm Authorization process searches the Check Status File (CSF) for a record that matches the transaction. With the SSBC segment and a CSF match, the BASE24-atm Authorization process performs the following steps.

Note: Steps 2 and 3 are not performed if the PROCESS CSF CHECK TRANSACTIONS USING BASE LIMITS/USAGES field on either CPF screen 14 or CAF screen 16 is set to a value of N. Step 4 is not performed if the CSF CHECK ACTIVITY LIMITS fields on either CPF screen 14 or CAF screen 16 are set to a value of 0.

1. Determines the number of checks accepted.

The values of the following fields are used in determining the number of checks accepted.

CSF CHECKS ALLOWED PER PERIOD CPF screen 14 or
CAF screen 16
CSF CHECKS ACCEPTED THIS PERIOD CAF screen 16

2. Determines the total amount of aggregate cash disbursement activity if the PROCESS CSF CHECK TRANSACTIONS USING BASE LIMITS/USAGES field on either CPF screen 14 or CAF screen 16 is set to a value of Y.

The values of the following fields are used in determining the total amount of aggregate cash disbursement activity.

AGGR ACTIVITY LIMITS CPF screen 1 or CAF screen 1
CASH WDL ACTIVITY THIS PERIOD CAF screen 1
CASH ADV ACTIVITY THIS PERIOD CAF screen 1

3. Determines the total amount of base cash disbursement activity if the PROCESS CSF CHECK TRANSACTIONS USING BASE LIMITS/USAGES field on either CPF screen 14 or CAF screen 16 is set to a value of Y.

The values of the following fields are used in determining the total amount of base cash disbursement activity.

CASH WDL ACTIVITY LIMITS	CPF screen 1 or CAF screen 1
CASH WDL ACTIVITY THIS PERIOD	CAF screen 1

4. Determines the total amount of check-related cash disbursement transactions if the CSF CHECK ACTIVITY LIMITS fields on either CPF screen 14 or CAF screen 16 contain values other than 0.

The values of the following fields are used in determining the total amount of check-related cash disbursement transactions.

CSF CHECK ACTIVITY LIMITS	CPF screen 14 or CAF screen 16
CSF CHECK ACTIVITY THIS PERIOD	CAF screen 16

5. Determines the amount of each check-related cash disbursement transaction.

The value of the following field is used in determining the amount of each check-related cash disbursement transaction.

CHECK LIMIT	CSF screen 1
-------------	--------------

6. Determines the amount of cash dispensed with each check-related cash disbursement transaction.

The value of the following field is used in determining the amount of cash dispensed with each check-related cash disbursement transaction.

MINIMUM DISPENSE AMOUNT	CPF screen 14
-------------------------	---------------

With SSBC Segment and no Check Status File Match

When a customer uses a card other than a check-cashing card, the BASE24-atm Authorization process searches the Check Status File (CSF) for a record that matches the transaction. With the SSBC segment and no CSF match, the BASE24-atm Authorization process performs the following steps.

Note: Steps 2 and 3 are not performed if the PROCESS CHECK TRANSACTIONS USING BASE LIMITS/USAGES field on either CPF screen 14 or CAF screen 15 is set to a value of N.

1. Determines the number of card uses, including check-related cash disbursement transactions.

The values of the following fields are used in determining the number of card uses.

TIMES USED PER PERIOD LIMIT	CPF screen 4 or CAF screen 8
TIMES USED THIS PERIOD	CAF screen 8

2. Determines the total amount of aggregate cash disbursement activity if the PROCESS CHECK TRANSACTIONS USING BASE LIMITS/USAGES field on either CPF screen 14 or CAF screen 15 is set to a value of Y.

The values of the following fields are used in determining the total amount of aggregate cash disbursement activity.

AGGR ACTIVITY LIMITS	CPF screen 1 or CAF screen 1
CASH WDL ACTIVITY THIS PERIOD	CAF screen 1
CASH ADV ACTIVITY THIS PERIOD	CAF screen 1

3. Determines the total amount of base cash disbursement activity if the PROCESS CHECK TRANSACTIONS USING BASE LIMITS/USAGES field on either CPF screen 14 or CAF screen 15 is set to a value of Y.

The values of the following fields are used in determining the total amount of base cash disbursement activity.

CASH WDL ACTIVITY LIMITS	CPF screen 1 or CAF screen 1
CASH WDL ACTIVITY THIS PERIOD	CAF screen 1

4. Determines the total amount of check-related cash disbursement transactions.

The values of the following fields are used in determining the total amount of check-related cash disbursement transactions.

CHECK ACTIVITY LIMITS	CPF screen 14 or CAF screen 15
CHECK ACTIVITY THIS PERIOD	CAF screen 15

5. Determines the amount of cash dispensed with each check-related cash disbursement transaction.

The value of the following field is used in determining the amount of cash dispensed with each check-related cash disbursement transaction.

MINIMUM DISPENSE AMOUNT	CPF screen 14
-------------------------	---------------

Super Teller Card Impacts

Adding the SSBC segment also affects the limits established for the Super Teller card offered with the SSB Enhanced ATM Application. Like it does for other card types with the SSB Enhanced Check Processing Application, the BASE24-atm Authorization process maintains a separate SSBC segment for check-related cash disbursement transactions initiated with a Super Teller card (card type ST). As a result, CPF screen 14 or CAF screens 15 and 16 must be completed for Super Teller cards just as they are completed for any other card type. Limits for Super Teller cards should reflect their specialized use.

Enhanced MICR Processing and Manipulation

With the SSB Enhanced Check Processing Application, the BASE24 product has the ability to interpret the Magnetic Ink Character Recognition (MICR) information sent from the terminal on check-related transactions. By interpreting the MICR information, the BASE24 product can determine the routing and transit number of the institution that issued the check as well as the account number associated with that routing and transit number. This means that the BASE24 product can authorize check-related transactions based on the institution and account number of the check-issuing institution. In addition, the BASE24 product can facilitate the settlement process by sorting checks according to the institution that issued them, using the enhanced bin sorting feature that is described later in this section.

Processing MICR Information

The Authorization process parses the MICR information to determine the routing and transit number of the check-issuing institution, the account number, and the check number.

The NCR 56XX- or 58XX-series terminal reads the MICR data on a check at the time a check-related transaction is initiated. This MICR information is placed in the MICR Data token in the transaction request message sent from the NCR Device Handler process to the BASE24-atm Authorization process.

The characters 0 through 9, blanks, and the nonnumeric separators listed below represent valid MICR information. The Device Handler process translates the NCR MICR separators to the BASE24 format as follows:

Symbol	NCR	BASE24
Transit	d	T
Amount	b	\$
On-us	c	*
Dash	-	-

The transaction is denied if there is an unrecognizable character in the MICR information.

If the Authorization process finds the amount symbol (\$) in the check MICR information, indicating that the check was previously processed, the transaction is declined with a response code of 71 (contact bank).

If the Authorization process finds the routing and transit number, account number, and check serial number in the MICR information, the Account Routing File (ARF) is searched for possible MICR manipulation instructions and the Stop Payment File (SPF) is searched for possible stop payments.

If the Authorization process finds the routing and transit number and account number, but no check serial number in the MICR information, the ARF is searched for possible MICR manipulation instructions, but the SPF is not searched.

If the Authorization process is unable to locate the routing and transit number or the account number in the MICR information, the transaction is authorized based on standard BASE24-atm cardholder authorization parameters.

Manipulating MICR Information

After the BASE24-atm Authorization process parses the MICR information in the MICR Data token, the process searches the Account Routing File (ARF) to determine whether changes need to be made to the MICR information retrieved from the check. The MICR Data token must contain the routing and transit number and the account number before the Authorization process attempts to search the Account Routing File (ARF). The ARF provides routing information to supplement the account information entered at the terminal so that the account can be located in the BASE24 database.

For example, when two financial institutions merge and both institutions have customers with the same account number, the ARF provides the Authorization process with the guidelines necessary to convert MICR information on the check to locate the correct account in the BASE24 database.

If the Authorization process must alter the MICR information, the altered data is logged to the BASE24-atm Transaction Log File (TLF) and, if applicable, routed to the host.

For a complete description of the ARF and its screen layouts, refer to the ***BASE24 Base Files Maintenance Manual***.

Formatting MICR Information

If the MICR information is configured to be logged to the BASE24-atm Transaction Log File (TLF), the MICR information can be formatted as follows:

- The routing and transit number is enclosed by two transit symbols (T).
- The account number associated with the routing and transit number is followed by an on-us symbol (*) and is preceded with an on-us symbol (*) or a transit symbol (T).
- The check serial number can be placed in one of three locations: at the beginning of the MICR information; between the routing and transit number, and the account number; or at the end of the MICR information.

It can be enclosed with two on-us symbols (*), preceded with a transit symbol (T) and followed by an on-us symbol (*), or it can be preceded only by an on-us symbol (*).

The check serial number must be at least four digits in length. The BASE24-atm Authorization process ignores check serial numbers that are less than four digits in length.

The following examples illustrate how the routing and transit number (B), account number (A), and check serial number (C) can be formatted within the MICR information:

CCCCC TBBBBBBBBBTAAAAAA*

CCCCC TBBBB-BBBBTAAAAAA*

TBBBBBBBBBTCCCC*AAAAAA*

TBBBB-BBBBTCCCC*AAAAAA*

TBBBBBBBBBTCCCC*AA-AAA-AA*

TBBBBBBBBBTAAAAAA*CCCCC

Using MICR Information

Additional data taken from the MICR information is printed on the following receipts: check deposit, check split deposit, check deposit with cash back, and the administrative receipt. These receipts are described later in this section.

Check-Cashing Cards

The check-cashing cards feature makes it possible for an institution to issue special-use check-cashing cards to individuals who have no account ties to the institution. The objective is to divert check-related cash disbursement transactions from the teller lines to the ATM.

With this feature, the authorizing institution must rely on the credibility of the check-issuing institution rather than the cardholder. A direct tie between the check-cashing card and the corporation issuing the check is required. Special-use check-cashing cards are assigned a unique prefix and card type within the BASE24-atm product.

The following is an example of how the check-cashing card can be used: Corporation ABC is physically located near Bank Y. Corporation ABC and Bank Y can establish a relationship in which Bank Y distributes check-cashing cards to the employees of Corporation ABC. The employees of Corporation ABC can then cash their payroll checks using check-cashing cards at Bank Y's terminals even if they do not have an account relationship at Bank Y.

Registered Check Processing

Registered check processing enables an individual cardholder to register checks that he or she receives at predictable intervals with the financial institution (for example, dividend checks or payroll checks). The institution establishes check-cashing limits for these registered checks on an individual cardholder basis, which can be higher than the usual withdrawal limits since the possibilities of fraud are lessened. These limits and usages can be configured in conjunction with the base aggregate and withdrawal limits used with the standard BASE24-atm product. The registered checks can then be cashed or deposited at a terminal at the cardholder's convenience.

This feature is applicable for the following transactions when the check is placed in the terminal without first being placed inside an envelope:

- Cash check
- Check deposit
- Check deposit with cash back
- Check split deposit

For example, a cardholder can receive a dividend check drawn on an out-of-state bank once a month. The cardholder can register this check with his or her own institution that has the Enhanced Check Processing Application by establishing a relationship between the out-of-state bank account and the cardholder's account at the institution.

To do this, the institution wanting to use the registered check processing feature sets up a Check Status File (CSF) record that contains the routing and transit number and account number of the bank on which the check is drawn, along with the primary account number (PAN) and the member number of the cardholder who is registering the check. In addition, the CSF contains a check limit amount, a check retention flag, and an option to accept the registered check for all types of check transactions or for deposit only.

When the registered check is presented at the terminal and a transaction request is sent to the Authorization process, the process reads the routing and transit number and account number from the MICR information in the MICR Data token as well as the PAN and member number from the customer's card and locates the CSF record established for the check. The transaction is approved or declined based on the parameters in the CSF record plus the card limits in the CPF or CAF for the card used to initiate the transaction.

Stop Payment Verification

Stop payment verification searches for stop payment items in the Stop Payment File (SPF) during transaction authorization. If a stop payment is located, the check transaction is declined and the check is retained. Stop payments can be defined for a single check number or for a range of check numbers.

The SPF is used to define a check or range of checks designated for stop payment. The SSB Enhanced Check Processing Application allows the BASE24-atm Authorization process to access the SPF to determine whether any stop payment records exist prior to authorizing check-related transactions. The Authorization process searches the SPF only when the card issuer and the check issuer are the same institution. The SPF contains one record for each institution- or customer-initiated stop payment item that indicates a check or range of checks that should not be honored at terminals. If a match is found in the SPF, the Authorization process declines the check transaction and instructs the acquirer to retain the check.

Preapproved and Predeclined Check Processing

Preapproved and predeclined check processing allows both proprietary and debit cardholders to initiate check-related transactions at a terminal when the authorizing institution has defined the check for approval (that is, preapproved) for all cardholders. Preapproved checks are issued by the same institution or entity (for example, Social Security checks or payroll checks).

The institution can establish check-cashing limits and usages at the prefix and cardholder level for preapproved checks. These limits and usages are configured in addition to or instead of the base limits and usages configured with the standard BASE24-atm product.

The authorizing institution can also define predeclined checks. Predeclined checks are those denoted as unacceptable for processing for all cardholders (for example, checks issued by an institution whose assets have been frozen).

For preapproved or predeclined checks, the Check Status File (CSF) is used to define the check-issuing institution and the account at that institution as well as to define the check status, the check disposition if the transaction is declined, and the maximum acceptable check amount.

The institution can also use the CSF to preapprove or predecline a specific category of checks for all cardholders. This is accomplished by using an entry of asterisks (*) in the REGISTERED PAN NUMBER field of the CSF record. A check must be preapproved or predeclined for all cardholders because the approval or denial for a category of checks is based on the specific routing and transit number and account number read from the MICR information on the check rather than on cardholder information.

For example, you can decide to preapprove all Social Security checks presented at terminals that are configured for the SSB Enhanced Check Processing Application. To do this, you can set up a CSF record for the routing and transit number and account number for Social Security checks. When a Social Security check is presented at the terminal and a transaction request is sent to the Authorization process, the process reads the routing and transit number and account number from the MICR information on the check, and locates the CSF record established for the check. The transaction is approved based on the parameters in the CSF record, assuming the card limits in the CPF or CAF for the card used to initiate the transaction would not be exceeded.

In contrast, an institution can decide to predecline a particular category of checks. For example, an institution can deny all ATM transactions involving checks issued from a specific corporation or institution whose assets have been frozen by the

Internal Revenue Service. To do this, you can set up a CSF record for the routing and transit number and account number used by the entity. When checks issued from this entity are presented at the terminal and a transaction request is sent to the Authorization process, the process reads the routing and transit number and account number from the MICR information on the check, locates the CSF record established for the check, and declines the check based on the parameters in the CSF record.

This feature is applicable for the following transactions when the check is placed in the terminal without first being placed inside an envelope:

- Cash check
- Check deposit
- Check deposit with cash back
- Check split deposit

Enhanced Document Bin Sorting

Document bin sorting, described in section 2, allows the terminal to sort incoming checks into different pockets or bins depending on the amount of the check. The enhanced document bin sorting feature adds the ability to specify this amount based on the institution that issued the check by using the Bin Sort File (BSF). Also, NCR 5665 terminals have one more pocket than the other NCR 56XX-series terminals, and the enhanced document bin sorting feature allows the third pocket to be used.

Check-Related Transaction Response

If the check transaction is approved, the Device Handler process must update the BASE24-atm Terminal Data files (ATD) bin count and amount totals and instruct the terminal to divert the check to the appropriate pocket.

The ATD bin count for the appropriate pocket is increased by one, and the ATD bin amount for the appropriate pocket is increased by the following amounts depending on the transaction type:

Transaction	Increase in ATD Bin Amount
Check deposit	The value in the RQST.AMT-1 field in the STM.
Check deposit with cash back	The value in the RQST.AMT-1 field in the STM.
Cash check	The value in the RQST.AMT-1 field in the STM.
Check split deposit	The sum of the values in the RQST.AMT-1 and RQST.AMT-2 fields in the STM.

If the check transaction is declined, the Device Handler process must instruct the terminal to retain or return the check. The BASE24-atm Authorization process provides the Device Handler process with this information in the Self-Service Banking Check token in the transaction response message. The Authorization process adds this information to the Self-Service Banking Check token from the CHECK RETAIN FLAG field in the Check Status File (CSF) during the transaction authorization process. The CSF is described later in this section. If a check has a record in the Stop Payment File (SPF), the check is always retained.

Device Handler Processing Overview

The following processing overview describes how the NCR Device Handler process uses the information in the ATD and the BSF when processing check-related transactions.

Prior to check authorization, the NCR Device Handler process must determine which pocket is to receive an approved check and assign a bin sequence number for the check. The BSF and ATD records are used to determine this information.

The Device Handler process uses the terminal bin group located in the ATD and the routing and transit number from the MICR information on the check to locate the BSF record in extended memory. When a BSF record is located, the Device Handler process compares the amount of the check to the CHECK AMOUNT field specified in the BSF. If the check amount in the transaction request is greater than or equal to the BSF CHECK AMOUNT, the check is diverted to the bin number defined in the ABOVE AMOUNT field in the BSF when the check is approved. If the check amount is less than the BSF currency amount, the check is diverted to the bin number defined in the UNDER AMOUNT field in the BSF.

Once the bin number has been determined, the Device Handler process calculates a bin sequence number for the check transaction by increasing the bin sequence number by one from the previous check-related transaction for that bin and combining that number with the bin position number. Each bin is assigned its own series of sequence numbers.

If the Device Handler process cannot locate a BSF record, the process uses the default depository bin as defined in the ATD to calculate the bin sequence number and divert the check.

At this point in the transaction, the Device Handler process is responsible for originating data for the Self-Service Banking Check token and the MICR Data token and placing them in the BASE24-atm Standard Internal Message (STM). The Device Handler process adds the MICR information to the MICR Data token and the depository bin and bin sequence number to the Self-Service Banking Check token. For complete information on BASE24 tokens, refer to the ***BASE24 Tokens Manual***. For complete information on the STM, refer to the ***BASE24-atm Transaction Processing Manual***.

SSB Enhanced Check Processing Application Configuration

The SSB Enhanced Check Processing Application requires an NCR 56XX- or 58XX-series terminal that is using the NCR 5XXX-series Device Handler process, using the NDC+ Release 5.0 or greater software, fitted with the Check Processing Module (CPM) and an image recognition board, and are optionally equipped with a Coin Dispenser Module (CDM). The SSB Enhanced Check Processing Application cannot be implemented without the SSB Device Handler Extension and the SSB Enhanced ATM Application.

Before you can configure the SSB Enhanced Check Processing Application, the application must be properly installed and the BASE24-atm network must be up and available for files maintenance.

The ISO-based BASE24 Host Interface process or the ISO-based BIC Interface process must be used to send the data for the SSB Enhanced Check Processing Application to a host or co-processor. The external messages used by the ANSI-based BASE24 Host Interface process and the ANSI-based BIC Interface process do not carry the data needed.

The following table lists the features of the SSB Enhanced Check Processing Application, and the BASE24 and NCR-specific screens and files needed to configure each feature. This table gives an overview of the modifications needed, and allows you to select those features from this module that you want to offer to your customers. The following pages describe these screens and files. Note that security access must be given to the operator modifying the BASE24 screens.

If a screen or file is described in another manual in the BASE24 manual set, only those fields that have specific SSB requirements are listed. If a screen is not described elsewhere, this section includes an illustration of the screen and descriptions of all fields on the screen.

Screen or File	Enhanced Check Authorization	Enhanced MICR Processing and Manipulation	Check-Cashing Card	Registered Check Processing	Stop Payment Verification	Preapproved and Predeclined Check Processing	Enhanced Document Bin Sorting
ARF screen 1	✓						
ATD screen 1	✓	✓	✓	✓	✓	✓	✓
ATD NCR 5XXX screen 7			✓				
ATD NCR 5XXX screen 12	✓	✓	✓	✓	✓	✓	✓
BSF screen 1							✓
CPF screen 1	✓		✓	✓			
CPF screen 2	✓		✓	✓			
CPF screen 4	✓		✓	✓			
CPF screen 14	✓		✓	✓			
CAF screen 1	✓		✓	✓			
CAF screen 2			✓				
CAF screen 3			✓				
CAF screen 4			✓				
CAF screen 5			✓				
CAF screen 8			✓				
CAF screen 15	✓		✓				
CAF screen 16	✓		✓				
CSF screen 1				✓		✓	
CCF screen 1			✓				

Screen or File	Enhanced Check Authorization	Enhanced MICR Processing and Manipulation	Check-Cashing Card	Registered Check Processing	Stop Payment Verification	Preapproved and Predeclined Check Processing	Enhanced Document Bin Sorting
IDF screen 1					✓		
IDF screens 5 and 6	✓	✓	✓	✓	✓	✓	
IDF screen 37	✓		✓	✓	✓		
LCONF	✓	✓	✓		✓	✓	✓
NEG screen 1			✓				
NEG screen 4			✓				
RCPT		✓					✓
SPF screen 1					✓		
TRF	✓						
TKN	✓	✓	✓	✓	✓	✓	✓
UAF screen 1	✓						
UAF screen 4	✓						
UAF screen 10	✓						

Modifying the Account Routing File

The Account Routing File (ARF) provides routing information to locate accounts in the Positive Balance File (PBF) and Stop Payment File (SPF). The Authorization process searches the ARF when there is a check-related transaction involved and the ARF has been configured. The ARF can be used by the BASE24-atm Authorization process to modify the routing and transit number or account number from the check so that it matches the account number carried in the BASE24 database. For example, the ARF is used to convert a check's Magnetic Ink Character Recognition (MICR) data in those cases where two

financial institutions have merged and, as a result, both institutions have customers with the same account number. Account number format changes allow the Authorization process to manipulate the check MICR information to subsequently access the SPF, CCF, or CSF.

The ARF is also required if any FIIDs use the enhanced MICR processing and manipulation feature of the SSB Enhanced Check Processing Application. No BASE24 database setting identifies whether an institution is using this feature.

ARF screen 2 contains detail information for one ARF record and ARF screen 3 contains summary information for up to ten ARF records. Screens 2 and 3 have three formats based on the ARF record type. Enter 03 (Institution ID Routing) in the RECORD TYPE field on screen 1 to access the information used by the SSB Enhanced Check Processing Application. The Institution ID routing screens contain information to identify all bank routing codes appearing on checks that can be cashed at ATMs. For each bank routing code that can appear on checks cashed at ATMs, the institution ID routing screens contain the transit and routing number, FIID, and the account number modifications necessary to locate the correct account in the BASE24 database. The key to records displayed on these screens is a combination of the values in the RECORD TYPE, ACCOUNT TYPE, ACCOUNT LENGTH, and INST ID NUM (CHECK) fields.

When a partial key (that is, one or more of the optional key fields is omitted) is entered from ARF screen 2 and the **F2** key is pressed, all ARF records matching the partial key are displayed on ARF screen 3. From ARF screen 3, you can move the cursor to the desired record and press the **F7** key. This procedure retrieves ARF screen 2 and displays the desired record in detail.

The fields described below have specific SSB requirements. For a complete description of the ARF and its screen layouts, refer to the ***BASE24 Base Files Maintenance Manual***.

ARF Screen 1

ARF screen 1 allows you to identify which of the three available ARF record formats is to be accessed. ARF screen 2 is automatically displayed when the record format is selected and the **F1** key is pressed.

RECORD TYPE — A code that indicates the type of routing information defined in the record. The only valid value for the SSB Enhanced Check Processing Application is 03.

SSB Feature: Enhanced MICR processing and manipulation

ARF Screen 2—Institution ID Routing Detail

ARF screen 2 contains detail information for one ARF record. ARF screen 2 has three possible formats, depending on the type of record selected on ARF screen 1. When the value in the RECORD TYPE field is 03, ARF screen 2 contains routing information for an institution ID number.

RECORD TYPE — A code that indicates the type of routing information defined in the record. Code 03 identifies the institution ID routing information used by the SSB Enhanced Check Processing Application.

Field Length: System protected

ACCOUNT TYPE — The type of account for which the routing information applies. The account type is not carried in the MICR data that is captured when a check is cashed at an ATM with the SSB Enhanced Check Processing Application. Therefore, the account type for all of these transactions is assumed to be 01 (Checking/DDA).

SSB Feature: Enhanced MICR processing and manipulation

ACCOUNT LENGTH — The length of the account number for which the routing information applies.

SSB Feature: Enhanced MICR processing and manipulation

INST ID NUM (CHECK) — The transit and routing number or issuer identification number contained in the MICR information encoded on the check to be cashed at an ATM.

This field contains the institution identification information on the check and the INST ID NUM (BASE24) field contains the institution identification used in the BASE24 database. The SSB Enhanced Check Processing Application uses the values in these fields to match a check with the proper institution record in the BASE24 database when the two values do not agree.

SSB Feature: Enhanced MICR processing and manipulation

INST ID NUM (BASE24) — The transit and routing number or issuer identification number of the institution that currently owns the account.

This field contains the institution identification information used in the BASE24 database and the INST ID NUM (CHECK) field contains the institution identification appearing on the check. The SSB Enhanced Check Processing Application uses the values in these fields to match a check with the proper institution record in the BASE24 database when the two identification values do not agree.

SSB Feature: Enhanced MICR processing and manipulation

ACCOUNT NUMBER INSERT POSN — The position within the original account number shown on checks where characters can be inserted to create the account number carried in the BASE24 database.

SSB Feature: Enhanced MICR processing and manipulation

ACCOUNT NUMBER INSERT VALUE — The numeric characters to be inserted in the original account number to create the account number carried in the BASE24 database.

SSB Feature: Enhanced MICR processing and manipulation

Modifying the BASE24-atm Terminal Data Files (ATD)

The ATD must be configured for the terminals that support the SSB Enhanced Check Processing Application functionality. Changes to the ATD are necessary to accomplish the following:

- Specify the terminal bin group for the terminal. The terminal bin group allows terminals that use the same check sorting method to be grouped together. The terminal bin group is also defined in the Bin Sort File (BSF).

- Specify the default depository bin for the terminal. Checks are diverted to the default depository bin if a record cannot be found in the Bin Sort File (BSF).

The ATD also contains totals fields for the number and amount of checks in each depository bin. The fields described below have specific SSB requirements. The ATD is described in the ***BASE24-atm Files Maintenance Manual***.

ATD Screen 1

ATD screen 1 enables you to identify whether a terminal supports multiple account selection. This screen is required for split deposits between like accounts.

DEVICE TYPE — Indicates the model and manufacturer of the terminal. You must enter 22 for NCR 5XXX terminals.

SSB Feature: All features

ATD NCR 5XXX Screen 7

ATD NCR 5XXX screen 7 is a device-specific screen. Screen display for each device is dependent on the setting in the DEVICE TYPE field on ATD screen 1, which must be 22 for NCR 5XXX terminals. ATD NCR 5XXX screen 7 indicates the terminal load group to which this terminal belongs.

TERMINAL GROUP — Indicates the terminal load group to which this terminal belongs. This code indicates the SSB states and screens that are to be loaded to this terminal when a download command is sent from the Device Control Terminal (DCT). Terminal group 113 (check cashing card group) is specific to the SSB Enhanced Check Processing Application, and is designed to be merged with one of the following terminal groups: 106, 107, 108, 109, 110, or 111. Refer to section 5 for a complete list of terminal groups used by the SSB product.

SSB Feature: Check-cashing cards

ATD NCR 5XXX Screen 12

ATD NCR 5XXX screen 12 is a device-specific screen that allows you to configure check sorting and bin groups and displays the number and amount of checks delivered to each of the depository bins. These fields are highlighted. The screen

display for each device is dependent on the setting in the DEVICE TYPE field on ATD screen 1, which must be 22 for NCR 5XXX terminals. ATD NCR 5XXX screen 12 is shown below, followed by field descriptions.

BASE24-ATM		TERMINAL DATA		LLLL	YY/MM/DD	HH:MM	12 OF 21
TERM ID:	FIID:	REGION:	BRANCH:	LN:	LLLL		
NCR 5XXX SELF SERVICE BANKING CHECK							
CHECK SUPPORT:	TERMINAL BIN GROUP:	DEFAULT DEPOSITORY BIN:					
DEPOSITORY BIN #	COUNT	AMOUNT					
0	0	.00					
1	0	.00					
2	0	.00					
3	0	.00					
NCR 56XX CPM IMAGE CONTROL							
APPRVD TXN:	FULL BITMAP:	LIFT IMAGE LIST:	CHECK THRESHOLD:				
DH DENIED TXN:	FULL BITMAP:	LIFT IMAGE LIST:					
AUTH DENIED TXN:	FULL BITMAP:	LIFT IMAGE LIST:					
COURTESY AMT VERIFICATION RETRIES:							
ACCEPT CHECKS WHEN IMAGE ARCHIVAL FULL:							
***** BASE24 *****							
NEW PAGE:	FILE DESTINATION:	NEW LOGICAL NETWORK ID:					
	F12-HELP						

TERM ID — An identifier (terminal ID) for the terminal associated with this record. This field is entered on ATD screen 1.

FIID — The FIID of the financial institution that owns the terminal. This field is entered on ATD screen 1.

REGION — The region ID for the region in which this terminal is located. This field is entered on ATD screen 1.

BRANCH — The branch ID for the branch in which this terminal is located. This field is entered on ATD screen 1.

LN — The name of the logical network to which the terminal owner belongs. This field is entered on ATD screen 1.

NCR 5XXX SELF SERVICE BANKING CHECK

The following six fields are used to define the SSB Enhanced Check Processing Application.

CHECK SUPPORT — A code specifying whether this terminal supports SSB Enhanced Check Processing Application functionality. Valid values are as follows:

Y = Yes, this terminal supports the SSB Enhanced Check Processing Application.

N = No, this terminal does not support the SSB Enhanced Check Processing Application.

Field Length: 1 alphabetic character
Required Field: No
Default Value: N
Data Name: ATDD1.ATDD1-CORE.SSBC.CHK-SUPPORT
SSB Feature: All features

TERMINAL BIN GROUP — The group of terminals with like depository bin sorting methods to which this terminal belongs.

This value provides the link between the ATD and the Bin Sort File (BSF). The BSF defines the check sorting method to be used for this terminal for the institution that issued the check. Valid values are 0 through 9999.

Field Length: 1–4 numeric characters
Required Field: No
Default Value: 0
Data Name: ATDS1.ATDS1-CORE.SSBC.BIN-GRP
SSB Feature: Enhanced document bin sorting

DEFAULT DEPOSITORY BIN — The default pocket or bin used to retain a check if the Device Handler process could not locate a BSF record for a particular check-related transaction. Valid values are 0 through 3. Note that bin 3 can be used only by NCR 5665 ATMs.

Field Length: 1 numeric character
Required Field: No

Default Value: 0
Data Name: ATDS1.ATDS1-CORE.SSBC.DFLT-BIN
SSB Feature: Enhanced document bin sorting

DEPOSITORY BIN NUMBER — The number of the bin to which values in the COUNT and AMOUNT fields apply.

Field Length: System protected
Data Name: Not applicable
SSB Feature: Enhanced document bin sorting

COUNT — The number of checks currently retained in the depository bin identified in the DEPOSITORY BIN NUMBER field.

Field Length: System protected
Data Name: ATDD1.ATDD1-CORE.SSBC.DEP-BIN x .SSBC-NUM-CHK where x is the bin number
SSB Feature: Enhanced document bin sorting

AMOUNT — The total amount of checks currently retained in the depository bin identified in the DEPOSITORY BIN NUMBER field.

Field Length: System protected
Data Name: ATDD1.ATDD1-CORE.SSBC.DEP-BIN x .SSBC-AMT-CHK where x is the bin number
SSB Feature: Enhanced document bin sorting

Note: The other fields on this screen are used for configuring the SSB Device Handler Extension. Refer to the topic “Modifying the BASE24-atm Terminal Data Files” provided in section 2 for a description of these fields.

Modifying the Bin Sort File

The Bin Sort File (BSF) is used to define the terminal check sorting method based on the check issuer and the amount of the check. Configuring the BSF is necessary to accomplish the following:

- Specify the terminal bin group for the terminal. The terminal bin group allows terminals that use the same check sorting method to be grouped together. The terminal bin group is also defined in the ATD.

- Define the routing and transit number or the identification number of the check-issuing institution. The check sorting method is defined for a specific check-issuing institution. For example, checks issued from Bank A can be diverted to bins 1 and 2 (pockets A and B) while checks issued from Bank B can be diverted to bins 1 and 3 (pockets A and C). The NCR Device Handler process uses the MICR information from the check to locate the routing and transit number in the BSF.
- Specify the transaction amount used to determine the specific depository bin for each check.

BSF screen 1 is shown below, followed by field descriptions.

```

BASE24-SSBC  BIN SORT FILE          LLLL          YY/MM/DD  HH:MM  01 OF 01
TERM BIN GROUP: 0000
INSTITUTION ID NUMBER: 000000000000

          BIN INFORMATION

CHECK AMOUNT:                          0

          CHECK DEPOSITORY BIN

UNDER AMOUNT:      0
ABOVE AMOUNT:      0

***** BASE24 *****
NEW PAGE:          FILE DESTINATION:    NEW LOGICAL NETWORK ID:
                   F12-HELP

```

TERM BIN GROUP — An identifier used to link the BSF with the ATD or group of ATD records. The terminal bin group is a portion of the key and is derived from the ATD bin group. This field should have a corresponding value in the TERMINAL BIN GROUP field on ATD NCR 5XXX screen 12. Refer to section 2 for a description of ATD NCR 5XXX screen 12.

Field Length:	4 numeric characters
Required Field:	Yes
Default Value:	0000
Data Name:	BSF.BIN-GRP
SSB Feature:	Enhanced document bin sorting

INSTITUTION ID NUMBER — The routing and transit number of the check-issuing institution or the identification number of the check issuer as imprinted on the check. The check sorting method defined in this BSF record is used for the check-issuing institution defined in this field. The Device Handler process compares the routing and transit number from the MICR information on the check to this number to locate the appropriate BSF record. This comparison is made before any manipulation of the MICR information takes place. The identification number is a portion of the key to the BSF.

Field Length:	11 numeric characters
Required Field:	Yes
Default Value:	00000000000
Data Name:	BSF.INST-ID-NUM
SSB Feature:	Enhanced document bin sorting

BIN INFORMATION

The following field defines the threshold value that the UNDER AMOUNT and ABOVE AMOUNT fields use to determine the pocket in which to place checks, for checks issued by the institution specified in this BSF record.

CHECK AMOUNT — The amount, expressed as a whole currency value, that is compared to the check transaction amount, as entered by the cardholder, to determine to which depository bin the check is directed.

Field Length:	1–15 numeric characters
Required Field:	Yes
Default Value:	0
Data Name:	BSF.AMT
SSB Feature:	Enhanced document bin sorting

CHECK DEPOSITORY BIN

The following fields specify the depository bin in which a check is placed based on the amount of the transaction.

UNDER AMOUNT — The depository bin for the check when the transaction is approved or the check is retained, and the transaction amount is less than the value in the CHECK AMOUNT field. Valid values are 0 through 3.

Field Length: 1 numeric character
Required Field: Yes
Default Value: 0
Data Name: BSF.UNDR-BIN-NUM
SSB Feature: Enhanced document bin sorting

ABOVE AMOUNT — The depository bin for the check when the transaction is approved or the check is retained, and the transaction amount is greater than or equal to the value in the CHECK AMOUNT field. Valid values are 0 through 3.

Field Length: 1 numeric character
Required Field: Yes
Default Value: 0
Data Name: BSF.OVR-BIN-NUM
SSB Feature: Enhanced document bin sorting

Modifying the Card Prefix File

The CPF defines each card prefix that can be processed within a BASE24 logical network. CPF records define the characteristics of each prefix and also contain prefix-specific parameters that allow institutions to define portions of their authorization processing that can be controlled at the prefix level.

The CPF supports an additional CPF segment required for the SSB Enhanced Check Processing Application. The CPF is used to establish check-related cash disbursement transaction limits for all cards. Check-cashing cards have their own unique prefix; therefore, a CPF record must be added to specify the card prefix, security information, and activity limits for the check-cashing card.

If you have implemented the SSB Enhanced Check Processing Application you can establish check-related cash disbursement transaction limits at the prefix level using CPF screen 14. These limits are in addition to the standard BASE24-atm withdrawal limits and are used in place of the BASE24-atm withdrawal limits for cash check and check deposit with cash back transactions.

Existing BASE24 cards can be used for cashing registered checks and preapproved checks. However, you should review the CPF or CAF records that control the activity limits for the cards used to cash registered or preapproved checks. A transaction involving a check that passes the tests established in the CSF will still be declined if it exceeds the activity limits in the CPF or CAF record for the customer's card.

The fields described below have specific SSB requirements. Refer to the ***BASE24 Base Files Maintenance Manual*** for screen samples and field descriptions for these screens.

CPF Screen 1

You must configure CPF screen 1 for each card prefix used for check-cashing cards. All fields on CPF screen 1 should be completed according to your institution's standard procedure for establishing a new card prefix.

CARD TYPE — A code identifying the type of card associated with the prefix. The code for check-cashing cards is SP (special purpose).

SSB Feature: Check-cashing cards

ACTIVITY LIMITS

The values in the following fields limit the transaction activity allowed by the BASE24-atm and BASE24-pos products combined for this card prefix during a single usage accumulation period. The transactions controlled by these limits are cash disbursements against credit and noncredit accounts and purchases made against noncredit accounts. Credit card purchases are not governed by these limits.

TOTAL CASH WDL — The maximum amount of purchases and cash withdrawals allowed against noncredit accounts. Take into consideration the special use of the check-cashing card in setting this value.

SSB Feature: Check-cashing cards

OFFLINE CASH WDL — The maximum amount of purchases and cash withdrawals allowed offline against noncredit accounts. Take into consideration the special use of the check-cashing card in setting this value.

SSB Feature: Check-cashing cards

TOTAL CASH ADV — The maximum amount of cash advances allowed against credit accounts. Take into consideration the special use of the check-cashing card in setting this value.

SSB Feature: Check-cashing cards

OFFLINE CASH ADV — The maximum amount of cash advances allowed offline against credit accounts. Take into consideration the special use of the check-cashing card in setting this value.

SSB Feature: Check-cashing cards

TOTAL AGGR — The maximum aggregate amount of cash disbursements allowed against credit and noncredit accounts and purchases allowed against noncredit accounts. Take into consideration the special use of the check-cashing card in setting this value.

SSB Feature: Check-cashing cards

OFFLINE AGGR — The maximum aggregate amount of cash disbursements allowed offline against credit and noncredit accounts and purchases allowed offline against noncredit accounts. Take into consideration the special use of the check-cashing card in setting this value.

SSB Feature: Check-cashing cards

CPF Screen 2

You must configure CPF screen 2 for each card prefix used for check-cashing cards. All fields on CPF screen 2 should be completed according to your institution's standard procedure for establishing a new card prefix.

CPF Screen 4

CPF screen 4 contains BASE24-atm authorization information, including activity limits for the BASE24-atm product during one usage accumulation period, and deposit credit information. You must configure CPF screen 4 for each card prefix used for check-cashing cards. All fields on CPF screen 4 should be completed according to your institution's standard procedure for establishing a new card prefix.

ACTIVITY LIMITS

The values in the following fields limit the transaction activity allowed by the BASE24-atm product for this card prefix during a single usage accumulation period. The transactions controlled by these limits are cash disbursements against credit and noncredit accounts.

TOTAL CASH WDL — The maximum amount of cash withdrawals allowed against noncredit accounts using the BASE24-atm product. Take into consideration the special use of the check-cashing card in setting this value.

SSB Feature: Check-cashing cards

OFFLINE CASH WDL — The maximum amount of cash withdrawals allowed offline against noncredit accounts using the BASE24-atm product. Take into consideration the special use of the check-cashing card in setting this value.

SSB Feature: Check-cashing cards

TOTAL CASH ADV — The maximum amount of cash advances allowed against credit accounts using the BASE24-atm product. Take into consideration the special use of the check-cashing card in setting this value.

SSB Feature: Check-cashing cards

OFFLINE CASH ADV — The maximum amount of cash advances allowed offline against credit accounts using the BASE24-atm product. Take into consideration the special use of the check-cashing card in setting this value.

SSB Feature: Check-cashing cards

TOTAL AGGR — The amount entered in the TOTAL AGGR field on CPF screen 1. The value in this field is intended for informational purposes only.

Field Length: System protected

OFFLINE AGGR — The amount entered in the OFFLINE AGGR field on CPF screen 1. The value in this field is intended for informational purposes only.

Field Length: System protected

CPF Screen 14

CPF screen 14 contains fields setting the check-related transaction limits. This screen is specific to the SSB Enhanced Check Processing Application. CPF screen 14 is shown below, followed by its field descriptions.

BASE24-SSBC
PREFIX:

CARD PREFIX

LLLL
PAN LENGTH:

YY/MM/DD
FIID:

HH:MM
14 OF 22

ATM SELF SERVICE BANKING CHECK
MINIMUM DISPENSE AMOUNT:

CHECK/CSF CHECK USAGE CONTROL
ACTIVITY LIMITS: TOTAL OFFLINE
CHECK:
CSF CHECK:
AGGR:

PROCESS CHECK TRANSACTIONS USING BASE LIMITS/USAGES:
PROCESS CSF CHECK TRANSACTIONS USING BASE LIMITS/USAGES:
CSF CHECKS ALLOWED PER PERIOD:

CHECK CSF CHECK
DEPOSIT CREDIT PERCENT:
MAXIMUM CREDIT PER CHECK DEPOSIT:

***** BASE24 *****
NEW PAGE: FILE DESTINATION: NEW LOGICAL NETWORK ID:
F12-HELP

ATM SELF SERVICE BANKING CHECK

The following fields are specific to the SSB Enhanced Check Processing Application.

MINIMUM DISPENSE AMOUNT — The minimum cash dispense amount allowed, expressed as a whole currency value. This value is applicable only for withdrawal, cash check, and check deposit with cash back transactions.

Field Length:	1–15 alphanumeric characters
Required Field:	No
Default Value:	No default value
Data Name:	CPF.SSBC.MIN-AMT
SSB Feature:	Enhanced check authorization

CHECK/CSF CHECK USAGE CONTROL

The values in the following fields are activity limits defined for check-related cash disbursement transactions. The activity limits are discussed in the topic “Enhanced Check Authorization” provided previously in this section.

ACTIVITY LIMITS

The values in the following fields limit the transaction activity allowed by the BASE24-atm product during a single usage accumulation period for check-related cash disbursement transactions.

TOTAL CHECK — The total cash disbursement allowed for check-related cash disbursement transactions when a matching Check Status File (CSF) record could not be located.

If the PROCESS CHECK TRANSACTIONS USING BASE LIMITS/USAGES field contains an N, the value in this field should be greater than zero because the values in the TOTAL AGGR and TOTAL CASH WDL fields on CPF screen 1 are not used when testing check-related cash disbursement transactions.

If the PROCESS CHECK TRANSACTIONS USING BASE LIMITS/USAGES field contains a Y, the value in this field must be less than or equal to the value in the TOTAL AGGR field on CPF screen 1.

If the PROCESS CHECK TRANSACTIONS USING BASE LIMITS/USAGES field contains a Y and this field contains a zero, the values in the TOTAL AGGR and TOTAL CASH WDL fields on CPF screen 1 are used when testing check-related cash disbursement transactions.

Field Length:	1–15 alphanumeric characters
Required Field:	Yes
Default Value:	0
Data Name:	CPF.SSBC.GRP-LMT.TTL-CHK-LMT
SSB Feature:	Check-cashing cards (or checks without matching records in the CSF)

OFFLINE CHECK — The total cash disbursement allowed offline for check-related cash disbursement transactions when a matching CSF record could not be located. The value in this field is used only with authorization level 3 (online/offline) when the authorizing host is unavailable and the BASE24-atm Authorization process performs stand-in authorization.

If the PROCESS CHECK TRANSACTIONS USING BASE LIMITS/USAGES field contains an N, the value in this field should be greater than zero because the values in the OFFLINE AGGR and OFFLINE CASH WDL fields on CPF screen 1 are not used when testing check-related cash disbursement transactions.

If the PROCESS CHECK TRANSACTIONS USING BASE LIMITS/USAGES field contains a Y, the value in this field must be less than or equal to the value in the OFFLINE AGGR field on CPF screen 1.

If the PROCESS CHECK TRANSACTIONS USING BASE LIMITS/USAGES field contains a Y and this field contains a zero, the values in the OFFLINE AGGR and OFFLINE CASH WDL fields on CPF screen 1 are used when testing check-related cash disbursement transactions.

Field Length:	1–15 alphanumeric characters
Required Field:	Yes
Default Value:	0
Data Name:	CPF.SSBC.GRP-LMT.OFFL-CHK-LMT
SSB Feature:	Check-cashing cards (or checks without matching records in the CSF)

TOTAL CSF CHECK — The total cash disbursement allowed for check-related cash disbursement transactions that have matching Check Status File (CSF) records.

If the PROCESS CSF CHECK TRANSACTIONS USING BASE LIMITS/USAGES field contains an N, the value in this field should be greater than zero because the values in the TOTAL AGGR and TOTAL CASH WDL fields on CPF screen 1 are not used when testing CSF check-related cash disbursement transactions.

If the PROCESS CSF CHECK TRANSACTIONS USING BASE LIMITS/USAGES field contains a Y, the value in this field must be less than or equal to the value in the TOTAL AGGR field on CPF screen 1.

If the PROCESS CSF CHECK TRANSACTIONS USING BASE LIMITS/USAGES field contains a Y and this field contains a zero, the values in the TOTAL AGGR and TOTAL CASH WDL fields on CPF screen 1 are used when testing CSF check-related cash disbursement transactions.

Field Length:	1–15 alphanumeric characters
Required Field:	Yes

Default Value: 0
Data Name: CPF.SSBC.GRP-LMT.TTL-CSF-CHK-LMT
SSB Feature: Enhanced check authorization

OFFLINE CSF CHECK — The total cash disbursement allowed offline for check-related cash disbursement transactions that have matching Check Status File (CSF) records. The value in this field is used only with authorization level 3 (online/offline) when the authorizing host is unavailable and the BASE24-atm Authorization process performs stand-in authorization.

If the PROCESS CSF CHECK TRANSACTIONS USING BASE LIMITS/USAGES field contains an N, the value in this field should be greater than zero because the values in the OFFLINE AGGR and OFFLINE CASH WDL fields on CPF screen 1 are not used when testing CSF check-related cash disbursement transactions.

If the PROCESS CSF CHECK TRANSACTIONS USING BASE LIMITS/USAGES field contains a Y, the value in this field must be less than or equal to the value in the OFFLINE AGGR field on CPF screen 1.

If the PROCESS CSF CHECK TRANSACTIONS USING BASE LIMITS/USAGES field contains a Y and this field contains a zero, the values in the OFFLINE AGGR and OFFLINE CASH WDL fields on CPF screen 1 are used when testing CSF check-related cash disbursement transactions.

Field Length: 1–15 alphanumeric characters
Required Field: Yes
Default Value: 0
Data Name: CPF.SSBC.GRP-LMT.OFFL-CSF-CHK-LMT
SSB Feature: Enhanced check authorization

TOTAL AGGR — The amount entered in the TOTAL AGGR field on CPF screen 1. The value in this field is intended for informational purposes only.

Field Length: System protected
Data Name: CPF.BASE.GRP-LMT.AGGR-LMT

OFFLINE AGGR — The amount entered in the OFFLINE AGGR field on CPF screen 1. The value in this field is intended for informational purposes only.

Field Length: System protected
Data Name: CPF.BASE.GRP-LMT-OFFL-AGGR-LMT

PROCESS CHECK TRANSACTIONS USING BASE LIMITS/

USAGES — A code that indicates whether the amount of a check-related cash disbursement transaction that does not have a matching Check Status File (CSF) record should be included in the usage amounts that are tested against the limits set in the TOTAL AGGR, OFFLINE AGGR, TOTAL CASH WDL, and OFFLINE CASH WDL fields on CPF screen 1. Valid values are as follows:

Y = Yes, test check-related cash disbursement transactions against the limits set in the specified fields on CPF screen 1. If the transaction is approved, add the transaction amount to the usage amounts in the TOTAL CASH WDL and OFFLINE CASH WDL fields on UAF screen 1.

N = No, do not test check-related cash disbursement transactions against the limits set in the specified fields on CPF screen 1. Do not add approved transaction amounts to the usage amounts in the TOTAL CASH WDL and OFFLINE CASH WDL fields on UAF screen 1.

Field Length: 1 alphabetic character
Required Field: Yes
Default Value: N
Data Name: CPF.SSBC.CHK-BASE-FLG
SSB Feature: Check-cashing cards

PROCESS CSF CHECK TRANSACTIONS USING BASE LIMITS/

USAGES — A code that indicates whether the amount of a check-related cash disbursement transaction with a matching Check Status File (CSF) record should be included in the usage amounts that are tested against the limits set in the TOTAL AGGR, OFFLINE AGGR, TOTAL CASH WDL, and OFFLINE CASH WDL fields on CPF screen 1. Valid values are as follows:

Y = Yes, test CSF check-related cash disbursement transactions against the limits set in the specified fields on CPF screen 1. If the transaction is approved, add the transaction amount to the usage amounts in the TOTAL CASH WDL and OFFLINE CASH WDL fields on UAF screen 1.

N = No, do not test CSF check-related cash disbursement transactions against the limits set in the specified fields on CPF screen 1. Do not add approved transaction amounts to the usage amounts in the TOTAL CASH WDL and OFFLINE CASH WDL fields on UAF screen 1.

Field Length: 1 alphabetic character
Required Field: Yes
Default Value: N
Data Name: CPF.SSBC.CSF-CHK-BASE-FLG
SSB Feature: Enhanced check authorization

CSF CHECKS ALLOWED PER PERIOD — The maximum number of times a card with this prefix can be used for check-related cash disbursement transactions that have a matching Check Status File (CSF) record. Valid values are 0 through 9999.

Field Length: 1–4 numeric characters
Required Field: Yes
Default Value: 1
Data Name: CPF.SSBC.CSF-CHK-USE-LMT
SSB Feature: Enhanced check authorization

DEPOSIT CREDIT PERCENT - CHECK — The percentage of each non-registered check deposit added to the cardholder's available funds, subject to the settings in the MAXIMUM CREDIT PER CHECK DEPOSIT - CHECK field on this screen, and the MAXIMUM NUMBER OF DEPOSIT CREDITS and MAXIMUM DEPOSIT CREDIT AMOUNT fields on CPF screen 4. The value in this field is used only with the Positive Balance Authorization method. Valid values are 0 through 100.

Field Length: 1–3 numeric characters
Required Field: No
Default Value: 0
Data Name: CPF.SSBCCPF.CHK-DEP-CR-PERCENT
SSB Feature: Enhanced check authorization

DEPOSIT CREDIT PERCENT - CSF CHECK — The percentage of each registered check deposit added to the cardholder's available funds, subject to the settings in the MAXIMUM CREDIT PER CHECK DEPOSIT - CSF CHECK field on this screen, and the MAXIMUM NUMBER OF DEPOSIT CREDITS and

MAXIMUM DEPOSIT CREDIT AMOUNT fields on CPF screen 4. The value in this field is used only with the Positive Balance Authorization method. Valid values are 0 through 100.

Field Length: 1–3 numeric characters
Required Field: No
Default Value: 0
Data Name: CPF.SSBCCPF.CSF-CHK-DEP-CR-PERCENT
SSB Feature: Enhanced check authorization

MAXIMUM CREDIT PER CHECK DEPOSIT - CHECK — The maximum amount (in whole currency units) each non-registered check deposit transaction can increase the cardholder's available funds balance. Valid values are 0 through 999999999.

Field Length: 1–9 numeric characters
Required Field: Yes. The value in this field must be greater than zero if the DEPOSIT CREDIT PERCENT - CHECK field contains a nonzero value.
Default Value: 0
Data Name: CPF.SSBCCPF.CR-PER-CHK-DEP-LMT
SSB Feature: Enhanced check authorization

MAXIMUM CREDIT PER CHECK DEPOSIT - CSF CHECK — The maximum amount (in whole currency units) each registered check deposit transaction can increase the cardholder's available funds balance. Valid values are 0 through 999999999.

Field Length: 1–9 numeric characters
Required Field: Yes. The value in this field must be greater than zero if the DEPOSIT CREDIT PERCENT - CSF CHECK field contains a nonzero value.
Default Value: 0
Data Name: CPF.SSBCCPF.CR-PER-CSF-CHK-LMT
SSB Feature: Enhanced check authorization

Modifying the Cardholder Authorization File

The Cardholder Authorization File (CAF) contains authorization parameters and usage accumulation information for the card issuer's cardholders and are used in authorizing transaction requests. The CAF supports an additional segment required for the SSB Enhanced Check Processing Application. The CAF is used to define the card type for the special-use check-cashing card and to define the corporation number that links a check-issuing corporation to the ATM card used to cash the corporation's checks. This file also includes usage limits and accumulation totals for check-related cash disbursement transactions. The CAF is used with the Positive Authorization method and the Positive Balance Authorization method.

If you have implemented the SSB Enhanced Check Processing Application you can establish check-related cash disbursement transaction limits at the cardholder level using CAF screens 15 and 16. These limits are in addition to the standard BASE24-atm withdrawal limits and are used in place of the BASE24-atm withdrawal limits for cash check and check deposit with cash back transactions. CAF screen 16 contains limits and totals for transactions involving checks with matching Check Status File (CSF) records. CAF screen 15 contains limits and totals for all other check-related cash disbursement transactions. CAF screen 15 also contains the corporation number used with check-cashing cards (card type SP).

Existing BASE24 cards can be used for cashing registered checks and preapproved checks. However, depending on the authorization method used by the institution, the CAF activity limits on screens 1 and 16 may need to be adjusted to permit checks for larger amounts to be cashed.

You should review the CPF or CAF records that control the activity limits for the cards used to cash registered or preapproved checks. A transaction involving a check that passes the tests established in the CSF will still be declined if it exceeds the activity limits in the CPF or CAF record for the customer's card.

If you are setting up a record for a check-cashing card, the value in the CARD TYPE field on CAF screen 1 must be set to SP (special purpose), and the card's specialized use should be considered when establishing the values for the ACTIVITY LIMITS fields on CAF screens 1 and 16.

The fields described below have specific SSB requirements. Refer to the ***BASE24 Base Files Maintenance Manual*** for screen samples and field descriptions for the CAF. Screen samples of CAF screens 15 and 16 are shown in this section, because they are SSB-specific.

CAF Screen 1

CAF screen 1 contains general information about the card. If you are establishing a new check-cashing card, configure CAF screen 1 according to your institution's standard procedure for establishing a new card, including the option of using CPF limits instead of CAF limits by setting the value in the TOTAL AGGR field on CAF screen 1 to 0. Otherwise, enter the primary account number (PAN), member number, and FIID to read an existing record.

CARD TYPE — A code identifying the type of card associated with the primary account number (PAN). Enter the value SP in the CARD TYPE field to indicate that the card is a check-cashing card.

SSB Feature: Check-cashing cards

ACTIVITY LIMITS

The values in the following fields limit the transaction activity allowed by the BASE24 product for this cardholder during a single usage accumulation period. When the value in the TOTAL AGGR field is set to something other than zero, these limits override the corresponding group of limits on CPF screen 1. The transactions controlled by these limits are cash disbursements made against credit and noncredit accounts and purchases made against noncredit accounts. Credit purchases are not governed by these limits.

TOTAL CASH WDL — The maximum amount of purchases and cash withdrawals allowed against noncredit accounts. Take into consideration the special use of the check-cashing card in setting this value.

SSB Feature: Check-cashing cards

OFFLINE CASH WDL — The maximum amount of purchases and cash withdrawals allowed offline against noncredit accounts. Take into consideration the special use of the check-cashing card in setting this value.

SSB Feature: Check-cashing cards

TOTAL CASH ADV — The total amount of cash advanced against credit accounts. The value in this field is for informational purposes only.

Field Length: System protected

OFFLINE CASH ADV — The total amount of cash advanced offline against credit accounts. The value in this field is for informational purposes only.

Field Length: System protected

TOTAL AGGR — The maximum aggregate amount of cash disbursements allowed against credit and noncredit accounts, plus purchases allowed against noncredit accounts. Take into consideration the special use of the check-cashing card in setting this value.

SSB Feature: Check-cashing cards

OFFLINE AGGR — The maximum aggregate amount of cash disbursements allowed offline against credit and noncredit accounts and purchases allowed offline against noncredit accounts. Take into consideration the special use of the check-cashing card in setting this value.

SSB Feature: Check-cashing cards

CAF Screens 2, 3, 4, and 5

If you are establishing a new check-cashing card, configure CAF screens 2, 3, 4, and 5 according to your institution's standard procedure for establishing a new card.

Note: The requirement for at least one account number on CAF screen 3 is not applicable when the CARD TYPE field on CAF screen 1 contains the value SP (special purpose) for check-cashing cards.

CAF Screen 8

CAF screen 8 enables you to establish BASE24-atm cardholder limits for a single usage accumulation period.

ACTIVITY LIMITS

The values in the following fields limit the transaction activity allowed by the BASE24-atm product for this cardholder during a single usage accumulation period. When the value in the TOTAL AGGR field on CAF screen 1 is set to

something other than zero, these limits override the corresponding group of limits on CPF screen 4. The transactions controlled by these limits are cash disbursements against credit and noncredit accounts.

TOTAL CASH WDL — The maximum amount of cash withdrawals allowed against noncredit accounts using the BASE24-atm product. Take into consideration the special use of the check-cashing card in setting this value.

SSB Feature: Check-cashing cards

OFFLINE CASH WDL — The maximum amount of cash withdrawals allowed offline against noncredit accounts using the BASE24-atm product. Take into consideration the special use of the check-cashing card in setting this value.

SSB Feature: Check-cashing cards

TOTAL CASH ADV — The maximum amount of cash advanced allowed against credit accounts using the BASE24-atm product. Take into consideration the special use of the check-cashing card in setting this value.

SSB Feature: Check-cashing cards

OFFLINE CASH ADV — The total amount of cash advances allowed offline against credit accounts using the BASE24-atm product. Take into consideration the special use of the check-cashing card in setting this value.

SSB Feature: Check-cashing cards

TOTAL AGGR — The amount entered in the TOTAL AGGR field on CAF screen 1. This field is intended for informational purposes only.

Field Length: System protected

OFFLINE AGGR — The amount entered in the OFFLINE AGGR field on CAF screen 1. This field is intended for informational purposes only.

Field Length: System protected

CAF Screen 15

If you are using the SSB Enhanced Check Processing Application, you can use CAF screen 15 to associate the holder of a check-cashing card with a specific corporation and establish activity limits for the check-cashing card. This screen is displayed only when the SSB Enhanced Check Processing Application has been installed.

CAF screen 15 is shown below, followed by its field descriptions.

```
BASE24-SSBC  CARDHOLDER FILE          LLLL          YY/MM/DD  HH:MM  15 OF 20

      PAN:                                MEMBER: 000      FIID:

                ATM SELF SERVICE BANKING CHECK

      CORPORATION NUMBER:

                CHECK USAGE CONTROL

      PROCESS CHECK TRANSACTIONS USING BASE LIMITS/USAGES:

                ACTIVITY LIMITS                ACTIVITY THIS PERIOD
                TOTAL          OFFLINE          TOTAL          OFFLINE

      CHECK:
      AGGR:

***** BASE24 *****
NEW PAGE:          FILE DESTINATION:          NEW LOGICAL NETWORK ID:
                  F12 - HELP
```

ATM SELF SERVICE BANKING CHECK

The following fields are specific to the SSB Enhanced Check Processing Application.

CORPORATION NUMBER — The value in this field associates the holder of a check-cashing card with a specific corporation. This corporation number must have an associated record in the Corporate Check File (CCF).

Field Length: 10 numeric characters

Required Field: Yes, if the CARD TYPE field on CAF screen 1 is SP.

Default Value: No default value
Data Name: CAF.SSBC.CORP-NUM
SSB Feature: Check-cashing cards

CHECK USAGE CONTROL

The following fields are used to set limits and to display a cardholder's activity during the usage accumulation period for check-related cash disbursement transactions that do not have matching Check Status File (CSF) records.

PROCESS CHECK TRANSACTIONS USING BASE LIMITS/

USAGES — A code that indicates whether the amount of a check-related cash disbursement transaction that does not have a matching Check Status File (CSF) record should be included in the usage amounts that are tested against the limits set in the TOTAL AGGR, OFFLINE AGGR, TOTAL CASH WDL, and OFFLINE CASH WDL fields on CAF screen 1. Valid values are as follows:

- Y = Yes, test check-related cash disbursement transactions against the limits set in the specified fields on CAF screen 1. If the transaction is approved, add the transaction amount to the usage amounts in the TOTAL CASH WDL and OFFLINE CASH WDL fields on CAF screen 1.
- N = No, do not test check-related cash disbursement transactions against the limits set in the specified fields on CAF screen 1. Do not add approved transaction amounts to the usage amounts in the TOTAL CASH WDL and OFFLINE CASH WDL fields on CAF screen 1.

Field Length: 1 alphabetic character
Required Field: Yes
Default Value: N
Data Name: CAF.SSBC.CHK-BASE-FLG
SSB Feature: Check-cashing cards

ACTIVITY LIMITS

The values in the following fields limit the transaction activity allowed by the BASE24-atm product during a single usage accumulation period. The activity limits are discussed in the topic “Enhanced Check Authorization” provided previously in this section.

TOTAL CHECK — The total cash disbursement allowed for check-related cash disbursement transactions when a matching Check Status File (CSF) record could not be located.

If the PROCESS CHECK TRANSACTIONS USING BASE LIMITS/USAGES field contains an N, the value in this field should be greater than zero because the values in the TOTAL AGGR and TOTAL CASH WDL fields on CAF screen 1 are not used when testing check-related cash disbursement transactions.

If the PROCESS CHECK TRANSACTIONS USING BASE LIMITS/USAGES field contains a Y, the value in this field must be less than or equal to the value in the TOTAL AGGR field on CAF screen 1.

If the PROCESS CHECK TRANSACTIONS USING BASE LIMITS/USAGES field contains a Y and this field contains a zero, the values in the TOTAL AGGR and TOTAL CASH WDL fields on CAF screen 1 are used when testing check-related cash disbursement transactions.

Field Length:	1–15 alphanumeric characters
Required Field:	Yes
Default Value:	0
Data Name:	CAF.SSBC.GRP-LMT.TTL-CHK-LMT
SSB Feature:	Check-cashing cards

OFFLINE CHECK — The total cash disbursement allowed offline for check-related cash disbursement transactions when a matching CSF record could not be located. The value in this field is used only with authorization level 3 (online/offline) when the authorizing host is unavailable and the BASE24-atm Authorization process performs stand-in authorization.

If the PROCESS CHECK TRANSACTIONS USING BASE LIMITS/USAGES field contains a value of N, the value in this field should be greater than zero because the values in the OFFLINE AGGR and OFFLINE CASH WDL fields on CAF screen 1 are not used when testing check-related cash disbursement transactions.

If the PROCESS CHECK TRANSACTIONS USING BASE LIMITS/USAGES field contains a value of Y, the value in this field must be less than or equal to the value in the OFFLINE AGGR field on CAF screen 1.

If the PROCESS CHECK TRANSACTIONS USING BASE LIMITS/USAGES field contains a value of Y and this field contains a zero, the values in the OFFLINE AGGR and OFFLINE CASH WDL fields on CAF screen 1 are used when testing check-related cash disbursement transactions.

Field Length: 1–15 alphanumeric characters
Required Field: Yes
Default Value: 0
Data Name: CAF.SSBC.GRP-LMT.OFFL-CHK-LMT
SSB Feature: Check-cashing cards

TOTAL AGGR — The amount entered in the TOTAL AGGR field on CAF screen 1. The value in this field is intended for informational purposes only.

Field Length: System protected
Data Name: CAF.BASE.GRP-LMT.AGGR-LMT

OFFLINE AGGR — The amount entered in the OFFLINE AGGR field on CAF screen 1. The value in this field is intended for informational purposes only.

Field Length: System protected
Data Name: CAF.BASE.GRP-LMT-OFFL-AGGR-LMT

ACTIVITY THIS PERIOD

The values in the following fields are totals for check-related cash disbursement transaction activity allowed by the BASE24-atm product during a single usage accumulation period.

TOTAL CHECK — The total amount of check-related cash disbursement transactions when a matching Check Status File (CSF) record could not be located.

If the PROCESS CHECK TRANSACTIONS USING BASE LIMITS/USAGES field contains a Y, the value in this field is included in the balance of the TOTAL CASH WDL field on CAF screen 1.

Field Length: System protected
Data Name: CAF.SSBC.GRP-PRD.TTL-CHK-PRD

OFFLINE CHECK — The total amount of check-related cash disbursement transactions authorized by the BASE24-atm Authorization process when a matching CSF record could not be located. The amount in this field is always used with authorization level 2, and is used with authorization level 3 (online/offline) when the authorizing host is unavailable and the BASE24-atm Authorization process performs stand-in authorization.

The amount in this field is included in the balance of the TOTAL CHECK field on this screen. If the PROCESS CHECK TRANSACTIONS USING BASE LIMITS/USAGES field contains a value of Y, the value in this field also is included in the balance of the OFFLINE CASH WDL field on CAF screen 1.

Field Length: System protected
Data Name: CAF.SSBC.GRP-PRD.OFFL-CHK-PRD

CAF Screen 16

CAF screen 16 establishes activity limits for all types of cards except for the check-cashing card. This screen is displayed only when the SSB Enhanced Check Processing Application has been installed.

CAF screen 16 is shown below, followed by its field descriptions.

```

BASE24-SSBC  CARDHOLDER FILE          LLLL          YY/MM/DD  HH:MM  16 OF 20

      PAN:                                MEMBER: 000      FIID:
                ATM SELF SERVICE BANKING CHECK

                CSF CHECK USAGE CONTROL

      PROCESS CSF CHECK TRANSACTIONS USING BASE LIMITS/USAGES:

                ACTIVITY LIMITS                ACTIVITY THIS PERIOD
                TOTAL                OFFLINE                TOTAL                OFFLINE

CSF CHECK:
  AGGR:

      CSF CHECKS ALLOWED PER PERIOD:
      CSF CHECKS ACCEPTED THIS PERIOD:

***** BASE24 *****
NEW PAGE:          FILE DESTINATION:          NEW LOGICAL NETWORK ID:
                  F12 - HELP

```

ATM SELF SERVICE BANKING CHECK

The following fields are specific to the SSB Enhanced Check Processing Application.

CSF CHECK USAGE CONTROL

The following fields are used to set limits and to display a cardholder's activity during the usage accumulation period for check-related cash disbursement transactions with matching Check Status File (CSF) records.

PROCESS CSF CHECK TRANSACTIONS USING BASE LIMITS/USAGES

— A code that indicates whether the amount of a check transaction with a matching Check Status File (CSF) record should be included in the usage amounts that are checked against the limits set in the TOTAL AGGR, OFFLINE AGGR, TOTAL CASH WDL, and OFFLINE CASH WDL fields on CAF screen 1. Valid values are as follows:

- Y = Yes, test CSF check-related cash disbursement transactions against the limits set in the specified fields on CAF screen 1. If the transaction is approved, add the transaction amount to the usage amounts in the TOTAL CASH WDL and OFFLINE CASH WDL fields on CAF screen 1.
- N = No, do not test CSF check-related cash disbursement transactions against the limits set in the specified fields on CAF screen 1. Do not add approved transaction amounts to the usage amounts in the TOTAL CASH WDL and OFFLINE CASH WDL fields on CAF screen 1.

Field Length:	1 alphabetic character
Required Field:	Yes
Default Value:	N
Data Name:	CAF.SSBC.CSF-CHK-BASE-FLG
SSB Feature:	Enhanced check authorization

ACTIVITY LIMITS

The values in the following fields limit the transaction activity allowed by the BASE24-atm product during a single usage accumulation period. The activity limits are discussed in the topic “Enhanced Check Authorization” provided previously in this section.

TOTAL CSF CHECK — The total cash disbursement allowed for check-related cash disbursement transactions with matching Check Status File (CSF) records.

If the PROCESS CSF CHECK TRANSACTIONS USING BASE LIMITS/USAGES field contains a value of N, the value in this field should be greater than zero because the values in the TOTAL AGGR and TOTAL CASH WDL fields on CAF screen 1 are not used when testing CSF check-related cash disbursement transactions.

If the PROCESS CSF CHECK TRANSACTIONS USING BASE LIMITS/USAGES field contains a value of Y, the value in this field must be less than or equal to the value in the TOTAL AGGR field on CAF screen 1.

If the PROCESS CSF CHECK TRANSACTIONS USING BASE LIMITS/USAGES field contains a value of Y and this field contains a zero, the values in the TOTAL AGGR and TOTAL CASH WDL fields on CAF screen 1 are used when testing CSF check-related cash disbursement transactions.

Field Length:	1–15 alphanumeric characters
Required Field:	Yes
Default Value:	0
Data Name:	CAF.SSBC.GRP-LMT.TTL-CSF-CHK-LMT
SSB Feature:	Enhanced check authorization

OFFLINE CSF CHECK — The total cash disbursement allowed offline for check-related cash disbursement transactions with matching CSF records. The value in this field is used only with authorization level 3 (online/offline) when the authorizing host is unavailable and the BASE24-atm Authorization process performs stand-in authorization.

If the PROCESS CSF CHECK TRANSACTIONS USING BASE LIMITS/USAGES field contains an N, the value in this field should be greater than zero because the values in the OFFLINE AGGR and OFFLINE CASH WDL fields on CAF screen 1 are not used when testing CSF check-related cash disbursement transactions.

If the PROCESS CSF CHECK TRANSACTIONS USING BASE LIMITS/USAGES field contains a Y, the value in this field must be less than or equal to the value in the OFFLINE AGGR field on CAF screen 1.

If the PROCESS CSF CHECK TRANSACTIONS USING BASE LIMITS/USAGES field contains a Y and this field contains a zero, the values in the OFFLINE AGGR and OFFLINE CASH WDL fields on CAF screen 1 are used when testing CSF check-related cash disbursement transactions.

Field Length: 1–15 alphanumeric characters
Required Field: Yes
Default Value: 0
Data Name: CAF.SSBC.GRP-LMT.OFFL-CSF-CHK-LMT
SSB Feature: Enhanced check authorization

TOTAL AGGR — The amount entered in the TOTAL AGGR field on CAF screen 1. The value in this field is intended for informational purposes only.

Field Length: System protected
Data Name: CAF.BASE.GRP-LMT.AGGR-LMT

OFFLINE AGGR — The amount entered in the OFFLINE AGGR field on CAF screen 1. The value in this field is intended for informational purposes only.

Field Length: System protected
Data Name: CAF.BASE.GRP-LMT-OFFL-AGGR-LMT

ACTIVITY THIS PERIOD

The values in the following two fields are totals for check-related cash disbursement transaction activity allowed by the BASE24-atm product during a single usage accumulation period when matching Check Status File (CSF) records are located.

TOTAL CSF CHECK — The total amount of check-related cash disbursement transactions with matching Check Status File (CSF) records.

If the PROCESS CSF CHECK TRANSACTIONS USING BASE LIMITS/USAGES field contains a value of Y, the value in this field is included in the balance of the TOTAL CASH WDL field on CAF screen 1.

Field Length: System protected
Data Name: CAF.SSBC.GRP-PRD.TTL-CSF-CHK-PRD

OFFLINE CSF CHECK — The total amount of check-related cash disbursement transactions made with a matching CSF record and authorized by the BASE24-atm Authorization process. The amount in this field is always used with authorization level 2, and is used with authorization level 3 (online/offline) when the authorizing host is unavailable and the BASE24-atm Authorization process performs stand-in authorization.

The amount in this field is included in the balance of the TOTAL CSF CHECK field on this screen. If the PROCESS CSF CHECK TRANSACTIONS USING BASE LIMITS/USAGES field contains a value of Y, the value in this field also is included in the balance of the OFFLINE CASH WDL field on CAF screen 1.

Field Length: System protected
Data Name: CAF.SSBC.GRP-PRD.OFFL-CSF-CHK-PRD

CSF CHECKS ALLOWED PER PERIOD — The maximum number of times this card can be used for check-related cash disbursement transactions that have a matching Check Status File (CSF) record. Valid values are 0 through 9999.

Field Length: 1–4 numeric characters
Required Field: Yes
Default Value: 1
Data Name: CAF.SSBC.CSF-CHK-USE-LMT
SSB Feature: Enhanced check authorization

CSF CHECKS ACCEPTED THIS PERIOD — The number of times this card has been used for check-related cash disbursement transactions that have a matching Check Status File (CSF) record.

Field Length: System protected
Data Name: CAF.SSBC.CSF-CHK-USED-PRD

Modifying the Check Status File

The Check Status File (CSF) contains a record for each check registered by a cardholder and a record for each preapproved or predeclined check defined by the institution. The CSF is used to define authorization parameters for registered checks and preapproved or predeclined checks. The BASE24-atm Authorization process accesses the CSF using the account number and routing and transit number from the MICR information on the check presented at the terminal, and the primary account number (PAN) and member number from the card.

For registered checks, the CSF is used to establish a link between the individual cardholder and the check-issuing institution and to define the check status, the check disposition if the transaction is declined, and the maximum acceptable check amount.

For preapproved or predeclined checks, the CSF is used to define the check-issuing institution and the account at that institution as well as to define the check status, the check disposition if the transaction is declined, and the maximum acceptable check amount.

Reviewing the CSF is one step in the authorization process. Transactions authorized by the BASE24-atm Authorization process still must meet transaction activity limits established and maintained for the card used. You should review the CPF or CAF records that control the activity limits for the cards used to cash registered or preapproved checks. A transaction involving a check that passes the tests established in the CSF will still be declined if it exceeds the activity limits in the CPF or CAF record for the customer's card.

CSF Screen 1

CSF screen 1 is shown below, followed by its field descriptions.

```
BASE24-SSBC  CHECK STATUS FILE          LLLL      YY/MM/DD  HH:MM  01 OF 01
INSTITUTION ID NUMBER: 00000000000      ACCOUNT NUMBER:
```

CARDHOLDER/CHECK STATUS INFORMATION

```
REGISTERED PAN NUMBER: *****
REGISTERED MEMBER NUMBER:          ***
```

```
CHECK STATUS:          0
CHECK RETAIN FLAG:      0
CHECK LIMIT:            0
```

```
***** BASE24 *****
NEW PAGE:          FILE DESTINATION:          NEW LOGICAL NETWORK ID:
                  F12-HELP
```

INSTITUTION ID NUMBER — The routing and transit number of the check-issuing institution or check-issuer identification number. This value is derived from the check MICR routing and transit number and is a portion of the key to the CSF. The value is right-justified and zero filled to the left.

Field Length: 11 numeric characters
Required Field: Yes
Default Value: 00000000000
Data Name: CSF.INST-ID-NUM
SSB Feature: Preapproved and predeclined check processing, registered check processing

ACCOUNT NUMBER — The checking account number derived from the check MICR information. The account number is a portion of the key to the CSF. The value is left-justified and blank filled to the right.

Field Length: 1–19 numeric characters
Required Field: Yes
Default Value: No default value
Data Name: CSF.ACCT-NUM
SSB Feature: Preapproved and predeclined check processing, registered check processing

CARDHOLDER/CHECK STATUS INFORMATION

The following fields are used to link the cardholder to the institution that issued the check, establish the maximum acceptable check amount, and define a check status and check disposition flag.

REGISTERED PAN NUMBER — The cardholder primary account number (PAN). This number corresponds to the PAN in the Card Authorization File (CAF), Negative Card File (NEG), or Usage Accumulation File (UAF).

If this record is for a registered check for a specific cardholder, enter the primary account number (PAN) of the cardholder. If this record is for a preapproved or predeclined check, this field requires only the default entry (asterisks) since those records apply to all cardholders.

Field Length: 1–19 numeric characters
Required Field: Yes

Default Value: *****
Data Name: CSF.RGSTR-PAN
SSB Feature: Preapproved and predeclined check processing, registered check processing

REGISTERED MEMBER NUMBER — The cardholder member number. This number corresponds to the member number in the Card Authorization File (CAF), Negative Card File (NEG), or Usage Accumulation File (UAF).

If this record is for a registered check for a specific cardholder, enter the member number of the cardholder. If this record is for a preapproved or predeclined check, this field requires only the default entry (asterisks).

Field Length: 1–3 numeric characters
Required Field: Yes
Default Value: ***
Data Name: CSF.RGSTR-MBR-NUM
SSB Feature: Preapproved and predeclined check processing, registered check processing

CHECK STATUS — A code specifying the disposition of a check with this routing and transit number and account number. Valid values are as follows:

0 = Accept all checks
1 = Deposit only
2 = Deny all checks

Field Length: 1 numeric character
Required Field: Yes
Default Value: 0
Data Name: CSF.CHK-STAT
SSB Feature: Preapproved and predeclined check processing, registered check processing

CHECK RETAIN FLAG — The retention status for declined transactions for a check with this routing and transit number and account number. Valid values are as follows:

0 = Return all checks
1 = Retain all checks

Field Length:	1 numeric character
Required Field:	Yes
Default Value:	0
Data Name:	CSF.RET-CHK-FLG
SSB Feature:	Preapproved and predeclined check processing, registered check processing

CHECK LIMIT — The maximum acceptable check amount, expressed as a whole currency value, for a check with this routing and transit number and account number. Checks above the specified limit are not authorized. This field is not required if the CHECK STATUS field value indicates that the check should be declined.

Field Length:	1–15 numeric characters
Required Field:	Yes
Default Value:	0
Data Name:	CSF.CHK-LMT
SSB Feature:	Preapproved and predeclined check processing, registered check processing

Modifying the Corporate Check File

The Corporate Check File (CCF) is used to define check authorization parameters as defined by the institution that issued the check instead of the institution that processes the check. The CCF is used only for check-related transactions initiated with special-use check-cashing cards.

The CCF enables the institution to establish a record for each corporation with which it has a check processing agreement. Each corporation is assigned a corporation number. This number establishes a link between the cardholder who uses a special-use check-cashing card to cash checks and the corporation that issues the checks. The corporation number is defined in the Cardholder Authorization File (CAF) or the Negative Card File (NEG), depending on the BASE24 authorization method used by the institution. For online authorization processing (authorization level 1), the host is responsible for establishing this authorization requirement. The corporation number is also defined in the CCF. A valid routing and transit number and account number are also entered for the corporation in the CCF. In addition, a check status and a maximum transaction amount are defined for the corporation account number.

When a cash check transaction is initiated with the special-use check-cashing card and a transaction request is sent to the Authorization process, the process uses the corporation number associated with that card, as located in the CAF or NEG, to access the CCF. The Authorization process then reads the CCF to find a match on the routing and transit number and the account number from the MICR information on the check. The transaction is approved or declined based on the status and the check limit defined for that account in the CCF record plus the card limits in the CPF or CAF for the card used to initiate the transaction.

Reviewing the CCF is one step in the authorization process. Transactions authorized by the BASE24-atm Authorization process still must meet transaction activity limits established and maintained for the card used.

The BASE24-atm Authorization process checks the CCF only for cards defined in the CPF or CAF with card type SP (special purpose), so the CPF or CAF records that control the activity limits for check-cashing cards also must be set up. A transaction involving a check that passes the tests established in the CCF will still be declined if it exceeds the activity limits in the CPF or CAF record for the check-cashing card.

CCF Screen 1

CCF screen 1 is shown below, followed by its field descriptions.

```

BASE24-SSBC  CORPORATE CHECK FILE      LLLL      YY/MM/DD  HH:MM  01 OF 01
CORPORATION NUMBER: 0000000000          DESCRIPTION:
NUMBER OF ACCOUNTS: 00
INST ID NUM    ACCOUNT NUMBER          STATUS      MAXIMUM AMOUNT

```

```

***** BASE24 *****
NEW PAGE:          FILE DESTINATION:      NEW LOGICAL NETWORK ID:
                  F12-HELP

```

CORPORATION NUMBER — The corporation identification number as specified in the Cardholder Authorization File (CAF) or Negative Card File (NEG). This field provides a link between the cardholder and the check-issuing institution and is the key to the CCF.

Field Length: 10 numeric characters
Required Field: Yes
Default Value: 0000000000
Data Name: CCF.CORP-NUM
SSB Feature: Check-cashing cards

DESCRIPTION — This field is used for information purposes only and provides a description for each corporation.

Field Length: 1–25 alphanumeric characters
Required Field: No
Default Value: No default value
Data Name: CCF.CORP-DESCR
SSB Feature: Check-cashing cards

NUMBER OF ACCOUNTS — The number of institutions and accounts associated with the corporation.

Field Length: System protected
Data Name: CCF.CORP-CNT

INST ID NUM — Valid check routing and transit numbers for this corporation. For instance, in the United States, this field can contain the routing and transit number of 9 characters, which should be right-justified and zero-filled to the left.

Field Length: 1–11 numeric characters
Required Field: Yes
Default Value: Zeros
Data Name: CCF.INST-ID-NUM
SSB Feature: Check-cashing cards

ACCOUNT NUMBER — Valid checking account number for each of the routing and transit numbers for this particular corporation.

Field Length: 1–19 characters
Required Field: Yes
Default Value: No default value
Data Name: CCF.ACCT-NUM
SSB Feature: Check-cashing cards

STATUS — Indicates whether checks are accepted or declined for the institution identified by the values in the INST ID NUM and ACCOUNT NUMBER fields. Valid values are as follows:

0 = Accept all checks for this institution and account number.
1 = Deny all checks for this institution and account number.

Field Length: 1 numeric character
Required Field: Yes
Default Value: 0
Data Name: CCF.ACCT-STAT
SSB Feature: Check-cashing cards

MAXIMUM AMOUNT — The maximum check transaction amount that can be approved for the institution identified by the values in the INST ID NUM and ACCOUNT NUMBER fields. Checks for amounts above this specified limit are not authorized. This field is not required if the STATUS field indicates that the check should not be accepted.

Field Length: 1–15 numeric characters
Required Field: Yes, if the STATUS field is set to a value of 0.
Default Value: 0
Data Name: CCF.CHK-LMT
SSB Feature: Check-cashing cards

Modifying the Institution Definition File

The Institution Definition File (IDF) defines processing for each institution participating on the logical network. Each institution has one record in the IDF. The IDF supports an additional IDF segment required for the SSB Enhanced Check Processing Application. The IDF indicates whether the SSB Check

segment is used in BASE24 authorization files and defines a check disposition indicator and three preauthorization checks for online/offline processing (authorization level 3). IDF screens 5 and 6 allow you to set the flag for the SSB Enhanced Check Processing Application at the institution level. The flag for the SSB Enhanced Check Processing Application must be set at the logical network level in the Product Indicator Table File (PITABLE) before it can be set at the institution level.

The IDF contains one record for each institution in the logical network and defines transaction processing for each institution. The following information describes the configuration changes required in the IDF to support the SSB Enhanced Check Processing Application.

The SSB Enhanced Check Processing Application requires settings in the IDF to indicate whether a financial institution offers transaction processing for the SSB Enhanced Check Processing Application. Three IDF screens require settings: screen 1, screens 5 and 6, and screen 37. Other BASE24 screens used to access the IDF are not used to support the SSB Enhanced Check Processing Application. The fields described below have specific SSB requirements. Refer to the ***BASE24 Base Files Maintenance Manual*** for more information on the IDF.

IDF Screen 1

With the SSB Enhanced Check Processing Application, the Authorization process can be configured to search the Stop Payment File (SPF) to determine whether a stop payment has been issued for a specific check-related transaction. Settings in the IDF define the SPF name (screen 1) and if the SPF is to be searched by the Authorization process (screen 37). The MICR information retrieved from the check must contain the routing and transit number, the account number, and the check serial number before the Authorization process attempts to search the SPF.

SPF — The name of the Stop Payment File (SPF) used by the institution. You must enter a file name if you are using the Stop Payment feature of the SSB Enhanced Check Processing Application.

SSB Feature: Stop payment verification

IDF Screens 5 and 6

IDF screens 5 and 6 contain flags identifying which segments can be included in the files belonging to this institution. Segmented authorization files include the Cardholder Authorization File (CAF), Negative Card File (NEG), Positive Balance File (PBF), and Usage Accumulation File (UAF).

SSB CHECK — This flag permits you to specify whether its authorization files should carry the information needed for the SSB Enhanced Check Processing Application. The value for the SSB BASE segment also must be set to Y, and should have been set during SSB Enhanced ATM Application configuration.

Valid values for each indicator are as follows:

Y = Yes, include this segment.

N = No, do not include this segment.

SSB Features: Enhanced check authorization, enhanced MICR processing and manipulation, check-cashing cards, registered check processing, preapproved and predeclined check processing, and stop payment verification features

IDF Screen 37

This screen enables you to specify three prescreening checks or tests for online/offline authorization processing (authorization level 3) and a check disposition flag for the BASE24-atm Authorization process.

You can specify whether the Authorization process is to search the Check Status File (CSF), the Corporate Check File (CCF), and the Stop Payment File (SPF) prior to forwarding the check transaction to the host for authorization. These prescreening tests are not performed during online authorization processing (authorization level 1).

The check disposition flag specifies how the transaction acquirer is to handle a cash check transaction when the terminal is unable to dispense the full amount of the check being cashed.

IDF screen 37 is shown below, followed by its field descriptions.

```
BASE24-SSBC  INSTITUTION FILE          LLLL          YY/MM/DD  HH:MM  37 OF 45

          FIID:          FI-NAME:

          CARD PARAMETERS
CHECK IF HOST ONLINE  STOP PAY:
          CHECK STATUS:
          CORPORATION CHECK:

          CASH CHECK DISPOSITION:

***** BASE24 *****
NEW PAGE:          FILE DESTINATION:          NEW LOGICAL NETWORK ID:
          F12-HELP
```

STOP PAY — A code specifying whether the BASE24-atm Authorization process is to access the Stop Payment File (SPF) prior to transmitting a check-related transaction request to the host for authorization. This field is applicable only for institutions using the online/offline authorization level (authorization level 3). Valid values are as follows:

N = Send the request to the host without accessing the SPF.

Y = Access the SPF prior to routing the request to the host for authorization.

This value is valid only when the SPF file name is defined on IDF screen 1.

Field Length: 1 alphabetic character

Required Field: No

Default Value: N

Data Name: IDF.SSBC.SPF-CHK

SSB Feature: Stop payment verification

CHECK STATUS — A code specifying whether the BASE24-atm Authorization process is to access the Check Status File (CSF) prior to transmitting a check-related cash disbursement transaction request to the host for authorization. This field is applicable only for institutions using the online/offline authorization level (authorization level 3). Valid values are as follows:

N = Send the request to the host without accessing the CSF.

Y = Access the CSF prior to routing the request to the host for authorization.

Field Length: 1 alphabetic character

Required Field: No

Default Value: N

Data Name: IDF.SSBC.CSF-CHK

SSB Feature: Enhanced check authorization

CORPORATION CHECK — A code specifying whether the BASE24-atm Authorization process is to access the Corporate Check File (CCF) prior to transmitting a check-related cash disbursement transaction request initiated with a check-cashing card to the host for authorization. This field is applicable only for institutions using the online/offline authorization level (authorization level 3). Valid values are as follows:

N = Send the request to the host without accessing the CCF.

Y = Access the CCF prior to routing the request to the host for authorization.

Field Length: 1 alphabetic character

Required Field: No

Default Value: N

Data Name: IDF.SSBC.CCF-CHK

SSB Feature: Check-cashing cards

CASH CHECK DISPOSITION — A code specifying how the BASE24-atm Authorization process is to instruct the transaction acquirer to handle a cash check transaction when the terminal is unable to dispense the full amount of the check. Valid values are as follows:

0 = Return check, cancel transaction, and generate a full reversal. If any coins have already been dispensed, the Device Handler process generates a partial reversal for the cash amount not dispensed.

1 = Retain check, complete transaction, and generate a partial reversal for the undispensed cash amount.

Field Length:	1 numeric character
Required Field:	Yes
Default Value:	0
Data Name:	IDF.SSBC.CHK-DISP
SSB Feature:	Enhanced check authorization

Modifying the Logical Network Configuration File

The Logical Network Configuration File (LCONF) enables you to define the locations of files and processes, and to define processing parameters. The LCONF is described in the ***BASE24 Logical Network Configuration File Manual***. The following assigns in the LCONF are used to locate the appropriate files:

SSB-BSF — The fully qualified file name of the Bin Sort File (for example, \B24.\$DATA.PRO1DATA.SSBBSF). This file allows for the definition of a check sorting method and is used by the NCR Device Handler process.

SSB Feature: Enhanced document bin sorting

ARF — The fully qualified file name of the Account Routing File (for example, \B24.\$DATA.PRO1DATA.ARF). The information in this file allows the BASE24-atm Authorization process to convert check MICR information in the event two financial institutions merge resulting in duplicate account numbers.

SSB Feature: Enhanced MICR processing and manipulation

SSB-CCF — The fully qualified file name of the Corporate Check File (for example, \B24.\$DATA.PRO1DATA.SSBCCF). This file contains check authorization parameters specified by the check issuer. This file is used by the BASE24-atm Authorization and Refresh processes.

SSB Feature: Check-cashing cards

SPF — The fully qualified file name of the Stop Payment File (for example, \B24.\$DATA.PRO1DATA.SPF). This file contains stop payment records.

SSB Feature: Stop payment verification

SSB-CSF — The fully qualified file name of the Check Status File (for example, \B24.\$DATA.PRO1DATA.SSB-CSF). This file is used to specify the status of a checking account and is used by the BASE24-atm Authorization and Refresh processes.

SSB Feature: Preapproved and predeclined check processing, registered check processing

Modifying the Negative Card File

The Negative Card File (NEG) supports an additional segment required for the SSB Enhanced Check Processing Application. The NEG defines the card type for the special-use check-cashing card and the corporation number that links a check-issuing corporation to the ATM card used to cash the corporation's checks. This file is used with the Negative Authorization with Usage Accumulation method or the Negative Authorization without Usage Accumulation method.

The NEG contains records for card issuers that use a negative authorization method. The BASE24-atm Authorization process searches this file to determine if a transaction request should be approved and, if not, what action should be taken with the card.

Institutions that use a negative authorization method and want to use check-cashing cards must add a record to the NEG for each check-cashing card issued in order to define the corporation number associated with the card. The BASE24 products use the reserved code SP (special purpose) to identify the card type for check-cashing cards.

NEG screen 4 allows you to define the corporation number associated with a check-cashing card. The BASE24-atm Authorization process uses this corporation number to access the Corporate Check File (CCF). The CCF contains authorization criteria for use with check-cashing cards issued to a specific corporation.

The fields described below have specific SSB requirements. Refer to the ***BASE24 Base Files Maintenance Manual*** for more information on the NEG.

NEG Screen 1

NEG screen 1 gives you the ability to identify certain cards for special processing, retain specific cards when they are used in the system, and deny transactions attempted with certain cards for a set time.

CARD TYPE — A code identifying the type of card associated with the PAN. The SP code is used for the check-cashing card by the SSB Enhanced Check Processing Application.

SSB Feature: Check-cashing cards

REASON ON FILE — A code identifying the reason the card has a record in the NEG. For check-cashing cards, the only valid value is 0 (account open).

SSB Feature: Check-cashing cards

NEG Screen 4

NEG screen 4 is shown below, followed by the description of the field that is used by the SSB Enhanced Check Processing Application.

```
BASE24-SSBC  NEGATIVE FILE          LLLL          YY/MM/DD  HH:MM  04 OF 04
```

```
PAN:                                MEMBER: 000      FIID:
```

```
ATM SELF SERVICE BANKING CHECK
```

```
CORPORATION NUMBER:
```

```
***** BASE24 *****
```

```
NEW PAGE:          FILE DESTINATION:          NEW LOGICAL NETWORK ID:
                  F12-HELP
```

ATM SELF SERVICE BANKING CHECK

The following field is specific to the SSB Enhanced Check Processing Application.

CORPORATION NUMBER — The corporation identification number as specified in the Cardholder Authorization File (CAF). This field provides a link between the cardholder and the check-issuing institution. This corporation number must also have an associated record in the Corporate Check File (CCF).

Field Length:	10 numeric characters
Required Field:	Yes, if the CARD TYPE field on NEG screen 1 is set to the value SP.
Default Value:	No default value
Data Name:	NEG.SSBC.CORP-NUM
SSB Feature:	Check-cashing cards

Modifying the Receipt File

Customer receipts can be configured through a series of receipt templates in the BASE24-atm Receipt File (RCPT). The configurable receipt feature provides the ability to establish ATM receipt formats that are unique to the terminal. Receipt templates determine the actual receipt text and format to be printed on a receipt. If you have configured the optional receipt feature, it will affect the cash check, deposit with cash back, and split deposit transactions. This feature allows the cardholder to determine if a receipt should be printed for a transaction.

For a complete description of the configurable receipt feature, receipt templates, and examples of receipt templates for transactions performed at the NCR 56XX- or 58XX-series terminals, refer to the ***BASE24-atm NCR 5XXX Device Support Manual***. For a complete description of the RCPT, refer to the ***BASE24-atm Files Maintenance Manual***.

These customer receipt templates use the field type codes shown below. The data is retrieved from the BASE24-atm Standard Internal Message (STM) and the ATD. Data names are included in parentheses after each field type code description. Refer to the ***BASE24-atm Transaction Processing Manual*** for further explanation of the STM data names.

Note that the four financial receipt templates shown here are similar to the receipts in sections 2 and 3 of this manual. In addition, an administrative transaction receipt is shown. The enhanced MICR processing and manipulation feature in the SSB Enhanced Check Processing Application provides additional information that can be printed on these receipts.

Field Type Code Descriptions

The following table describes the standardized field type codes that are used in the default receipt templates provided for the SSB Enhanced Check Processing Application. You can modify these receipt templates to use the additional field type codes described in the *BASE24-atm NCR 5XXX Device Support Manual*.

Code	Description	Length
A1	The first transaction amount (STM.RQST.AMT-1). For instance, in a partial deposit with cash back, this amount is the check total.	15 bytes
A2	The transaction amount (STM.RQST.AMT-2). For instance, in a partial deposit with cash back, this amount is the cash requested.	15 bytes
A3	The transaction amount (STM.RQST.AMT-3). For instance, in a partial deposit with cash back, this amount is the cash received.	15 bytes
AB	The available balance (STM.RQST.AMT-3) is only printed if a response code 0 is returned from the BASE24-atm Authorization process and the CUSTOMER BALANCE INFO fields in the IDF and the ATD indicate that Amount 3 (STM.RQST.AMT-3) is to be displayed. This code only prints the amount; use the code XA below to print the text "AVAIL BAL".	15 bytes
E ^x	Space compression code. This code places spaces on the receipt. The value <i>x</i> is the number of spaces in hexadecimal, and must be in the range of 1–F.	

Code	Description	Length
FR <i>l,r,c</i>	The <i>from</i> account number of the first account (STM.RQST.FROM-ACCT or STM.STMT-INFO.FROM-ACCT). If the STM.RQST.FROM-ACCT is all blanks or zeros, the Device Handler process uses the account description from the ncr_appl_tbl table in the N50NAMS File. The value of STM.RQST.FROM-ACCT-TYP and the language indicator determine which table entry is used. The three variables (<i>l</i> for characters starting from the left, <i>r</i> for characters starting from the right, and <i>c</i> for the character code) are used to control the truncation of the card number. If the variables are not present, the account number is printed in its entirety. Refer to the <i>BASE24-atm NCR 5XXX Device Support Manual</i> for additional information about how these variables are used in account number truncation.	19 bytes
LB	The ledger balance (STM.RQST.AMT-2) is only printed if a response code of 0 is returned from the BASE24-atm Authorization process and the CUSTOMER BALANCE INFO fields in the IDF and the ATD indicate that Amount 2 (STM.RQST.AMT-2) is to be displayed. This code only prints the amount; use the code XL below to print the text “LEDGER BAL”.	15 bytes
MA	Account number of the check from the MICR Data token (MICR-DATA-TKN.MICR-DATA).	variable
MS	Sequence number of the check from the MICR Data token (MICR-DATA-TKN.MICR-DATA).	variable
MT	Routing and transit number of the check from the MICR Data token (MICR-DATA-TKN.MICR-DATA).	variable
ND	The net deposit amount (STM.RQST.AMT-1 minus STM.RQST.AMT-2).	15 bytes
NP	The net deposit amount for a partial dispense transaction (STM.RQST.AMT-1 minus STM.RQST.AMT-3).	15 bytes
SQ	The four-digit BASE24 sequence number assigned to the transaction (ATDD1.ATDD1-CORE.TRAN-SEQ-NUM).	4 bytes

Code	Description	Length
TO $l,r;c$	The <i>to</i> account number (STM.RQST.TO-ACCT), or in the case of a split deposit, the second account number. If the STM.RQST.TO-ACCT is all blanks or zeros, the Device Handler process uses the account description from the ncr_appl_tbl table in the N50NAMS File. The value of STM.RQST.TO-ACCT-TYP and the language indicator determine which table entry is used. The three variables (<i>l</i> for characters starting from the left, <i>r</i> for characters starting from the right, and <i>c</i> for the character code) are used to control the truncation of the card number. If the variables are not present, the account number is printed in its entirety. Refer to the <i>BASE24-atm NCR 5XXX Device Support Manual</i> for additional information about how these variables are used in account number truncation.	19 bytes
TT	The transaction type (located in the ncr_tran_tbl table in the N50NAMS File). The transaction code printed depends on the value in the STM.TRAN-CDE field. The Device Handler process searches the ncr_tran_tbl table in the N50NAMS File to find a match on the transaction code. The corresponding text is then moved to the print buffer.	10 bytes
XA	The text “AVAIL BAL” is printed on the receipt if a response code 0 is returned from the BASE24-atm Authorization process and the CUSTOMER BALANCE INFO fields in the IDF and the ATD indicate that the available balance, or Amount 3 (STM.RQST.AMT-3), is to be displayed. The text to be printed is configured in the ncr_ledg_avail_tbl table in the N50NAMS File. This code only prints the identifying text; use the code AB above to print the amount.	11 bytes

Code	Description	Length
XL	The text “LEDGER BAL” is printed on the receipt if a response code of 0 is returned from the BASE24-atm Authorization process and the CUSTOMER BALANCE INFO fields in the IDF and the ATD indicate that the ledger balance, or Amount 2 (STM.RQST.AMT-2), is to be displayed. The text to be printed is configured in the ncr_ledg_avail_tbl table in the N50NAMS File. This code only prints the identifying text; use the code LB above to print the amount.	11 bytes

Check Deposit Receipt

The receipt type CHDP is used for check deposit transactions. The NCR 56XX-and 58XX-series ATM default receipt template defined in the RCPT is shown below. Note that the ABA number is the routing and transit number for United States accounts.

```
#E^4@RECORD NO.#E^F    #SQ>
#E^4#TT    #A1$>
#E^4@TO#E^5#TO>>
#E^4#XL#E^6#LB$>
#E^4#XA#E^6#AB$>
#E^4@ABA NUMBER    #MT>
#E^4@CHK ACCT    #MA>
#E^4@CHK NUMBER    #MS>
```

1	CUSTOMER LOGO SCREEN		
2			
3	DATE	TIME	TERM
4	YY/MM/DD	HH:MM	S1A10000
5			
6	1234567890123456789-000		
7			
8	330 SOUTH 108TH AVE		
9			
10	RECORD NO.		840
11	CHECK DEPOSIT		\$1000.00
12	TO 123456		
13			
14	LEDGER BAL		\$1400.00
15	AVAIL BAL		\$400.00
16			
17	ABA NUMBER	0000001	
18	CHK ACCT	123456	
19	CHK NUMBER	0001	
20			
21			

1	2	3
123456789012345678901234567890		

Check Deposit with Cash Back Receipt

The receipt type CDCB is used for check deposit with cash back transactions. The NCR 56XX- and 58XX-series ATM default receipt template defined in the RCPT is shown below. Note that the ABA number is the routing and transit number for United States accounts.

```
#E^4@RECORD NO.#E^F      #SQ>
#E^4@DEPOSIT AMOUNT      #A1$>
#E^4@LESS CASH BACK      #A2$>
#E^4@NET DEPOSIT#E^6#ND$>>
#E^4@TO#E^5#TO>>
#E^4@ABA NUMBER          #MT>
#E^4@CHK ACCT            #MA>
#E^4@CHK NUMBER          #MS>
```

```

1      CUSTOMER LOGO SCREEN
2
3      DATE          TIME          TERM
4      YY/MM/DD      HH:MM          S1A10000
5
6      1234567890123456789-000
7
8      330 SOUTH 108TH AVE
9
10     RECORD NO.                      840
11     DEPOSIT AMOUNT                  $1000.00
12     LESS CASH BACK                  $400.00
13     NET DEPOSIT                     $600.00
14
15     TO SAVINGS
16
17     ABA NUMBER  0000001
18     CHK ACCT    123456
19     CHK NUMBER  0002
20
21
```

```

1      2      3
123456789012345678901234567890
```

Check Split Deposit Receipt

The receipt type CSDP is used for check split deposit transactions. The NCR 56XX- and 58XX-series ATM default receipt template defined in the RCPT is shown below. Note that the ABA number is the routing and transit number for United States accounts.

```
#E^4@RECORD NO.#E^F    #SQ>
#E^4#TT>
#E^4@FIRST AMOUNT#E^5#A1$>
#E^4@TO#E^5#FR>
#E^4@SECOND AMOUNT#E^4#A2$>
#E^4@TO#E^5#TO>>
#E^4@ABA NUMBER    #MT>
#E^4@CHK ACCT      #MA>
#E^4@CHK NUMBER    #MS>
```

```
1          CUSTOMER LOGO SCREEN
2
3          DATE      TIME      TERM
4          YY/MM/DD  HH:MM    S1A10000
5
6          1234567890123456789-000
7
8          330 SOUTH 108TH STREET
9
10         RECORD NO.              776
11         CHK SPLIT DEP
12         FIRST AMOUNT              $50.00
13         TO  3301101
14
15         SECOND AMOUNT              $100.00
16         TO  3311102
17
18         ABA NUMBER  0000001
19         CHK ACCT    123456
20         CHK NUMBER  0003
21
```

```
1          2          3
123456789012345678901234567890
```

Check Partial Deposit with Cash Back Receipt

The receipt type PCDC is used for check deposit with cash back transactions in which the partial amount of requested cash back was dispensed. The NCR 56XX-and 58XX-series ATM default receipt template defined in the RCPT is shown below. Note that the ABA number is the routing and transit number for United States accounts.

```
#E^4@RECORD NO.#E^F#E^3#SQ>
#E^4#TT@AMT#A1$>
#E^4@CASH REQUESTED#E^3#A2$>
#E^4@CASH RECEIVED#E^4#A3$>
#E^4@NET DEPOSIT#E^6#NP$>>
#E^4@TO#E^5#TO>>
#E^4@ABA NUMBER #MT>
#E^4@CHK ACCT #MA>
#E^4@CHK NUMBER #MS>
```

```

1      CUSTOMER LOGO SCREEN
2
3      DATE      TIME      TERM
4      YY/MM/DD  HH:MM      S1A10000
5
6      123456789123456789-000
7
8      330 SOUTH 108TH AVE
9
10     RECORD NO.      840
11     AMT              $1000.00
12     CASH REQUESTED  $400.00
13     CASH RECEIVED   $200.00
14     NET DEPOSIT     $800.00
15
16     TO SAVINGS
17
18     ABA NUMBER 0000001
19     CHK ACCT 123456
20     CHK NUMBER 0004
21
```

```

1      2      3
123456789012345678901234567890
```

Administrative Subtotals Receipt

The following page provides an example of NCR 56XX-and 58XX-series ATM default receipts for an administrative subtotal transaction when the Enhanced Check Processing Application and the enhanced document bin sorting feature are configured. The contents of the bins are listed separately, using the ADBI receipt type.

```
#E^4@BIN #BN @TOT CHKS#E A#BC>
#E^D@TOT AMT#BA$>
```

```

1      CUSTOMER LOGO SCREEN
2
3      DATE      TIME      STATION
4      YY/MM/DD  HH:MM     S1A10035
5
6      CARD NUMBER
7      1234567890123456789-000
8
9      LOCATION
10     330 SOUTH 108TH AVE
11
12     C1 STR    $10000
13     C1 INC          $0   C1 DEC          $0
14     C1 OUT      $15   C1 END    $9985
15     C2 STR    $10000
16     C2 INC          $0   C2 DEC          $0
17     C2 OUT      $110   C2 END    $9890
18     C3 STR    $10000
19     C3 INC          $0   C3 DEC          $0
20     C3 OUT      $320   C3 END    $9680
21     C4 STR    $10000
22     C4 INC          $0   C4 DEC          $0
23     C4 OUT      $80   C4 END    $9920
24     BIN 1      TOT CHKS      01
25           TOT AMT      $85.27
26     BIN 2      TOT CHKS      01
27           TOT AMT     $110.58
28     DEPO  00  DEP1  00  CHK   00
29     MSG   00  PAY   00
30     TOT   00  CRD   00  SUB
31

```

```

1      2      3
123456789012345678901234567890

```


Modifying the Stop Payment File

The SPF is used to define a check or range of checks designated for stop payment. The SPF contains one record for each institution- or customer-initiated stop payment item that indicates a check or range of checks that should not be honored at terminals.

Settings in the Institution Definition File (IDF) define the SPF name and when the SPF is to be searched by the Authorization process. The MICR information retrieved from the check must contain the routing and transit number, the account number, and the check serial number before the Authorization process attempts to search the SPF. Note that the Authorization process searches the SPF only if the card issuer and check issuer are the same institution.

SPF screen 1 is a detail screen and SPF screen 2 is a summary of stop payment items. When a partial key (that is, one or more of the optional key fields is omitted) is entered from SPF screen 1, all SPF records matching the key information entered are displayed on SPF screen 2. From SPF screen 2, you can move the cursor to the desired record and press the **F7** key to display SPF screen 1 which details the selected record. For a complete description of the SPF and its screen layouts, refer to the ***BASE24 Base Files Maintenance Manual***.

SPF Screen 1

SPF screen 1 allows entry of details about a customer's record of stop payment items.

FIID — The FIID of the financial institution owning the account specified in the ACCOUNT NUMBER field.

SSB Feature: Stop payment verification

ACCOUNT NUMBER — The account number of the customer's negotiable order of withdrawal (NOW) account (also referred to as an interest-bearing checking account) or checking account at the institution that has a stop payment on the check.

SSB Feature: Stop payment verification

ACCOUNT TYPE — The type of customer account specified in the ACCOUNT NUMBER field. Valid values are as follows:

01–09 = DDA (checking account)
21 = NOW (Interest-bearing checking account)

SSB Feature: Stop payment verification

CHECK NUMBER/HIGH CHECK NUMBER — The check number of the check on which the stop payment order is placed. If the stop payment order is placed on a series of check numbers, this field contains the high (that is, ending) check number.

SSB Feature: Stop payment verification

LOW CHECK NUMBER — The check number of the low (that is, beginning) check in a series of consecutively numbered checks.

SSB Feature: Stop payment verification

AMOUNT — The amount, in whole and fractional currency units, of the stop payment order placed on a single check.

SSB Feature: Stop payment verification

DATE — The date (YYMMDD) that the stop payment order was entered.

SSB Feature: Stop payment verification

TIME — The time (hhmmssst) that the stop payment order was entered.

SSB Feature: Stop payment verification

EXPIRATION DATE — The date (YYMMDD) that the stop payment order expires. The stop payment order is still valid on the date entered in this field, then is no longer considered by BASE24 Authorization processes once the order expires.

SSB Feature: Stop payment verification

DESCRIPTION — An information-only field for entering a message regarding the stop payment order. The value in this field has no effect on BASE24 processing.

SSB Feature: Stop payment verification

SYSTEM CALCULATE — A code that specifies whether the value in the PBF STOP PAY/WARNING STATUS field is entered by the files maintenance operator or is calculated by the BASE24 system based on the records in the SPF. This field must contain Y for the SSB Enhanced Check Processing Application.

SSB Feature: Stop payment verification

PBF STOP PAY/WARNING STATUS — Indicates whether stop payments or warnings exist for this account. This field must be left blank when this record is used with the SSB Enhanced Check Processing Application.

SSB Feature: Stop payment verification

Modifying the Terminal Receipt File

Receipt requirements for approved and denied transactions are defined in the Terminal Receipt File (TRF). Transactions are designated by an ISO processing code consisting of the transaction code, *from* account type, and *to* account type.

The following transaction codes are used with the deposit with cash back and check cashing transactions:

Transaction	Transaction Code	To Account Type	From Account Type
Administrative	AK	00	00

Modifying the Token File

The SSB Enhanced Check Processing Application uses the Token File (TKN) to configure data tokens that carry additional information in internal messages. These tokens are logged to various files, are extracted, or are sent to the host. The TKN specifies the following information:

- The tokens that get logged to the BASE24-atm Transaction Log File (TLF) and the Interchange Log Files (ILFs).
- The tokens that get extracted from the transaction log files by the Super Extract process. Extracting allows the token information to be processed by the host.
- The tokens that get sent to the host with each transaction in the ISO-based external message.

The SSB Enhanced Check Processing Application uses the MICR Data token (token ID 12) with the enhanced MICR processing and manipulation feature.

The SSB Enhanced Check Processing Application uses the Self-Service Banking Check token (token ID 14) to carry information about the following features:

- For enhanced check authorization, the token contains several fields indicating check disposition.
- For enhanced document bin sorting, the token contains fields indicating the bin sequence numbers and whether the check should be retained.
- For check-cashing cards, the token contains a field indicating the corporation issuing the check.
- For several of the features, the token contains a field indicating whether the transaction uses the Check Status File (CSF).

The SSB Enhanced Check Processing Application uses the Self-Service Banking Check Terminal Settlement token (token ID 15) to carry bin totals for the enhanced document bin sorting feature.

The TKN must be modified to ensure that these tokens get logged to the appropriate transaction log files, to ensure that these tokens are extracted from the TLF, and to ensure that these tokens get sent from the BASE24 system to the ISO-based BASE24 Host Interface process or the ISO-based BIC Interface process in the external message.

Refer to the ***BASE24 Tokens Manual*** for complete information on the these tokens and on using the TKN to specify tokens to be sent in the external message. Refer to the ***BASE24 Base Files Maintenance Manual*** for detailed field descriptions for the TKN screen.

Viewing the Usage Accumulation File

The Usage Accumulation File (UAF) includes usage accumulation totals for check-related cash disbursement transactions for institutions using the Negative Authorization with Usage Accumulation method of the enhanced check authorization feature. UAF screens 1, 4, and 10 are system-protected screens; the values on the screen are calculated by the BASE24 system and are displayed on these screens for your information. The UAF supports an additional segment for the SSB Enhanced Check Processing Application that is displayed on UAF screen 10. The fields described below have specific SSB requirements. Refer to the *BASE24 Base Files Maintenance Manual* for more information on the UAF.

UAF Screen 1

UAF screen 1 displays card usage totals for the current usage accumulation period.

ACTIVITY THIS PERIOD

The following fields are accumulators for transactions during a single usage accumulation period for an individual cardholder.

The transactions added into these accumulator fields are cash disbursements against credit and noncredit accounts and purchases against noncredit accounts. Credit account purchases are not added into these fields.

TOTAL CASH WDL — The total amount of purchases and cash withdrawals made against noncredit accounts.

Field Length: System protected

TOTAL CASH ADV — The total amount of cash advanced against credit accounts.

Field Length: System protected

UAF Screen 4

UAF screen 4 displays card usage totals for the current usage accumulation period.

ACTIVITY THIS PERIOD

The following fields are accumulators for transactions during a single usage accumulation period for an individual cardholder using the BASE24-atm product.

The transactions added to these accumulator fields are cash disbursements against credit and noncredit accounts.

TOTAL CASH WDL — The total amount of cash withdrawals made against noncredit accounts using the BASE24-atm product.

This amount is included in the balance of the TOTAL CASH WDL field on screen 1.

Field Length: System protected

TOTAL CASH ADV — The total amount of cash advanced against credit accounts using the BASE24-atm product.

This amount is included in the balance of the TOTAL CASH ADV field on screen 1.

Field Length: System protected

TIMES USED THIS PERIOD — The number of times the card has been used to make cash disbursements using the BASE24-atm product during the current usage accumulation period.

Field Length: System protected

UAF Screen 10

UAF screen 10 displays check-related cash disbursement transaction totals. This screen is shown below, followed by its field descriptions.

```
BASE24-SSBC  USAGE ACCUMULATION      LLLL      YY/MM/DD  HH:MM  10 OF 10

PAN:                                     MEMBER NUMBER: 000      FIID:

                        ATM SELF SERVICE BANKING CHECK

                        CHECK USAGE CONTROL

                        ACTIVITY THIS PERIOD
                        TOTAL              OFFLINE

CHECK:
CSF CHECK:

CSF CHECKS ACCEPTED THIS PERIOD:      0

***** BASE24 *****
NEW PAGE:      FILE DESTINATION:      NEW LOGICAL NETWORK ID:
                        F12-HELP
```

ATM SELF SERVICE BANKING CHECK

The following fields are specific to the SSB Enhanced Check Processing Application.

CHECK USAGE CONTROL

The following fields display a cardholder's check-related cash disbursement transaction activity during the usage accumulation period.

ACTIVITY THIS PERIOD

The values in the following fields are totals for check-related cash disbursement transaction activity allowed by the BASE24-atm product during a single usage accumulation period.

TOTAL CHECK — The total amount of check-related cash disbursement transactions when a matching Check Status File (CSF) record cannot be located.

If the PROCESS CHECK TRANSACTIONS USING BASE LIMITS/USAGES field on CPF screen 14 contains a value of Y, the value in this field is included in the balance of the TOTAL CASH WDL field on UAF screen 1.

Field Length: System protected
Data Name: UAF.SSBC.GRP-PRD.TTL-CHK-PRD

OFFLINE CHECK — The total amount of check-related cash disbursement transactions made with BASE24-atm stand-in authorization when a matching CSF record cannot be located. The amount in this field is always used with authorization level 2, and is used with authorization level 3 (online/offline) when the authorizing host is unavailable and the BASE24-atm Authorization process performs stand-in authorization.

The amount in this field is included in the balance of the TOTAL CHECK field on this screen. If the PROCESS CHECK TRANSACTIONS USING BASE LIMITS/USAGES field on CPF screen 14 contains a value of Y, the value in this field also is included in the balance of the OFFLINE CASH WDL field on UAF screen 1.

Field Length: System protected
Data Name: UAF.SSBC.GRP-PRD.OFFL-CHK-PRD

TOTAL CSF CHECK — The total amount of check-related cash disbursement transactions with matching CSF records.

If the PROCESS CSF CHECK TRANSACTIONS USING BASE LIMITS/USAGES field on CPF screen 14 contains a value of Y, the value in this field is included in the balance of the TOTAL CASH WDL field on UAF screen 1.

Field Length: System protected
Data Name: UAF.SSBC.GRP-PRD.TTL-CSF-CHK-PRD

OFFLINE CSF CHECK — The total amount of check-related cash disbursement transactions made with matching CSF records and BASE24-atm stand-in authorization. The amount in this field is always used with authorization level 2, and is used with authorization level 3 (online/offline) when the authorizing host is unavailable and the BASE24-atm Authorization process performs stand-in authorization.

The amount in this field is included in the balance of the TOTAL CSF CHECK field on this screen. If the PROCESS CSF CHECK TRANSACTIONS USING BASE LIMITS/USAGES field on CPF screen 14 contains a Y, the value in this field also is included in the balance of the OFFLINE CASH WDL field on UAF screen 1.

Field Length: System protected
Data Name: UAF.SSBC.GRP-PRD.OFFL-CSF-CHK-PRD

CSF CHECKS ACCEPTED THIS PERIOD — The number of times this card has been used for check-related cash disbursement transactions that have a matching CSF record.

Field Length: System protected
Data Name: UAF.SSBC.CSF-CHK-USED-PRD

ACI Worldwide, Inc.

5: Configuring NCR-Specific Files

The three BASE24-atm self-service banking (SSB) modules require configuration of the NCR files that come with the NCR 56XX and 58XX terminals.

This section describes what must be configured in the files that are specific to NCR to implement the various features in the SSB modules. The Document Definition File (DDF) and Image Feature File (IFF) are NCR files updated by the D-Scribe program, also provided by NCR. The NCR 56XX and 58XX terminals use the Check Processing Module (CPM). In order to configure this module, you need the following manuals:

- *NCR Document Processing Application Development Guidelines*
- *NCR D-Scribe User Guide*
- *NCR NDC+ Programmer's Reference Manual*

The NCR 5XXX Configuration File (CNFG5070) is a BASE24 file that is specific to NCR terminals. You make updates to this file through BASE24 screens in the Device Control Terminal (DCT). Most of the screens for the configuration file are described in the *BASE24-atm NCR 5XXX Device Support Manual*. Several of the state table screens, however, are used only for terminals with the CPM. These field descriptions are summarized in this section from the *NCR NDC+ Programmer's Reference Manual*. Refer to the NDC+ manual for more detailed information on the state table fields in the CNFG5070.

Document Definition File and Image Feature File

The CPM requires you to define the attributes and layout of documents it is to process. These attributes and layouts are stored on the hard disk in the terminal in two files: the Document Definition File (DDF), and the Image Feature File (IFF).

The DDF contains definitions of documents that are divided into classes, or groups of documents with common processing requirements. Each class contains zones, or specific areas of information to be processed, to describe a document. Each class can contain multiple documents, for instance different sized checks, where the placement of the zones is different. The IFF contains a description of the image features for each document in the DDF, which allows the document inserted by the cardholder to be matched with a defined document in the DDF. BASE24 support of CPM requires the document to be identified by the CPM using the IFF prior to sending a transaction request to the BASE24 system.

NCR supplies a PC-based utility, called D-Scribe, to manipulate these files. Refer to the *NCR D-Scribe User Guide* for additional details on the D-Scribe program as well as the DDF and IFF. Once the DDF and IFF are created, you include them in the NDC load diskette.

Using the D-Scribe utility, you define the zones for each document type you want the terminal to accept. The following types of zones are used by the Device Handler Extension:

- Image
- Read
- Write or Write and confirm
- Verify
- Courtesy amount verification (CAV)

Image Zones

Image zones define the areas of the document that you want to scan. The entire check can be scanned, both front or back, or specific portions of the document can be scanned.

The Identification Feature of the CPM attempts to identify the type of document by comparing the scanned document to the layouts of the documents in the IFF. If the CPM is not able to positively identify the document, it sends a guess to the SSB Device Handler Extension, which in turn denies the transaction. Only positive identifications are accepted by the SSB Device Handler Extension.

Three screens displayed at the terminal can contain the scanned image of the document. Refer to the “Screen Data Format Screen” topic provided later in this section for more information about how to display the scanned image.

Read Zones

Read zones define the areas on the document that are to be scanned and the image converted to computer-readable text.

The SSB Device Handler Extension assumes the MICR information from the check is in read zone 1; all other read zones are ignored by the BASE24 product. This zone must be properly defined in order for the SSB Device Handler Extension to be configured. The CAV zone (courtesy amount verification) is similar in concept to read zones, but is defined separately.

CAV Zone

The CAV zone defines where the courtesy amount area is on the document. The courtesy amount area on the check is where the check amount is written in numeric form, as opposed to the legal amount area, where the amount is spelled out.

Because the CNFG5070 uses the CAV State, the CAV zone (courtesy amount verification) must be defined. Only one CAV zone can be defined. The CPM uses handwriting recognition to convert the CAV zone into a numeric value. If this value does not match the amount entered by the cardholder, the SSB Device Handler Extension denies the transaction.

Verify Zones

Verify zones define areas on the document that either must have been filled in by the check issuer, or areas that should not be filled in. For a check to be accepted, for instance, the signature area on the front of a check must be filled in, but the bank endorsement area on the back of a check must be blank.

The SSB Device Handler Extension is configured to check the verify zones through the use of a compile-time table located in the SSDHNAMS File. The `ncr_dpm_zone_verify_tbl_chk` section in this file contains a table that you update based upon the verify zones you specified in the DDF. This table is described in section 2 of this manual.

You also need to update the `zone_vryf_err_txt` table (in section `ncr_bpm_zone_vryf_err_txt`) to provide meaningful error text to the cardholder. This text is displayed to the cardholder on the terminal screen and on the Denied receipt when the transaction failed because the verify zone field sent by the terminal does not match the `zone_verify_tbl_chk` table.

Write or Write and Confirm Zones

Write zones define the areas on the document where you want to print information. Write and confirm zones define the areas where you want to print information, and then rescan those areas and compare to the image before printing, to confirm that something was printed in those areas. The use of these zones depends upon the SSB module installed as described below. Note that ACI does **not** support specifying only a Write or Write and Confirm list in the transaction response.

The SSB Enhanced ATM Application uses the Receipt Template File (RCPT) extended memory table to determine the data to be printed on the document. The application looks for receipt types CPMA through CPMM (13 write zones allowed). There is no numeric relationship between the Write or Write and Confirm zone and the receipt type. In other words, the second receipt type, DCMB, could contain the first Write or Write and Confirm zone name. Refer to the topic “Modifying the Receipt File” in section 3 of this manual for additional discussion about these receipt types.

The SSB Device Handler Extension uses three hard-coded Write zones. The zone names used and the data written in them are as follows:

Zone	Placement	Data Fields
WRITE_ZONE_1	Front line	CardNumber Date Time TerminalID
WRITE_ZONE_2	First underside line	Bin# SeqNum ToAcctNum TranCode
WRITE_ZONE_3	Second underside line	Amt1 Amt2

The Amt2 field in WRITE_ZONE_3 is used only if needed for the transaction.

NCR 5XXX Configuration File (CNFG5070)

The CNFG5070 is a text file that contains a number of customization features specific to NCR terminals. To make entering the information easier, BASE24 screens have been developed to write the information to the CNFG5070. These BASE24 screens are accessed from the DCT. Refer to the ***BASE24 Device Control Manual*** for information on the DCT. Additional information about the CNFG5070 is found in the ***BASE24-atm NCR 5XXX Device Support Manual*** and the ***NCR NDC+ Programmer's Reference Manual***.

A sample CNFG5070 is provided with the SSB Device Handler Extension. This sample file contains all of the states and screens required for the new features provided by the SSB Device Handler Extension, and is intended as a guide for the customization of the transaction set you want to provide for your customers.

To access the CNFG5070, place the cursor to the left of the ACCESS CONFIGURATION FILE field name on DCT screen 45, and press the **F1** key. The NCR 5XXX Configuration File Menu is displayed.

NCR 5XXX Configuration File Menu

The NCR 5XXX Configuration File Menu lists the tables found in the CNFG5070.

CONFIGURATION FILE NAME — The fully qualified file name of the CNFG5070. This name must be entered using the HP NonStop file naming convention of *\$volume.subvolume.filename*.

GROUP NUMBER — The group number used to identify a particular load group such as a collection of states, screens, etc. that is downloaded to the terminal. Each group provides certain functionality. For example, Group 0 is the basic group, and Group 1 provides Fast Cash support. The group number for each terminal is assigned in the TERMINAL GROUP field on screen 7 of the BASE24-atm Terminal Data files (ATD). The following are the terminal groups used to support the SSB product.

- 106 = Basic check depository support group (SSB Device Handler Extension)
- 107 = Fast cash plus terminal group 106 (SSB Device Handler Extension)
- 108 = Statement print plus terminal group 106 (SSB Device Handler Extension)
- 109 = Fast cash plus statement print plus terminal group 106 (SSB Device Handler Extension)

- 110 = Split deposit merge group (SSB Enhanced ATM Application). Must be merged with one of the following groups: 106, 107, 108, or 109.
- 111 = Super Teller merge group (SSB Enhanced ATM Application). Must be merged with one of the following groups: 106, 107, 108, or 109.
- 113 = Check cashing card merge group (SSB Enhanced Check Processing Application). Must be merged with one of the following groups: 106, 107, 108, 109, 110, or 111.
- 706 = NCR Bunch Note Acceptor support load group.
- 710 = NCR SSB Base Check Processing Module (CPM) and Bunch Note Acceptor (BNA) and split deposit load group.
- 711 = NCR SSB Base CPM and BNA Super Teller load group.
- 800 = Shared Bunch Note Acceptor (BNA) cash deposit transaction load group for support of different currencies and different denominations in a single deposit transaction. Must be loaded on top of groups 0 and 106.
- 801 = Shared CPM check processing support load group. Must be loaded on top of groups 0 and 106.
- 802 = Shared CPM Bunch Note Acceptor (BNA) load group for support of both cash deposit and check processing transactions. Must be loaded on top of groups 0 and 106.
- 803 = Shared CPM Optical Character Recognition (OCR) support load group. Must be loaded on top of groups 0 and 106.
- 810 = Shared CPM split deposit load group. Must be loaded on top of groups 0, 106, 110, and 801.

Field Length: 1–4 numeric characters

Required Field: No

Default Value: 0

The following table lists all of the menu options on the NCR 5XXX Configuration File Menu.

Table	Description
Enhanced Configuration Parameters	Changes a variety of optional features and timers. Requires modification for the SSB product.
State	Sequential instructions which provide the terminal with the information to perform customer and administrative transactions. Each state typically has a screen number and next state to perform, as well as other parameters. Requires modification for the SSB product.

Table	Description
Screen	Customizes the screen display information and customer keyboard. Requires modification for the SSB product.
Financial Institution Tables	Specifies parameters to be used depending on the terminal PIN verification process to be used. Requires modification for the SSB product.
Supervisor Card Data	Configures the predefined supervisor transaction data to support the Rear Supervisor/Settlement Transaction.
Configuration Identity Number	Establishes the current configuration version present at the terminal.
Print	Prints all or part of the Configuration File Load information in the CNFG5070.

Enter a value in the GROUP NUMBER field. Place the cursor to the left of the table that you want to edit and press the **F1** key.

Enhanced Configuration Parameters Screen

The Enhanced Configuration Parameters screen is used to change a variety of optional features and timers to suit the particular requirements of the financial institution. The Enhanced Configuration Parameters screen is documented in the *BASE24-atm NCR 5XXX Device Support Manual*. Refer to the *NCR NDC+ Programmer's Reference Manual* for more information on these parameters and timers. The following timer is specific to the SSB Device Handler Extension.

EJECT DOCUMENT — The number of seconds the document is presented to the cardholder to be taken before it is reaccepted (timer 94). Valid values are 1 through 999. Values under 10 are set to 10, and values greater than 120 are set to 120.

SSB Feature: Document bin sorting

CAPTURE DOCUMENT — The number of seconds the CPM document captured screen is displayed to the cardholder after a document has been captured by the terminal (timer 87). Valid values are 1 through 255 and 999. A value of 999 indicates that this option is not to be used.

SSB Feature: Check imaging

State Table Data Menu

The State Table Data Menu, shown below, lists all of the state screens needed to configure the NCR terminals. Several of the state table screens, however, are used only for terminals with the CPM. The state table screens that are not CPM-specific are documented in the *BASE24-atm NCR 5XXX Device Support Manual*. Refer to the *NCR NDC+ Programmer's Reference Manual* for more information on the state tables and the CNFG5070.

```

BASE24-DCT    STATE TABLE DATA          LLLL          YY/MM/DD  hh:mm  01 OF 42

          GROUP      0      STATE NUMBER      0

2:42 (A-CARD READ)          3:42 (B-PIN ENTRY)          4:42 (C-UNLOCK ENV DISP)
5:42 (D-PRESET OP-CODE)     6:42 (E-4 FDK SELECT)        7:42 (F-AMOUNT ENTRY)
8:42 (G-AMOUNT CHECK)       9:42 (H-4 FDK INFO)         10:42 (I-TRAN REQUEST)
11:42 (J-CLOSE)             12:38 (K-FIT SWITCH)        13:42 (L-CARD WRITE)
14:42 (M-ENH PIN ENTRY)     15:42 (N-CAMERA CONTROL)    16:42 (P-CPM CAV)
17:42 (Q-CPM ACCEPT DOC)    18:42 (R-ENH AMT ENTRY)     19:42 (S-LANG SWITCH)
20:42 (T-CRD READ PIN INIT) 21:42 (V-LANG FROM CARD)    22:42 (W-FDK SWITCH)
23:42 (X-8 FDK INFO)        24:42 (Y-8 FDK SELECT)      25:42 (Z-GLOBAL EXT)
26:42 (ENH FIT SWITCH)      27:42 (i-AUDIO CONTROL)     28:42 (k-SMART FIT CHECK)
29:42 (+-BEGIN EMV INIT)    30:42 (,-COMPL EMV INIT)    31:42 (;-EMV RE-INIT)
32:42 (--AUTO LANG SELCT)   33:42 (?-SET EMV TXN DATA) 34:42 (.-BEGIN EMV SELCT)
35:42 (/ -COMPL EMV SELCT)  36:42 (b-CUST SELCT PIN)    37:42 (>-CASH ACCEPT)
38:42 (w-CHECK ACCEPT)      39:42 (e-WINCOR EMV CARD)   40:42 (M-PIN & LANG SLCT)
41:42 (r-SHARED BNA)        42:42 (q-SHARED CHECK IN)

      TYPE THE NUMBER OF THE DESIRED FUNCTION IN NEW PAGE FIELD AND KEY F7

***** BASE24 *****
NEW PAGE:          FILE DESTINATION:          NEW LOGICAL NETWORK ID:
                  F12-HELP

```

GROUP — The group number used to identify a particular load group such as a collection of states, screens, etc. that is downloaded to the terminal. Each group provides certain functionality such as, Group 0 is the basic group, Group 1 provides Fast Cash support. The group number for each terminal is assigned in the **TERMINAL GROUP** field of the ATD.

Field Length: 1–4 numeric characters
 Required Field: No
 Default Value: 0

STATE NUMBER — The number of the state you want to edit. Valid values are 0–254 and 256–750.

Field Length: 1–3 numeric characters

Required Field: No

Default Value: 0

The following SSB-specific screens are described in this section:

State Type	Description	Page Number
J	CLOSE (1 extension is SSB-specific)	11
P	CPM CAV	16
Q	CPM ACCEPT DOC (requires 3 extensions)	17
Z	GLOBAL EXT	25
>	CASH ACCEPT (requires 3 extensions)	37
w	CHECK ACCEPT (requires 2 extensions)	38
r	Shared BNA	41
q	Shared Check In	42

Note: The state tables in general only allow eight values to be set. For those states requiring more than eight configuration values, the Global Extension table is used to hold the excess values. The CPM Accept Doc state listed above requires three extensions. The Global Extension table (state Z) is documented in further detail in the *BASE24-atm NCR 5XXX Device Support Manual*.

To access one of these state screens, enter values in the STATE NUMBER field and in the NEW PAGE field. Then press the **F7** key to display the appropriate State screen.

Courtesy Amount Verification State Screen

The Courtesy Amount Verification State screen accesses courtesy amount verification table data. The terminal uses these states during the courtesy amount verification process, which compares the check amount entered by the cardholder to the amount handwritten or typed on the check. The Courtesy Amount Verification State screen is shown below, followed by field descriptions. These field descriptions are summarized in this section from the *NCR NDC+ Programmer's Reference Manual*.

Access this screen from the State Table Data Menu by entering 16 in the NEW PAGE field and pressing the **F7** key. Return to the State Table Data Menu from this screen by entering a 1 in the NEW PAGE field and pressing the **F7** key.

BASE24-DCT STATE TABLE DATA LLLL YY/MM/DD HH:MM 16 OF 42

GROUP 0 STATE NUMBER 0

CPM COURTESY AMOUNT VERIFICATION STATE

STATE TYPE	SCREEN NUMBER	CAV GOOD STATE	UNAVAIL STATE	BAD STATE	NO DOC STATE
P	0	0	0	0	0

COMPARE AMT AMT

AMT FLG BUFFER

0 0

***** BASE24 *****

NEW PAGE: FILE DESTINATION: NEW LOGICAL NETWORK ID:

F12-HELP

STATE TYPE — A code indicating the current state screen. A value of **P** in this field indicates the Courtesy Amount Verification State screen.

Field Length: System protected

SCREEN NUMBER — The screen number that is displayed while courtesy amount verification is performed.

Field Length: 1–3 numeric characters
Required Field: Yes
Default Value: 0
SSB Feature: Courtesy amount verification

CAV GOOD STATE — The number of the state the terminal goes to after the check amount is read and compared to the amount that the cardholder enters. Valid values are 0–254 and 256–750.

Field Length: 1–3 numeric characters
Required Field: Yes
Default Value: 0
SSB Feature: Courtesy amount verification

UNAVAIL STATE — The number of the state the terminal goes to if one of the following conditions is true:

- Courtesy amount verification is not supported.
- One or more parts of the device essential for performing courtesy amount verification is unusable.
- The terminal does not have the Check Processing Module (CPM).

Valid values are 0–254 and 256–750.

Field Length: 1–3 numeric characters
Required Field: Yes
Default Value: 0
SSB Feature: Courtesy amount verification

BAD STATE — The number of the state the terminal goes to if courtesy amount verification is supported but one of the following conditions is true:

- The CPM faults while in the current state.
- The terminal is usable and there is a check inside the CPM, but the check positioned incorrectly and courtesy amount verification cannot be performed.
- The comparison buffer has not been set up.

Valid values are 0–254 and 256–750.

Field Length: 1–3 numeric characters
Required Field: Yes
Default Value: 0
SSB Feature: Courtesy amount verification

NO DOC STATE — The number of the state the terminal goes to if courtesy amount verification is supported, but there is no document within the CPM and the device is in an operational condition. Valid values are 0–254 and 256–750.

Field Length: 1–3 numeric characters
Required Field: Yes
Default Value: 0
SSB Feature: Courtesy amount verification

COMPARE AMT FLG — Specifies whether the amount read from the document should be compared with the buffer specified in the AMT BUFFER field. Valid values are as follows:

0 = Do not compare with buffer.
1 = Compare with buffer.

Field Length: 1 numeric character
Required Field: Yes
Default Value: 0
SSB Feature: Courtesy amount verification

AMT BUFFER — Specifies the buffer that contains the amount entered by the cardholder is contained in. Valid values are as follows:

0 = Amount buffer
1 = Buffer B
2 = Buffer C

Field Length: 1 numeric character
Required Field: Yes
Default Value: 0
SSB Feature: Courtesy amount verification

Accept Document State Screen

The Accept Document State screen accesses accept document table data. The terminal enters this state to enable the CPM to accept a document for processing. The Accept Document State screen is shown below, followed by field descriptions. These field descriptions are summarized in this section from the *NCR NDC+ Programmer's Reference Manual*.

Access this screen from the State Table Data Menu by entering 17 in the NEW PAGE field and pressing the **F7** key. Return to the State Table Data Menu from this screen by entering a 1 in the NEW PAGE field and pressing the **F7** key.

Note: The CPM Accept Document State screen has three extension states associated with it. The extension state extends the functions of a particular state by appending additional functions. The CPM Accept Document extension is accessed through the Global Extension screen (state Z).

```

BASE24-DCT    STATE TABLE DATA          LLLL          YY/MM/DD  HH:MM  17 OF 42

      GROUP      0      STATE NUMBER      0

                                CPM DOCUMENT ACCEPT STATE

STATE          UPPER    LOWER    ENTRY    LIFT    IDENTIFY
TYPE           ENABLE    ENABLE    RETRIES  IMAGES  CANDIDATES
  Q             00       000       0        0        0

                                EXTENSION
                                STATE 1    EXTENSION    EXTENSION
                                STATE 2    STATE 3
                                0          0          0

***** BASE24 *****
NEW PAGE:          FILE DESTINATION:          NEW LOGICAL NETWORK ID:
                  F12-HELP

```

STATE TYPE — A code indicating the current state screen. A value of **Q** in this field indicates the CPM Document Accept State screen.

Field Length: System protected

UPPER ENABLE — Sets the initial document definition when the CPM is ready to accept a deposit. This field contains the first three digits of a six-digit number; the last three digits are in the LOWER ENABLE field. For example, if the UPPER ENABLE field contained 012, and the LOWER ENABLE field contained 345, they would combine to be the number 012345. The range of the six-digit number is 000000–065532.

Field Length: 1–3 numeric characters
Required Field: Yes
Default Value: 0
SSB Feature: Check imaging

LOWER ENABLE — Sets the initial document definition when the CPM is ready to accept a deposit. This field contains the last three digits of a six-digit number; the first three digits are in the UPPER ENABLE field. For example, if the UPPER ENABLE field contained 012, and the LOWER ENABLE field contained 345, they would combine to be the number 012345. The range of the six-digit number is 000000–65532.

Field Length: 1–3 numeric characters
Required Field: Yes
Default Value: 0
SSB Feature: Check imaging

ENTRY RETRIES — The number of document entry retries the cardholder is allowed during the execution of this state. Retries are allowed during orientation correction or the correction of a physically unacceptable document. Valid values are as follows:

- 0 = Do not allow cardholder retries.
- 1 = Allow one further attempt following initial problem.
- 2 = Allow two further attempts following initial problem.
- 3 = Allow three further attempts following initial problem.

Field Length: 1 numeric character
Required Field: Yes
Default Value: 0
SSB Feature: Check imaging

LIFT IMAGES — Specifies what full front or full rear images of the document, if any, are to be scanned. The values in the following table can be added together to scan more than one image. For instance, to scan a full-size front image in greyscale, enter 1 in this field. To scan a reduced rear image in greyscale, enter 8 in this field. To scan both images in the above formats, enter 9 in this field. Valid values are as follows:

- 1 = Full, front, grey level image at 100 dots/inch resolution
- 2 = Full, rear, grey level image at 100 dots/inch resolution
- 4 = Reduced 2/3, front, grey level image at 100 dots/inch resolution
- 8 = Reduced 2/3, rear, grey level image at 100 dots/inch resolution
- 16 = Full, front, binary image at 200 dots/inch resolution
- 32 = Full, rear, binary image at 200 dots/inch resolution

Field Length: 1–3 numeric characters
Required Field: Yes
Default Value: 0
SSB Feature: Check imaging

IDENTIFY CANDIDATES — Indicates whether the CPM Document Identification feature is used. This feature tries to identify the type of document that has been inserted by comparing the image scanned to the IFF. If no positive and unique match is made, up to three candidates for identification can be returned by the CPM. However, the BASE24 product cannot make a determination between the candidates, therefore the transaction is denied and the check is returned to the cardholder. Valid values are as follows:

- 0 = Do not use the CPM Document Identification feature.
- 1 = Use the CPM Document Identification feature.

Field Length: 1 numeric character
Required Field: Yes
Default Value: 0
SSB Feature: Check imaging

EXTENSION STATE 1 — The number of the extension state containing information for the first Accept Document extension. This extension state contains miscellaneous configuration settings, and is described later in this section. Valid values are 000–254 and 256–750. This extension state is required to use the check imaging feature.

Field Length: 1–3 numeric characters
Required Field: Yes
Default Value: 0

EXTENSION STATE 2 — The number of the extension state containing information for the second Accept Document extension. This extension state contains screen numbers for various stages of the Accept Document process, and is described later in this section. If there is no extension state 2, enter a value of 255. Valid values are 0–750.

Field Length: 1–3 numeric characters
Required Field: Yes
Default Value: 0

EXTENSION STATE 3 — The number of the extension state containing information for the third Accept Document extension. Valid values are 0–254 and 256–750. This extension state contains the next states for various exception conditions found in the Accept Document process, and is described later in this section. This extension state is required to use the check imaging feature.

Field Length: 1–3 numeric characters
Required Field: Yes
Default Value: 0

Global Extension State Screen

The extension state extends the functions of a particular state by appending additional configuration values. This extension state is accessed through the Global Extension screen (state Z) which is described in more detail in the *BASE24-atm NCR 5XXX Device Support Manual*. The additional configuration values on the Global Extension screen have generic field names, and the meaning of a specific field changes depending on the original State screen that referenced this screen.

The following extension states are described in this topic:

- The Close State screen has one extension state that is SSB-specific.
- The Accept Document State screen has three extension states that are SSB-specific.
- The Cash Accept State screen has three extension states that are SSB-specific.
- The Check Accept State screen has two extension states that are SSB-specific.

Access the Global Extension screen from the State Table Data Menu by entering 25 in the NEW PAGE field and pressing the **F7** key. Return to the State Table Data Menu from this screen by entering a 1 in the NEW PAGE field and pressing the **F7** key.

BASE24-DCT	STATE TABLE DATA	LLLL	YY/MM/DD	HH:MM	25 OF 38
GROUP	0	STATE NUMBER	0		
GLOBAL EXTENSION					
STATE	TABLE	TABLE	TABLE	TABLE	TABLE
TYPE	ENTRY-2	ENTRY-3	ENTRY-4	ENTRY-5	ENTRY-6
Z	0	0	0	0	0
	TABLE	TABLE			
	ENTRY-8	ENTRY-9			
	0	0			
***** BASE24 *****					
NEW PAGE:	FILE DESTINATION:	NEW LOGICAL NETWORK ID:			
	F12-HELP				

Cash Accept State Screen

The Cash Accept State screen accesses cash deposit transaction data prior to a transaction request being sent to the Bunch Note Acceptor (BNA). The Cash Accept State screen is shown below, followed by field descriptions.

Access this screen from the State Table Data Menu by entering 37 in the NEW PAGE field and pressing the **F7** key. Return to the State Table Data Menu from this screen by entering a 1 in the NEW PAGE field and pressing the **F7** key.

Note: The Cash Accept State screen has three extension states associated with it. The extension state extends the functions of a particular state by appending additional functions. The Cash Accept extension is accessed through the Global Extension screen (state Z).

BASE24-DCT STATE TABLE DATA LLLL YY/MM/DD HH:MM 37 OF 42

GROUP 0 STATE NUMBER 0

CASH ACCEPT STATE

STATE TYPE	CANCEL KEY MASK	DEPOSIT KEY MASK	ADD MORE KEY MASK	REFUND KEY MASK
>	0	0	0	0

EXTENSION STATE 1

EXTENSION STATE 2

EXTENSION STATE 3

0

0

0

***** BASE24 *****

NEW PAGE: FILE DESTINATION: NEW LOGICAL NETWORK ID:

F12-HELP

STATE TYPE — A code indicating the current state screen. A value of > in this field indicates the Cash Accept State screen.

Field Length: System protected

CANCEL KEY MASK — Specifies the Cancel Function Display Key (FDK), that is active when the ‘Please Enter Notes’ screen appears. This is the decimal representation for an eight-bit mask that specifies whether operation keys A

through I are active. To calculate this field value, add the active operation key values found in the following table. Valid values for the decimal total are 0 through 255.

Operation Key	Value
A	1
B	2
C	4
D	8
F	16
G	32
H	64
I	128

Field Length: 1–3 numeric characters
Required Field: No
Default Value: 0
SSB Feature: Cash accept

DEPOSIT KEY MASK — Specifies the Deposit Function Display Key (FDK), that is active when the ‘Confirmation’ and ‘Escrow Full’ screens appear. This is the decimal representation for an eight-bit mask that specifies whether operation keys A through I are active. To calculate this field value, add the active operation key values found in the following table. Valid values for the decimal total are 0 through 255.

Operation Key	Value
A	1
B	2
C	4
D	8

Operation Key	Value
F	16
G	32
H	64
I	128

Field Length: 1–3 numeric characters
 Required Field: No
 Default Value: 0
 SSB Feature: Cash accept

ADD MORE KEY MASK — Specifies the Add More Function Display Key (FDK), that is active when the ‘Confirmation’ screen appears. This is the decimal representation for an eight-bit mask that specifies whether operation keys A through I are active. To calculate this field value, add the active operation key values found in the following table. Valid values for the decimal total are 0 through 255.

Operation Key	Value
A	1
B	2
C	4
D	8
F	16
G	32
H	64
I	128

Field Length: 1–3 numeric characters
 Required Field: No
 Default Value: 0
 SSB Feature: Cash accept

REFUND KEY MASK — Specifies the Refund Function Display Key (FDK), that is active when the ‘Confirmation’ and ‘Escrow Full’ screens appear. This is the decimal representation for an eight-bit mask that specifies whether operation keys A through I are active. To calculate this field value, add the active operation key values found in the following table. Valid values for the decimal total are 0 through 255.

Operation Key	Value
A	1
B	2
C	4
D	8
F	16
G	32
H	64
I	128

Field Length: 1–3 numeric characters
Required Field: No
Default Value: 0
SSB Feature: Cash accept

EXTENSION STATE 1 — The number of the extension state containing information for the first Cash Accept extension. Valid values are 0–254 and 256–750.

Field Length: 1–3 numeric characters
Required Field: No
Default Value: 0
SSB Feature: Cash accept

EXTENSION STATE 2 — The number of the extension state containing information for the second Cash Accept extension. Valid values are 0–254 and 256–750.

Field Length: 1–3 numeric characters
Required Field: No
Default Value: 0
SSB Feature: Cash accept

EXTENSION STATE 3 — The number of the extension state containing information for the third Cash Accept extension. Valid values are 0–254 and 256–750.

Field Length: 1–3 numeric characters
Required Field: No
Default Value: 0
SSB Feature: Cash accept

Check Accept State Screen

The Check Accept State screen accesses check deposit transaction data prior to a transaction request being sent to the Check Processing Module (CPM). The Check Accept State screen is shown below, followed by field descriptions.

Access this screen from the State Table Data Menu by entering 38 in the NEW PAGE field and pressing the **F7** key. Return to the State Table Data Menu from this screen by entering a 1 in the NEW PAGE field and pressing the **F7** key.

Note: The Check Accept State screen has two extension states associated with it. The extension state extends the functions of a particular state by appending additional functions. The Cash Accept extension is accessed through the Global Extension screen (state Z).

BASE24-DCT		STATE TABLE DATA		LLLL	YY/MM/DD	HH:MM	17 OF 42
GROUP	0	STATE NUMBER	0				
CHECK ACCEPT STATE							
STATE TYPE	RESERVED	LEAVE/CAPTURE OPTION	CHECK ENTRY RETRIES	IMAGE LIFT			
w	0	0	0	0			
	EXTENSION STATE 1	EXTENSION STATE 2	CANCEL KEY MASK	DEPOSIT KEY MASK			
	0	0	0	0			
***** BASE24 *****							
NEW PAGE:		FILE DESTINATION:		NEW LOGICAL NETWORK ID:			
		F12-HELP					

STATE TYPE — A code indicating the current state screen. A value of **w** in this field indicates the Check Accept State screen.

Field Length: System protected

RESERVED — This field is reserved for future use. Valid values are 0–255.

Field Length: 1–3 numeric characters
Required Field: No
Default Value: 0
SSB Feature: Check accept

LEAVE/CAPTURE OPTION — Determine which action to take if a short or physically unacceptable check is presented and not taken. Valid values are as follows.

000 = Leave at throat.
001 = Retain the unacceptable check in bin 1.

Field Length: 1–3 numeric characters
Required Field: No
Default Value: 0
SSB Feature: Check accept

CHECK ENTRY RETRIES — Specifies the number of check entry retries the cardholder will be allowed during the transaction. Valid values are as follows.

0 = Do not allow the cardholder any retries.
1 = Allow one additional attempt following the initial failure.
2 = Allow two additional attempts following the initial failure.
3 = Allow three additional attempts following the initial failure.

Field Length: 1–3 numeric characters
Required Field: No
Default Value: 0
SSB Feature: Check accept

IMAGE LIFT — Specifies which full front or full rear images of the check are to be scanned. Valid values are as follows.

000 = No check image will be produced.
001 = A check image will be produced.

Field Length: 1–3 numeric characters

Required Field: No
Default Value: 0
SSB Feature: Check accept

EXTENSION STATE 1 — The number of the extension state containing information for the first Check Accept extension. Valid values are 000–750.

Field Length: 1–3 numeric characters
Required Field: No
Default Value: 0
SSB Feature: Check accept

EXTENSION STATE 2 — The number of the extension state containing information for the second Check Accept extension. Valid values are 000–254 and 256–750.

Field Length: 1–3 numeric characters
Required Field: No
Default Value: 0
SSB Feature: Check accept

CANCEL KEY MASK — Specifies the Cancel Function Display Key (FDK), that is active when the ‘Please Insert Check’ and ‘Further Processing’ screens appear. This is the decimal representation for an eight-bit mask that specifies whether operation keys A through I are active. To calculate this field value, add the active operation key values found in the following table. Valid values for the decimal total are 0 through 255.

Operation Key	Value
A	1
B	2
C	4
D	8
F	16
G	32

Operation Key	Value
H	64
I	128

Field Length: 1–3 numeric characters
Required Field: No
Default Value: 0
SSB Feature: Check accept

DEPOSIT KEY MASK — Specifies the Deposit Function Display Key (FDK), that is active when the ‘Further Processing’ screen appears. This is the decimal representation for an eight-bit mask that specifies whether operation keys A through I are active. To calculate this field value, add the active operation key values found in the following table. Valid values for the decimal total are 0 through 255.

Operation Key	Value
A	1
B	2
C	4
D	8
F	16
G	32
H	64
I	128

Field Length: 1–3 numeric characters
Required Field: No
Default Value: 0
SSB Feature: Check accept

Extension to State J

The following fields are used for the Close State extension (state J). These field descriptions are summarized in this section from the *NCR NDC+ Programmer's Reference Manual*. Each field is input as a table entry on the Global Extension screen. For example, the CPM Take Document Screen Number data (shown below in parentheses) are entered in the TABLE ENTRY-2 field on the Global Extension screen. The TABLE ENTRY-4 through TABLE ENTRY-9 fields are not used with the Close State extension.

GROUP — The number of the load group associated with the state entered in the STATE NUMBER field on the screen.

Field Length: 1–4 numeric characters
Required Field: Yes
Default Value: 0

STATE NUMBER — The number of the extension state as specified on the Close State screen. Valid values are 0—254 and 256—750.

Field Length: 1–3 numeric characters
Required Field: Yes
Default Value: 0

STATE TYPE — The value Z identifies the Global Extension state.

Field Length: System protected

TABLE ENTRY-2 (CPM Take Document Screen Number) — The number of the screen that is displayed during error recovery actions which can take place in this state if a Check Processing Module (CPM) is present in the terminal. Valid values are 0 to 999.

Field Length: 1–3 numeric characters
Required Field: No
Default Value: 0
SSB Feature: Check imaging

TABLE ENTRY-3 (CPM Take Document Screen Number) — Indicates the error recovery actions which can take place in this state if a Check Processing Module (CPM) is present in the terminal. Valid values are as follows:

000 = Retain the document

001 = Return the document

Field Length: 1–3 numeric characters

Required Field: No

Default Value: 0

SSB Feature: Check imaging

Extension 1 to State Q

The first extension to the Accept Document State screen contains miscellaneous configuration settings. These field descriptions are summarized in this section from the *NCR NDC+ Programmer's Reference Manual*. Each field is input as a table entry on the Global Extension screen. For example, the Zone Verify Control data (shown below in parentheses) are entered in the TABLE ENTRY-2 field on the Global Extension screen. The TABLE ENTRY-6 through TABLE ENTRY-9 fields are not used for this extension.

GROUP — The number of the load group associated with the state entered in the STATE NUMBER field on the screen.

Field Length: 1–4 numeric characters

Required Field: Yes

Default Value: 0

STATE NUMBER — The number of the extension state as specified in the field EXTENSION STATE 1 on the Accept Document screen. Valid values are 0–254 and 256–750.

Field Length: 1–3 numeric characters

Required Field: Yes

Default Value: 0

STATE TYPE — A code indicating the current state screen. The value Z indicates the Global Extension state.

Field Length: System protected

TABLE ENTRY-2 (Zone Verify Control) — Controls whether the terminal performs CPM zone verification and what action the terminal takes once the zones are checked. Zone verification uses the verify list of the current document definition.

When the document is a check, the typical value in this field is 1, where the terminal performs zone verification and sends the results to the BASE24 system. The BASE24 product then uses the `ncr_dpm_zone_verify_tbl_chk` table in the SSDHNAMS File to determine on a zone-by-zone basis whether the document is accepted.

Valid values are as follows:

- 0 = Do not perform zone verification.
- 1 = Perform zone verification, but the terminal does not interpret the results.
- 2 = Perform zone verification; if any of the zones are blank, the terminal attempts to return the document to the cardholder.
- 3 = Perform zone verification; if any of the zones are filled in, the terminal attempts to return the document to the cardholder.

Field Length: 1 numeric character
Required Field: Yes
Default Value: 0
SSB Feature: Configurable zone verification

TABLE ENTRY-3 (Magnetism Check Control) — Controls whether the CPM Magnetic Flux hardware is used and what action to take once the document is checked for magnetic ink. Valid values are as follows:

- 0 = Do not check for the presence of magnetic flux on the document.
- 1 = If magnetic flux is detected, attempt to return the document to the cardholder.
- 2 = If magnetic flux is not detected, attempt to return the document to the cardholder.

Field Length: 1 numeric character
 Required Field: Yes
 Default Value: 0
 SSB Feature: Check imaging

TABLE ENTRY-4 (Image List Lift Control) — Control whether the images defined by the image list of the current Document Definition are scanned. Valid values are as follows:

- 0 = Do not scan the images defined by the current Document Definition Image List defined in the DDF.
- 1 = Scan the images defined by the current Document Definition Image List defined in the DDF.

Field Length: 1 numeric character
 Required Field: Yes
 Default Value: 0
 SSB Feature: Check imaging

TABLE ENTRY-5 (Document Captured Screen) — The screen that appears when the document entered by the cardholder is retained. A document is retained when an error condition occurs, or it can be retained as a natural outcome of a particular state. Typically a document is retained if it cannot be processed and was not retrieved by the cardholder. The Document Captured screen is displayed for a period of time defined by the CAPTURE DOCUMENT field (timer 87) on the Enhanced Configuration Parameters screen (accessed from the NCR 5XXX Configuration File Menu).

Field Length: 1–3 numeric characters
 Required Field: Yes
 Default Value: 0
 SSB Feature: Check imaging

Extension 2 to State Q

The second extension to the CPM Accept Document screen contains screen numbers for various stages of the Accept Document process. These field descriptions are summarized in this section from the *NCR NDC+ Programmer's Reference Manual*. Each field is input as a table entry on the Global Extension screen. For example, the Please Insert Document Screen data (shown below in

parentheses) are entered in the TABLE ENTRY-2 field on the Global Extension screen. The TABLE ENTRY-8 and TABLE ENTRY-9 fields are not used for this extension.

GROUP — The number of the load group associated with the state entered in the STATE NUMBER field on the screen.

Field Length: 1–3 numeric characters
Required Field: Yes
Default Value: 0

STATE NUMBER — The number of the extension state as specified in the field EXTENSION STATE 2 on the CPM Accept Document screen. Valid values are 0–254 and 256–750.

Field Length: 1–3 numeric characters
Required Field: Yes
Default Value: 0

STATE TYPE — A code indicating the current state screen. The value Z indicates the Global Extension state.

Field Length: System protected

TABLE ENTRY-2 (Please Insert Document Screen) — The number of the screen that appears when the CPM has been successfully enabled or re-enabled to accept a cardholder's document. If a screen number is not specified, reserved screen D0001 is used.

Field Length: 1–3 numeric characters
Required Field: Yes
Default Value: 0
SSB Feature: Check imaging

TABLE ENTRY-3 (Processing Document Screen) — The number of the screen that appears when the document has passed the entry sensor. If a screen number is not specified, reserved screen D0002 is used.

Field Length: 1–3 numeric characters
Required Field: Yes
Default Value: 0
SSB Feature: Check imaging

TABLE ENTRY-4 (Unacceptable Document Screen) — The number of the screen that appears when a document is detected that cannot be processed. If a screen number is not specified, reserved screen D0003 is used.

Field Length: 1–3 numeric characters
Required Field: Yes
Default Value: 0
SSB Feature: Check imaging

TABLE ENTRY-5 (Upside Down Document Screen) — The number of the screen that appears when a document is detected as having the wrong side facing up. If a screen number is not specified, reserved screen D0004 is used.

Field Length: 1–3 numeric characters
Required Field: Yes
Default Value: 0
SSB Feature: Check imaging

TABLE ENTRY-6 (Wrong Way Up Document Screen) — The number of the screen that appears when a document is detected with the front of the document facing the wrong way. If a screen number is not specified, reserved screen D0005 is used.

Field Length: 1–3 numeric characters
Required Field: Yes
Default Value: 0
SSB Feature: Check imaging

TABLE ENTRY-7 (Further Processing Screen) — The number of the screen that appears after the Processing Document screen. This screen can also be used to display the scanned images. If a screen number is not specified, reserved screen D0010 is used.

Field Length: 1–3 numeric characters
Required Field: Yes
Default Value: 0
SSB Feature: Check imaging

Extension 3 to State Q

The third extension to the CPM Accept Document screen contains the next states for various exception conditions found in the Accept Document process. These field descriptions are summarized in this section from the *NCR NDC+ Programmer's Reference Manual*. Each field is input as a table entry on the Global Extension screen. For example, the Document Already Present Next State Exit data (shown below in parentheses) are entered in the TABLE ENTRY-2 field on the Global Extension screen. The TABLE ENTRY-7 through TABLE ENTRY-9 fields are not used for this extension.

GROUP — The number of the load group associated with the state entered in the STATE NUMBER field on the screen.

Field Length: 1–3 numeric characters
Required Field: Yes
Default Value: 0

STATE NUMBER — The number of the extension state as specified in the field EXTENSION STATE 3 on the CPM Accept Document screen. Valid values are 0–254 and 256–750.

Field Length: 1–3 numeric characters
Required Field: Yes
Default Value: 0

STATE TYPE — A code indicating the current state screen. The value Z indicates the Global Extension state.

Field Length: System protected

TABLE ENTRY-2 (Document Already Present Next State Exit) — The number of the next state if it is detected that a document is already present in the device. Valid values are 0–254 and 256–750.

Field Length: 1–3 numeric characters
Required Field: Yes
Default Value: 0
SSB Feature: Check imaging

TABLE ENTRY-3 (No Exception Next State Exit) — The number of the next state if the document is accepted and processed without error. Valid values are 0–254 and 256–750.

Field Length: 1–3 numeric characters
Required Field: Yes
Default Value: 0
SSB Feature: Check imaging

TABLE ENTRY-4 (Exception Type 1 Next State Exit) — One of three next states that can be used if there is an error during document processing. Refer to the *NCR NDC+ Programmer's Reference Manual* for further details of which exception type is used under what error conditions. Valid values are 0–254 and 256–750.

Field Length: 1–3 numeric characters
Required Field: Yes
Default Value: 0
SSB Feature: Check imaging

TABLE ENTRY-5 (Exception Type 2 Next State Exit) — One of three next state that can be used if there is an error during document processing. Refer to the *NCR NDC+ Programmer's Reference Manual* for further details of which exception type is used under what error conditions. Valid values are 0–254 and 256–750.

Field Length: 1–3 numeric characters
Required Field: Yes
Default Value: 0
SSB Feature: Check imaging

TABLE ENTRY-6 (Exception Type 3 Next State Exit) — One of three next states that can be used if there is an error during document processing. Refer to the *NCR NDC+ Programmer's Reference Manual* for further details of which exception type is used under what error conditions. Valid values are 0–254 and 256–750.

Field Length: 1–3 numeric characters
Required Field: Yes
Default Value: 0
SSB Feature: Check imaging

Extension 1 to State >

The first extension to the Cash Accept State screen contains screen numbers used in cardholder dialog during execution of this state. These field descriptions are summarized in this section from the *NCR NDC+ Programmer's Reference Manual*. Each field is input as a table entry on the Global Extension screen. For example, the Please Enter Notes Screen data (shown below in parentheses) are entered in the TABLE ENTRY-2 field on the Global Extension screen. The TABLE ENTRY-8 and TABLE ENTRY-9 fields are not used for this extension.

GROUP — The number of the load group associated with the state entered in the STATE NUMBER field on the screen.

Field Length: 1–4 numeric characters
Required Field: No
Default Value: 0

STATE NUMBER — The number of the extension state as specified in the EXTENSION STATE 1 field on the Cash Accept State screen. Valid values are 0–254 and 256–750.

Field Length: 1–3 numeric characters
Required Field: No
Default Value: 0

STATE TYPE — A code indicating the current state screen. The value Z indicates the Global Extension state.

Field Length: System protected

TABLE ENTRY-2 (Please Enter Notes Screen) — The number of the screen that appears when the BNA has been successfully enabled or re-enabled to accept a cardholder's cash deposit.

Field Length: 1–3 numeric characters
Required Field: No
Default Value: 0
SSB Feature: Cash accept

TABLE ENTRY-3 (Please Remove Notes Screen) — The number of the screen that appears when the BNA has refunded or rejected notes to the cardholder.

Field Length: 1–3 numeric characters
Required Field: No
Default Value: 0
SSB Feature: Cash accept

TABLE ENTRY-4 (Confirmation Screen) — The number of the screen that appears when all of the notes are in escrow and have been validated. This screen provides the number of notes in each denomination that are held in escrow. In addition, this screen prompts the cardholder to add more notes, deposit the notes in escrow, or request a refund.

Field Length: 1–3 numeric characters
Required Field: No
Default Value: 0
SSB Feature: Cash accept

TABLE ENTRY-5 (Hardware Error Screen) — The number of the screen that appears when a hardware error, such as a note jam condition, occurs and the transaction cannot continue. This screen appears for 15 seconds.

Field Length: 1–3 numeric characters
Required Field: No
Default Value: 0
SSB Feature: Cash accept

TABLE ENTRY-6 (Escrow Full Screen) — The number of the screen that appears when escrow reaches the maximum number of notes that can be held.

Field Length: 1–3 numeric characters
Required Field: No
Default Value: 0
SSB Feature: Cash accept

TABLE ENTRY-7 (Processing Notes Screen) — The number of the screen that appears while a bunch of notes are being processed upon insertion in the BNA.

Field Length: 1–3 numeric characters
Required Field: No
Default Value: 0
SSB Feature: Cash accept

Extension 2 to State >

The second extension to the Cash Accept State screen contains state numbers directing the flow of cardholder dialog leaving this state. These field descriptions are summarized in this section from the *NCR NDC+ Programmer's Reference Manual*. Each field is input as a table entry on the Global Extension screen. For example, the Good Next State Number data (shown below in parentheses) are entered in the TABLE ENTRY-2 field on the Global Extension screen. The TABLE ENTRY-7 through TABLE ENTRY-9 fields are not used for this extension.

GROUP — The number of the load group associated with the state entered in the STATE NUMBER field on the screen.

Field Length: 1–4 numeric characters
Required Field: No
Default Value: 0

STATE NUMBER — The number of the extension state as specified in the EXTENSION STATE 2 field on the Cash Accept State screen. Valid values are 0–254 and 256–750.

Field Length: 1–3 numeric characters
Required Field: No
Default Value: 0

STATE TYPE — A code indicating the current state screen. The value Z indicates the Global Extension state.

Field Length: System protected

TABLE ENTRY-2 (Good Next State Number) — The screen that appears when the deposit function has been selected. Valid values are 0–254 and 256–750.

Field Length: 1–3 numeric characters
Required Field: No
Default Value: 0
SSB Feature: Cash accept

TABLE ENTRY-3 (Cancel Next State Number) — The screen that appears when the cardholder presses the CANCEL key to stop the cash deposit transaction. Valid values are 0–254 and 256–750.

Field Length: 1–3 numeric characters
Required Field: No
Default Value: 0
SSB Feature: Cash accept

TABLE ENTRY-4 (Device Error Next State Number) — The screen that appears when an exception has occurred, which may require subsequent host interaction. Valid values are 0–254 and 256–750.

Field Length: 1–3 numeric characters
Required Field: No
Default Value: 0
SSB Feature: Cash accept

TABLE ENTRY-5 (Timeout Next State Number) — The screen that appears when a cardholder fails to insert notes before period of time specified in the terminal (timer 77) expires. Valid values are 0–254 and 256–750.

Field Length: 1–3 numeric characters
Required Field: No
Default Value: 0
SSB Feature: Cash accept

TABLE ENTRY-6 (Notes at Refund Slot Next State Number) — The screen that appears when the notes remain in the refund slot after the period of time specified in the terminal (timer 78) expires. Valid values are 0–254 and 256–750.

Field Length: 1–3 numeric characters
Required Field: No
Default Value: 0
SSB Feature: Cash accept

Extension 3 to State >

The third extension to the Cash Accept State screen contains a list of currency denomination templates to be accepted by this state. The list is expressed as a 15-byte bitmap (characters 0–9 and A–F) using positions corresponding to entries within the ATM's internal PCBNA.INI file. These field descriptions are summarized in this section from the *NCR NDC+ Programmer's Reference Manual*. Each field is input as a table entry on the Global Extension screen. For example, the Set Denominations 0 - 11 data (shown below in parentheses) are entered in the TABLE ENTRY-2 field on the Global Extension screen. The TABLE ENTRY-7 through TABLE ENTRY-9 fields are not used for this extension.

GROUP — The number of the load group associated with the state entered in the STATE NUMBER field on the screen.

Field Length: 1–4 numeric characters
Required Field: No
Default Value: 0

STATE NUMBER — The number of the extension state as specified in the EXTENSION STATE 3 field on the Cash Accept State screen. Valid values are 0–254 and 256–750.

Field Length: 1–3 numeric characters
Required Field: No
Default Value: 0

STATE TYPE — A code indicating the current state screen. The value Z indicates the Global Extension state.

Field Length: System protected

TABLE ENTRY-2 (Set Denominations 0 - 11) — The three ASCII characters represent three bitmaps, beginning with the rightmost character. The individual bits set the denominations to active or inactive. The values are listed in reverse order (11 on the left and 0 on the right). For example, a value of “421” corresponds to binary 0100 0010 0001 and activates 1, 6, and 11 in the PCBNA. INI file. Valid values are 0–9 and A–F.

Field Length: 1–3 alphanumeric characters
Required Field: No
Default Value: 0
SSB Feature: Cash accept

TABLE ENTRY-3 (Set Denominations 12 - 23) — The three ASCII characters represent three bitmaps, beginning with the rightmost character. The individual bits set the denominations to active or inactive. The values are listed in reverse order (23 on the left and 12 on the right). Valid values are 0–9 and A–F.

Field Length: 1–3 alphanumeric characters
Required Field: No
Default Value: 0
SSB Feature: Cash accept

TABLE ENTRY-4 (Set Denominations 24 - 35) — The three ASCII characters represent three bitmaps, beginning with the rightmost character. The individual bits set the denominations to active or inactive. The values are listed in reverse order (35 on the left and 24 on the right). Valid values are 0–9 and A–F.

Field Length: 1–3 alphanumeric characters
Required Field: No
Default Value: 0
SSB Feature: Cash accept

TABLE ENTRY-5 (Set Denominations 36 - 47) — The three ASCII characters represent three bitmaps, beginning with the rightmost character. The individual bits set the denominations to active or inactive. The values are listed in reverse order (47 on the left and 36 on the right). Valid values are 0–9 and A–F.

Field Length: 1–3 alphanumeric characters
Required Field: No
Default Value: 0
SSB Feature: Cash accept

TABLE ENTRY-6 (Set Denominations 48 - 50) — The three ASCII characters represent three bitmaps, beginning with the rightmost character. The individual bits set the denominations to active or inactive. The values are listed in reverse order (50 on the left and 48 on the right). Valid values are 0–9 and A–F.

Field Length: 1–3 alphanumeric characters
Required Field: No
Default Value: 0
SSB Feature: Cash accept

Extension 1 to State w

The first extension to the Check Accept State screen contains screen numbers used in cardholder dialog during execution of this state. These field descriptions are summarized in this section from the *NCR NDC+ Programmer's Reference Manual*. Each field is input as a table entry on the Global Extension screen. For example, the Please Insert Check data (shown below in parentheses) are entered in the TABLE ENTRY-2 field on the Global Extension screen. The TABLE ENTRY-9 field is not used for this extension.

GROUP — The number of the load group associated with the state entered in the STATE NUMBER field on the screen.

Field Length: 1–4 numeric characters
Required Field: No
Default Value: 0

STATE NUMBER — The number of the extension state as specified in the EXTENSION STATE 1 field on the Check Accept State screen. Valid values are 0–254 and 256–750.

Field Length: 1–3 numeric characters
Required Field: No
Default Value: 0

STATE TYPE — A code indicating the current state screen. The value Z indicates the Global Extension state.

Field Length: System protected

TABLE ENTRY-2 (Please Insert Check Screen) — The number of the screen that appears when the CPM has been successfully enabled or re-enabled to accept a cardholder's check deposit.

Field Length: 1–3 numeric characters
Required Field: No
Default Value: 0
SSB Feature: Check accept

TABLE ENTRY-3 (Processing Check Screen) — The number of the screen that appears when the check has been successfully entered into the CPM.

Field Length: 1–3 numeric characters
Required Field: No
Default Value: 0
SSB Feature: Check accept

TABLE ENTRY-4 (Unacceptable Check Screen) — The number of the screen that appears when the check jams.

Field Length: 1–3 numeric characters
Required Field: No
Default Value: 0
SSB Feature: Check accept

TABLE ENTRY-5 (Incorrect Orientation Screen) — The number of the screen that appears when the check has been inserted the wrong way.

Field Length: 1–3 numeric characters
Required Field: No
Default Value: 0
SSB Feature: Check accept

TABLE ENTRY-6 (Further Processing Screen) — The number of the screen that appears after the Processing Check screen appears. This screen may be used to display the lifted images.

Field Length: 1–3 numeric characters
Required Field: No
Default Value: 0
SSB Feature: Check accept

TABLE ENTRY-7 (Check Captured Screen) — The number of the screen which that when the check has been captured, which is usually the case if the check is returned to the customer but not taken. This screen appears for a period of time specified in the terminal (timer 87).

Field Length: 1–3 numeric characters
Required Field: No
Default Value: 0
SSB Feature: Check accept

TABLE ENTRY-8 (Device Error Screen) — The number of the screen that appears when a hardware error, such as a note jam condition, occurs and the transaction cannot continue. This screen appears for 15 seconds.

Field Length: 1–3 numeric characters
Required Field: No
Default Value: 0
SSB Feature: Check accept

Extension 2 to State w

The second extension to the Check Accept State screen contains state numbers directing the flow of cardholder dialog leaving this state. These field descriptions are summarized in this section from the *NCR NDC+ Programmer's Reference Manual*. Each field is input as a table entry on the Global Extension screen. For example, the Check Already Present Next State data (shown below in parentheses) are entered in the TABLE ENTRY-2 field on the Global Extension screen. The TABLE ENTRY-7 through TABLE ENTRY-9 fields are not used for this extension.

GROUP — The number of the load group associated with the state entered in the STATE NUMBER field on the screen.

Field Length: 1–4 numeric characters
Required Field: No
Default Value: 0

STATE NUMBER — The number of the extension state as specified in the EXTENSION STATE 2 field on the Check Accept State screen. Valid values are 0–254 and 256–750.

Field Length: 1–3 numeric characters
Required Field: No
Default Value: 0

STATE TYPE — A code indicating the current state screen. The value Z indicates the Global Extension state.

Field Length: System protected

TABLE ENTRY-2 (Check Already Present Next State) — The exit screen that appears when the check is already in the ATM. Use the Close State to perform error recovery. Valid values are 0–254 and 256–750.

Field Length: 1–3 numeric characters
Required Field: No
Default Value: 0
SSB Feature: Check accept

TABLE ENTRY-3 (No Exception Next State Number) — The ATM proceeds to this state if the check is accepted and processed without any errors. Use the Information Entry state to prompt the cardholder to enter the amount on their check or to display the image that was lifted from the check. Valid values are 0–254 and 256–750.

Field Length: 1–3 numeric characters
Required Field: No
Default Value: 0
SSB Feature: Check accept

TABLE ENTRY-4 (Exception Next State Exit State Number) — The ATM proceeds to this state if an exception has occurred, such as a physically unacceptable check jams in the device. Use the Close State to perform error recovery. Valid values are 0–254 and 256–750.

Field Length: 1–3 numeric characters
Required Field: No
Default Value: 0
SSB Feature: Check accept

TABLE ENTRY-5 (Customer Cancel/Timeout Next State Number) — The ATM proceeds to this state if either the cardholder has failed to insert a physically acceptable check within the allotted time or number of retry attempts, or when an exception has occurred that does not require host intervention. Use the 4 or 8 FDK Selection Function State. Valid values are 0–254 and 256–750.

Field Length: 1–3 numeric characters

Required Field: No
Default Value: 0
SSB Feature: Check accept

TABLE ENTRY-6 (Check Captured Next State Number) — The ATM proceeds to this state if the customer has failed to retrieve a check that has been returned to them. As a result, the check is cleared to bin 2. Valid values are 0–254 and 256–750.

Field Length: 1–3 numeric characters
Required Field: No
Default Value: 0
SSB Feature: Check accept

Screen Data Format Screen

The Screen Data Format screen allows for customization of screen display information by controlling the appearance of the display screen, character size and placement, special graphics, control characters, and character blinking. Refer to the *BASE24-atm NCR 5XXX Device Support Manual* for information on the Screen Data Format screen. The *NCR NDC+ Programmer's Reference Manual* contains additional documentation about the display screens and the CNFG5070.

The SSB Device Handler Extension also provides the means for displaying a scanned image of the document that the cardholder inserted into the terminal. SSB-specific screens are provided in the sample CNFG5070 that is provided with the SSB Device Handler Extension.

- The Check Amount Entry screen (#224) and the CAV Misread Re-Enter Amount screen (#261) display a partial image of the courtesy amount area of the document to the cardholder. The partial image file name in these screens should be updated to reflect the partial image file you specified when building your DDF.
- Screen #250 is used to display the Front Grey Level (Reduced) document image to the cardholder. The grey level image file name in these screens should be updated to reflect the grey level image file you specified when building your DDF.

The file names for these images are displayed on the left-hand side of the Screen Data Format screen.

Financial Institution Table Screen

The FIT is a set of data and instructions used in the PIN encryption and verification process. Since Super Teller cards and check-cashing cards have unique prefixes, a new FIT entry for each new prefix is required with a modified value in the PSTDX field that points to an entry in either the FIT Switch State table or the Enhanced FIT Switch State table. Refer to the *BASE24-atm NCR 5XXX Device Support Manual* for information on the Financial Institution Table screen.

6: Daily Operations

Also included in this section are instructions for daily servicing of the terminal and viewing BASE24 files, and how these maintenance functions differ because of SSB.

The self-service banking (SSB) product requires operational support after it is installed and configured. This operational support includes the following:

- Servicing the terminal
- BASE24-atm Transaction Log File (TLF) perusal
- Process control commands
- File refresh
- DCT balancing
- Terminal status

The following pages describe the ongoing operational functions that support the SSB modules.

Servicing the Terminal

To keep track of the checks accepted at the terminal, the SSB Device Handler Extension provides for the use of the Check Proof List File (CPLF). Contents of the file can be printed at the terminal using an administrative check proof list transaction at the terminal or using a command from the Device Control Terminal (DCT). CPLF records can also be deleted. Refer to section 2 of this manual for more information on the CPLF and for an example of the report.

When the check proof list function is performed using the DCT, the check proof list for all check pockets or bins is printed on the journal printer and all CPLF records are automatically deleted. The check proof list cannot be printed on the receipt printer when the DCT command is performed.

When the check proof list transaction is performed using an administrative transaction at the terminal, the check proof list can be printed on the receipt printer, the journal printer, or both.

With administrative transactions performed at the terminal, service personnel can enter a code identifying the check bin for which the check proof list is to be printed. The ATM-DH-CHK-BIN-THRHLDPARAM in the Logical Network Configuration File (LCONF) determines which bins are used for sorting checks for the SSB Device Handler Extension. The BSF permits the check-issuing institution to define which bins are used for sorting checks for the SSB Enhanced Check Processing Application. Valid values are as follows:

Code	Bin	Description
0	0	Envelope/reject bin. Used as an overflow bin when one of the other bins is unavailable (for example, full).
1	1	Pocket A. Contains checks with amounts equal to or less than the amount specified in the ATM-DH-CHK-BIN-THRHLDPARAM in the LCONF, or the amount as specified in the BSF.
2	2	Pocket B. Contains checks with amounts greater than the amount specified in the ATM-DH-CHK-BIN-THRHLDPARAM in the LCONF, or the amount as specified in the BSF.
3	3	Pocket C. Contains checks as specified by the BSF. Note: Bin 3 is available only on NCR 5665 terminals with the SSB Enhanced Check Processing Application.
9		All bins.

If there are no CPLF records for the bin selected, the terminal prompts service personnel to select another administrative transaction. This action occurs if an invalid bin number is entered or if no check proof list exists for the check bin entered.

Performing a Check Proof List Transaction Using the DCT

The following pages contain instructions for performing a check proof list transaction using the Device Control Terminal (DCT). Refer to the ***BASE24 Device Control Manual*** for more information on this screen.

To perform a check proof list transaction using the DCT, you must do the following steps:

1. Move to the NCR 5XXX Load Commands screen from DCT screen 45.
2. Enter the terminal ID and the financial institution identifier in the ATM TERMINAL ID and FIID fields.
3. Close the terminal by pressing the **F5** key. If the check proof list print DCT command is sent while the terminal is open, a log message is generated and the command is rejected.
4. Press the **F8** key to print the check proof list information.

After the check proof list has been printed at the terminal, the NCR 5XXX Device Handler process logs a message indicating that the check proof list command completed.

5. Open the terminal by pressing the **F3** key.

Performing a Check Proof List Transaction Using the Terminal

The steps necessary to print a check proof list at the terminal are described below.

1. Initiate a standard customer transaction at the terminal using an administrative card. The transaction is sent to the BASE24-atm Authorization process to verify the card.

When the card is verified, the terminal displays the following prompt:

SELECT ADMINISTRATIVE FUNCTION

2. Select the “PRINT CHECK PROOF LIST” transaction.

The following prompt is displayed:

```
PLEASE SELECT THE PRINTER  
LOCATION FOR  
THE CHECK PROOF LIST
```

3. Select the desired printer. When the check proof list transaction is performed using an administrative transaction at the terminal, the check proof list can be printed on the receipt printer, the journal printer, or both.

After you select the printer, the following prompt is displayed:

```
PLEASE ENTER A SPECIFIC  
CHECK BIN NUMBER (0, 1, 2 OR 3)  
OR ENTER 9 FOR ALL CHECK BINS
```

4. Enter the number of the check bin for which the check proof list is to be printed or enter 9 to print a check proof list for all bins. Note that bin number 3 is available only on NCR 5665 terminals that are running the SSB Enhanced Check Processing Application.

If there are no CPLF records for the bin or bins selected, the terminal prompts you to select another administrative transaction. This action occurs if an invalid bin number is entered or if no check proof list exists for the check bin entered.

After you enter the bin number, the following prompt is displayed:

```
SHOULD THE CHECK PROOF LIST  
FILE BE RESET AFTER IT IS  
PRINTED SUCCESSFULLY?
```

5. Select whether the check proof list records are to be deleted after the terminal prints the records or retained for future printing.

After you make the last selection, the transaction is sent to the BASE24-atm system for a second time. When the BASE24-atm Authorization process approves the transaction, the terminal is closed and the check proof list is printed at the printers specified in step 3. When the check proof list has been printed, the terminal is reopened automatically.

If the printer requested is unavailable at any point during the check proof list transaction, the transaction is denied. When the check proof list is being printed on both printers, the transaction is denied if either printer is unavailable.

DCT Balancing

A subtotals administrative request can be performed using the Device Control Terminal (DCT) for the current cash and standard balancing methods. This request displays subtotals for each hopper specified in the terminal. These subtotals can be displayed on the Balance Current Cash screen (DCT screen 8) or on the Balance Standard Cash screen (DCT screen 9). Refer to the ***BASE24 Device Control Manual*** for more information on these screens.

A subtotals request displays subtotals for each hopper and also includes deposit bin totals on DCT screens 8 and 9. These screens display all four of the coin hoppers, in addition to displaying the four bill hoppers if the Coin Dispenser Module (CDM) is installed. The two additional hoppers are displayed on a second screen because only six hoppers can be displayed at one time. If the enhanced document bin sorting feature has been configured, deposit bin totals also are displayed on the second screen.

Viewing the Transaction Log File

All transactions occurring for each BASE24 processing day at terminals throughout the logical network are logged to the BASE24-atm Transaction Log File (TLF). The TLF records (one for each cardholder transaction and one for each terminal balancing transaction) are maintained by the BASE24 product for a set number of days. TLF information can be perused by card and member number or by terminal identifier depending on the key entered by the operator. For complete information on the TLF, refer to the ***BASE24-atm Files Maintenance Manual***.

With the SSB Enhanced Check Processing Application, the number and amount of checks in each terminal depository bin can be displayed on the TLF perusal screen. To ensure that the bin totals are displayed, the Self-Service Banking Check Terminal Settlement token must be logged to the TLF. Configuring the Token File (TKN) is described in section 4.

Multiple screen pages are displayed for perusing the detailed information on balancing transactions in the TLF. To access the detailed screens, place the cursor to the left of the transaction summary line, and press the **F4** key. Balancing transactions for NCR terminals can have up to five screen pages, depending on the SSB features that you have configured.

When a terminal balancing transaction is displayed, information about hoppers 1, 2, and 3 is shown on the first hopper overlay screen, with information about hoppers 4, 5, and 6 shown on the next hopper overlay screen (these two screens are described in the ***BASE24-atm Files Maintenance Manual*** under the topic “Balancing Detail Records—Hopper Overlays”). If you have the Coin Dispenser Module (CDM) configured in the SSB Device Handler Extension, information about hoppers 7 and 8 is shown on the third hopper overlay screen. The fourth screen displays ATM totals, and is described in the ***BASE24-atm Files Maintenance Manual*** (under the topic “Balancing Detail Records—Deposit Overlays”). If the Self-Service Banking Check Terminal Settlement token is logged and the terminal owner supports the SSB Enhanced Check Processing Application, the depository bin totals are displayed on the fifth screen, Balancing Detail Records—SSB Deposit Overlays. You can move between these five screens by pressing the **F9** and **F11** keys.

The following TLF screens are described below:

- Balancing Detail Records—Hopper Overlays (for hoppers 7 and 8)
- Balancing Detail Records—SSB Deposit Overlays

TLF Balancing Detail Records—Hopper Overlays (for hoppers 7 and 8)

The TLF Balancing Detail Records—Hopper Overlays screen for coin hoppers 7 and 8 is shown below, followed by field descriptions.

```

BASE24-ATM  TRAN LOG LIST          LLLL  FFFF  YY/MM/DD  HH:MM  02 OF 02
CARD:                      FIID:                      MEMBER NUM:
TERMINAL:                  LNET:                      DATE (YYMMDD) :

PAN:                      DATE:                      TIME:
TERMID:                   TIME OFFSET:                <tran type>

                                HOPPER #7          HOPPER #8
BEGIN CASH                  0.00                0.00
INCREASE CASH               0.00                0.00
DECREASE CASH               0.00                0.00
CASH OUT                    0.00                0.00
END CASH                    0.00                0.00

MORE DETAIL INFORMATION IS AVAILABLE FOR THIS TRANSACTION.
***** BASE24 *****
FILE DESTINATION:          NEW LOGICAL NETWORK ID:
F5-GOTO SUMMARY  F6-NXT REC  F7-PRV REC  F9-NXT PAGE  F11-PRV PAGE  F12-HELP

```

PAN — The administrative cardholder's primary account number (PAN). If the balancing transaction occurred as the result of a forced cutover, this field is blank. The value 255 255 appears in this field for administrative transactions initiated from the Device Control Terminal (DCT).

Field Length: System protected
Data Name: TLF.HEAD.CRD.PAN

DATE — The date the transaction entered the BASE24 system. The format of the date, DD/MM or MM/DD, is determined by the value of the DATE-DISPLAY-TYPE parameter in the Logical Network Configuration File (LCONF).

Field Length: System protected
Data Name: TLF.TERM-SETL.ADMIN-DAT

TIME — The time, in hh:mm:ss format, that the transaction entered the BASE24 system. The time displayed includes the time offset.

Field Length: System protected
Data Name: TLF.TERM-SETL.ADMIN-TIM

TERMID — The name of the terminal associated with the transaction. This is the same as the terminal name entered in the CARD or TERMINAL field, without the T or E prefix.

Field Length: System protected
Data Name: TLF.HEAD.TERM.TERM-ID

TIME OFFSET — The time difference between the ATM and the HP NonStop processor location. The value is the signed number of minutes to be added or subtracted from the HP NonStop time to obtain the terminal local time.

Field Length: System protected
Data Name: TLF.TERM-SETL.TIM-OFST

<tran type> — The type of transaction associated with this record. This field does not have a caption, but it is displayed directly below the TIME field.

Field Length: System protected
Data Name: TLF.TERM-SETL.ADMIN-CDE

HOPPER # — Designates the hopper number for which the information is applicable.

Field Length: System protected
Data Name: Not applicable

BEGIN CASH — The amount of currency in the hopper at the start of the current balancing period.

Field Length: System protected
Data Name: TLF.ADDL-HOPR-TKN.BEG-CASH

INCREASE CASH — The amount of currency added to the hopper through administrative midpoint adjustment transactions since the last balancing transaction.

Field Length: System protected
Data Name: TLF.ADDL-HOPR-TKN.CASH-INCR

DECREASE CASH — The amount of currency removed from the hopper through administrative midpoint adjustment transactions since the last balancing transaction.

Field Length: System protected
Data Name: TLF.ADDL-HOPR-TKN.CASH-DECR

CASH OUT — The amount of currency dispensed from the hopper between terminal balancing procedures. Dispensing includes the amount withdrawn by customers and the amount removed by administrative mid-point adjustment transactions.

Field Length: System protected
Data Name: TLF.ADDL-HOPR-TKN.CASH-OUT

END CASH — The amount of cash in the hopper at the time of the balancing transaction.

Field Length: System protected
Data Name: TLF.ADDL-HOPR-TKN.END-CASH

TLF Balancing Detail Records—SSB Deposit Overlays

TLF Balancing Detail Records—SSB Deposit Overlays for depository bin totals is shown below, followed by its field descriptions.

```

BASE24-ATM   TRAN LOG LIST           LLLL  FFFF  YY/MM/DD  HH:MM  02 OF 02
CARD:                FIID:                MEMBER NUM:
TERMINAL:           LNET:                DATE (YYMMDD) :

PAN:                DATE:                TIME:
                                <tran type>

DEPOSITORY BIN NUMBER      COUNT      AMOUNT
0                          0          0.00
1                          0          0.00
2                          0          0.00
3                          0          0.00

NO MORE DETAIL INFORMATION IS AVAILABLE FOR THIS TRANSACTION.
***** BASE24 *****
FILE DESTINATION:          NEW LOGICAL NETWORK ID:
F5-GOTO SUMMARY  F6-NXT REC  F7-PRV REC  F9-NXT PAGE  F11-PRV PAGE  F12-HELP

```

DEPOSITORY BIN NUMBER — The terminal depository bin numbers of the terminal specified by the user.

Field Length: System protected

Data Name: Not applicable

COUNT — The number of checks retained in the depository bin specified by the DEPOSITORY BIN NUMBER.

Field Length: System protected

Data Name: TLF.SSBC-TERM-SETL-TKN.DEP-BINx.NUM-CHK

AMOUNT — The amount of the checks retained in the depository bin specified by the DEPOSITORY BIN NUMBER.

Field Length: System protected

Data Name: TLF.SSBC-TERM-SETL-TKN.DEP-BINx.AMT-CHK

Process Commands

The network control operator's primary tool for controlling the BASE24 system is network control commands. An operator can issue inquiries and commands to the network while it is operating from a network control facility. Certain network commands can also be issued using the Device Control Terminal (DCT).

Two of the application-specific files used with the SSB Enhanced Check Processing Application require the use of network commands following any file modifications.

Corporate Check File

The Corporate Check File (CCF) can be reinitialized by issuing the INITCCF command or the Warmboot All (9501) command from the Network control facility. The BASE24-atm Authorization process places the CCF in extended memory during initialization. Therefore, whenever changes are made to the CCF, the Authorization process requires a Warmboot All command or an INITCCF command to reinitialize the extended memory segment for the CCF.

Bin Sort File

A Warmboot command must be issued to the NCR Device Handler process following any modifications to the Bin Sort File (BSF).

For a complete description of Network control commands, refer to the ***BASE24 Text Command Reference Manual*** or the ***BASE24 Device Control Manual***.

File Refreshing

The BASE24 Refresh process reads the following assigns in the Logical Network Configuration File (LCONF):

- SSB-CCF
- SSB-CSF

There is one Corporate Check File (CCF) and one Check Status File (CSF) per logical network; therefore, no refresh group is required.

The Refresh process supports the SSB Enhanced Check Processing Application segment of the following files:

- Cardholder Authorization File (CAF)
- Negative Card File (NEG)

For complete information on performing file refreshes, refer to the ***BASE24 Refresh and Extract Operators Manual***.

Viewing the Status of the Terminal

Detailed status screens for NCR terminals are displayed when you press the **Shift-F2** keys from DCT screens 7, 8, or 9. Certain fields on these screens are specific to an NCR 56XX- and 58XX-series terminal that is equipped with the Check Processing Module (CPM) and is using the BASE24-atm self service banking (SSB) add-on product.

For complete information about the NCR 5XXX-series status fields, refer to the *NCR NDC+ Programmer's Reference Manual*. For more information on the DCT screens, refer to the *BASE24 Device Control Manual*.

The Hardware Fitness screen (screen 1) provides the status, or hardware fitness, for all possible devices at the terminal including those devices having a status of NO ERROR.

The Hardware Configuration screen (screen 2) displays the hardware configuration of the specified terminal.

The Supplies Status screen (screen 3) displays the supply status for all terminal components.

The Alarm Sensors screen (screen 4) displays the state of the sensors at the terminal.

ACI Worldwide, Inc.

A: SSB Reports

This section describes the reports related to one or more of the BASE24-atm self-service banking (SSB) applications. Four standard BASE24-atm reports include transaction information related to the SSB product. In this section, the descriptions for the reports are limited to an explanation of how each report differs from the standard BASE24-atm reports. For a complete explanation of these and other standard BASE24-atm reports, refer to the ***BASE24-atm Settlement and Reporting Manual***.

The following BASE24-atm reports are included in this section:

- Daily Terminal Detail Transaction Log (STAT06-B24)
- Daily Institution Detail Transaction Log (STAT07-B24)
- Daily Terminal Depository Report (STAT08-B24)
- Transaction Detail Report for Interchange (STAT09-XXXX)

SSB Report Data

The reports described in this appendix are provided as a part of the settlement and reporting process for the BASE24-atm product. These reports reflect cardholder and terminal activity on both a daily and monthly basis. For BASE24-atm customers that have purchased any of the self-service banking modules, these reports also provide information on self-service banking activity in a BASE24-atm system.

The SSB report headings and report data that are displayed on the BASE24-atm reports depend on the following:

- The SSB applications that the institution supports as indicated in the Institution Definition File (IDF).
- The SSB tokens that have been configured for logging to the BASE24-atm Transaction Log File (TLF).
- The SSB-related transactions that have occurred for the reporting period.

For example, the bin sequence number is displayed only if you have configured the SSB Enhanced Check Processing Application and the bin sort feature, and you have configured the Self-Service Banking Check token for logging.

Refer to the *BASE24 Tokens Manual* for a complete description of SSB tokens.

The standard BASE24-atm reports that are modified for the self-service banking product are described on the following pages.

Daily Terminal Detail Transaction Log

The Daily Terminal Detail Transaction Log (STAT06-B24) is a daily report which provides a detailed listing by terminal of all cardholder activity occurring at each terminal owned by this institution.

A sample of the report is shown on the following pages, followed by descriptions of the SSB-specific fields. The SSB-specific fields are highlighted on the sample reports. Refer to the ***BASE24-atm Settlement and Reporting Manual*** for descriptions of the other fields.

Cardholder Transactions

The first page of the sample report shows the format for cardholder transactions. The SSB cardholder transaction data included on this report depends on which SSB applications that are configured and whether the following tokens have been logged to the BASE24-atm Transaction Log File (TLF):

- MICR Data token
- Self-Service Banking Base token
- Self-Service Banking Check token

Administrative Transactions

The second page of the sample report shows the format for administrative transactions. The SSB administrative transaction data included on this report depends on which SSB applications that are configured and whether the Self-Service Banking Check Terminal Settlement token has been logged to the BASE24-atm Transaction Log File (TLF).

STAT06--B24

INSTITUTION

DATE YY/MM/DD

ID NUMBER

PAGE 1

BNKA

BANK A

TERMINAL ID NUMBER

T000000001

PAN	MBR	DESCRIP	RESP	RC	SEQ	DATE	TIME	OFST	CARD	LN	AMT
FROM ACCT	TO ACCT										
SPLIT DEP AMT 1	SPLIT DEP AMT 2	<st>	BIN	SEQ	NUM	MICR					
33010000000000000000	000	DEP CHK/CB	3	001	313	12/07	14:10	+000	LNET		80.58
00000000000000000000	3301101										
0.00	0.00	ST	20001		T012345678T11122233344455*						
33010000000000000000	000	DEP SAV/CB	0	3	001	12/07	15:39	+000	LNET		100.58
00000000000000000000	3311101				314						
0.00	0.00		10002		T987654321T000000111100000*						

* INDICATES AMOUNT REVERSED, F INDICATES FORCE POST

STAT06-B24									
LLLL DAILY TERMINAL DETAIL TRANSACTION LOG									
INSTITUTION		ID NUMBER		NAME		DATE YY/MM/DD		PAGE 2	
BNKA		BANK A		TERMINAL ID NUMBER		T00000001			
PAN	MBR	DESCRIP	RESP RC	SEQ	DATE	TIME	OFST	CARD LN	AMT
FROM ACCT	TO ACCT								
SPLIT DEP AMT 1	SPLIT DEP AMT 2	BIN	SEQ	NUM	MICR				

LLLL									
MM/DD HH:MM +0000 FORCED CUTOVER									
BEGINNING CASH HOPPER #									
CASH INCREASE HOPPER #									
CASH DECREASE HOPPER #									
CASH OUT HOPPER #									
ENDING CASH HOPPER #									
CONTENT'S HOPPER #									
NUMBER/AMOUNT DEPOSITS									
DEPOSITORY 0									
DEPOSITORY 1									
DEPOSITORY 3									
BIN 0									
BIN 1									
BIN 2									
BIN 3									
NUMBER/AMOUNT PAY ENCL									
NUMBER MESSAGES TO FI									
NUMBER/AMT DEPOSITORY									
CARDS RETAINED									
* INDICATES AMOUNT REVERSED, F INDICATES FORCE POST									
*** END OF REPORT ***									

Format Description Page 1

The information on this page of the report consists of detail transaction information.

DESCRIP — A brief description of the transaction, based on the transaction code. Examples of valid values for SSB transactions are as follows:

DEP TO CHK = Deposit to checking
DEP SAV/CB = Deposit to savings with cash back
DEP TO C/S = Split deposit to a checking account and a savings account
CASH CHECK = Cash check

<d> — An unlabeled code appended to the description above, indicating the deposit method. This code is based on the transaction code. If the twelfth character of the description is not a number, the transaction is not a deposit. Valid values are as follows:

0 = The check or checks were deposited in an envelope.
1 = The check or checks were deposited in the Securomatic deposit.
3 = The check was inserted directly into the terminal.

SPLIT DEP AMT 1 — The Account 1 amount involved in a split deposit transaction.

Data Name: TLF.AUTH-AMT-1

SPLIT DEP AMT 2 — The Account 2 amount involved in a split deposit transaction.

Data Name: TLF.AUTH-AMT-2

<st> — An unlabeled field identifying transactions performed with a Super Teller card. The value ST appears when a Super Teller card is used. Otherwise, the field is blank.

Data Name: TLF.SSBB-TKN.SUPER-TLR-IND

BIN SEQ NUM — The depository bin sequence number in the terminal as assigned by the Device Handler process. The first byte indicates the depository bin position. The remainder of the field contains a sequence number ranging from 0001 to 9999.

Data Name: TLF.SSBC-TKN.BIN-SEQ-NUM

MICR — The Magnetic Ink Character Recognition (MICR) data from a check-related transaction. This includes the routing and transit number, the account number, and the check serial number.

Data Name: TLF.MICR-DATA-TKN.MICR-DATA

Format Description Page 2

The information on this page of the report consists of administrative transaction information. The format of this portion of the report depends on the administrative transaction. The example report format presented in this manual illustrates the format for administrative transaction that initiate terminal cutover.

DEPOSITORY 3 — The number and amount of check-related transactions in the depository. This field is calculated by adding the four bin count fields.

BIN 0 — The number and amount of check-related transactions for bin 0 (envelope/reject bin).

Data Name: TLF.SSBC-TERM-SETL-TKN.DEP-BIN0.NUM-CHK

Data Name: TLF.SSBC-TERM-SETL-TKN.DEP-BIN0.AMT-CHK

BIN 1 — The number and amount of check-related transactions for bin 1 (pocket A).

Data Name: TLF.SSBC-TERM-SETL-TKN.DEP-BIN1.NUM-CHK

Data Name: TLF.SSBC-TERM-SETL-TKN.DEP-BIN1.AMT-CHK

BIN 2 — The number and amount of check-related transactions for bin 2 (pocket B).

Data Name: TLF.SSBC-TERM-SETL-TKN.DEP-BIN2.NUM-CHK

Data Name: TLF.SSBC-TERM-SETL-TKN.DEP-BIN2.AMT-CHK

BIN 3 — The number and amount of check-related transactions for bin 3 (pocket C).

Data Name: TLF.SSBC-TERM-SETL-TKN.DEP-BIN3.NUM-CHK

Data Name: TLF.SSBC-TERM-SETL-TKN.DEP-BIN3.AMT-CHK

Daily Institution Detail Transaction Log

The Daily Institution Detail Transaction Log (STAT07-B24) is a daily report that provides a detailed listing of all cardholder activity by institution. Transactions are listed in chronological order, according to the time they were initiated at the terminal.

The SSB transaction data included on this report depends on which SSB applications are configured and whether the following tokens have been logged to the BASE24-atm Transaction Log File (TLF).

- MICR Data token
- Self-Service Banking Base token
- Self-Service Banking Check token

A sample of the report is shown on the following pages, followed by descriptions of the SSB-specific fields. The SSB-specific fields are highlighted on the sample reports. Refer to the ***BASE24-atm Settlement and Reporting Manual*** for descriptions of the other fields.

STAT07-B24									
LLLL DAILY INSTITUTION DETAIL TRANSACTION LOG									
INSTITUTION		DATE YY/MM/DD							
ID NUMBER		PAGE 1							
BNKA		BANK A							
PAN	MBR	DESCRIPT	RESP RC	SEQ	DATE	TIME	OFST	TERM LN	AMT
FROM ACCT	TO ACCT			TERM					
SPLIT DEP AMT 1	SPLIT DEP AMT 2	<st>	BIN SEQ NUM	MICR					
3301000000000000	000	DEP CHK/CB 3	3 001	313	12/07	14:10	+000	LNET	80.58
0000000000000000	3301101			T000001					
0.00	0.00	ST	20001	T012345678T11122233344455*					
3301000000000000	000	DEP SAV/CB 0	3 001	314	12/07	15:39	+000	LNET	100.58
0000000000000000	3311101			T000002					
0.00	0.00		10001	T987654321T00000111100000*					
* INDICATES AMOUNT REVERSED, F INDICATES FORCE POST									

DESCRIP — A brief description of the transaction, based on the transaction code. Examples of valid values for SSB transactions are as follows:

DEP TO CHK = Deposit to checking
DEP SAV/CB = Deposit to savings with cash back
DEP TO C/S = Split deposit to a checking account and a savings account
CASH CHECK = Cash check

<dt> — An unlabeled code appended to the description above, indicating the deposit method. This code is based on the transaction code. If the twelfth character of the description is not a number, the transaction is not a deposit. Valid values are as follows:

0 = The check or checks were deposited in an envelope.
1 = The check or checks were deposited in the Securomatic deposit.
3 = The check was inserted directly into the terminal.

SPLIT DEP AMT 1 — The Account 1 amount involved in a split deposit transaction.

Data Name: TLF.AUTH-AMT-1

SPLIT DEP AMT 2 — The Account 2 amount involved in a split deposit transaction.

Data Name: TLF.AUTH-AMT-2

<st> — An unlabeled field identifying transactions performed with a Super Teller card. The value ST appears when a Super Teller card is used. Otherwise, the field is blank.

Data Name: TLF.SSBB-TKN.SUPER-TLR-IND

BIN SEQ NUM — The terminal depository bin sequence number as assigned by the Device Handler process. The first byte indicates the depository bin position. The remainder of the field contains a sequence number ranging from 0001 to 9999.

Data Name: TLF.SSBC-TKN.BIN-SEQ-NUM

MICR — The Magnetic Ink Character Recognition (MICR) data from a check-related transaction. This includes the routing and transit number, the account number, and the check serial number.

Data Name: TLF.MICR-DATA-TKN.MICR-DATA

Daily Terminal Depository Report

The Daily Terminal Depository Report (STAT08-B24) is a daily report that provides a complete listing, by terminal, of every approved depository transaction.

The SSB transaction data included on this report depends on which SSB applications are configured and whether the following tokens have been logged to the BASE24-atm Transaction Log File (TLF).

- MICR Data token
- Self-Service Banking Base token
- Self-Service Banking Check token
- Self-Service Banking Check Terminal Settlement token

A sample of the report is shown on the following pages, followed by descriptions of the SSB-specific fields. The SSB-specific fields are highlighted on the sample reports. Refer to the ***BASE24-atm Settlement and Reporting Manual*** for descriptions of the other fields.

DESCRIP — A brief description of the transaction, based on the transaction code. Examples of valid values for SSB transactions are as follows:

DEP TO CHK = Deposit to checking
DEP SAV/CB = Deposit to savings with cash back
DEP TO C/S = Split deposit to a checking account and a savings account
CASH CHECK = Cash check

<dt> — An unlabeled code appended to the description above, indicating the deposit method. This code is based on the transaction code. If the twelfth character of the description is not a number, the transaction is not a deposit. Valid values are as follows:

0 = The check or checks were deposited in an envelope.
1 = The check or checks were deposited in the Securomatic deposit.
3 = The check was inserted directly into the terminal.

SPLIT DEP AMT 1 — The Account 1 amount involved in a split deposit transaction.

Data Name: TLF.AUTH-AMT-1

SPLIT DEP AMT 2 — The Account 2 amount involved in a split deposit transaction.

Data Name: TLF.AUTH-AMT-2

<st> — An unlabeled field identifying transactions performed with a Super Teller card. The value ST appears when a Super Teller card is used. Otherwise, the field is blank.

Data Name: TLF.SSBB-TKN.SUPER-TLR-IND

BIN SEQ NUM — The terminal depository bin sequence number as assigned by the Device Handler process. The first byte indicates the depository bin position. The remainder of the field contains a sequence number ranging from 0001 to 9999.

Data Name: TLF.SSBC-TKN.BIN-SEQ-NUM

MICR — The Magnetic Ink Character Recognition (MICR) data from a check-related transaction. This includes the routing and transit number, the account number, and the check serial number.

Data Names: TLF.MICR-DATA-TKN.MICR-DATA

DEPOSITORY 3 — The number and amount of check-related transactions in the depository. This field is calculated by adding the four bin count fields.

BIN 0 — The number and amount of check-related transactions for bin 0.

Data Names: TLF.SSBC-TERM-SETL-TKN.DEP-BIN0.NUM-CHK
TLF.SSBC-TERM-SETL-TKN.DEP-BIN0.AMT-CHK

BIN 1 — The number and amount of check-related transactions for bin 1.

Data Names: TLF.SSBC-TERM-SETL-TKN.DEP-BIN1.NUM-CHK
TLF.SSBC-TERM-SETL-TKN.DEP-BIN1.AMT-CHK

BIN 2 — The number and amount of check-related transactions for bin 2.

Data Names: TLF.SSBC-TERM-SETL-TKN.DEP-BIN2.NUM-CHK
TLF.SSBC-TERM-SETL-TKN.DEP-BIN2.AMT-CHK

BIN 3 — The number and amount of check-related transactions for bin 3.

Data Names: TLF.SSBC-TERM-SETL-TKN.DEP-BIN3.NUM-CHK
TLF.SSBC-TERM-SETL-TKN.DEP-BIN3.AMT-CHK

Transaction Detail Report

The Transaction Detail Report (STAT09-XXXX) is a daily report that provides a complete listing of all interchange activity with the Interchange Interface process. This report is based on those transactions logged to the current day's Interchange Log File (ILF) and is initiated by the Interchange Interface process after the interchange has cut over to the new business day.

The SSB transaction data included on this report depends on which SSB applications are configured and whether the MICR Data token has been logged to the Interchange Log File (ILF).

A sample of the report is shown on the following pages, followed by descriptions of the SSB-specific fields. The SSB-specific fields are highlighted on the sample reports. Refer to the ***BASE24-atm Settlement and Reporting Manual*** for descriptions of the other fields.

STAT09-xxxx										TRANSACTION DETAIL REPORT FOR xxxxxxxxxxxxxxxxxxxxxxxx										DATE YY/MM/DD	
																				PAGE 1	

CARDHOLDER NUMBER		TRAN DESC		PST DAT		B24 DAT-TIM		B24 RESP		CRD LN		ATM FROM ACCT #		POS ACCT #		TRAN/BAL/ORIG AMOUNT					
TRM LN TRM ID		SEQUENCE #		TRACE #		SWI DAT-TIM		SWI RESP		RV CDE		ATM TO ACCT #		POS APPR CODE		COMPLETED AMOUNT					
ATM TRM OWNER/POS RETLR		TRM NAME-LOCATION		TRM CITY		TRM ST		PRD		B24 TYP		SWI TYP									
SPLIT DEP AMT 1		SPLIT DEP AMT 2		<st>		MICR															
11111111111111111111111111111111		DEP CHK/CB		3		YMMDD		MMDD-HHMMSS		7		000		CIR		000000000000000000000000					
LNET T000001		0001		056		MMDD-HHMMSS		A001		00		00		000000000000000000000000		.00-					
000000000000		BANK A				CITY		ATM		210		210				.00-					
0.00		0.00		ST		T012345678T11122233344455*															

DESCRIP — A brief description of the transaction, based on the transaction code. Examples of valid values for SSB transactions are as follows:

DEP TO CHK = Deposit to checking
DEP SAV/CB = Deposit to savings with cash back
DEP TO C/S = Split deposit to a checking account and a savings account
CASH CHECK = Cash check

<d> — An unlabeled code appended to the description above, indicating the deposit method. This code is based on the transaction code. If the twelfth character of the description is not a number, the transaction is not a deposit. Valid values are as follows:

0 = The check or checks were deposited in an envelope.
1 = The check or checks were deposited in the Securomatic deposit.
3 = The check was inserted directly into the terminal.

SPLIT DEP AMT 1 — The Account 1 amount involved in a split deposit transaction.

Data Name: TLF.AUTH-AMT-1

SPLIT DEP AMT 2 — The Account 2 amount involved in a split deposit transaction.

Data Name: TLF.AUTH-AMT-2

BIN SEQ NUM — The terminal depository bin sequence number as assigned by the Device Handler process. The first byte indicates the depository bin position. The remainder of the field contains a sequence number ranging from 0001 to 9999.

Data Name: TLF.SSBC-TKN.BIN-SEQ-NUM

MICR — The Magnetic Ink Character Recognition (MICR) data from a check-related transaction. This includes the routing and transit number, the account number, and the check serial number.

Data Name: TLF.MICR-DATA-TKN.MICR-DATA

ACI Worldwide, Inc.

Index

A

- Accept document
 - fields to configure in CNFG5070, [5-14](#)
- Accept Document screen Extension 1, [5-29](#)
- Accept Document screen Extension 2, [5-31](#)
- Accept Document screen Extension 3, [5-34](#)
- Accept Document State screen
 - example of screen, [5-14](#)
 - fields on screen, [5-14](#)
- Account Routing File (ARF)
 - configuring for SSB Enhanced Check Processing Application, [4-31](#)
 - fields on ARF screen 1, [4-32](#)
 - fields on ARF screen 2, [4-33](#)
 - file description, [4-31](#)
- Additional transaction support
 - feature overview, [2-2](#)
 - feature summary, [1-8](#)
 - fields to configure in ATD, [2-16](#)
 - receipts to configure in RCPT, [2-37](#), [2-38](#), [2-39](#), [2-40](#)
- ATM hardware options, [1-2](#)

B

- Base Application
 - configuration, [3-21](#)
 - product overview, [3-1](#)
 - summary, [1-11](#)
- BASE24-atm Terminal Data files (ATD)
 - configuring for SSB Device Handler Extension, [2-16](#)
 - configuring for SSB Enhanced ATM Application, [3-25](#)
 - configuring for SSB Enhanced Check Processing Application, [4-34](#)
 - data on receipts, [2-34](#), [4-79](#)
 - example of ATD screen 10, [2-21](#)
 - example of ATD screen 11, [3-28](#)
 - example of ATD screen 12, [2-26](#), [4-35](#)
 - fields on ATD screen 1, [3-25](#), [4-35](#)
 - fields on ATD screen 2, [2-16](#), [3-25](#)
 - fields on ATD screen 4, [2-17](#)
 - fields on ATD screen 5, [2-17](#)
 - fields on ATD screen 7, [3-26](#), [4-35](#)
 - fields on ATD screen 10, [2-21](#)
 - fields on ATD screen 11, [3-28](#)
 - fields on ATD screen 12, [2-26](#), [4-36](#)
 - fields on ATD screen 13, [3-6](#)
 - file description, [2-16](#), [3-25](#), [4-34](#)

- Bill dispensing
 - see* Configurable bill dispensing
- Bin Sort File (BSF)
 - configuring for SSB Enhanced Check Processing Application, [4-38](#)
 - daily operations, [6-11](#)
 - example of BSF screen 1, [4-39](#)
 - fields on BSF screen 1, [4-39](#)
 - file description, [4-38](#)
- Bin sorting
 - see* Document bin sorting; Enhanced document bin sorting
- Bunch Note Acceptor
 - feature summary, [1-10](#)

C

- Card Prefix File (CPF)
 - configuring for SSB Enhanced ATM Application, [3-33](#)
 - configuring for SSB Enhanced Check Processing Application, [4-41](#)
 - example of CPF screen 14, [4-45](#)
 - fields on CPF screen 1, [3-33](#), [4-42](#)
 - fields on CPF screen 4, [3-34](#), [4-43](#)
 - fields on CPF screen 14, [4-45](#)
 - file description, [3-33](#), [4-41](#)
- Card types
 - Check-cashing, [4-22](#)
 - Super Teller, [3-16](#)
- Cardholder Authorization File (CAF)
 - configuring for SSB Enhanced ATM Application, [3-36](#)
 - configuring for SSB Enhanced Check Processing Application, [4-52](#)
 - example of CAF screen 14, [3-39](#)
 - example of CAF screen 16, [4-60](#)
 - fields on CAF screen 1, [3-36](#), [4-53](#)
 - fields on CAF screen 8, [3-38](#), [4-54](#)
 - fields on CAF screen 14, [3-39](#)
 - fields on CAF screen 15, [4-56](#)
 - fields on CAF screen 16, [4-61](#)
 - file description, [3-36](#), [4-52](#)
- Cash accept
 - fields to configure in CNFG5070, [5-19](#)
- Cash Accept screen Extension 1, [5-36](#)
- Cash Accept screen Extension 2, [5-38](#)
- Cash Accept screen Extension 3, [5-40](#)

- Cash Accept State screen
 - example of screen, [5-19](#)
 - fields on screen, [5-19](#)
 - Check accept
 - fields to configure in CNFG5070, [5-24](#)
 - Check Accept screen Extension 1, [5-42](#)
 - Check Accept screen Extension 2, [5-45](#)
 - Check Accept State screen
 - example of screen, [5-24](#)
 - fields on screen, [5-24](#)
 - Check bins, [1-2](#)
 - see also* Document bin sorting
 - Check cashing transaction, [2-4](#)
 - Check deposit transaction, [2-4](#)
 - Check deposit with cash back transaction, [2-3](#)
 - Check imaging
 - configuration needed in DDF, [5-2](#)
 - feature overview, [2-5](#)
 - feature summary, [1-8](#)
 - fields to configure in ATD, [2-16](#)
 - Check processing
 - preapproved checks, [4-25](#)
 - predeclined checks, [4-25](#)
 - registered checks, [4-23](#)
 - stop payment verification, [4-24](#)
 - Check Processing Module
 - feature summary, [1-10](#)
 - Check Proof List File (CPLF)
 - check proof list using the DCT, [6-3](#)
 - check proof list using the terminal, [6-3](#)
 - Check proof listing
 - assigns to configure in LCONF, [2-30](#)
 - feature overview, [2-11](#)
 - feature summary, [1-10](#)
 - params to configure in LCONF, [2-31](#)
 - receipts to configure in RCPT, [2-42](#)
 - Check Status File (CSF)
 - configuring for SSB Enhanced Check Processing Application, [4-64](#)
 - example of CSF screen 1, [4-65](#)
 - fields on CSF screen 1, [4-66](#)
 - file description, [4-64](#)
 - Check-cashing cards
 - assigns to configure in LCONF, [4-76](#)
 - feature overview, [4-22](#)
 - feature summary, [1-15](#)
 - fields to configure in ATD, [4-35](#)
 - fields to configure in CAF, [4-53](#)
 - fields to configure in CCF, [4-70](#)
 - fields to configure in CPF, [4-42](#)
 - fields to configure in IDF, [4-72](#)
 - fields to configure in NEG, [4-78](#)
 - tokens to configure in TKN, [4-92](#)
 - Close State screen extension, [5-28](#)
 - CNFG5070
 - see* NCR 5XXX Configuration File (CNFG5070)
 - Coin Dispenser Module (CDM), [1-3](#), [2-9](#)
 - Coin dispensing
 - feature overview, [2-9](#)
 - feature summary, [1-9](#)
 - fields to configure in ATD, [2-16](#)
 - tokens to configure in TKN, [2-50](#)
 - Configurable bill dispensing
 - configurable dispense algorithm method, [3-6](#)
 - feature overview, [3-6](#)
 - feature summary, [1-12](#)
 - fields to configure in ATD, [3-25](#)
 - least bills method, [3-6](#)
 - thresholds method, [3-7](#)
 - Configurable depository print
 - configuration needed in DDF, [5-4](#)
 - feature overview, [3-13](#)
 - feature summary, [1-12](#)
 - fields to configure in ATD, [3-25](#)
 - receipts to configure in RCPT, [3-58](#)
 - Configurable dispense algorithm method of bill dispensing, [3-6](#)
 - Configurable zone verification
 - configuration needed in DDF, [5-3](#)
 - feature overview, [2-6](#)
 - feature summary, [1-9](#)
 - fields to configure in ATD, [2-16](#)
 - Corporate Check File (CCF)
 - configuring for SSB Enhanced Check Processing Application, [4-68](#)
 - daily operations, [6-11](#)
 - example of CCF screen 1, [4-69](#)
 - fields on CCF screen 1, [4-70](#)
 - file description, [4-68](#)
 - Courtesy amount verification (CAV)
 - configuration needed in DDF, [5-3](#)
 - feature overview, [2-7](#)
 - feature summary, [1-9](#)
 - fields to configure, [2-16](#)
 - fields to configure in CNFG5070, [5-11](#)
 - Courtesy Amount Verification State screen, [5-11](#)
- ## D
- Daily operations
 - DCT balancing, [6-5](#)
 - file refresh, [6-12](#)
 - log file perusal, [6-6](#)
 - operator commands, [6-11](#)
 - Deposit bins
 - see* Document bin sorting
 - Depository print
 - see* Configurable depository print
 - Detailed status of NCR 5XXX terminal, [6-13](#)
 - Device Control Terminal (DCT), [2-11](#), [6-2](#), [6-5](#)
 - Device Handler Extension
 - configuration, [2-13](#)
 - product overview, [2-1](#)
 - summary, [1-7](#)

Dispensing currency
 bills, [3-6](#)
 coins, [2-9](#)

Document bin sorting
 feature overview, [2-10](#)
 feature summary, [1-10](#)
 params to configure in LCONF, [2-31](#)
see also Enhanced document bin sorting

Document Definition File (DDF)
 configuring for SSB Device Handler Extension, [5-2](#)
 configuring for SSB Enhanced ATM Application, [5-2](#)

Document Processing Module (DPM), [1-2](#), [2-13](#), [3-21](#), [4-29](#), [5-1](#)

D-Scribe application, [5-2](#)

E

Enhanced check authorization
 authorization methods, [4-8](#)
 cash disbursement limits, [4-4](#)
 check transaction limits and totals, [4-3](#)
 feature overview, [4-2](#)
 feature summary, [1-14](#)
 fields configured in CAF, [4-53](#)
 fields to configure in ATD, [4-35](#)
 fields to configure in CPF, [4-42](#)
 fields to configure in IDF, [4-72](#)
 tokens to configure in TKN, [4-92](#)

Enhanced Check Processing Application
 configuration, [4-29](#)
 product overview, [4-1](#)
 summary, [1-14](#)

Enhanced document bin sorting
 assigns to configure in LCONF, [4-76](#)
 feature overview, [4-27](#)
 feature summary, [1-16](#)
 fields to configure in ATD, [4-35](#)
 fields to configure in BSF, [4-39](#)
 tokens to configure in TKN, [4-92](#)
see also Document bin sorting

Enhanced Interchange Configuration File (ICFE)
 fields on ICFE screen 8, [3-44](#)

Enhanced MICR processing and manipulation
 assigns to configure in LCONF, [4-76](#)
 feature overview, [4-19](#)
 feature summary, [1-15](#)
 fields to configure in ARF, [4-33](#)
 fields to configure in ATD, [4-35](#)
 fields to configure in IDF, [4-72](#)
 receipts to configure in RCPT, [4-84](#), [4-85](#), [4-86](#), [4-87](#)
 tokens to configure in TKN, [4-92](#)
see also MICR processing

Envelope deposit with cash back transaction, [2-2](#)

Envelope/reject bins, [1-2](#)
see also Document bin sorting

F

Field type codes for receipt templates, [2-34](#), [3-52](#), [4-80](#)

G

Global Extension State screen
 Accept Document State screen Extension 1, [5-29](#)
 Accept Document State screen Extension 2, [5-31](#)
 Accept Document State screen Extension 3, [5-34](#)
 Cash Accept State screen Extension 1, [5-36](#)
 Cash Accept State screen Extension 2, [5-38](#)
 Cash Accept State screen Extension 3, [5-40](#)
 Check Accept State screen Extension 1, [5-42](#)
 Check Accept State screen Extension 2, [5-45](#)
 Close State screen extension, [5-28](#)
 example of screen, [5-18](#)

Group numbers, [5-5](#)

H

Hardware, NCR 5XXX ATMs, [1-2](#)

Host Configuration File (HCF)
 configuring for SSB Enhanced ATM Application, [3-41](#)
 example of HCF screen 20, [3-42](#)
 fields on HCF screen 2, [3-41](#)
 fields on HCF screen 20, [3-42](#)
 file description, [3-41](#)

I

Image Feature File (IFF), [5-2](#)

Imaging cameras, [1-2](#)
see also Check imaging

Institution Definition File (IDF)
 configuring for SSB Enhanced ATM Application, [3-45](#)
 configuring for SSB Enhanced Check Processing Application, [4-71](#)
 example of IDF screen 37, [4-74](#)
 fields on IDF screen 1, [4-72](#)
 fields on IDF screen 5, [3-45](#), [4-73](#)
 fields on IDF screen 37, [4-74](#)
 file description, [3-45](#), [4-71](#)

Interchange Configuration File (ICF)
 configuring for SSB Enhanced ATM Application, [3-44](#)
 file description, [3-44](#)

Issuer Processing Code File (IPCF)
 configuring for SSB Enhanced ATM Application, [3-46](#)

L

Least bills method of bill dispensing, [3-6](#)

Logical Network Configuration File (LCONF)
 configuring for SSB Device Handler Extension, [2-30](#)
 configuring for SSB Enhanced ATM Application, [3-47](#)
 configuring for SSB Enhanced Check Processing Application, [4-76](#)
 file description, [2-30](#), [3-47](#)
 file refreshing, [6-12](#)

M

Magnetic ink detection, [1-2](#), [5-30](#)

MICR data

- conversion, [4-19](#)
- logging to the CPLF, [2-11](#)
- manipulation, [4-20](#)
- MICR data token, [2-50](#)
- printing MICR data on journal receipt, [2-47](#)

MICR processing

- configuration needed in DDF, [5-3](#)
- feature overview, [2-8](#)
- feature summary, [1-9](#)
- tokens to configure in TKN, [2-50](#)
- see also* Enhanced MICR processing and manipulation

N

N50NAMS File, [2-31](#)

NCR 5XXX ATMs

- hardware options, [1-2](#)
- servicing the terminal, [6-2](#)
- SSB Device Handler Extension prerequisites, [2-13](#)
- SSB Enhanced ATM Application prerequisites, [3-21](#)
- SSB Enhanced Check Processing Application prerequisites, [4-29](#)

NCR 5XXX Configuration File (CNFG5070)

- Accept Document State screen, [5-14](#)
- Cash Accept State screen, [5-19](#)
- Check Accept State screen, [5-24](#)
- configuring for SSB Device Handler Extension, [5-5](#)
- Courtesy Amount Verification State screen, [5-11](#)
- file description, [5-5](#)
- Global Extension State screen, [5-18](#)
- NCR 5XXX Configuration File Menu, [5-5](#)
- State Table Data Menu, [5-9](#)

Negative Card File (NEG)

- configuring for SSB Enhanced ATM Application, [3-48](#)
- configuring for SSB Enhanced Check Processing Application, [4-77](#)
- example of NEG screen 3, [3-49](#)
- example of NEG screen 4, [4-78](#)
- fields on NEG screen 1, [3-48](#), [4-77](#)
- fields on NEG screen 3, [3-49](#)
- fields on NEG screen 4, [4-78](#)
- file description, [3-48](#), [4-77](#)

P

Peak and non-peak processing periods, [3-2](#)

Preapproved and predeclined check processing

- assigns to configure in LCONF, [4-77](#)
- feature overview, [4-25](#)
- feature summary, [1-16](#)
- fields to configure in ATD, [4-35](#)
- fields to configure in CSF, [4-66](#)
- fields to configure in IDF, [4-72](#)

Printing

- check proof listing, [2-11](#), [2-42](#), [6-3](#)
- depository print, [1-3](#), [3-13](#), [3-58](#), [5-4](#)
- journal receipt, [2-47](#)
- MICR encoding, [1-3](#)
- statement printing, [3-15](#)
- transaction receipts, [2-37](#), [3-57](#), [4-84](#)

Printing reports, [A-1](#)

R

Receipt File (RCPT)

- configuring for SSB Device Handler Extension, [2-33](#)
- configuring for SSB Enhanced ATM Application, [3-52](#)
- configuring for SSB Enhanced Check Processing Application, [4-79](#)
- field description, [2-33](#), [4-79](#)
- field type codes, [2-34](#), [3-52](#), [4-80](#)
- file description, [3-52](#)
- receipt templates and samples, [2-37](#), [3-57](#), [4-84](#)

Receipt type

- ADHO, [2-45](#)
- administrative subtotals, hopper counts, [2-45](#)
- administrative subtotals, hopper totals, [2-45](#)
- ADTO, [2-45](#)
- CACK, [2-37](#)
- cash check, [2-37](#)
- CDCB, [4-85](#)
- CHDP, [4-84](#)
- check proof list header, [2-42](#)
- check proof list information, [2-42](#)
- check proof list totals, [2-43](#)
- CHKJ, [2-47](#)
- configurable depository print, [3-58](#)
- CPLC, [2-42](#)
- CPLH, [2-42](#)
- CPLT, [2-43](#)
- CSDP, [4-86](#)
- denied transactions, [2-41](#)
- DENY, [2-41](#)
- deposit with cash back, [2-38](#)
- DPCB, [2-38](#)
- DPMA through DPMM, [3-58](#)
- DPPR, [3-58](#)
- enhanced check deposit, [4-84](#)
- enhanced check deposit cash back, [4-85](#)
- enhanced check partial deposit cash back, [4-87](#)
- enhanced check split deposit, [4-86](#)
- envelope depository print, [3-58](#)
- partial cash check, [2-39](#)
- partial deposit with cash back, [2-40](#)
- PCCCK, [2-39](#)
- PCDC, [4-87](#)
- PDPC, [2-40](#)
- SDP, [3-57](#)
- split deposit, [3-57](#)
- transactions journal, [2-47](#)

Registered check processing
 assigns to configure in LCONF, [4-77](#)
 feature overview, [4-23](#)
 feature summary, [1-15](#)
 fields to configure in ATD, [4-35](#)
 fields to configure in CSF, [4-66](#)
 fields to configure in IDF, [4-72](#)

Reports, SSB

Daily Institution Detail Transaction Log
 (STAT07-B24), [A-9](#)
 Daily Terminal Depository Report
 (STAT08-B24), [A-13](#)
 Daily Terminal Detail Transaction Log
 (STAT06-B24), [A-3](#)
 report data, [A-2](#)
 Transaction Detail Report (STAT09-XXXX), [A-17](#)

S

Scanning the check
see Check imaging

Screens

Accept Document State screen, [5-14](#)
 ATD screen 10, [2-21](#)
 ATD screen 11, [3-28](#)
 ATD screen 12, [2-26](#), [4-36](#)
 BSF screen 1, [4-39](#)
 CAF screen 14, [3-39](#)
 CAF screen 15, [4-56](#)
 CAF screen 16, [4-60](#)
 Cash Accept State screen, [5-19](#)
 CCF screen 1, [4-69](#)
 Check Accept State screen, [5-24](#)
 Courtesy Amount Verification State screen, [5-11](#)
 CPF screen 14, [4-45](#)
 CSF screen 1, [4-65](#)
 Global Extension State screen, [5-18](#)
 HCF screen 20, [3-42](#)
 IDF screen 37, [4-74](#)
 State Table Data Menu, [5-9](#)
 TLF Balancing Detail Records—Hopper
 Overlays, [6-7](#)
 TLF Balancing Detail Records—SSB Deposit
 Overlays, [6-10](#)
 UAF screen 10, [4-95](#)

Self-service banking (SSB)

Base Application, [3-1](#)
 Device Handler Extension, [2-1](#)
 Enhanced Check Processing Application, [4-1](#)
 product overview, [1-1](#)

Servicing NCR terminals

check proof list using the DCT, [6-3](#)
 check proof list using the terminal, [6-3](#)
 overview, [6-2](#)

Split deposit transaction

feature overview, [3-5](#)
 feature summary, [1-11](#)
 fields to configure in ATD, [3-25](#)
 fields to configure in IDF, [3-45](#)
 receipts to configure in RCPT, [3-57](#)

tokens to configure in TKN, [3-61](#)

SSDHNAMS File, [2-47](#), [3-60](#)

Start and stop method of bill dispensing
see Configurable dispense algorithm method of bill dispensing

State Table Data Menu, [5-9](#)

Statement print host communications

feature overview, [3-15](#)
 feature summary, [1-13](#)
 fields to configure in ATD, [3-25](#)
 fields to configure in HCF, [3-41](#)
 fields to configure in IDF, [3-45](#)

Stop Payment File (SPF)

configuring for SSB Enhanced Check Processing
 Application, [4-89](#)
 fields on SPF screen 1, [4-89](#)
 file description, [4-89](#)

Stop payment verification

assigns to configure in LCONF, [4-76](#)
 feature overview, [4-24](#)
 feature summary, [1-16](#)
 fields to configure in ATD, [4-35](#)
 fields to configure in IDF, [4-72](#)
 fields to configure in SPF, [4-89](#)

Super Teller

authorization impacts, [4-18](#)
 feature overview, [3-16](#)
 feature summary, [1-13](#)
 fields to configure in ATD, [3-25](#)
 fields to configure in CAF, [3-36](#)
 fields to configure in CPF, [3-33](#)
 fields to configure in IDF, [3-45](#)
 fields to configure in NEG, [3-48](#)
 state path, [3-19](#)
 tokens to configure in TKN, [3-61](#)
 transaction flow, [3-18](#)

T

Terminal group numbers, [5-5](#)

Terminal Receipt File (TRF)

configuring for SSB Enhanced Check Processing
 Application Configuration, [4-91](#)

Thresholds method of bill dispensing, [3-7](#)

Token File (TKN)

configuring for SSB Device Handler Extension, [2-50](#)
 configuring for SSB Enhanced ATM
 Application, [3-61](#)
 configuring for SSB Enhanced Check Processing
 Application, [4-91](#)
 file description, [3-61](#)

Transaction Log File (TLF)

example of TLF Balancing Detail Records—Hopper
 Overlays, [6-7](#)
 example of TLF Balancing Detail Records—SSB
 Deposit Overlays, [6-10](#)
 fields on TLF Balancing Detail Records—Hopper
 Overlays, [6-7](#)

- Transaction Log File (TLF) *continued*
 - fields on TLF Balancing Detail Records—SSB
 - Deposit Overlays, [6-10](#)
 - file description, [6-6](#)
 - report dependencies, [A-2](#)
 - tokens logged to TLF, [2-50](#), [3-61](#), [4-92](#)
- Transaction time windows
 - feature overview, [3-2](#)
 - feature summary, [1-11](#)
 - fields to configure in ATD, [3-25](#)
 - params to configure in LCONF, [3-47](#)
- Transaction type field, [6-8](#)
- Transactions
 - cash check, [2-4](#)
 - check deposit, [2-4](#)
 - check deposit with cash back, [2-3](#)
 - envelope deposit with cash back, [2-2](#)
 - split deposit, [3-5](#)

U

- Usage Accumulation File (UAF)
 - example of UAF screen 10, [4-95](#)
 - fields on UAF screen 1, [4-93](#)
 - fields on UAF screen 10, [4-95](#)
 - fields on UAF screen 4, [4-94](#)
 - file description, [4-93](#)

Z

- Zone verification
 - see* Configurable zone verification

Index by Field Name

Note: Unlabeled fields are not included in this index; they appear by subject in the main index.

Numerics

56XX CDM HOPPER ORDER, [2-25](#)

A

ABOVE AMOUNT, [4-41](#)

ACCEPT CHECKS WHEN IMAGE ARCHIVAL FULL, [2-30](#)

ACCOUNT LENGTH, [4-33](#)

ACCOUNT NUMBER

CCF, [4-71](#)

CSF, [4-66](#)

SPF, [4-89](#)

ACCOUNT NUMBER INSERT POSN, [4-34](#)

ACCOUNT NUMBER INSERT VALUE, [4-34](#)

ACCOUNT TYPE

ARF, [4-33](#)

SPF, [4-90](#)

ACQUIRER TXN PROFILE

ATD screen 2, [2-16](#), [3-25](#)

ICFE screen 8, [3-44](#)

IDF screen 9, [3-45](#)

ACTIVITY LIMITS

CAF screen 1, [3-36](#), [4-53](#)

CAF screen 8, [3-38](#), [4-54](#)

CAF screen 15, [4-57](#)

CAF screen 16, [4-61](#)

CPF screen 1, [3-33](#), [4-42](#)

CPF screen 4, [3-35](#), [4-44](#)

CPF screen 14, [4-46](#)

ACTIVITY THIS PERIOD

CAF screen 15, [4-59](#)

CAF screen 16, [4-63](#)

UAF screen 4, [4-94](#)

UAF screen 1, [4-93](#)

UAF screen 10, [4-95](#)

ADD MORE KEY MASK, [5-21](#)

AMOUNT

ATD, [4-38](#)

SPF, [4-90](#)

TLF, [6-10](#)

AMT BUFFER, [5-13](#)

APPRVD TXN, [2-27](#)

ARF, [4-76](#)

ATM-DH-CHK-BIN-THRHL, [2-30](#)

ATM-DH-N50-CPLF, [2-30](#)

ATM-DH-N50-CPLF-REQ, [2-31](#)

ATM-DH-PEAK-LEAD-TIME, [3-47](#)

AUTH DENIED TXN, [2-29](#)

B

BAD STATE, [5-12](#)

BEG CASH

ATD screen 4, [2-18](#)

ATD screen 5, [2-18](#)

ATD screen 10, [2-23](#)

BEGIN CASH, [6-8](#)

BILL MIX INFORMATION, [3-29](#)

BILL VAL

ATD screen 4, [2-17](#)

ATD screen 5, [2-17](#)

ATD screen 10, [2-22](#)

ATD screen 11, [3-29](#)

BIN INFORMATION, [4-40](#)

BRANCH

ATD screen 10, [2-21](#)

ATD screen 11, [3-28](#)

ATD screen 12, [2-26](#), [4-36](#)

C

CANCEL KEY MASK, [5-19](#), [5-26](#)

CAPTURE DOCUMENT, [5-8](#)

CARD TYPE

CAF, [3-36](#), [4-53](#)

CPF, [3-33](#), [4-42](#)

NEG, [3-48](#), [4-78](#)

CARDHOLDER/CHECK STATUS INFORMATION, [4-66](#)

CASH CHECK DISPOSITION, [4-75](#)

CASH DECR, [2-23](#)

CASH INCR, [2-23](#)

CASH OUT

ATD, [2-24](#)

TLF, [6-9](#)

CAV GOOD STATE, [5-12](#)

CHECK AMOUNT, [4-40](#)
 CHECK DEPOSITORY BIN, [4-40](#)
 CHECK ENTRY RETRIES, [5-25](#)
 CHECK LIMIT, [4-68](#)
 CHECK NUMBER/HIGH CHECK NUMBER, [4-90](#)
 CHECK RETAIN FLAG, [4-67](#)
 CHECK STATUS
 CSF, [4-67](#)
 IDF, [4-75](#)
 CHECK SUPPORT, [4-37](#)
 CHECK THRESHOLD, [2-28](#)
 CHECK USAGE CONTROL
 CAF, [4-57](#)
 UAF, [4-95](#)
 CHECK/CSF CHECK USAGE CONTROL, [4-46](#)
 COMPARE AMT FLG, [5-13](#)
 CONFIGURATION FILE NAME, [5-5](#)
 CONTENTS
 ATD screen 4, [2-17](#)
 ATD screen 5, [2-17](#)
 ATD screen 10, [2-22](#)
 CORPORATION CHECK, [4-75](#)
 CORPORATION NUMBER
 CAF, [4-56](#)
 CCF, [4-70](#)
 NEG, [4-79](#)
 COUNT
 ATD, [4-38](#)
 TLF, [6-10](#)
 COURTESY AMT VERIFICATION RETRIES, [2-29](#)
 CSF CHECK USAGE CONTROL, [4-61](#)
 CSF CHECKS ACCEPTED THIS PERIOD
 CAF, [4-64](#)
 UAF, [4-97](#)
 CSF CHECKS ALLOWED PER PERIOD
 CAF, [4-64](#)
 CPF, [4-50](#)
 CURRENCY CODE, [2-25](#)

D

DATE
 SPF, [4-90](#)
 TLF, [6-7](#)
 DECREASE CASH, [6-9](#)
 DEFAULT DEPOSITORY BIN, [4-37](#)
 DEPOSIT KEY MASK, [5-20](#), [5-27](#)
 DEPOSITORY BIN NUMBER
 ATD, [4-38](#)
 TLF, [6-10](#)
 DESCRIPTION
 CCF, [4-70](#)
 SPF, [4-91](#)
 DEVICE TYPE, [2-16](#), [3-25](#), [4-35](#)

DH DENIED TXN, [2-28](#)
 DISPENSE ALGORITHM, [3-27](#), [3-30](#)
 DPC NUMBER, [3-42](#)

E

EJECT DOCUMENT, [5-8](#)
 END CASH
 ATD screen 4, [2-18](#)
 ATD screen 5, [2-18](#)
 ATD screen 10, [2-24](#)
 TLF Balancing Detail Records—Hopper
 Overlays, [6-9](#)
 ENTRY RETRIES, [5-15](#)
 EXPIRATION DATE, [4-90](#)
 EXTENSION STATE 1, [5-17](#), [5-22](#), [5-26](#)
 EXTENSION STATE 2, [5-17](#), [5-23](#), [5-26](#)
 EXTENSION STATE 3, [5-17](#), [5-23](#)

F

FIID
 ATD screen 10, [2-21](#)
 ATD screen 11, [3-28](#)
 ATD screen 12, [2-26](#), [4-36](#)
 CAF screen 14, [3-40](#)
 NEG screen 1, [3-49](#)
 SPF screen 1, [4-89](#)
 FULL BITMAP, [2-27](#), [2-28](#), [2-29](#)

G

GROUP
 Accept Document State screen Extension 1, [5-29](#)
 Accept Document State screen Extension 2, [5-32](#)
 Accept Document State screen Extension 3, [5-34](#)
 Cash Accept State screen Extension 1, [5-36](#)
 Cash Accept State screen Extension 2, [5-38](#)
 Cash Accept State screen Extension 3, [5-40](#)
 Check Accept State screen Extension 1, [5-43](#)
 Check Accept State screen Extension 2, [5-45](#)
 Close State screen extension, [5-28](#)
 State Table Data Menu, [5-9](#)
 GROUP NUMBER, [5-5](#)
 see also TERMINAL GROUP

H

HISF NAME, [3-42](#)
 HOPPER #, [6-8](#)

I

IDENTIFY CANDIDATES, [5-16](#)
 IMAGE LIFT, [5-25](#)
 INCREASE CASH, [6-9](#)
 INST ID NUM, [4-70](#)

INST ID NUM (BASE24), [4-34](#)
INST ID NUM (CHECK), [4-33](#)
INSTITUTION ID NUMBER
 BSF, [4-40](#)
 CSF, [4-66](#)
ISSUER TXN PROFILE, [3-44](#)

L

LARGE MESSAGE MODE, [2-18](#), [3-26](#)
LEAVE/CAPTURE OPTION, [5-25](#)
LIFT IMAGE LIST, [2-27](#), [2-28](#), [2-29](#)
LIFT IMAGES, [5-16](#)
LN
 ATD screen 10, [2-21](#)
 ATD screen 11, [3-28](#)
 ATD screen 12, [2-27](#), [4-36](#)
LOW CHECK NUMBER, [4-90](#)
LOWER ENABLE, [5-15](#)

M

MAX BILLS, [3-30](#)
MAXIMUM AMOUNT, [4-71](#)
MEMBER
 CAF, [3-39](#)
 NEG, [3-49](#)
MINIMUM DISPENSE AMOUNT, [4-45](#)
MULTIPLE ACCT SELECT, [3-25](#)

N

NCR 56XX DPM IMAGE CONTROL, [2-27](#)
NO DOC STATE, [5-13](#)
NUMBER OF ACCOUNTS, [4-70](#)

O

OFFLINE AGGR
 CAF screen 1, [3-37](#), [4-54](#)
 CAF screen 8, [3-39](#), [4-55](#)
 CAF screen 15, [4-59](#)
 CAF screen 16, [4-63](#)
 CPF screen 1, [3-34](#), [4-43](#)
 CPF screen 4, [3-35](#), [4-44](#)
 CPF screen 14, [4-49](#)
OFFLINE CASH ADV
 CAF screen 1, [3-37](#), [4-54](#)
 CAF screen 8, [3-38](#), [4-55](#)
 CPF screen 1, [3-34](#), [4-43](#)
 CPF screen 4, [3-35](#), [4-44](#)
OFFLINE CASH WDL
 CAF screen 1, [3-37](#), [4-53](#)
 CAF screen 8, [3-38](#), [4-55](#)
 CPF screen 1, [3-34](#), [4-42](#)
 CPF screen 4, [3-35](#), [4-44](#)

OFFLINE CHECK
 CAF, [4-58](#), [4-60](#)
 CPF, [4-46](#)
 UAF, [4-96](#)
OFFLINE CSF CHECK
 CAF, [4-62](#), [4-64](#)
 CPF, [4-48](#)
 UAF, [4-96](#)

P

PAN
 CAF, [3-39](#)
 NEG, [3-49](#)
 TLF, [6-7](#)
PBF STOP PAY/WARNING STATUS, [4-91](#)
PEAK WINDOW LOAD GROUP, [3-32](#)
PROCESS CHECK TRANSACTIONS USING BASE LIMITS/USAGES
 CAF, [4-57](#)
 CPF, [4-49](#)
PROCESS CSF CHECK TRANSACTIONS USING BASE LIMITS/USAGES
 CAF, [4-61](#)
 CPF, [4-49](#)

R

REASON ON FILE, [3-48](#), [4-78](#)
RECORD TYPE, [4-33](#)
REFUND KEY MASK, [5-22](#)
REGION
 ATD screen 10, [2-21](#)
 ATD screen 11, [3-28](#)
 ATD screen 12, [2-26](#), [4-36](#)
REGISTERED MEMBER NUMBER, [4-67](#)
REGISTERED PAN NUMBER, [4-66](#)
RESERVED, [5-25](#)

S

SCREEN NUMBER, [5-12](#)
SPF
 IDF, [4-72](#)
 LCONF, [4-76](#)
SSB BASE, [3-45](#)
SSB CHECK, [4-73](#)
SSB-BSF, [4-76](#)
SSB-CCF, [4-76](#)
SSB-CSF, [4-77](#)
STANDARD WINDOW LOAD GROUP, [3-32](#)
STATE NUMBER
 Accept Document State screen Extension 1, [5-29](#)
 Accept Document State screen Extension 2, [5-32](#)
 Accept Document State screen Extension 3, [5-34](#)
 Cash Accept State screen Extension 1, [5-36](#)

STATE NUMBER *continued*

- Cash Accept State screen Extension 2, [5-39](#)
- Cash Accept State screen Extension 3, [5-41](#)
- Check Accept State screen Extension 1, [5-43](#)
- Check Accept State screen Extension 2, [5-45](#)
- Close State screen extension, [5-28](#)
- State Table Data Menu, [5-10](#)

STATE TYPE

- Accept Document State screen, [5-14](#)
- Accept Document State screen Extension 1, [5-30](#)
- Accept Document State screen Extension 2, [5-32](#)
- Accept Document State screen Extension 3, [5-34](#)
- Cash Accept State screen, [5-19](#)
- Cash Accept State screen Extension 1, [5-36](#)
- Cash Accept State screen Extension 2, [5-39](#)
- Cash Accept State screen Extension 3, [5-41](#)
- Check Accept State screen, [5-24](#)
- Check Accept State screen Extension 1, [5-43](#)
- Check Accept State screen Extension 2, [5-45](#)
- Close State screen extension, [5-28](#)
- Courtesy Amount Verification State screen, [5-11](#)

STATEMENT PRINT ALTERNATE ROUTE, [3-43](#)STATION, [3-41](#)STATUS, [4-71](#)

STD BEG CASH

- ATD screen 4, [2-18](#)
- ATD screen 5, [2-18](#)
- ATD screen 10, [2-22](#)

STOP PAY, [4-74](#)

SUPER TELLER TERMINAL ID

- CAF, [3-40](#)
- NEG, [3-50](#)

SYSTEM CALCULATE, [4-91](#)**T**

TABLE ENTRY-2

- Accept Document State screen Extension 1, [5-30](#)
- Accept Document State screen Extension 2, [5-32](#)
- Accept Document State screen Extension 3, [5-35](#)
- Cash Accept State screen Extension 1, [5-37](#)
- Cash Accept State screen Extension 2, [5-39](#)
- Cash Accept State screen Extension 3, [5-41](#)
- Check Accept State screen Extension 1, [5-43](#)
- Check Accept State screen Extension 2, [5-46](#)
- Close State screen extension, [5-28](#)

TABLE ENTRY-3

- Accept Document State screen Extension 1, [5-30](#)
- Accept Document State screen Extension 2, [5-33](#)
- Accept Document State screen Extension 3, [5-35](#)
- Cash Accept State screen Extension 1, [5-37](#)
- Cash Accept State screen Extension 2, [5-39](#)
- Cash Accept State screen Extension 3, [5-41](#)
- Check Accept State screen Extension 1, [5-43](#)
- Check Accept State screen Extension 2, [5-46](#)
- Close State screen extension, [5-29](#)

TABLE ENTRY-4

- Accept Document State screen Extension 1, [5-31](#)
- Accept Document State screen Extension 2, [5-33](#)

- Accept Document State screen Extension 3, [5-35](#)

- Cash Accept State screen Extension 1, [5-37](#)
- Cash Accept State screen Extension 2, [5-39](#)
- Cash Accept State screen Extension 3, [5-42](#)
- Check Accept State screen Extension 1, [5-44](#)
- Check Accept State screen Extension 2, [5-46](#)

TABLE ENTRY-5

- Accept Document State screen Extension 1, [5-31](#)
- Accept Document State screen Extension 2, [5-33](#)
- Accept Document State screen Extension 3, [5-35](#)
- Cash Accept State screen Extension 1, [5-37](#)
- Cash Accept State screen Extension 2, [5-40](#)
- Cash Accept State screen Extension 3, [5-42](#)
- Check Accept State screen Extension 1, [5-44](#)
- Check Accept State screen Extension 2, [5-46](#)

TABLE ENTRY-6

- Accept Document State screen Extension 2, [5-33](#)
- Accept Document State screen Extension 3, [5-36](#)
- Cash Accept State screen Extension 1, [5-38](#)
- Cash Accept State screen Extension 2, [5-40](#)
- Cash Accept State screen Extension 3, [5-42](#)
- Check Accept State screen Extension 1, [5-44](#)
- Check Accept State screen Extension 2, [5-47](#)

TABLE ENTRY-7

- Accept Document State screen Extension 2, [5-34](#)
- Cash Accept State screen Extension 1, [5-38](#)
- Check Accept State screen Extension 1, [5-44](#)

TABLE ENTRY-8

- Check Accept State screen Extension 1, [5-45](#)

TERM BIN GROUP, [4-39](#)

TERM ID

- ATD screen 10, [2-21](#)
- ATD screen 11, [3-28](#)
- ATD screen 12, [2-26](#), [4-36](#)

TERMID, [6-8](#)TERMINAL BIN GROUP, [4-37](#)TERMINAL GROUP, [2-19](#), [3-26](#), [4-35](#)THRESHOLD, [3-29](#)

TIME

- SPF, [4-90](#)
- TLF, [6-8](#)

TIME OFFSET, [6-8](#)TIMES USED THIS PERIOD, [4-94](#)

TOTAL AGGR

- CAF screen 1, [3-37](#), [4-54](#)
- CAF screen 8, [3-39](#), [4-55](#)
- CAF screen 15, [4-59](#)
- CAF screen 16, [4-63](#)
- CPF screen 1, [3-34](#), [4-43](#)
- CPF screen 4, [3-35](#), [4-44](#)
- CPF screen 14, [4-48](#)

TOTAL CASH ADV

- CAF screen 1, [3-37](#), [4-53](#)
- CAF screen 8, [3-38](#), [4-55](#)
- CPF screen 1, [3-34](#), [4-43](#)
- CPF screen 4, [3-35](#), [4-44](#)

TOTAL CASH ADV *continued*UAF screen 1, [4-93](#)UAF screen 4, [4-94](#)**TOTAL CASH WDL**CAF screen 1, [3-37](#), [4-53](#)CAF screen 8, [3-38](#), [4-55](#)CPF screen 1, [3-33](#), [4-42](#)CPF screen 4, [3-35](#), [4-44](#)UAF screen 1, [4-93](#)UAF screen 4, [4-94](#)**TOTAL CHECK**CAF, [4-58](#), [4-59](#)CPF, [4-46](#)UAF, [4-96](#)**TOTAL CSF CHECK**CAF, [4-62](#), [4-63](#)CPF, [4-47](#)UAF, [4-96](#)**TRANSACTION TIME WINDOW**INFORMATION, [3-30](#)TYPE, [3-41](#)**U**UNAVAIL STATE, [5-12](#)UNDER AMOUNT, [4-41](#)UPPER ENABLE, [5-15](#)**W**WEEKEND/HOLIDAY PEAK TIME END, [3-31](#)WEEKEND/HOLIDAY PEAK TIME START, [3-31](#)WORKDAY PEAK TIME END, [3-31](#)WORKDAY PEAK TIME START, [3-30](#)

ACI Worldwide, Inc.

Index by Data Name

A

ACCT-NUM, [4-66](#), [4-71](#)
ACCT-STAT, [4-71](#)
ADDL-HOPR-TKN.BEG-CASH, [6-8](#)
ADDL-HOPR-TKN.CASH-DECR, [6-9](#)
ADDL-HOPR-TKN.CASH-INCR, [6-9](#)
ADDL-HOPR-TKN.CASH-OUT, [6-9](#)
ADDL-HOPR-TKN.END-CASH, [6-9](#)
AMT, [4-40](#)
AUTH-AMT-1, [A-6](#), [A-11](#), [A-15](#), [A-19](#)
AUTH-AMT-2, [A-6](#), [A-11](#), [A-15](#), [A-19](#)

B

BASE.GRP-LMT.AGGR-LMT, [4-48](#), [4-59](#), [4-63](#)
BASE.GRP-LMT-OFFL-AGGR-LMT, [4-49](#), [4-59](#), [4-63](#)
BILL-MIX.HOPR-THRSHLDS, [3-29](#)
BILL-MIX.MAX-BILLS, [3-30](#)
BIN-GRP, [4-39](#)

C

CDM-HOPR-ORDR, [2-25](#)
CHK-LMT, [4-68](#), [4-71](#)
CHK-STAT, [4-67](#)
CORP-CNT, [4-70](#)
CORP-DESCR, [4-70](#)
CORP-NUM, [4-70](#)

D

DISP-ALGO, [3-30](#)
DPM.TXN-APPRV.CHK-THRSHLD, [2-28](#)
DPM.TXN-APPRV.FULL-IMAGE-BITMAP, [2-27](#)
DPM.TXN-APPRV.IMAGE-LIST-FLG, [2-27](#)
DPM.TXN-RJCTD.FULL-IMAGE-BITMAPP, [2-28](#)
DPM.TXN-RJCTD.IMAGE-LIST-FLG, [2-28](#)

H

HEAD.CRD.PAN, [6-7](#)
HEAD.TERM.TERM-ID, [6-8](#)
HOPR.CASH-DECR, [2-24](#)
HOPR.CASH-INCR, [2-23](#)
HOPR.CASH-OUT, [2-24](#)
HOPR.CRNCY-CDE, [2-25](#)
HOPR.END-CASH, [2-25](#)
HOPR-DPM.BEG-CSH, [2-23](#)
HOPR-DPM.BILL-VALUE, [2-22](#)
HOPR-DPM.CNTNTS, [2-22](#)
HOPR-DPM.STD-BEG-CSH, [2-22](#)

I

INST-ID-NUM, [4-40](#), [4-66](#), [4-70](#)

M

MICR-DATA-TKN.MICR-DATA, [A-7](#), [A-12](#), [A-16](#), [A-19](#)

O

OVR-BIN-NUM, [4-41](#)

P

PEAK-WINDOW-LOAD-GRP, [3-32](#)

R

RET-CHK-FLG, [4-68](#)
RGSTR-MBR-NUM, [4-67](#)
RGSTR-PAN, [4-67](#)

S

SSBB-TKN.SUPER-TLR-IND, [A-6](#), [A-11](#), [A-15](#)
SSBC.BIN-GRP, [4-37](#)
SSBC.CCF-CHK, [4-75](#)
SSBC.CHK-BASE-FLG, [4-49](#), [4-57](#)
SSBC.CHK-DISP, [4-76](#)
SSBC.CHK-SUPPORT, [4-37](#)

SSBC.CORP-NUM, [4-57](#), [4-79](#)
SSBC.CSF-CBK, [4-75](#)
SSBC.CSF-CBK-BASE-FLG, [4-50](#), [4-61](#)
SSBC.CSF-CBK-USED-PRD, [4-64](#), [4-97](#)
SSBC.CSF-CBK-USE-LMT, [4-50](#), [4-64](#)
SSBC.DEP-BINx.SSBC-NUM-CBK, [4-38](#)
SSBC.DFLT-BIN, [4-38](#)
SSBC.GRP-LMT.OFFL-CBK-LMT, [4-47](#), [4-59](#)
SSBC.GRP-LMT.OFFL-CSF-CBK-LMT, [4-48](#), [4-63](#)
SSBC.GRP-LMT.TTL-CBK-LMT, [4-46](#), [4-58](#)
SSBC.GRP-LMT.TTL-CSF-CBK-LMT, [4-48](#), [4-62](#)
SSBC.GRP-PRD.OFFL-CBK-PRD, [4-60](#), [4-96](#)
SSBC.GRP-PRD.OFFL-CSF-CBK-PRD, [4-64](#), [4-97](#)
SSBC.GRP-PRD.TTL-CBK-PRD, [4-59](#), [4-96](#)
SSBC.GRP-PRD.TTL-CSF-CBK-PRD, [4-63](#), [4-96](#)
SSBC.MIN-AMT, [4-45](#)
SSBC.SPF-CBK, [4-74](#)
SSBCCPF.CBK-DEP-CR-PERCENT
CPF, [4-50](#)
SSBCCPF.CR-PER-CBK-DEP-LMT
CPF, [4-51](#)
SSBCCPF.CR-PER-CSF-CBK-LMT
CPF, [4-51](#)
SSBCCPF.CSF-CBK-DEP-CR-PERCENT
CPF, [4-51](#)
SSBC-TERM-SETL-TKN.DEP-BIN0.AMT-
CBK, [A-8](#), [A-16](#)
SSBC-TERM-SETL-TKN.DEP-BIN0.NUM-
CBK, [A-8](#), [A-16](#)
SSBC-TERM-SETL-TKN.DEP-BIN1.AMT-
CBK, [A-8](#), [A-16](#)
SSBC-TERM-SETL-TKN.DEP-BIN1.NUM-
CBK, [A-8](#), [A-16](#)
SSBC-TERM-SETL-TKN.DEP-BIN2.AMT-
CBK, [A-8](#), [A-16](#)
SSBC-TERM-SETL-TKN.DEP-BIN2.NUM-CH, [A-16](#)
SSBC-TERM-SETL-TKN.DEP-BIN2.NUM-
CBK, [A-8](#)
SSBC-TERM-SETL-TKN.DEP-BIN3.AMT-
CBK, [A-8](#), [A-16](#)
SSBC-TERM-SETL-TKN.DEP-BIN3.NUM-
CBK, [A-8](#), [A-16](#)
SSBC-TERM-SETL-TKN.DEP-BINx.AMT-
CBK, [6-10](#)
SSBC-TERM-SETL-TKN.DEP-BINx.NUM-
CBK, [6-10](#)
SSBC-TKN.BIN-SEQ-NUM, [A-7](#), [A-11](#), [A-15](#), [A-19](#)
STD-WINDOW-LOAD-GRP, [2-29](#), [2-30](#), [3-32](#)
STMT-PRNT-ALT-RTE, [3-43](#)
SUPER-TLR-TERM-ID, [3-40](#), [3-50](#)

T

TERM-SETL.ADMIN-CDE, [6-8](#)
TERM-SETL.ADMIN-DAT, [6-7](#)
TERM-SETL.ADMIN-TIM, [6-8](#)
TERM-SETL.TIM-OFST, [6-8](#)
TXN-DENIED.FULL-IMAGE-BITMAP, [2-29](#)
TXN-DENIED.IMAGE-LIST-FLG, [2-29](#)

U

UNDR-BIN-NUM, [4-41](#)

W

WKND-END-PEAK-LOAD-WINDOW, [3-32](#)
WKND-STRT-PEAK-LOAD-WINDOW, [3-31](#)
WRKDAY-END-PEAK-LOAD-WINDOW, [3-31](#)
WRKDAY-STRT-PEAK-LOAD-WINDOW, [3-31](#)